
Meridian 1

Succession 1000M

Succession 3.0 Software

Small System

Installation and Configuration

Document Number: 553-3011-210

Document Release: Standard 1.00

Date: October 2003

Copyright © 2003 Nortel Networks
All Rights Reserved

Produced in Canada

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules, and the radio interference regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

SL-1, Meridian 1, and Succession are trademarks of Nortel Networks.

Revision history

October 2003

Standard 1.00. This document is a new NTP for Succession 3.0. It was created to support a restructuring of the Documentation Library, which resulted in the merging of multiple legacy NTPs. This new document consolidates information previously contained in the following legacy documents, now retired:

- *Option 11C Planning and Installation Guide* (553-3021-210)
(Content from *Option 11C Planning and Installation Guide* (553-3021-210) also appears in *Small System: Description* (553-3011-010), *Small System: Planning and Engineering* (553-3011-120), and *Small System: Upgrade Procedures* (553-3011-258).)
- *Option 11C Mini Planning and Installation Guide* (553-3021-209)
(Content from *Option 11C Mini Planning and Installation Guide* (553-3021-209) also appears in *Small System: Description* (553-3011-010), *Small System: Planning and Engineering* (553-3011-120), and *Small System: Upgrade Procedures* (553-3011-258).)
- *Option 11C and 11C Mini Central Answering Position Guide* (553-3011-320)
- *Option 11C and 11C Mini Customer Configuration Backup and Restore Guide* (553-3011-330)
(Content from *Option 11C and 11C Mini Customer Configuration Backup and Restore Guide* (553-3011-330) also appears in *Small System: Maintenance* (553-3011-500).)
- *Option 11C Survivability Operation and Configuration Guide* (553-3011-331)

Contents

About this document	13
Subject	13
Applicable systems	14
Intended audience	15
Conventions	15
Related information	17
 Cabinet system equipment	 21
Contents	21
Introduction	22
Cabinets	22
Power supplies	24
Reserve power	26
Common equipment circuit cards and components	28
Peripheral equipment cards	39
Telephones and attendant consoles	40
Cables and wires	40
Miscellaneous items	42
 Chassis system equipment	 45
Contents	45
Introduction	45
Main components of the Chassis system	46

Regulatory information	63
Contents	63
Introduction	64
Notice for United States installations	64
Notice for Canadian installations	66
Notice for International installations	67
Electromagnetic compatibility	68
Canadian and US network connections	70
Important safety instructions	73
Contents	73
Symbols you must recognize	73
Safety instructions when installing telephone equipment	74
Safety instructions when using telephone equipment	74
Fiber-optic cable handling procedures	76
Bracing against earthquakes	79
Contents	79
Introduction	79
Method for earthquake bracing	79
Preparing for installation	89
Contents	89
Introduction	89
Tools checklist	89
Readiness checklist	90
Installing the Cabinet system	91
Contents	91
Introduction	91
Installing a new Cabinet system	92
Expanding an existing system	98

Reconfiguring a system	99
Cabinet and Chassis system mix-and-match configuration	100
Expansion cabinet as a power shelf for auxiliary processors	104
Installing the Chassis system	107
Contents	107
Summary of installation procedures	107
Mounting the cabinets	115
Contents	115
Introduction	115
Earthquake bracing	116
Wall mounting	116
Floor mounting	121
Mounting the chassis	125
Contents	125
Introduction	125
Mounting in a 19-inch rack/equipment cabinet	127
Wall mounting in a vertical position	132
Wall mounting in a horizontal position	139
Connecting the chassis expander to the chassis	145
Contents	145
Introduction	145
Adding a chassis expander	145
Installing the system ground	149
Contents	149
Introduction	149
Grounding instructions for cabinets and chassis	151

Installing the power supplies for the Cabinet system	159
Contents	159
Introduction	159
Power supplies	160
 Installing and connecting reserve power supplies for the Cabinet system	 173
Contents	173
Introduction	173
Types of reserve power	173
NTAK75 battery unit installation	174
NTAK76 battery unit installation	178
Connecting other battery backup systems	183
 Installing Small System Controller and Fiber Receiver cards	 187
Contents	187
Introduction	187
Circuit card assignments for the Chassis system	189
Main cabinet and chassis NTDK20 SSC card installation	191
NTDK20 SSC card installation on IP expansion cabinets and chassis	211
Fiber Receiver card installation on expansion cabinets and chassis	213
 Installing optional circuit cards	 217
Contents	217
Introduction	217
Circuit cards	219
 Installing and connecting cross-connect terminals	 235
Contents	235

Introduction	235
Terminal block requirements	236
Installing the BIX cross-connect terminal	238
Installing the Reichle Masari cross-connect terminal (Germany)	241
Installing the Krone Test Jack Frame for the UK	244
Connecting the cables	249
Installing Power Failure Transfer Units	257
Contents	257
Introduction	257
PFTU installation	258
Installing and connecting SDI and Ethernet ports	265
Contents	265
Introduction	265
Modem setup requirements	266
SDI ports	267
Installing and connecting SDI ports	270
Installing and connecting an Ethernet cable	287
Starting the Chassis system	295
Contents	295
Introduction	295
Startup procedures	295
Installing software	299
Contents	299
Introduction	299
Installing software in a new system	304
IP Line card configuration	321
Contents	321

Introduction	321
Voice Gateway Media Card configuration on the Small System	322
Configuring Voice Gateway Media Cards on cabinets or chassis	324
Configuring IP Line data	326
Upgrading software and firmware	330
Connecting the telephones	333
Contents	333
Introduction	333
Cross-connecting telephones	335
Connecting telephones without a PFTU	337
Connecting analog 500/2500-type telephones with a PFTU	338
Connecting off-premise telephones	339
Connecting an attendant console	342
Cross-connecting terminal Digital Subscriber Loops	350
Activating telephones	350
Connecting the trunks	359
Contents	359
Introduction	360
Connecting trunks without PFTU	361
Connecting trunks with PFTU	361
Trunk connections	364
Trunk connections (Europe)	370
Trunk connections (UK)	381
Activating a default model trunk	389
Activating a selected model trunk	391
Connecting an external alarm	393
Contents	393
Introduction	393

Alarm port assigned in software	393
Alarm through a QUA6 PFTU	395
Preprogrammed data	399
Contents	399
Introduction	400
Passwords and codes	401
Default numbering plan	401
Flexible Feature Codes	420
SDI ports	421
Trunk routes	424
Trunk models	425
Model telephones	430
Changing preprogrammed data	469
Contents	469
Introduction	470
Changing the default numbering plan	471
Shifting the numbering plan to a new card slot	474
Removing numbering plan conflicts	475
Creating, changing, and removing model telephones	481
Printing model information	484
Removing model telephones	485
Creating model trunks and changing route access codes	485
Printing model information	488
Changing a route access code	488
Survivability	491
Contents	491
Introduction	492
Description	493

Configuring for Survivability	508
Retrieving Call Detail Recording records	519
Central Answering Position	521
Contents	521
Introduction	522
About the Central Answering Position	522
Key layout	525
Key expansion modules	527
Configuring your CAP	532
Logging into and out of the ACD queue	537
Using common CAP features	539
Other CAP features	547
Appendix A: Communications protocol specifications	559
Contents	559
Introduction	559
XModem protocol specifications	559
CRC protocol specifications	560

About this document

This document is a global document. Contact your system supplier or your Nortel Networks representative to verify that the hardware and software described are supported in your area.

Subject

This Nortel Networks Publication (NTP) is a reference tool for first-time installation of a Small System. In addition to complete installation instructions, it includes information about Survivability and the Central Answering Position (CAP) feature.

Installation sections explain how to install all four Small Systems:

- Meridian 1 Option 11C Chassis
- Meridian 1 Option 11C Cabinet
- Succession 1000M Chassis
- Succession 1000M Cabinet

The Succession 1000M Chassis and Succession 1000M Cabinet are Small Systems equipped with a Succession Signaling Server. For more information about the Succession Signaling Server and installation of its hardware and software, refer to *Signaling Server: Installation and Configuration* (553-3001-212).

In addition to describing the Survivability feature, this NTP explains how to configure a Small System for Survivability.

Information about the Central Answering Position (CAP) feature includes the following:

- a description of what the CAP is and a list of the required equipment
- procedures for configuring the CAP
- procedures for installing and removing key expansion modules
- procedures for logging onto the ACD queue
- a description of the common CAP features, including step-by-step procedures on how to use these features

Note on legacy products and releases

This NTP contains information about systems, components, and features that are compatible with Succession 3.0 Software. For more information on legacy products and releases, click the **Technical Documentation** link under **Support** on the Nortel Networks home page:

<http://www.nortelnetworks.com/>

Applicable systems

This document applies to the following systems:

- Meridian 1 Option 11C Chassis
- Meridian 1 Option 11C Cabinet
- Succession 1000M Chassis
- Succession 1000M Cabinet

System migration

When particular Meridian 1 systems are upgraded to run Succession 3.0 Software and configured to include a Succession Signaling Server, they become Succession 1000M systems. Table 1 lists each Meridian 1

Small System that supports an upgrade path to a Succession 1000M Small System.

Table 1
Meridian 1 systems to Succession 1000M systems

This Meridian 1 system...	Maps to this Succession 1000M system
Meridian 1 Option 11C Chassis	Succession 1000M Chassis
Meridian 1 Option 11C Cabinet	Succession 1000M Cabinet

Note the following:

- When an Option 11C Mini system is upgraded to run Succession 3.0 Software, that system becomes a Meridian 1 Option 11C Chassis.
- When an Option 11C system is upgraded to run Succession 3.0 Software, that system becomes a Meridian 1 Option 11C Cabinet.

For more information, see *Small System: Upgrade Procedures* (553-3011-258).

Intended audience

This document is intended for individuals responsible for installing new Small Systems.

Conventions

Terminology

In this document, the following systems are referred to generically as “system”:

- Meridian 1
- Succession 1000M

The following systems are referred to generically as “Small System”:

- Meridian 1 Option 11C Chassis
- Meridian 1 Option 11C Cabinet
- Succession 1000M Chassis
- Succession 1000M Cabinet

The following systems are referred to generically as “Chassis system”:

- Meridian 1 Option 11C Chassis
- Succession 1000M Chassis

The following systems are referred to generically as “Cabinet system”:

- Meridian 1 Option 11C Cabinet
- Succession 1000M Cabinet

The call processor in Succession 1000M systems is referred to as the “Succession Call Server”.

UK-specific terminology

This document contains North American terms that are not common in the UK. Table 2 lists these terms and their UK equivalents.

Table 2
North American to UK terms (Part 1 of 2)

North American term	UK term or meaning
analog (500/2500-type) set	Analog rotary dial/MF4 telephone
Central Office (CO)	Local Public Exchange
cross-connect wire	jumper wire
Direct Inward Dialing (DID)	Direct Dialing In (DDI)
E1	2.0 Mbit, 32 channel digital carrier (Megastream)
grounding	earthing

Table 2
North American to UK terms (Part 2 of 2)

North American term	UK term or meaning
set	telephone
station	extension telephone
TIE trunks	private circuits
toll trunks	exchange lines
T1	1.5 Mbit, 24 channel digital carrier (North American equivalent to Megastream)
WATS, FEX (FX1 and FX2), CSA	Alternative public vendor network services (used only in North America)

Related information

This section lists information sources that relate to this document.

For an overview of Small Systems, refer to *Small System: Description* (553-3011-010).

If you require planning and engineering information for a Small System, refer to *Small System: Planning and Engineering* (553-3011-120).

If upgrading from a Meridian 1 Small System to a Succession 1000M Small System, follow the steps outlined in *Small System: Upgrade Procedures* (553-3011-258) and *Signaling Server: Installation and Configuration* (553-3001-212).

If upgrading from an Option 11 or an Option 11E to a Small System, follow the steps outlined in *Small System: Upgrade Procedures* (553-3011-258).

For information on managing configuration databases, including using the remote access Customer Configuration Backup and Restore feature, refer to *Small System: Maintenance* (553-3011-500).

NTPs

The following NTPs are referenced in this document:

- *Small System: Description* (553-3011-010)
- *Small System: Planning and Engineering* (553-3011-120)
- *Small System: Upgrade Procedures* (553-3011-258)
- *Small System: Maintenance* (553-3011-500)
- *ISDN Primary Rate Interface: Installation and Configuration* (553-3001-201)
- *Circuit Card: Description and Installation* (553-3001-211)
- *Signaling Server: Installation and Configuration* (553-3001-212)
- *ISDN Basic Rate Interface: Installation and Configuration* (553-3001-218)
- *Optivity Telephony Manager: Installation and Configuration* (553-3001-230)
- *Set-Based Administration* (553-3001-303)
- *Software Input/Output: Administration* (553-3001-311)
- *Optivity Telephony Manager: System Administration* (553-3001-330)
- *Optivity Telephony Manager Telemanagement Applications: System Administration* (553-3001-331)
- *IP Line: Description, Installation and Operation* (553-3001-365)
- *Telephones and Consoles* (553-3001-367)
- *Internet Terminals* (553-3001-368)
- *Software Input/Output: System Messages* (553-3001-411)
- *Software Input/Output: Maintenance* (553-3001-511)
- *ISDN Primary Rate Interface: Maintenance* (553-3001-517)
- *ISDN Basic Rate Interface: Maintenance* (553-3001-518)
- *Meridian Mail Mini and Enhanced Card Option Installation and Maintenance Guide* (555-7071-210)

- *BIX In-Building Cross-Connect System Material Description* (631-4511-100)
- *BIX In-Building Cross-Connect System Material Installation and Servicing* (631-4511-200)

Online

To access Nortel Networks documentation online, click the **Technical Documentation** link under **Support** on the Nortel Networks home page:

<http://www.nortelnetworks.com/>

CD-ROM

To obtain Nortel Networks documentation on CD-ROM, contact your Nortel Networks customer representative.

Cabinet system equipment

Contents

This section contains information on the following topics:

Introduction	22
Cabinets	22
Cable connectors	22
Cooling	24
Power supplies	24
Reserve power	26
Common equipment circuit cards and components	28
Small System Controller card	28
Software Daughterboard	29
IP Daughterboards	29
Fiber Expansion equipment	32
Security device	36
SDI/DCH card	38
TDS/DTR card	38
Tone detector cards	38
ISDN and DTI packs	38
Peripheral equipment cards	39
Telephones and attendant consoles	40
Cables and wires	40
Miscellaneous items	42

Introduction

This chapter identifies major components of Cabinet systems. Identification codes are given where appropriate.

For a description of the Succession Signaling Server for a Succession 1000M Cabinet, refer to *Signaling Server: Installation and Configuration* (553-3001-212).

Cabinets

The NTAK11 cabinet is used for both main and expansion cabinets.

Figure 1
NTAK11 cabinet




Cable connectors

Connectors for cables to the cross-connect terminal and SDI ports are found at the bottom of each cabinet.

The AUX, SDI, and Ethernet connectors are located at the bottom left-hand side of the cabinet. The AUX port connects the cabinet to auxiliary equipment

such as a Power Failure Transfer Unit (PFTU). The SDI connector in the main and IP expansion cabinets interfaces three SDI ports using a three-port SDI cable. The Ethernet connector in the main cabinet provides a 10 Mbps Ethernet port.

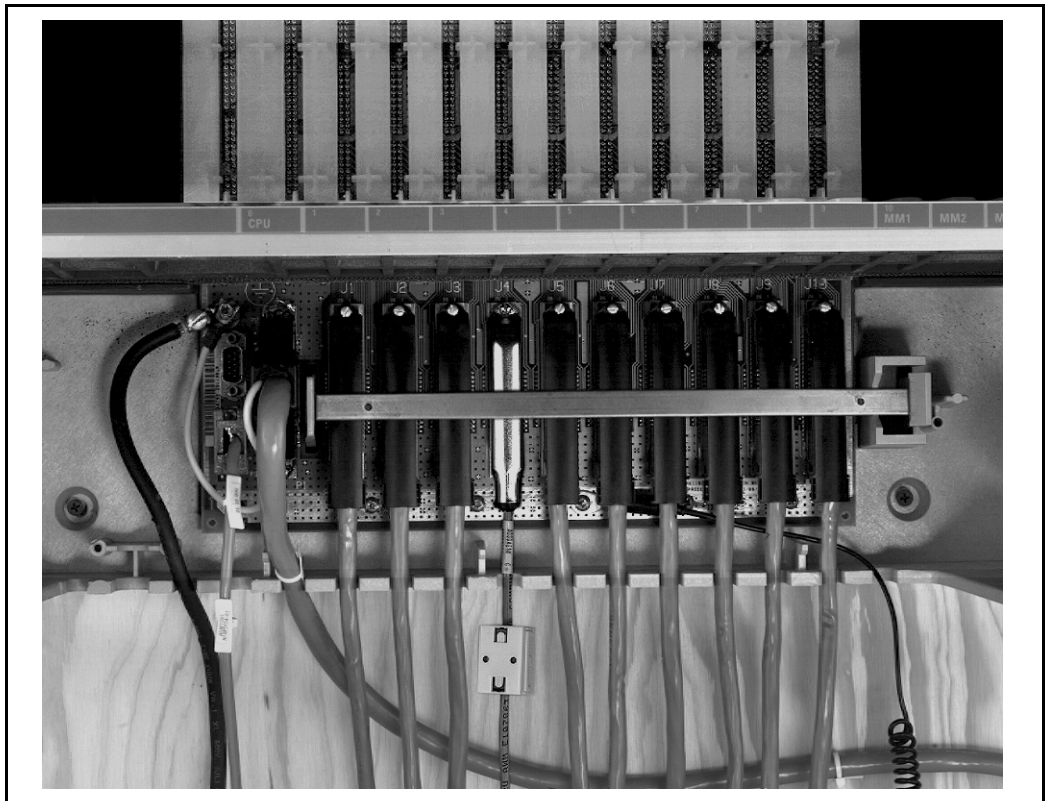Figure 2
Cable connections



Cooling

The NTAK11 cabinet is designed to permit natural convection cooling.



WARNING


Do not block cabinet ventilation. Poor ventilation could cause the system to overheat and damage system components, which may result in service interruption.

Power supplies

Two types of power supply are available for the system:

- The NTDK70 or NTDK78 ac/dc power supply (see Figure 3 on [page 25](#)).
- The NTDK72 dc power supply is used when the cabinet is powered by a -52 V dc source.

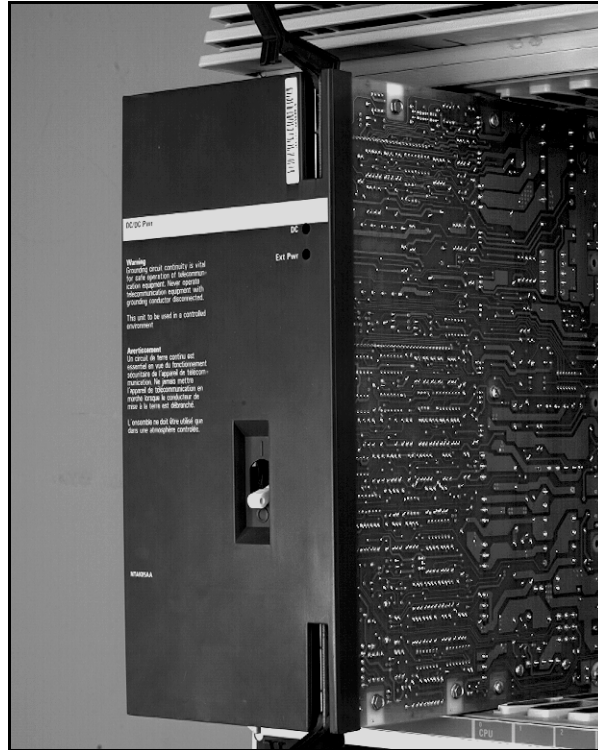Figure 3
AC/DC power supply



Reserve power



CAUTION — Service Interruption

If the NTDK70 or NTDK78 ac/dc power supply is powered down while it is operating on dc reserve power from a battery backup unit, the Cabinet system cannot be powered up again until ac power is restored. Be careful not to open the circuit breaker, either on the battery backup unit, or on the NTDK70 or NTDK78, while the system is operating on battery backup.

Three types of reserve battery power are supported:

- The NTAK75 battery box (shown in Figure 4 on [page 27](#)) provides a minimum of two hours of reserve dc power.
- The NTAK76 battery box (shown in Figure 5 on [page 28](#)) provides a minimum of 15 minutes of reserve dc power.
- An Uninterruptible Power Supply (UPS) for continuous ac power supply.

Note: Customer-supplied battery backup units can be connected to the cabinets using an NTAK28 Junction Box.

Figure 4
NTAK75 battery box

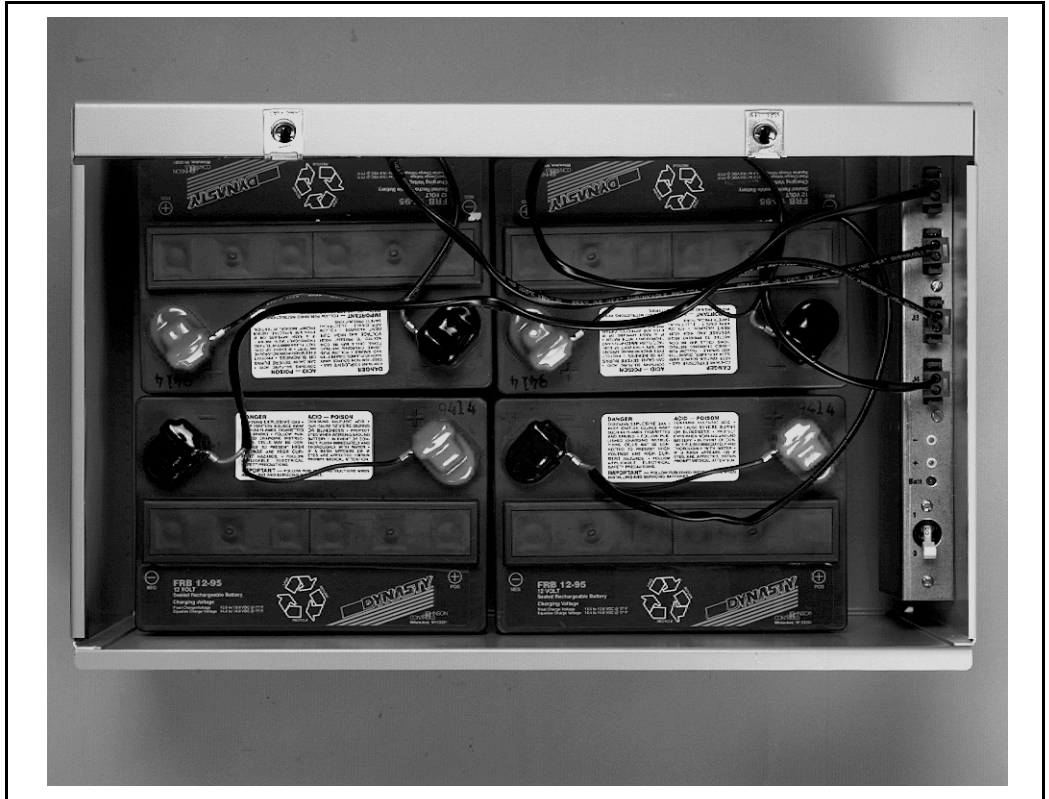


Figure 5
NTAK76 battery box



Common equipment circuit cards and components

The circuit cards described in this section can be used in the main cabinet and the IP expansion cabinets, where indicated.

Small System Controller card

The NTDK20 Small System Controller (SSC) card includes:

- a Central Processing Unit (CPU) that handles call processing
- an Ethernet controller
- system memory

Note: The NTDK20EA is the minimum vintage SSC card required for main cabinets with IP connectivity. The NTDK20CA may be used in IP expansion cabinets only. Option 11C Chassis system requires NTDK20EA SCC card in both main and expansion cabinets.

PC Card interface

The NTDK20 SSC card has a 2-slot PC Card interface socket located on its faceplate. You can insert a Software Delivery card (PC Card) into the socket. Use the PC Card for software upgrades on an existing Cabinet system. You can also use this socket for creating an external backup copy of the customer database.

Software Daughterboard

The NTDK20 SSC card requires a Software Daughterboard in order to function. The NTTK25 Software Daughterboard provides 48 Mbytes of storage for system and customer data. It can be ordered preprogrammed with system software and customer data.

IP Daughterboards

For IP connectivity, four IP daughterboards are available:

- The NTDK83 dual-port 100BaseT
- The NTTK02 dual-port 100BaseF
- The NTDK99 single-port 100BaseT
- The NTTK01 single-port 100BaseF

Figure 6
The NTDK83 IP Daughterboard

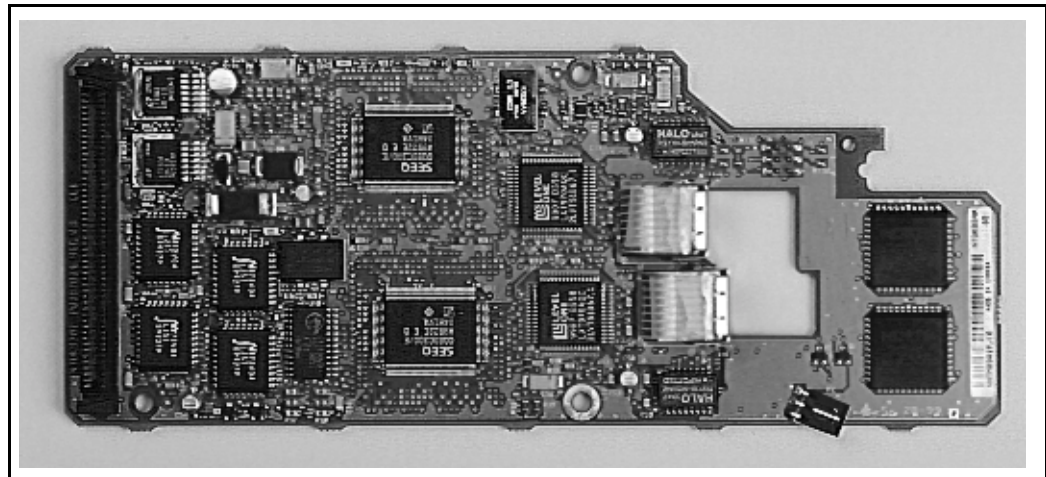


Figure 7
The NTTK02 IP Daughterboard

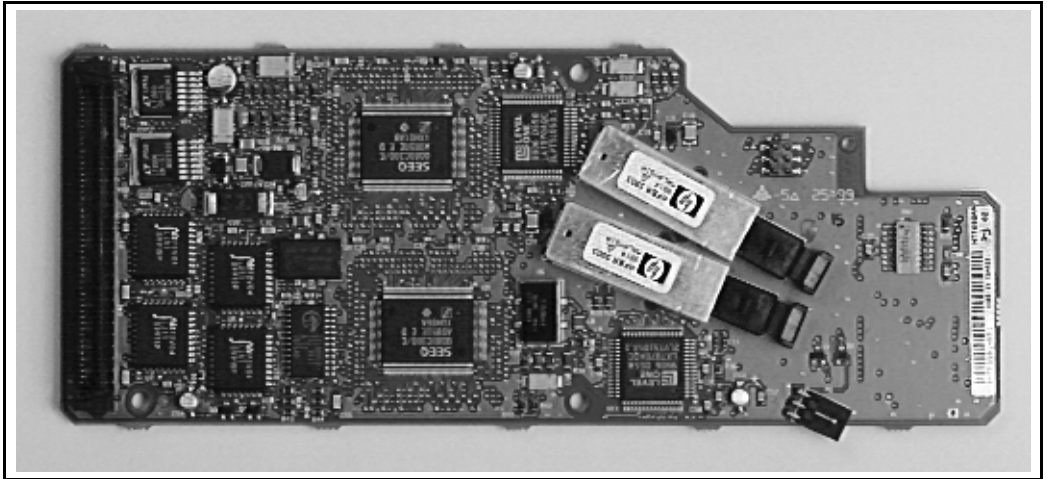


Figure 8
The NTDK99 Daughterboard


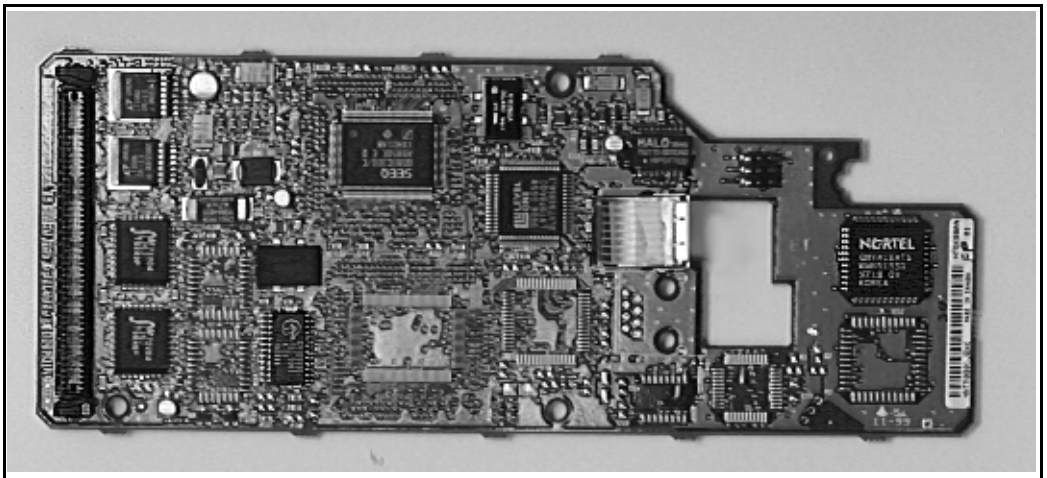


Figure 9
The NTTK01 Daughterboard

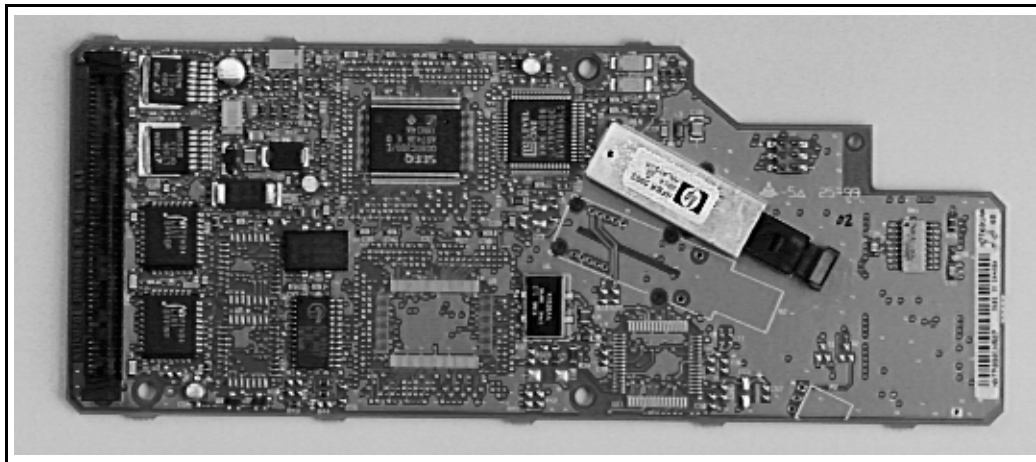

Fiber Expansion equipment

For non-IP expansion, Fiber Expansion Daughterboards in the main cabinet and Fiber Receiver cards in expansion cabinets allow for fiber connectivity between the main cabinet and up to four fiber expansion cabinets or chassis.

Fiber Receiver card

There are three versions of the Fiber Receiver card. Each has a corresponding Fiber Expansion Daughterboard:

- NTDK23 (10 m)
- NTDK25 (3 km, Multimode)
- NTDK80 (3 km, Single Mode)

Fiber Expansion Daughterboard

Single-port Fiber Expansion Daughterboard

The Single-port Fiber Expansion Daughterboards and their Fiber Receiver card counterparts are:

- The NTDK22 Fiber Expansion Daughterboard. Its Fiber Receiver card counterpart is the NTDK23.
- The NTDK24 daughterboard. Its Fiber Receiver card counterpart is the NTDK25.
- The NTDK79 daughterboard. Its Fiber Receiver card counterpart is the NTDK80.

Figure 10
The NTDK22 Daughterboard


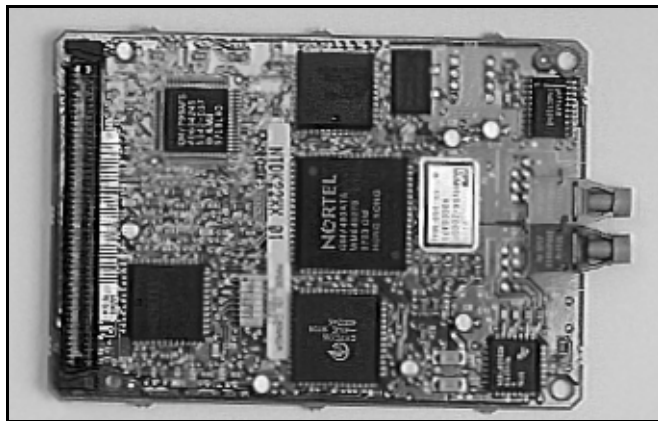


Figure 11
The NTDK24 Daughterboard

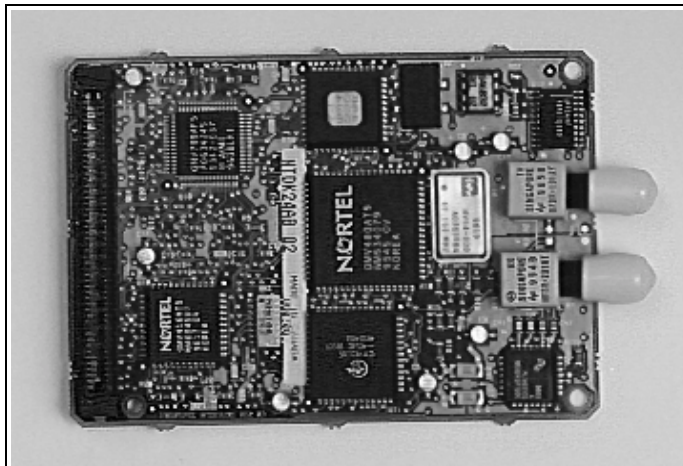

Dual-port Fiber Expansion Daughterboard

The Dual-port Fiber Expansion Daughterboards and their Fiber Receiver counterparts are:

- The NTDK84 Dual-port Fiber Expansion Daughterboard. Its Fiber Receiver card counterpart is the NTDK23.
- The NTDK85 daughterboard. Its Fiber Receiver card counterpart is the NTDK25.

Figure 12
The NTDK84 Daughterboard


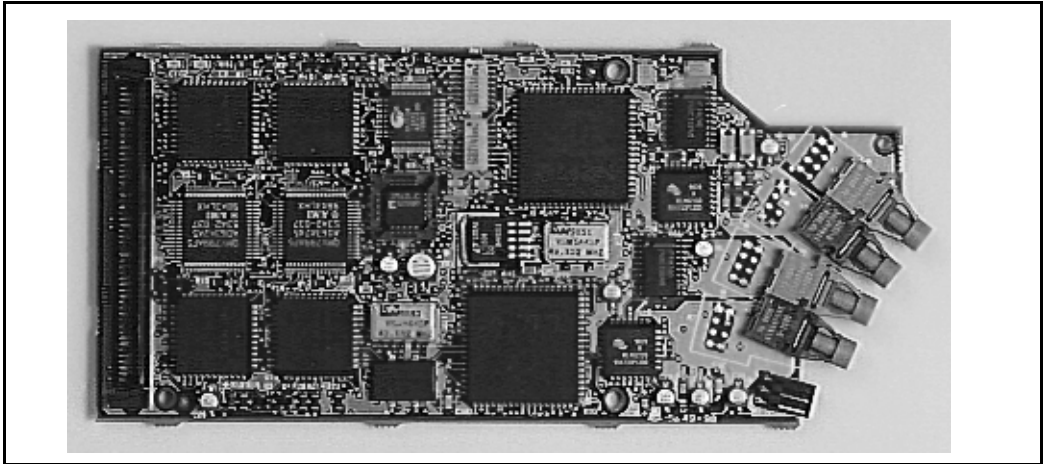


Figure 13
The NTDK85 Daughterboard

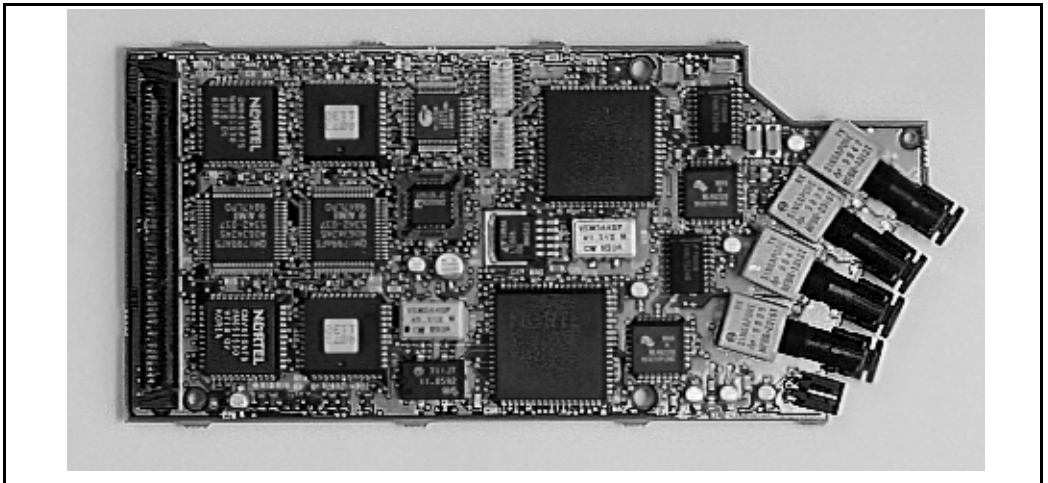


Security device

A security device is required on the NTDK20 SSC card of the main and all IP expansion cabinets. There are two types of security devices:

- The NT_STD required in the main cabinet
- The NT_REM required in the IP expansion cabinets

Both devices look identical, but can easily be identified by the label.

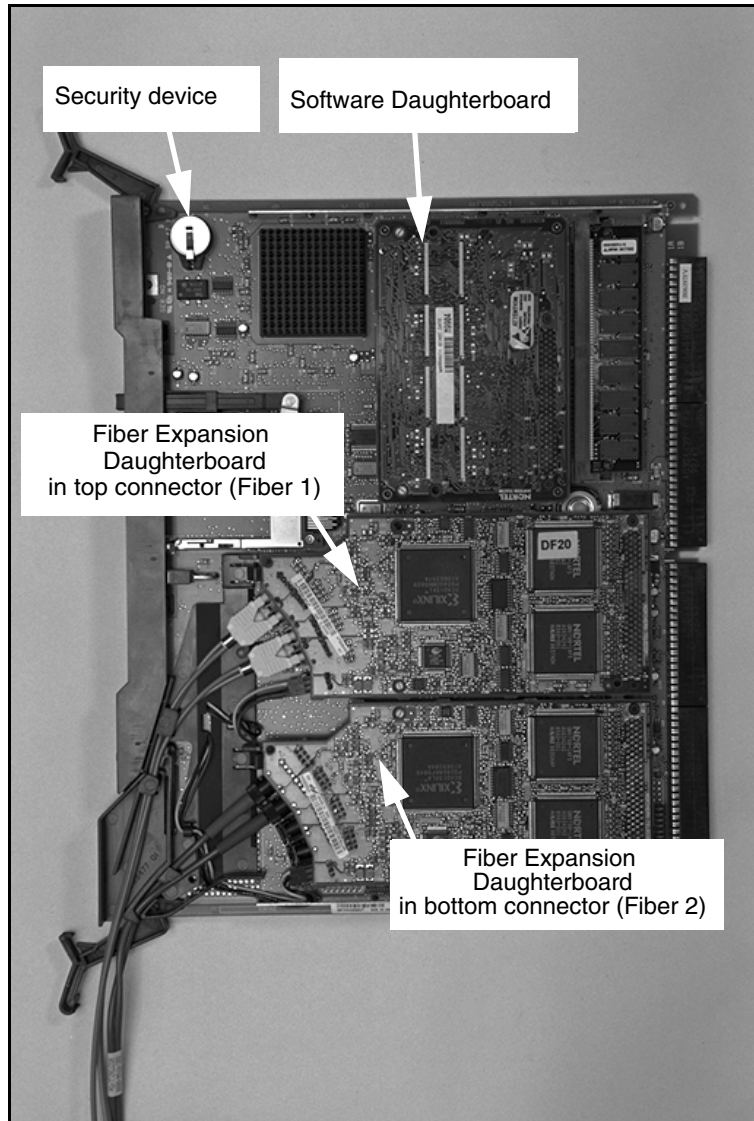Figure 14
Daughterboards and security device on the NTDK20 SSC card



SDI/DCH card

The NTAK02 is an optional SDI/DCH card that provides four SDI ports for various applications.

TDS/DTR card

The NTAK03 TDS/DTR card provides tone transmission and detection plus two SDI ports.

Tone detector cards

The NT5K20 and NT5K48 Tone detector cards provide DTMF or DT detection. These Tone detector cards are used in European regions only.

ISDN and DTI packs

Table 3 lists the packs required to support Integrated Services Digital Networks (ISDN) and Digital Trunk Interface (DTI) functionality in Cabinet systems.

Table 3
Common equipment packs supported in Cabinet system IP cabinets (Part 1 of 2)

Pack	Daughterboard	Supported application
1.5MB DTI/PRI (NTAK09)	DCHI (NTAK93) DDCH (NTBK51) CC (NTAK20)	non-downloadable downloadable DCH clock controller (stratum 3/4)
1.5MB TMDI (NTRB21)	CC (NTAK20)	downloadable DCH clock controller (stratum 3/4)
2.0MB DTI (NTAK20)	n/a	clock controller (stratum 3/4)
2.0MB PRI (NTAK10)	n/a	clock controller (stratum 3/4) DCH
2.0MB PRI (NTBK50)	DDCH (NTBK51) CC (NTAK20)	downloadable DCH clock controller (Stratum 3/4)

Table 3
Common equipment packs supported in Cabinet system IP cabinets (Part 2 of 2)

Pack	Daughterboard	Supported application
MISP (NTBK22)	CC (NTAK20)	MISP BRI processor clock controller (stratum 3/4)
SDI_DCH (NTAK02)	n/a	only DCH is supported; ESDI, AML, TTY are not supported
Card Option Mail is not supported	n/a	n/a

Peripheral equipment cards

The following Intelligent Peripheral Equipment (IPE) cards can be used in main and IP expansion cabinets:

- NT1R20 Off-Premise Station (OPS) analog line card
- NT8D02 digital line card
- NT8D03 analog line card
- NT8DO9 analog message waiting line card
- NT8D14 Universal Trunk card
- NT8D16 Digitone Receiver card
- NT8D15 E&M Trunk card
- NT5K02 (International) analog line card
- NT5K18 (International) 8 Port COT/PPM trunk card
- NT5K17 (International) 8 Port DID trunk card
- NT5K19 (International) 4 Port 2W/4W E&M, RAN, Paging AC15 trunk card
- NT5K21 (International) Multi Frequency Compelled Sender/Receiver card
- NT5K36 (International) 4 Port German DID/DOD trunk card

- NT7D16 Data Access Card (DAC)
- NTAG26 Extended Multi-frequency Receiver (XMFR) card

Telephones and attendant consoles

Supported telephones are as follows:

- Analog (500/2500-type) telephones with or without message waiting lamps.
- Meridian Digital Telephones (M2006, M2008, M2009, M2018, M2112, M2216, M2616 and M3000).
- M2616 or M2216 Central Answering Position (CAP). This telephone must be equipped with an ACD LCD display in order to function as a CAP telephone.
- Meridian 2250 (TCM) attendant consoles.

Cables and wires

Table 4 lists the cables and wires used with a Cabinet system.

Table 4
Cable and wire specifications (Part 1 of 3)

Cables and Wires	Purpose / Description
NTAK98 power supply cord	Connects a system cabinet to the ac commercial power source. Length: 9 ft 10 in. (3000 mm).
NTDK27 Ethernet adapter cable	Provides a 15-pin AUI Ethernet interface.
A0632902 Fiber-optic cable (multi-mode plastic)	Connects a main and expansion cabinet by interfacing with an expansion daughterboard and a Fiber Receiver card. Length: 10 m (33 ft).
Glass Fiber-optic cable (3 km) used on Fiber Expansion Daughterboards (Multimode or Single Mode, depending on interface)	Must be supplied locally by a facilities provider. Length up to 3 km (1.8 mi).

Table 4
Cable and wire specifications (Part 2 of 3)

Cables and Wires	Purpose / Description
Glass Fibre Optic Cable used on 100BaseF Expansion daughterboards (Multimode only) up to 2 km	Must be supplied locally by a facilities provider. Length up to 2 km.
NTTK34 cable	100BaseT connection between the main and IP expansion cabinets in a point-to-point configuration.
NTDK8305 cable	100BaseT connection between the main and IP expansion cabinets in a point-to-point or LAN configuration.
A0817052 MT-RJ to ST cable (5 m)	Connection between the main and IP expansion cabinets using 100BaseF IP daughterboards.
A0817055 MTRJ to MTRJ (10m)	100BaseF connection between main and expansion cabinets.
A0346816 ST Fibre Coupler	Allows two 100BaseF MTRJ to ST cables to connect to one another in a point-to-point configuration.
NTAK0420 power cable	Connects a system cabinet to a reserve battery power supply, or to a dc power source in conjunction with an NTAK28 Junction Box.
NTAK1104 AUX cable	Connects a PFTU to a system cabinet, and provides power to an M2250 attendant console.
NTBK48 three-port SDI cable	Connects TTYs, modems, and so on, to the Small System. It is used in conjunction with the NTDK20EA card.
NTAK1108 one-port SDI cable	Connects TTYs, modems, and so on, to Fiber Receiver card-supported SDI ports in the expansion cabinets. The cable provides a 9-pin to 25-pin converter connection.

Table 4
Cable and wire specifications (Part 3 of 3)

Cables and Wires	Purpose / Description
NTAK19 cable	SDI cable used with the NTAK02 and NTAK03 circuit cards.
A0601397 F-F DCE to DTE converter, or A0601396 F-M DCE to DTE converter	May be required when connecting SDI ports to TTYs, modems, etc.
NTBK04 1.5 Mb DTI/PRI carrier cable (A0394216)	Connects the NTAK09 1.5 Mb DTI/PRI card to the Channel Service Unit (CSU). Brings Tx and Rx pairs to a standard 5-pin connector.
NTBK05CA coax cable NTBK05DA twisted pair cable NTAK10 2.0 Mb DTI cable NTAK79 2.0 Mb PRI cable NTAK50 2.0 Mb PRI cable	Provides DTI/PRI connections. Brings Tx and Rx pairs to a standard 5-pin connector.
NE-A25B 25-pair cable	Connects peripheral equipment cards to cross-connect terminals. NE-A25B connector slots are located on the bottom of each cabinet.
#6 AWG (#40 Metric Wire Gauge) insulated ground wire	Connects a system cabinet to a building ground source.
Cross-connecting wire	Makes cross-connections at the cross-connect terminal.


Miscellaneous items

The following is a list of typical miscellaneous items that can be used as part of the system installation. Quantities needed depend on the site and customer requirements:

- QUA6 Power Failure Transfer Units (PFTU) to transfer lines during a power or system failure
- NTBK80 grounding block

- modems or Data Communication Equipment (DCE) for remote access to the system
- on-site Data Terminating Equipment (DTE) or teletypewriter (TTY) terminal for accessing the system
- connecting blocks for the cross-connect terminal
- transformers and centralized power supplies for items such as digit displays on telephones
- optional equipment such as music sources, RAN machines, paging equipment, and CDR devices
- NTAK92 Off-Premise Protection Module for connecting up to four off-premise analog telephones
- additional Modem Eliminator (NULL Modem without hardware handshaking) A0601397 converter may be required to interface the DTE to the system
- EMC grounding clip is required, for EMC compliance, on the front stiffener rail of the IP cabinet. Refer to Figure 15 on [page 44](#) for further details.

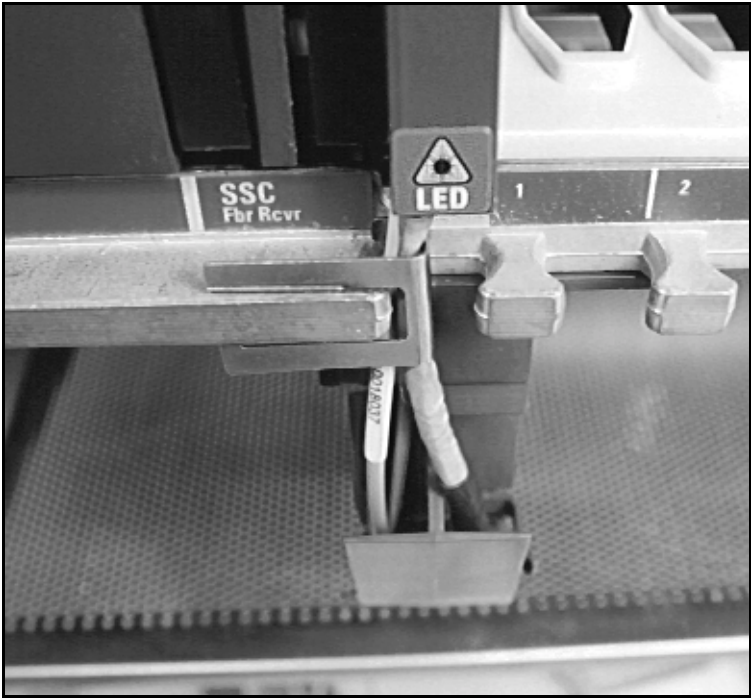Figure 15
EMC grounding clip



Chassis system equipment

Contents

This section contains information on the following topics:

Introduction	45
Main components of the Chassis system.	46
NTDK91 chassis and NTDK92 chassis expander	46
Power supply	50
Reserve power supply.	53
Circuit cards	53
IP expansion	56
Fiber expansion	56
Telephones and attendant consoles	57
Cables and wires.	58
Miscellaneous items for installation.	61

Introduction

This chapter describes the main components used to install the Chassis system. This chapter also describes the differences between the Chassis system and the Cabinet system.

For a description of the Succession Signaling Server for a Succession 1000M Chassis, refer to *Signaling Server: Installation and Configuration* (553-3001-212).

Main components of the Chassis system

NTDK91 chassis and NTDK92 chassis expander

A Chassis system comprises an NTDK91 chassis plus an optional NTDK92 chassis expander. The chassis can be connected to the chassis expander to increase line capacity.

The chassis supports the following:

- NTDK20 Small System Controller (SSC) card installed in Slot 0
- any IPE or CE card in Slots 1, 2, and 3
- a dedicated 48-port Digital Line Card (NTDK16) in Slot 4

The chassis expander supports the following:

- Meridian Mail in Slot 10 only.
- With Meridian Mail in Slot 10, you can insert any IPE card in Slots 7, 8, and 9.

Chassis installation options

You can install the chassis and chassis expander in the following positions:

- in a rack/equipment cabinet
- on a wall
 - vertically on a wall
 - horizontally on a wall


The following chassis installation kits are available:

- NTTK08AA: for vertical, wall installation
- NTTK09AA: for rack/cabinet installation
- NTTK11AA: for horizontal, wall installation

Cable connectors

25-pair cables connect cards to the cross-connect terminal. Connectors for these cables are on the back of the chassis and the chassis expander. See Figure 16 on [page 47](#).

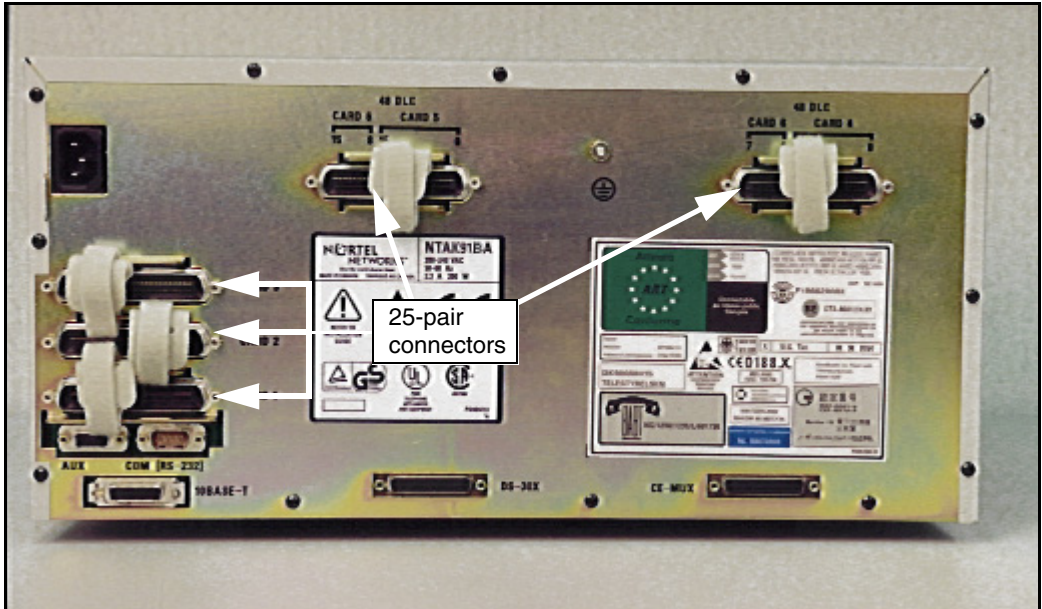Figure 16
25-pair cable connectors on the back of the chassis



The Auxiliary (AUX), Serial Data Interface (SDI), and Ethernet connectors are on the back left-hand side of the chassis. See Figure 17 on [page 48](#).

The AUX port connects auxiliary equipment, such as a Power Failure Transfer Unit (PFTU), to the Chassis system. The SDI connector in the chassis interfaces three SDI ports using a three-port SDI cable. The Ethernet connector in the chassis provides a 10 Mbit Ethernet port. The Ethernet port accepts an industry-standard Medium Access Unit (MAU). Insert the Ethernet cable into this MAU.

The back of the chassis also contains connectors for connecting the chassis and the chassis expander. These connectors are for the DS-30X and CE-MUX connections. See Figure 17 on [page 48](#).

The power connector is at the back of the chassis on the upper left-hand side. See Figure 17 on [page 48](#). Secure the power cord with a cable tie.

Figure 17
Connectors on the back of the chassis


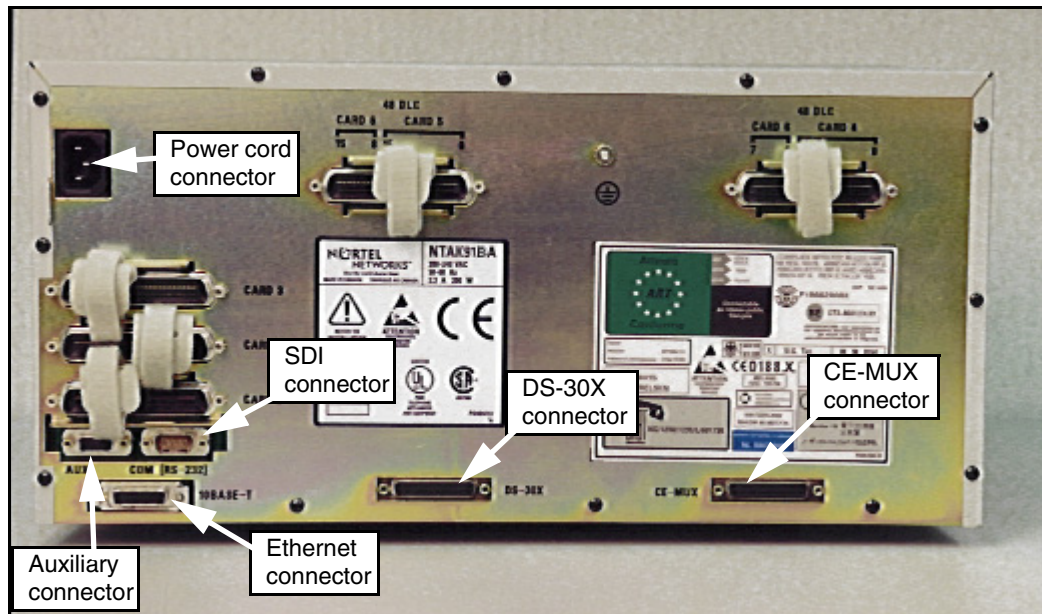


Figure 18 on [page 49](#) shows the connectors on the back of the chassis expander.

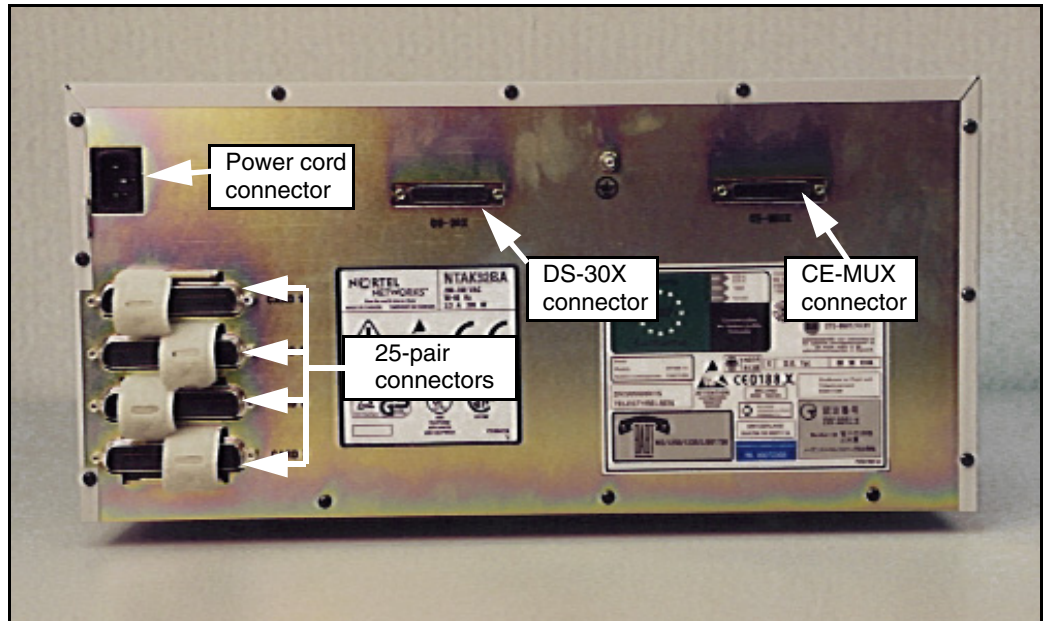Figure 18
Connectors on the back of the chassis expander



Cooling

The NTDK91 chassis and the NTDK92 chassis expander have forced air cooling. As a result, you can install the chassis in a horizontal or vertical position. The fan inside the chassis is controlled by heat. It runs at a reduced speed at room temperature.



WARNING

Do not block chassis ventilation. Poor ventilation could cause the system to overheat and damage system components, which may result in service interruption.

Power supply

The universal power supply in the Chassis system uses ac input. The power supply is factory installed and not customer replaceable. The Chassis system does not support dc input.

Power switch

There is a power switch on the front of the NTDK91 chassis and the NTDK92 chassis expander. Use this switch to turn the system power on and off. See Figure 19 on [page 53](#).

Power status indicator

There is a power status indicator (LED) on the front cover (top left-hand corner) of the chassis and the chassis expander. When the LED is green, the power is in operation. When the LED is off, there is a power failure of one of the power outputs. See Figure 19 on [page 53](#).

Power supply DIP switch settings

Use a DIP switch to set ringing voltages, ringing frequencies, and message waiting voltages. See Table 6 on [page 51](#) and Figure 19 on [page 53](#) for all DIP switch setting options. Typical settings are shown for the following regions:

- “Asia Pacific/CALA power supply DIP switch settings” on [page 51](#)
- “Europe power supply DIP switch settings” on [page 51](#)
- “North American power supply DIP switch settings” on [page 52](#)

Table 5
Power supply DIP switch settings

Ringing Frequency (Hz)				Ringing Amplitude (Vrms)					Message Waiting Lamp (VDC)			
Switch Setting	20	25	50	Switch Setting	70	75	80	86	Switch Setting	-120	-150	Disable
1	ON	OFF	ON	3	OFF	ON	ON	ON	6	NOT USED		
2	ON	ON	OFF	4	OFF	OFF	ON	ON	7	OFF	OFF	ON
				5	OFF	OFF	OFF	ON	8	OFF	ON	X

Table 6
Asia Pacific/CALA power supply DIP switch settings

In the Asia Pacific/CALA region, usage of the high voltage Message Waiting Lamp is optional. The table shows the settings for 25 Hz, 75 V, and -150 V for the Message Waiting Lamp.

Ringing Frequency (Hz)				Ringing Amplitude (Vrms)					Message Waiting Lamp (VDC)			
Switch Setting	20	25	50	Switch Setting	70	75	80	86	Switch Setting	-120	-150	Disable
1	OFF			3	ON				6	NOT USED		
2	ON			4	OFF				7	OFF		
				5	OFF				8	ON		

Table 7
Europe power supply DIP switch settings

In Europe, usage of the high voltage Message Waiting Lamp is not allowed. The following table shows the settings for 25 Hz, 75 V, and the Message Waiting Lamp is disabled.

Ringing Frequency (Hz)				Ringing Amplitude (Vrms)					Message Waiting Lamp (VDC)			
Switch Setting	20	25	50	Switch Setting	70	75	80	86	Switch Setting	-120	-150	Disable
1	OFF			3	ON				6	NOT USED		
2	ON			4	OFF				7	ON		
				5	OFF				8	ON		

Table 8
North American power supply DIP switch settings


In North America, usage of the high voltage Message Waiting Lamp is optional and requires -150 V when enabled. The following table shows the settings for 20 Hz, 86 V, and the Message Waiting Lamp is disabled.

Ringing Frequency (Hz)				Ringing Amplitude (Vrms)					Message Waiting Lamp (VDC)			
Switch Setting	20	25	50	Switch Setting	70	75	80	86	Switch Setting	-120	-150	Disable
1	ON			3				ON	6	NOT USED		
2	ON			4				ON	7			ON
				5				ON	8			ON

Note: Set the DIP switches before the system powers up.

Figure 19 shows the power switch, power status indicator, and DIP switch settings.

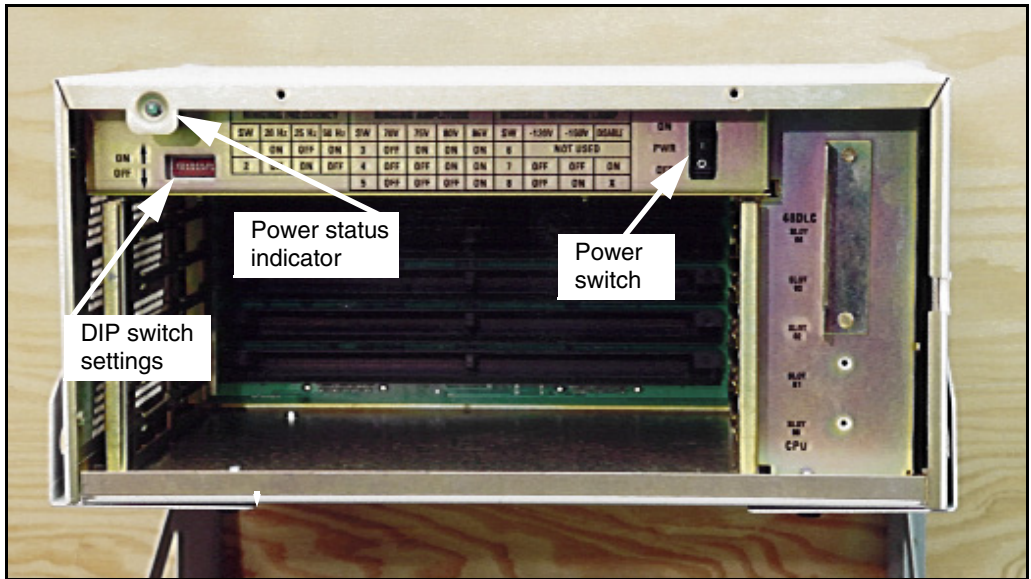Figure 19
Front of chassis



Reserve power supply

You can use an Uninterruptible Power Supply (UPS) to provide a backup power supply for the NTDK91 and the NTDK92 chassis. A UPS provides a continuous ac power supply. Install the UPS unit according to the manufacturer's instructions. Refer to the power consumption information in the chapters on system and site requirements in *Small System: Planning and Engineering* (553-3011-120). This section contains worksheets to help you determine the power draw for the UPS.

Circuit cards

The Chassis system supports the NTDK20 SSC card and the NTDK16 48-port Digital Line Card. This section provides a short overview of these two

cards. For more information about other circuit cards supported on the Chassis system, refer to “Installing optional circuit cards” on [page 217](#).

NTDK20 SSC card and components

The NTDK20 SSC card includes:

- a Central Processing Unit (CPU) that handles call processing
- an Ethernet controller
- system memory

Note: The NTDK20EA is the minimum vintage SSC card required for the chassis.

You must install the SSC card in Slot 0.

Software Daughterboard

The NTDK20 SSC card requires a Software Daughterboard in order to function. The NTKK25 Software Daughterboard provides 48 Mbytes of storage for system and customer data. It can be ordered preprogrammed with system software and customer data.

PC Card interface

The NTDK20 SSC card has a 2-slot PC Card interface socket located on its faceplate. You can insert a Software Delivery card (PC Card) into the socket. Use the PC Card for software upgrades on an existing Chassis system. You can also use this socket for creating an external backup copy of the customer database.

SDI ports

The NTDK20 SSC card contains three SDI ports used to connect on-site terminals or remote terminals through a modem.

Ethernet interface

The NTDK20 SSC card has a 10 Mbit Ethernet port. The 15-pin connector, located on the back of the chassis, provides external connection to the

Ethernet port. This connector is for a standard 15-pin AUI interface for a MAU.

Digitone Receiver, tone generation, tone detection functions

The NTDK20 SSC card provides the following Digitone and other tone functions related to tone:

- 30 channels of Tone and Digit Switch (TDS) and a combination of eight Digitone Receivers (DTR) or Dial Tone Detectors (XTD)
- Tone service ports, which can be configured as either four units of MFC/MFE/MFK5/MFK6/MFR or eight DTR/XTD units

If you require additional tone receiver and transmission resources over and above those provided on the SSC card, install an NTAK03 TDS/DTR card.

Security device

The SSC card is equipped with a socket designed to hold the security device. The security device is shipped with each new Chassis system. When the SSC card is shipped, the security device is normally not attached to the socket on the SSC card. You must attach the security device to the SSC card during initial installation.

NTDK16 48-port Digital Line Card

The NTDK16 48-port Digital Line Card provides an interface to a maximum of 48 digital integrated voice and 48 data ports. The NTDK16 Digital Line Card is functionally equivalent to three NT8D02 Digital Line Cards.

Note 1: Only place the NTDK16 Digital Line Card in slot 4 of the chassis.

Note 2: The NTDK16 Digital Line Card is not required for the Chassis system to operate.

IP expansion

For IP connectivity, four IP daughterboards are available:

- The NTDK83 dual-port 100BaseT
- The NTTK02 dual-port 100BaseF
- The NTDK99 single-port 100BaseT
- The NTTK01 single-port 100BaseF

Fiber expansion

For non-IP expansion, Fiber Expansion Daughterboards in the chassis and Fiber Receiver cards in the expansion chassis allow for fiber connectivity between the chassis and up to four fiber expansion chassis or cabinets.

Fiber Receiver card

Multi-chassis Small Systems require an NTDK23 Fiber Receiver card in each additional chassis. The NTDK23 supports a 10 m (33 ft) plastic fiber-optic cable. Each Fiber Receiver card provides one SDI port for remote TTY access.

Fiber Expansion Daughterboard

Fiber Expansion Daughterboards must be installed on the NTDK20 SSC card in order to connect to additional chassis. There are two kinds of Fiber Expansion Daughterboards that can be matched with the NTDK23 Fiber Receiver card:

- NTDK22 Single-port Fiber Expansion Daughterboard
- NTDK84 Dual-port Fiber Expansion Daughterboard

Both daughterboards are used with the A0632902 Fiber-optic (multi-mode) cable.

Routing Guides

Each chassis in a multi-chassis system requires a Routing Guide, in order to route and manage the fiber-optic cable. Only one guide is required in each chassis.

Telephones and attendant consoles

The following is a list of the telephones and attendant consoles supported by the Chassis system:

- Analog (500/2500-type) telephones, with or without message waiting lamps
- Meridian Digital Telephones (M2006, M2008, M2009, M2018, M2112, M2216, M2616, and M3000)
- Meridian Digital Telephones (M3110, M3310, and M3820)

Note: The M3110, M3310, and M3820 Meridian Digital Telephones are available in Europe only.

- Meridian Digital Telephones (M3901, M3902, M3903, M3904, and M3905)

Note: Only the M3901 and the M3905 Meridian Digital Telephones are supported in Europe.

- M2616 or M2216 Central Answering Position (CAP). These telephones must have an ACD LCD display installed to function as a CAP telephone.
- Meridian 2250 (TCM) attendant consoles

Cables and wires

Table 9 lists Chassis system cable kits and their contents.

Table 9
Chassis system cable kits

Cable or wire	Purpose/description
NTDK88 Main cable kit	
NTBK48 three-port SDI cable	Connects equipment, such as TTYs and modems, to the Chassis system. Use the NTBK48 with the NTDK20 SSC card.
NTAK1104 AUX cable	Connects a PFTU to a system chassis.
A0601396 F-M DCE to DTE converter	You can use the A0601396 when connecting SDI ports to equipment, such as TTYs and modems.
A0601397 F-F DCE to DTE converter	You can use the A0501397 when connecting SDI ports to equipment such as TTYs and modems.
NTDK89 chassis expander cable kit	
NTDK95 CE-MUX/DS-30X bus cable	Connects the chassis to the chassis expander. You need two of these cables to connect the chassis and the chassis expander. Length: 2 ft (610 mm)

Table 10 lists the ac power cord kits for various countries. These cords connect a system chassis to a commercial ac power source.

Table 10
AC power cord kits

Country / Region	Kit	Cord	Voltage
North America (see Note)	NTTK14	A0512637	110 V
Europe	NTTK16	A0381307	220 V
UK/Ireland	NTTK18	A0381306	220 V
Switzerland	NTTK17	A0386024	220 V
Australia/New Zealand	NTTK15	A0386023	220 V
Denmark	NTTK22	A0386026	220 V
Note: A 220 V ac cord A0379412 is also available.			

Table 11 lists miscellaneous cables and wires used with the Chassis system.

Table 11
Chassis system miscellaneous cables and wires (Part 1 of 3)

Cable and Wire	Purpose / Description
A0379411 power cord (International)	Connects the chassis to a 220 V ac commercial power source. Length: 2492 mm (8 ft 2 in.)
A0632902 Fiber-optic cable (multi-mode plastic)	Connects a main and expansion chassis by interfacing with a Fiber Expansion Daughterboard and a Fiber Receiver card. Length: 10 m (33 ft)
NE-A25B 25-pair cable	Connects Peripheral Equipment cards to the cross-connect terminal. NE-A25B connectors are on the back of each chassis.

Table 11
Chassis system miscellaneous cables and wires (Part 2 of 3)

Cable and Wire	Purpose / Description
NTAK19 cable	SDI cable used with the NTAK02 and NTAK03 circuit cards (see Note 1).
NTAK1108/1118 9- to 25-pin RS232 converter cable	Connects SDI ports and terminals (see Note 1).
A0378652 F-F DCE to DTE converter, or A0381016 F-M DCE to DTE converter	Connects SDI ports to equipment, such as TTYs and modems.
NTBK04 1.5 Mbit DTI/PRI carrier cable (A0394216)	Connects the NTAK09 1.5 Mbit DTI/PRI card to the Channel Service Unit (CSU). The NTBK04 carries Tx and Rx pairs to a standard 5-pin connector.
NTBK05AA/DA 2.0 Mbit DTI/PRI carrier cable A0394217	Carries Tx and Rx pairs to a standard 120-Ohm D-connector (see Note 1).
NT8D7205	DTI/PRI carrier cable
NTBK05CA coaxial cable NTBK05DA twisted pair cable NTAK10 2.0 Mbit DTI cable NTAK79 2.0 Mbit PRI cable NTAK50 2.0 Mbit PRI cable	These cables provide DTI/PRI connections. The cables carry Tx and Rx pairs to a standard 5-pin connector (see Note 2).
25-pair inside wiring cables equipped with amphenol-type connectors	Extend the Peripheral Equipment connections from the system chassis to the cross-connect terminal, and connect PFTUs.
#6 AWG (#40 Metric Wire Gauge) insulated ground wire	Connects a system chassis to a building ground source.
10 mm ² (#6 AWG) insulated ground wire (UK)	Connects a system chassis to a building ground source.
#6 AWG (20 mm ²) insulated ground wire (Europe)	Connects a chassis to a building ground source.

Table 11
Chassis system miscellaneous cables and wires (Part 3 of 3)

Cable and Wire	Purpose / Description
#8 AWG (10 mm ²) insulated ground wire (Germany)	Connects a chassis to a building ground source.
Cross-connect wire	Makes cross connections at the cross-connect terminal.
Note 1: This cable is available in different versions, depending on local EMC specifications.	
Note 2: These cables are not supported under EMC specifications VL43.140P.	

Miscellaneous items for installation

The following is a list of miscellaneous items that you can use as part of Chassis system installation. Quantities needed depend on the site and customer requirements:

- QUA6 Power Failure Transfer Units (PFTU) to transfer lines during a power or system failure
- NTBK80 grounding block
- modems or Data Communication Equipment (DCE) for remote access to the system
- on-site Data Terminating Equipment (DTE) or TTY terminal for accessing the system
- connecting blocks for the cross-connect terminal
- transformers and centralized power supplies for items such as digit displays on telephones
- optional equipment such as music sources, RAN machines, paging equipment, and CDR devices
- NTAK92 Off-Premise Protection Module for connecting up to four off-premise analog telephones

- additional Modem Eliminator (NULL Modem without hardware handshaking). The A0601397 converter may be required to interface the DTE to the system.
- industry-standard Ethernet Medium Access Unit (MAU)

Regulatory information

Contents

This section contains information on the following topics:

Introduction	64
Notice for United States installations	64
Importance of Ringer Equivalence Number	65
Hearing aid compatibility	65
Notice for Canadian installations	66
Notice for International installations	67
European compliance information	67
Electromagnetic compatibility	68
Radio and TV interference	69
Canadian and US network connections	70
FCC compliance: Registered equipment for Direct Inward Dial calls	72

Introduction

This chapter includes regulatory information for American, Canadian and International installations pertinent to the Small System installation.



WARNING

The fiber-optic interface product used in the Small System is considered safe. However, as a precaution do not look directly at the optical port or the end of fiber-optic cable.

Under certain conditions (such as during cable testing or under light magnification), the cable or port may expose your eyes beyond the limits of Maximum Permissible Exposure recommended in some jurisdictions. Do not remove protective caps or plugs until ready to connect the cable.

Notice for United States installations

The Small System complies with Part 68 of the FCC rules. Each system cabinet or chassis has a label containing the FCC registration number and Ringer Equivalence Number (REN). For the Cabinet system equipment, the label is on the lower left corner of each system cabinet. For the Chassis system equipment, the label is on the back of each system chassis. If requested, this information must be provided to the telephone company.

Small System regulatory labels include:

- FCC registration: AB6982-14234-MF-E
- FCC registration: AB6982-62937-PF-E
- FCC registration: AB6CAN-61117-MF-E
- FCC registration: AB6CAN-61116-PF-E
- FCC registration: AB6USA-18923-KF-E
- FCC registration: AB6CAN-18924-KF-E
- Service code: 9.0F, 6.0P.

Importance of Ringer Equivalence Number

The FCC regulation label includes the Ringer Equivalence Number (REN). This number represents the electrical load applied to your telephone line after you plug the PBX into the wall jack. The telephone line for your premises does not operate correctly if the total ringer load exceeds the capability of the telephone company's Central Office (CO) equipment. If there are too many ringers connected to the line, there may not be enough energy to ring your system. If the ringer load exceeds the system's capabilities, you may also have problems dialing telephone numbers.

For more information about the total REN permitted for your telephone line, contact your local telephone company. However, as a guideline, a total REN of five should allow for normal operation of your equipment.

If your Small System equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. The telephone company may ask you to disconnect the equipment from the network until the problem has been corrected, or you are sure that the equipment is not malfunctioning. If it is possible, they will notify you in advance of the pending disconnection. You will also be advised of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations or procedures that can affect the correct operation of your equipment. If the telephone company does make changes, they will give you advance notice. With advance notice, it is possible for you to make arrangements to maintain uninterrupted service.

If you experience trouble with your Small System equipment, contact your authorized distributor or service center in the United States for repair or warranty information. If you do not know how to contact your distributor, call 1-800-328-8800.

Hearing aid compatibility

All proprietary telephones used with the Small System comply with the requirements of FCC Part 68 Rule 68.316 for hearing aid compatibility.

Notice for Canadian installations

The Industry Canada — formerly called the Canadian Department of Communications — label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. Industry Canada does not guarantee that the equipment will operate to the user's satisfaction.

The Load Number (LN) assigned to each terminal device is the percentage of the total load that can be connected to a telephone loop using the device. This number prevents overloading. The termination on a loop can consist of any combination of devices, provided that the total of the Load Numbers does not exceed 100. An alphabetic suffix is also specified in the Load Number for the appropriate ringing type (A or B), if applicable. For example, LN = 20 A designates a Load Number of 20 and an "A" type ringer.

Before you install any equipment, make sure that it can connect to the facilities of the local telecommunications company. You must install the equipment using an acceptable method of connection. In some cases, a certified connector assembly (telephone extension cord) can extend the company's inside wiring associated with a single line individual service. Understand that compliance with the above conditions does not always prevent degradation of service.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telephone company cause to request the user to disconnect the equipment.

Make sure that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, connect together. This precaution is for the users' protection, and is particularly important in rural areas.



DANGER OF ELECTRIC SHOCK

The Small System frame ground of each system cabinet or chassis must be tied to a reliable building ground reference.

**DANGER OF ELECTRIC SHOCK**

Do not attempt to make electrical ground connections yourself. Contact your local electrical inspection authority or electrician to make electrical ground connections.

Notice for International installations

If there is insufficient planning or technical information present for your country of operation, contact your regional telecommunications distributor or authority for assistance.

European compliance information

The Small System meets the following European technical regulations: CTR 1, CTR 2, CTR 3, CTR 4, CTR 6, CTR 10, CTR 12, CTR 13, CTR 15, CTR 17, CTR 22, CTR 24, and the I-ETS 300 131.

Supported interfaces

Analog interfaces are approved based on national or European specifications. Digital interfaces are approved based on European specifications.

Safety specifications

The Small System meets the following European safety specifications: EN 60825, EN 60950, and EN 41003.

Electromagnetic compatibility

Table 12 shows the Electromagnetic Compatibility (EMC) specifications for the Small System.

Table 12
Small System EMC specifications for Class A devices (Part 1 of 2)

Jurisdiction	Standard	Description
United States	FCC CFR 47 Part 15	FCC Rules for Radio Frequency Devices (see Note 1)
Canada	ICES-003	Interference-Causing Equipment Standard: Digital Apparatus
Europe	EN 55022/ CISPR 22	Information technology equipment — Radio disturbance characteristics — Limits and methods of measurement (see Note 2)
	EN 55024	Information technology equipment — Immunity characteristics — Limits and methods of measurement
	EN 61000-3-2	Limits for harmonic current emissions (equipment input current ≤ 16 A per phase)
	EN 61000-3-3	Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current ≤ 16 A
Australia	CISPR 22/ AS/NZS 3548	Limits and methods of measurement of radio disturbance characteristics of information technology equipment (see Note 2)
Korea	KN22	Information technology equipment — Radio disturbance characteristics — Limits and methods of measurement
	KN24	Information technology equipment — Immunity characteristics — Limits and methods of measurement

Table 12
Small System EMC specifications for Class A devices (Part 2 of 2)

Jurisdiction	Standard	Description
Taiwan	CNS 13438	Limits and methods of measurement of radio disturbance characteristics of information technology equipment
<p>Note 1: FCC CFR 47 Part 15.21 statement: “Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.”</p>		
<p>Note 2: EN 55022/CISPR 22 statement: “WARNING This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.”</p>		

Radio and TV interference

Information for the United States

The Small System complies with Part 15 of the FCC rules in the United States. Operation is subject to the following two conditions:

- The system must not cause harmful interference.
- The system must accept any interference received, including interference that can cause undesirable operation.

If the Small System causes interference to radio or television reception, which can be determined by placing a telephone call while monitoring, the user is encouraged to try to correct the interference by the following measures:

- Reorient the receiving TV or radio antenna where this can be done safely.
- Move the TV or radio in relation to the telephone equipment.

If necessary, ask a qualified radio or television technician or supplier for additional information. Also, you can refer to the document “How to Identify and Resolve Radio-TV Interference”, prepared by the Federal Communications Commission. This document is available from:

U.S. Government Printing Office
Washington DC 20402

Information for Canada

The Small System does not exceed Class A limits for radio noise emissions from digital apparatus, as set out in the radio interference regulations of Industry Canada.

Canadian and US network connections

Table 13 contains information that must be given to the local telephone company when ordering standard network interface jacks for the Small System.

Note: Table 13 includes columns for system port identification, Facility Interface Code (FIC), Service Order Code (SOC), USOC jack identification and associated Nortel equipment part numbers.

Table 13
Network connection specifications (Part 1 of 2)

Ports MTS/WATS	Facility Interface Code	Service Order Code	REN	Network jacks	Manufacturer network interface port designation
2-Wire, LSA, L-S (2-Wire, Local Switched Access, Loop-Start)	02LS2	9.0F	1.1B	RJ21X CA21X*	NT8D14
2-Wire, LSA, G-S (2-Wire, Local Switched Access, Ground-Start)	02GS2	9.0F	1.1B	RJ21X CA21X*	NT8D14

Table 13
Network connection specifications (Part 2 of 2)

Ports MTS/WATS	Facility Interface Code	Service Order Code	REN	Network jacks	Manufacturer network interface port designation
2-Wire, LSA, R-B (2-Wire, Local Switched Access, Reverse-Battery)	02RV2-T	9.0F	0.0B	RJ21X CA21X*	NT8D14
1.544 Mbps OSI, SF	04DV9-B	6.0P	N/A	RJ48 CA48*	NTAK09
1.544 Mbps OSI, SF	04Dv9-C	6.0P	N/A	RJ48 CA48*	NTAK09
Analog PL facilities					
E&M Tie Trunk (TIE line, lossless, 2-wire type 1 E&M)	TL11M	9.0F	N/A	RJ2EX CA2EX*	NT8D15
E&M 4-Wire DRTT (TIE line, lossless, dial repeating, 2-wire type 1 E&M)	TL31M	9.0F	N/A	RJ2GX CA2GX*	NT8D15
E&M 4-Wire DRTT (TIE line, lossless, dial repeating, 2-wire type 2 E&M)	TL32M	9.0F	N/A	RJ2HX CA2HX*	NT8D15

* RJ with CA for Canada

FCC compliance: Registered equipment for Direct Inward Dial calls

Equipment registered for Direct Inward Dial (DID) calls must provide proper answer supervision. Failure to meet this requirement is a violation of part 68 of the FCC's rules. Refer to *Features and Services* (553-3001-306) for more information.

Important safety instructions

Contents

This section contains information on the following topics:

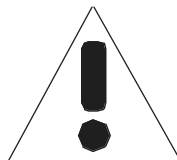
Symbols you must recognize.	73
Safety instructions when installing telephone equipment.	74
Safety instructions when using telephone equipment.	74
Fiber-optic cable handling procedures	76

IMPORTANT!

This chapter provides important safety information for installing and using your telephone equipment. Make sure this chapter is readily available for use as a reference tool.

Symbols you must recognize

Whenever you see the symbol shown below on Small System equipment or documentation, look for important operating and maintenance instructions.



Safety instructions when installing telephone equipment

The following are safety instructions for installing telephone equipment:

- 1** Never install telephone wiring during a lightning storm.
- 2** Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- 3** Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- 4** Use caution when installing or modifying telephone lines.

Safety instructions when using telephone equipment

Always follow basic safety precautions when using telephone equipment. Following these safety precautions reduces the risk of fire, electric shock, and injury to persons, including the following:

- 1** Follow all warnings and instructions marked on the product.
- 2** Unplug the telephone from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 3** Do not use the telephone near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
- 4** Do not place the telephone on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 5** Slots and openings in the cabinet and the back or bottom of the telephone are for ventilation. These ventilation slots protect the telephone from overheating. Never block or cover these openings.
- 6** Never block the openings on a telephone by placing the product on a bed, sofa, rug, or other similar surface. Never place the product near or over a radiator or heat register. Do not place the product in a built-in installation, unless there is correct ventilation.
- 7** Only operate the product from the type of power source indicated on the marking label. If you are not sure of the type of power supply, check with your distributor.

- 8** Some equipment has a three-wire grounding plug. This type of plug has a third grounding pin. As a safety feature, the plug only fits into an isolated ground outlet. If you cannot insert the plug completely into the outlet, contact your electrician to replace the outlet. Do not defeat the purpose of the grounding-type plug.

Some equipment has a polarized line plug. This type of plug has one blade wider than the other. As a safety feature, this plug fits into the power outlet one way only. If you cannot insert the plug completely into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace the plug. Do not defeat the purpose of the polarized plug.

- 9** Do not place objects on the power cord. Do not locate the product where people can walk on the plug.
- 10** Do not overload wall outlets and extension cords, as fire or electrical shock can result.
- 11** Never push objects of any kind into the product through the cabinet slots. The objects can come in contact with dangerous voltage points. Also, parts can short out, causing the risk of fire or electrical shock. Never spill liquid of any kind onto the product.
- 12** To reduce the risk of electrical shock, do not disassemble a telephone product.
- 13** Unplug the telephone from the wall outlet and refer servicing to qualified personnel under the following conditions:
- a** if the power supply cord or plug is damaged or worn
 - b** if liquid has spilled into the telephone
 - c** if the telephone has been exposed to rain or water
 - d** if the telephone has been dropped or the cabinet has been damaged
 - e** if the product exhibits a distinct change in performance
 - f** if the telephone does not function properly under normal operating conditions

- 14 Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- 15 Do not use the telephone to report a gas leak in the vicinity of the leak.

Fiber-optic cable handling procedures



WARNING

The fiber-optic interface product used in the Small System is considered safe. However, as a precaution do not look directly at the optical port or the end of fiber-optic cable. Under certain conditions (such as during cable testing or under light magnification) the cable or port may expose the eye beyond the limits of Maximum Permissible Exposure recommended in some jurisdictions. Do not remove protective caps or plugs until ready to connect the cable.

The Cabinet system and Chassis system support fiber-optic cable interconnection between system cabinets or between system chassis using the following equipment:

- NTDK84 10 m Dual-port Fiber Expansion Daughterboard (multi-mode plastic fiber-optic cable)
- NTDK22 10 m Fiber Expansion Daughterboard (plastic fiber-optic cable)
- NTDK23 10 m Fiber Receiver card (plastic fiber-optic cable)
- NTDK24 3 km Fiber Expansion Daughterboard (Multimode glass fiber-optic cable)
- NTTK02 Dual-port Ip Expansion daughterboard
- NTTK01 Single-port Ip Expansion daughterboard
- NTDK85 3 km Dual-port Fiber Expansion Daughterboard (Multimode glass fiber-optic cable)
- NTDK25 3 km Fiber Receiver card (Multimode glass fiber-optic cable)

- NTDK79 3 km Fiber Expansion Daughterboard (Single Mode glass fiber-optic cable)
- NTDK80 3 km Fiber Receiver card (Single Mode glass fiber-optic cable)

Note: Fiber-optic cable is the only type of interconnection cable supported on a fully expanded Chassis system.

The following safety precautions must be followed when handling fiber equipment:

- All persons handling Fiber Expansion Daughterboards and Receiver cards must be Electrostatic Discharge (ESD) protected. A wrist strap provided with the cabinet also must be worn when handling fiber-optic cables to prevent damage caused by static electricity.
- Always ensure the fiber-optic cable is routed out of the way of any traffic through the premises.
- Never staple or bend the fiber-optic cable at an extreme angle. Do not exceed the minimum bend radius of 1.5 in (35 mm) (90° soft bend).

Note: A conduit is not required for routing fiber-optic cable between cabinets or chassis. However, if you require a conduit for identification or other reasons, use a conduit measuring a minimum of 1 in. (25 mm) in diameter.

Bracing against earthquakes

Contents

This section contains information on the following topics:

Introduction	79
Method for earthquake bracing	79

Introduction

This chapter provides the recommended installation method for bracing the Small System cabinets or chassis against earthquakes. This method does not guarantee that the system will continue to operate during or after an earthquake.

This chapter contains the following procedure:

- Procedure 1: “Earthquake bracing method” on [page 80](#).

Method for earthquake bracing

To earthquake brace your Small System, fasten a 3/4 in. (20 mm) piece of plywood securely to the wall. Then, place the system components on the backboard. Do not attach the system components directly to the wall.



WARNING

To brace your Small System against earthquakes, you must install the cabinet or chassis on a wall in a vertical position.

Procedure 1
Earthquake bracing method

- 1 Determine the size of the backboard.
- You need a backboard that is large enough to hold all of the components that you will install on the wall. To determine the backboard size, refer to the wall plan that you developed using the guidelines in *Small System: Planning and Engineering* (553-3011-120). If you have not developed a wall plan, please develop one now.
- When you have determined the required backboard size, make sure the measurements are within the limits listed in Table 14.

Table 14
Backboard size limits

	Backboard size
Minimum	2 ft by 6 ft (600 mm by 1800 mm)
Maximum	4 ft by 8 ft (1200 mm by 2400 mm)

- 2 Determine fastener requirements.
- You need the following information to determine fastener requirements:
- What fasteners you must use.
 - How deeply you must embed the fasteners into the wall.
 - The vertical distance between fasteners.
 - The horizontal distance between fasteners.

For wood and metal stud walls, determine this spacing by the spacing

between wall studs. Wall stud spacing must be within the range listed in Table 15.

- The required wall stud sizes for wood and metal stud walls.

Table 15
Stud spacing

	Stud spacing
Minimum	16 in. (400 mm)
Maximum	24 in. (600 mm)

Table 16 provides the hardware recommendations for earthquake bracing the Small System.

Table 16
Hardware recommendations

Type of wall	Fastener	Vertical spacing between fasteners	Minimum embed depth of fasteners in wall	Suggested screw length
Wood stud	#10 Wood Screws	12 in. (300 mm) on center	1 in. (25 mm)	2 in. (50 mm)
Metal stud	#14 Sheet Metal Screws	12 in. (300 mm) on center		1.5 in. (37.5 mm)
Concrete	1/4 in. (6 mm) Hilti KB-II	24 in. (600 mm) on center	1 1/8 in. (28 mm)	2 in. (50 mm)
Masonry	1/4 in. (6 mm) Ramset Redhead Dynabolt Sleeve Anchor	24 in. (600 mm) on center		2 in. (50 mm)

Table 17 lists the maximum wall heights for different sizes of wall studs with 16-inch spacing.

Table 17
Maximum wall heights for stud sizes — 16-inch spacing

Wall studs	Maximum height of wall
Wood Studs	
2 X 4 (DF #2)	11 ft (3300 mm)
2 X 6 (DF #2)	19 ft (5700 mm)
Metal Studs	
2 1/2 X 20 Gauge	9 ft (2700 mm)
2 1/2 X 16 Gauge	10 ft (3000 mm)
2 1/2 X 14 Gauge	11 ft (3300 mm)
3 5/8 X 20 Gauge	12 ft (3600 mm)
3 5/8 X 18 Gauge	13 ft (3900 mm)
3 5/8 X 16 Gauge	14 ft (4200 mm)
3 5/8 X 14 Gauge	16 ft (4800 mm)
4 X 20 Gauge	14 ft (4200 mm)
4 X 18 Gauge	15 ft (4500 mm)
4 X 16 Gauge	16 ft (4800 mm)
4 X 14 Gauge	17 ft (5100 mm)
6 X 18 Gauge	20 ft (6000 mm)

Table 18 lists the maximum wall heights for different sizes of wall studs with a 24-inch spacing.

Table 18
Maximum wall heights for stud sizes — 24-inch spacing

Wall studs	Maximum height of wall
Wood Studs	
2 X 4 (DF #2)	10 ft (3000 mm)
2 X 6 (DF #2)	17 ft (5100 mm)
Metal Studs	
2 1/2 X 20 Gauge	8 ft (2400 mm)
2 1/2 X 18 Gauge	9 ft (2700 mm)
2 1/2 X 14 Gauge	10 ft (3000 mm)
3 5/8 X 20 Gauge	11 ft (3300 mm)
3 5/8 X 18 Gauge	12 ft (3600 mm)
3 5/8 X 16 Gauge	13 ft (3900 mm)
3 5/8 X 14 Gauge	15 ft (4500 mm)
4 X 20 Gauge	12 ft (3600 mm)
4 X 18 Gauge	13 ft (3900 mm)
4 X 16 Gauge	14 ft (4200 mm)
4 X 14 Gauge	16 ft (4800 mm)
6 X 18 Gauge	18 ft (5400 mm)

3 Determine where to place the fasteners.

Refer to Figures 20 through 22 if you need help with where to place the fasteners on the backboard. In each figure, the minimum (2 ft by 6 ft) and maximum (4 ft by 8 ft) sizes of the backboard are used as examples.

- Figure 20 on [page 85](#) provides the fastener locations for wood and metal stud walls with the minimum allowed stud spacing of 16 in. (400 mm).
- Figure 21 on [page 86](#) provides the fastener locations for wood and metal stud walls with the maximum allowed stud spacing of 24 in. (600 mm).
- Figure 22 on [page 87](#) provides the fastener locations for concrete and masonry walls.

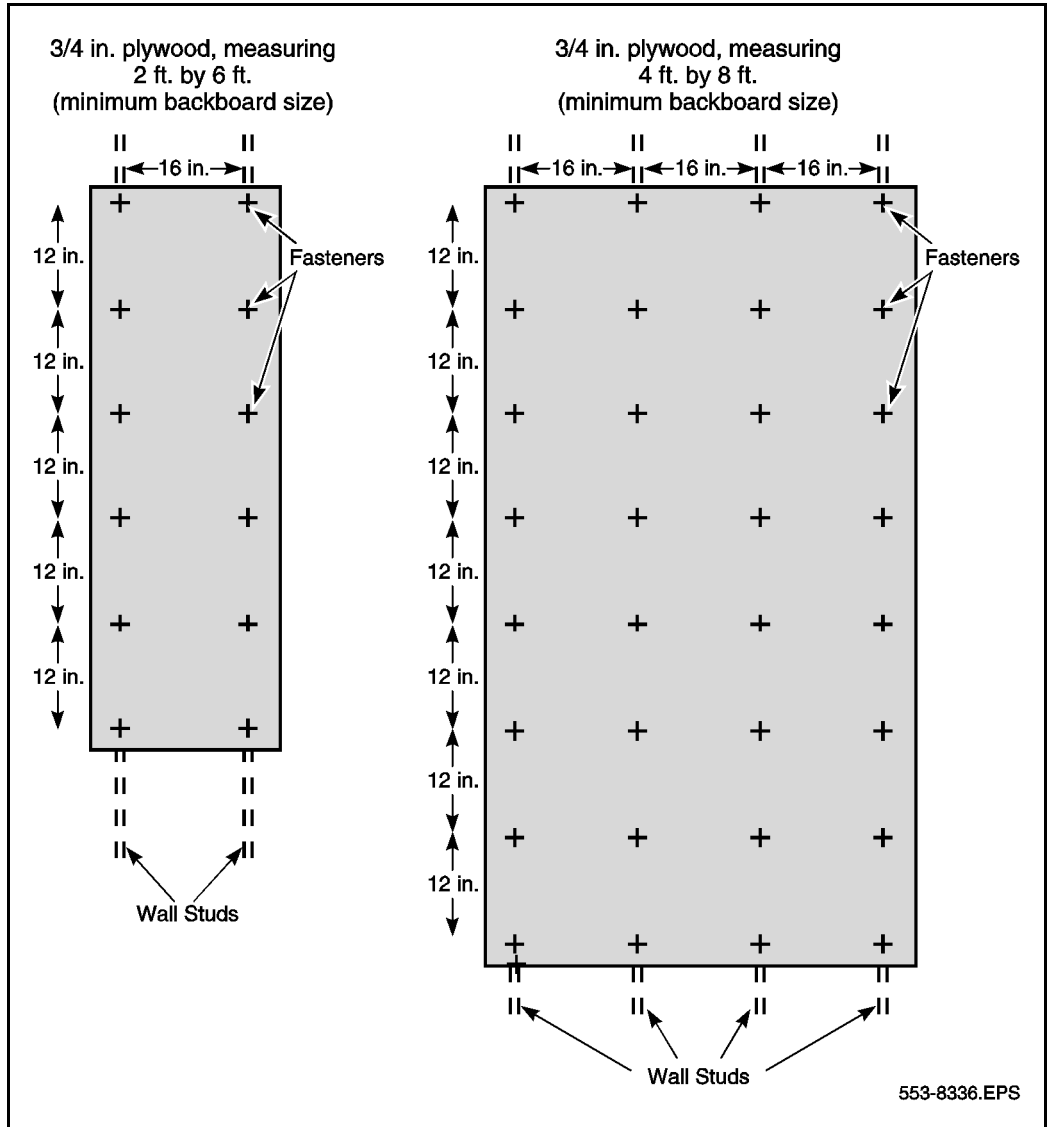
Figure 20**Plywood fastener locations for wood and metal stud walls — 16 inch spacing**

Figure 21
Plywood fastener locations for wood and metal stud walls — 24 inch spacing


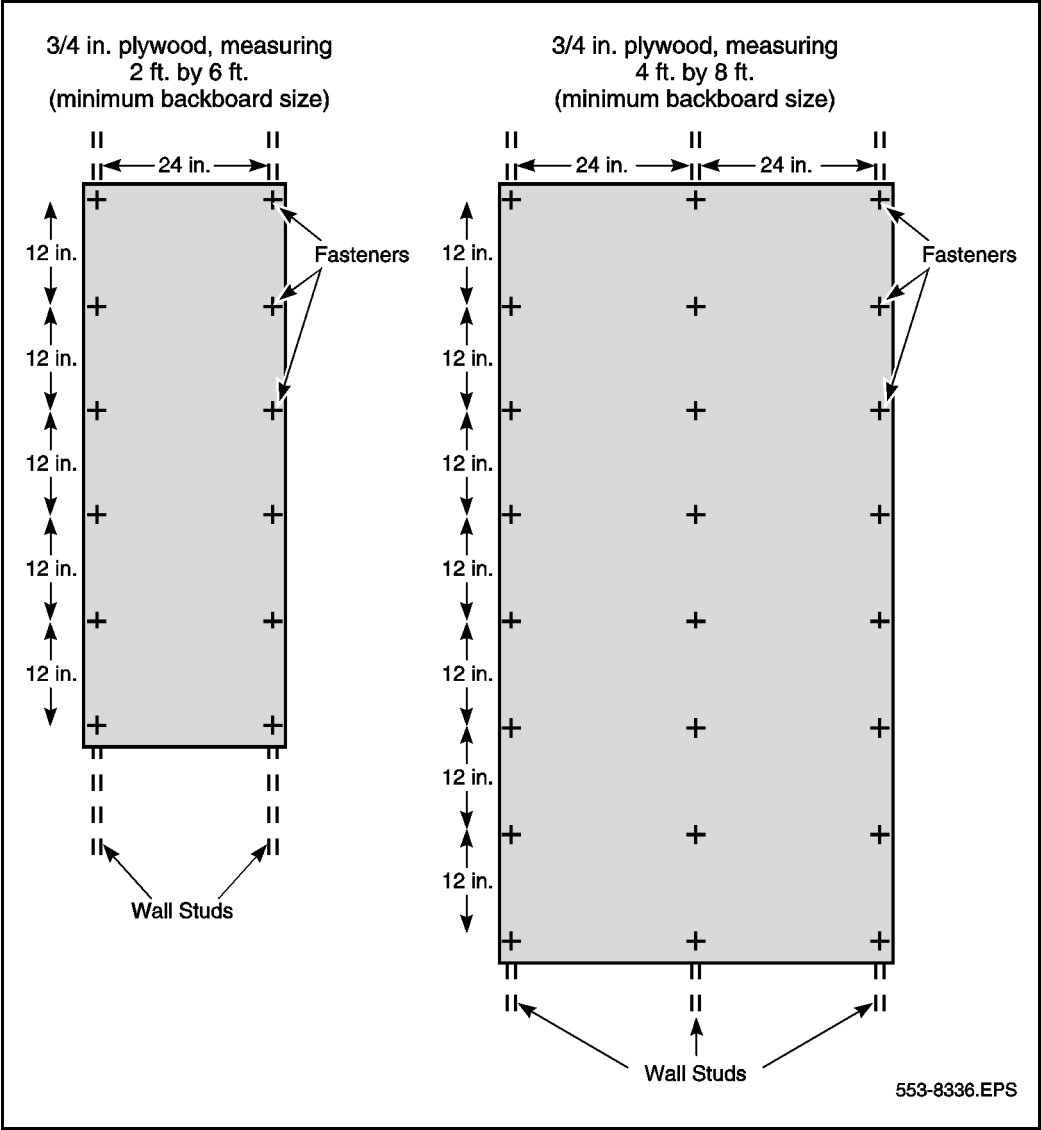


Figure 22
Plywood fastener locations for concrete and masonry walls

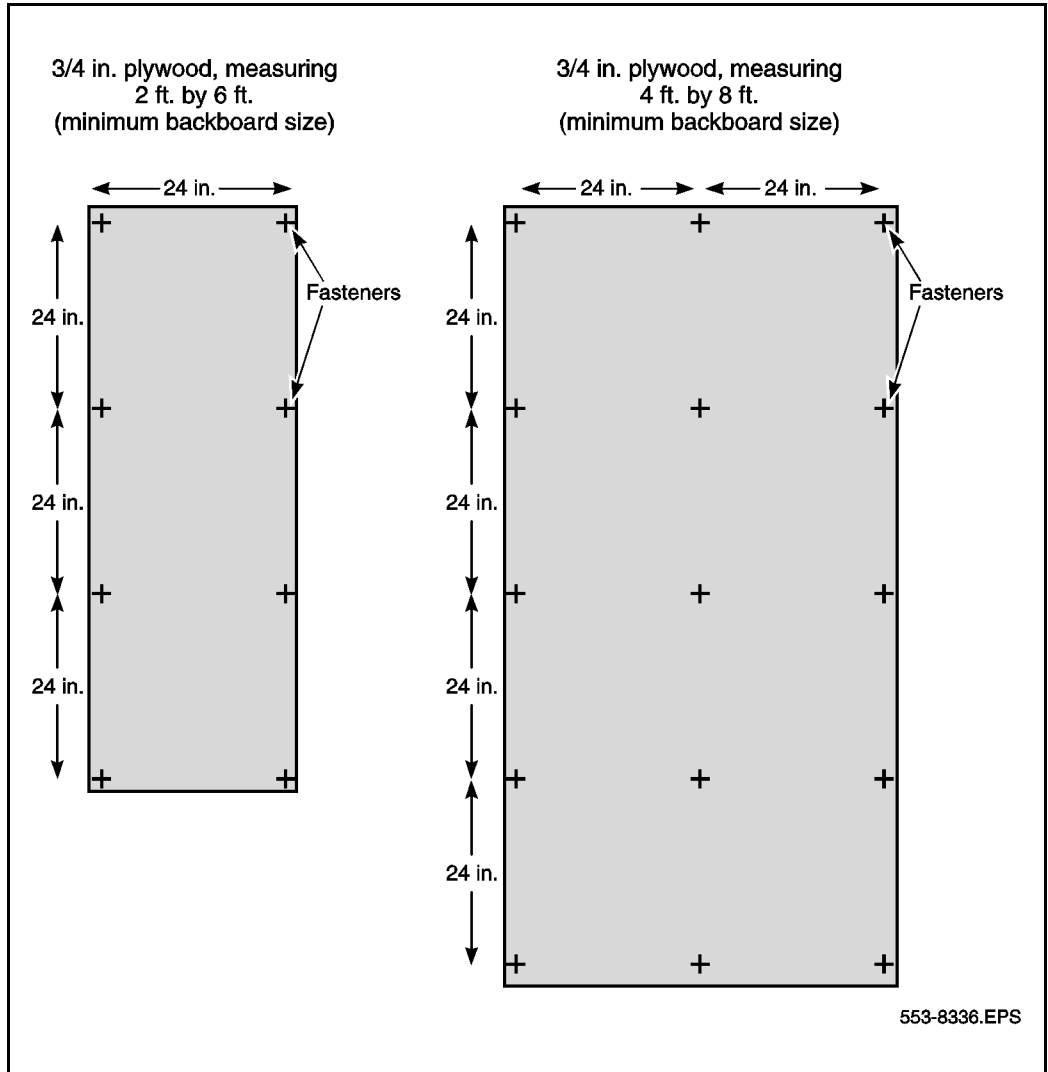

4 Continue with Small System installation.

Now that you have securely fastened the backboard to the wall, you can continue with the Small System installation.

End of Procedure

Preparing for installation

Contents

This section contains information on the following topics:

Introduction	89
Tools checklist	89
Readiness checklist	90

Introduction

Before proceeding with the installation, make sure you have all the tools necessary to install the Small System. Next, make sure you have checked for all site requirements, received all equipment, and have prepared an equipment layout plan and card slot assignment plan.

Tools checklist

To install the system correctly, make sure that the following tools are available before you begin to assemble the components:

- ☐ different types of screwdrivers
- ☐ a tape measure
- ☐ a level
- ☐ pliers such as side cutters and longnose pliers
- ☐ an ECOS 1023 POW-R-MATE or similar type of test meter

- ☐ appropriate cable terminating tools
- ☐ a drill for making lead holes for screws

Readiness checklist

Have you:

- ☐ read all *safety instructions* in “Important safety instructions” on [page 73](#)?
- ☐ made sure that you received all the equipment that you ordered?
- ☐ made sure your area meets all environmental requirements?
- ☐ checked for all power requirements?
- ☐ checked for correct grounding facilities?
- ☐ developed an equipment layout plan for the system?
- ☐ completed the card slot assignment plan?
- ☐ assembled all the tools required to continue with the installation?

If you have completed all of the above items, you are ready to proceed with the installation of the system.

Installing the Cabinet system

Contents

This section contains information on the following topics:

Introduction	91
Installing a new Cabinet system	92
Expanding an existing system	98
Reconfiguring a system	99
Expanding an existing system	98
Expansion cabinet as a power shelf for auxiliary processors	104

Introduction

This chapter is used when installing a new system, adding expansion cabinets to an existing system, or reconfiguring existing cabinets to accommodate an additional expansion cabinet. It also describes the procedure for adding a cabinet to be used as a stand-alone power shelf for auxiliary processor units.

Make sure you have read and completed all instructions contained in the prior chapters of this guide and in the chapters on system and site planning in *Small System: Planning and Engineering* (553-3011-120).



CAUTION WITH ESDS DEVICES

Wear the antistatic wrist strap provided in the bottom of the cabinet before handling the power supplies or other circuit cards. Static electricity can damage the components of power supplies and circuit cards.

Installing a new Cabinet system

Follow the steps in Procedure 2 to install a new Succession 1000M Cabinet or Meridian 1 Option 11C Cabinet system. Complete each step as described before proceeding with the next step. References may be made to other chapters in this guide in order to provide additional information.

Procedure 2

New system installation

Note: For a Succession 1000M Cabinet system, install the Succession Signaling Server. Refer to *Signaling Server: Installation and Configuration* (553-3001-212) for instructions.

- 1** Install the main cabinet.
 - a.** Mount the cabinets as described in “Mounting the cabinets” on [page 115](#).
 - b.** Remove the drip tray from each cabinet to expose the cable routing grooves at the bottom rear of the cabinet.
 - c.** Install the cabinet ground wire for the main cabinet as described in “Installing the system ground” on [page 149](#).
 - d.** Install the power supply as described in “Installing the power supplies for the Cabinet system” on [page 159](#).
 - e.** Install the reserve power supply if required.
Refer to “Installing and connecting reserve power supplies for the Cabinet system” on [page 173](#).

- f. Install the NTDK20 Small System Controller (SSC) card and daughterboards. Refer to “Installing Small System Controller and Fiber Receiver cards” on [page 187](#).
- g. Install the remaining circuit cards. Refer to “Installing optional circuit cards” on [page 217](#).
- h. Install the cross-connect terminal and cables. Refer to “Installing and connecting cross-connect terminals” on [page 235](#).
- i. Install the power fail transfer units (PFTUs) if provided. Refer to “Installing Power Failure Transfer Units” on [page 257](#).
- j. Connect the SDI and Ethernet interfaces. Refer to “Installing and connecting SDI and Ethernet ports” on [page 265](#).

2 Install expansion cabinets.

- a. Mount the cabinets as described in “Mounting the cabinets” on [page 115](#).
- b. Remove the drip tray from each cabinet to expose the cable routing grooves at the bottom rear of the cabinet.
- c. Install the cabinet ground wire for the cabinets as described in “Installing the system ground” on [page 149](#).
- d. Install the power supply as described in “Installing the power supplies for the Cabinet system” on [page 159](#).
- e. Install the reserve power supply if required. Refer to “Installing and connecting reserve power supplies for the Cabinet system” on [page 173](#).
- f. Install the expansion cabinet SSC or Fiber Receiver card, daughterboards, and cables. Refer to “Installing Small System Controller and Fiber Receiver cards” on [page 187](#).
- g. Install the remaining circuit cards. Refer to “Installing optional circuit cards” on [page 217](#).
- h. Install the cross-connect terminal and cables. Refer to “Installing and connecting cross-connect terminals” on [page 235](#).
- i. Install the power fail transfer units (PFTUs) if provided. Refer to “Installing Power Failure Transfer Units” on [page 257](#).
- j. Connect the SDI and Ethernet interfaces. Refer to “Installing and connecting SDI and Ethernet ports” on [page 265](#).

- 3 For fiber connectivity, go to step 4.

For IP connectivity, do one of the following:

- For point-to-point 100BaseF connectivity, go to step 5.
- For point-to-point 100BaseT connectivity, go to step 6.
- For 100BaseT or 100BaseF connectivity over a distributed data campus network, go to step 7.

- 4 For fiber connectivity, connect the main cabinet to the fiber expansion cabinets. Refer to “Installation of Fiber Expansion Daughterboards and cables” on [page 202](#) and “Fiber Receiver card installation on expansion cabinets and chassis” on [page 213](#).

- 5 For point-to-point 100BaseF connectivity, connect the main cabinet to the IP expansion cabinets using the A0346816 5-meter fiber cable with fiber couplers.

- Use the supplied A0346816 ST fiber couplers to connect the ST ends on the A0817052 fiber cables coming from the main and IP expansion cabinets. Use one coupler to connect Tx to Rx and another coupler to connect Rx to Tx. Use a push and twist motion to secure the couplers to the cable ends.
- Connect the fiber cable from the main cabinet to the fiber cable from the IP expansion cabinet.

Note: The cable end labelled “A” is for Transmit (Tx) and the cable end labelled “B” is for Receive (Rx). Refer to Figure 23 on [page 95](#).

- 6 For point-to-point 100BaseT connectivity, connect the main cabinet to the IP expansion cabinet using the NTTK34 cross-over cable.

- Use the NTTK34 2-meter UTP CAT 5 RJ45 cross-over cable and NTDK8305 2-meter STP CAT 5 extension cable to connect the main and IP expansion cabinets using the 100BaseT IP daughterboards.
- Connect the NTDK8305 extension cable ends from the main and IP expansion cabinets to the cross-over cable.

- 7 To connect the main and IP expansion cabinets over a distributed data campus network, do the following:

- Use the A0817052 5-meter fiber cable with MT-RJ to ST connectors to connect the main and IP expansion cabinets using the 100BaseF

IP daughterboards. The two A0817052 fiber cables are usually connected to the customer's LAN.

- Use the NTDK8305 2-meter STP CAT 5 extension cable to connect the main and IP expansion cabinets using 100BaseT IP daughterboards. A customer-supplied straight-through cable is used in place of the NTTK34 2-meter cross-over cable.

Note: You will need to work with your local data network administrator for IP provisioning.

Figure 23
Cable ends and fiber coupler for 100BaseF connectivity


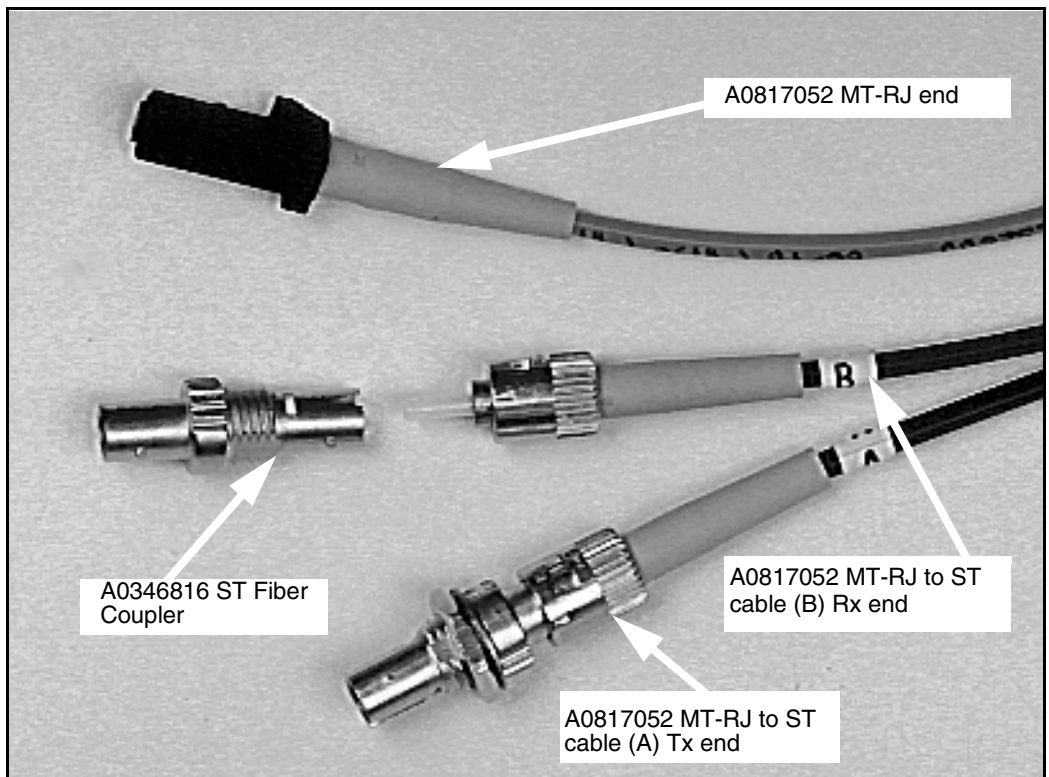


Figure 24
Cable ends for 100BaseT IP connectivity

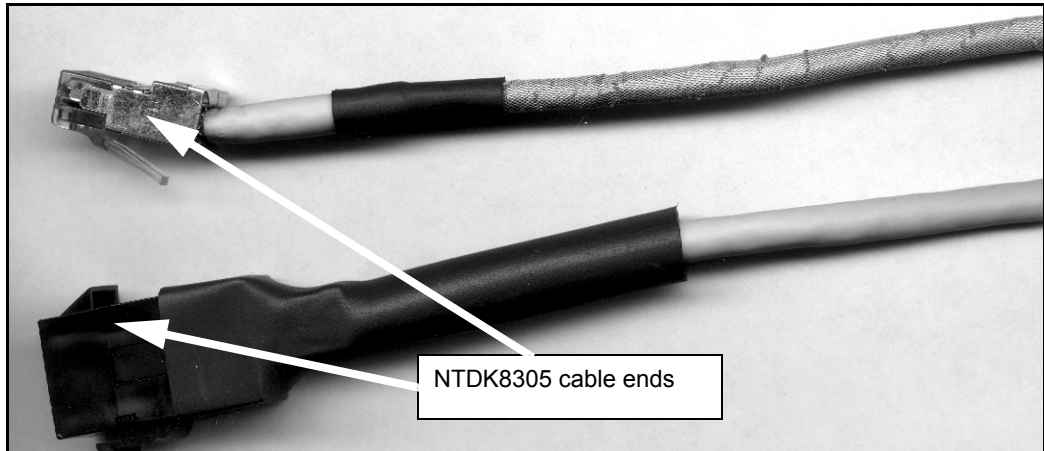

8 Main power hook-up.

- a.** Connect the external power supply, if not already done.

If this system uses a commercial ac power supply, the power outlet should be tested to make sure that the correct voltage is present before plugging the power cord in the outlet.

If the system uses an external commercial ac power supply, plug the ac power cord from each cabinet into the commercial ac power supply outlet.

If the system uses a customer-provided dc power supply, plug the dc power cord from each cabinet into the dc power source.

- b.** For ac-powered systems, set the circuit breaker on the NTDK70 or NTDK78 ac/dc power supply in each cabinet to ON. For dc-powered systems, set the circuit breaker on the NTAK28 circuit breaker assembly for each cabinet to ON. Set the circuit breaker on the NTDK72 dc power supply in each cabinet to ON.


- 9 Set the circuit breaker on the battery backup unit to ON (if the system has reserve power).

Note: A system equipped with the NTDK70 or NTDK78 ac/dc power supply and a battery backup unit will continue to operate on dc reserve power if the ac supply fails. However, if the dc reserve power is interrupted, the NTDK70 or NTDK78 cannot be powered up again until ac power is restored.

- 10 Install the System Software on main cabinet. Refer to “Installing software in a new system” on [page 304](#).
- 11 Install the System Software on expansion cabinet. See “Software installation on the IP expansion cabinet or chassis using the preprogrammed software daughterboard” on [page 318](#).
- 12 Check the Link LED on the daughterboard. From left to right, the LEDs are:
 - Receive LED
 - Transmit LED
 - Link LED (should be green)

If the Link LED is not lit and green, the hardware connection is not enabled. Check the cables and connections. Make sure the cables are not damaged. Refer to *Small System: Maintenance* (553-3011-500) for further information.

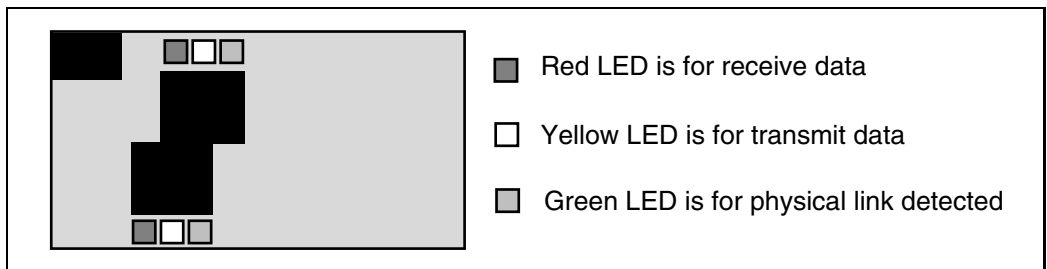Figure 25
Daughterboard LEDs



- 13 Configure the IP daughterboards with IP addresses, cabinet numbers and MAC addresses for both main and IP expansion cabinets. Use LD 117 found in *Software Input/Output: Maintenance* (553-3001-511).

- 14 Install (if not previously installed) and activate the telephones. Refer to “Connecting the telephones” on [page 333](#).
- 15 Connect the trunks to the system as described in “Connecting the trunks” on [page 359](#).
- 16 Perform a system backup, using LD 43.
- 17 Install any remaining equipment, such as external alarms. Refer to “Connecting an external alarm” on [page 393](#) and the optional Meridian Mail feature, if provided.
- 18 Replace all drip trays and cabinet covers.

End of Procedure

Expanding an existing system

Follow the steps in Procedure 3 to add expansion cabinets to an existing system. Complete each step as described before proceeding with the next step. References may be made to other chapters in this guide in order to provide additional information.

Procedure 3

Adding expansion cabinets to an existing system

- 1 Install an expansion daughterboard and cable on the SSC card in the main cabinet as described in “Installing Small System Controller and Fiber Receiver cards” on [page 187](#).
- 2 Install expansion cabinets. Refer to step 2 on [page 93](#).
- 3 For fiber connectivity, refer to Procedure 2, step 4 on [page 94](#).
- 4 For IP connectivity, refer to Procedure 2, step 5 through step 7, on [page 94](#).
- 5 Power up the main and expansion cabinets. Refer to Procedure 2, step 8 on [page 96](#).
- 6 Install the System Software on the IP expansion cabinet (not required for fiber expansion cabinets). Refer to “Installing software” on [page 299](#).
- 7 Install (if not previously installed) and activate the telephones. Refer to “Connecting the telephones” on [page 333](#).

- 8 Connect the trunks to the system as described in “Connecting the trunks” on [page 359](#).
- 9 Perform a system backup in LD 43.
- 10 Install any remaining equipment, such as external alarms. Refer to “Connecting an external alarm” on [page 393](#).
- 11 Replace all drip trays and cabinet covers.

End of Procedure

Reconfiguring a system

Implement Procedure 4 if you need to reconfigure your existing system. Complete each step as described before proceeding with the next step.

Procedure 4

Reconfiguring existing cabinets to accommodate an additional expansion cabinet

Under certain circumstances it is necessary to rearrange cabinet connections and/or configurations. Two scenarios are described.

Scenario 1: Adding a third expansion cabinet

If the existing main cabinet is equipped with two single daughterboards, and the two expansion cabinets are located within 10 m (33 ft), adding another expansion cabinet within 3 km requires the following steps:

- 1 Replace the top daughterboard with a dual-port expansion daughterboard.
- 2 If the third cabinet is within 10 m, add the cabinet to port 3. Configure the cards required for expansion cabinet 3.
- 3 If the third cabinet is further than 10 m, connect the two short-haul cabinets to the dual-port daughterboards in ports 1 and 3.
- 4 Replace the lower 10 m expansion daughterboard in the main cabinet with a 3 km expansion daughterboard.
- 5 Add the third (long-haul) cabinet to the single-port 3 km expansion daughterboard in port 2.
- 6 Reassign in software all services provided on cards 21 to 30, to cards 31 to 40.

Scenario 2: Adding a fourth expansion cabinet

The existing main cabinet is equipped with two 10 m dual-port expansion daughterboards connecting to three expansion cabinets. A remote expansion cabinet is to be added requiring a 3 km expansion daughterboard. Although one of the existing daughterboards has a port available, it can only be connected to a cabinet within 10 m (33 ft). With this scenario, do the following:

- 1 Select the dual-port expansion daughterboard that is being used for only one cabinet (a spare port is available on the daughterboard).
- 2 Replace it with a 3 km dual-port expansion daughterboard.
- 3 Replace the receiver card in the existing companion expansion cabinet with a 3 km receiver card.
- 4 With glass optic cable, connect the existing expansion cabinet to the same port as previously assigned on the expansion daughterboard.
- 5 Add the cabinet to the remaining port as described in Procedure 3 on [page 98](#).

Cabinet and Chassis system mix-and-match configuration

In a mix-and-match scenario, a chassis can be connected to the fiber or IP expansion cabinet(s) of a Cabinet system. In addition, the main cabinet of a Cabinet system can be connected to a Chassis system.

Note 1: The SSC card NTDK20EA or later is required for the main cabinet or chassis of a Small System. The SSC card vintage NTDK20CA or later is required for IP expansion cabinets.

Note 2: The cabinets of the Cabinet system must support the faceplate cabling that is used on all IP Expansion Daughterboards. If the current cabinets do not support cable routing through the faceplate, they must be upgraded to the NTDK18AA cabinet kit.

Note 3: The grounding clips are situated differently on cabinets and chassis. The grounding clip for the cabinet is mounted on the front of the stiffener rail. Refer to Figure 26 on [page 101](#). The grounding clip for the chassis is mounted on the fan baffle on the lower right-hand side of the chassis. Refer to Figure 27 on [page 102](#).

Figure 26
EMC grounding clip for the cabinet

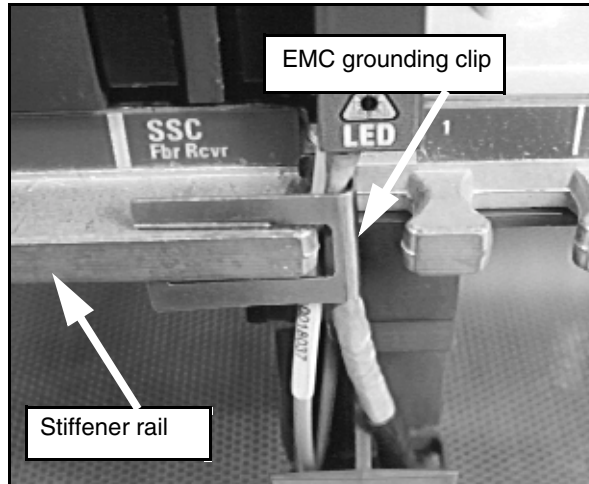


Figure 27
EMC grounding clip for the chassis


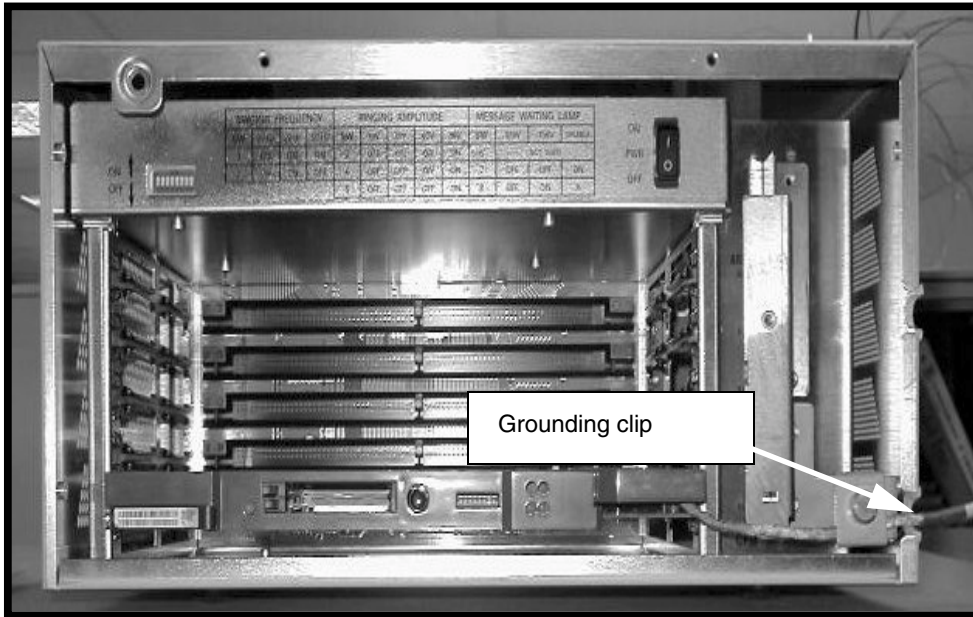


Figure 28 on [page 103](#) shows an example “mix-and-match” configuration in which the main cabinet of a Cabinet system uses both fiber and IP cabling to connect two expansion cabinets and one Chassis system (chassis with chassis expander).

Note: Figure 28 on [page 103](#) is only an example of one of many possible configurations using Cabinet systems and Chassis systems.

In this example, the SSC card in the main cabinet of a Cabinet system has one dual-port Fiber Expansion Daughterboard installed in the top connector and one single-port IP Daughterboard installed in the bottom connector. The dual-port Fiber Expansion Daughterboard in the top connector provides card slots 11–20 and 31–40. The single-port IP Daughterboard in the bottom connector provides card slots 21–30.

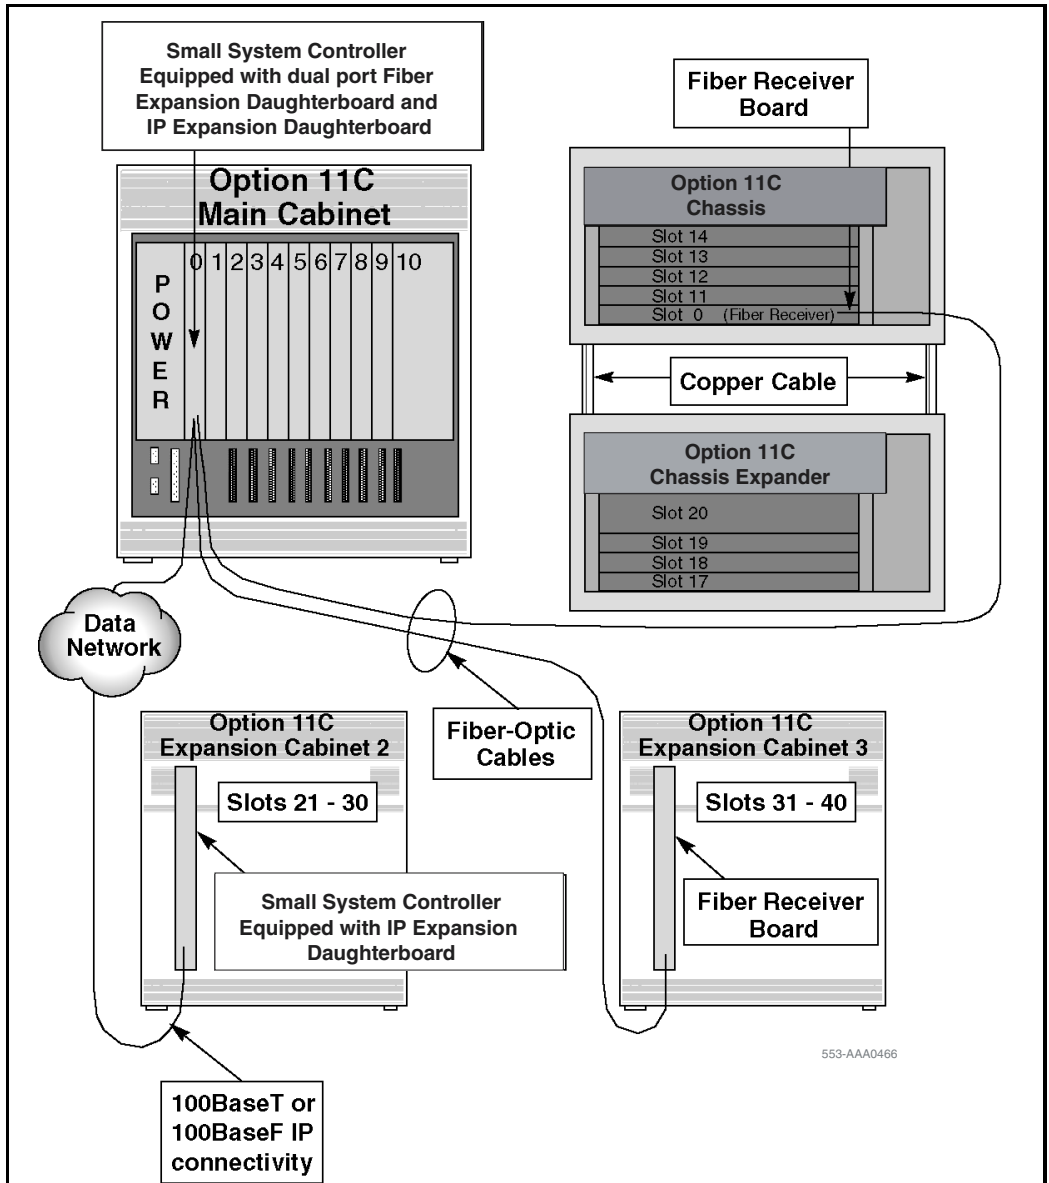Figure 28
Cabinet and Chassis system mix-and-match expansion configuration



Expansion cabinet as a power shelf for auxiliary processors

Follow Procedure 5 to add an expansion cabinet used as a power shelf for auxiliary processor units (such as Max IPE).

Procedure 5

Adding an expansion cabinet as a stand-alone power shelf

- 1 Locate the carton containing the expansion cabinet. Install it as described in “Mounting the cabinets” on [page 115](#).
 - Make sure that it is mounted according to the plan.
 - Make sure that it is securely mounted.
 - Make sure that the pedestal is properly installed if the cabinet is to be mounted on the floor.
- 2 Make sure that the ac power cord is disconnected from the power outlet.
- 3 Install a #6 AWG (# 40 Metric Wire Gauge) ground wire from the cabinet to a ground source (the ground bus in the ac power service panel).

Note: Do not connect the ground wire to the ground connection in an existing cabinet. The ground wire must be connected to the ground source.



DANGER OF ELECTRIC SHOCK

The connection in the ac power service panel should be performed by a qualified technician or electrician.

Connect the ground wire to the ground lug located in the bottom of the cabinet next to the cable connectors. See Figure 29 on [page 106](#).

Route the ground wire through the third groove from the left in the bottom of the cabinet.

Connect it to the Single Point Ground (SPG) and place a DO NOT DISCONNECT tag on it.

Note: Refer to the grounding requirements in the chapters on system and site requirements in *Small System: Planning and Engineering* (553-3011-120).

- 4 Put on the wrist strap provided in the bottom of the cabinet and install the power supply with the circuit breaker at the OFF position. If this is an ac powered system, plug in the power supply cord in the commercial power supply receptacle and into the power supply. Refer to “Installing the power supplies for the Cabinet system” on [page 159](#).

**CAUTION WITH ESDS DEVICES**

A grounded wrist strap, provided with the cabinet, must be worn when handling circuit cards to prevent damage caused by static electricity.

Make sure that the NTDK70 or NTDK78 ac/dc or NTDK72 dc power supplies are installed and that their circuit breakers are set to OFF.


- 5 Refer to the ACD Max documentation to complete the installation of the Max units and related cables.

Connectors for the cables in the expansion cabinet are located on the panel below the cabinet's shelf. Refer to “Installing and connecting cross-connect terminals” on [page 235](#) for information about connection cables to the cabinet.

Note: The slots in the expansion cabinet are labeled 11 through 20. The corresponding connectors for cables are labeled J11 through J20 or J1 through J10, depending on the type of cabinet.

End of Procedure

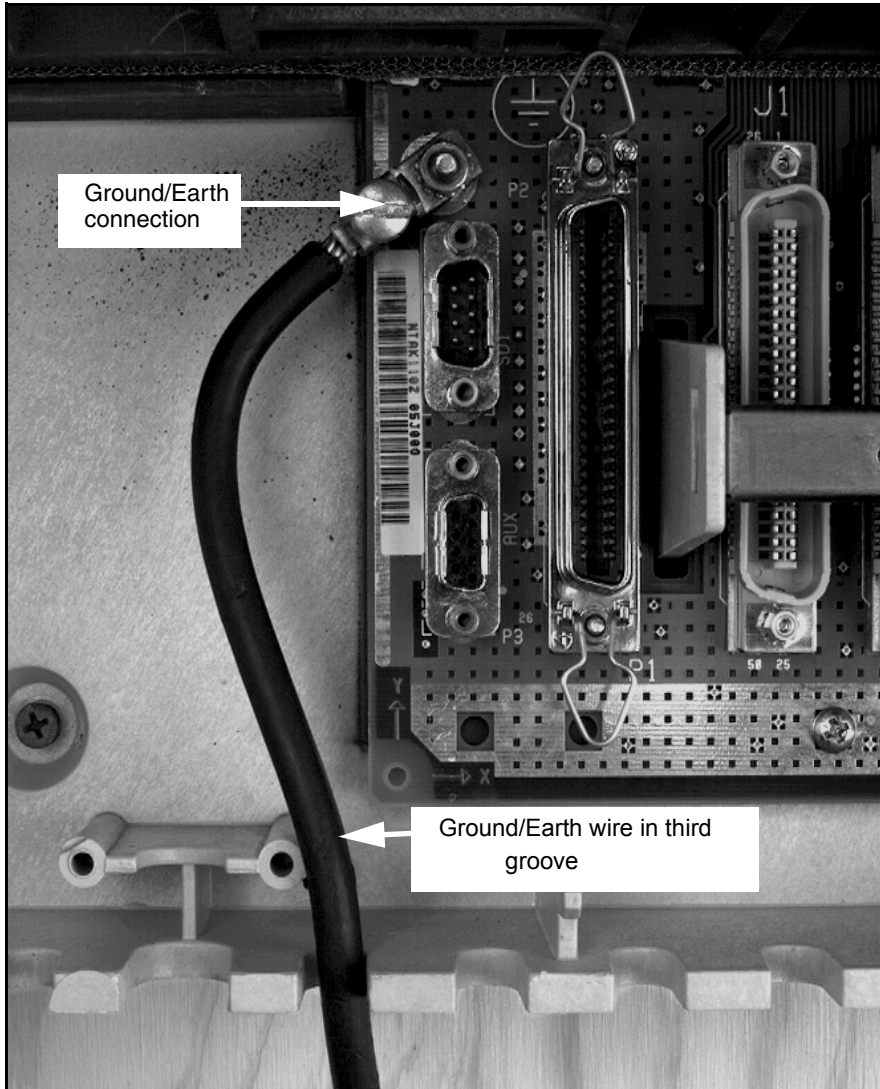Figure 29
Ground/Earth connection



Installing the Chassis system

Contents

This section contains information on the following topics:

[Summary of installation procedures](#) 107

Summary of installation procedures

The following list provides a high-level summary of installation procedures for the Succession 1000M Chassis or Meridian 1 Option 11C Chassis. Where applicable, the summary contains references to chapters that describe the procedures in more detail.

Note: For a Succession 1000M Chassis system, install the Succession Signaling Server. Refer to *Signaling Server: Installation and Configuration* (553-3001-212) for instructions.

- 1 Read the safety instructions in “Important safety instructions” on [page 73](#).
- 2 Make sure that you have read and completed the instructions contained in the planning chapters of *Small System: Planning and Engineering* (553-3011-120).
- 3 Make sure that system and site requirements have been met. See *Small System: Planning and Engineering* (553-3011-120).
- 4 Make sure that you have created the equipment layout plan and card slot assignment plan. See *Small System: Planning and Engineering* (553-3011-120).

- 5 If your Small System requires earthquake bracing, refer to “Bracing against earthquakes” on [page 79](#).

For your system to be braced against earthquakes, you must install the chassis on a wall in a vertical position.

- 6 Locate the box containing the Small System equipment.
- 7 Install the chassis. See “Mounting the chassis” on [page 125](#). Refer to one of the following procedures, depending on the position in which you will install the chassis:
- Procedure 8: “Installing the chassis in a 19-inch rack/equipment cabinet” on [page 129](#)
 - Procedure 9: “Installing the chassis on a wall in a vertical position” on [page 135](#)
 - Procedure 10: “Installing the chassis on a wall in a horizontal position” on [page 141](#)

- 8 Install the chassis expander. See “Connecting the chassis expander to the chassis” on [page 145](#). You can skip this step if your system only has one chassis.

Install the chassis expander the same way as the chassis. Refer to Procedure 11: “Adding a chassis expander” on [page 146](#). This procedure describes how to connect the chassis to the chassis expander by using the two NTDK95 CE-MUX/DS-30X cables.

- 9 Install the chassis ground wire for the chassis and chassis expander at this site. See “Installing the system ground” on [page 149](#).


Refer to one of the following procedures:

- Procedure 12: “Grounding the cabinets or chassis” on [page 151](#)
- Procedure 13: “Earthing the cabinets or chassis (UK)” on [page 156](#)

To ground multiple pieces of equipment in a rack/cabinet when one or more pieces of equipment does not have a grounding lug, see “Multiple pieces of equipment in an equipment rack/cabinet” on [page 156](#).

- 10 If you require a UPS, install the UPS according to the manufacturer's instructions.
- 11 If you have not already done so, remove the faceplate of the chassis.
 - a Loosen the quick-release screws on the faceplate of the chassis. See Figure 30 on [page 109](#).
 - b Lift the faceplate up.
 - c Remove the faceplate.

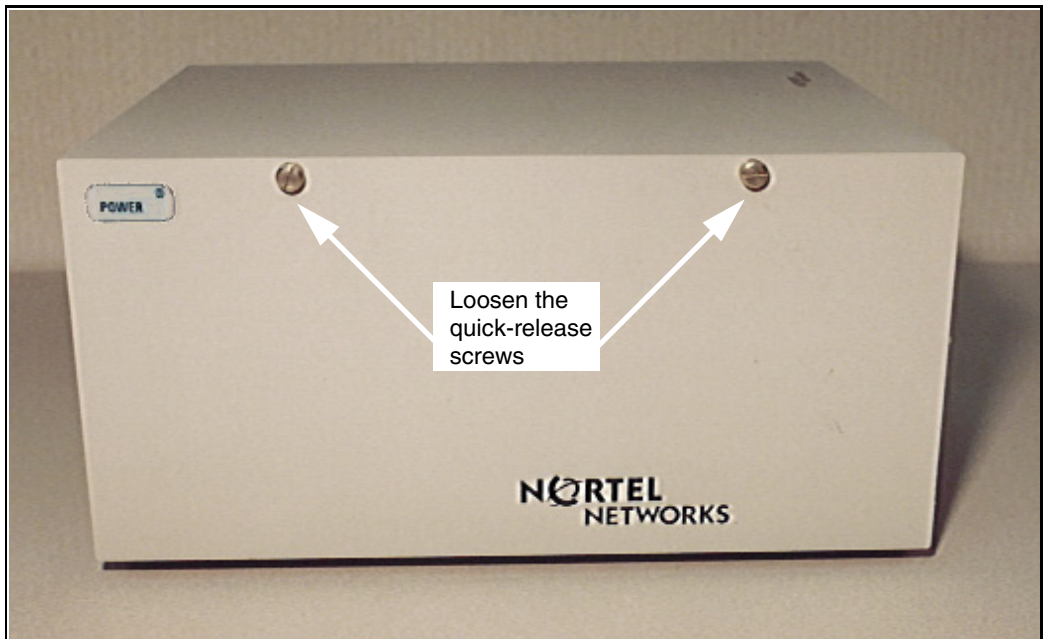Figure 30
Faceplate on the Chassis system




- 12** Install the Small System Controller (SSC) card and the 48-port Digital Line Card.
 - a** Install the security device on the NTDK20EA SSC card. Install the SSC card in CPU slot 0 of the chassis. See “Main cabinet and chassis NTDK20 SSC card installation” on [page 191](#).
 - b** Install the NTDK16 48-port Digital Line Card in Slot 4 of the chassis. See Procedure 34 “Installing the NTDK16 48-port Digital Line Card” on [page 232](#).
The NTDK16 Digital Line Card is not required for the Small System to operate.
- 13** Install the optional circuit cards that you wish to have in your Small System. Refer to “Installing optional circuit cards” on [page 217](#) and *ISDN Basic Rate Interface: Maintenance* (553-3001-518). Also, refer to your card slot assignment plan.
- 14** Install the cross-connect terminal. See “Installing and connecting cross-connect terminals” on [page 235](#).
Refer to the following procedures:
 - Procedure 36: “Installing the BIX cross-connect terminal” on [page 238](#)
 - Procedure 37: “Installing the Reichle Masari cross-connect terminal (Germany)” on [page 241](#)
 - Procedure 38: “Installing the Krone Test Jack Frame (UK)” on [page 246](#)
- 15** Install the cables from the chassis to the cross-connect terminal. See “Installing and connecting cross-connect terminals” on [page 235](#). Refer to Procedure 40: “Connecting the cables for the Chassis system” on [page 251](#).
- 16** Install the PFTUs, if provided. See “Installing Power Failure Transfer Units” on [page 257](#). Refer to Procedure 41: “Installing the PFTU” on [page 258](#).
- 17** Connect the SDI port cable at the back of the chassis. See “Installing and connecting SDI and Ethernet ports” on [page 265](#). Refer to Procedure 42: “Connecting SDI ports on the SSC card” on [page 271](#).

- 18** If Ethernet is required, insert an industry-standard Medium Access Unit (MAU) directly into the Ethernet connector at the back of the chassis. The Chassis system does not include the MAU. Insert the Ethernet cable into this MAU. See “Installing and connecting SDI and Ethernet ports” on [page 265](#). Refer to Procedure 46: “Connecting the Ethernet cable to the Chassis system” on [page 292](#).
- 19** Make sure that the DIP switch settings on the power supply are set to the correct values for ringing voltage, ringing frequency, and message waiting voltage. See Table 5 on [page 51](#) through Table 8 on [page 52](#) for the DIP switch settings.
- 20** Connect the system to an ac power source. Make sure that the source matches the label on the back of the chassis. Turn the power switch to “ON”.
- 21** Start and test system. See “Software Installation Program” on [page 300](#). Refer to the following procedures:

 - Procedure 47: “Startup procedure for a new system installation, using the Small System Controller card” on [page 296](#)
 - Procedure 48: “Startup procedure for a previously installed system” on [page 297](#)
- 22** Install the system software. See “Installing software in a new system” on [page 304](#). Refer to Procedure 49: “Installing software” on [page 305](#).
- 23** Connect the M2616 or the M2008 administration and maintenance telephone with display. See “Connecting the telephones” on [page 333](#).
- 24** Install the telephones, if you have not already done so, and activate them. See “Connecting the telephones” on [page 333](#).
- 25** Connect the trunks to the system. See “Connecting the trunks” on [page 359](#).
- 26** Perform a system backup using LD 43.
- 27** Install any remaining equipment. See “Connecting an external alarm” on [page 393](#).

- 28 Replace the faceplate.
- a Fit the brackets at the bottom of the faceplate into the raised edge at the bottom of the chassis. Move slightly to the left. See Figure 31.

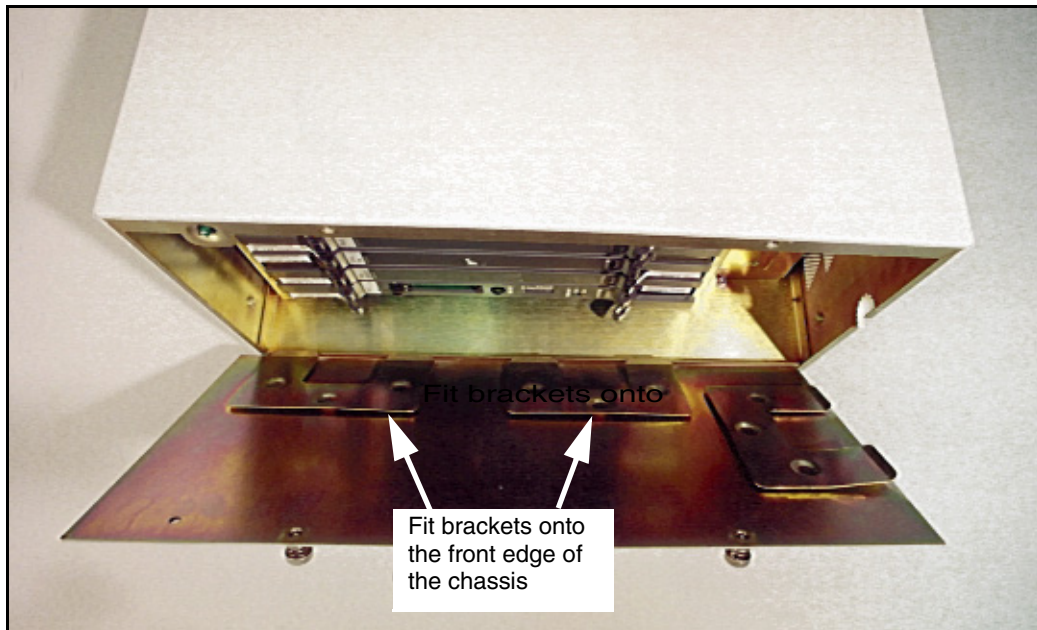Figure 31
Aligning the faceplate with the chassis



- b** Move the faceplate down so that it fits over the raised edge at the bottom of the chassis. See Figure 32.


Figure 32
Fitting the front faceplate on the chassis



- c Slide the faceplate to the right, and tighten the quick-release screws into the two holes at the top of the chassis. See Figure 33.

Figure 33

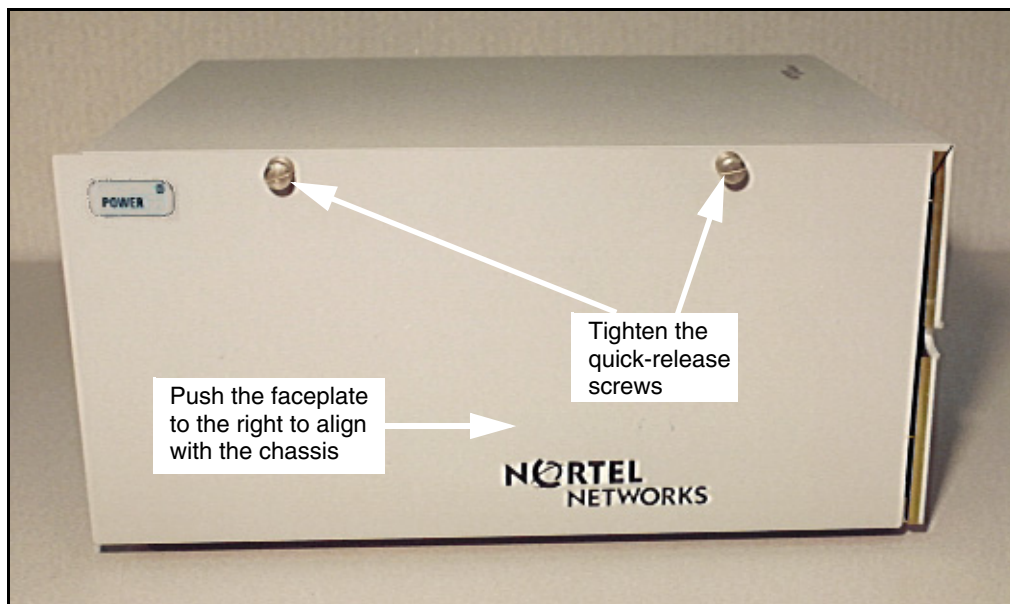Pushing the faceplate down into place to align with chassis



Mounting the cabinets

Contents

This section contains information on the following topics:

Introduction	115
Earthquake bracing	116
Wall mounting	116
Items required	116
Floor mounting	121
Items required	121

Introduction

This chapter explains two methods of installing cabinets. Procedure 6 on [page 117](#) describes how to mount the cabinet on a wall. Procedure 7 on [page 121](#) describes how to mount the cabinet on the floor using a pedestal.

Note: For a Succession 1000M Cabinet system, the Succession Signaling Server must be mounted in an external 19-inch equipment rack. Refer to *Signaling Server: Installation and Configuration* (553-3001-212) for information on installing the Succession Signaling Server hardware.

Earthquake bracing

If the Small System cabinets require earthquake bracing, refer to the earthquake bracing requirements in the chapters on system and site requirements in *Small System: Planning and Engineering* (553-3011-120) before continuing.

Wall mounting

Items required

To mount cabinets on a wall you need:

- the equipment layout plan as developed in the chapters on system and site requirements in *Small System: Planning and Engineering* (553-3011-120)
- the mounting bracket supplied with each cabinet
- seven 1 in. #12 screws provided or other appropriate fasteners to secure the mounting bracket and cabinet to the wall
- a 3/4 in. (20 mm) sheet of plywood secured to the wall
- one 1 in. #12 screw and an alignment bracket if installing an expansion cabinet next to the main cabinet (horizontal expansion)



DANGER

A fully loaded cabinet weighs up to 75 lb (34 kg). Make sure that the equipment is securely fastened to the wall. Use fasteners that are designed to hold securely in the type of surface chosen to support the equipment. When using 3/4 in. (20 mm) plywood or other similar material as a backboard, make sure that it is anchored directly to the wall studs in a minimum of six locations.

Procedure 6
Mounting the cabinet on a wall

Note: If adding a cabinet next to an existing installed cabinet, start at [step 4](#).

- 1 Draw a level line on the plywood backboard indicating where the mounting brackets for each system cabinet will be located.

Refer to the equipment layout plan for measurements, or refer to the chapter on developing an equipment layout plan in *Small System: Planning and Engineering* (553-3011-120).

- 2 Locate the mounting bracket and mounting screws shipped with each cabinet.
- 3 Rest the bottom of the bracket on the line drawn for the main cabinet and fasten the mounting bracket to the wall with five 1 in. #12 screws provided (or other suitable fasteners).


Make sure the mounting bracket is even with the line you have drawn and that the hook on the bracket is facing upward as shown in Figure 34 on [page 118](#).

- 4 Perform this step only if an expansion cabinet is to be located immediately next to the main cabinet (or an existing expansion cabinet). Otherwise, go to the next step (Step 5 on [page 118](#)).

Fasten an alignment bracket (shipped with the cabinet) to the wall as shown in Figure 34 on [page 118](#).

The alignment bracket determines the minimum distance between the main and expansion cabinets if mounted side-by-side. It is not required if the space between cabinets is significant.

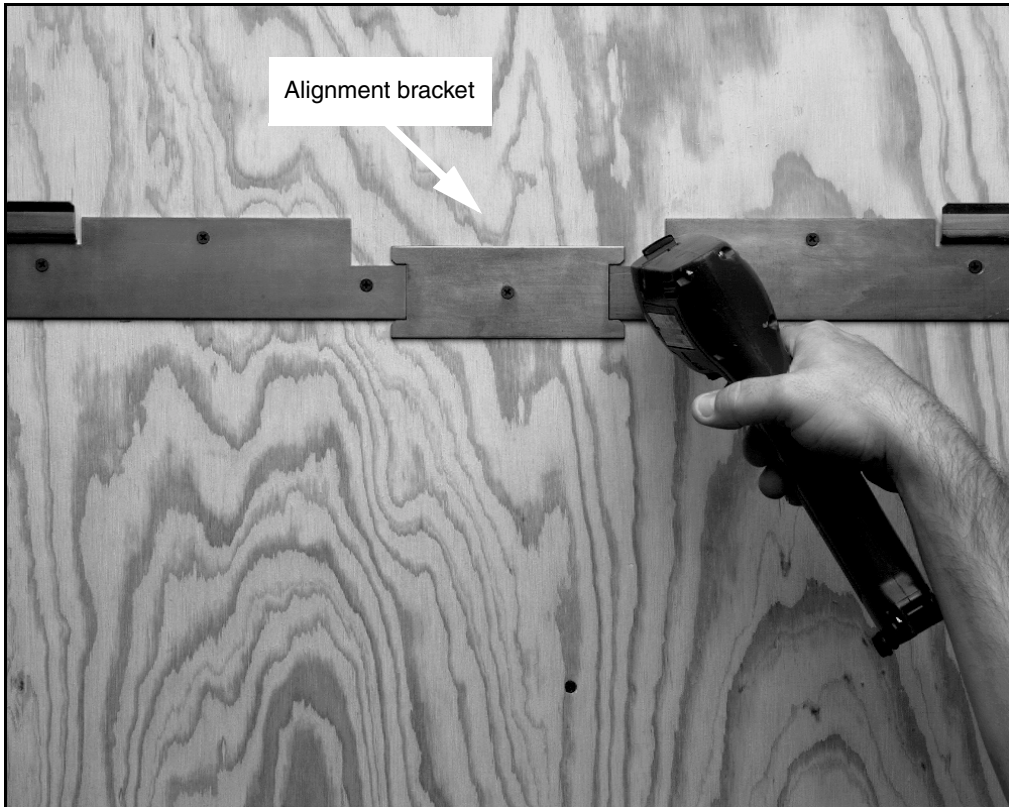Figure 34
Brackets for horizontal expansion



- 5 Rest the bottom of the bracket on the line drawn for the expansion cabinet, and fasten the mounting bracket to the wall with five 1 in. #12 screws provided (or other suitable fasteners).

Make sure the mounting bracket is even with the line drawn, and that the hook on the bracket is facing upward as shown in Figure 34 on [page 118](#).

- 6 Remove the main cabinet (or expansion cabinet if the main cabinet has been installed) from its carton and remove its front cover.

If the front cover lock latches are in their locked position, use a screwdriver and turn the lug on each latch 90° to the unlocked position (refer to Figure 35 on [page 119](#)).

Simultaneously slide both latches in towards the center of the cabinet.

Grasp the sides of the cover and pull the top outwards, then lift it upward to remove it from the cabinet.

Note: The bottom of the front cover is supported but not secured to the cabinet. Be careful not to drop it.

Figure 35
Unlocking the latches



7 Remove the metal drip tray.

Check the wrist strap in the bottom right of the cabinet. It may have come loose during transit. If so, attach it to the Velcro tab on the inside right wall of the cabinet.




WARNING

An empty cabinet weighs 25 lb (12 kg). Get help to lift the cabinet if necessary.

8 Lift the cabinet and hang it on the mounting bracket hook.

- 9 Locate the two screw holes at the bottom towards the rear of the cabinet. See Figure 36 on [page 120](#).
- 10 Adjust the cabinet so that it is straight and level. Fasten the bottom of the cabinet to the wall with the two 1 in. #12 screws provided with the cabinet.

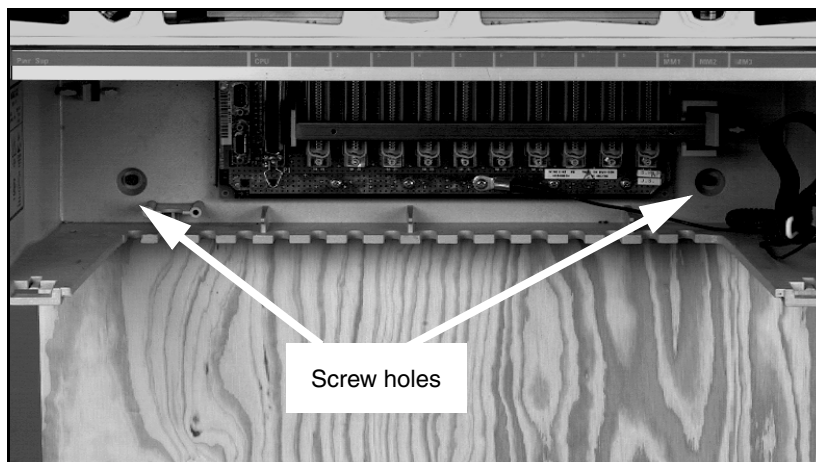Figure 36
Securing the cabinet to the wall



- 11 If additional expansion cabinets are being installed at this site, repeat steps 6 through 10 to install those cabinets.

End of Procedure

Floor mounting

Items required

To mount the cabinet on the floor you need:

- the optional pedestal for floor mounting
- four #14 screws provided to secure the cabinet to the pedestal
- the equipment layout plan as developed in the chapters on system and site requirements in *Small System: Planning and Engineering* (553-3011-120)

Procedure 7

Mounting the cabinet on the floor



WARNING

An empty cabinet weighs 25 lb (12 kg). Get help to lift the cabinet if necessary.


- 1 Remove the main cabinet (or expansion cabinet if the main cabinet has been installed) from its carton and remove its front cover.

If the front cover lock latches are in their locked position, use a screwdriver and turn the lug on each latch 90° to the unlocked position. (Refer to Figure 37 on [page 122](#).)

Simultaneously slide both latches in towards the center of the cabinet.

Grasp the sides of the cover and pull the top outwards, then lift it upward to remove it from the cabinet.

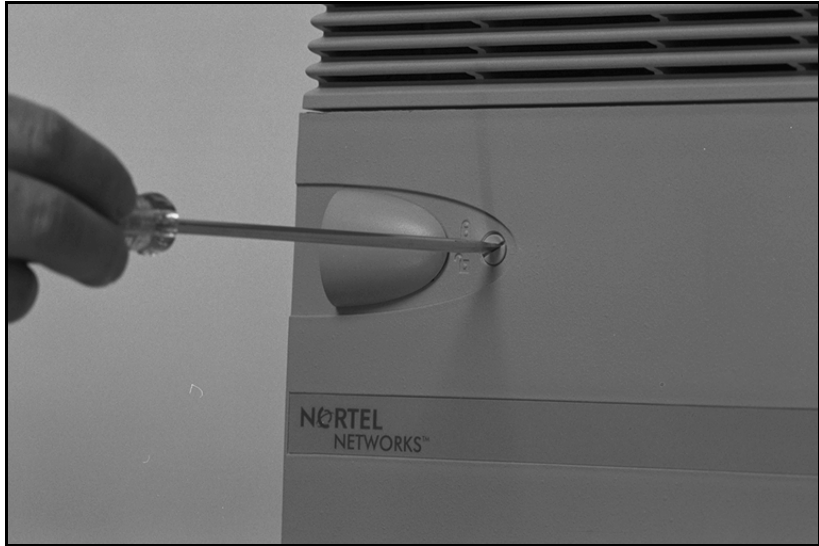Figure 37
Unlocking the latches



Note: The bottom of the front cover is supported but not secured to the cabinet. Be careful not to drop it.

- 2 Remove the metal drip tray.

Check the wrist strap in the bottom right of the cabinet. It may have come loose during transit. If so, attach it to the Velcro tab on the inside right wall of the cabinet.

- 3 Locate the carton containing the pedestal.

Remove the pedestal from the carton and locate the four leveling feet.

Install the feet into the base of the pedestal.

- 4 Install the cabinet on the pedestal.

Lean the cabinet backwards. From under the cabinet and with a pair of pliers, break off the two tabs located in the openings on the bottom of the cabinet where the door hinges join the cabinet, as shown in [Figure 38 on page 123](#).

Figure 38
Installing the pedestal



Place the cabinet on the pedestal and make sure that it is properly seated. Align with the guide at the rear of the cabinet and pedestal. (Refer to Figure 39 on [page 124](#).)

Install the four #14 screws that are shipped with the pedestal, two at the bottom rear and two where the tabs were removed, and secure the cabinet to the pedestal.

Figure 39
Mounting the cabinet on the pedestal



- 5 Position the cabinet according to the equipment layout plan.
- 6 If an additional expansion cabinet is being installed at this site, repeat this procedure for that cabinet.

End of Procedure

Mounting the chassis

Contents

This section contains information on the following topics:

Introduction	125
Mounting in a 19-inch rack/equipment cabinet	127
Items required	127
Wall mounting in a vertical position	132
Items required	132
Wall mounting in a horizontal position	139
Items required	139

Introduction

This chapter describes the three methods you can use to install the chassis. The following procedures describe the three installation methods:

- Procedure 8: “Installing the chassis in a 19-inch rack/equipment cabinet” on [page 129](#)
- Procedure 9: “Installing the chassis on a wall in a vertical position” on [page 135](#)
- Procedure 10: “Installing the chassis on a wall in a horizontal position” on [page 141](#)

This chapter also provides guidelines on how to position system components. See Figures 40, 44, and 48. Also refer to the chapter on developing an

equipment layout plan and a card slot assignment plan in *Small System: Planning and Engineering* (553-3011-120) for additional information.

Note: For a Succession 1000M Chassis system, the Succession Signaling Server must be mounted in an external 19-inch equipment rack. Refer to *Signaling Server: Installation and Configuration* (553-3001-212) for information on installing the Succession Signaling Server hardware.



WARNING

If the Small System requires earthquake bracing, you must install the chassis on a wall in a vertical position. Refer to the earthquake bracing requirements in the chapters on system and site requirements in *Small System: Planning and Engineering* (553-3011-120) and “Bracing against earthquakes” on [page 79](#).



WARNING

A chassis is 30 lb (13.5 kg) with circuit cards installed. A chassis is 26 lb (12 kg) without circuit cards installed. Get help lifting the chassis if necessary.

Mounting in a 19-inch rack/equipment cabinet

Items required

To install the chassis in a 19-inch rack/equipment cabinet, you require the following items:


- equipment layout plan
- one left chassis guide bracket
- one right chassis guide bracket
- one left ear bracket
- one right ear bracket
- eight #12-24 self-tapping screws
- four #8-32 machine screws

The NTTK09 contains all of the above items, with the exception of the equipment layout plan.

Note: The Chassis system does not include the 19-inch rack/equipment cabinet.

Refer to Figure 40 on [page 128](#) for guidelines on how to position system components.

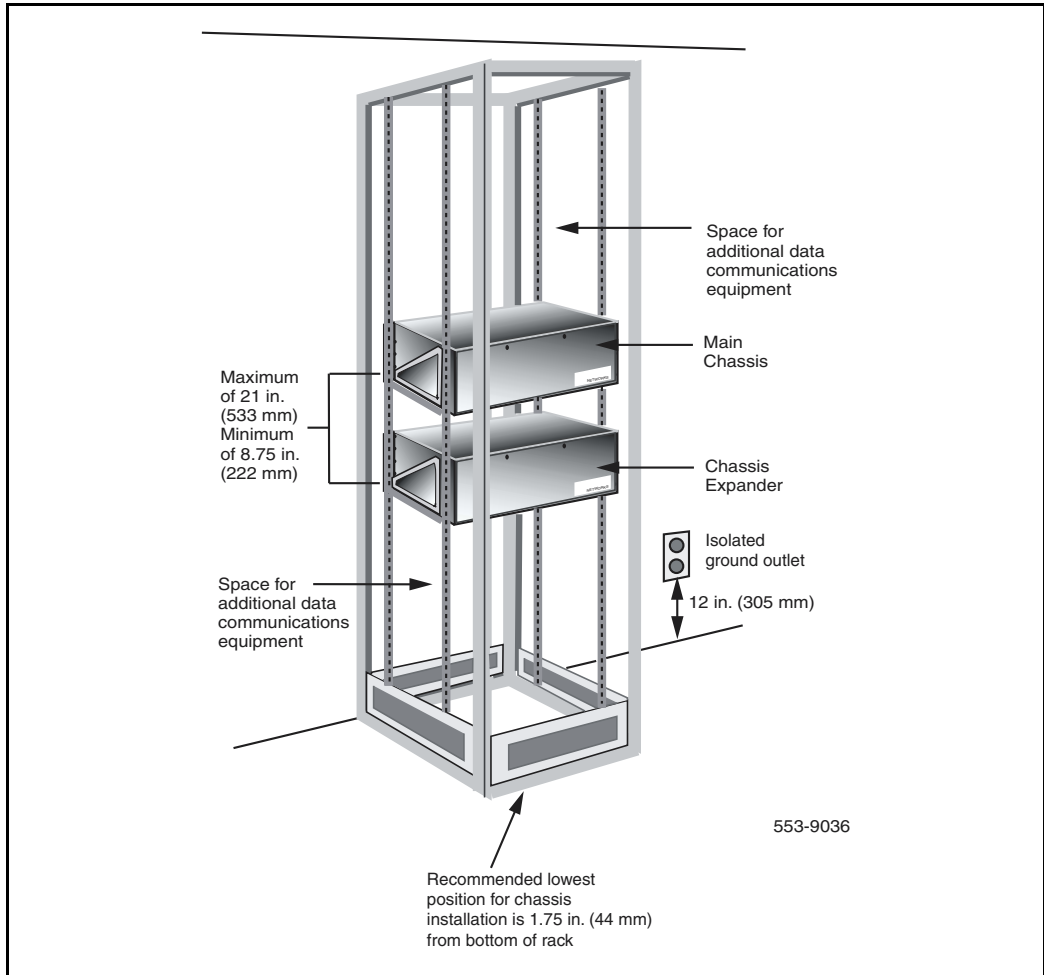Figure 40
Typical layout for installing the chassis in a rack/equipment cabinet



Note 1: Leave wall space for the cross-connect terminal.


Note 2: The rack/equipment cabinet does not have to be right against the wall. You can position the rack/equipment cabinet so that you have access to both the front and back.

Procedure 8**Installing the chassis in a 19-inch rack/equipment cabinet**

- 1 Fasten the left chassis guide bracket to the left rack/equipment cabinet support. Insert two #12-24 self-tapping screws into the two middle slots in the chassis guide bracket and into the respective holes in the left rack/equipment cabinet support. Fasten the screws.


Note: The rack/equipment cabinet brackets help guide the chassis into place, and allow one person to install the chassis in the rack/equipment cabinet.

- 2 Fasten the right chassis guide bracket to the right rack/equipment cabinet support. Insert two #12-24 self-tapping screws into the two middle slots in the bracket and into the respective holes in the right rack/equipment cabinet support. Fasten the screws. See Figure 41.

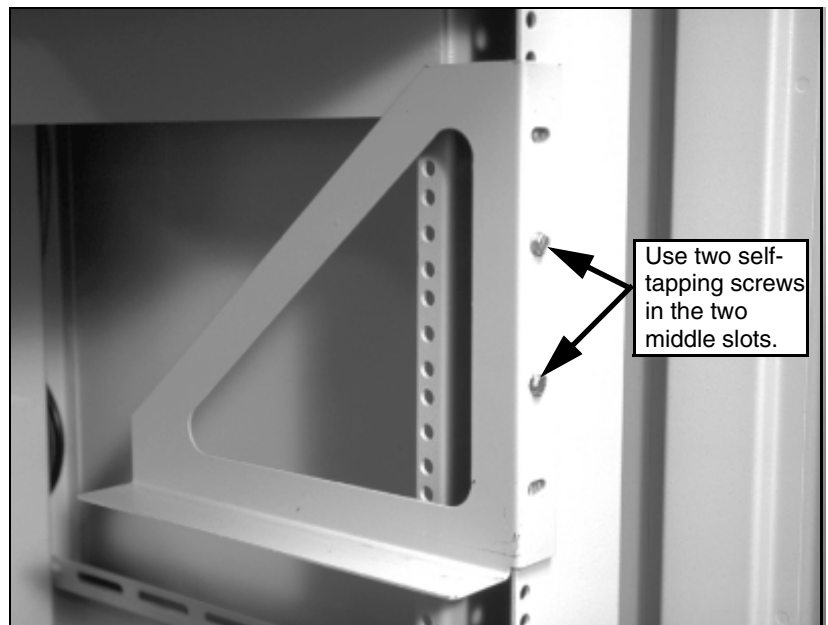Figure 41**Chassis guide bracket installed in a rack**


- 3 Attach the left ear bracket (marked with an “L”) to the holes on the left side of the chassis (near the front).
Use two #8-32 machine screws. Position the ear bracket so that the four holes on the bracket flange are nearer to the back of the chassis. To determine the front of the bracket, locate the “L”. This “L” must be at the top of the bracket and must face to the front of the chassis.
- 4 Attach the right ear bracket (marked with an “R”) to the holes on the right side of the chassis.
Use two #8-32 machine screws. Position the ear bracket so that the four holes on the bracket flange are nearer to the back of the chassis. To determine the front of the bracket, locate the “R”. This “R” must be at the top of the bracket and must face to the front of the chassis. See Figure 42.

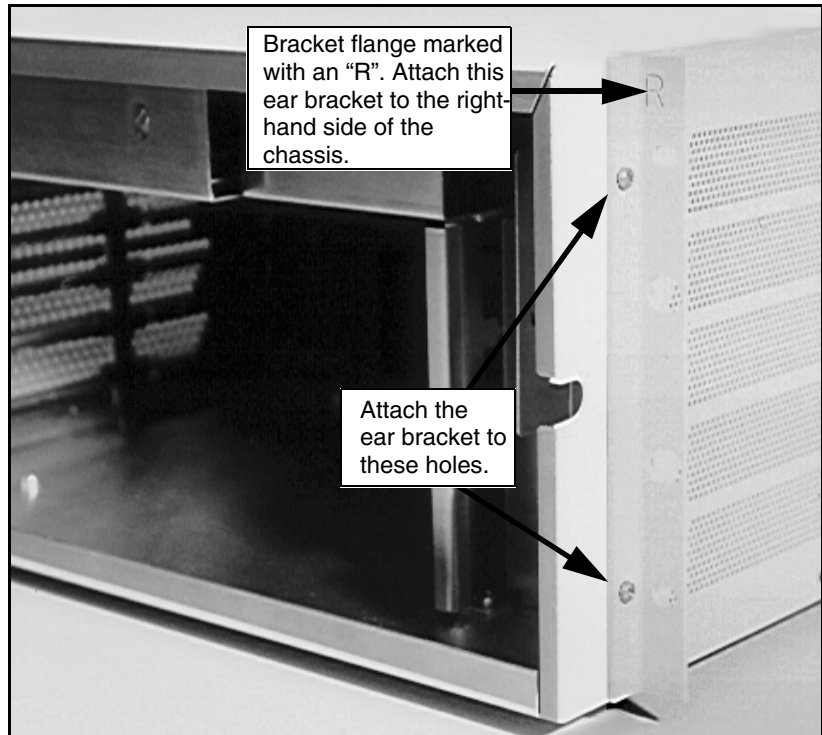Figure 42
Right ear bracket installed on the chassis



- 5 Place the chassis on the chassis guide brackets. Carefully slide the chassis into the rack/equipment cabinet until the ear brackets come to rest against the rack/equipment cabinet support.
- 6 Use the four remaining #12-24 self-tapping screws to fasten the chassis to the rack/equipment cabinet supports (two screws on each side). Make sure that the back of the chassis is on the chassis guide brackets. See Figure 43 .

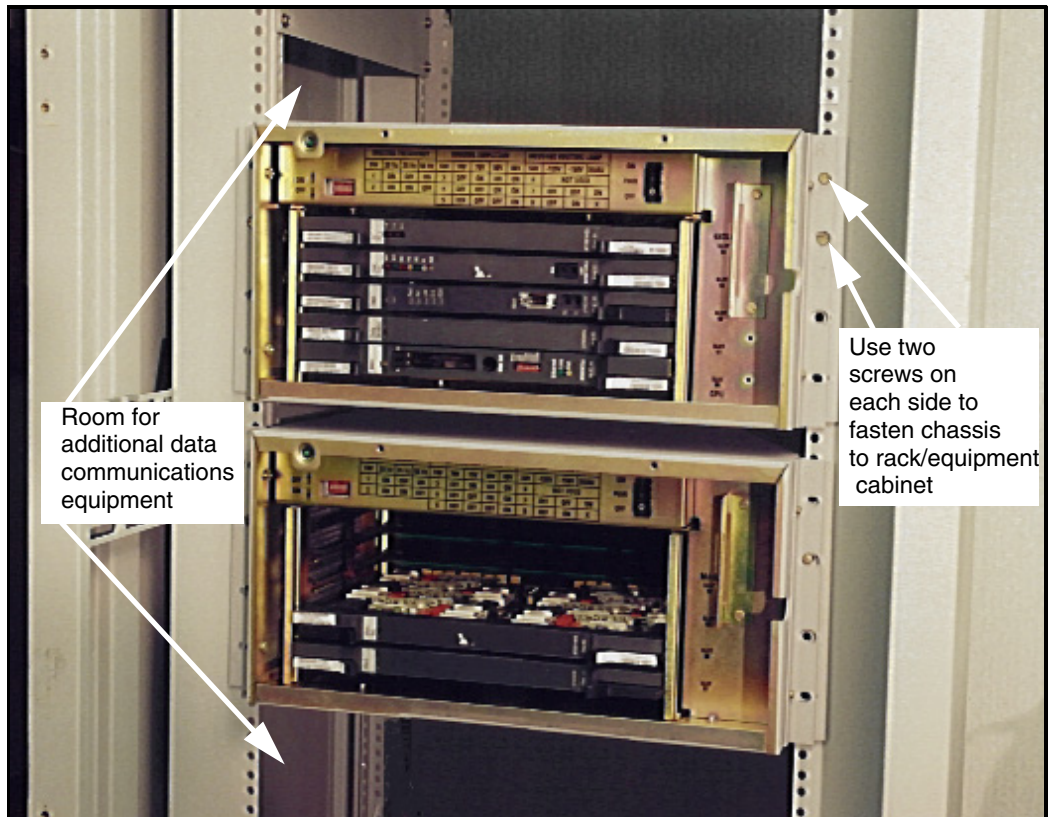Figure 43
Chassis installed in a rack/equipment cabinet



- 7 If you want to add a chassis expander, follow the above steps. You only need to leave a small space between the chassis and the chassis expander. The air circulates from the side of the chassis. To install the chassis expander, start in the next 5u pattern of mounting holes. This results in the chassis expander being approximately 1/4 inch from the first chassis.

Note: In the 5u pattern, a “u” is equal to 1.75 in. and includes three holes spaced at 5/8 in. + 5/8 in. + 1/2 in.

Note: In addition to more chassis, you can install other Data Communications Equipment in a rack/equipment cabinet with the Chassis system. Refer to “Multiple pieces of equipment in an equipment rack/cabinet” on [page 156](#) for grounding instructions for multiple pieces of equipment in a rack/equipment cabinet.

End of Procedure

Wall mounting in a vertical position

Items required

To install the chassis on a wall in a vertical position, you require the following items:

- equipment layout plan
- chassis bracket
- wall bracket
- five 1 in. #12 wood screws provided in the bracket kit (or other appropriate fasteners) to hold the wall brackets and chassis on the wall
- four #8-32 machine screws, used to attach the chassis brackets to the wall
- one 3/4 in. (20 mm) piece of plywood fastened to the wall


The NTTK08 bracket kit contains all of the above items, with the exception of the equipment layout plan and the plywood.

**DANGER**

A chassis is 30 lb (13.5 kg) with circuit cards installed. Make sure that you fasten the equipment securely to the wall. Use fasteners designed to hold securely to the type of surface that will support the equipment. When using 3/4 in. (20 mm) plywood, or other similar material as a backboard, make sure to attach the backboard directly to the wall studs in a minimum of six locations.

Refer to Figure 44 on [page 134](#) for guidelines on how to position the system components.

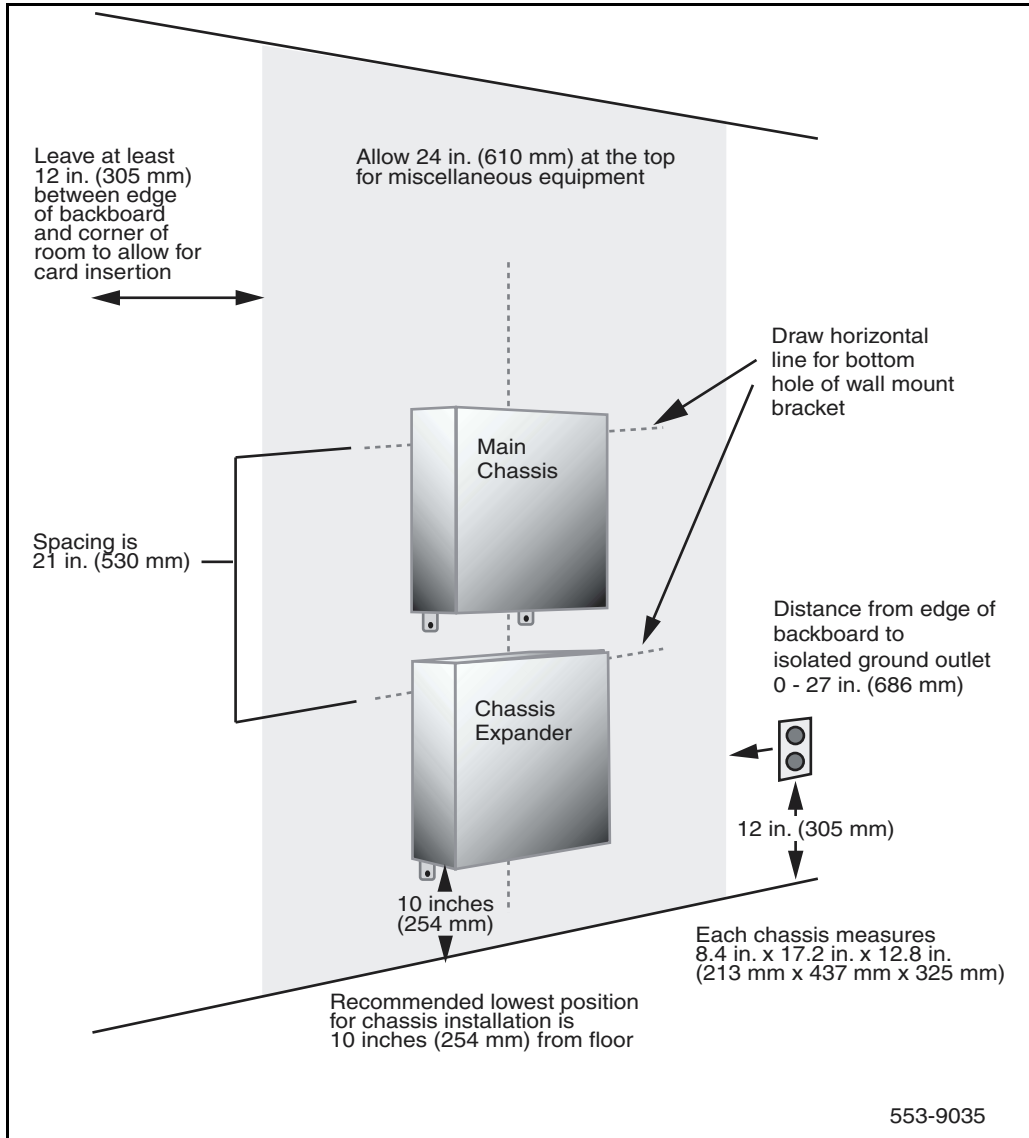Figure 44
Typical layout for installing the chassis on a wall in a vertical position




Note: Leave space for the cross-connect terminal.

Procedure 9**Installing the chassis on a wall in a vertical position**

- 1 Draw the vertical center line of the chassis on the plywood backboard. Allow for clearance on the left and right of the chassis for cables and card access. Refer to Figure 44 on [page 134](#).
- 2 Draw a horizontal line on the plywood backboard. This line indicates the vertical position of the lower hole of the wall bracket.

Place the wall bracket against the plywood backboard. Place the lower mounting hole over the intersection of the vertical and horizontal lines. Fasten the wall bracket securely to the plywood backboard with three #12 wood screws provided (or other appropriate fasteners). See Figure 45.


Note: Make sure that the hook feature on the wall bracket points toward the top of the backboard.

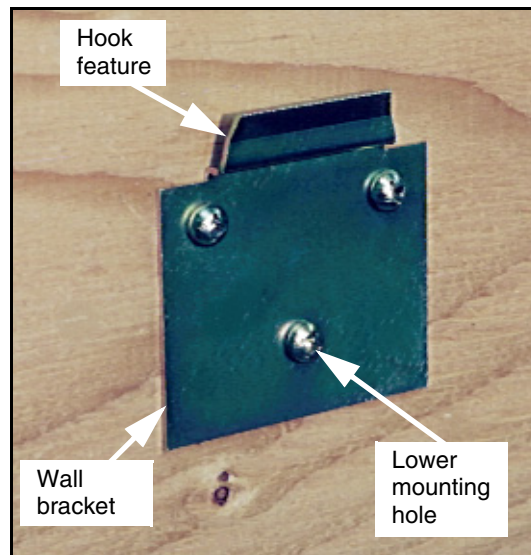Figure 45**Wall bracket fastened to backboard**

- 3 Fasten the chassis bracket to the back of the chassis using the four #8-32 machine screws supplied with the bracket kit. See Figure 46, which shows the chassis lying on its side.

Note: Make sure that the slot feature on the chassis bracket is at the top of the chassis. Also, the two tabs on the chassis bracket must extend past the bottom of the chassis.

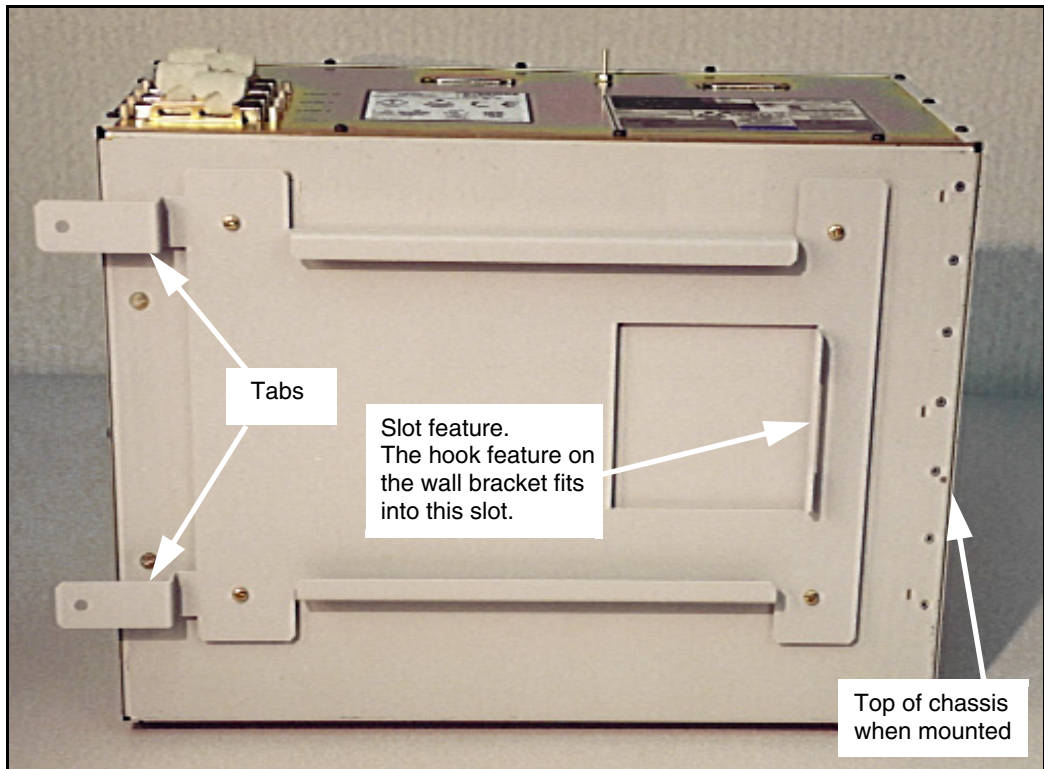
Figure 46
Chassis bracket installed on the back of the chassis



- 4 Lift the chassis into place so that the slot on the chassis bracket engages the hook feature on the wall bracket. Carefully lower the chassis until the hook on the wall bracket fits securely into the slot on the chassis bracket.

- 5 Fasten the chassis in position. Fasten the tabs, which extend past the bottom of the chassis, to the plywood backboard. Use the two remaining #12 wood screws from the bracket kit to fasten the tabs to the backboard. See Figure 47.

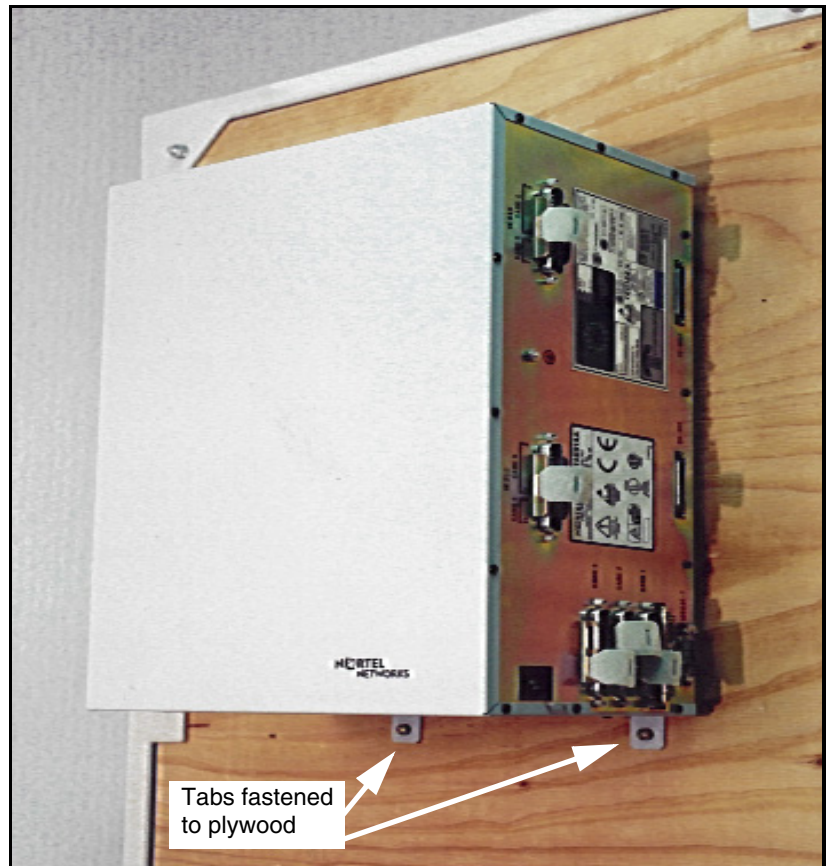Figure 47
Chassis on a wall in a vertical position



- 6** If you want to install a chassis expander, repeat the above steps. Refer to the equipment layout plan for the measurements and where to place the chassis expander.

End of Procedure

Wall mounting in a horizontal position

Items required

To install the chassis on a wall in a horizontal position, you require the following items:

- equipment layout plan
- one left shelf bracket
- one right shelf bracket
- eight 1 in. #12 wood screws supplied in the bracket kit (or other appropriate fasteners) to fasten the wall shelf brackets to the wall
- one 3/4 in. (20 mm) piece of plywood fastened to the wall

The NTTK11 bracket kit contains all of the above items, with the exception of the equipment layout plan and the plywood.




DANGER

A chassis is 30 lb (13.5 kg) with circuit cards installed. Make sure that you fasten the equipment securely to the wall. Use fasteners designed to hold securely to the type of surface that will support the equipment. When using 3/4 in. (20 mm) plywood, or other similar material as a backboard, make sure you attach it directly to the wall studs in a minimum of six places.

Refer to Figure 48 on [page 140](#) for guidelines on how to position system components.

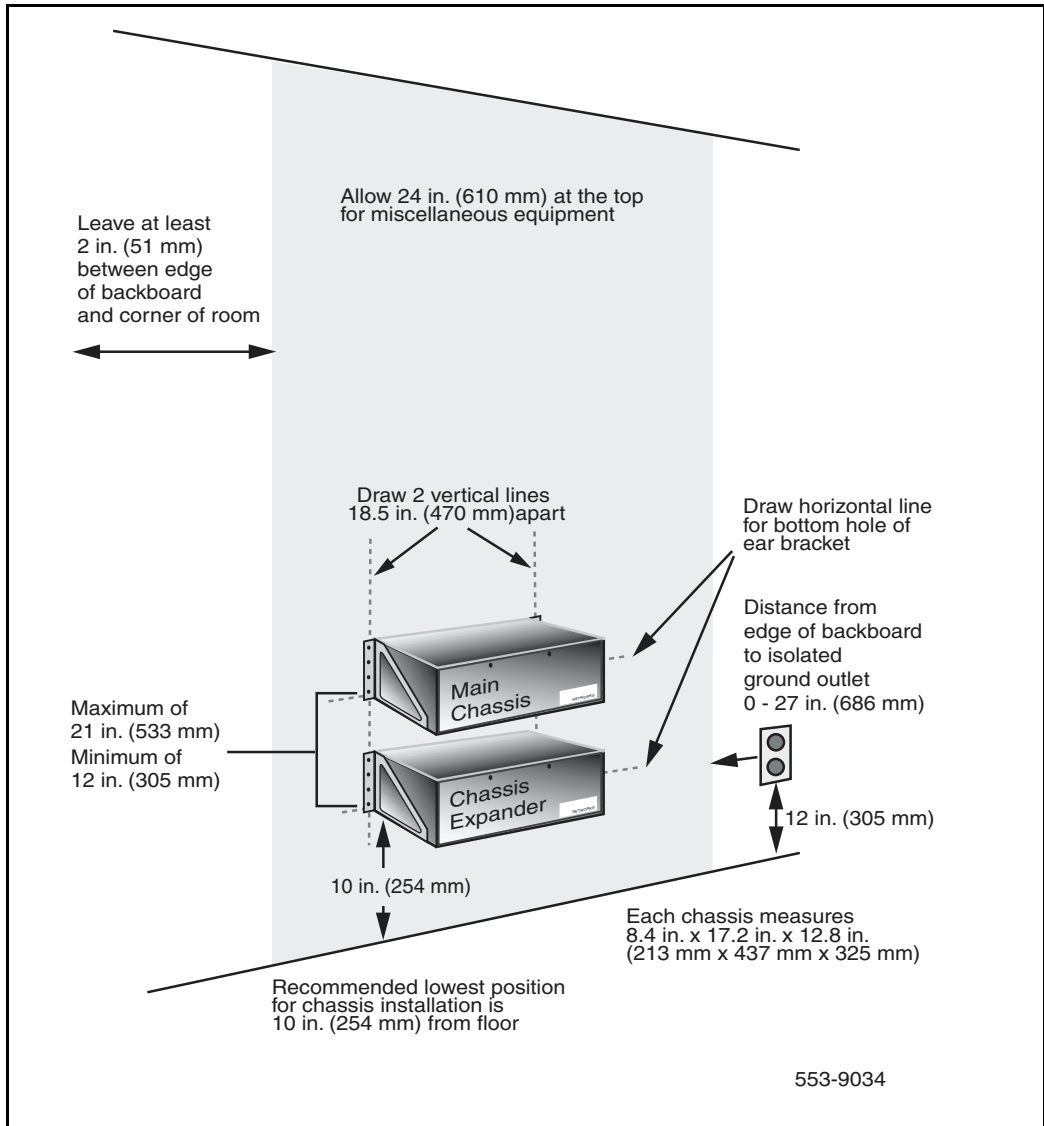Figure 48
Typical layout for installing the chassis on a wall in a horizontal position



Note: Leave space for the cross-connect terminal.

Procedure 10**Installing the chassis on a wall in a horizontal position**


- 1 Draw two vertical lines 18.5 inches apart on the plywood backboard. Allow for clearance on the left and right of the chassis for cables and air flow. Refer to the equipment layout plan for measurements.
- 2 Draw a horizontal line on the plywood backboard. This line indicates the vertical position of the bottom hole on the horizontal wall shelf bracket. Refer to the equipment layout plan for measurements.
- 3 Place the left shelf bracket against the plywood backboard. Place the lower mounting hole over the intersection of the left vertical line and the horizontal line.
Fasten the shelf bracket securely to the plywood backboard. Use four #12 wood screws provided in the bracket kit (or other appropriate fasteners) to fasten the shelf bracket to the backboard.

Note: Position the shelf bracket so that the two thumb screws, located on the bottom of the bracket, face downward. Leave the screws slightly loose, so you can adjust the brackets to the width of the chassis if necessary.

- 4 Place the right shelf bracket against the plywood backboard. Place the lower mounting hole over the intersection of the right vertical line and the horizontal line. Fasten the shelf bracket securely to the plywood backboard with the remaining four #12 wood screws provided in the bracket kit (or other appropriate fasteners). See Figure 49 on [page 142](#).


Note: Make sure the shelf bracket is oriented with the two thumb screws, located on the bottom face of the bracket, facing downwards. Leave the screws slightly loose, so you can adjust the brackets to the width of the chassis if necessary.

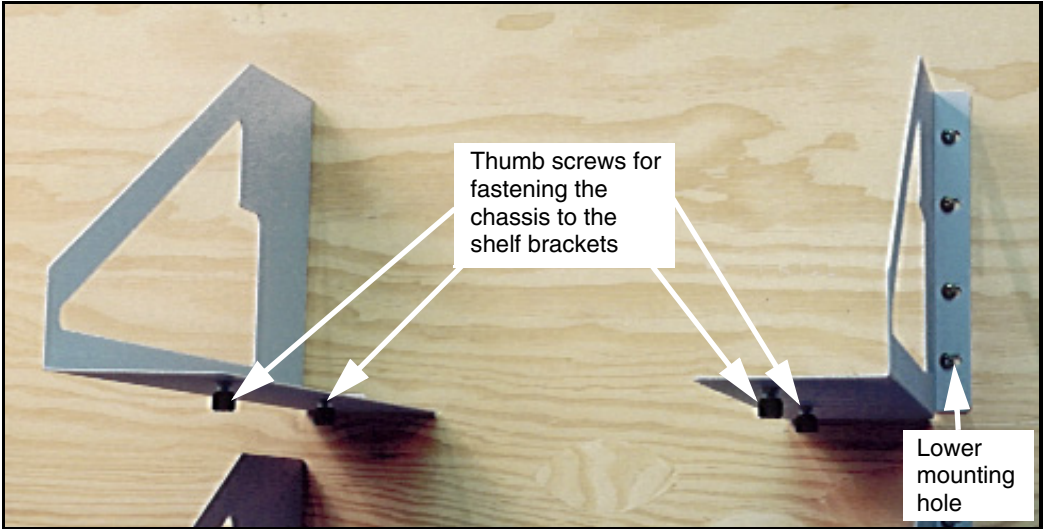Figure 49
Thumb screws on the wall shelf brackets




- 5 Place the chassis on the shelf brackets. Carefully slide the chassis on the wall shelf brackets until it touches the chassis stops on the brackets. See Figure 50.

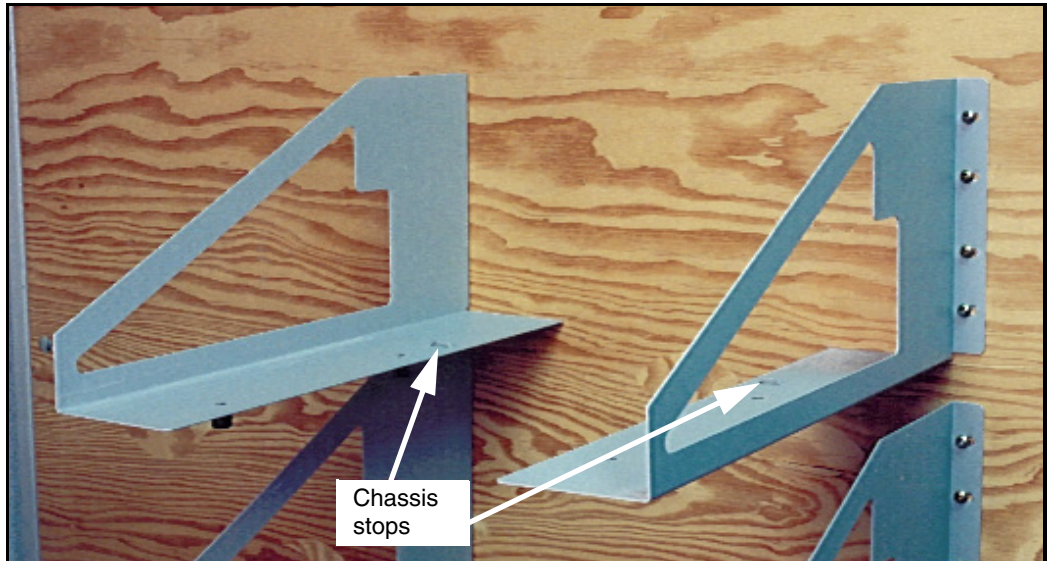Figure 50
Chassis stops on the wall shelf brackets



- 6 Fasten the chassis in position using the four thumb screws, located on the bottom side of the shelf brackets.
- 7 Tighten the eight #12 wood screws into the plywood backboard. Make sure that the shelf brackets and chassis are fastened securely in position. See Figure 51 on [page 144](#).

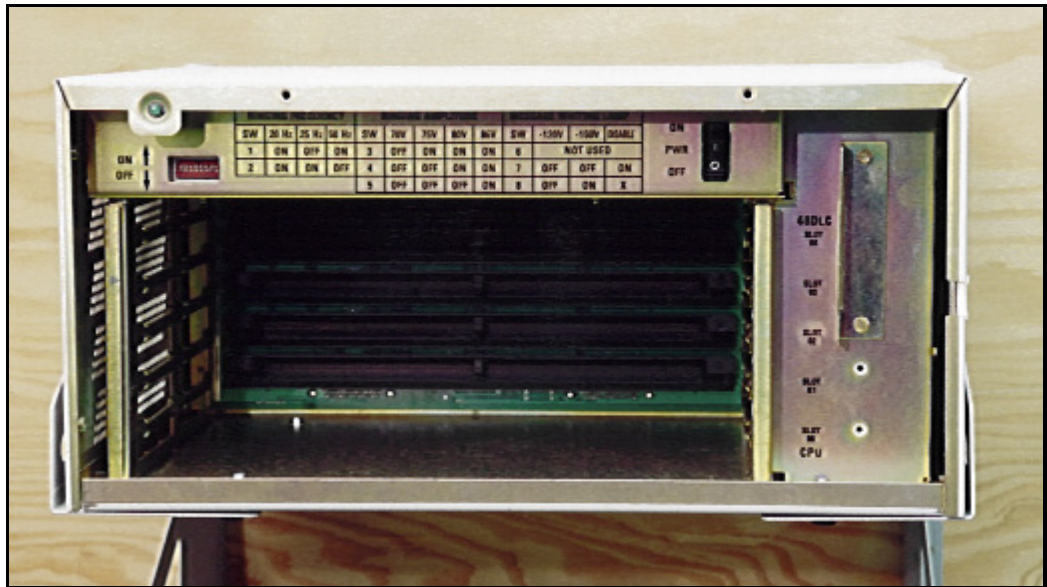Figure 51
Chassis installed on a wall in a horizontal position



- 8** If you want to install a chassis expander on a wall in a horizontal position, repeat the above steps for the chassis expander. Refer to the equipment layout plan for the measurements and where to position the chassis expander.

End of Procedure

Connecting the chassis expander to the chassis

Contents

This section contains information on the following topics:

Introduction	145
Adding a chassis expander	145

Introduction

This chapter describes how to add a chassis expander to your Chassis system. Use the same methods described in “Mounting the chassis” on [page 125](#) to install the chassis expander. Refer to the chapter on developing an equipment layout plan in *Small System: Planning and Engineering* (553-3011-120) for measurements and distances between the chassis and the chassis expander.

This chapter contains the following procedure:

- Procedure 11: “Adding a chassis expander” on [page 146](#)

Adding a chassis expander

The chassis expander connects to the chassis by two copper cables: one provides DS-30X connectivity and the other provides CE-MUX connectivity to slot 10 only.

Procedure 11

Adding a chassis expander


- 1 Install the chassis expander following the procedures in “Mounting the chassis” on [page 125](#).
- 2 Connect one of the NTDK95 cables from the CE-MUX connector on the back of the chassis to the CE-MUX connector on the back of the chassis expander.
- 3 Tighten the screws on the connectors.
- 4 Connect the other NTDK95 cable from the DS-30X connector on the back of the chassis to the DS-30X connector on the back of the chassis expander.
- 5 Tighten the screws on the connectors.

Note: The expansion cable kit (NTDK89) contains two NTDK95 cables.

Figure 52 on [page 147](#) shows the chassis and chassis expander connected with the two NTDK95 cables.

Figure 52

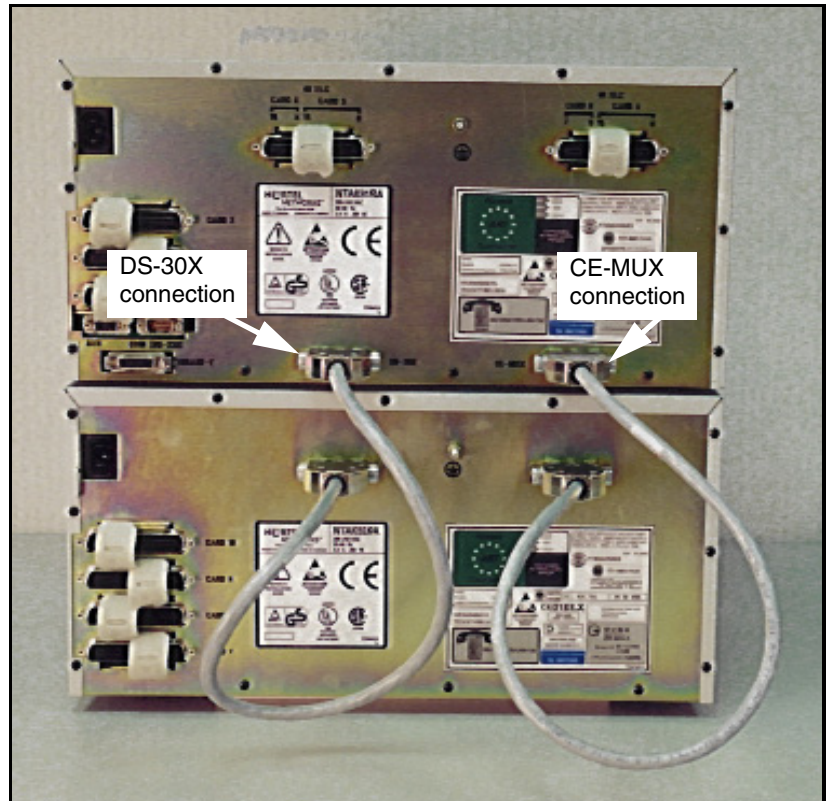The chassis and chassis expander connected with the two NTDK95 CE-MUX/DS-30X bus cables



- 6 Install the system ground as described in “Installing the system ground” on [page 149](#).
- 7 Add circuit cards as described in “Installing optional circuit cards” on [page 217](#).
- 8 Follow the procedures for starting the Small System in “Installing software” on [page 299](#).

End of Procedure

Installing the system ground

Contents

This section contains information on the following topics:

Introduction	149
Cabinets or chassis powered by the same service panel.	150
Cabinets or chassis powered by different service panels	150
Grounding instructions for cabinets and chassis	151
Multiple pieces of equipment in an equipment rack/cabinet	156

Introduction

This chapter describes how to install and connect the ground source to the Small System cabinets and chassis. This chapter contains the following procedures:

- Procedure 12, “Grounding the cabinets or chassis” on [page 151](#)
- Procedure 13, “Earthing the cabinets or chassis (UK)” on [page 156](#)

This chapter also describes how to ground multiple pieces of Chassis system equipment in an equipment rack/cabinet when one or more pieces of equipment does not have a grounding lug. See “Multiple pieces of equipment in an equipment rack/cabinet” on [page 156](#).

Make sure you read the grounding requirements in the chapters on system and site requirements in *Small System: Planning and Engineering* (553-3011-120) before proceeding further.



DANGER OF ELECTRIC SHOCK

Proper grounding is extremely important. Failure to complete the following steps could result in a system that is:

- unsafe for personnel using the equipment
- not protected from lightning or power surges
- subject to service interruptions

Insulated ground wire **must** be used for system grounding.

Note: System ground is synonymous with system earth in the UK.

Cabinets or chassis powered by the same service panel

For each system cabinet in collocated multi-cabinet situations or for each chassis, connect a #6 AWG (#40 Metric Wire Gauge) ground wire from the cabinet or the chassis to an NTBK80 grounding block. Connect the grounding block to a ground source (the ground bus in the ac service panel).

For an expanded Chassis system, consider the chassis and the chassis expander as the same ground. Jumper the ground wire from the chassis expander to the chassis. Then, connect the ground wire from the chassis to the grounding block.

See Table 19 for region-specific grounding requirements.

Cabinets or chassis powered by different service panels

For each system cabinet in collocated multi-cabinet situations or for each chassis, connect a #6 AWG (#40 Metric Wire Gauge) ground wire from the cabinet or the chassis to an NTBK80 grounding block. If any cabinet or

chassis cannot be powered from the same service panel, it must be grounded separately from the others back to the service panel that supplies it.

For an expanded Chassis system, all chassis and chassis expander pairs must be powered from the same service panel.

See Table 19 for region-specific grounding requirements.

Table 19
Region-specific grounding wire requirements

Region	Grounding wire requirements
Germany	#8 AWG (10 mm ²) green/yellow wire
Other regions in Europe	not smaller than #6 AWG (16 mm ²) at any point
UK	two green/yellow wires no thinner than 10 mm ²

Grounding instructions for cabinets and chassis

Procedure 12 describes how to ground Small System cabinets or chassis. Repeat the steps for each cabinet or for each chassis and chassis expander pair installed in the system.

Procedure 12 **Grounding the cabinets or chassis**

- 1 Make sure that you disconnect the ac power cord from the power outlet.

Note: For the Chassis system in an equipment rack/cabinet configuration, equipment must be powered from the same service panel.



DANGER OF ELECTRIC SHOCK

Never connect power to a cabinet or chassis that is not grounded correctly.

- 2 For a Cabinet system, if the cabinet is connected to a reserve power supply unit (battery backup), make sure that the circuit breaker on that unit is set to OFF.



DANGER OF ELECTRIC SHOCK

Never connect backup power to a cabinet that is not grounded correctly.

- 3 Install an NTBK80 grounding block near the cabinet or chassis.

Note: Use the grounding block as a bridging point for ground wires from:

- up to three nearby Cabinet systems. If you have remote cabinets, or when more than three cabinets are collocated, you require additional grounding blocks.
- up to six nearby chassis and chassis expander pairs. If you have additional chassis, you require additional grounding blocks.

- 4 *For the Cabinet system:* Install a #6 AWG (#40 Metric Wire Gauge) ground wire from the ground lug in each cabinet to the NTBK80 grounding block.


Connect the ground wire to the ground lug located in the bottom portion of the cabinet next to the cable connectors. Route the ground wire through the third groove from the left in the bottom of the cabinet. See Figure 53 on [page 153](#).

Connect the ground wire to the grounding block. See Figure 55 on [page 155](#).

Place a DO NOT DISCONNECT tag on the ground wire.

Go to step 6.

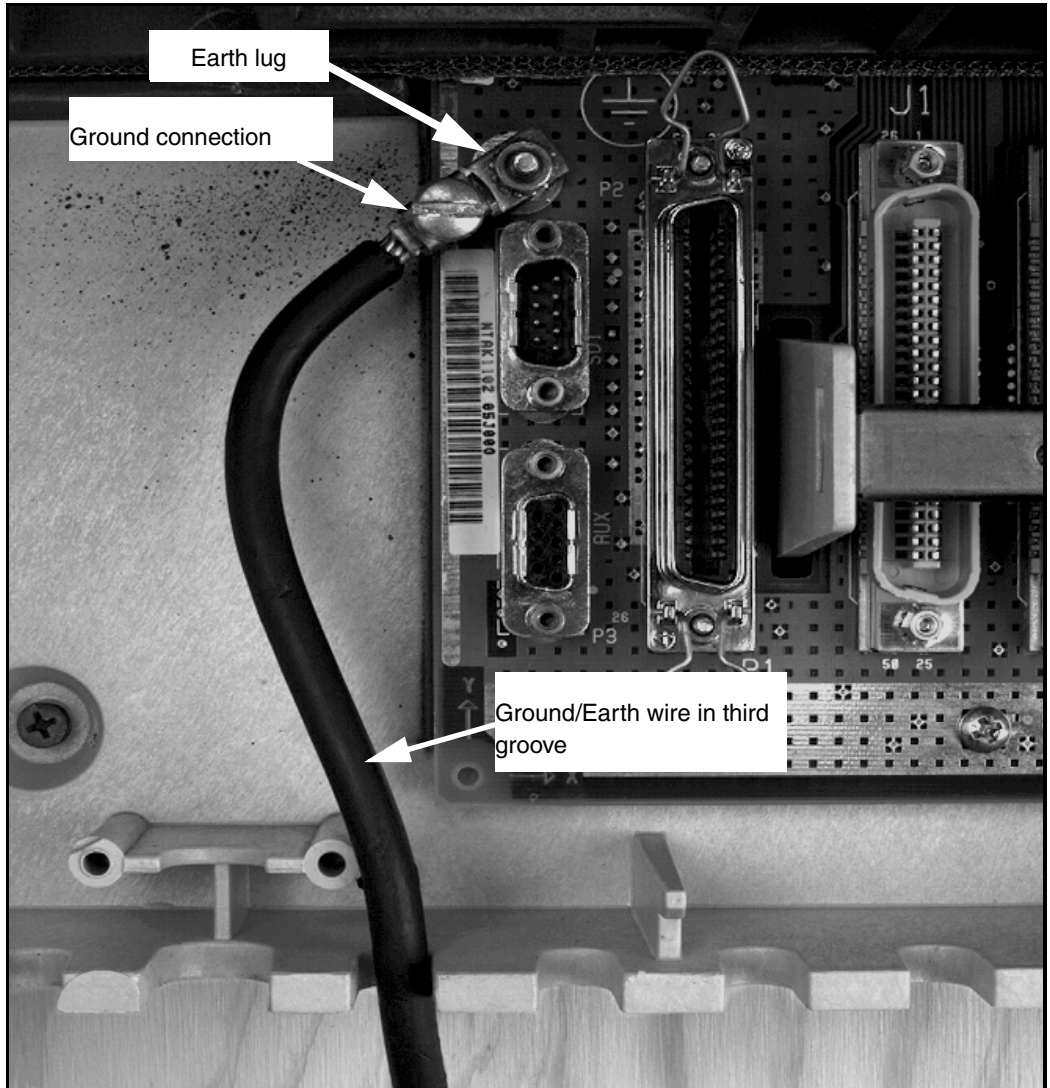Figure 53
Ground/Earth lug in the NTAK11 system cabinets



- 5 *For the Chassis system:* Install a #6 AWG (#40 Metric Wire Gauge) ground wire from the ground lug on the back of the chassis to the NTB80 grounding block.

Consider each chassis and chassis expander pair as one ground. Jumper the chassis expander ground to the chassis ground. See Figure 54.

Place a DO NOT DISCONNECT tag on the ground wire.

Figure 54
Grounding a chassis and chassis expander pair


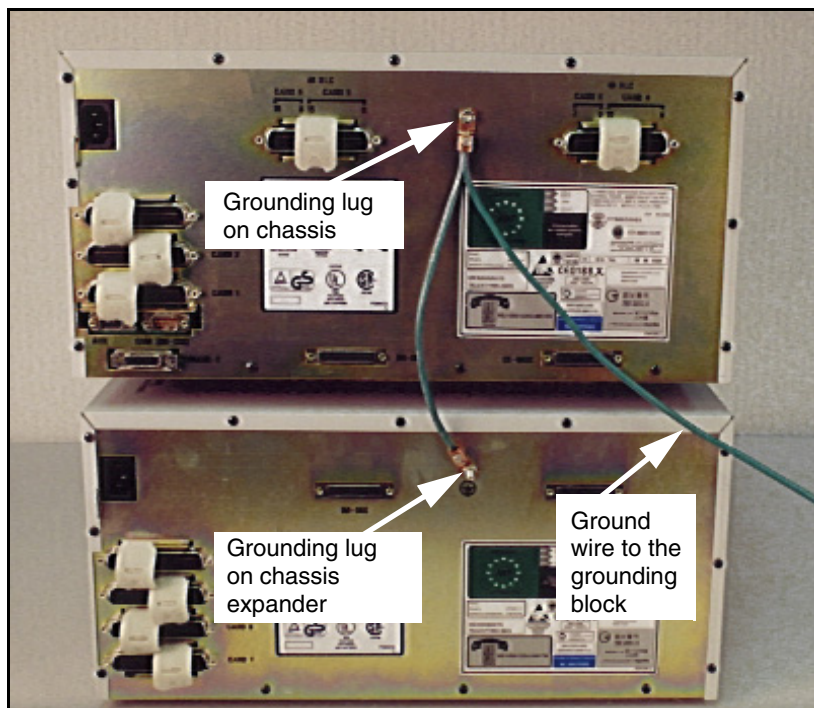


Figure 55
NTBK80 grounding block

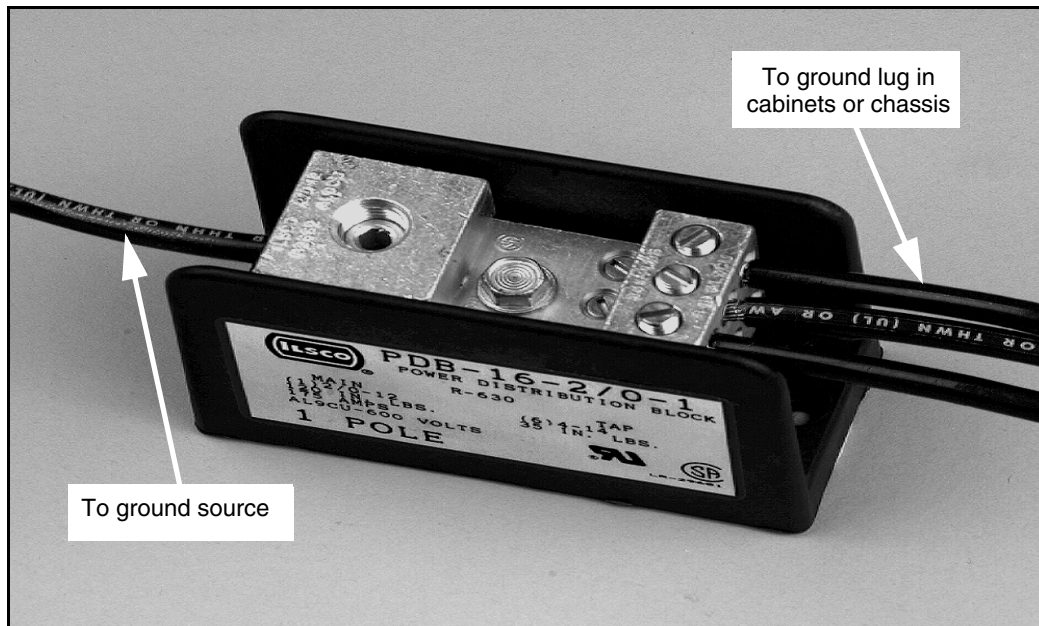

- 6** Connect the grounding block to the ground bus in the ac power service panel, using #6 AWG wire. See Table 19 on [page 151](#) for region-specific grounding requirements.



A qualified technician or electrician must make the connection in the ac power service panel.

- 7 Place a DO NOT DISCONNECT tag on the ground wire at the service panel.
- 8 Test the ground.

End of Procedure

Procedure 13

Earthing the cabinets or chassis (UK)

- 1 Connect a protective and functional earth wire from the earthing strip on the Krone Test Jack Frame to the earth at the building entry point.

Use a green/yellow wire no thinner than 10 mm².

- 2 In each cabinet or chassis, connect an earth wire from the ground lug in the cabinet (see Figure 53 on [page 153](#)) or chassis (see Figure 54 on [page 154](#)) to the earth connection at the Test Jack Frame.

Use a green/yellow wire no thinner than 10 mm². For the Cabinet system, route the earth wire through the third groove from the left in the bottom portion of the cabinet.

Place a DO NOT DISCONNECT tag on the earthing wire.

- 3 Measure the resistance of the earth between the Krone Test Jack Frame and the main cabinet or chassis frame earth.

The resistance must not be more than 0.25 ohms at 30 amperes.

End of Procedure


Multiple pieces of equipment in an equipment rack/cabinet

For a Chassis system with multiple pieces of equipment installed in an equipment rack/cabinet, make a separate ground connection from each piece of equipment to the NTBK80 grounding block. Consider each chassis and chassis expander pair, however, as one ground. Jumper the chassis expander ground to the chassis ground. See Figure 56 on [page 157](#).

If a piece of Data Communications Equipment installed in a rack/cabinet does not have a grounding lug, ground the rack to the NTBK80 grounding block. See Figure 56 on [page 157](#).

When you ground the rack to the grounding block, the equipment is grounded using the Single Point Grounding method, as shown in the grounding requirements in the chapters on system and site requirements in *Small System: Planning and Engineering* (553-3011-120).

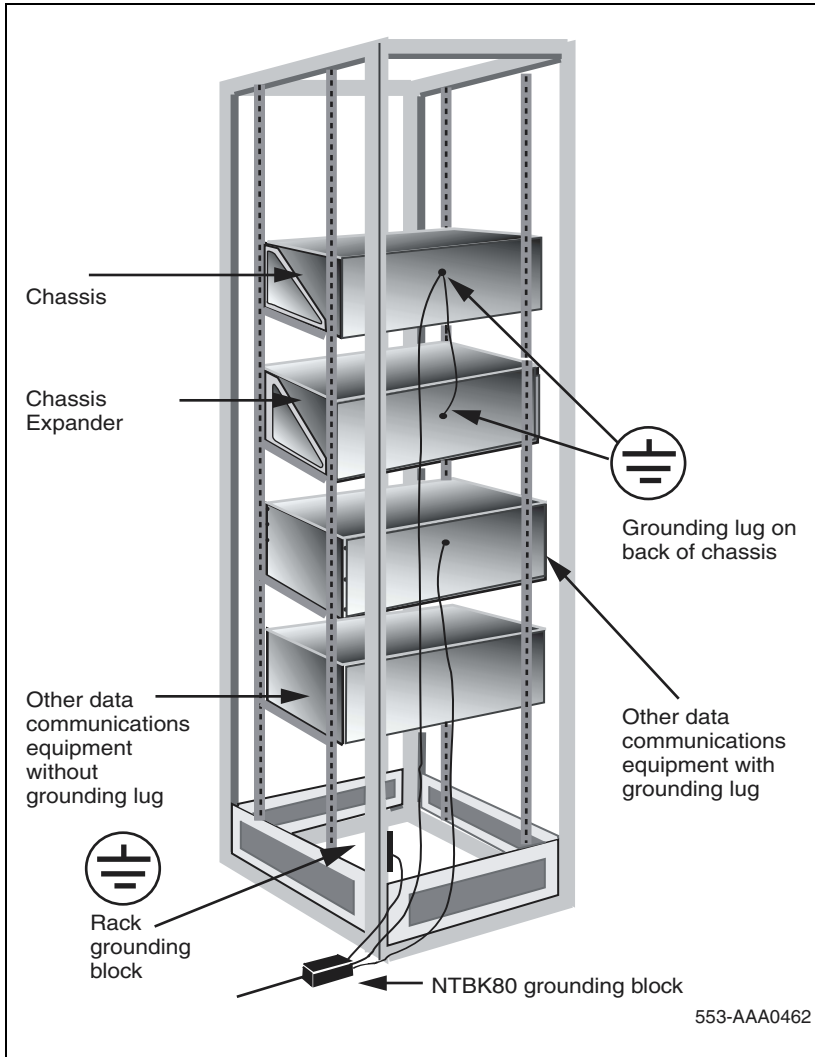Figure 56
Grounding multiple pieces of equipment in a rack



Installing the power supplies for the Cabinet system

Contents


This section contains information on the following topics:

Introduction	159
Power supplies.	160
AC-powered system	160
DC-powered system	160
Switch settings	161
AC power supply installation	163
DC power supply installation	166

Introduction

This chapter describes how and where to install the power supplies used in the Cabinet system. (The power supply for the Chassis system is installed before it is shipped to the customer. You do not have to install the power supply during system installation of the Chassis system.)

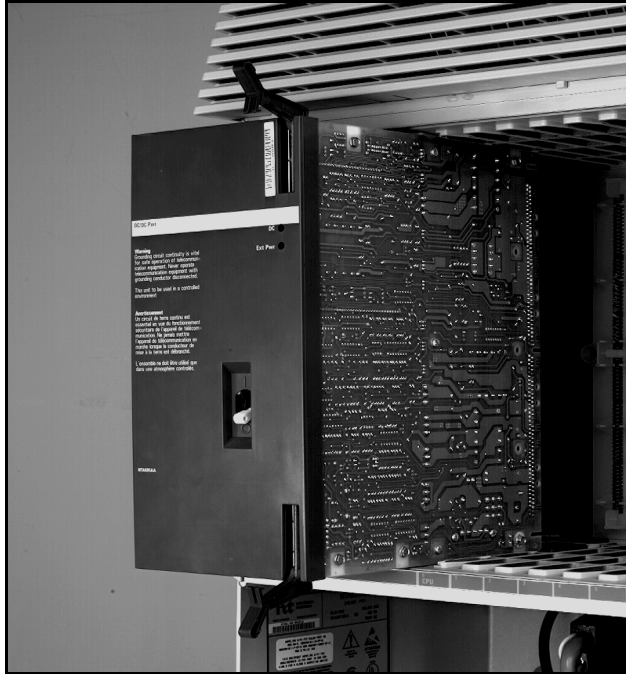Figure 57
Power supply location — main and expansion cabinets



Power supplies

Power supplies are shipped separately from the cabinets.

AC-powered system

If installing an ac-powered system, an NTDK70 or NTDK78 ac/dc power supply is required with its appropriate line cord for each cabinet.

DC-powered system

If installing a dc-powered system, an NTDK72 dc power supply is required for each cabinet.




Additionally, one NTAK0420 power cable is required for each cabinet (for a dc power source).


Switch settings

The power supplies are equipped with a series of switches which must be set before the units are installed in the cabinet. Refer to Figure 58 on [page 162](#).


Figure 58
NTDK70, NTDK72, and NTDK78 power supply switch settings

	SW1	SW2	SW3	SW4
Message Waiting				
-150V	ON			
-120V	OFF			
Ringing				
86VRMS		OFF	OFF	OFF
80VRMS		ON	OFF	OFF
75VRMS		OFF	ON	OFF
70VRMS		OFF	OFF	ON

Frequency	Setting
20 Hz	
25 Hz	
50 Hz	

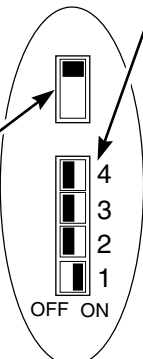

Switches located at the top inside unit



Example:

The setting for North America is normally:
-150V for message waiting
and
86VRMS 20Hz for ringing

553-A066

AC power supply installation

AC power requirements

The ac-powered version requires a non-switched dedicated power outlet installed within 6 ft (1830 mm) of each cabinet, with:

- one non-switched dedicated outlet per cabinet with:
 - Voltage: Recommended 100 to 240 volts
Maximum limits 90 and 250 volts
Single phase
 - Frequency: 50 or 60 Hz
 - Power (I/P Max): 750VA

Refer to the commercial power requirements in the chapters on system and site requirements in *Small System: Planning and Engineering* (553-3011-120) for detailed information about power requirements.



WARNING

Wait at least five minutes after power to the unit is switched off before removing the unit from the cabinet. Make sure that the power cord and battery backup connection (if equipped) are both disconnected.



CAUTION — Service Interruption


The NTDK70 or NTDK78 ac/dc power supply cannot power up on battery alone. If the NTDK70 or NTDK78 is powered down while operating on dc reserve power, then ac power is required to power up.

Procedure 14

Installing the ac power supply

- 1** Set the ac breaker on the front of the power supply to the OFF position.
- 2** Make sure that the switches on the power supply are properly set. See Figure 58 on [page 162](#).
- 3** Insert the power supply into the first slot on the left of the card shelf (refer to Figure 57 on [page 160](#)).
- 4** Lock it into place with the card tabs.
- 5** Attach the power line cord to the connector on the left side of the power supply (see Figure 59 on [page 165](#)) by feeding the cord up through the card guides.

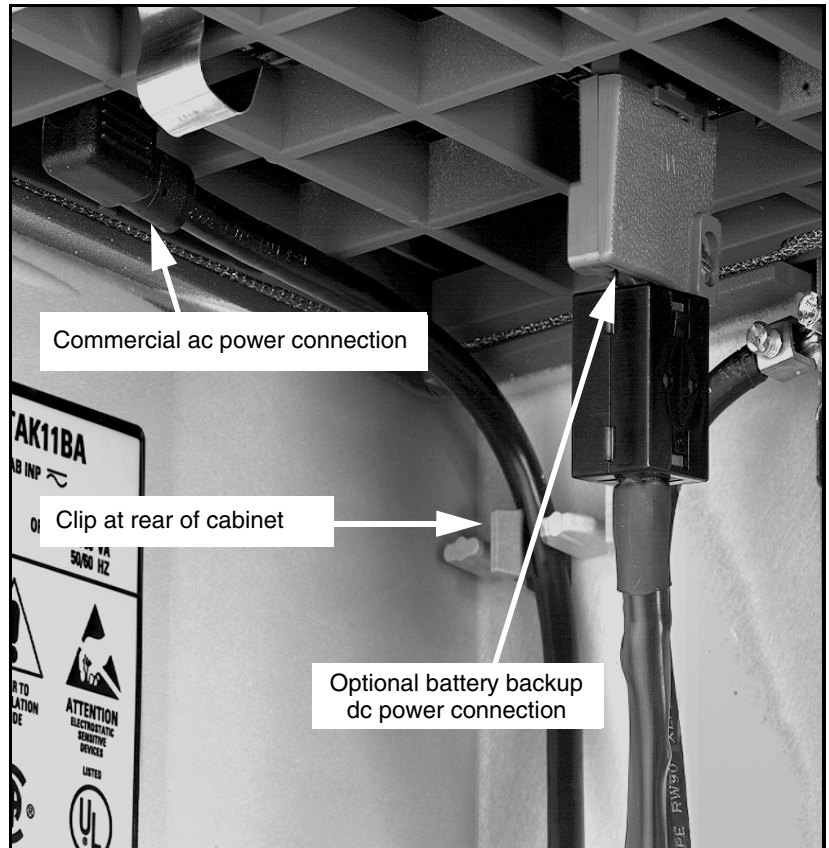Figure 59
AC power cable connection



- 6 Secure the power line cord in place using the clip at rear of cabinet. See Figure 59 on [page 165](#).
- 7 Route the rest of the power line cord down through the opening at the bottom of the cabinet.

- 8** Test the ground of each system cabinet using the following:
- a.** Set the circuit breakers feeding the ac outlet used to power the cabinet to OFF.
 - b.** Connect the power line cord to the NTDK70 or NTDK78 main cabinet power supply.
 - c.** Using an ohmmeter, measure the resistance from the ground pin on the line cord to the ground receptacle on the ac outlet.

The resistance must be less than 0.25 ohms.
If the cabinets are powered from different service panels, the ground must be traced back to the panel serving the cabinet.
 - d.** Reset the circuit breaker once the ground connection is verified.

 End of Procedure

DC power supply installation

Table 20
DC power requirements

	Minimum (see note)	Nominal	Maximum
Recommended	-42.5 V dc	-52 V dc	-54 V dc
Limits	-42.5 V dc	-52 V dc	-57 V dc
Noise (CMESS)	—	—	25 dBrc
Current	—	—	12 Amps
AC Ripple	—	—	100 mv RMS

Note: The NTDK72 dc breaker will trip at -42.5 +/- 1.0 V dc.

Refer to the requirements for the dc-powered version in the chapters on system and site requirements in *Small System: Planning and Engineering* (553-3011-120) for detailed information about dc power requirements.

Procedure 15**Installing the dc power supply**


- 1 Make sure the switches on the power supply are properly set. Refer to Figure 58 on [page 162](#) of this chapter.
- 2 Insert the power supply into the first slot on the left of the card shelf (refer to Figure 57 on [page 160](#)).

**WARNING**

Make sure the circuit breaker on the faceplate of the power supply is OFF before continuing.


- 3 Lock the power supply into place with the card tabs.
- 4 If a rectifier is to be installed with the system, install it using the instructions supplied with the rectifier.
- 5 Feed one end of the dc power cable up through the card guide and insert it into the connector on the right side of the dc power supply. See Figure 60 on [page 168](#).

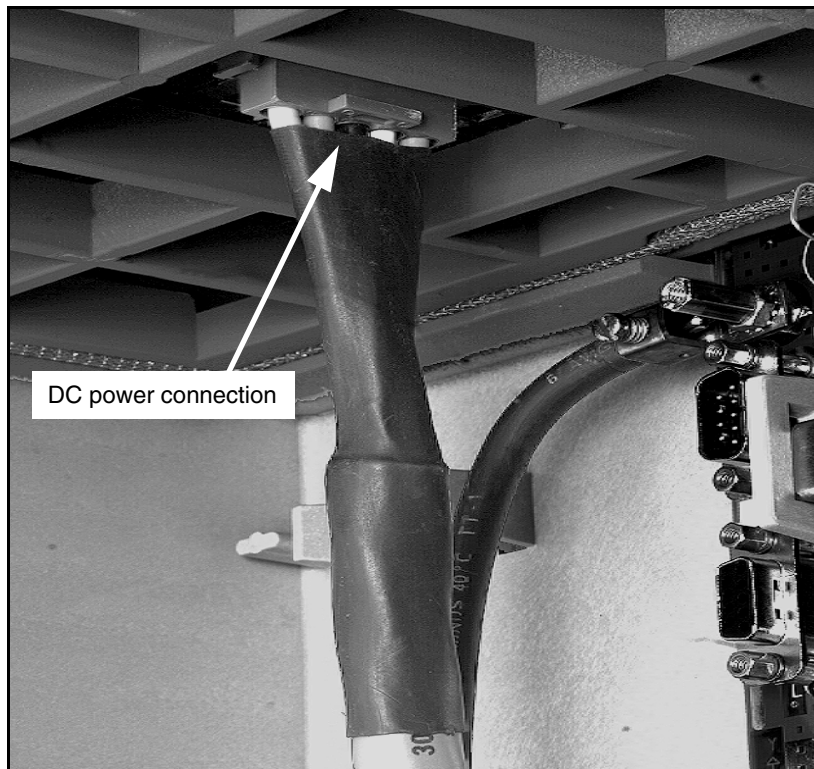Figure 60
NTDK72 dc power cable connection



- 6 Route the rest of the power cable down through the opening at the bottom of the cabinet as shown in Figure 61 on [page 169](#).

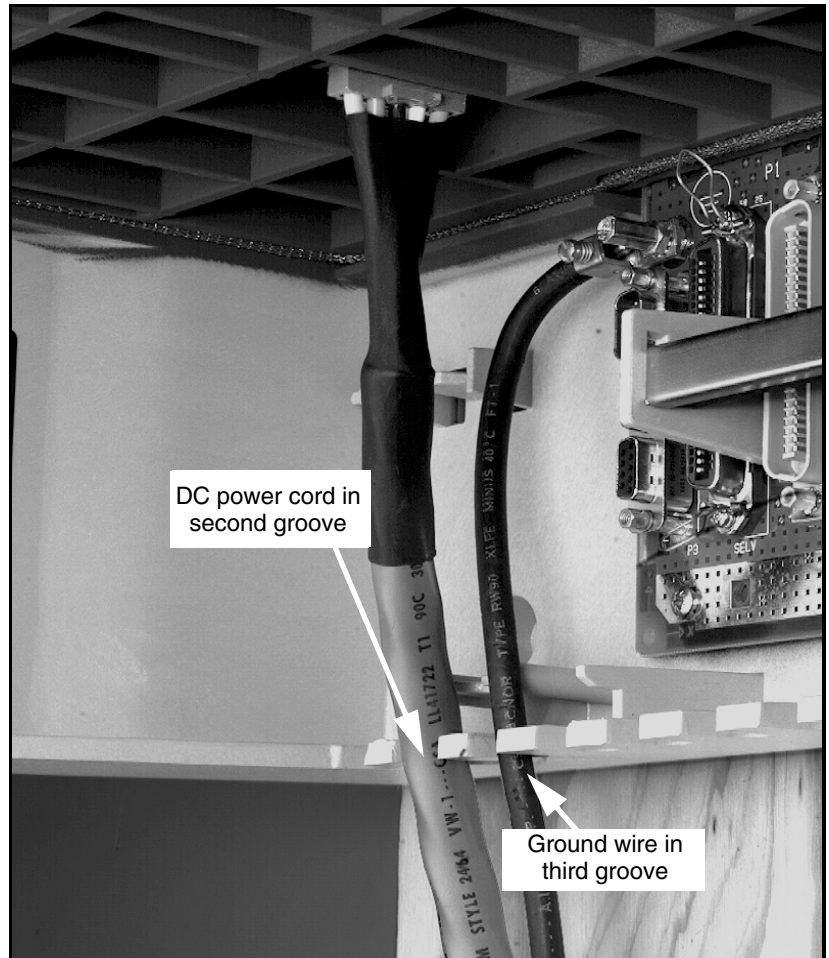Figure 61
Power cord routing




- 7 Mount the NTA28 Breaker Assembly to the wall within 3 ft (915 mm) of the cabinet it is serving. See Figure 62 on [page 170](#).


Secure the breaker assembly with four #10 1/2 in. (15 mm minimum) wood screws.

Note: One NTA28 Breaker Assembly is required for each cabinet.

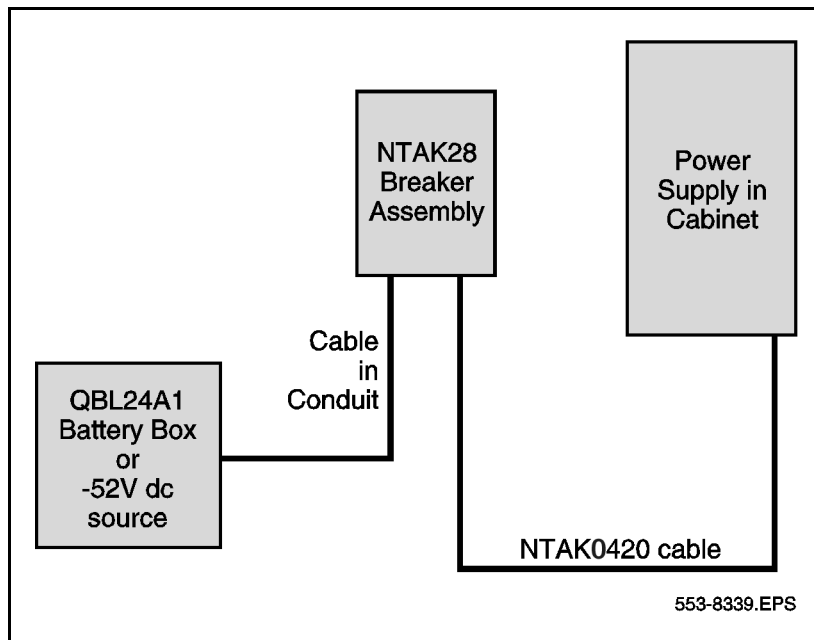Figure 62
NTAK28 Breaker Assembly location



- 8** Set the breakers on the NTAk28 Breaker Assembly and on the NTDK72 power supply to OFF.
- 9** Connect the other end of the dc power cable (NTAk0420 cable) to the connector on the dc breaker assembly.
- 10** Connect the NTAk28 Breaker Assembly to a rectifier or other dc power source as shown in Figure 63 on [page 171](#).

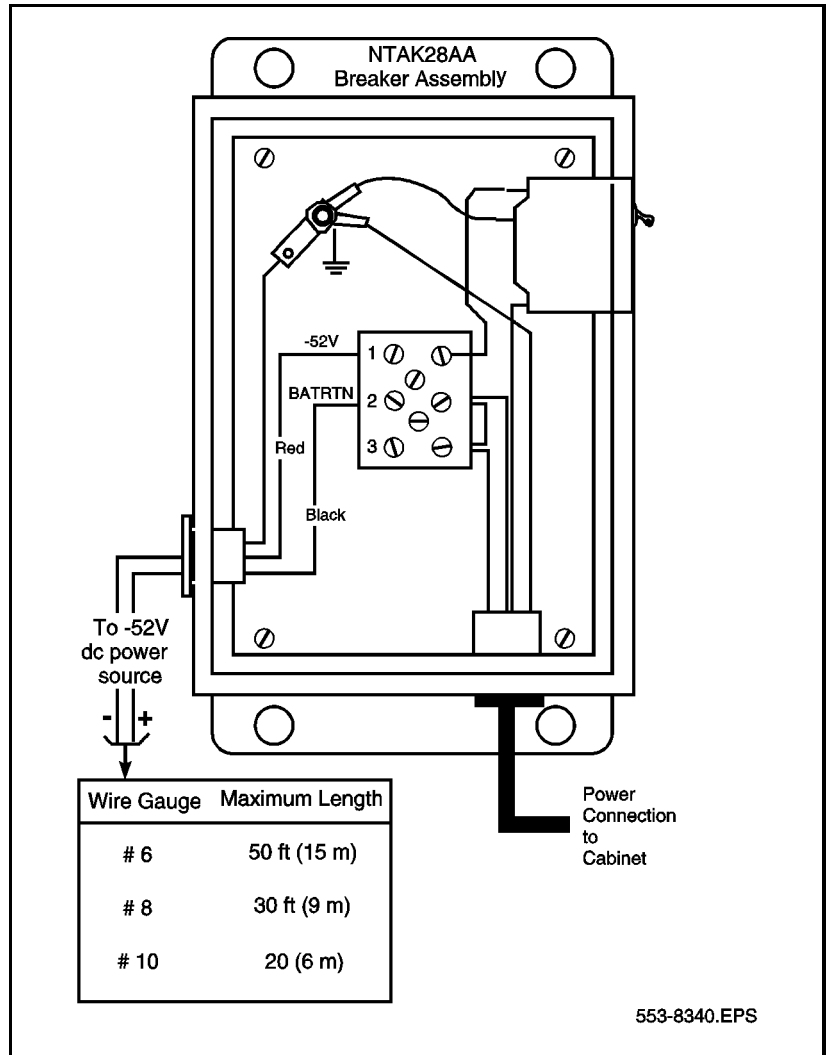Figure 63**Power connection at the NTAk28 breaker assembly****End of Procedure**

Installing and connecting reserve power supplies for the Cabinet system

Contents

This section contains information on the following topics:

Introduction	173
Types of reserve power	173
NTAK75 battery unit installation	174
NTAK76 battery unit installation	178
Connecting other battery backup systems	183

Introduction

This chapter describes how to install and connect a reserve dc power supply to Cabinet systems.

If installing a multiple-cabinet system, each cabinet must have its own reserve power supply.

Types of reserve power

The types of reserve battery power are:

- The NTAK75 battery box, which has the following features:
 - designed to be float-charged by the NTDK70 or NTDK78 ac/dc power supply

- provides a minimum of 2 hours of reserve dc power
 - mounts to the floor
 - supports one system cabinet
- The NTAK76 battery box, which has the following features:
 - designed to be float-charged by the NTDK70 or NTDK78 ac/dc power supply
 - provides a minimum of 15 minutes of reserve dc power
 - mounts to the wall
 - supports one system cabinet
- An Uninterruptible Power Supply (UPS) which will provide a continuous ac power supply. Install this unit according to the manufacturer's instructions.



CAUTION — Service Interruption

If the NTDK70 or NTDK78 ac/dc power supply is powered down while it is operating on dc reserve power from a battery backup unit, the Cabinet system cannot be powered up again until ac power is restored. Be careful not to open the circuit breaker, either on the battery backup unit or on the NTDK70 or NTDK78, while the system is operating on battery backup.

NTAK75 battery unit installation

Follow the steps in Procedure 16 on [page 175](#) to install an NTAK75 battery unit. Repeat the procedure for each system cabinet being installed.

Note: The system external ground must be installed before installing the battery backup unit.

Procedure 16

Installing the NTAK75 battery unit

- 1** Unpack the NTAK75 battery unit and place it according to the equipment layout plan.
 - The battery unit must be installed within 3 ft (915 mm) of the cabinet it is serving.
 - Install to the side of or below the cabinet, not above.
 - If installed below, the minimum clearance from the top of the NTAK75 to the bottom of the wall-mounted cabinet is 2 ft (610 mm).
 - The battery unit should be installed in an open, well-ventilated area.
 - The area must meet the following temperature limits:
Maximum allowed range: 0 to 45°C (32 to 110°F)
Recommended range: 20 to 35°C (68 to 95°F).
- 2** Remove the cover of the battery unit.

The cover is secured by two captive screws on the front of the box.
- 3** Set the switch on the top of the NTAK75 battery box to OFF.
- 4** Unpack the batteries and check the expiry dates.

If the batteries do not have the same dates, contact your supplier.




DANGER OF ELECTRIC SHOCK

The battery cells can deliver high currents when short-circuited. Make sure that you do not inadvertently short-circuit the terminals of the batteries.

- 5** Place the individual batteries into the battery box (see Figure 64 on [page 176](#)).

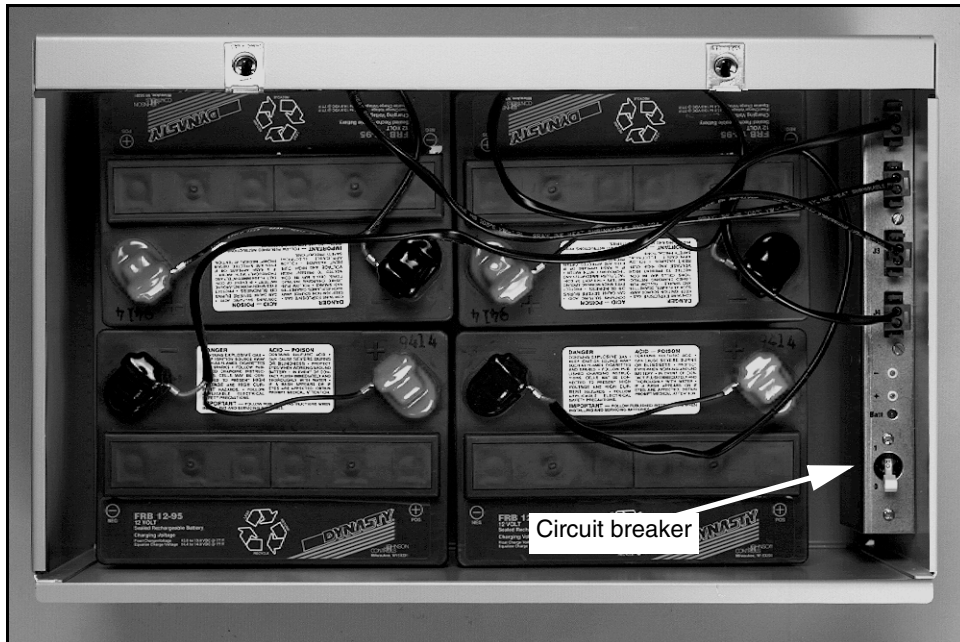Figure 64
NTAK75 battery backup — top view



- 6 Locate the four black/red jumper cables supplied with the NTAK75.
- 7 Connect the battery packs by installing the jumper cables between the +/- terminals of one battery pack to the connectors marked J1 – J4.
Any of the batteries may be attached to any connector (J1 – J4).
- 8 Ensure the jumper wires are securely fastened by pulling out on the tabs of the connector.
- 9 Switch the NTAK75 breaker to the ON position.
If the batteries are properly installed, the green LED will light. If this occurs, switch the breaker to OFF and proceed with step 10. If the LED does not light, return to Step 7 and check the wiring of the batteries.
- 10 Set the breakers on the NTAK75 and NTDK70 or NTDK78 to OFF.

- 11** Plug the NTAK0420 cable from the battery box into the power supply in the cabinet (Figure 65 on [page 178](#)).


Secure the cable with the cable retainer inside the cabinet.
- 12** Set the breaker on the NTDK70 or NTDK78 to ON. The BATT LED on the NTDK70 or NTDK78 will remain off, indicating that the battery box breaker is OFF.

The LED on the NTAK75 will light indicating that the NTAK0420 cable connections are correct.
- 13** Set the breaker on the NTAK75 to ON.

The BATT LED on the NTDK70 or NTDK78 will be lit.
- 14** Install the cover on the NTAK75.

End of Procedure

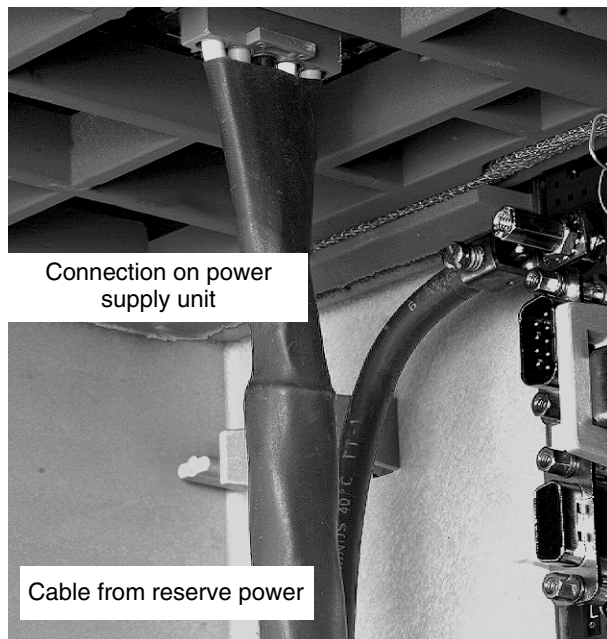Figure 65
Cable connections



NTAK76 battery unit installation

Follow Procedure 17 on [page 179](#) to install an NTA76 battery unit. Repeat the procedure for each system cabinet being installed.

Note: The system external ground must be installed before installing the battery backup unit.

Procedure 17


Installing the NTAK76 battery unit

- 1** Unpack the NTAK76 battery unit and place it according to the equipment layout plan.
 - The battery unit must be installed within 3 ft (915 mm) of the cabinet it is serving.
 - The battery unit must be installed beside or below the cabinet, not above.
 - If installed below, the minimum clearance from the top of the NTAK76 to the bottom of the wall-mounted cabinet is 2 ft (610 mm).
 - The battery unit should be installed in an open, well-ventilated area.
 - The area must meet the following temperature limits:
Maximum allowed range: 0 to 45°C (32 to 110°F)
Recommended range: 20 to 35°C (68 to 95 °F)
- 2** Remove the cover.

The cover is secured by one captive screw on the front of the box. (Refer to Figure 66 on [page 180](#).)
- 3** Mount the battery unit to the wall using the four #8 3/4 inch wood screws provided with the unit.

Install the center screw at the top of the battery unit. Level the unit and install the remaining screws.

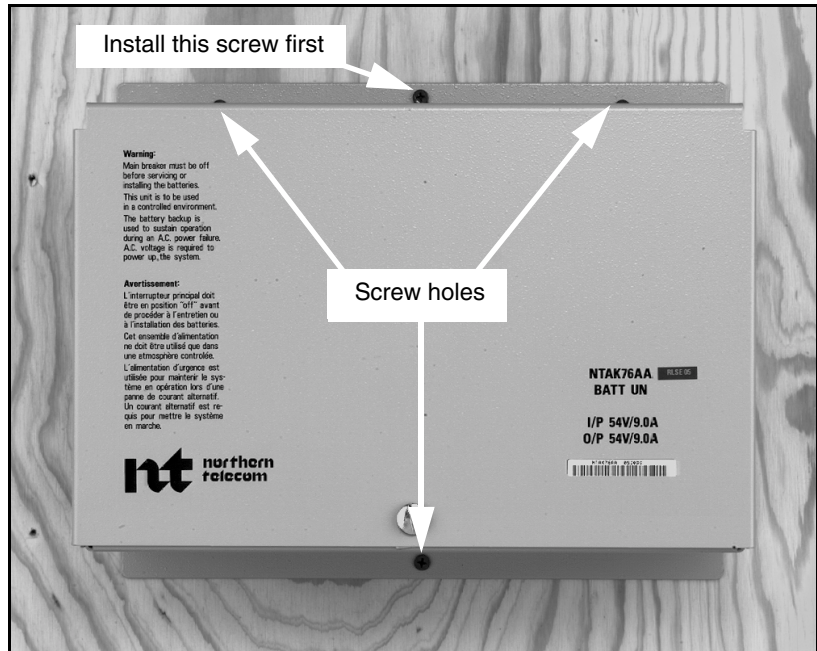Figure 66
Mounting the NTA76 battery unit to the wall



- 4 Set the switch on the front of the NTA76 battery box to OFF. (Refer to Figure 67 on [page 181](#)).



DANGER OF ELECTRIC SHOCK


The battery cells can deliver high currents when short-circuited. Make sure that you do not inadvertently short-circuit the terminals of the batteries.

- 5 Unpack the batteries and check the expiry dates.
If the batteries do not have the same dates, contact your supplier.
- 6 Place the batteries in the battery unit with the terminal end down. Hold the batteries in place with the restraining bar.

- 7 Locate the three white jumper wires and the red and black jumper cables supplied with the NTAK76 battery unit.
- 8 Connect the battery packs in series by connecting the white jumper wires between the + (red) terminal of one battery pack to the - (black) terminal of the next battery pack. (See Figure 67 on [page 181](#).)
- 9 Connect the remaining red and black jumper cable to red and black terminals of the first and fourth battery pack.
- 10 Connect the jumper cable to the NTAK76 breaker panel, marked J1.

Note: The red positive (+) wire connects to the red (+) post of battery 1. The black negative (-) wire connects to the black post (-) of battery 4. Ensure all connections are secured.

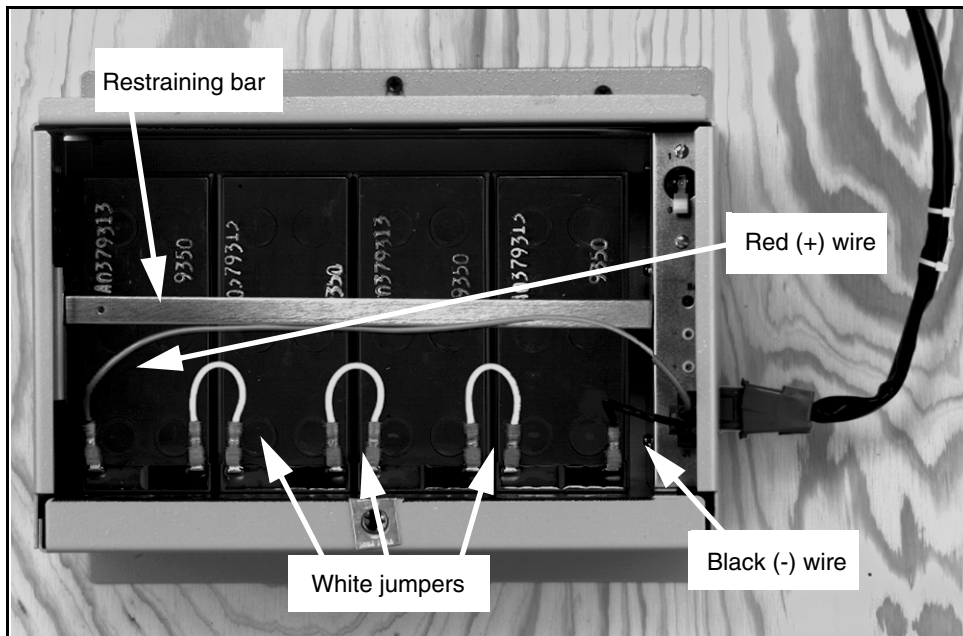Figure 67
Jumper connections



- 11** Set the breaker in the battery unit to ON to test for correct wiring.

The NTAK76 green LED (BATT) should switch on.

DC voltage can be measured between the test points whenever the green BATT LED is lit on the NTAK76. The test points are protected by high resistance: it is impossible to damage the battery unit by short-circuiting the test points to each other or to the metal case. For valid readings the test points must not be short-circuited. The following different voltage readings can be made:

- open circuit battery voltage when the NTAK0420 cable is disconnected and the NTAK76 circuit breaker is closed
- NTDK70 or NTDK78 dc output when the NTAK0420 cable is connected and the NTAK76 circuit breaker is open
- NTDK70 or NTDK78 float charge voltage when the NTAK0420 cable is connected and the NTAK76 circuit breaker is closed

- 12** Set the breaker on the NTAK76 battery unit and the breaker on the NTDK70 or NTDK78 power supply to OFF.

- 13** Plug the NTAK0420 cable from the battery box into the power supply in the cabinet. See Figure 68 on [page 183](#).

Secure the cable with the cable retainer inside the cabinet.

- 14** Set the breaker on the Small System power supply to ON.

The NTDK70 or NTDK78 BATT LED should be off and the NTAK76 LED should be on.


- 15** Set the breaker on the NTAK76 battery unit to ON.

The NTDK70 or NTDK78 BATT LED should be lit and the NTAK76 LED should be on.

- 16** Replace the cover on the system cabinet and secure the latch.

End of Procedure

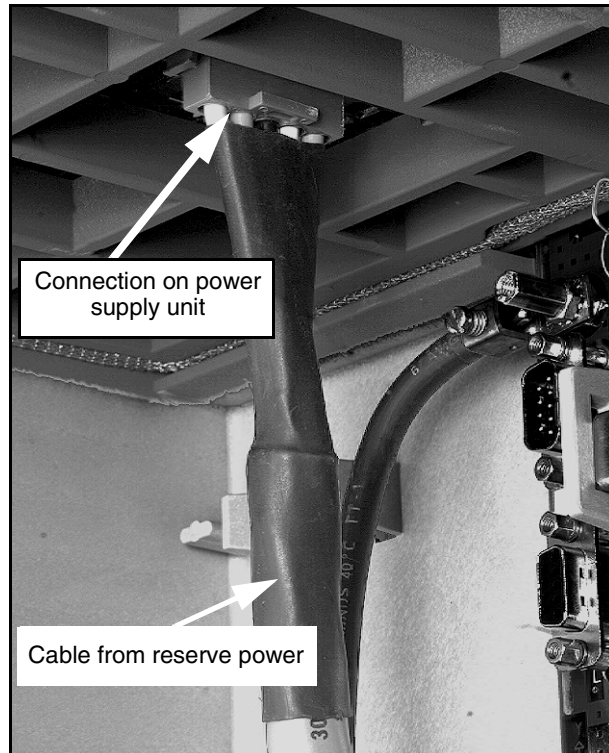Figure 68
Power cord routing



Connecting other battery backup systems

This procedure describes how to install and connect customer-supplied battery backup systems.

Charging capabilities of the Cabinet system are described in *Small System: Planning and Engineering* (553-3011-120). The system external ground must be installed before installing the battery backup.

Procedure 18
Installing other battery systems

- 1 Unpack the battery box and place it according to the equipment layout plan.
- 2 Remove its cover.
- 3 Set the switch on the battery box to OFF.
- 4 Unpack the batteries and check the expiry dates.
 If the batteries do not have the same dates, contact your supplier.




DANGER OF ELECTRIC SHOCK

The battery cells can deliver high currents when short-circuited. Make sure that you do not inadvertently short-circuit the terminals of the batteries.

- 5 Place the batteries in the battery box.
- 6 Locate the black wires supplied with the box.
- 7 Connect the battery packs in series by installing the black wires between the + (large) terminal of one battery pack to the - (small) terminal of the next battery pack.
- 8 Connect the black wire inside the battery box to the remaining positive (+) terminal and the red wire to the remaining negative (-) terminal.
- 9 Mount the NTAK28 Junction Box securely to the wall within 900 mm (36 in.) of the cabinet it is serving. See Figure 69 on [page 185](#).

Note: One NTAK28 Junction Box is required for each cabinet.

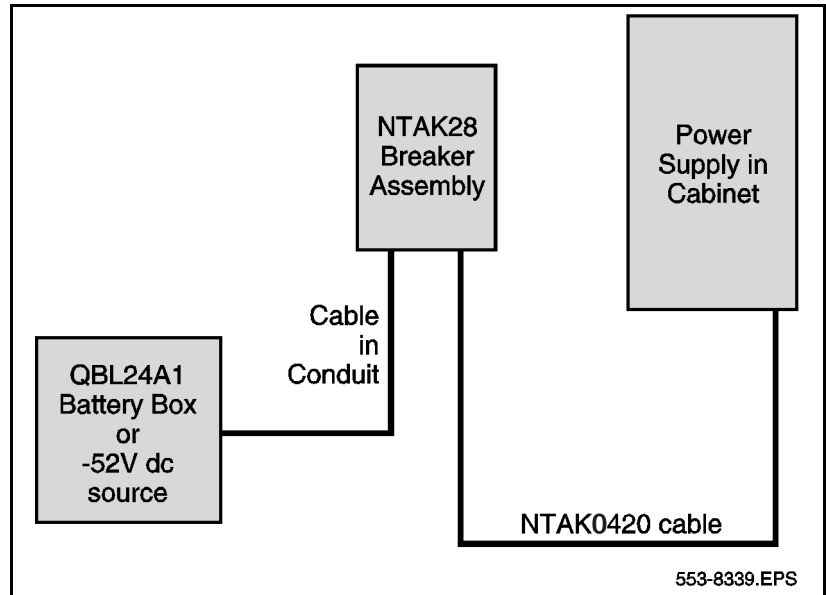
Figure 69
NTAK28 breaker assembly location



- 10 Set the breakers on the NTAK28 Junction Box and on the NTDK70 or NTDK78 power supply to OFF.
- 11 Connect the NTAK0420 cable from the NTAK28 Junction Box to the power supply in the cabinet.
Secure the cable with the cable retainer in the cabinet.
- 12 Connect the other end of the dc power cable to the connector on the NTAK28 Junction Box.
- 13 Connect the cable from the battery box to the NTAK28 Junction Box as shown in Figure 70 on [page 186](#).
- 14 Set the breakers on the NTAK28 Junction Box and on the NTDK70 or NTDK78 ac/dc power supply to ON.

End of Procedure

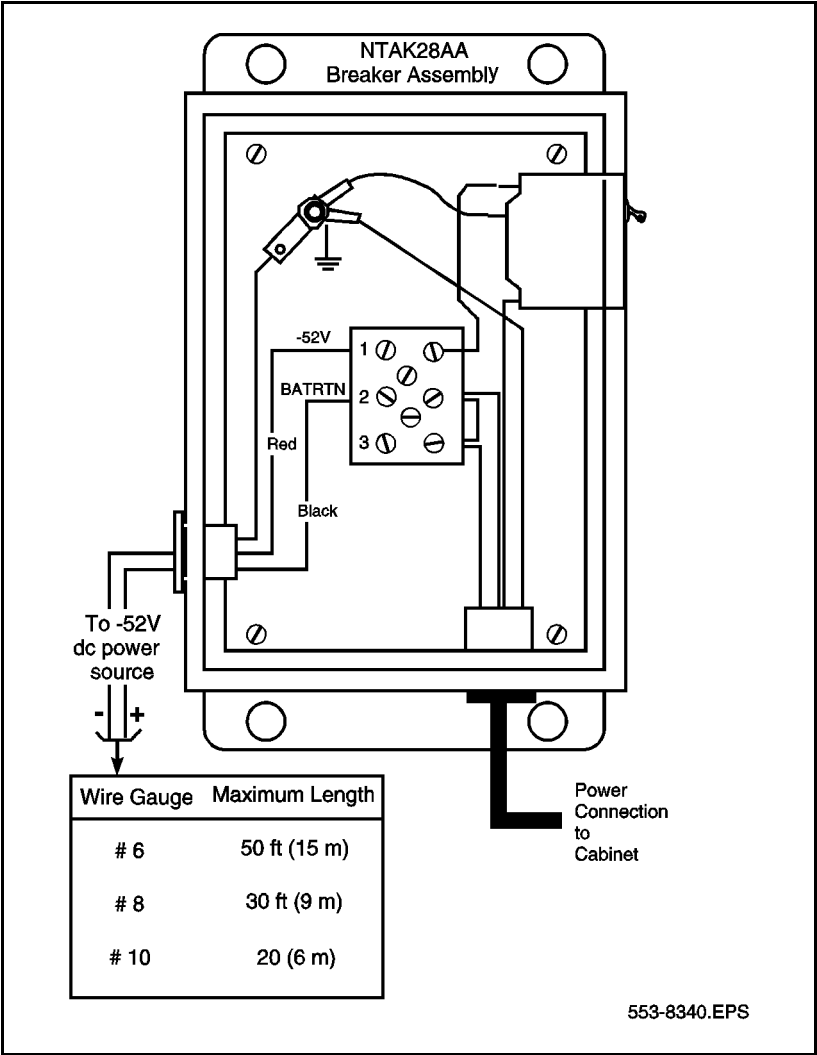Figure 70
NTAK28 circuit breaker assembly



Installing Small System Controller and Fiber Receiver cards

Contents

This section contains information on the following topics:

Introduction	187
Circuit card assignments for the Chassis system	189
Main cabinet and chassis NTDK20 SSC card installation	191
Software daughterboard and security device installation	191
Installation of expansion daughterboards and cables	193
NTDK20 SSC card installation on IP expansion cabinets and chassis	211
Software daughterboard and security device	211
IP expansion daughterboards	212
Fiber Receiver card installation on expansion cabinets and chassis	213

Introduction

This chapter describes how and where to install the Small System Controller (SSC) card required in the Small System, as well as the Fiber Receiver card required for fiber expansion cabinets and chassis. The chapter includes information relevant to the main, IP expansion, and fiber expansion cabinets or chassis.

Note: In a Succession 1000M Cabinet or Chassis system, the NTDK20 Small System Controller card is known as the Succession System Controller (SSC) card and is also referred to as the Succession Call Server.

The following procedures describe how to install the NTDK20 SSC card and the NTDK23 Fiber Receiver card:


- Procedure 19: “Installing the software daughterboard and security device” on [page 191](#)
- Procedure 20: “Installing the 100BaseT daughterboards on the SSC card” on [page 193](#)
- Procedure 21: “Installing the 100BaseF IP daughterboard on the SSC card on the main cabinet or chassis” on [page 199](#)
- Procedure 22: “Installing the single-port fiber Expansion Daughterboards on the SSC card of the main cabinet or chassis” on [page 202](#)
- Procedure 23: “Installing the dual-port fiber Expansion Daughterboards on the SSC card of the main cabinet or chassis” on [page 204](#)
- Procedure 24: “Installing the A0632902 10m plastic fiber-optic cable” on [page 207](#)
- Procedure 25: “Installing glass fiber-optic cable” on [page 210](#)
- Procedure 26: “Installing the Fiber Receiver card” on [page 213](#)

“Installing optional circuit cards” on [page 217](#) describes additional circuit cards, which are optional to the Small System.

Circuit card assignments for the Chassis system

Figure 71 on [page 189](#) and Figure 72 on [page 190](#) show the circuit card assignments for the chassis and chassis expander. Follow these diagrams to make sure that you have all circuit cards inserted in the correct slots.

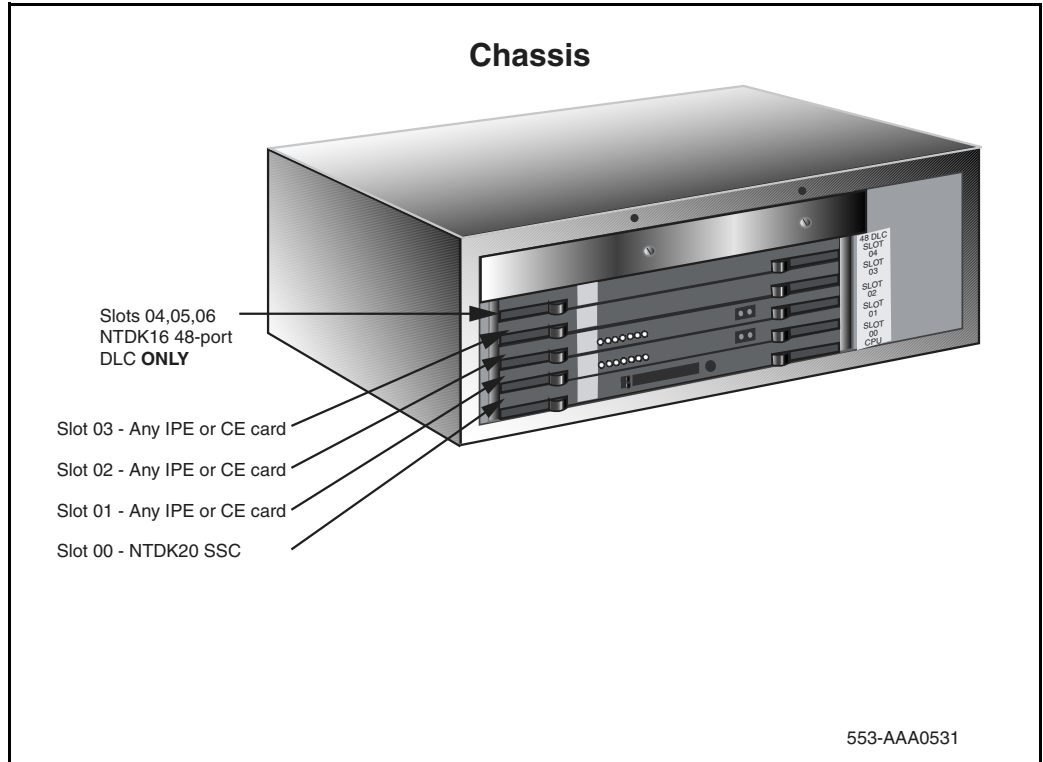
Figure 71
Circuit card assignments in the chassis



Note 1: See the card slot assignment table in the equipment layout chapter of *Small System: Planning and Engineering* (553-3011-120) for the cards that you can insert in the chassis.

Note 2: Slot 4 accepts the NTDK16 48-port DLC card only. However, you can place a double-width card in slot 3 and it can overlap into slot 4.

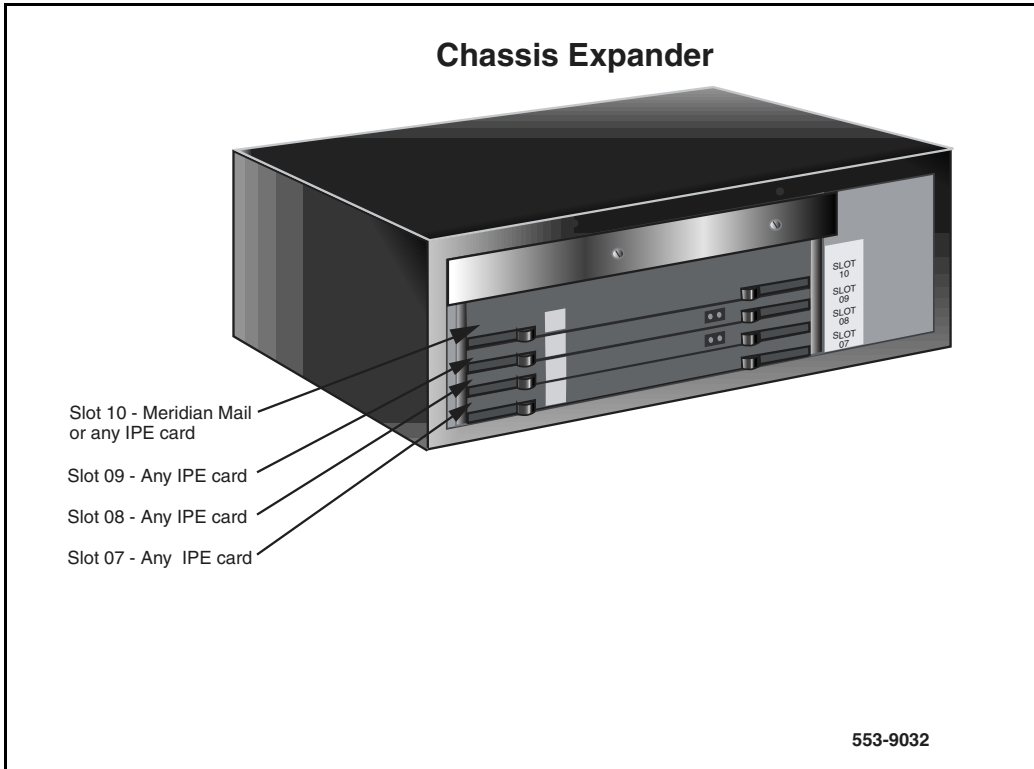Figure 72
Circuit card assignments in the chassis expander



Note 1: See the card slot assignment table in the equipment layout chapter of *Small System: Planning and Engineering* (553-3011-120) for the cards that you can insert in the chassis expander.

Note 2: To configure Meridian Mail, you must place the Meridian Mail card in slot 10 of the chassis expander. The size of Slot 10 is double that of the other slots in the chassis. Slot 10 supports Meridian Mail and other application cards that require a double slot.

Main cabinet and chassis NTDK20 SSC card installation

This section describes the steps to install a Small System Controller (SSC) card in the main cabinet or chassis of a Small System. It also describes the installation of the daughterboards, cables, and other components that are required installation on the SSC card.

Software daughterboard and security device installation



WARNING

The NTDK20 SSC card is equipped with components on both sides of the circuit board. Be careful not to damage any of the components when handling the card.


Procedure 19

Installing the software daughterboard and security device

- 1** Put on the antistatic wrist strap.
- 2** Place the SSC card on a clean flat surface.
- 3** Install the software daughterboard on the connector as shown in Figure 73 on [page 192](#).
- 4** Press firmly on the standoffs to ensure that the daughterboard is secured well to the SSC card.
- 5** Insert the security device labeled NT_STD in the socket with the device markings facing outwards, as shown in Figure 73 on [page 192](#).

End of Procedure

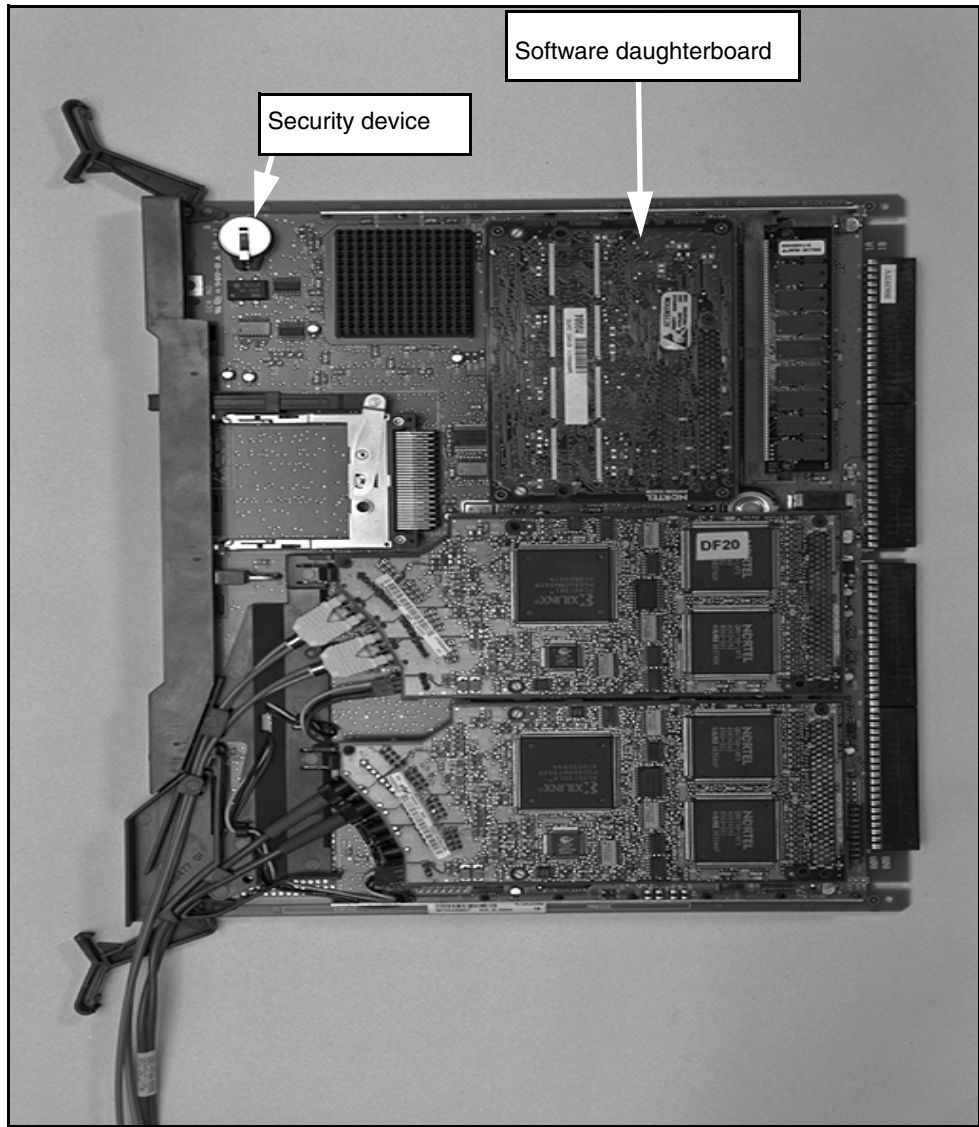Figure 73
Location of software daughterboard and security device on the NTDK20 SSC card



Installation of expansion daughterboards and cables

The following four daughterboards can be installed on the SSC card in the main cabinet or chassis:

- NTDK22/24/79 (Single mode) — single port
- NTDK84/85 — dual port
- NTDK83/99 100BaseT IP — dual/single port
- NTTK02/01 100BaseF IP — dual/single port

Two ports are available, allowing a maximum of two (single or dual) daughterboards per main SSC card.

On the SSC card of an IP expansion cabinet or chassis, an IP daughterboard must be installed.



DANGER

The fiber-optic interface product used in the Small System is considered safe. However, as a precaution do not view the optical port or the end of fiber-optic cable. Under certain conditions (such as during cable testing or under light magnification) the cable or port may expose the eye beyond the limits of Maximum Permissible Exposure recommended in some jurisdictions. Do not remove protective caps or plugs until ready to connect the cable.

Installing IP expansion daughterboards and cables on the main cabinet or chassis

Note: The cables must be installed and connected before mounting the daughterboard on the SSC.

Procedure 20

Installing the 100BaseT daughterboards on the SSC card

- 1 Put on the antistatic wrist strap.
- 2 Place the SSC card on a clean flat surface.

- 3 Replace the standoffs on the SSC card with the taller standoffs supplied with the IP daughterboard.
- 4 Record the MAC address found on the back of the daughterboard. This will be needed later to perform the software installation. See Figure 75 on [page 196](#).
- 5 Insert the male end on the NTDK8305 cable into one port on the IP daughterboard. Pull gently on the cable to make sure the connection is secure.

Note: The top connector on the SSC card is for expansion cabinets or chassis "1" and "3". The lower connector is for expansion cabinets or chassis "2" and "4".

- 6 Connect the LED cable to receptacle on daughterboard. See Figure 75 on [page 196](#) for exact location.
- 7 Mount daughterboard onto card by inserting the plastic post into designated slot on the daughterboard. See Figure 75 on [page 196](#) for exact positioning.

Note: Tip daughterboard down over the post and press down onto the two standoffs.

- 8 Firmly press daughterboard down on connector pin to secure in place.
- 9 Route expansion cable through the cable router on the SSC card.
- 10 Install EMC grounding clip.

For the Cabinet system, the EMC grounding clip is mounted on the cabinet's stiffener rail. See Figure 76 on [page 197](#) for exact positioning.

For the Chassis system, the EMC grounding clip is mounted on the fan baffle on the lower right-hand side of the chassis. See Figure 77 on [page 198](#) for exact positioning.

Note: Depending on the vintage of the cabinet, this clip may already be installed. In this case, loosen the screws that secure it to the stiffener rail and rotate the clip to an outward position.



CAUTION WITH ESDS DEVICES

The EMC grounding clip must be used to secure the contact between the cable and the metal stiffener rail. Failure to do so will compromise EMC compliance.

- 11 Insert the SSC card into slot 0 of the main cabinet or chassis. Lock card into faceplate latches.
- 12 Route NTDK8305 extension cable through EMC clip. For the Cabinet system, push cable to the left as shown in Figure 76 on [page 197](#).
- 13 Route cable through Cable Routing Guide to secure cable and tidy the installation.

Note: Be sure to wrap the cable a **minimum** of one complete loop around the Cable Routing Guide.

End of Procedure

Figure 74
NTDK83 dual-port 100BaseT daughterboard

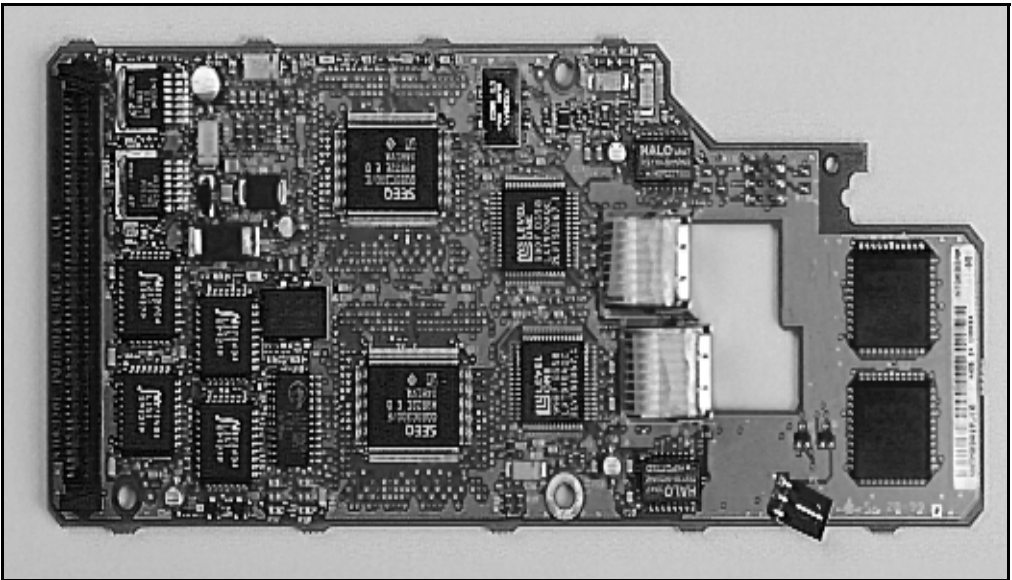


Figure 75
SSC card with 100BaseT daughterboard installed


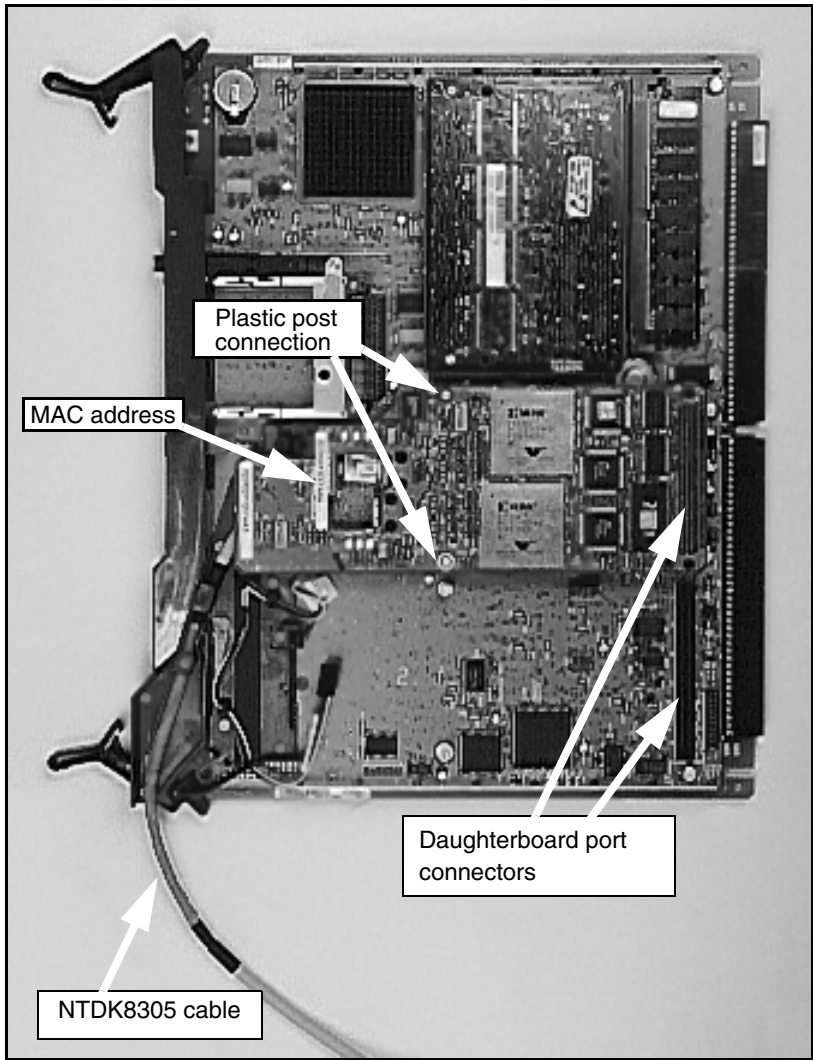



Figure 76
EMC grounding clip for the cabinet

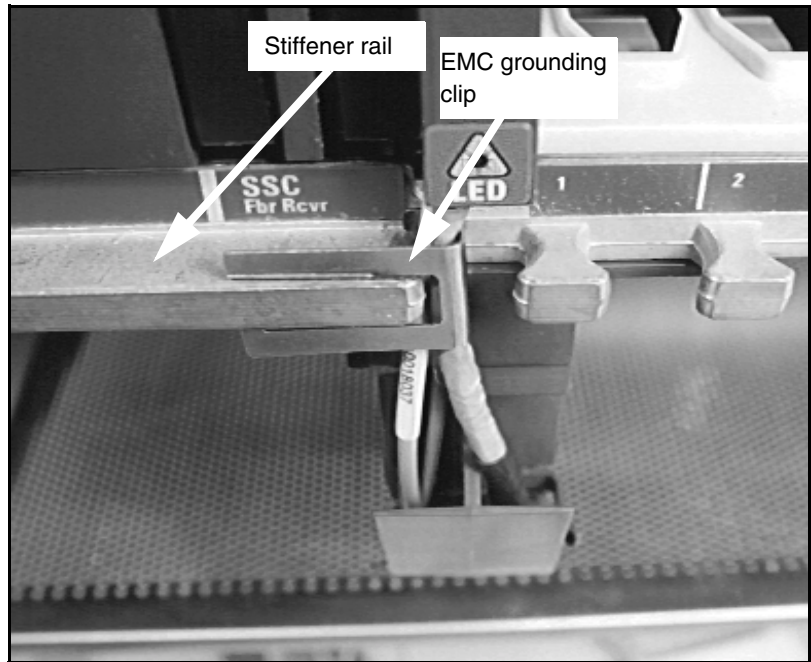

Note: The EMC grounding clip is installed on the front of the stiffener rail on the IP cabinet. There is a small #4-40 screw to fasten the clip to the stiffener rail. The 100BaseT cable is then fed through and secured in the clip.

Figure 77

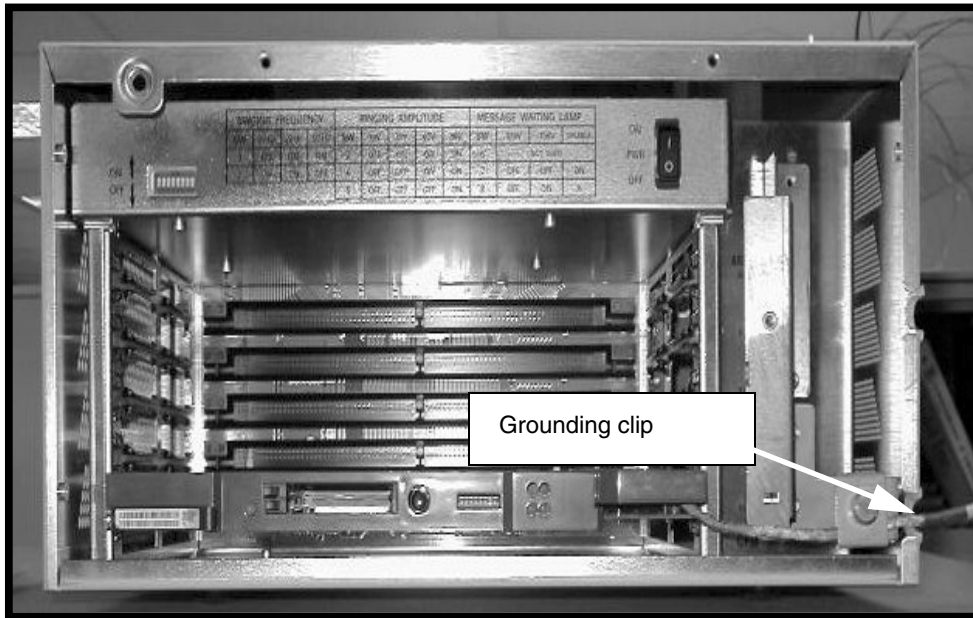
EMC grounding clip for the chassis



CAUTION WITH ESDS DEVICES

The grounding clip is required to ensure EMC compliance.

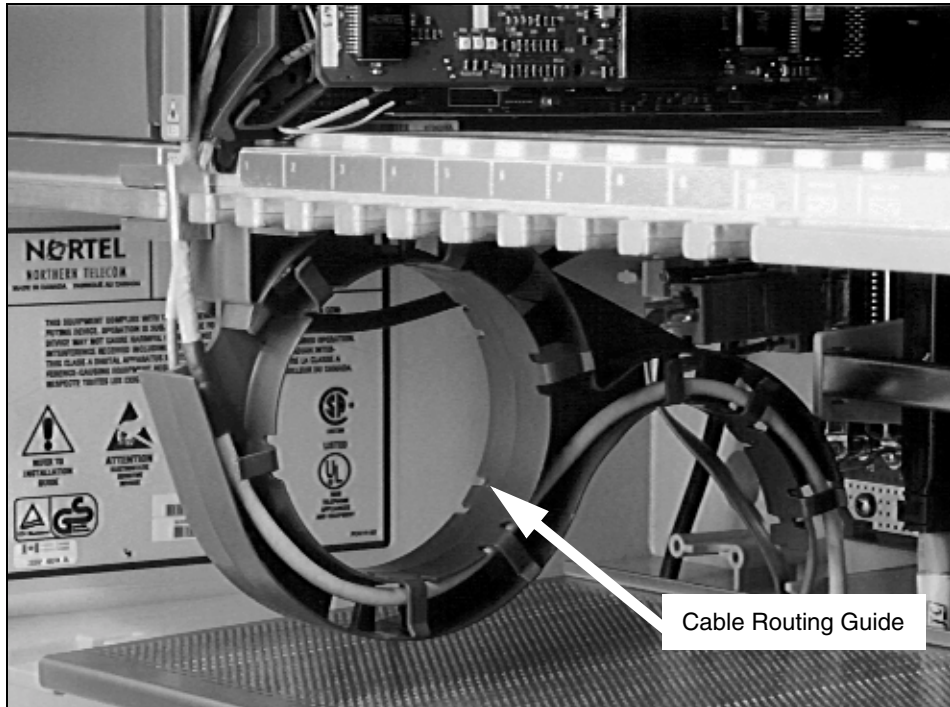Figure 78
Cable Routing Guide under main cabinet



Procedure 21

Installing the 100BaseF IP daughterboard on the SSC card on the main cabinet or chassis

- 1 Put on the antistatic wrist strap.
- 2 Place the SSC card on a clean flat surface.
- 3 Remove protective plugs from the connectors on the daughterboard.
- 4 Insert the A0817052 MT-RJ to ST cable end into the daughterboard connector. See Figure 80 on [page 202](#) for identification of cable ends.

Repeat step 4 if a second fiber connection is required.

Note 1: With new connectors, push very firmly until a definite “click” is heard. Pull gently on the connection to make sure it is secure.

Note 2: The top connector on the SSC card is for expansion cabinets or chassis “1” and “3”. The lower connector is for expansion cabinets or chassis “2” and “4”.

- 5 Replace the standoffs on the SSC card with the standoffs supplied with the IP daughterboard.
- 6 Record the MAC address found on the back of the daughterboard of the expansion cabinets or chassis. This will be needed later to perform the software installation.
- 7 Connect the faceplate LED to the 3-pin receptacle on the daughterboard. See Figure 79 on [page 201](#) for exact location.
- 8 Mount the daughterboard onto card by inserting the plastic post into designated slot on the daughterboard. See Figure 75 on [page 196](#) for exact positioning.

Note: Tip the daughterboard down over the post and press down onto the two standoffs.
- 9 Firmly press the daughterboard down on connector pin to secure in place.
- 10 Route expansion cable through the cable router on the SSC card.
- 11 Insert the SSC card into slot 0 of the main cabinet or chassis. Lock card into faceplate latches.
- 12 Route the cable through the Cable Routing Guide under the main cabinet.

Note: Be sure to wrap the cable a **minimum** of one complete loop around the Cable Routing Guide.

End of Procedure

Note: The use of the EMC clip is required for 100BaseT and is optional on 100BaseF connections.

Figure 79
NTTK02 dual-port 100BaseF daughterboard


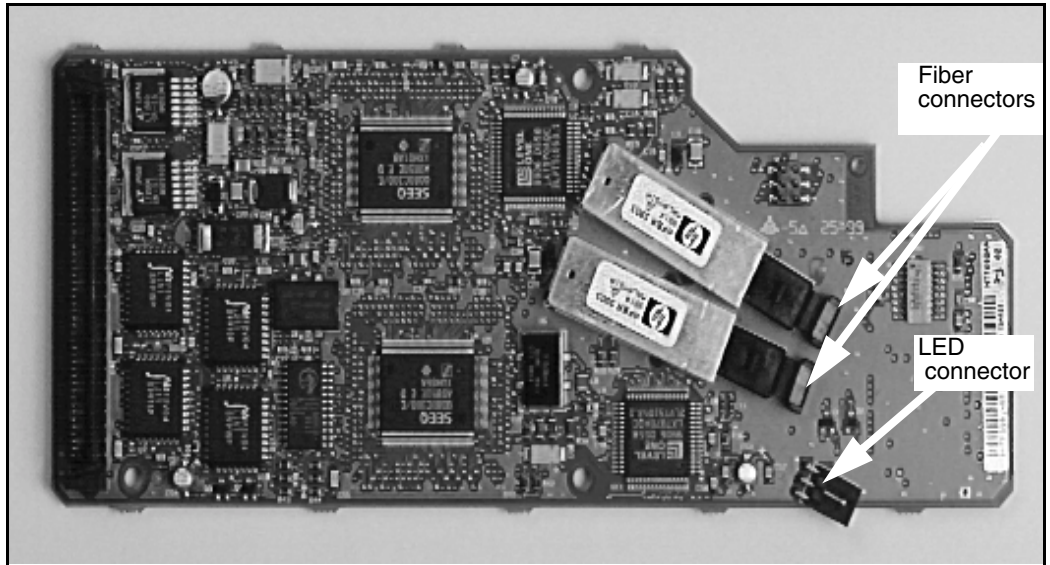


Figure 80
Cable ends and fiber coupler

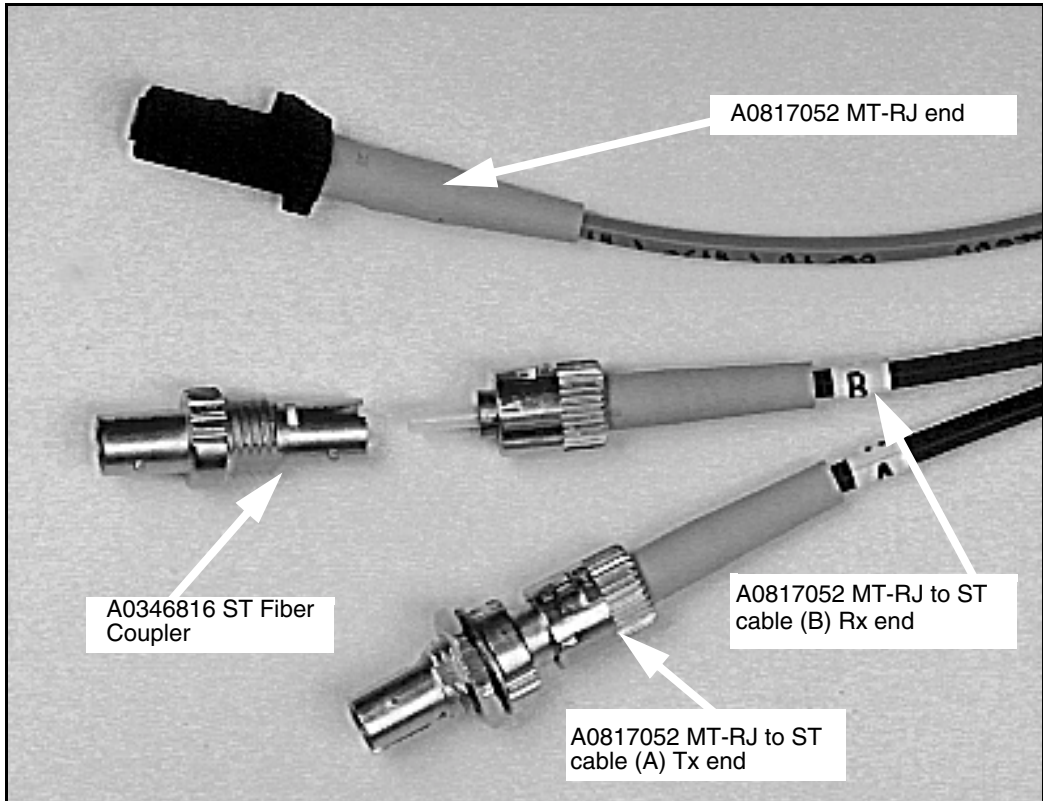

Installation of Fiber Expansion Daughterboards and cables

For non-IP expansion, a Fiber Expansion Daughterboard must be installed on the SSC card of the main cabinet or chassis, and a Fiber Receiver card must be installed in slot 0 of the expansion cabinet or chassis.

Procedure 22

Installing the single-port fiber Expansion Daughterboards on the SSC card of the main cabinet or chassis

- 1 Put on the antistatic wrist strap.
- 2 Place the SSC card on a clean flat surface.


- 3 Install the Fiber Expansion Daughterboard for expansion cabinet or chassis "1" on the upper connector.
- 4 Install the Fiber Expansion Daughterboard for expansion cabinet or chassis "2" on the lower connector.

Note 1: If using the plastic fiber cable, see Procedure 24 on [page 207](#).
Note 2: If using glass fiber-optic cable, see Procedure 25 on [page 210](#).
- 5 Press firmly on the standoffs to ensure that the daughterboards are secured to the SSC card.
- 6 Route the fiber cable through the Cable Routing Guide on the SSC card.
- 7 Insert the SSC card into slot 0 of the main cabinet or chassis.
- 8 Route the fiber cable through the Cable Routing Guide under the main cabinet.

Note: Be sure to wrap the cable a **minimum** of one complete loop around the Cable Routing Guide to allow extra cable for removing the SSC card later.

End of Procedure

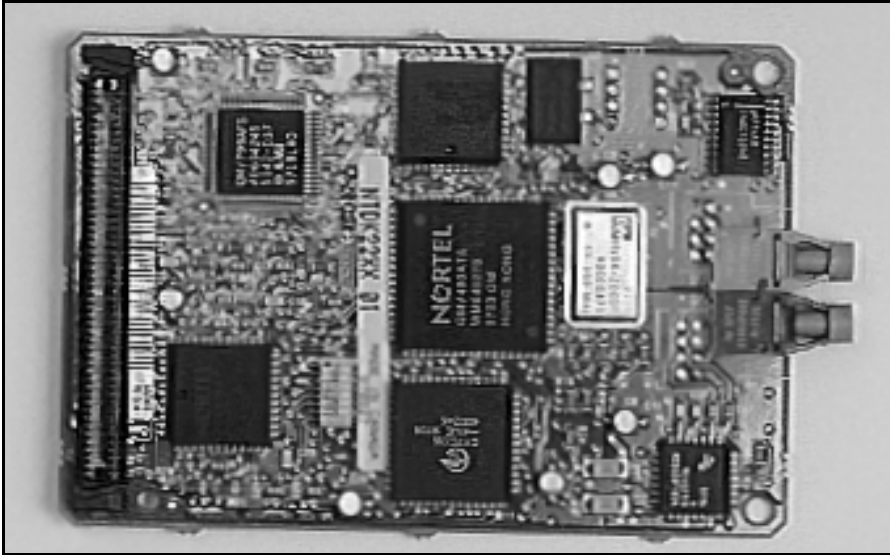Figure 81
NTDK22 single-port fiber Expansion Daughterboard



Procedure 23

Installing the dual-port fiber Expansion Daughterboards on the SSC card of the main cabinet or chassis

- 1 Put on the antistatic wrist strap.
- 2 Place the SSC card on a clean flat surface.
- 3 Install the fiber daughterboard for expansion cabinets or chassis “1” and “3” on the connector as shown in Figure 83 on [page 206](#) (the upper connector).
- 4 Install the fiber daughterboard for expansion cabinets or chassis “2” and “4” on the connector as shown in Figure 83 on [page 206](#) (the lower connector).
- 5 Connect the faceplate LED to the 3-pin header on the daughterboard. See Figure 83 on [page 206](#).
- 6 Press firmly on the standoffs to ensure that the cards are secured to the SSC.

- 7 Route the cables through the SSC cable router on the SSC card. Refer to Figure 85 on [page 209](#).
- 8 Insert the SSC card into slot 0 of the main cabinet or chassis.
- 9 Route the fiber cable through the Cable Routing Guide under the main cabinet.

Note: Be sure to wrap the cable a **minimum** of one complete loop around the Cable Routing Guide to allow extra cable for removing the SSC card later.

End of Procedure

Figure 82
NTDK84 dual-port fiber Expansion Daughterboard (10 m)


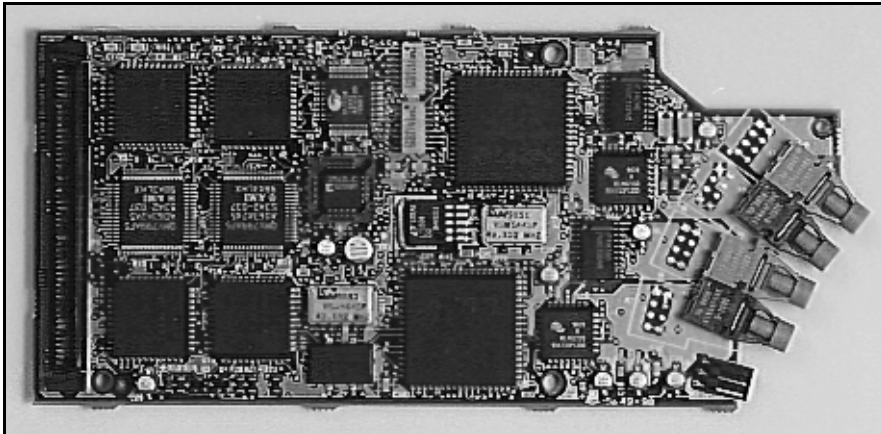


Figure 83
Cabinet or chassis assignments for dual-port daughterboards

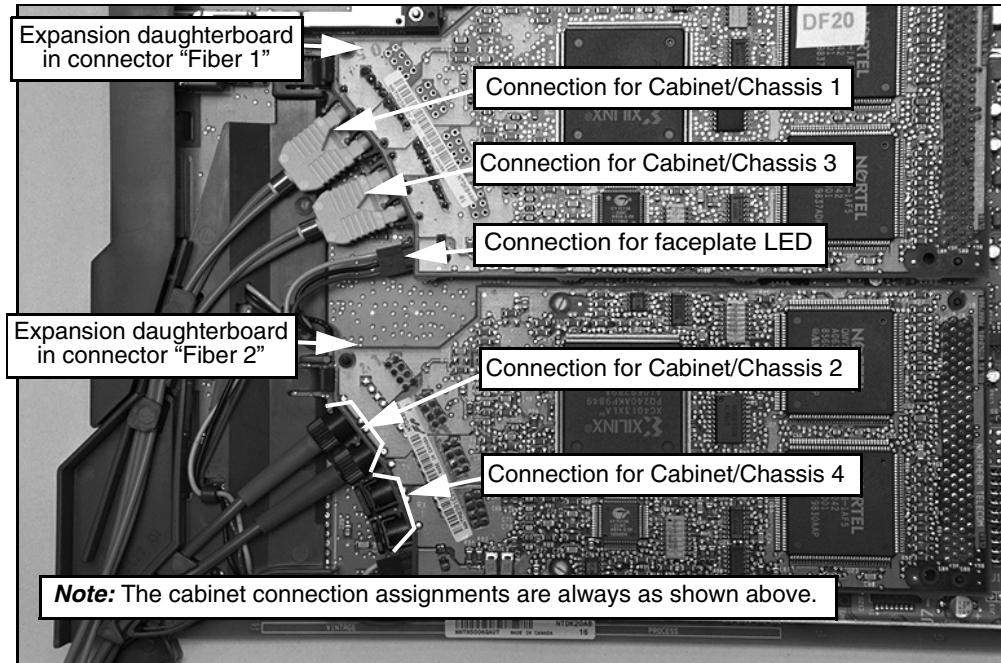

Installing Fiber Expansion Daughterboard cables

An A0632902 10 m plastic fiber-optic cable is used to connect the main cabinet or chassis to an expansion cabinet or chassis located within 10 m (33 ft) when using short-haul fiber daughterboards.

A glass fiber-optic cable, supplied and installed by a local facilities provider, can be used to connect an expansion cabinet located up to 3 km (1.8 mi) from the main cabinet when using long-haul fiber daughterboards.

Do not staple or twist fiber-optic cable. Do not bend it beyond a 35 mm bend radius (90° soft bend).

**CAUTION — Service Interruption**

Incorrectly connected fiber-optic cables may cause the following problems:

- a series of repetitive fault indicating messages
- a complete failure of the expansion cabinet

If fault indicating messages appear, check the fiber-optic cable connections.

Since messages are stored in a buffer, they may continue to be displayed until the buffer is empty. After checking the cable connections, wait a couple of minutes for the messages to stop.

Procedure 24**Installing the A0632902 10m plastic fiber-optic cable**

- 1 Put on the antistatic wrist strap.
- 2 Place the SSC card on a clean flat surface.
- 3 Remove the protective plugs from the connectors on the Fiber Expansion Daughterboard.
- 4 Connect the fiber-optic cable to the Fiber Expansion Daughterboard, making sure that the “V”-shaped groove on the cable connector is facing outward and that the connector is fully seated. See Figure 84 on [page 208](#).

The mark (if equipped) on the sides of the cable connector should not be visible when properly connected. Refer to Figure 84 on [page 208](#).

- 5 Route the fiber cable through the SSC cable router on the SSC card.
- 6 Insert the SSC card into slot 0 of the main cabinet or chassis. Lock card into faceplate latches.

- 7 Route the cables through the SSC Cable Routing Guide as shown in Figure 85 on [page 209](#).

Note: Be sure to wrap the cable a **minimum** of one complete loop around the Cable Routing Guide to allow for extra cable for removing the SSC card later.

End of Procedure

Figure 84
Plastic fiber cable connection on dual-port daughterboard


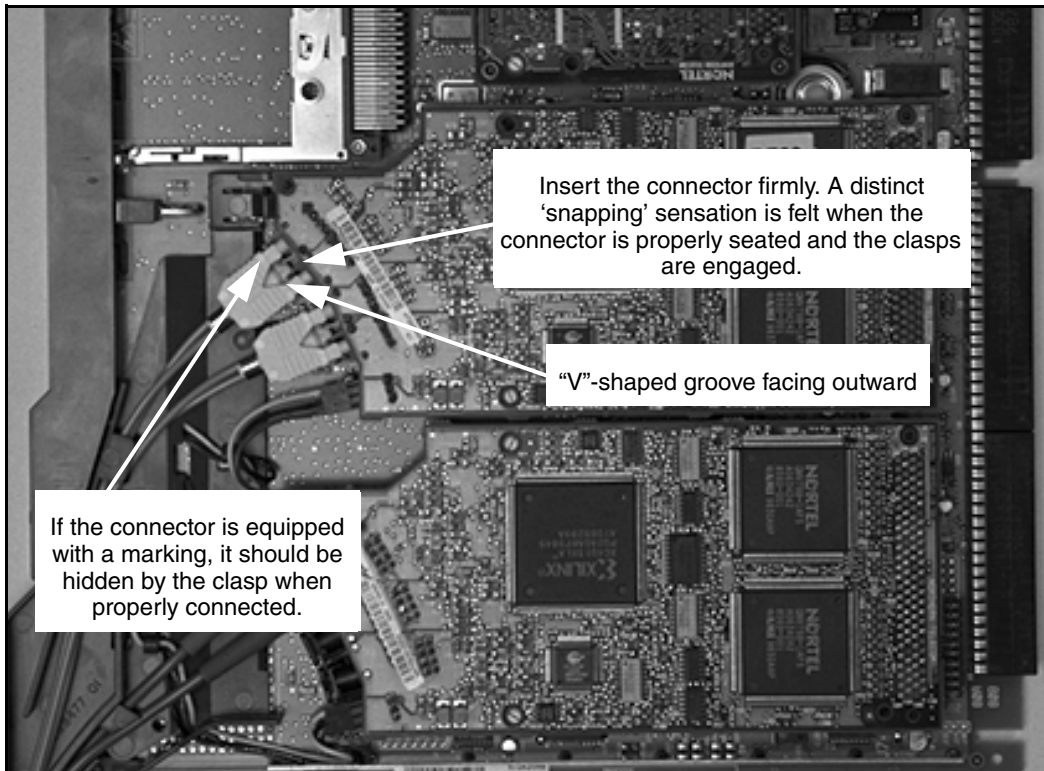



Figure 85
Fiber-optic cable connection

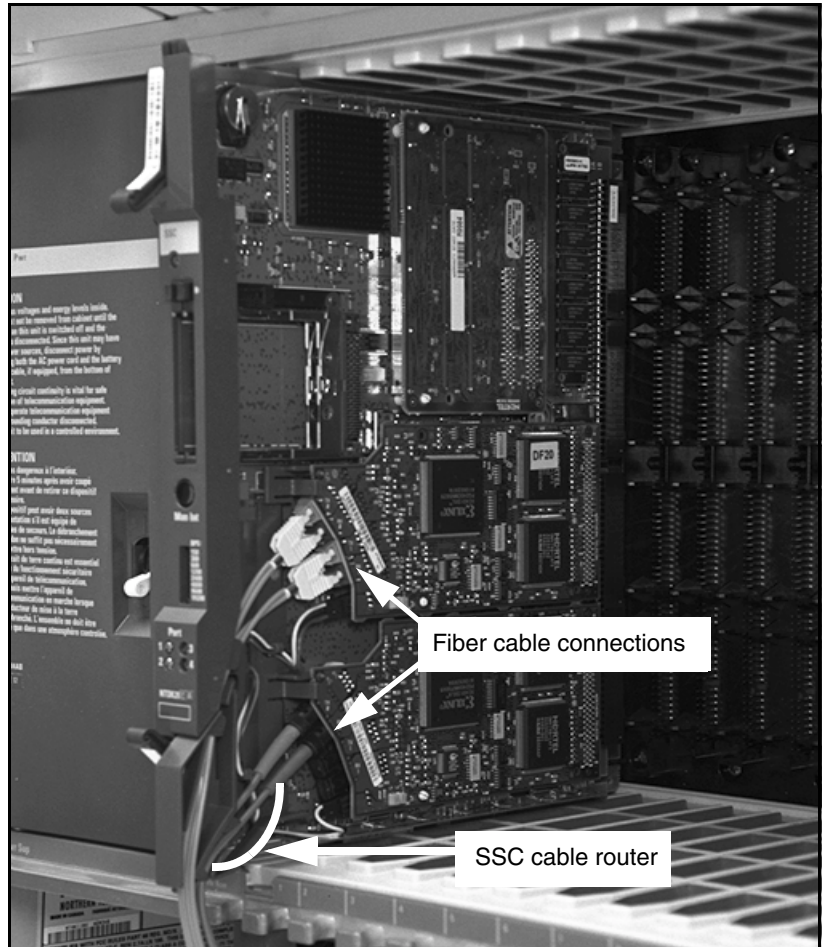

Procedure 25
Installing glass fiber-optic cable

- 1** Put on the antistatic wrist strap.
- 2** Place the SSC card on a clean flat surface.
- 3** Remove the protective plugs from one connector on the Fiber Daughterboard.
- 4** Remove the protective cap from the corresponding plug (Tx or Rx) on the glass fiber-optic cable.
- 5** Insert the plug in its designated connector on the daughterboard. Once inserted, lock the connector in place by turning it a half turn clockwise. Refer to Figure 86 on [page 211](#).
- 6** Repeat the steps above for the remaining connector and plug.
- 7** Route the fiber cables through the SSC cable router on the SSC card. Refer to Figure 86 on [page 211](#) for location of the cable router.
- 8** Insert the SSC card into slot 0 of the main cabinet or chassis. Lock card into faceplate latches.
- 9** Route the cables through the SSC Cable Routing Guide under the main cabinet as shown in Figure 78 on [page 199](#).

End of Procedure

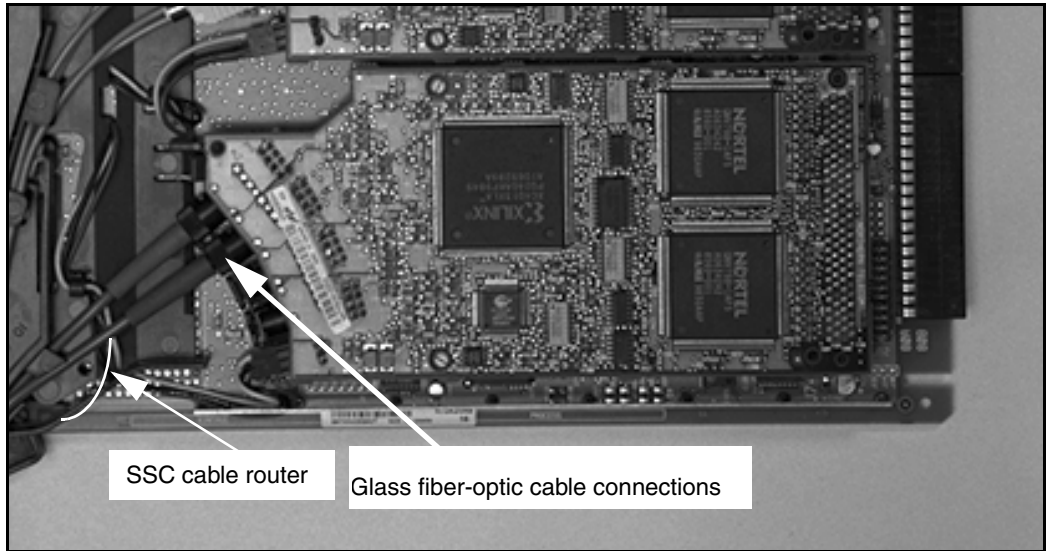Figure 86**Glass fiber-optic cable connection on dual-port daughterboard**

NTDK20 SSC card installation on IP expansion cabinets and chassis

IP expansion cabinets or chassis require an NTDK20 SSC card equipped with an IP daughterboard. The minimum vintage SSC card for an expansion cabinet is NTDK20CA; the minimum vintage for an expansion chassis is NTDK20EA. Option 11C Chassis requires minimum NTDK20EA in both main and expansion chassis. This section describes the steps necessary to install the SSC cards, daughterboards, cables, and any other components that are required on the SSC card.

Software daughterboard and security device

Refer to Procedure 19 on [page 191](#), “Installing the Software Daughterboard and security device”.

Note: While the security device on the SSC card of the IP expansion cabinet or chassis is installed as described in Procedure 19 on [page 191](#), the device itself is different. The security device for IP expansion cabinets or chassis is labelled “NT_REM” and is programmed to match the security device on the main cabinet or chassis.

IP expansion daughterboards

In an IP expansion cabinet or chassis, there are two choices of IP daughterboards:

- NTDK99 100BaseT — single port
- NTTK01 100BaseF — single port

The installation of these daughterboards is the same as described in Procedures 20 and 21 for the SSC card on the main cabinet or chassis, with the following notable exceptions:

Note 1: The IP daughterboard must be installed in the lower (i.e., port 2/4) expansion connector on the SSC card to ensure clock synchronization.

Note 2: Record the MAC address and associated expansion cabinet or chassis number, to be used later in the software configuration.

Note 3: Do not connect the SSC faceplate LED.

- To install the 100BaseT single-port daughterboard refer to Procedure 20 on [page 193](#).
- To install the 100BaseF single-port daughterboard refer to Procedure 21 on [page 199](#).

Fiber Receiver card installation on expansion cabinets and chassis

Fiber expansion cabinets or chassis require an NTDK23 Fiber Receiver card. This section describes the steps necessary to connect the cables and install the Fiber Receiver card.

Procedure 26 **Installing the Fiber Receiver card**

- 1 Put on the antistatic wrist strap.
- 2 Place the Fiber Receiver card on a clean flat surface.
- 3 Remove the protective plugs from the connectors on the Fiber Receiver card.
- 4 Install the fiber-optic cable:
 - To install the 10 m plastic fiber-optic cable, refer to Figure 87 on [page 214](#).
 - To install glass fiber-optic cable, refer to Figure 88 on [page 215](#).
- 5 Insert the Fiber Receiver card in slot 0 of the expansion cabinet or chassis, as shown in Figure 89 on [page 216](#).
- 6 Route the fiber-optic cable around the Cable Routing Guide as shown in Figure 89 on [page 216](#).

Note: Be sure to wrap the cable a **minimum** of one complete loop around the guide. This ensures sufficient cable for removing the Fiber Receiver card later.

End of Procedure

Figure 87
Plastic fiber-optic connection on Fiber Receiver card

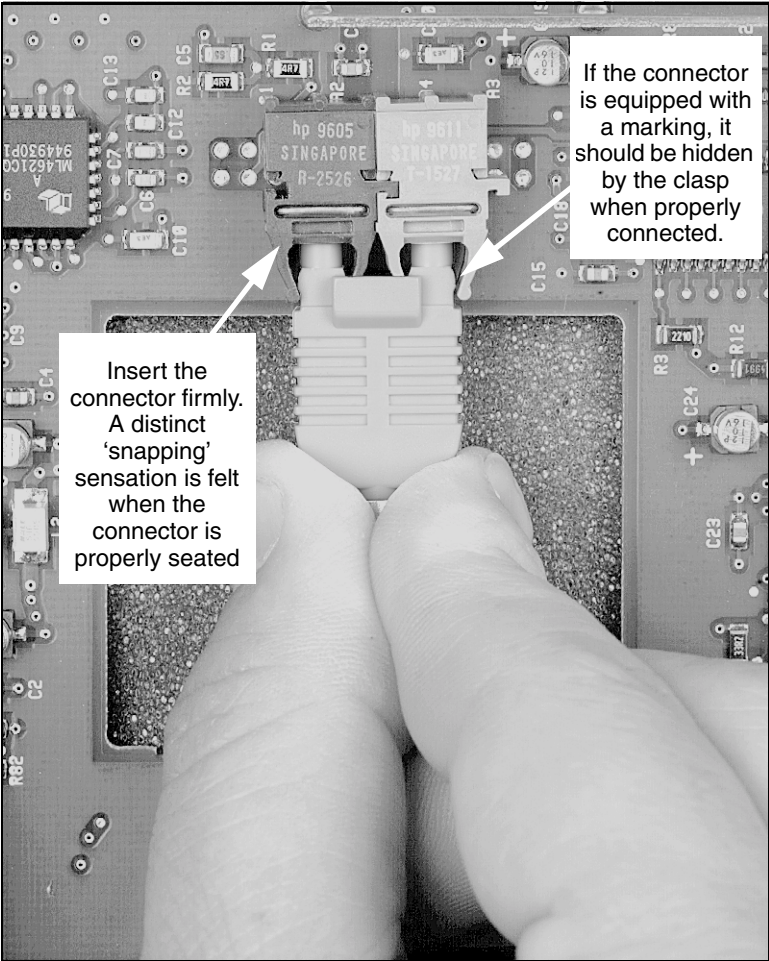



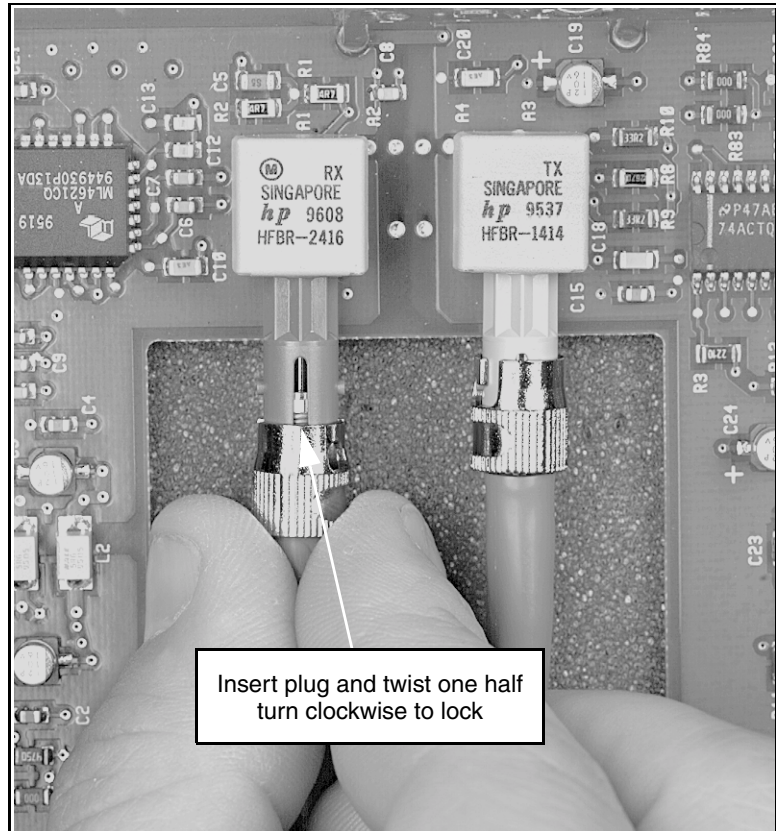
Figure 88**Glass fiber-optic connection on Fiber Receiver card**

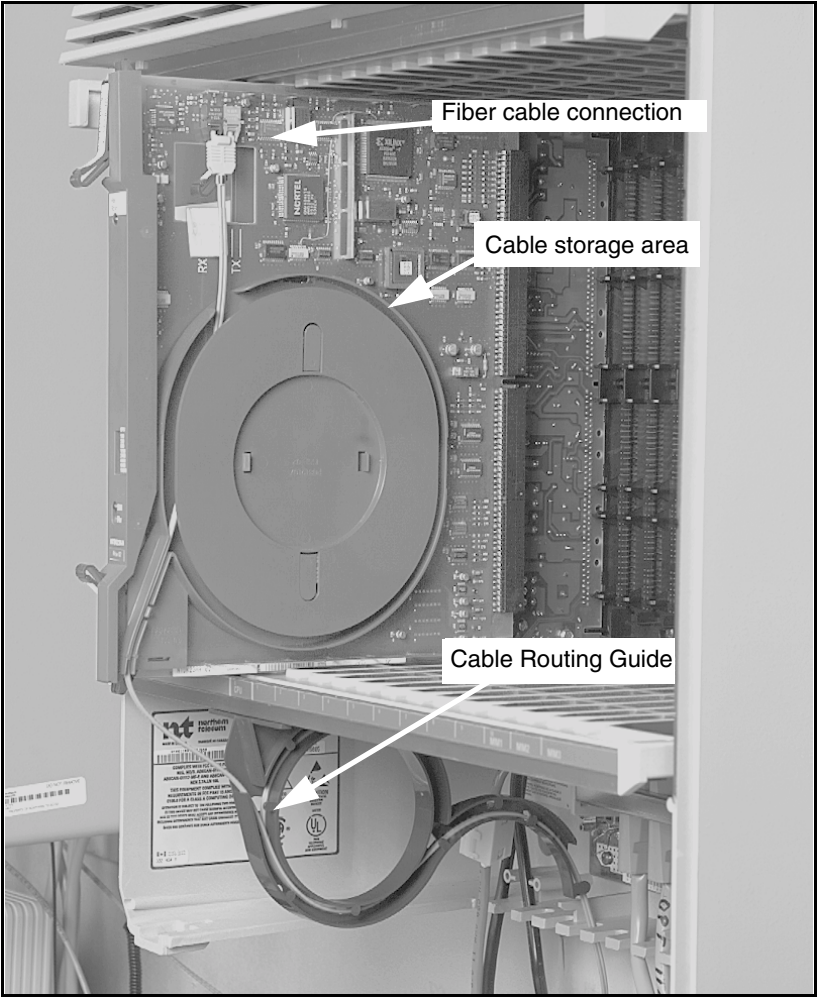Figure 89
Fiber Receiver card in slot 0 of the fiber expansion cabinet



Installing optional circuit cards

Contents

This section contains information on the following topics:

Introduction	217
Circuit cards	219
NTAK02 SDI/DCH card	219
NTAK03 TDS/DTR card	221
NT8D14 Universal Trunk card	222
NT8D15 E&M Trunk card	224
NTAG26 XMFR card	225
NT5K21 XMFC card	226
NT1R20 Off-Premise Station analog line card	226
NTDK16 48-port Digital Line Card	230
NT8D02 Digital Line Card	232
Digital Trunk cards	233


Introduction

This chapter describes how and where to install various circuit cards available for use in Small Systems. This chapter does not include information on the NTDK20 Small System Controller (SSC) card or the Fiber Receiver cards. For information on these cards, refer to “Installing Small System Controller and Fiber Receiver cards” on [page 187](#).

Figure 71 on [page 189](#) and Figure 72 on [page 190](#) show the circuit card assignments for the chassis and chassis expander. Follow these diagrams to make sure that you have all circuit cards inserted in the correct slots.

Refer to the card slot assignments in the equipment layout chapter of *Small System: Planning and Engineering* (553-3011-120) for additional information on where to place circuit cards.

Refer to *Circuit Card: Description and Installation* (553-3001-211) for full descriptions of country-specific IPE cards and their installation procedures.




CAUTION WITH ESDS DEVICES

Always handle circuit cards with caution to avoid damage caused by static electricity. Always store circuit cards that are not in use in an antistatic bag or the original packaging.

Wear an antistatic wrist strap, such as the one shown in Figure 90, when handling circuit cards. Static electricity can damage circuit card components.

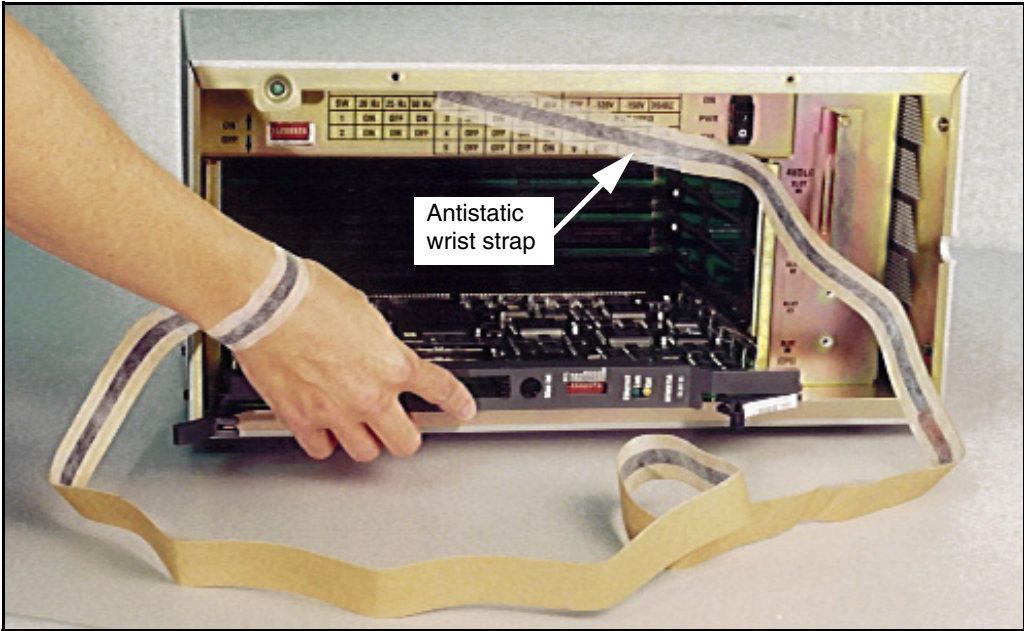Figure 90
Antistatic wrist strap



Circuit cards

A circuit card displaying a symbol of a switch on its faceplate is equipped with option switches or strapping plugs or both. Other circuit cards, such as the NTDK20 SSC card, are capable of mounting daughterboards and other add-on devices. Refer to “Installing Small System Controller and Fiber Receiver cards” on [page 187](#) for information on installing the NTDK20 card.

The following circuit cards are commonly used in the Small System. A complete list of circuit cards requiring settings can be found in *Circuit Card: Description and Installation* (553-3001-211).

NTAK02 SDI/DCH card

Before inserting the NTA02 SDI/DCH card into its slot, you must set the switches and attach the jumper plugs.

Note 1: In a Cabinet system, this circuit card can be installed in both the main cabinet and IP expansion cabinets. In a Chassis system, install this circuit card in the chassis only.

Note 2: Only DCH is supported in IP expansion cabinets. ESDI, AML, and TTY are not supported.

The NTA02 SDI/DCH switches allow you to configure the four SDI ports on the main cabinet or chassis as a combination of the following:

- SDI
- ESDI, or
- DCH/DPNSS

The NTA02 SDI/DCH card uses jumper plugs to configure the RS232/RS422 interfaces as one of the following:

- DTE
- DCE

Procedure 27
Installing the NTAK02 circuit card

- 1 Set the switches and jumper plugs for the NTAK02 SDI/DCH card according to Tables 21 to 23.

Table 21
Switch settings (Ports 0 and 1)

Port 0	Port 1	SW 1-1	SW 1-2
SDI	DCH	OFF	OFF
SDI	DPNSS	OFF	ON
—	ESDI	ON	ON

Table 22
Switch settings (Ports 2 and 3)

Port 2	Port 3	SW 1-3	SW 1-4
SDI	DCH	OFF	OFF
SDI	DPNSS	OFF	ON
—	ESDI	ON	ON

Table 23
Jumper settings

Port	Jumper location	Strap for DTE	Strap for DCE	Jumper location	RS422	RS232
Port 0	J10	C - B	B - A			
Port 1	J7 J6	C - B C - B	B - A B - A	J9 J8	C - B C - B	B - A B - A
Port 2	J5	C - B	B - A			
Port 3	J4 J3	C - B C - B	B - A B - A	J2 J1	C - B C - B	B - A B - A

2 Insert the card in its assigned slot.

You can install the NTAK02 SDI/DCH card in:

- slots 1 through 10 of the cabinet
- slots 1 to 3 of the chassis

3 Connect an NTAK19FB four port cable (or an NE-A25B cable) from the corresponding connector at the back of the chassis. If you use an NE-A25B cable, terminate this cable at the cross-connect terminal. Because the NTAK19FB cable is equipped with connectors, it does not require termination at the cross-connect terminal.

End of Procedure

NTAK03 TDS/DTR card

The NTDK20 SSC card provides the NTAK03 TDS/DTR card functionality. However, the TDS/DTR card can coexist with the SSC card if you wish to access extra TDS/DTR units or SDI ports. These functions must be manually programmed in the software overlays.

Note: The system may not operate properly if an NTAK03 circuit card is installed in a slot connected to telephones. Refer to “Installing and connecting cross-connect terminals” on [page 235](#), to connect an NTAK03 circuit card to the cross-connect terminal.

Procedure 28
Installing the NTAK03 card

- 1 Insert the card in its assigned slot.

You can insert the NTAK03 TDS/DTR card into:

- any of the card slots 1 through 9 of the cabinet
- card slots 1 to 3 of the chassis

- 2 Connect an NTAK19 cable (or an NE-A25B cable) from the corresponding connector at the back of the cabinet or chassis. If you are using an NE-A25B cable, terminate this cable at the cross-connect terminal. Because the NTAK19 cable is equipped with connectors, it does not have to be terminated at the cross-connect terminal.

End of Procedure

NT8D14 Universal Trunk card

The Universal Trunk card provides eight analog trunks which can function in the modes shown in Table 24.

You can install this line card in:

- slots 1 through 10 in the main cabinet or slots 11 through 30 in the expansion cabinets
- slots 1 through 3 in the chassis or slots 7 through 10 in the chassis expander

Procedure 29**Installing the Universal Trunk card**

- 1 Set the jumpers for the NT8D14 Universal Trunk circuit card according to Table 24.

Table 24**NT8D14 Universal Trunk — modes and option settings**

Modes	Location	Jumper strap
Central (CO)	J1, J2	OFF
2-way TIE trunk (loop Dial Repeat)	J1, J2	OFF
2-way TIE trunk (Outgoing Incoming Dial)	J1, J2	OFF
Recorded Announcement (RAN)	J1, J2	OFF
Paging trunk	J1, J2	OFF
Japan CO/DID operation	J1, J2	OFF
DID operation Loop length > 2000 ohms	J1, J2	ON
DID operation Loop length < 2000 ohms	J1, J2	OFF
OFF indicates no strap present. J1 and J2 locations apply to all 8 trunks.		

- 2 Insert the card in its assigned slot.

End of Procedure

NT8D15 E&M Trunk card

The E&M trunk card provides four trunks which can function as 2W E&M, 4W E&M, and Paging.

You can install this card in:

- slots 1 through 10 in the main cabinet or slots 11 through 30 in the expansion cabinets
- slots 1 through 3 in the chassis or slots 7 through 10 in the chassis expander

Procedure 30

Installing the E&M Trunk card

- 1 Set the switches for the NT8D15 E&M trunk circuit card according to Table 25.

Table 25

NT8D15 E&M Trunk card option settings

Mode of operation	J2	J9
4W — Type 1	ON	connect pins 2 - 3
4W — Type 2	ON	connect pins 2 - 3
2W — Type 1	ON	connect pins 2 - 3
Paging trunk	ON	connect pins 2 - 3

- 2 Insert the card in its assigned slot.

End of Procedure

NTAG26 XMFR card

The NTDK20 SSC card provides the functionality of the Extended Multi-Frequency Receiver (XMFR) card. However, this card can exist with the SSC card if you want to access additional XMFR capability.

The XMFR card receives MF digit information. Connections are made between a PBX and a CO. Through the IPE MF Receiver, the Small System supports features such as Automatic Number Identification (ANI), Meridian 911 (M911), and Feature Group D (FGD).

Procedure 31 **Installing the XMFR card**

- 1 Insert the NTAG26 card in its assigned slot.

You can install this card in:

- slots 1 through 10 in the main cabinet or slots 11 through 30 in the expansion cabinets
- slots 1 through 3 in the chassis or slots 7 through 10 in the chassis expander

- 2 Configure and enable the card through LDs 13 and 34.

Note: After the card is enabled, the LED will flash three times to indicate it is conducting a self-test. If the LED remains lit, then the self-test has failed.

End of Procedure

NT5K21 XMFC card

The NTDK20 SSC card provides the functionality of the Extended Multi-Frequency Compelled Sender/Receiver (XMFC) card. However, the XMFC card can coexist with the SSC card if you wish to access extra XMFC capability.

The XMFC card provides four channels of R2 Standard signaling capability.

Procedure 32 **Installing the XMFC card**

- 1 Insert the NT5K21 card in its assigned slot.

You can install this card in:

- slots 1 through 10 in the main cabinet or slots 11 through 30 in the expansion cabinets
- slots 1 through 3 in the chassis or slots 7 through 10 in the chassis expander

- 2 Configure and enable the card through LDs 13 and 34.

Note: After the card is enabled, the LED will flash three times to indicate it is conducting a self-test. If the LED remains lit, then the self-test has failed.

End of Procedure

NT1R20 Off-Premise Station analog line card

The Off-Premise Station (OPS) analog line card provides eight OPS lines. You can install this card in:

- slots 1 through 10 in the main cabinet or slots 11 through 50 in the expansion cabinets
- slots 1 through 3 in the chassis or slots 7 through 10 in the chassis expander


Procedure 33**Installing the OPS analog line card**

- 1 Set the jumpers on the NT1R20 OPS card.

Each line interface unit on the card is equipped with two jumper blocks that are used to select the proper loop current, depending upon loop length. Refer to Table 26 on [page 228](#) and Figure 92 on [page 229](#).

For units connected to loops of 460 to 2300 ohms, both jumper blocks for that unit must have jumper straps installed. For loops that are 460 ohms or less, jumper straps are not installed.

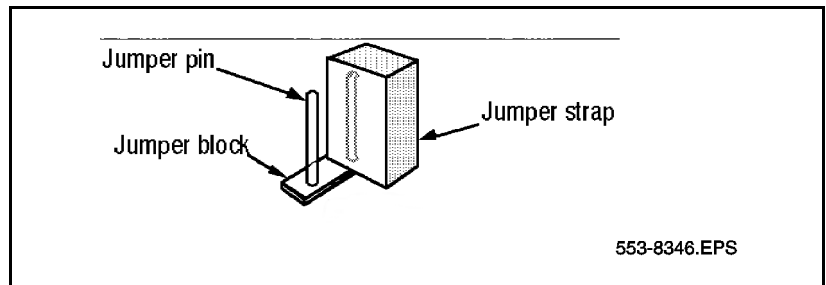Figure 91
Set the jumpers



- 2 Insert the OPS card in its assigned slot.
- 3 Cross-connect off-premise telephones as described in "Connecting off-premise telephones" on [page 339](#).

Refer to Figure 93 on [page 230](#) for cross-connection information for the OPS card.

End of Procedure

Table 26 provides OPS analog line card configuration information.

Table 26
OPS analog line card configuration

Application	On-premise station (ONS)			Off-premise station (OPS)			
Class of service (Note 1)	ONS			OPS			
Loop resistance	0–460 ohms			0–2300 ohms			
Jumper strap setting (Note 6)	Both JX.0 and JX.1 off			Both JX.0 and JX.1 off		Both JX.0 and JX.1 on	
Loop loss dB (Note 3)	0–1.5	1. –2.5	2.5–3.0	0–1.5	1.5–2.5	2.5–3.0	4.5–15
TIMP (Notes 1, 4)	600 ohms	600 ohms	600 ohms	600 ohms	600 ohms	600 ohms	600 ohms
BIMP (Notes 1, 4)	600 ohms	3COM1	3COM2	600 ohms	3COM1	3COM2	3COM2
Gain treatment (Note 5)	No						Yes

Note 1: Configured in the Single line Telephone Administration program (LD 10).

Note 2: The maximum signaling range supported by the OPS analog line card is 2300 ohms.

Note 3: Loss of untreated (no gain devices) metallic line facility. Upper loss limits correspond to loop resistance ranges for 26 AWG wire.

Note 4: Default software impedance settings are:

<u>CLS</u>	<u>ONS</u>	<u>OPS</u>
TIMP	600 ohms	600 ohms
BIMP	600 ohms	3COM2

Note 5: Gain treatment, such as a voice frequency repeater (VFR), is required to limit the actual OPS loop loss to 4.5 dB, maximum. VFR treatment of metallic loops having untreated loss greater than 15 dB (equivalent to a maximum signaling range of 2300 ohms on 26 AWG wire) is not recommended.

Note 6: Jumper strap settings JX.0 and JX.1 apply to all eight units; “X” indicates the unit number, 0–7. “OFF” indicates that a jumper strap is not installed across both pins on a jumper block. Store straps that are not in use on the OPS analog line card by installing them on a single jumper pin as shown in Figure 92 on [page 229](#).

Figure 92
OPS analog line card: jumper block locations


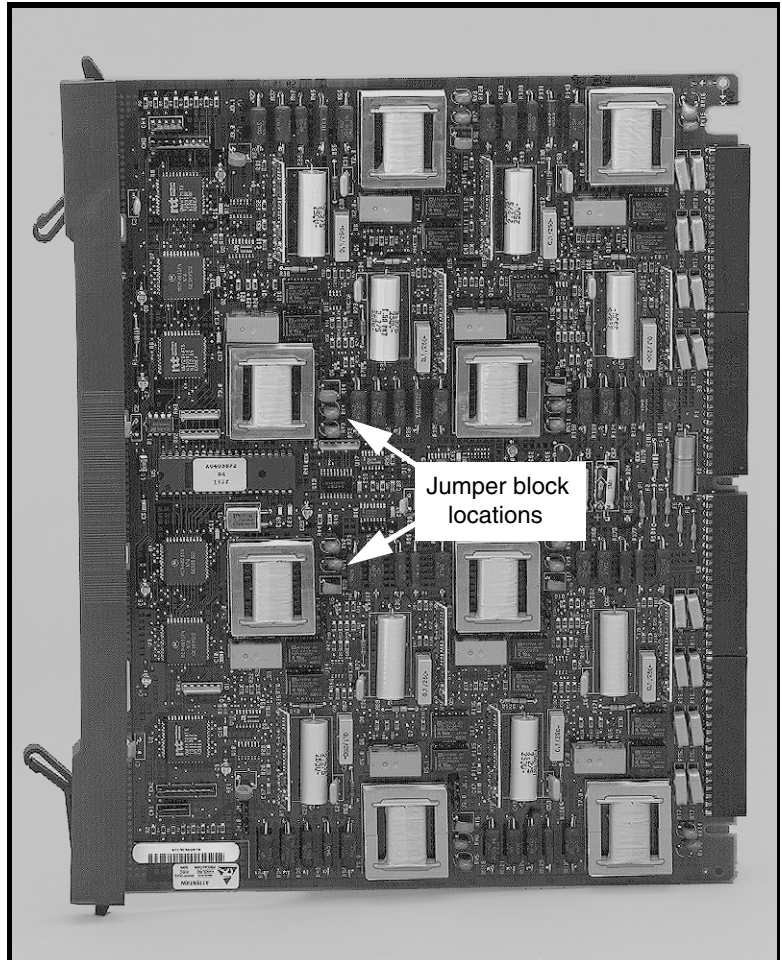


Figure 93
OPS analog line card cross-connections

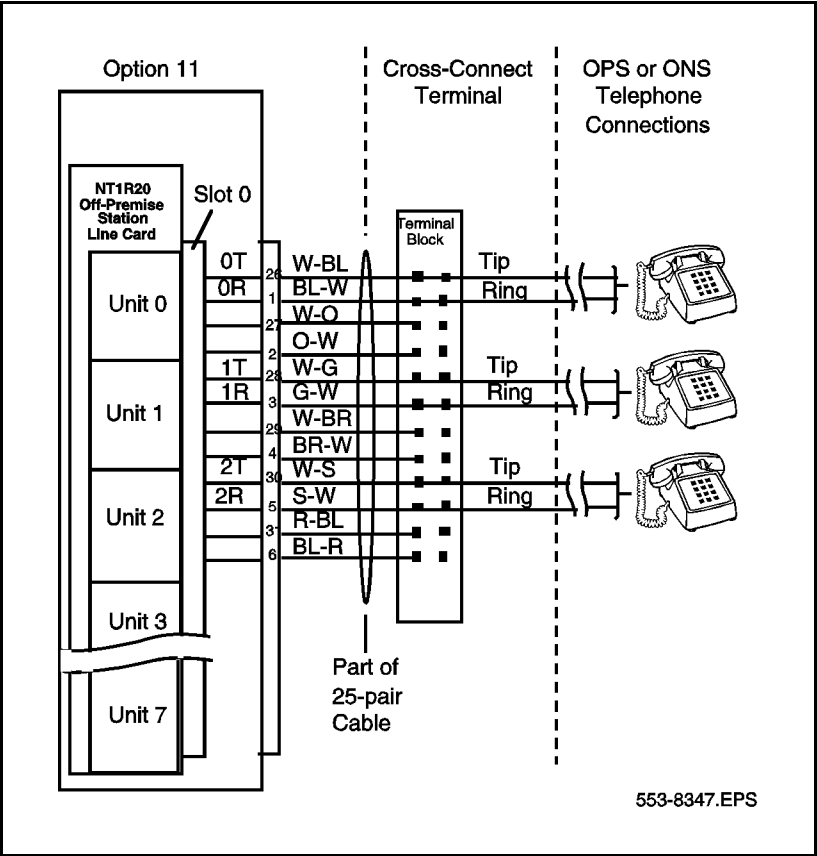


End of Procedure

NTDK16 48-port Digital Line Card

The NTDK16 48-port Digital Line Card provides an interface to a maximum of 48 digital integrated voice and data sets in a Chassis system. The NTDK16 Digital Line Card is functionally equivalent to three NT8D02 Digital Line Cards. See Figure 94 on [page 231](#).

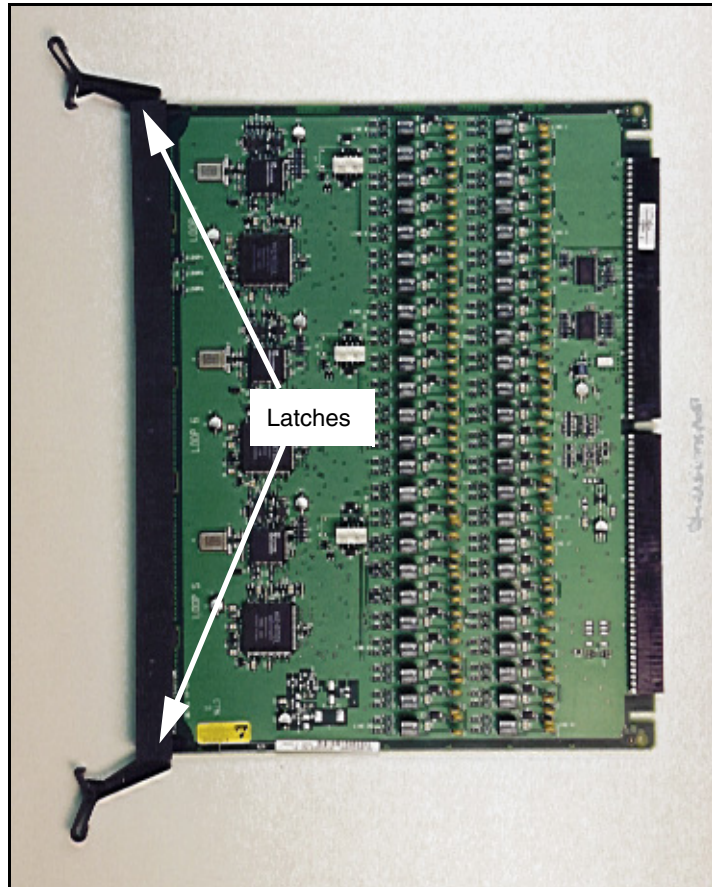Figure 94
48-port Digital Line Card



Note 1: You can only place the NTDK16 Digital Line Card in slot 4 of the chassis.

Note 2: The Chassis system does not require the NTDK16 Digital Line Card to operate.

Procedure 34

Installing the NTDK16 48-port Digital Line Card

- 1 Insert the NTDK16 card in Slot 4 of the chassis.
- 2 Lock the latches on the card.

Note 1: The NTDK16 provides three independent loops (loops 4, 5, and 6). When the time comes to program this card in software, configure it as cards 4, 5, and 6 separately.

Note 2: Three LEDs provide card status.

Note 3: The NTDK16BA version of this card is not compatible with the NTDK91AA and the NTDK91AB chassis.

End of Procedure

NT8D02 Digital Line Card

The NTDK16 48-port Digital Line Card is functionally equivalent to three NT8D02 Digital Line Cards. However, the Chassis system also supports the NT8D02 Digital Line Card.

You can install this card in:

- slots 1 through 10 in the main cabinet or slots 11 through 50 in the expansion cabinets
- slots 1 through 3 in the chassis or slots 7 through 10 in the chassis expander

Procedure 35

Installing the NT8D02 circuit card

- 1 Insert the circuit card in its assigned slot.

End of Procedure

Digital Trunk cards

Small Systems supports the following digital trunk cards:

- NTAK09 1.5 Mbit DTI/PRI
- NTAK10 2.0 Mbit DTI
- NTAK79 2.0 Mbit PRI
- NTBK22 MISP
- NTBK50 2.0 Mbit PRI
- NTRB21 1.5 Mbit DTI/PRI
- NT6D70 SILC (when used as a clock controller)

Note: In a Chassis system, the digital trunk cards can be installed only in slots 1–3 of the chassis.

If you want to install digital trunk cards, refer to the following documents for information:

- *ISDN Primary Rate Interface: Installation and Configuration* (553-3001-201)
- *ISDN Primary Rate Interface: Maintenance* (553-3001-517)
- *ISDN Basic Rate Interface: Installation and Configuration* (553-3001-218)
- *ISDN Basic Rate Interface: Maintenance* (553-3001-518)

Installing and connecting cross-connect terminals

Contents

This section contains the following topics:

Introduction	235
Terminal block requirements	236
Terminal block requirements for the Cabinet system.	236
Terminal block requirements for the Chassis system.	237
Installing the BIX cross-connect terminal.	238
Installing the Reichle Masari cross-connect terminal (Germany).	241
Installing the Krone Test Jack Frame for the UK	244
Connecting the cables	249

Introduction

This chapter describes how to install and connect a cross-connect terminal to a Small System, using either:

- a BIX cross-connect terminal
- a Reichle Masari cross-connect terminal, or
- a Krone Test Jack Frame (UK)

Note: Although the use of the BIX system is not mandatory, it is the recommended choice.

This chapter contains the following procedures:

- Procedure 36 “Installing the BIX cross-connect terminal” on [page 238](#)
- Procedure 37 “Installing the Reichle Masari cross-connect terminal (Germany)” on [page 241](#)
- Procedure 38 “Installing the Krone Test Jack Frame (UK)” on [page 246](#)
- Procedure 39 “Connecting the cables for the Cabinet system” on [page 250](#)
- Procedure 40 “Connecting the cables for the Chassis system” on [page 251](#)

You can find information about the BIX cross-connect system in the following documents:

- *BIX In-Building Cross-Connect System Material Description* (631-4511-100)
- *BIX In-Building Cross-Connect System Material Installation and Servicing* (631-4511-200)

Terminal block requirements

This section describes the respective terminal block requirements for the Cabinet system and the Chassis system.

Terminal block requirements for the Cabinet system

The cross-connect terminal requires sufficient connecting blocks to terminate the following:

- up to ten 25-pair cables from each cabinet
 - Each slot that is equipped with a trunk or line circuit card requires a cable.
 - The connectors J1 through J10 correspond to slot numbers 1 through 10 in the main cabinet.
 - Connectors J1 through J10 correspond to slot numbers 11 through 20 in the first expansion cabinet.

- Connectors J1 through J10 correspond to slot numbers 21 through 30 in the second expansion cabinet.
- Connectors J1 through J10 correspond to slot numbers 31 through 40 in the third expansion cabinet.
- Connectors J1 through J10 correspond to slot numbers 41 through 50 in the fourth expansion cabinet.
- Allow for additional cables at the cross-connect terminal if any of the ten slots in each cabinet are initially left vacant.
- If the NTAK19 SDI cable is not used with the NTAK03 or NTAK02 cards, then a 25-pair cable is required for each of these cards.
- nine conductors comprising the AUX cable from each cabinet
- one 25-pair cable from each QUA6 PFTU
- wiring from telephones and trunks

Terminal block requirements for the Chassis system

The cross-connect terminal requires enough connecting blocks to terminate the following wires:

- for the NTAK09 circuit card, use the NTBK04 cable
- for the NTAK10, NTAK79, and NTBK50 circuit cards, use the NTBK05 cable
- up to five 25-pair cables from each chassis
- Each slot that is equipped with a trunk or line circuit card requires a cable.
 - Connectors Card 1 through Card 6 on the back of the chassis correspond to card numbers 1 through 6 in the chassis.
 - Connectors Card 7 through Card 10 on the back of the chassis expander correspond to card numbers 7 through 10 in the chassis expander.
 - Allow for additional cables at the cross-connect terminal if initially you leave any of the slots in the chassis empty.

- If the NTAK19 SDI cable is not used with the NTAK03 or NTAK02 cards, then you require a 25-pair cable for each of these cards.
- four conductors for the AUX cable from the chassis
- one 25-pair cable from each QUA6 PFTU
- wiring from telephones and trunks

Installing the BIX cross-connect terminal

Procedure 36 describes how to install the BIX cross-connect terminal.

Procedure 36 **Installing the BIX cross-connect terminal**

- 1 Consult the equipment layout plan to determine where to place the cross-connect terminal. Refer to the system and site requirements chapters in *Small System: Planning and Engineering (553-3011-120)*.
- 2 Install the terminal blocks in a layout similar to that shown:
 - in Figure 95 on [page 239](#) for the Cabinet system
 - in Figure 96 on [page 240](#) for the Chassis system
- 3 Attach labels on the cross-connect terminal to indicate the terminal blocks assigned to:
 - 25-pair cables from the cabinets or chassis
 - AUX wiring
 - Power Failure Transfer Units (PFTU)
 - Telephones and consoles
 - Trunks
 - other miscellaneous equipment

Note: If you are installing the BIX cross-connect system, refer to *BIX In-Building Cross-Connect System Material Installation and Servicing (631-4511-200)*. This document provides information about labels used with the BIX terminal blocks.

Figure 95
Typical BIX cross-connect terminal layout for the Cabinet system


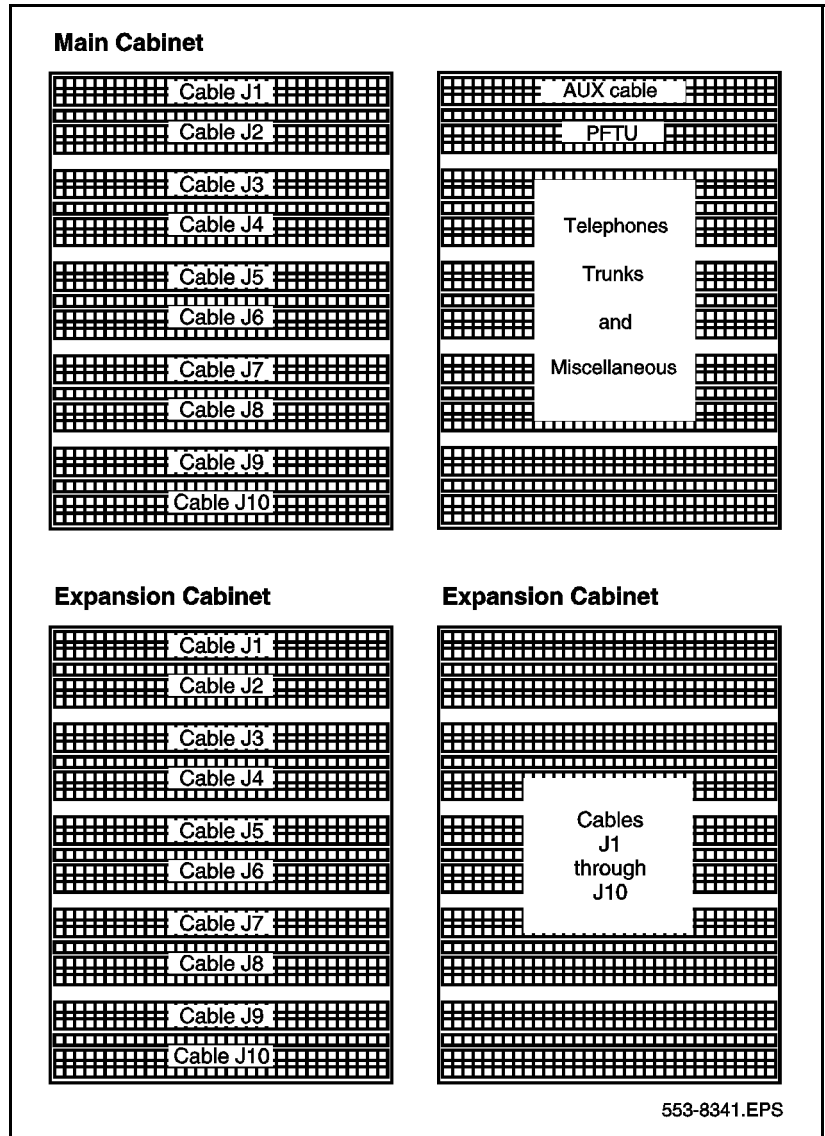


Figure 96
Typical BIX cross-connect terminal layout for the Chassis system

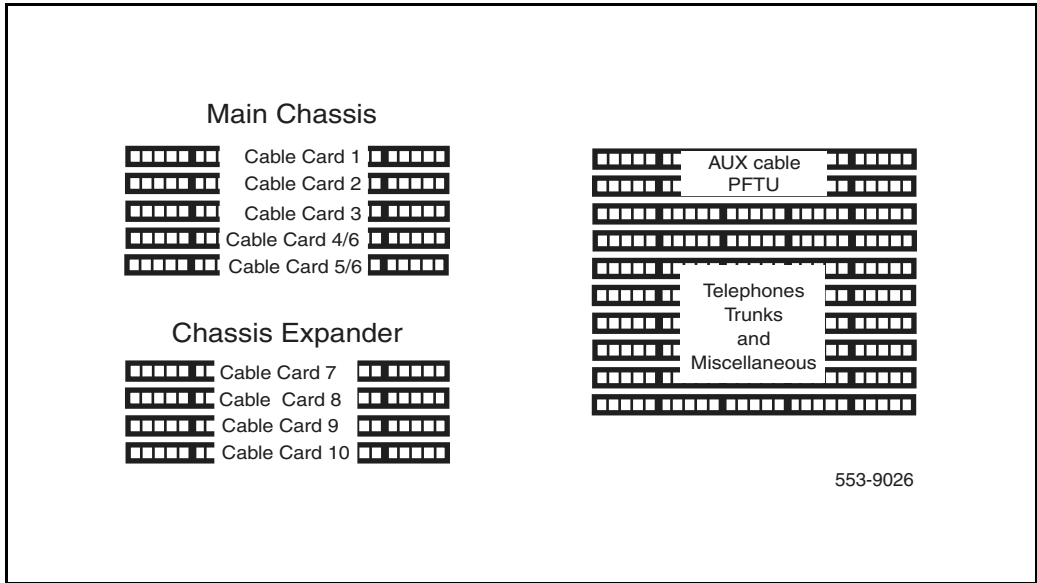

Note: One 25-pair cable contains Card 4 and Card 6 (units 0–7).
Another 25-pair cable contains Card 5 and Card 6 (units 8–15).

End of Procedure

Installing the Reichle Masari cross-connect terminal (Germany)

Procedure 37 describes how to install the Reichle Masari cross-connect terminal for Germany.

Procedure 37

Installing the Reichle Masari cross-connect terminal (Germany)

- 1** Consult the equipment layout plan to determine where to place the cross-connect terminal. Refer to the system and site requirements chapters in *Small System: Planning and Engineering (553-3011-120)*.
- 2** Install the terminal blocks in a layout similar to that shown:
 - in Figure 97 on [page 242](#) for the Cabinet system
 - in Figure 97 on [page 242](#) for the Chassis system
- 3** Attach labels on the cross-connect terminal to indicate the terminal blocks assigned to the following:
 - 25-pair cables from the cabinets or chassis
 - AUX wiring
 - Power Failure Transfer Units (PFTU)
 - Telephones and consoles
 - Trunks
 - Analog line cards
 - DC5/AC15/RAN/PAG cards
 - Data Access Cards
 - Digital line cards
 - Exchange line trunk cards
 - Direct Dialing Inward trunk cards
 - other miscellaneous equipment
- 4** *For the Cabinet system:* Ground the cross-connect terminal.

Connect a 16 mm² (10 mm² green-yellow ground wire for Germany) ground wire from the ground bar on the cross-connect terminal to the ground lug in each cabinet.

Figure 97
Reichle Masari cross-connect terminal layout for the Cabinet system (Germany)


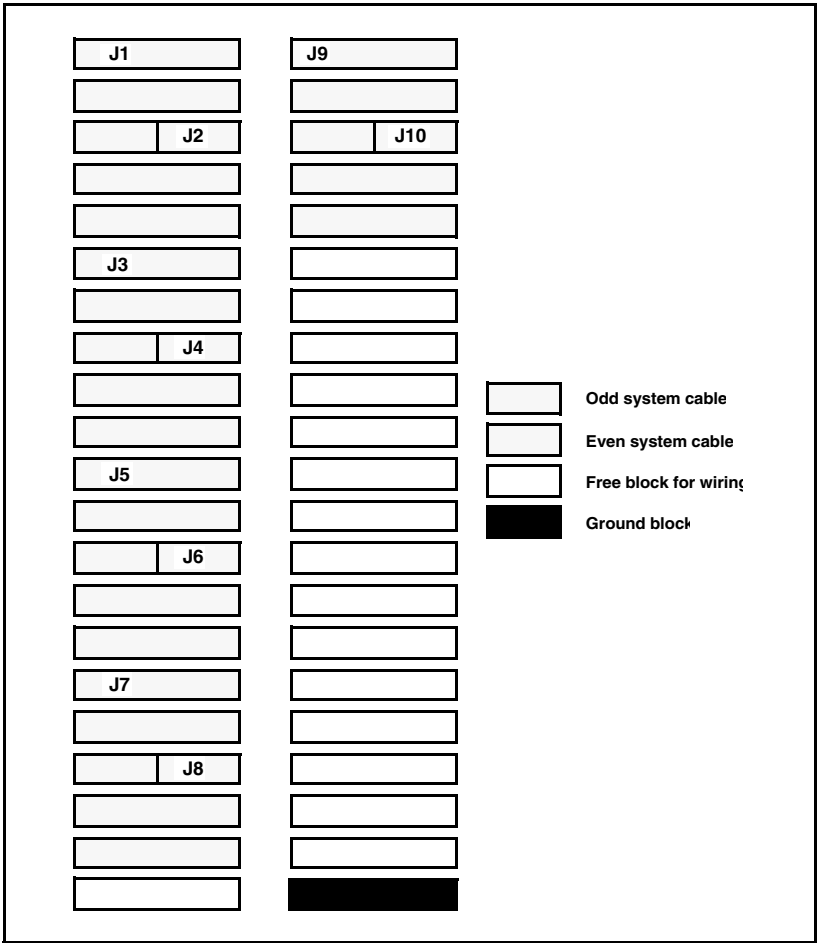


Figure 98
Typical Reichle Masari cross-connect terminal layout for the Chassis system (Germany)

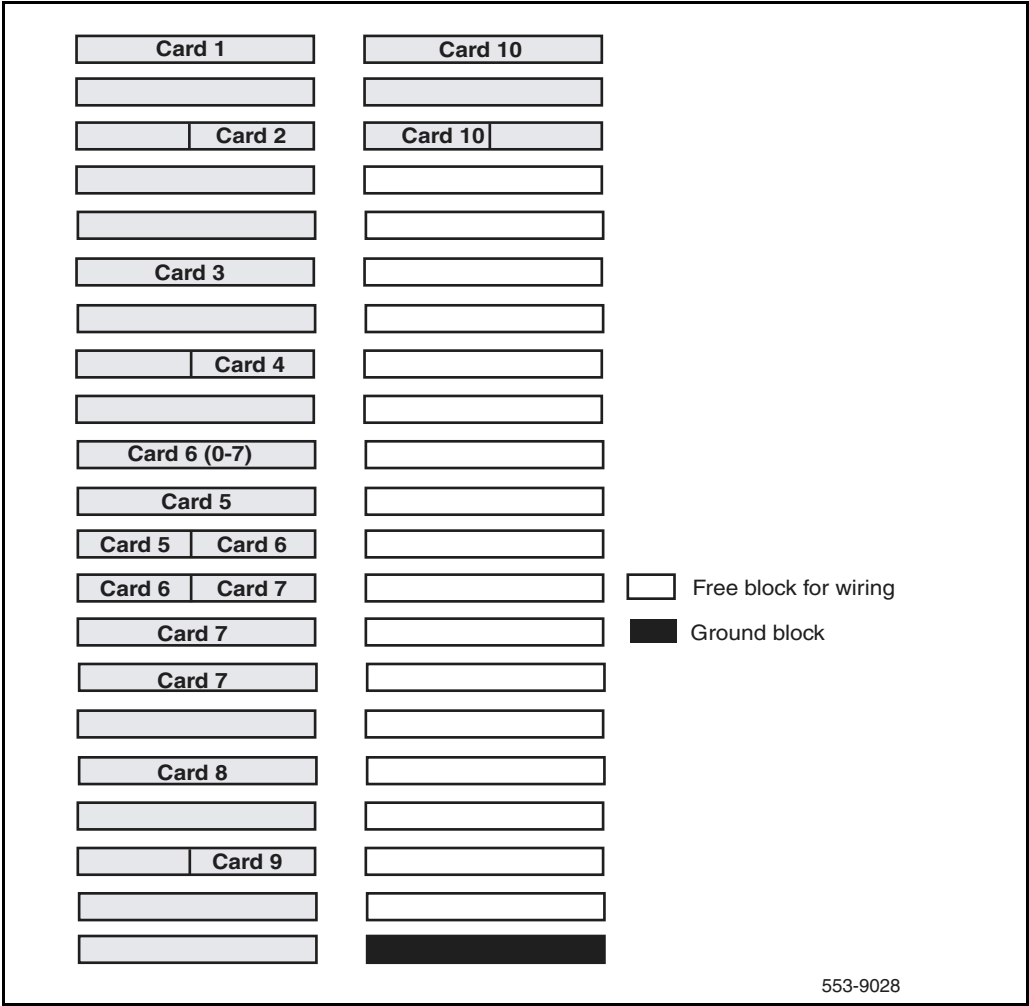

Note: One 25-pair cable contains Card 4 and Card 6 (units 0–7).
Another 25-pair cable contains Card 5 and Card 6 (units 8–15).

End of Procedure

Installing the Krone Test Jack Frame for the UK

The Krone Test Jack Frame provides terminating strips that hold 10 pairs of cable. Generally, only 8 of the 10 pairs are used. As a result, one 25-pair cable requires three terminating strips:

$$8 \text{ pairs/strip} \times 3 \text{ strips} = 24 \text{ pairs}$$

Figure 99 on [page 245](#) shows how one 25-pair cable is divided among three terminating strips on the Krone Test Jack Frame.

Figure 99
25-pair cable on three Krone strips

Pair	Pin number	Wire Colour	Krone strip
1T	26	W-BL	1
1R	1	BL-W	
2T	27	W-O	
2R	2	O-W	
3T	28	W-G	
3R	3	G-W	
4T	29	W-BR	
4R	4	BR-W	
5T	30	W-S	2
5R	5	S-W	
6T	31	R-BL	
6R	6	BL-R	
7T	32	R-O	
7R	7	O-R	
8T	33	R-G	
8R	8	G-R	
9T	34	R-BR	3
9R	9	BR-R	
10T	35	R-S	
10R	10	S-R	
11T	36	BK-BL	
11R	11	BL-BK	
12T	37	BK-O	
12R	12	O-BK	
13T	38	BK-G	3
13R	13	G-BK	
14T	39	BK-BR	
14R	14	BR-BK	
15T	40	BK-S	
15R	15	S-BK	
16T	41	Y-BL	
16R	16	BL-Y	
17T	42	Y-O	3
17R	17	O-Y	
18T	43	Y-G	
18R	18	G-Y	
19T	44	Y-BR	
19R	19	BR-Y	
20T	45	Y-S	
20R	20	S-Y	
21T	46	V-BL	3
21R	21	BL-V	
22T	47	V-O	
22R	22	O-V	
23T	48	V-G	
23R	23	G-V	
24T	49	V-BR	
24R	24	BR-V	
25T	50	V-S	3
25R	25	S-V	

Procedure 38 describes how to install the Krone Test Jack Frame.

Procedure 38

Installing the Krone Test Jack Frame (UK)

- 1** Consult the equipment layout plan to determine where to place the cross-connect terminal. Refer to the system and site requirements chapters in *Small System: Planning and Engineering* (553-3011-120).
- 2** Install the terminal blocks in a layout similar to that shown:
 - in Figure 100 on [page 247](#) for the Cabinet system
 - in Figure 100 on [page 247](#) for the Chassis system
- 3** Attach labels on the cross-connect terminal to indicate the terminal blocks assigned to the following:
 - AUX wiring
 - Power Failure Transfer Units (PFTU)
 - Telephones and consoles
 - Analog line cards
 - DC5/AC15/RAN/PAG cards
 - Data Access Cards
 - Digital line cards
 - Exchange line trunk cards
 - Direct Dialing Inward trunk cards
 - other miscellaneous equipment

Figure 100
Typical Krone cross connect terminal layout for the Cabinet system


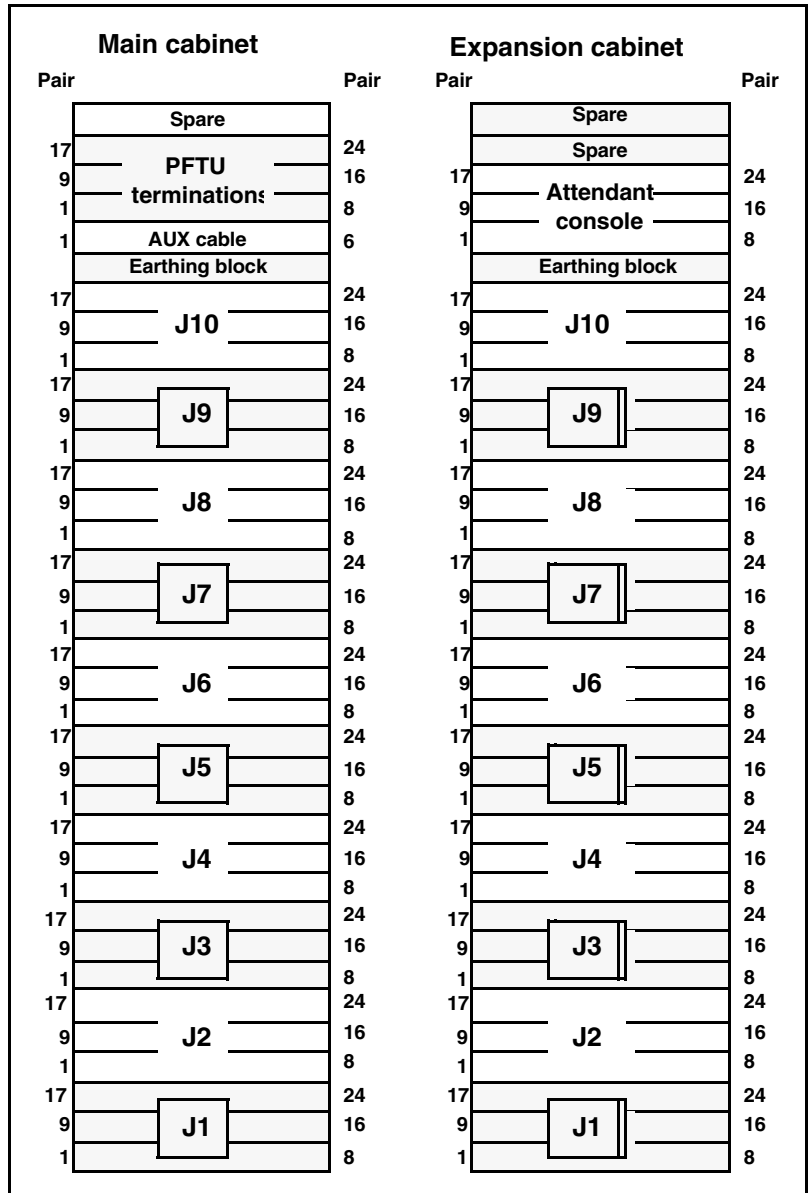


Figure 101
Typical Krone cross-connect terminal layout for the Chassis system

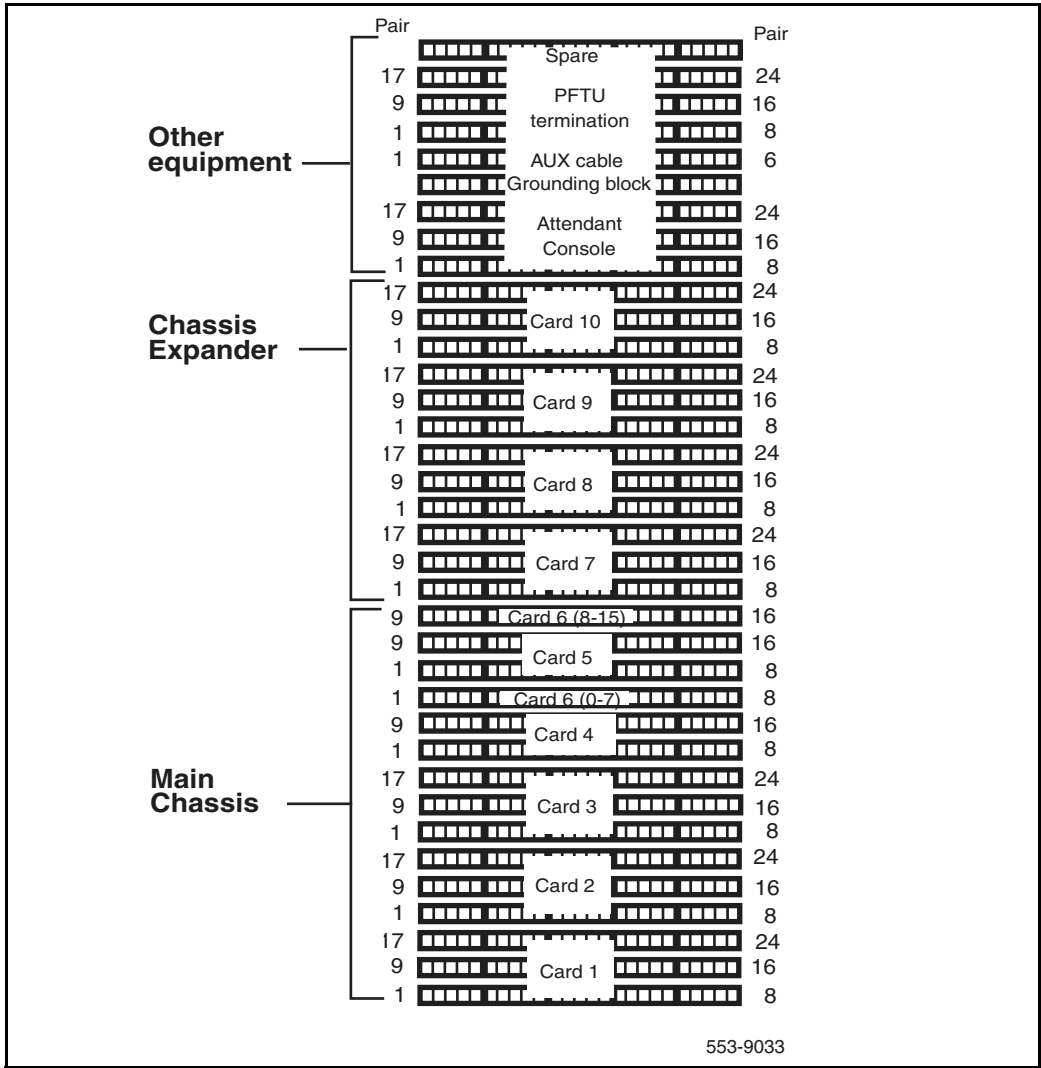

Note: One 25-pair cable contains Card 4 and Card 6 (units 0–7).
Another 25-pair cable contains Card 5 and Card 6 (units 8–15).

End of Procedure

Connecting the cables

**WARNING**

Always use caution when installing or modifying telephone lines. Avoid installing telephone wiring during a lightning storm. Never touch uninsulated telephone wiring unless the line has been disconnected at the network interface.

For the Cabinet system:

- Each cabinet requires up to ten 25-pair cables. Each cabinet requires an additional terminal block at the cross-connect terminal for the termination of the 9-pin conductor auxiliary cable.
- All cables are connected at the bottom of the cabinet and are routed through the openings in the lower part of the cabinet.

For the Chassis system:

- Each chassis requires up to five 25-pair cables. The chassis requires an additional terminal block at the cross-connect terminal to terminate the 9-pin conductor auxiliary cable.
- Connect all cables at the back of the chassis.

Note: Use caution when using NE-A25B cables with the NTAK02 and NTAK03 cards. These cables are not wired out to station equipment or trunk circuits. Do not use the NE-A25B cable with the NTAK10, NTBK50, or NTAK79 circuit cards.

For 1.5 Mbit and 2.0 Mbit DTI/PRI-related wiring and cable information, refer to the following documents:


- *ISDN Primary Rate Interface: Installation and Configuration* (553-3001-201)
- *ISDN Primary Rate Interface: Maintenance* (553-3001-517)

Procedure 39

Connecting the cables for the Cabinet system

- 1 Remove the connector retaining bar from the connector panel in the lower part of each cabinet. See Figure 102.

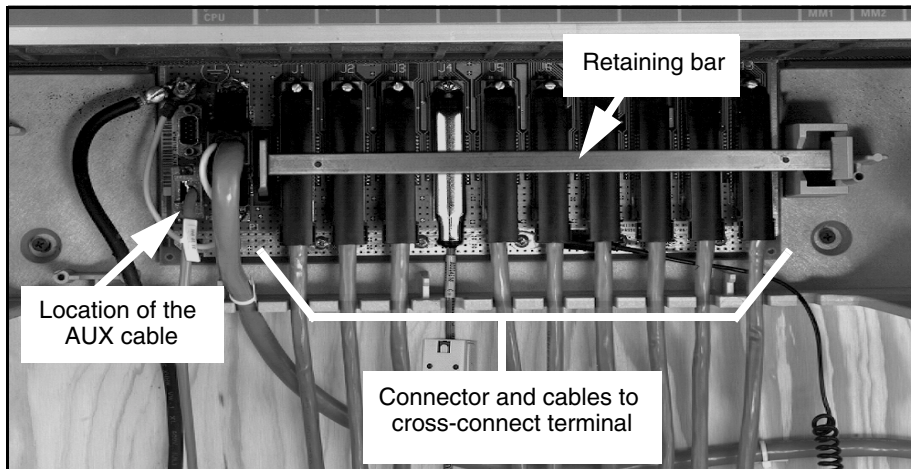Figure 102
Cable connectors in a system cabinet



- 2 Using the card slot allocation plan, connect a 25-pair cable to each of the connectors that will contain a line or trunk card.

Make sure to tag both ends of each cable with the cabinet and connector numbers.

Note: Do not use the NE-A25B cable with the NTA10, NTA79, or NTB50 circuit cards.

- 3 Route the cables down through the opening at the bottom of each cabinet.

- 4 Replace the retaining bar when you have connected all the cables to the cabinet.
- 5 Terminate all the 25-pair cables installed at the cross-connect terminal.
Label all the cables at the cross-connect terminal blocks according to the card slot allocation plan.
- 6 Install the AUX cable on the lower 9-pin connector located on the left side of the connector area in the lower part of each cabinet.

Terminate the AUX cable at the cross connector located on the left side of the connector. See Figure 102 on [page 250](#).

Table 27
AUX cable terminations for the Cabinet system

Color	Wire number	Designation	Connection
W-BL	1	BRTN	to QUA6-J1 1R
BL-W	2	BRTN	to QUA6-J1 2R
O-W	3	-48V AUX (250mA)	to QUA6-J1 25T, 25R
W-O	4	PFTS	to QUA6-J1 2T
G-W	5	-15V AUX	Console power*
W-G	6	+15V AUX	Console power*
*Each AUX cable can provide power for only one console.			


Procedure 40

Connecting the cables for the Chassis system

- 1 Loosen the Velcro straps at each connector you plan to use.
- 2 Connect a 25-pair cable to each of the connectors that will contain a line or trunk card. Refer to the card slot assignment plan.


Make sure you tag both ends of each cable with the chassis and connector numbers. See Figure 102 on [page 250](#).

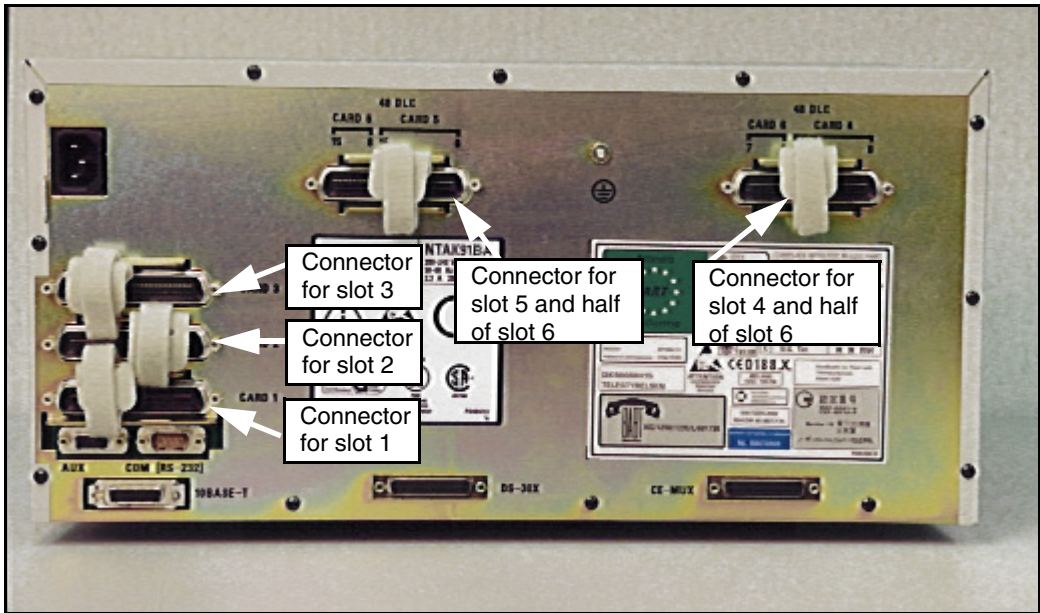Figure 103
Cable connectors on the back of the chassis



- 3 Tighten the Velcro straps when you have connected each cable to the chassis.
- 4 Terminate all the 25-pair cables installed at the cross-connect terminal.
Label all the cables at the cross-connect terminal blocks according to the card slot assignment plan.
- 5 Install the AUX cable in the lower 9-pin connector located on the bottom left-hand side of the chassis. See Figure 104 on [page 253](#).

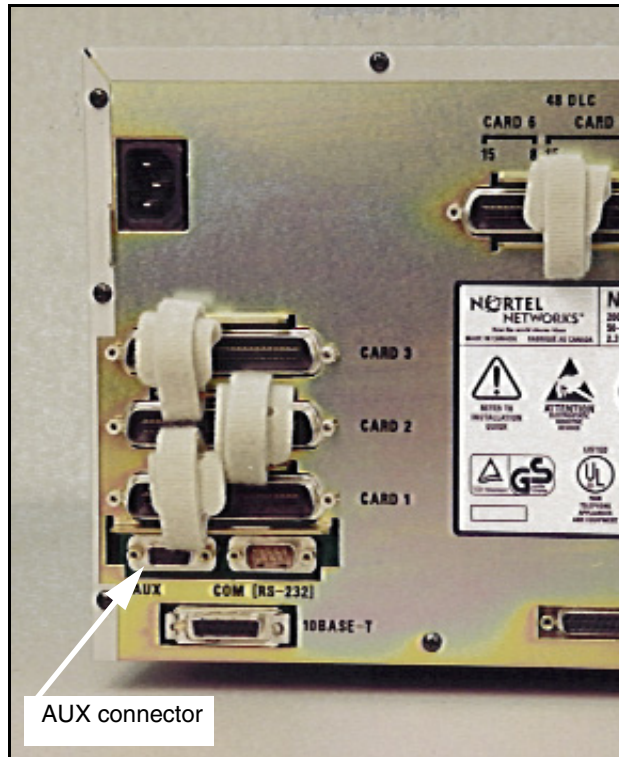Figure 104
AUX cable connector



Terminate the AUX cable at the cross connect terminal, according to Table 28.

Table 28
AUX cable terminations for the Chassis system

Color	Wire number	Designation	Connection
W-BL	1	BRTN	to QUA6-J1 1R
BL-W	2	BRTN	to QUA6-J1 2R
O-W	3	-48V AUX (250mA)	to QUA6-J1 25T, 25R
W-O	4	PFTS	to QUA6-J1 2T
G-W	5	Not used	Not used
W-G	6	Not used	Not used

- 6** For installations in Germany, complete the form shown in Figure 105 on [page 255](#) for each card slot.

This form provides a record of cross connections that you will perform after you start the system.

Installing Power Failure Transfer Units

Contents

This section contains the following topics:

Introduction	257
PFTU installation	258
PFTU control lead signals	263

Introduction

This chapter describes how to install a QUA6 Power Failure Transfer Unit (PFTU). This chapter contains the following procedure:

- Procedure 41: “Installing the PFTU” on [page 258](#)

For the Cabinet system, you can connect PFTUs to the expansion cabinets as well as to the main cabinet. Only one PFTU is supported per cabinet. For the Chassis system system, you can connect PFTUs to the chassis.

The QUA6 PFTU operates with loop-start and ground-start CO trunks. However, with ground-start trunks the associated telephone set must be equipped with a ground-start button.

If you require power failure backup as a fail safe for the system, use analog trunks. A PFTU does not support digital trunks.


PFTU installation

Refer to the equipment layout plan to determine where to locate the PFTU. See the chapters on system and site requirements in *Small System: Planning and Engineering* (553-3011-120).

Procedure 41 Installing the PFTU

- 1 Mount the PFTU on the wall near the system cross-connect terminal and secure it with four screws.
- 2 Install an NE-A25B-type 25-pair cable from connector J1 on the faceplate of the PFTU to its assigned location at the cross-connect terminal.
- 3 Label the pairs of the J1 cable on the cross-connect terminal block as shown in Figure 106.

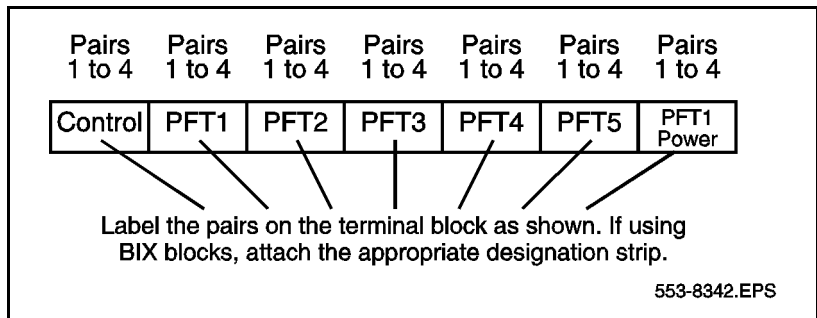Figure 106
J1 cable labels




- 4 Connect the PFTU power and control connections to the AUX cable from the cabinet or chassis. See Table 29. For the location of the Auxiliary port on the cabinet, see Figure 107 on [page 260](#). For the location of the AUX connector on the chassis, see Figure 107 on [page 260](#).

Table 29
Control and power connections on cable J1


J1 Cable from QUA6 (see Figure 109 on page 262)				
Function	Pair Number	Pair Color	Connects to	Cross-connect to
Control	1T	W-BL	(ALM)	Not used.
	1R	BL-W	BRTN	W-BL 1-dot connection on AUX cable from the cabinet or chassis.
	2T	W-O	PFTS	W-O 1-dot connection on AUX cable from the cabinet or chassis. Transfer begins by applying ground to this lead.
	2R	O-W	BRTN	BL-W 1-dot connection on AUX cable from the cabinet or chassis.
	3T	W-G	(TC)	Console transfer switch. See console connections. Transfer begins by applying ground to this lead.
	3R	G-W		Not used.
	4T	W-BR		Not used.
	4R	BR-W		Not used.
PFTU power	25T 25R	S-V V-S	-48 V -48 V	O-W 1-dot connection on AUX cable. Maximum 250 mA draw on O-W lead.

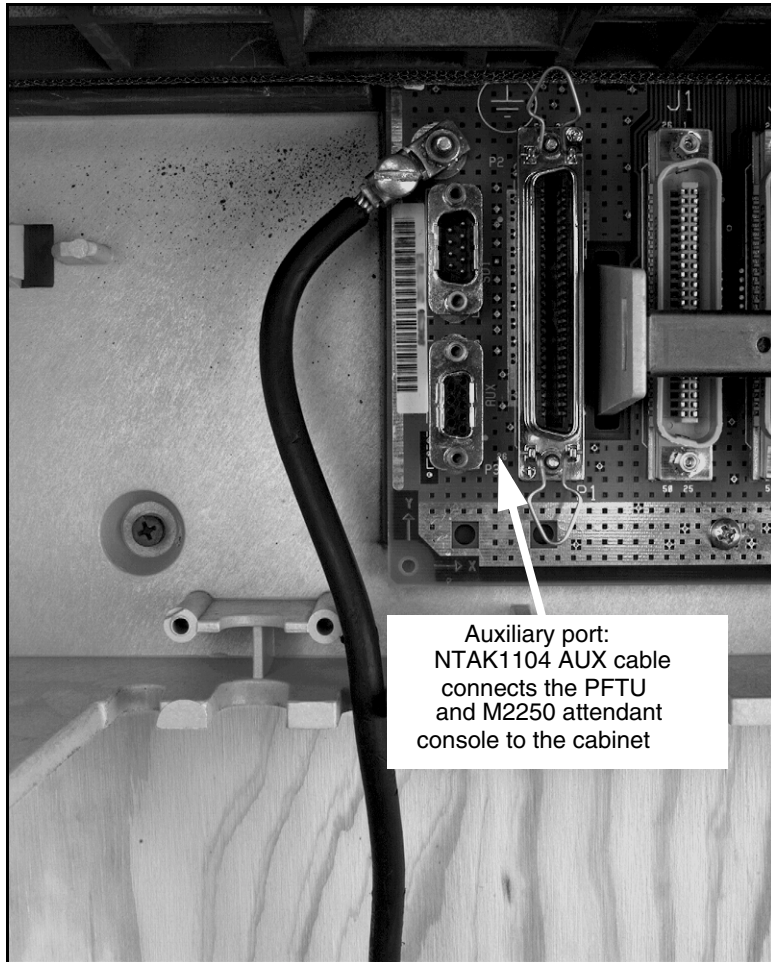Figure 107
Auxiliary port location on cabinet



Auxiliary port:
NTAK1104 AUX cable
connects the PFTU
and M2250 attendant
console to the cabinet

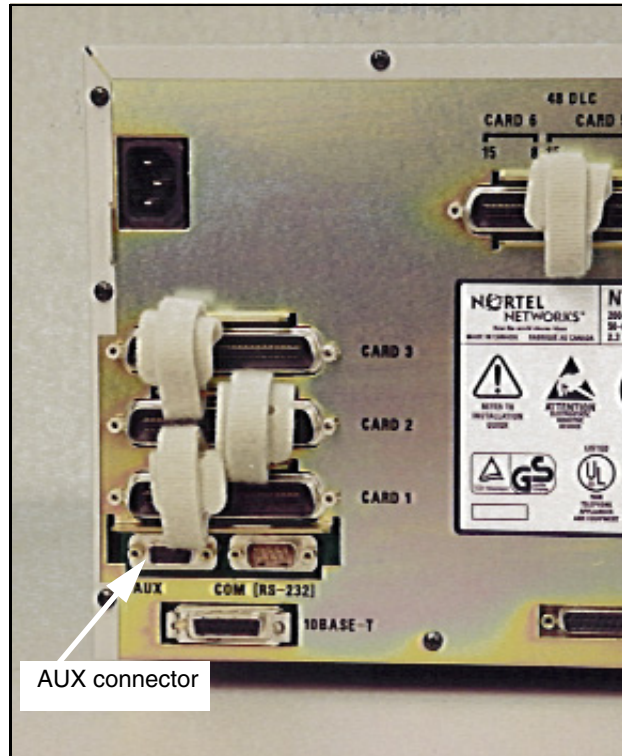Figure 108
Auxiliary connector on chassis




- 5** Connect the attendant console to the PFTU:
- attendant console 14 Tip (14T) to ground
 - 3 Tip (3T) of PFTU to 11 Ring (11R) of attendant console (power fail transfer switch)
 - attendant console 11 Tip (11T) to ground

Note: The AUX cable on the Chassis system does not provide power to the M2250 attendant console. Two Digital Line Card TNs or an attendant console power supply provide power to the M2250 attendant console.

If power to the M2250 attendant console is not provided by two Digital Line Card TNs, connect:

- G-W of AUX to 8 Tip (8T) of attendant console (-15 volts)
- W-G of AUX to 7 Tip (7T) of attendant console (+15 volts)

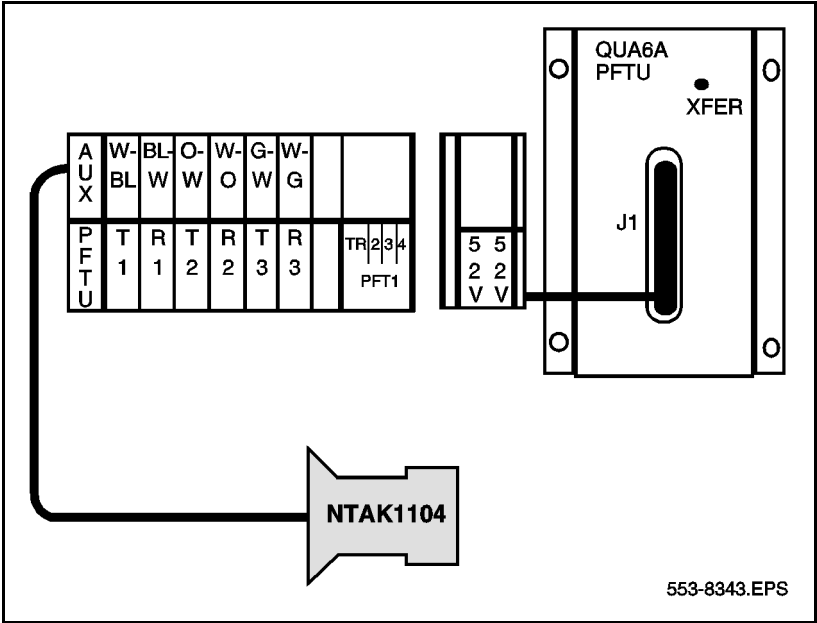Figure 109
Power fail transfer



End of Procedure

PFTU control lead signals

To connect PFTUs from other manufacturers, use the information provided in Table 30.

Table 30
PFTU control lead signals

NTAK1104 AUX cable lead	Lead State when PFTU is in non-transferred state	Lead State when PFTU is in transferred state
BRTN	GROUND	GROUND
BRTN	GROUND	GROUND
-48V AUX	-48V dc (250 mA max.)	-48V dc (250 mA max.)
PFTS	OPEN	GROUND

Note 1: Refer to Figure 107 on [page 260](#) for an illustration of where the Auxiliary cable connects to the Cabinet system. Refer to Figure 107 on [page 260](#) to see where the Auxiliary cable connects to the Chassis system.

Note 2: If power is removed from the QUA6, a transfer of the PFTU can occur.

Installing and connecting SDI and Ethernet ports

Contents

This section contains information on the following topics:

Introduction	265
Modem setup requirements	266
SDI ports	267
Cable connections and adapters	268
Installing and connecting SDI ports	270
NTDK20 SSC card	270
NTDK23, NTDK25, and NTDK80 Fiber Receiver cards	273
NTAK02 SDI/DCH card	276
NTAK03 TDS/DTR card	281
Terminal setup	282
Installing and connecting an Ethernet cable	287
Cabinet system: IP expansion 10BaseT port	287
J7 Jumper plug	288
Chassis system Ethernet connection.	292

Introduction

This chapter contains modem setup requirements and the following procedures for connecting communication devices to the Small Systems:

- Procedure 42 “Connecting SDI ports on the SSC card” on [page 271](#)

- Procedure 42 “Connecting SDI ports on the SSC card” on [page 271](#)
- Procedure 43 “Connecting SDI ports to the Fiber Receiver card” on [page 274](#)
- Procedure 44 “Setting up the terminal” on [page 282](#)
- Procedure 45 “Connecting the Ethernet cable to the Cabinet system” on [page 290](#)
- Procedure 46 “Connecting the Ethernet cable to the Chassis system” on [page 292](#)

Modem setup requirements

Modems connected to the Small System should be set as follows:

- Carrier Detect (CD): Active if carrier detected on incoming call
- Clear to Send (CTS): Normal operation or forced active
- Hardware and software: Disabled flow control

The ports on the Small System are disabled if devices connected to the ports generate additional “garbage” characters. For this reason, do not use modems in the following modes:

- Loopback
- Auto Echo
- Self Test

Note: The Serial Data Interface (SDI) ports are designed for use with “dumb” modems. “Intelligent” modems can be used. Make sure that the modems do not enter into modes of operation that send additional characters to the system.

Table 31 lists some of the problems that may be encountered.

Table 31
Modem problems

Problem	Solution
CDR is not printing on an ESDI port configured as 8 bits, no parity, and 1 stop bit.	Change the modem set-up to 7 bits, no parity, 1 stop bit, or add MTC or SCH to the ESDI user prompt.
Modem is not communicating with the Small System when the User is MTC, BUG or CTY. (The default setting of 8 bits, no parity, 1 stop bit is incompatible with the modem.)	Change the modem set-up to 7 bits or the parity to EVEN/ODD.

SDI ports

In the Small System, SDI ports are provided by the following cards:

- NTDK20 Small System Controller (SSC) card — provides three SDI ports
- NTDK23, NTDK25 and NTDK80 Fiber Receiver cards — each provides one SDI port
- NTAK02 SDI/DCH card — provides four ports, of which up to two can be SDI ports
- NTAK03 TDS/DTR card — provides two SDI ports

Note 1: The functionality of the NTAK03 card has been incorporated into the NTDK20 SSC card. However, you can also configure the NTAK03 card, if required.

Note 2: There are several circuit cards that provide SDI port connections in the Small System. However, only SDI port 0, 1, or 2, located on the SSC card, can be used to access the system for the Customer Configuration Backup and Restore (CCBR) feature.

Cable connections and adapters

An NTBK48 3-port 9- to 25-pin converter cable is supplied with the Small System. The cable can be used to connect SDI port 0, 1, or 2 directly to most types of modems. However, some modems may require a connector adapter to make the connection. For more information, refer to the modem manufacturer's instructions provided with the modem.

The signals carried by each lead in the NTBK48 3-port cable are shown in Figures 110 and 111.

Figure 110
NTBK48 port 0 signal leads


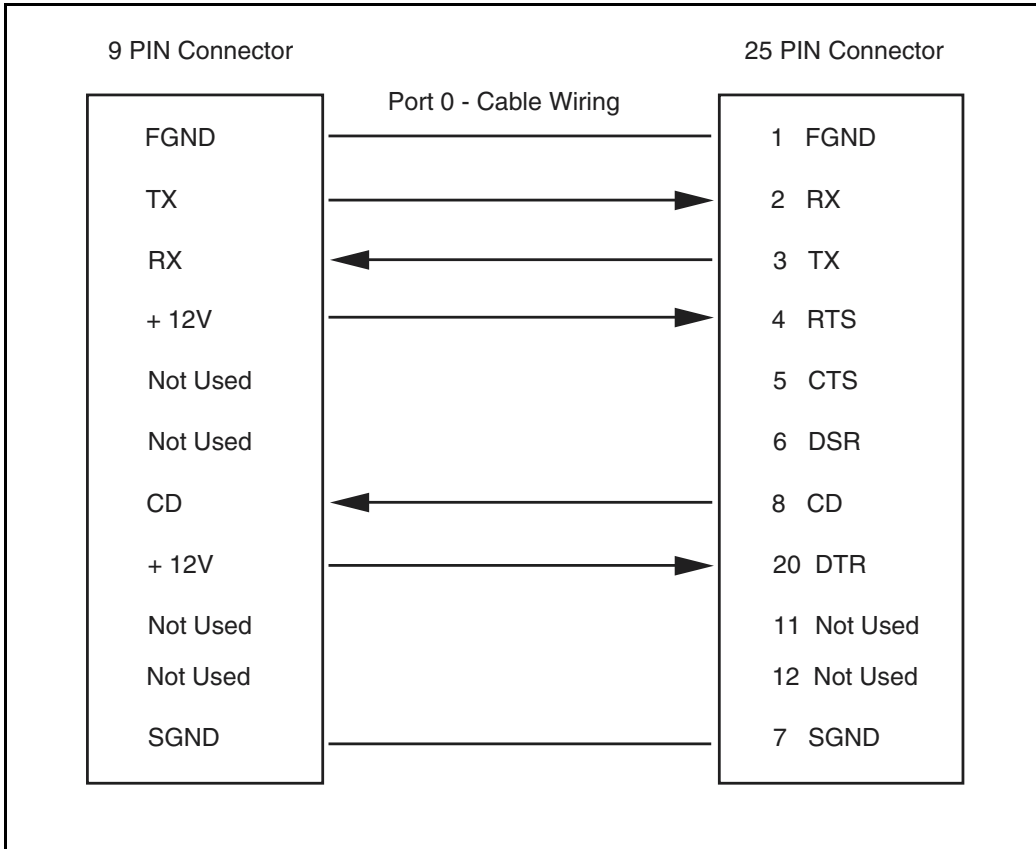



Figure 111
NTBK48 Ports 1 and 2 signal leads

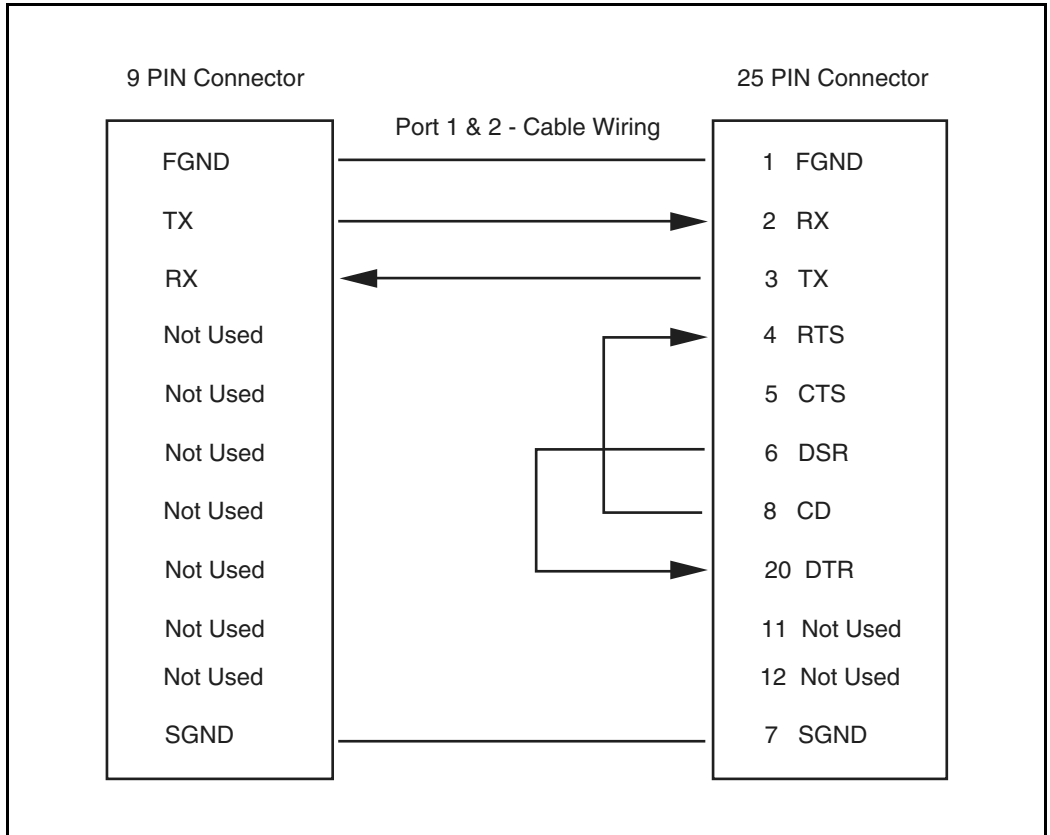

A modem eliminator is required when a computer is connected on-site. Two are supplied with the Small System. One is equipped with a female-to-female connector; the other is equipped with a female-to-male connector. Refer to the manufacturer's instructions provided with your computer to determine which type is required.

Figure 112 on [page 270](#) shows the modem eliminator's internal connections and lead designations.

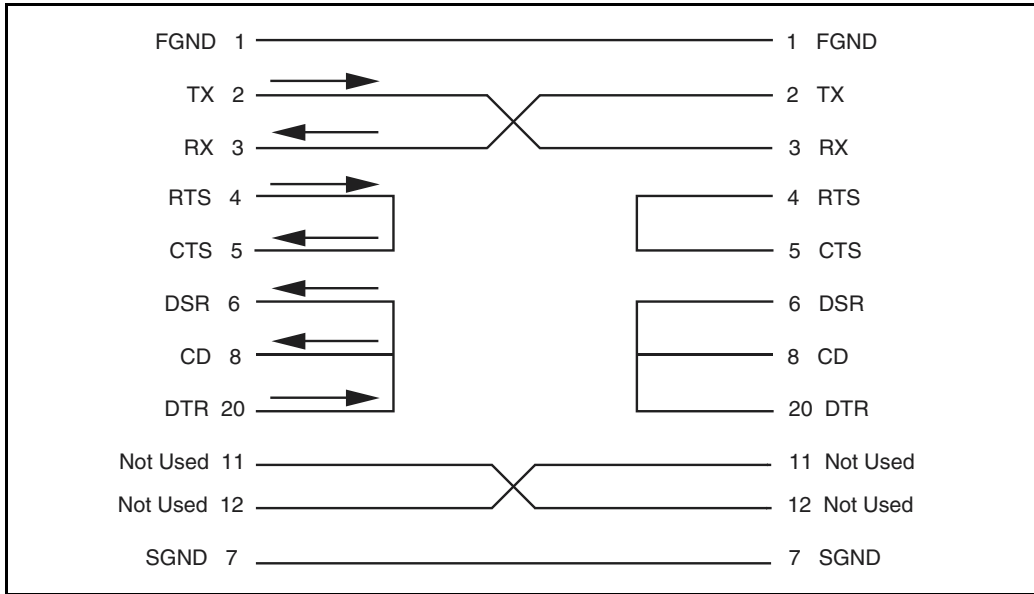Figure 112
Modem eliminator connections and designations



Installing and connecting SDI ports

This section describes how to access SDI ports through the following:

- NTDK20 SSC card
- NTDK23, NTDK25 and NTDK80 Fiber Receiver cards
- NTAK02 SDI/DCH card
- NTAK03 TDS/DTR card

NTDK20 SSC card

You can use a switch setting on the circuit card's faceplate to control the baud rate for port 0. Make sure the baud rate and device option settings are set correctly.

Note: When the time comes to configure ports 1 and 2, configure them in LD 17.

- Use Port 0 for software installation and upgrades. SDI port 0 is the only SDI port that you can use for software installation and upgrades.
- You can use all three ports on the SSC card to connect terminals or modems.
- Use an NTB48 3-port SDI cable with the SSC card.

Note: The default baud rate of the SSC card is 1200 bps; the maximum data rate is 19,200 bps. When changing the DIP switch on the faceplate, make sure only one baud rate switch is set to ON. Refer to Table 32.

Table 32
Default port configuration for the NTDK20 SSC card

Port	Use	Baud rate	Data bits	Stop bits	Parity
0	MTC/SCH/BUG	Set by a DIP switch	8	1	None
1	MTC/SCH/BUG	1200	8	1	None
2	MTC/SCH/BUG	1200	8	1	None

Procedure 42 describes how to connect a terminal, modems, and other devices, such as CDR devices and additional TTYs, to the SSC card.

Procedure 42 **Connecting SDI ports on the SSC card**

- 1 Connect the NTB48 3-port SDI cable to the 9-pin SDI connection provided by the SSC card.

See Figure 113 on [page 272](#) for the location of the SDI connection at the top of the main or IP expansion cabinet.

See Figure 114 on [page 273](#) for the location of the SDI connection at the back of the chassis.

- 2 Connect the system terminal to the cable marked “port 1” on the NTB48 3-port cable.

A Modem Eliminator Adapter is required to connect the Small System to a TTY terminal.

- 3 If the system is to be accessed remotely, connect the system modem to the cable marked “port 0” on the NTBK48 cable.

Note 1: If port 0 is used, check the baud rate setting on the front of the SSC card located in slot 0 of the main cabinet or chassis.

If port 1 or 2 is used, the baud rate is configured in the system software (LD 17).

Make sure that the rate is compatible with the modem.

Note 2: The CCBR feature works on all ports.

- 4 Connect the modem to an outside line.
- 5 Test the modem for proper operation once the system is operating.

Note: The remaining ports can be used for other equipment such as CDR devices or TTYs.

End of Procedure

Figure 113
SDI cable connection on the cabinet


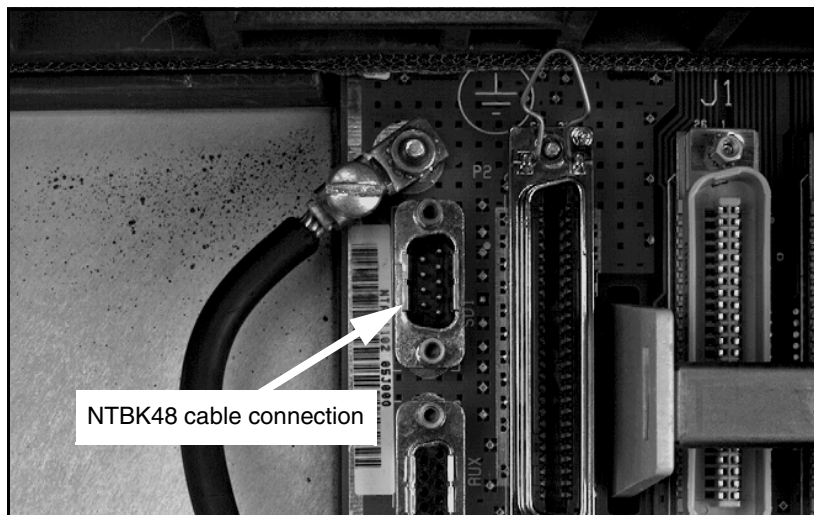


Figure 114
SDI cable connection on the chassis

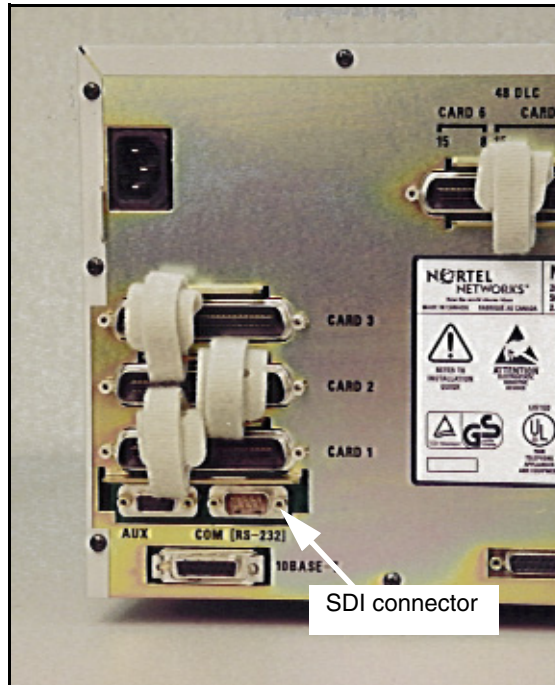

End of Procedure

NTDK23, NTDK25, and NTDK80 Fiber Receiver cards

The Fiber Receiver cards provide one SDI port per expansion cabinet or chassis.

The baud rate is set by a DIP switch on the card's faceplate. Other communication settings are identical to the port 0 configuration on the SSC card (refer to Table 32 on [page 271](#)).

A Fiber Receiver card port must be configured using LD 17 before it can be used to access overlays.

Note: Although all device numbers can be assigned to any cabinet or chassis, TTY 0, 1, and 2 are usually assigned to the main cabinet or chassis. TTY 3, 4, 5, and 6 are typically assigned to the first, second, third, and fourth expansion cabinets or chassis respectively.

Procedure 43 describes how to connect the SDI ports on Fiber Receiver cards.

Procedure 43

Connecting SDI ports to the Fiber Receiver card

- 1** Connect the NTAK1108 one-port SDI cable to the 9-pin SDI connection provided by the Fiber Receiver card.

See Figure 115 on [page 275](#) for the location of the SDI connection at the top of the fiber expansion cabinet.
See Figure 116 on [page 276](#) for the location of the SDI connection at the back of the fiber expansion chassis.
- 2** Connect the NTAK1108 SDI cable to a TTY terminal.

Note: A Modem Eliminator Adapter is required to connect to a terminal.
- 3** If the system is to be accessed remotely, connect the SDI cable to the system modem.
- 4** Connect the modem to an outside line.
- 5** Test the modem for proper operation once you have started up the system.

End of Procedure


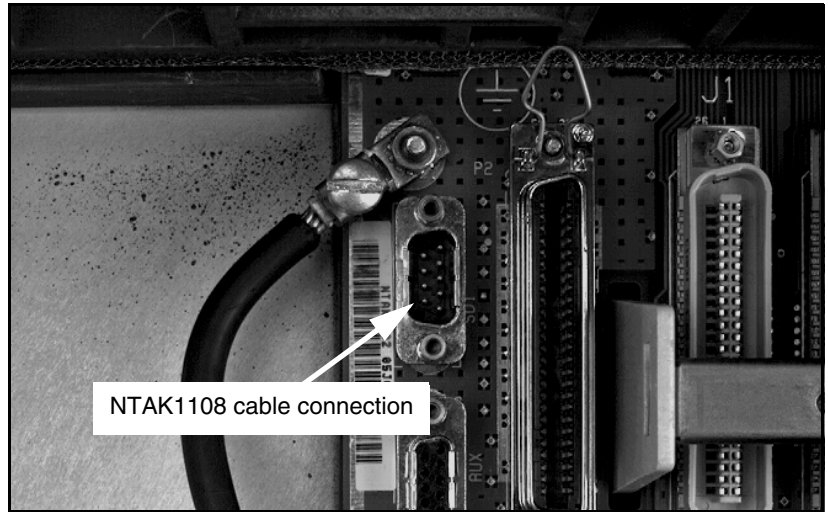
Figure 115**SDI cable connection on the fiber expansion cabinet**

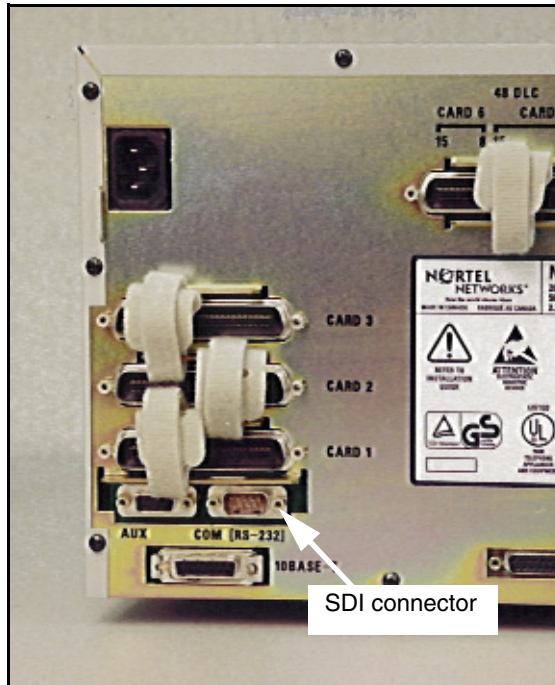Figure 116
SDI cable connection on the fiber expansion chassis



NTAK02 SDI/DCH card

In the Cabinet system, the NTAK02 SDI/DCH card can be used in the main and IP expansion cabinets. In a Chassis system, only the chassis supports the NTAK02 SDI/DCH card.

You can configure this card to support ports for the following:

- two SDI and two DCHI
- one SDI, one DCHI, two ESDI
- four ESDI

Note: Only the DCH functionality is supported in IP Expansion cabinets. ESDL, AML and TTY are not supported.

You can use the NTAK02 ports to access overlay software. Define these ports in the configuration database as the SDI logical type.

An NTAK19FB 4-port SDI cable is designed for use with the NTAK02 circuit card. However, you can use an NE-A25B 25-pair cable to extend the connections to the cross-connect terminal. See Table 33 through Table 36 for the connections for each port.

Table 33
NTAK02 pinouts — Port 0 at the cross-connect terminal

Cable		RS232			
		Signal		Designations (I = input/O = output)	
Pair	Color	DTE	DCE	DTE	DCE
1T 1R	W-BL BL-W	0 DTR	0 DCD	- O	- I
2T 2R	W-O O-W	DSR DCD	CH/CI DTR	I I	O O
3T 3R	W-G G-W	RTS CTS	CTS RTS	O I	I O
4T 4R	W-BR BR-W	RX TX	TX RX	I O	O I
5T 5R	W-S S-W	- SG	- SG	- -	- -

Table 34
NTAK02 connections at the cross-connect terminal — Port 1

Cable		RS422				RS232			
		Signal		Designations (I = input O = output)		Designations (I = input O = output)		Signal	
Pair	Color	DTE	DCE	DTE	DCE	DTE	DCE	DTE	DCE
5T 5R	W-S S-W	SCTEA —	SCTA —	O —	I —	O —	I —	SCT —	SCT —
6T 6R	R-BL BL-R	SCTEB DTR	SCTB DCD	O O	I I	— —	— —	CH/CI DTR	— DCD
7T 7R	R-O O-R	DSR DCD	CH/CI DTR	I I	O O	I I	O O	DSR DCD	CH/CI DTR
8T 8R	R-G G-R	RTS CTS	CTS RTS	O I	I O	O I	I O	RTS CTS	CTS RTS
9T 9R	R-BR BR-R	SCRA SCTA	SCTEA RXCA	I I	O O	I I	O O	SCR SCT	SCT —
10T 10R	R-S S-R	SCR SCTB	SCTEB RXCB	I I	O O	— —	— —	— —	— —
11T 11R	BK-BL BL-BK	RXDA TXDA	TXDA RXDA	I O	O I	I O	O I	RXD TXD	TXD RXD
12T 12R	BK-O O-BK	RXDB TXDB	TXDB RXDB	I O	O I	— —	— —	— —	— —
25T 25R	V-S S-V	SG —	SG —	— —	— —	— —	— —	SG —	SG —

Table 35
NTAK02 connections at the cross-connect terminal — Port 2

Cable		RS422				RS232			
		Signal		Designations (I=input O=output)		Designations (I=input O=output)		Signal	
Pair	Color	DTE	DCE	DTE	DCE	DTE	DCE	DTE	DCE
13T 13R	BK-G G-BK			- -	- -	- O	- I	- DTR	- DCD
14T 14R	BK-BR BR-BK			- -	- -	I I	O O	DSR DCD	CH/CI DTR
15T 15R	BK-S S-BK			- -	- -	O I	I O	RTS CTS	CTS RTS
16T 16R	Y-BL BL-Y			- -	- -	I O	O I	RX TX	TXD RXD
17T 17R	Y-O O-Y			O -	I -	O -	I -	- SG	- SG

Table 36
NTAK02 connections at the cross-connect terminal — Port 3

Cable		RS422				RS232			
		Signal		Designations (I=input O=output)		Designations (I=input O=output)		Signal	
Pair	Color	DTE	DCE	DTE	DCE	DTE	DCE	DTE	DCE
17T 17R	Y-O O-Y	SCTEA —	SCTA —	O —	I —	O —	I —	SCT —	SCT —
18T 18R	Y-G G-Y	SCTEB DTR	SCTB DCD	O O	I I	— —	— —	CH/CI DTR	— DCD
19T 19R	Y-BR BR-Y	DSR DCD	CH/CI DTR	I I	O O	I I	O O	DSR DCD	CH/CI DTR
20T 20R	Y-S S-Y	RTS CTS	CTS RTS	O I	I O	O I	I O	RTS CTS	CTS RTS
21T 21R	V-BL BL-V	SCRA SCTA	SCTEA RXCA	I I	O O	I I	O O	SCR SCT	SCT —
22T 22R	V-O O-V	SCRB SCTB	SCTEB RXCB	I I	O O	— —	— —	— —	— —
23T 23R	V-G G-V	RXDA TXDA	TXDA RXDA	I O	O I	I O	O I	RXD TXD	TXD RXD
24T 24R	V-BR BR-V	RXDB TXDB	TXDB RXDB	I O	O I	— —	— —	— —	— —
25T 25R	V-S S-V	— SG	— SG	— —	— —	— —	— —	SG —	SG —

NTAK03 TDS/DTR card

The NTDK20 SSC card includes the functionality of the NTAK03 TDS/DTR card. However, you can also configure the NTAK03 card, if required.

An NTAK19 cable is designed for use with the NTAK03 circuit card. However, you can use an NE-A25B 25-pair cable to extend the connections to the cross-connect terminal. Table 37 on [page 281](#) and Table 38 on [page 282](#) show the connections for each port.

Use a modem eliminator to connect the RS232 converter cable and the NTAK19 SDI cable to a terminal. The modem eliminator is not required when connecting to a modem.

Note: A modem eliminator is supplied with the system.

Table 37
NTAK03 connections at the cross-connect terminal — Port 0

Pair	Color	Signal	Designations (I=input, O=output)
1T 1R	W-BL BL-W	DSR DCD	I I
2T 2R	W-O O-W	— DTR	— O
3T 3R	W-G G-W	RTS CTS	O I
4T 4R	W-BR BR-W	RX TX	I O
5T 5R	W-S S-W	SG —	O —

Table 38
NTAK03 connections at the cross-connect terminal — Port 1

Pair	Color	Signal	Designations (I=input, O=output)
6T 6R	R-BL BL-R	DSR —	I —
7T 7R	R-O O-R	— DTR	— O
8T 8R	R-G G-R	RTS CTS	O I
11T 11R	BK-BL BL-BK	RX TX	I O
13T 13R	BK-G G-BK	— DCD	— I
22T 22R	V-O O-V	SG —	O —

Terminal setup

The terminal can be set up any time, except during data transmission. Do not set up the terminal during data transmission to avoid potential data loss.

Setup values are given in Table 40 on [page 284](#), Table 41 on [page 285](#), and Table 42 on [page 286](#). Use Procedure 44 to set up the terminal.

Procedure 44 Setting up the terminal

- 1 Turn on the power for the terminal.
- 2 Enter setup mode by pressing the <SETUP> key located on the top row of the special function keys.

The current setup values are displayed.

- 3 Change the value in each field on each setup screen as necessary.

Use the keys listed in Table 39 to view and change setup values.

Table 39
Setup (keys and functions)

Key	Function
Arrow key	Move from field to field
<Enter>	Scroll through possible values or cause requested action to take place (depends on type of field)
<Next Screen>	Move to next setup screen
<Prev Screen>	Move back to last screen

- 4 Save changes by returning to the **General setup** screen, moving the cursor to the **Saved** field, and pressing <Enter>.

Table 40
HP700/32 setup values

Global set-up screen			
Host Port	1	Keyboard	U.S.
Background	Dark	Message Translations	English
Screen Saver	10 Min	Setup Translations	English
Refresh Rate	72 Hz	Clear Display	
Key Click	Yes	Clear Comm	
User Set-up Screen			
Smooth Scroll	Jump scroll	Display Width	80
Cursor Type	Blink Line	Display Width Allowed	80 or 132
Cursor	Off	Char Cell Height	16
2nd Message Line	On	Chr on Width Change	Yes
Message Line	On	Aux Mode	Off
Status Line	On	Aux to Host	Off
On Line	Yes	Print Terminator=FF	No
Local Echo	Off	Logical Page Size	24
Auto Wrap	Off	Number of Pages	1
Auto Linefeed	Off		
Display Ctrl Codes	Off		
Emulation Set-up			
Emulation	VT 320	Cursor Keys	Normal
Terminal Id	VT 220	Print Scroll Region	Off
Control Codes	7-bit	User Features Locked	No
Characters Mode	8-bit	User Keys Locked	No
Preferred Char Set	DEC Supplemental	Data Procession Keys	No
Key Pad Mode	Application		
Port 1 Set-up			
Communications	Full Duplex	Limited Transmit	Off
Data Length	8-bits	DSRI	No
Parity	None	CTS	Ignore
Stop Bits	1	CD	Ignore
Xmit Baud	2400	Break Disconnect	170ms
RecvBaud	=Xmit	Disconnect Delay	Never
Xmit pace	Xoff	Aux printer Type	National
Recv Pace	Xoff at 128		
Port 2 Set-up			
Communications	Full Duplex	Xmit pace	Xon/Xoff
Data Length	8-bits	Recv Pace	Xoff at 128
Parity	None	Limited Transmit	Off
Stop Bits	1	Break Duration	170ms
Xmit Baud	9600	Aux Printer Type	National
RecvBaud	=Xmit		
Keyboard Set-up			
Lock Key	Caps Lock	Warning Bell	Yes
Kbd Lock Enable	Yes	Auto Answerback	Yes
Save Tabs	Yes	Answerback =	
Auto Repeat	Yes	Conceal Answerback	No
Margin Bell	Yes	Do not set any tabs or programmed keys.	

Table 41
VT420 setup values

Global Set-Up	Comm1=RS232	70Hz
On Line		
Sessions on Comm1	Printer Shared	
CRT Saver		
Display Set-Up	No Status Display	
80 Columns	Cursor Steady	
Interpret Controls	3x24 pages	
Auto Wrap	24 Lines/Screen	
Jump Scroll	Vertical Coupling	
Dark Screen	Page Coupling	
Cursor	Auto Resize Screen	
Block Style Cursor		
General Set-up	Normal Cursor Keys	
VT400 Mode, 7-bit Controls	No New Line	
User Defined Keys Unlocked	UPSS DEC Supplemental	
User Features Unlocked	VT420 ID	
8-bit Characters	When Available Update	
Application Keypad		
Communications Set-Up		
Transmit=2400	Disconnect, 2 s Delay	
Receive=Transmit	Limited Transmit	
Xoff=64	No Auto Answerback	
8bits, No Parity	Answerback=	
1 Stop Bit	Not Concealed	
No Local Echo	Modem High Speed = ignore	
Data Leads Only	Modem Low Speed = ignore	
Printer Set-Up		
Speed=2400	8bits, No Parity, 1 Stop bit	
No printer to Host	Print Full Page	
Normal Print Mode	Print National Only	
XOFF	No Terminator	
Keyboard Set-up	Local Compose	
Keyboard Set-up	Ignore Alt	
Typewriter Keys	F1 = Hold	
Caps Lock	F2 = Print	
Auto Repeat	F3 = Set-Up	
Keyclick High	F4 = Session	
Margin Bell	F5 = Break	
Warning Bell High	,< and .> Keys	
Character Mode	<> Key	
<XJ Delete	'~Key	
Tab Set-Up		
Leave this screen at the default values		

Table 42
VT220 setup values

Global Set-Up On Line Sessions on Comm1 CRT Saver	Comm1=RS232 Printer Shared	70Hz
Display Set-Up 80 Columns Interpret Controls Auto Wrap Jump Scroll	Light Text, Dark Screen Cursor Block Style Cursor	
General Set-up VT200 Mode, 7-bit Controls User Defined Keys Unlocked User Features Unlocked Multinational	Application Keypad Normal Cursor Keys No New Line	
Communications Set-Up Transmit=2400 Receive=Transmit Xoff at 64 8bits, No Parity 1 Stop Bit	No Local Echo Data Leads Only Disconnect, 2 s Delay Limited Transmit	
Printer Set-Up Speed=9600 Normal Print Mode 8bits, No Parity, 1 Stop bit	Print Full Page Print National Only No Terminator	
Keyboard Set-up Typewriter Keys Caps Lock Auto Repeat Keyclick High Margin Bell	Warning Bell Break Answerback= Not Concealed	
Tab Set-Up Screen Leave this screen at the default values		

End of Procedure

Installing and connecting an Ethernet cable

This section describes the procedures required to connect an Ethernet cable to:


- a Cabinet system (Procedure 45 on [page 290](#))
- a Chassis system (Procedure 46 on [page 292](#))

Cabinet system: IP expansion 10BaseT port

The Cabinet system provides one 10 Mbps Ethernet connection to a Local Area Network (LAN). The Ethernet cable connector is located just left of the retaining bar in the main and IP expansion cabinets as shown in Figure 117 on [page 288](#). The 10BaseT Ethernet port available on the SSC of an IP expansion cabinet is functional. However, the Ethernet port on the IP expansion cabinet does not have a default IP configuration. This means that the IP port configuration must be performed before it can be used.

It is not recommended to use the remote 10BaseT port in normal mode, as maintenance or alarm management are not available. In survival mode it assumes the system level configuration of the main cabinet port.

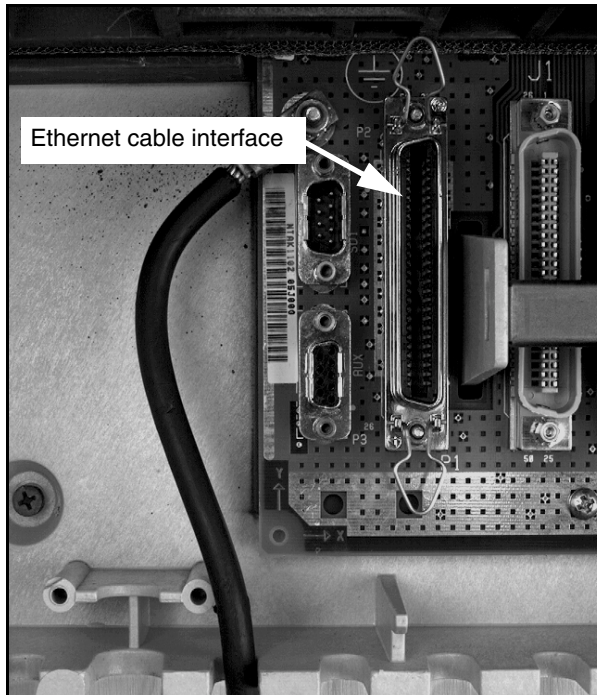Figure 117
Ethernet port location on the cabinet



Note: An Ethernet connection is not available on systems equipped with an NTDK26 Backwards Compatible Daughterboard on the SSC card (usually two-cabinet systems interconnected with copper cable).


J7 Jumper plug

The J7 jumper plug must be in place on the SSC card for the Ethernet function to operate. The jumper plug is present when the SSC card is shipped. However, it must be removed to accommodate the NTDK26 Backwards

Compatible Daughterboard used in multi-cabinet systems that are not interconnected with fiber-optic cable.

When a multi-cabinet system is upgraded from copper to fiber-optic cable inter-cabinet connections, the NTDK26 Backwards Compatible Daughterboard must be replaced with Fiber Expansion Daughterboards. The J7 jumper plug must be installed at the same time if the Ethernet capability is required. See Figure 118 on [page 290](#).

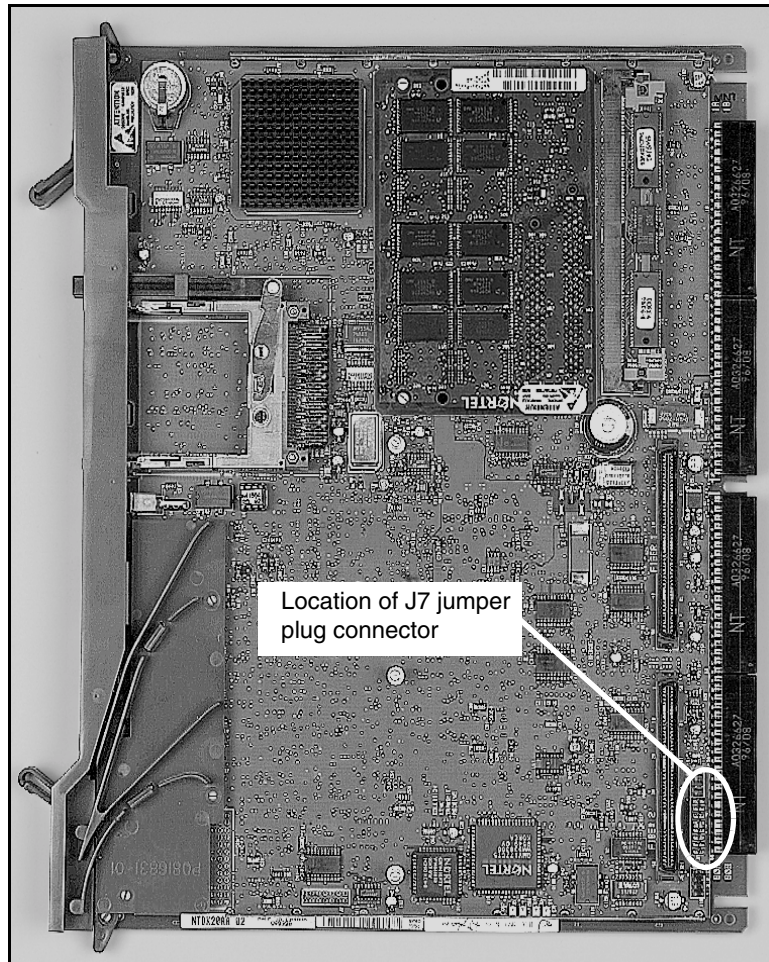Figure 118
J7 Jumper Plug location on NTDK20EA SSC card




Procedure 45
Connecting the Ethernet cable to the Cabinet system

- 1 Insert the 50-pin end of the cable into the cable connector on the left side of the retaining bar. See Figure 117 on [page 288](#).
- 2 Route the cable through the fifth cable groove from the left side.

The Ethernet cable is a 50-pin amphenol to 15-pin AUI adaptor cable (Part number for Ethernet cable NTDK27 A06030723). This provides a standard Medium Access Unit (MAU) attachment point.

Note: A jumper block located on connector J7 (near the Fiber 2 connector) (see Figure 118 on [page 290](#) and Figure 119 on [page 291](#)) on the component side of the NTDK20EA SSC card must be in place for the Ethernet connection to function. The NTDK20EA SSC card is normally shipped with the plug installed. If the Ethernet connection does not appear to function properly, check the jumper plug to make sure that it is installed.

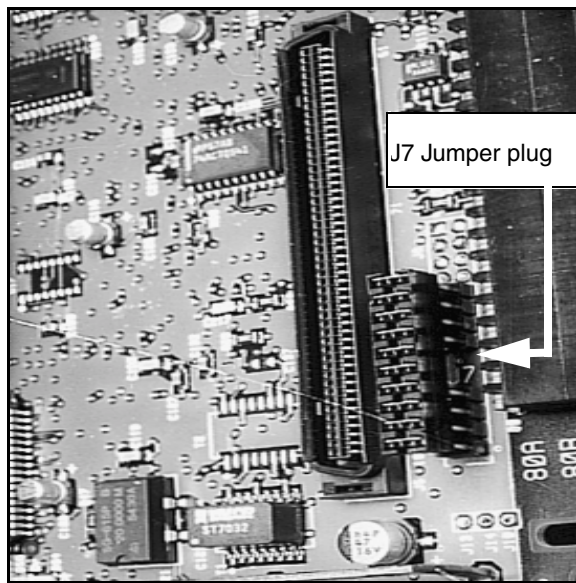Figure 119
Connector J7




- 3 If not previously done, configure the Ethernet port in software as described in *Software Input/Output: Maintenance* (553-3001-511).

End of Procedure

Chassis system Ethernet connection

The Chassis system provides a 10 Mbit Ethernet connection to a Local Area Network (LAN). The Ethernet cable connector is at the back of the chassis on the bottom left-hand side. See Figure 120.

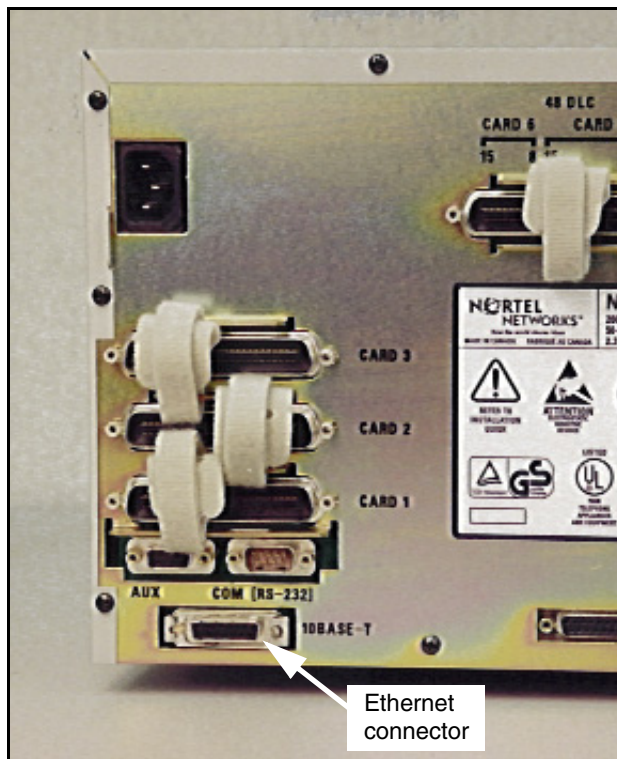Figure 120
Ethernet connection



Procedure 46 Connecting the Ethernet cable to the Chassis system

- 1 Insert an industry-standard Medium Access Unit (MAU) into the Ethernet connection at the bottom left-hand corner of the chassis.


Note: The Chassis system does not include the MAU.

- 2 Insert the Ethernet cable into the MAU. See Figure 121.

Note: When the time comes to configure the Ethernet link, use LD 117.

Figure 121

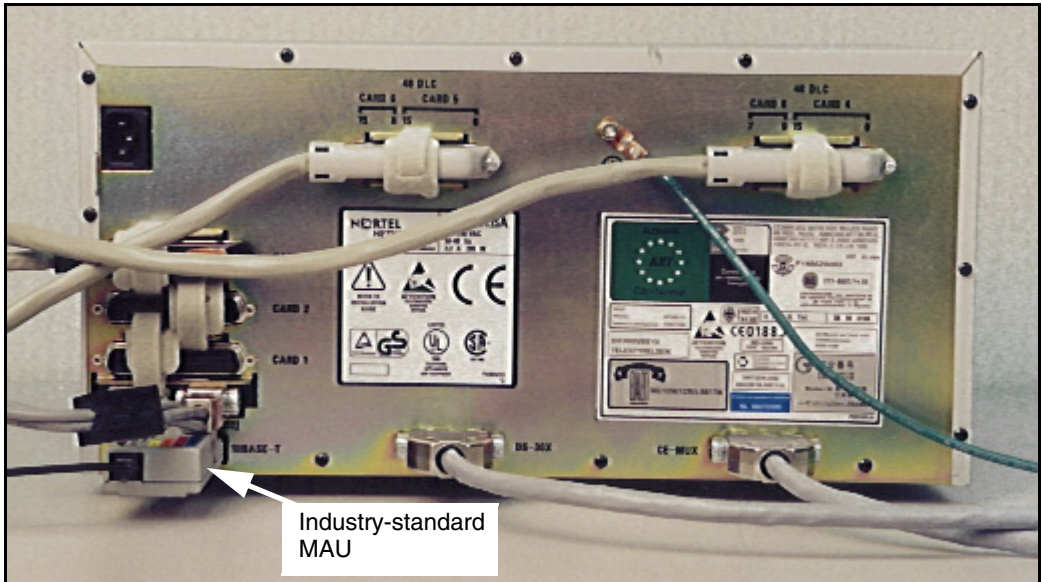Ethernet cable inserted into an industry-standard MAU



End of Procedure

Starting the Chassis system

Contents

This section contains information on the following topics:

Introduction	295
Startup procedures	295

Introduction

This chapter describes how to start the Chassis system and how to make sure that the system is operating correctly.

This chapter contains the following procedures:

- Procedure 47: “Startup procedure for a new system installation, using the Small System Controller card” on [page 296](#)
- Procedure 48: “Startup procedure for a previously installed system” on [page 297](#)

Before you continue with the procedures described in this section, make sure all necessary hardware is connected to or installed in the system. Check all connections, and make sure that you have installed all of the circuit cards correctly.

Startup procedures

Before you start the system, complete Step 1 through Step 18 in “Installing the Chassis system” on [page 107](#).


Procedure 47

Startup procedure for a new system installation, using the Small System Controller card

- 1 Test the power outlet. Make sure that the correct voltage of power is present before you plug the power cord into the outlet. The source must match the label on the back of the chassis.
- 2 Connect the power cord from the power connector on the back of the chassis to an ac power source. See Figure 122 on [page 296](#). Secure the power cable with a cable tie.

Figure 122

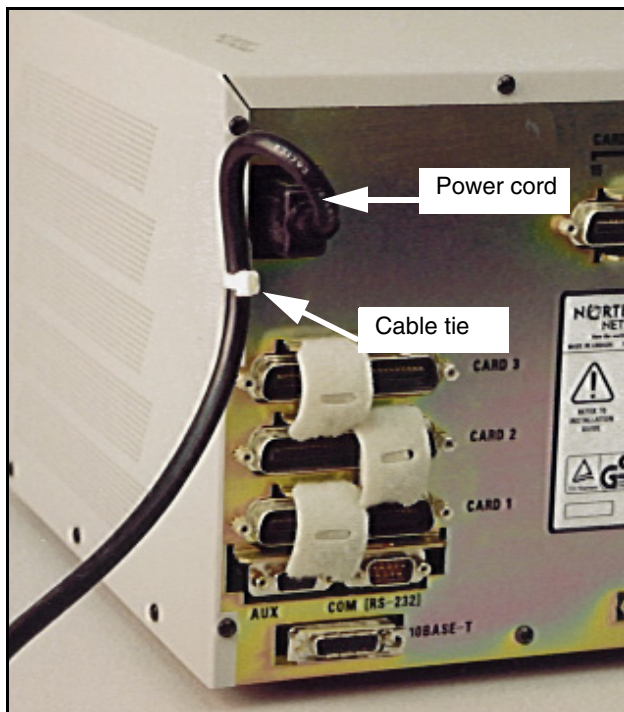Power connector on the back of the chassis



- 3 Turn the power switch to ON.

- 4 Observe the TTY or terminal screen. The TTY must be connected to TTY port 0.
- 5 When you have completed the software installation (see “Installing software in a new system” on [page 304](#)), observe the screen again.
- 6 Perform an EDD using LD 43.

After the system is loaded, a menu-driven program called the “Software Installation Program” is automatically called up.

End of Procedure

Procedure 48**Startup procedure for a previously installed system**

- 1 Test the power outlet. Make sure that the correct voltage of power is present before you plug the power cord into the outlet. The source must match the label on the back of the chassis.
- 2 Connect the power cord from the power connector on the back of the chassis to an ac power source. See Figure 122 on [page 296](#). Secure the power cable with a cable tie.
- 3 Turn the power switch to ON.
- 4 Observe the TTY or terminal screen.

Messages appear on the TTY or the terminal screen. When the message “INIXXX” appears, the system is in operation.
- 5 If required, set the system time and date using LD 2.
- 6 Perform an EDD using LD 43.

End of Procedure

Installing software

Contents

This section contains information on the following topics:

Introduction	299
Software Installation Program	300
Keycodes	301
Feature set and ISM parameters	302
Security device	303
AUX ID	303
Customer database	303
Installing software in a new system	304
Summary of steps	304
Software installation on the IP expansion cabinet or chassis using the preprogrammed software daughterboard	318

Introduction

This chapter describes the Software Installation Program and how to install software in the Small System.

Before continuing with the procedures outlined in this chapter, verify that all pertinent hardware is either connected to or installed in the system. Check all connections, and make sure that you have installed all of the circuit cards correctly.

Software Installation Program

The Software Installation Program provides a menu-driven method of selecting from the different options of installing, modifying, or upgrading the following:

- software
- customer data
- feature set
- Incremental Software Management (ISM) parameters

The flash ROM stores information about the selections. The information is a list of instructions that the program follows when it runs.

Starting the program

The Software Installation Program must run from TTY 0 (port 0 on card 0). The following are the two methods of starting the Software Installation Program:

- Issue the **UPGRADE** command in LD 143.
- Press the <**Control**> **I** keys while the terminal screen displays the installation prompt during SYSLOAD.

Note: When you turn on a new system before you have installed the software, the Software Installation Program is called up automatically.

Function selection

The Software Installation Program is menu driven. The main menu provides the core functionality of the program. The Software Installation Program includes the following key functions:

- installs software in a new system
- upgrades and modifies software in an existing system
- uses utilities to work with archived databases, review data, back up data, undo an installation in progress, and clear unwanted data

After you have made all installation or upgrade selections, you must enter valid keycodes. The system validates the keycode. If you enter an invalid keycode, the installation function does not continue.

Note: If you enter a keycode that is not valid, the software and databases on the present system are not affected.

When the keycode validation passes, the software is installed on the system.

The Software Installation Program has the following additional options:

- **Clear Upgrade Information:** If the installation terminates after you have entered the keycodes, but before the installation is complete, you can abort the installation with the “Clear Upgrade Information” option.
- **Confirm Upgrade Information:** This option allows you to review the selected installation options. You can use the “Confirm Upgrade Information” after the system validates the keycodes, but before the installation is complete.
- **Set system time and date:** The system time and date is usually set before installation. This makes sure that all flash drive files have the correct creation date.

Keycodes

A security keycode system protects the installation of software, feature set, and Incremental Software Management (ISM) parameters. The installation does not continue unless you enter the correct keycodes.

You require keycodes for each new installation, and for existing system upgrades. Keycodes are on a Keycode Data Sheet, which is supplied with the software and security device. There is a different keycode assigned to each site for a particular combination of items, such as software release, feature set, and ISM parameters.

Note: Contact your Nortel Networks representative if the Keycode Data Sheet is missing.

The Software Installation Program validates the keycodes. If the keycodes are valid, the installation function continues.

If the keycodes are unsuccessful, check the following:

- software issue
- feature set name
- any additional packages
- TNs
- ISM parameters
- security ID
- auxiliary ID (the old site ID, if this is an upgrade)
- ensure the correct keycodes were entered. All items must match the Keycode Data Sheet exactly.

If the keycodes still are not successful, then call your Service Representative.

The system limits the validation of keycodes to three consecutive attempts. After the third unsuccessful attempt, the Software Installation Program returns to the main menu. Any data entered during this session is lost.

Feature set and ISM parameters

The Software Installation Program allows the selection of a feature set to be installed and enabled on the Small System. A feature set, such as Enhanced Business or Networking Services, has an associated list of software packages and ISM parameters. The Software Delivery card (PC Card) can include several preconfigured feature sets.

The Software Installation Program also allows the addition of individual packages from the feature set and the changing of ISM system parameters.

Additions and changes are keycode controlled; therefore, the packages and ISM parameters must match those corresponding to the site's keycodes.

Note: The Software Installation Program does not check the prerequisites and interactions of added packages.

Security device

A security device comes with each new Small System. Attach this device to the component side of the NTDK20 Small System Controller (SSC) card at the time of initial installation. The security device remains there for the life of the system.

AUX ID

Enter the AUX ID using the Software Installation Program. For new Small System sites, the AUX ID is the system security ID. When assigned, the AUX ID remains for the life of the system.

Customer database

The Software Installation Program allows the installation of a customer database from one of the following sources:

Preconfigured database

The PC Card can include several preconfigured databases and their associated feature sets. In addition, a minimal database is provided which contains basic system configuration information with no customer data.

Archived database

The Software Installation Program allows the archiving of various databases which can be used later at Small System sites. It allows multiple databases to be configured off-site and then installed ready-to-use at customer sites.

Note: Off-site programming of databases is subject to all security keycode restrictions. The off-site system must either use the security device that will be installed in the Small System at the customer site, or must have its own keycodes for the feature set used.

Remote restored database

A database can be restored remotely using the LD 143 Customer Configuration Backup and Restore (CCBR) remote restore command.

Backed up Database

The Backed up Database option allows the copy on the backup flash drive to be installed. It is provided to recover a customer database if the customer database on the primary flash drive becomes corrupted.

Installing software in a new system

Before beginning the software installation process, complete Step 1 through Step 9 in “Installing a new Cabinet system” on [page 92](#) or Step 1 through Step 21 in “Summary of installation procedures” on [page 107](#). You must install the security device on the SSC card, and you must have the Keycode Data Sheet available.

Note: In the menus and screens, there are references to Option 11 and Option 11E. These references do not apply to the Chassis system.

Summary of steps

The following list summarizes the software installation steps:

- 1** Get MAC address from IP daughterboard (if applicable).
- 2** Power up/Install IP expansion cabinet or chassis.
- 3** Power up main cabinet or chassis. Ensure Link LED is green.
- 4** Perform software installation on the main cabinet or chassis.
- 5** Select the New System Installation menu.
- 6** Select feature set and packages.
- 7** Select a database.
- 8** Select ISM parameters. Ensure Survivability parameter is configured correctly.
- 9** Configure MAC address of the IP expansion cabinet or chassis (if applicable).
- 10** Validate keycodes.
- 11** Set the system time and date.

- 12 Reboot the main cabinet or chassis.
- 13 Wait for link to come up.

Note: IP expansion cabinet or chassis software must be the same software version as the main cabinet or chassis.



CAUTION WITH ESDS DEVICES

Wear the antistatic wrist strap provided in the bottom of the cabinet before handling circuit cards. Static electricity can damage the components of power supplies and circuit cards.

Procedure 49 **Installing software**

Note: This procedure assumes that the system installation procedures in the chapters “Installing the Cabinet system” on [page 91](#) or “Installing the Chassis system” on [page 107](#) have been performed and that the system is up and running. The Link LED on the software daughterboards should be lit and green.

- 1 Make sure the SSC card is in CPU slot (slot 0) of the main cabinet or chassis.

For first-time installations, software is installed from the SSC card. Software is loaded on the SSC card before it is sent to the customer site.

2 Observe the terminal screen.


If	Then
The following is displayed: SOFTWARE INSTALLATION PROGRAM	Proceed to step 5.
The following is displayed: current system time and date: 00:00:00 -- 00/00/00	Proceed to step 4.
The following is displayed: INSERT SOFTWARE DELIVERY CARD	Proceed to step 3.
None of the above appears.	Refer to <i>Small System: Maintenance</i> (553-3011-500)

3 Skip this step unless you are using the Software Delivery card (PC Card) to install the software.

Insert the card in Slot A in the PC Card socket located in the faceplate of the NTDK20 SSC card. Carefully press on the PC Card until it is firmly seated. See Figure 123 on [page 307](#).

Note: You do not have to turn off the system power before you install the PC Card in Slot A.

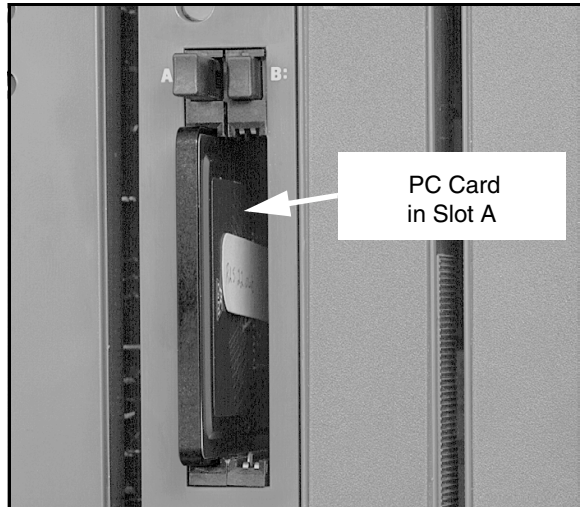Figure 123
PC Card slot location



4 Set the system time and date.

Note: The Time and Date prompt appears only when the Install Setup Program detects a system Year Date that is not in the range of 1995–2095. The responses shown below are examples of how to enter the system Time and Date:

```
Enter new time (hh/mm/ss)
08:00:00 <CR>
Enter new date (yy/mm/dd)
95/05/01 <CR>
08:00:00 -- 95/05/01 is the new system time and date
y <CR>
```

5 Select Main Menu option 1 for a new installation.

If you are installing from a PC Card, select item 4.

Call Server/Main Cabinet Software Installation Main Menu:

1. New Install or Upgrade from Option 11/11E - From Software Daughterboard
2. System Upgrade
3. Utilities
4. New System Installation - From Software Delivery Card

[q]uit, [p]revious, [m]ain menu, [h]elp or [?],
<CR> - redisplay

Enter selection: **1**<CR>

6 Indicate whether the system has a Succession Signaling Server.

Does this System have a Signaling Server? (y/n):

*** NOTE: The following prompts require information on the Keycode Data Sheet.
Please have it available. ***

Succession Enterprise Software Rls 0300 will be installed.

7 Select the feature set to be enabled.

Note: The feature set selected must match the one provided with keycodes. The feature set names shown below are examples only.

Select Feature Set You Wish to Enable:

1. General Business (NTSKxxxx)
2. Enhanced Business (NTSKxxxx)
3. Enterprise (NTSKxxxx)
4. NAS/VNS (NTSKxxxx)

[q]uit, [p]revious, [m]ain menu, [h]elp or [?],
<CR> redisplay

(example only:)

Enter Selection: **2** <CR> (Enhanced Business)

8 Indicate if you want to add packages.

Feature Set Selection: Enhanced Business

Do you wish to add packages?

Select no, yes or abort:

n <CR> (no)

y <CR> (yes)

a <CR> (abort)

Note: Abort returns you to the main menu.

If the response was NO go to step 11 on [page 310](#).

If the response was YES go to step 9 on [page 309](#).

9 Select the Feature packages that you want to add.

Summary of Packages selected is:

0-2 4-5 7-14 16-25 28-29 32-64 67 70-77 79-83 86-93
95 98-104 107-111 113-116 118-120 122-125 127-129
131-133 135 137-141 167

Enter package(s) to be added, blank line to end:

215-235 <CR>

Note: A carriage return, <CR>, ends selection entry or if no packages are to be added.

10 Confirm feature set and packages.

Your Feature Set Selection is "Enhanced Business":

Additional Packages selected: 215-235

Summary of Packages selected is:

0-2 4-5 7-14 16-25 28-29 32-64 67 70-77 79-83 86-93
95 100-104 107-111 113-116 118-120 122-125 127-129
131-133 135 137-141 167

...

...

215-235

Is this selection correct?

n <CR> (no)

y <CR> (yes)

a <CR> (abort, return to main menu)

If the response was NO go to step 7 on [page 308](#).

If the response was YES go to step 11 on [page 310](#).

11 Select a database.

If you are installing from a PC Card, go to Step 12 on page 310.

If you are installing from an SSC card, continue here.

Select menu option 1 or 2 for a new system installation:

1. preconfigured database - Enhanced Business
 2. Basic Configuration (Release 22)
 3. CCBR Restore File
 4. Option 11/11E Software Cartridge
- [q]uit, [p]revious, [m]ain menu, [h]elp or [?],
<CR> redisplay

Enter Selection: **1** <CR>

Note: Use Options 3 and 4 when upgrading an Option 11/11E to a Cabinet system. There is no supported upgrade path from Option 11/11E to a Chassis system. Therefore, do not use these options for the Chassis system.

If you selected 1 or 2, go to [Step 14 on page 311](#).

12 Select a database using the PC Card.

If you are installing from a PC Card, continue here.

Select menu option 1, 2, or 3 for a new system installation:

Select database to Install:

1. preconfigured database - Enhanced Services
 2. Basic Configuration
 3. Archived Database
- [q]uit, [p]revious, [m]ain menu, [h]elp or [?],
<CR> redisplay

Enter Selection: **3** <CR>

If you selected 3 (Archived Database), go to Step 13. If you selected 1 or 2, go to [Step 14 on page 311](#).

13 Select an Archived Database.

The terminal screen displays the available archived databases. The following are examples only.

Archived Database available:

1. Company ABC
2. XYZ.Offices
3. Green.Packaging

[q]uit, [m]ain menu, [p]revious menu, <CR> -
redisplay

14 Confirm database selection.

Do you wish to continue?

n <CR> (no)

y <CR> (yes)

a <CR> (abort, return to main menu)

If the response was NO, go to step 11 on [page 310](#).

If the response was YES, go to step 15 on [page 311](#).

15 Review ISM parameters.

Note: On a new installation, the ISM parameters displayed on the terminal screen are the default settings related to the feature set selection. You can accept these settings without changes or change the settings to meet the requirements of the new system.

Example:

Current ISM Parameters:

TNS (100) (maximum number of terminal numbers)

ACDN (300) (maximum number of ACD DN's)

AST (100) (maximum number of associate Sets)

LTID (100) (maximum number of Logical Terminal IDs)

RAN CON (12) (default RAN connection)

RAN RTE (2500) (default RAN routes)

MUS CON (100) (default MUS connection)

BRAND (0) (brandline)

ACD AGENTS (300) (maximum number of ACD agents)

ANALOGUE TELEPHONES (2500) (maximum number of analogue sets)

ATTENDANT CONSOLES (2500) (maximum number of attendant sets)

BRI DSL (100) (maximum number of Digital Subscriber Loops)

CLASS TELEPHONES (2500) (maximum number of class sets)

DATA PORTS (2500) (maximum number of data ports)

DIGITAL TELEPHONES (2500) (maximum number of Digital sets)

INTERNET TELEPHONES (0) (maximum number of Internet sets)

PHANTOM PORTS (2500) (maximum number of phantom ports)

WIRELESS TELEPHONES (2500) (maximum number of Wireless sets)

WIRELESS VISITORS (0) (maximum number of Wireless Visitors)

ITG ISDN TRUNKS (2500) (maximum number of ISDN trunks)

TRADITIONAL TRUNKS (2500) (maximum number of traditional trunks)

TMDI D-CHANNELS (100) (maximum number of channels)

SURVIVABILITY (0) (number of survivable IP expansion cabinets or chassis)

Do you wish to change ISM parameters?

n <CR> (no change)

y <CR> (change)

a <CR> (abort, return to main menu)

If the response was YES, go to [Step 16 on page 312](#).

If the response was NO, go to [Step 18 on page 315](#).

16 Select ISM parameters.

Enter new ISM parameters, <CR> to leave unchanged:

TNS (100) **200**

ACDN (300)

AST (100)

LTID (100)
RAN CON (12)
RAN RTE (2500)
MUS CON (100)
BRAND (0)
ACD AGENTS (300)
ANALOGUE TELEPHONES (2500)
ATTENDANT CONSOLES (2500)
BRI DSL (100)
CLASS TELEPHONES (2500)
DATA PORTS (2500)
DIGITAL TELEPHONES (2500)
INTERNET TELEPHONES (0)
PHANTOM PORTS (2500)
WIRELESS TELEPHONES (2500)
WIRELESS VISITORS (0)
ITG ISDN TRUNKS (2500)
TRADITIONAL TRUNKS (2500)
TMDI D-CHANNELS (100)
SURVIVABILITY (0) **4**

17 Confirm ISM parameters.

New ISM parameters are:

TNS (200)
ACDN (300)
AST (100)
LTID (100)
RAN CON (12)
RAN RTE (2500)

MUS CON (100)
BRAND (0)
ACD AGENTS (300)
ANALOGUE TELEPHONES (2500)
ATTENDANT CONSOLES (2500)
BRI DSL (100)
CLASS TELEPHONES (2500)
DATA PORTS (2500)
DIGITAL TELEPHONES (2500)
INTERNET TELEPHONES (0)
PHANTOM PORTS (2500)
WIRELESS TELEPHONES (2500)
WIRELESS VISITORS (0)
ITG ISDN TRUNKS (2500)
TRADITIONAL TRUNKS (2500)
TMDI D-CHANNELS (100)
SURVIVABILITY (4)

Is this correct?

n <CR> (no)

y <CR> (yes)

a <CR> (abort, return to main menu)

If the response was NO, go to [Step 15 on page 311](#).

If the response was YES, go to [Step 18 on page 315](#).

18 Define the AUX ID.

Note: The default AUX ID is the system ID provided with the Small System.

Example:

```
Security ID: 10000326
Current AUX ID: 10000326
Do you wish to change the AUX ID?
```

```
y <CR> (yes)
n <CR> (no)
a <CR> (abort, return to main menu)
```

If the response was NO, go to step 20 on [page 315](#).

If the response was YES, go to step 19 on [page 315](#).

19 Enter the AUX ID.

```
Enter the Option 11/11E Security ID for the new AUX
ID, <CR> to maintain
12121212 <CR>
```

```
New AUX ID: 12121212
```

```
Is this correct?
```

```
y <CR> (yes)
n <CR> (no)
a <CR> (abort, return to main menu)
```

If the response was NO, go to step 18 on [page 315](#).

If the response was YES, go to step 20 on [page 315](#).

20 Review and confirm information entered.

```
New Installation Information Summary:
```

```
Security ID: 10000326
```

```
Aux ID: 12121212
```

```
Cabinet Type: MAIN
```

```
Feature Set: Enhanced Business
```

```
Additional Pkgs: 215-235
```

```
Database: Company.ABC
```

```
OLD          NEW
```

```
S/W Release: 2520F 2520X
ISM Parameters
TNS: 100 200
ACDN: 300 300
AST: 100 100
LTID: 100 100
RAN CON 12 12
RAN RTE 2500 2500
MUS CON 100 100
BRAND 0 0
ACD AGENTS 300 300
ANALOGUE TELEPHONES 2500 2500
ATTENDANT CONSOLES 2500 2500
BRI DSL 100 100
CLASS TELEPHONES 2500 2500
DATA PORTS 2500 2500
DIGITAL TELEPHONES 2500 2500
INTERNET TELEPHONES 0 0
PHANTOM PORTS 2500 2500
WIRELESS TELEPHONES 2500 2500
WIRELESS VISITORS 0 0
ITG ISDN TRUNKS 2500 2500
TRADITIONAL TRUNKS 2500 2500
TMDI D-CHANNELS 100 100
SURVIVABILITY 0 4
```

Note: The terminal screen displays both the old and the new parameter values.

Is this correct?

y <CR> (yes)

n <CR> (no)

a <CR> (abort, return to main menu)

If the response was NO, go to [Step 7 on page 308](#).

If the response was YES, go to [Step 21 on page 317](#).

21 Enter the keycodes from the Keycode Data Sheet.

Enter new Keycodes:

Key 1:

Key 2:

Key 3:

xxxxxxxx <CR>

yyyyyyyy <CR>

zzzzzzzz <CR>

After you enter the last keycode, the system displays a successful or unsuccessful message. Follow the instructions given below.

Keycode validation successful.

WARNING A system restart will be invoked as part of the software installation process.

If the **successful** message appears, go to step 22 on [page 317](#).

If the **unsuccessful** message appears, repeat this step (step 21).

After three unsuccessful keycode validation attempts, the following message appears:

Keycode validation unsuccessful.

Installation aborted...returning to main menu.

22 Complete the software installation.

Are you sure you wish to perform the installation?

y <CR> (yes)

n <CR> (no)

a <CR> (abort, return to main menu)

If the response was NO, go to step 5 on [page 308](#).

If the response was YES, this is the end of the Software Installation Program. Continue with the next step (step 23).

- 23** Observe the screen a second time once the installation program has been completed.

Messages will appear on the TTY or terminal screen. When the message "INIXXX" appears, the system is operational.

- 24** Perform an EDD using LD 43. Refer to *Software Input/Output: Maintenance (553-3001-511)* for further information on LD 43.

- 25** For an IP expansion Small System, configure the IP Daughterboard MAC and IP addresses. Refer to LD 117 in *Software Input/Output: Maintenance (553-3001-511)*.

End of Procedure

Software installation on the IP expansion cabinet or chassis using the preprogrammed software daughterboard

Point-to-Point or Layer 2 with BootP configuration

For Point-to-Point or Layer 2 with BootP configuration, you do not need a TTY connected to the IP expansion cabinet or chassis. Power up the system, and the software installs automatically.

Layer 2 or Layer 3 with manual configuration

Follow Procedure 50 on [page 319](#) to install software using a TTY connected to the IP expansion cabinet or chassis.

Procedure 50**Installing software for IP expansion, using the preprogrammed software daughterboard**

- 1 Power up the system, and the menu in step 2 appears.

IMPORTANT!

BootP is a broadcast message used for IP Address discovery.

- For Point-to-Point installation, you must select Option 1.
- For Layer 2 LAN installation, the recommended selection is Option 1.
- For Layer 3 LAN installation, you must select Option 2.

- 2 Select Manual Configuration (option 2) from the IP Configuration Menu.

IP Configuration Menu:

```
1. Automatically Using BootP
2. Using Manual Configuration
3. Keep Existing Configuration
[q]uit, [p]revious, [m]ain menu, [h]elp or [?],
<CR> - redisplay
```

Enter Selection: **2 <CR>**

- 3 Configure IP Expansion parameters.

The following sample IP parameters will be used in the menu example:

IP address of the expansion cabinet 100BaseT(F): 47.147.20.101
Subnet Mask of the expansion cabinet 100BaseT(F): 255.255.255.0
Gateway address: 47.147.20.1
IP address of the main cabinet 100BaseT(F): 47.147.10.100

The IP Parameters menu is displayed:

Enter Expansion New IP Parameters:

Expansion IP: **47.147.20.101**
Expansion NetMask: **255.255.255.0**
Main IP: **47.147.10.100**

Expansion Router/Gateway: **47.147.20.1**

Is this correct?

y <CR> (yes)

n <CR> (no)

a <CR> (abort, return to main menu)

Note: “Expansion Router/Gateway” appears only in a Layer 3 configuration.

- 4 The software installation completes automatically without user intervention.
- 5 Refer to LD 117 in *Software Input/Output: Maintenance* (553-3001-511) to configure the IP Address of the IP expansion cabinet or chassis.

End of Procedure

IP Line card configuration

Contents

This section contains information on the following topics:

Introduction	321
Voice Gateway Media Card configuration on the Small System	322
Configuring Voice Gateway Media Cards on cabinets or chassis	324
Configuring IP Line data.	326
Configuring IP Line data with OTM 2.1	326
Transmitting IP Line node configuration data	328
Configuring IP Line data with Element Manager	329
Transferring node configuration from Element Manager to the Voice Gateway Media Cards	330
Upgrading software and firmware.	330

Introduction

The IP Line card supports the i2002 and i2004 Internet Telephone and the i2050 Software Phone. The IP Line card provides a communication gateway between the IP data network and the Small System. The Internet Telephone translates voice into data packets for transport using Internet Protocol (IP). The Internet Telephone uses the customer's IP network (TLAN) to communicate with the IP Line card and the optional Dynamic Host Configuration Protocol (DHCP) server. A DHCP server is used to provide the required information needed to enable the Internet Telephone network connection and to connect it to the IP Line card.

There are three types of IP Line card:

- the ITG-P 24-port line card (occupies 2 slots)
- the Succession Media Card 8-port line card (occupies 1 slot)
- the Succession Media Card 32-port line card (occupies 1 slot)

If a Succession Media Card 32-port card, a Succession Media Card 8-port card, or an ITG-P 24-port card is running IP Line 3.1 software, it is known as a Voice Gateway Media Card.

The Voice Gateway Media Card plugs into the Small System's main or IP expansion cabinet or chassis. The Voice Gateway Media Card communicates with the Small System Controller (SSC) card over the ELAN using 10BaseT connectivity.

The Voice Gateway Media Card is administered using multiple management interfaces including:

- IP Line 3.1, a Graphical User Interface (GUI) provided by Optivity Telephony Manager (OTM) 2.1
- a Command Line Interface (CLI)
- administration and maintenance overlays
- a Web browser interface provided by Element Manager

Refer to *IP Line: Description, Installation and Operation* (553-3001-365) for more information about the Voice Gateway Media Cards and the IP Line application.

Voice Gateway Media Card configuration on the Small System

The steps used to install a Voice Gateway Media Card on the Small System are similar to those for any Meridian 1 or Succession 1000M Large System. In addition to the procedures listed below follow the procedures provided in *IP Line: Description, Installation and Operation* (553-3001-365) and *Internet Terminals* (553-3001-368). Where installation differs in the Small System's IP expansion cabinets or chassis, the details are provided in

the following procedures. Certain special considerations apply for a survivable Small System. Refer to “IP Line in survivable Small Systems” on [page 517](#).

- 1** Configure the Voice Gateway Media Card on the main and IP expansion cabinets or chassis. Follow Procedure 51 on [page 324](#) and Procedure 52 on [page 325](#).
- 2** Continue with the procedures in *IP Line: Description, Installation and Operation* (553-3001-365) and *Internet Terminals* (553-3001-368) for configuring IP Line for Meridian 1 systems, as follows:
 - a** Configure bandwidth management zones (LD 117).
 - b** Configure IP Line physical TNs (LD 14).
 - c** Configure virtual superloops for Internet Telephones (LD 97).
 - d** Configure Meridian 1 features (LD 11).
 - e** Configure Internet Telephone dedicated soft keys.
- 3** Configure IP Line data with OTM or Element Manager. See “Configuring IP Line data with OTM 2.1” on [page 326](#) and “Configuring IP Line data with Element Manager” on [page 329](#).
- 4** Transmit IP Line node configuration data from OTM or Element Manager to the Voice Gateway Media Cards.
- 5** Upgrade the Voice Gateway Media Card software and Internet Telephone set firmware.
- 6** Assemble and install Internet Telephones. Refer to *Internet Terminals* (553-3001-368) for instructions on the installation of the Internet Telephone.
- 7** For a survivable system, verify IP Line operation in survival mode. Refer to Procedure 75 on [page 519](#).

Configuring Voice Gateway Media Cards on cabinets or chassis

Use Procedures 51 and 52 to configure the Small System's main cabinet or chassis and any IP expansion cabinets or chassis.

Procedure 51

Configuring the ELAN IP address for the Small System active ELNK Ethernet interface on the main cabinet or chassis, if not already defined

- 1 Go into LD 117.
- 2 Create host entries with IP address on the ELAN subnet. Enter the following command:

NEW HOST <hostname> <IP_addr> <cab#>
Where:
<cab#> = 0, for the main cabinet or chassis
- 3 Configure the ELAN Mask. Enter the following command:

CHG MASK <maskvalue> <cab#>
Where:
<maskvalue> = xxx.xxx.xxx
<cab#> = 0, for the main cabinet or chassis
- 4 Configure a new Routing Entry. Enter the following command:

NEW ROUTE <destination IP> <gateway IP> <cab#> <port#>
Where:
<destination IP> is the ELAN IP address of IP Line card on the main cabinet or chassis
<gateway IP> is the ELAN IP address of the main cabinet or chassis
<cab#> = 0 for main cabinet or chassis
<port#> = 0 for 10BaseT
- 5 Verify your IP address for the Ethernet. Enter the following command:

PRT ELNK
- 6 Activate New Host entry. Enter the following command:

CHG ELNK ACTIVE <hostname> <cab#>
Where:
<cab#> = 0, for the main cabinet or chassis

- 7 Update the ELAN configuration. Enter the following command:

UPDATE DBS

- 8 Reboot the main cabinet or chassis for the changes to take effect or go into LD 137 and disable and enable the ELNK. Enter the following commands:

DIS ELNK

ENL ELNK

End of Procedure

Procedure 52**Configuring the ELAN IP address for the Small System active ELNK Ethernet interface for an IP expansion cabinet or chassis**

- 1 Go into LD 117.
- 2 Create host entries with IP address on the ELAN subnet. Enter the following command:

NEW HOST <hostname> <IP_addr> <cab#>

Where:

<cab#> = 1–4, for the IP expansion cabinet or chassis

- 3 Configure the ELAN Mask. Enter the following command:

CHG MASK <maskvalue> <cab#>

Where:

<maskvalue> = xxx.xxx.xxx

<cab#> = 0, for the main cabinet or chassis

- 4 Configure a new Routing Entry. Enter the following command:

NEW ROUTE <destination IP> <gateway IP> <cab#> <port#>

Where:

<destination IP> is the ELAN IP address of IP Line card on the IP expansion cabinet or chassis

<gateway IP> is the ELAN IP address of the IP expansion cabinet or chassis

<cab#> = 1–4 for IP expansion cabinets or chassis

<port#> = 0 for 10BaseT

To configure IP Line for other IP expansion cabinets or chassis, repeat steps 1–4.

- 5 Verify your IP address for the Ethernet. Enter the following command:

PRT ELNK

- 6 Activate New Host entry. Enter the following command:

CHG ELNK ACTIVE <hostname> <cab#>

Where:

<cab#> = 1–4 for IP expansion cabinets or chassis

- 7 Update the ELAN configuration. Enter the following command:

UPDATE DBS

- 8 Reboot the main cabinet for the changes to take effect or go into LD 137 and disable and enable the ELNK. Enter the following commands:

DIS ELNK

ENL ELNK

End of Procedure

Configuring IP Line data

IP Line data can be configured in OTM or Element Manager.

Configuring IP Line data with OTM 2.1

Refer to *IP Line: Description, Installation and Operation* (553-3001-365) and *Internet Terminals* (553-3001-368) for a detailed description of the procedures listed below.

- 1 Manually add an IP Telephony node. Do not use this node anywhere else. It is unique for this cabinet or chassis.
- 2 Configure the card properties of the Voice Gateway Media Card.
- 3 Configure DSP Profile data.
- 4 Configure SNMP traps and ELAN gateway routing table.

- 5 Configure the main cabinet or chassis ELAN IP address, survivable IP expansion cabinet or chassis ELAN IP address, and TLAN voice port.

Enter the Small System IP ELAN address of the main cabinet or chassis.

Define the survivable IP expansion cabinet or chassis IP address in OTM. There is an extra field in OTM to configure the survivable IP expansion cabinet or chassis IP address and TLAN port. Use the same secondary IP address as the IP expansion cabinet or chassis ELAN address. If the IP expansion cabinet or chassis is non-survivable, leave the default value at "0.0.0.0".

Note: The ELAN address of the survivable IP expansion cabinet or chassis entered must be on the same subnet as the main cabinet or chassis. If the IP expansion cabinet or chassis is on a different subnet, use the VLAN concept to keep both ELAN addresses on the same subnet.

- 6 Configure security for SNMP access.
- 7 Configure file server access.
- 8 Configure QoS.
- 9 Configure SNTP.

Figure 124
OTM 2.1 primary and secondary IP addresses

New Node

General | Configuration | DSP Profile | SNMP Traps/Routing and IPs | Ports | Security | File Server | QoS | SNTP

Enter the IP addresses and signaling ports. Changes must be transmitted to each card.

ELAN

Call Processor IP : 10 . 123 . 124 . 110

Survival Cabinet IP 0 . 0 . 0 . 0

Signaling port 15000

Broadcast port 15001

TLAN

Signaling port 5000

Voice port 5200

Restore Defaults

OK Cancel Apply Help

Transmitting IP Line node configuration data

IP Line node and card properties are configured in the OTM IP Line IP Phones application and then transmitted to the IP Line cards. OTM converts the configuration data to text files and transmits files to the line cards. Refer to *IP Line: Description, Installation and Operation* (553-3001-365) and *Telephones and Consoles* (553-3001-367). Complete the following steps:

- 1 Set the Leader 0 IP address from TTY connected to local RS232 maintenance port.
- 2 Transmit the node and card properties from OTM IP Line IP Phones application to Leader 0.
- 3 Transmit card properties to all cards in the node.

Configuring IP Line data with Element Manager

Refer to *IP Line: Description, Installation and Operation* (553-3001-365) and *Internet Terminals* (553-3001-368) for a detailed description of the procedures listed below.

- 1 Manually add an IP Telephony node. Do not use this node anywhere else. It is unique for this cabinet or chassis.
- 2 Configure SNMP traps and community name access for security.
- 3 Configure Voice Gateway Profile data.
- 4 Configure Quality of Service.
- 5 Configure the main cabinet or chassis ELAN IP address, survivable IP expansion cabinet or chassis ELAN IP address, TLAN voice port, and routes.

Enter the Small System IP ELAN address of the main cabinet or chassis.

Define the survivable IP expansion cabinet or chassis IP address in Element Manager. There is an extra field in Element Manager to configure the survivable IP expansion cabinet or chassis IP address and TLAN port. Use the same secondary IP address as the IP expansion cabinet or chassis ELAN address. If the IP expansion cabinet or chassis is non-survivable, leave the default value at "0.0.0.0".

Note: The ELAN address of the survivable IP expansion cabinet or chassis entered must be on the same subnet as the main cabinet or chassis. If the IP expansion cabinet or chassis is on a different subnet, use the VLAN concept to keep both ELAN addresses on the same subnet.

- 6 Configure file server access.
- 7 Configure loss and level plan.
- 8 Configure the card properties of the Voice Gateway Media Card.
- 9 Submit and transfer the node information.

Figure 125
Element Manager LAN configuration

LAN configuration	
Management LAN (ELAN) configuration	
Call server IP address	<input type="text" value="47.11.221.41"/>
Survivable Succession Media Gateway IP address	<input type="text" value="0.0.0.0"/>
Signaling port	<input type="text" value="15000"/> Range: 1024 to 65535
Broadcast port	<input type="text" value="15001"/> Range: 1024 to 65535
Voice LAN (TLAN) configuration	
Signaling port	<input type="text" value="5000"/> Range: 1024 to 65535
Voice port	<input type="text" value="5200"/> Range: 1024 to 65535
Routes	<input type="button" value="Add"/>

Transferring node configuration from Element Manager to the Voice Gateway Media Cards

The IP Telephony node and card properties are configured using Element Manager. The configuration data is saved to the Call Server and then transferred to the Voice Gateway Media Cards. Refer to *IP Line: Description, Installation and Operation* (553-3001-365). Complete the following steps:

- 1 Set the Leader IP address.
- 2 Transmit node properties.
- 3 Configure the Follower cards.

Upgrading software and firmware

Before upgrading your IP Line card software and Internet Telephone set firmware, check which version of card software and Internet Telephone set firmware is currently installed. Compare this information to the latest versions available. To do this, access the Electronic Software Distribution (ESD) website. Refer to *IP Line: Description, Installation and Operation*

(553-3001-365) and *Telephones and Consoles* (553-3001-367) for additional information.

If you must upgrade the software, the preferred method of software delivery is directly from the ESD website. When Internet access is restricted or unavailable from the OTM PC, order the latest software on CD-ROM, and insert the CD-ROM into the CD-ROM drive on the OTM PC.

Connecting the telephones

Contents

This section contains information on the following topics:

Introduction	333
Cable assignments for the Cabinet system	335
Cross-connecting telephones	335
Connecting telephones without a PFTU	337
Connecting analog 500/2500-type telephones with a PFTU	338
Connecting off-premise telephones	339
Connecting an attendant console	342
Cross-connecting terminal Digital Subscriber Loops	350
Activating telephones	350
Activating a default model with a character display	352
Activating a default model without a character display	354
Activating a customized model with a character display	355
Activating a customized model without a character display	356
Activating terminals on a DSL	357

Introduction

This chapter contains instructions for connecting telephones to the cross-connect terminal. It also contains the location of the individual extension numbers (DNs) when you are implementing one of the default numbering plans and instructions on how to activate each telephone.

This chapter contains the following procedures:

- Procedure 53: “Cross-connecting telephones” on [page 335](#)
- Procedure 54: “Connecting telephones without a PFTU” on [page 337](#)
- Procedure 55: “Connecting 500/2500-type telephones with a PFTU” on [page 338](#)
- Procedure 56: “Connecting an off-premise telephone” on [page 340](#)
- Procedure 57: “Connecting attendant console” on [page 342](#)
- Procedure 58: “Activating a default model telephone with a character display” on [page 352](#)
- Procedure 59: “Activating a default model telephone without a character display” on [page 354](#)
- Procedure 60: “Activating a customized telephone” on [page 355](#)
- Procedure 61: “Activating a customized telephone” on [page 356](#)

Refer to “Telephones and attendant consoles” on [page 40](#) and [page 57](#) for a list of telephones and attendant consoles supported by the Cabinet system and Chassis system. Refer to the instructions provided with the telephone or console and to *Telephones and Consoles* (553-3001-367) for detailed information about installing telephones and consoles.

Refer to “Preprogrammed data” on [page 399](#) for information about preprogrammed data.

Before you continue, install the cable from the slot that contains the line card associated with the telephone being connected. Refer to “Installing and connecting cross-connect terminals” on [page 235](#), if you require additional cable installation.

Cable assignments for the Cabinet system

The cables from each cabinet are labeled J1 through J10 at the cross-connect terminal. Each cable represents a specific set of Terminal Numbers (TNs) as shown in Table 43 on [page 344](#).



DANGER OF ELECTRIC SHOCK

Always use caution when installing or modifying telephone lines. Avoid installing telephone wiring during a lightning storm. Do not install telephone jacks in wet locations unless the jack is specifically designed for wet locations. Never touch uninsulated telephone wiring unless the line has been disconnected at the network interface.

Cross-connecting telephones

Connect the telephones according to the following figures: Cross-connections for Analog (500/2500-type) telephones are shown in Figure 126 on [page 336](#), and for Meridian Digital Telephones in Figure 127 on [page 337](#).

Procedure 53

Cross-connecting telephones

- 1 Locate the telephone terminations at the cross-connect terminal.
- 2 Connect the Z-type cross-connect wire to the leads of the telephone.
- 3 Locate line circuit card (TN) terminations at the cross-connect terminal.
- 4 Connect the other end of the cross-connect wire to the assigned TN terminal block.

End of Procedure

Figure 126
NE-500/2500-type telephone cross-connections


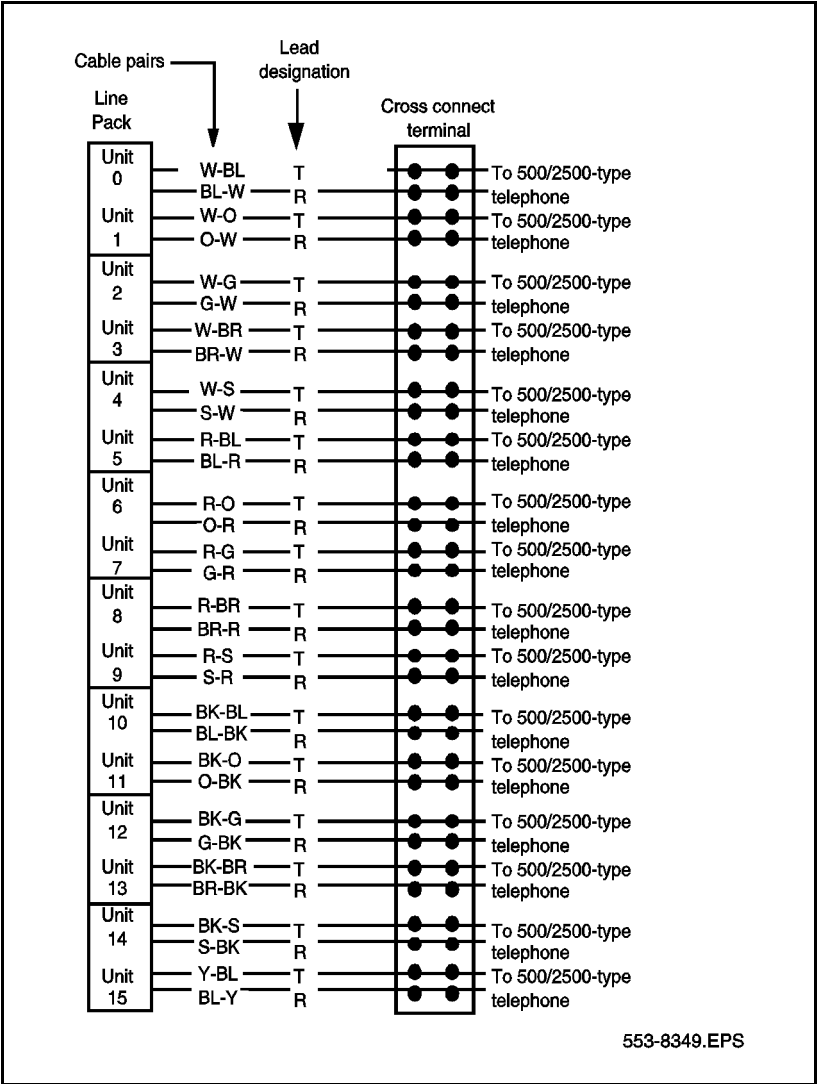


Figure 127
Meridian Digital Telephone cross-connections

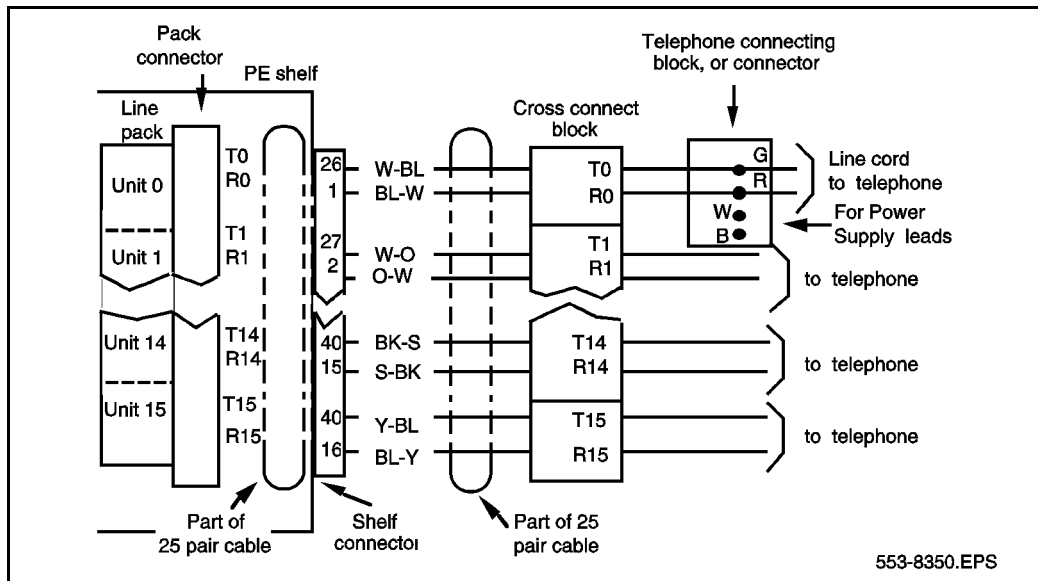

Connecting telephones without a PFTU

Procedure 54 Connecting telephones without a PFTU

- 1 Locate the telephone terminations on the cross-connect terminal.
- 2 Connect one end of the cross-connect wire to the leads of the telephone.
- 3 Locate the line card terminations on the cross-connect terminal.
For the Cabinet system, refer to Table 43 on [page 344](#) and Table 44 on [page 345](#).
For the Chassis system, refer to Table 45 on [page 347](#).
- 4 Connect the other end of the cross-connect wire to the assigned TN terminal block.
Refer to "Preprogrammed data" on [page 399](#) for default DN assignments.

Now, you can activate the telephone, as described in “Activating telephones” on [page 350](#).

End of Procedure

Connecting analog 500/2500-type telephones with a PFTU

Procedure 55

Connecting 500/2500-type telephones with a PFTU

- 1 Locate the telephone terminations on the cross-connect terminal.
- 2 Connect one end of the cross-connect wire to the leads of the telephone.
- 3 Locate the PFTU connections (unit PFT 1 through PFT 5) assigned to this telephone at the cross-connect terminal.

Refer to Table 46 on [page 348](#).

- 4 Connect the other end of the cross-connect wire to the pair assigned to the telephone on the PFTU.
- 5 Connect a second cross-connect wire to the pair assigned to the line card on the PFTU.
- 6 Locate the line card terminations on the cross-connect terminal.

For the Cabinet system, refer to:

- Table 43 on [page 344](#) for the main cabinet and Expansion Cabinets 1 and 2
- Table 44 on [page 345](#) for Expansion Cabinets 3 and 4

For the Chassis system, refer to:

- Table 45 on [page 347](#) for the chassis and chassis expander

- 7 Connect the other end of the cross-connect wire to the assigned TN terminal block.

Refer to “Preprogrammed data” on [page 399](#) for default DN assignments.

Now, you can activate the telephone, as described in “Activating telephones” on [page 350](#).

End of Procedure

Connecting off-premise telephones

Connect off-premise analog (500/2500-type) telephones through an NTAK92AA Off-Premise Protection Module. Each module can connect up to four analog (500/2500-type) telephones and can interface with one of the following:

- NT1R20 Off-Premise Station Analog Line Card
- NT8D03 Analog Line Card
- NT8D09 Message Waiting Line Card



DANGER OF ELECTRIC SHOCK

The message waiting line card produces -150 volts, which is considered hazardous on off-premise telephones. Make sure that the -150 V is disabled on off-premise telephones.

The voltage is disabled when the Class Of Service (CLS) assigned to the telephone is Message Waiting Lamp Denied (LPD) and Message Waiting Denied (MWD) in LD 10.

Refer to *Software Input/Output: Maintenance* (553-3001-511) for information about LD 10.

Do not assign a Class of Service of LPA or MWA to an off-premise telephone.

Procedure 56

Connecting an off-premise telephone

- 1 Mount the NTAK92AA Off-Premise Protection Module on the wall using four #10 1/2 in. (minimum) screws.
- 2 Connect a #6 AWG (#40 Metric Wire Gauge) from the ground lug at the bottom of the NTAK92AA Off-Premise Protection Module to an earth ground. Refer to Figure 128 on [page 341](#).

Note: In the UK, use a 2 mm² (#6 AWG) ground lug. In Europe, use a #6 AWG (16 mm²) ground lug.



WARNING

If connecting to a message waiting line card, unseat the card from its assigned slot before continuing with the next step.


- 3 Connect two NTAK9204 cables (one from connector J1 and one from connector J2) from the protection module to the cross-connect terminal. Terminate the cables as shown in Figure 126 on [page 336](#).
- 4 Cross-connect the J1 cable to the Tip and Ring connections coming from the line card.

Refer to “Preprogrammed data” on [page 399](#) for default DN assignments.
- 5 Cross-connect the J2 cable to the off-premise telephone.
- 6 Install the regulatory label provided with the Off-Premise Protection Module on the inside right-hand wall of the cabinet (near the Velcro wriststrap fastener) or chassis.
- 7 Install the line card in its assigned position.

Now, you can activate the telephone, as described in “Activating telephones” on [page 350](#).

End of Procedure

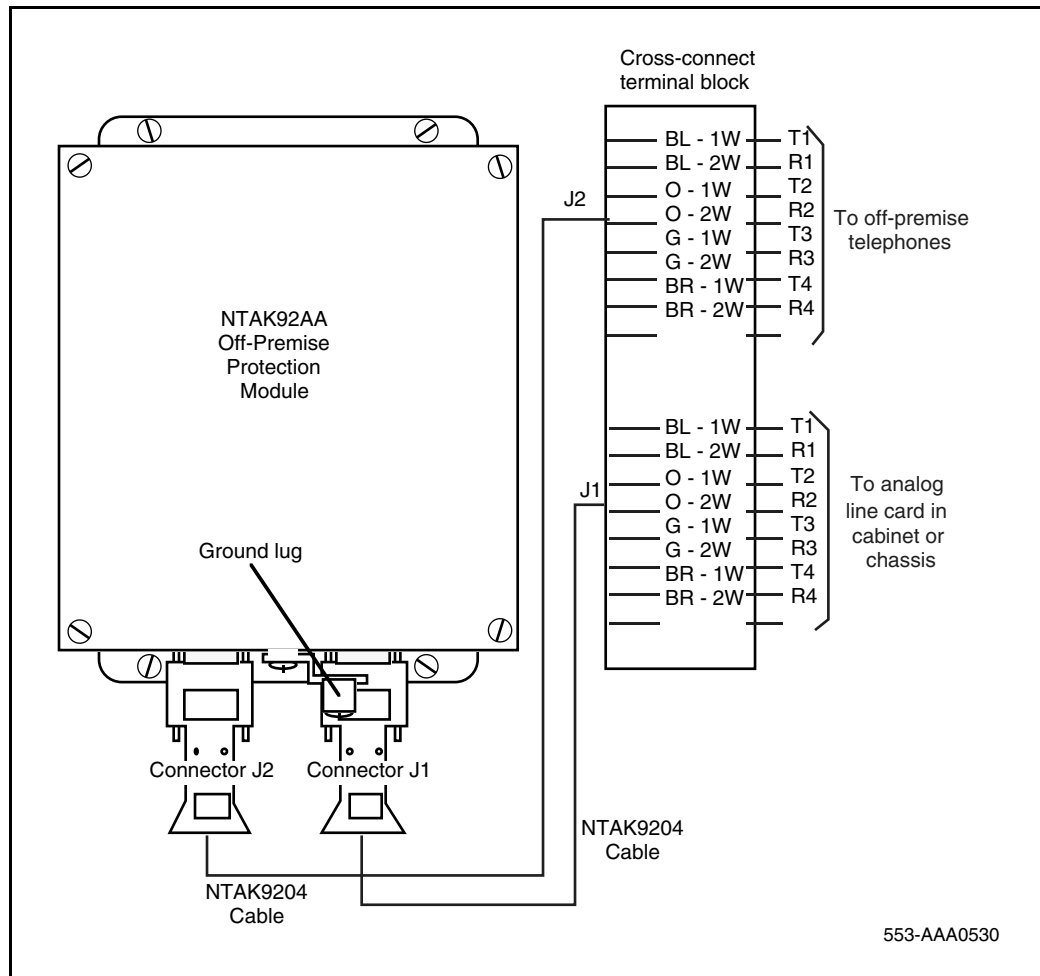Figure 128
NTAK92AA Off-Premise Protection Module connections



Connecting an attendant console


Procedure 57

Connecting attendant console

- 1 Locate the attendant console terminations at the cross-connect terminal.
- 2 Locate the line card terminations at the cross-connect terminal.
- 3 With cross-connect wire, connect the line card and other connections to the console as shown in Figure 129 on [page 343](#).

End of Procedure

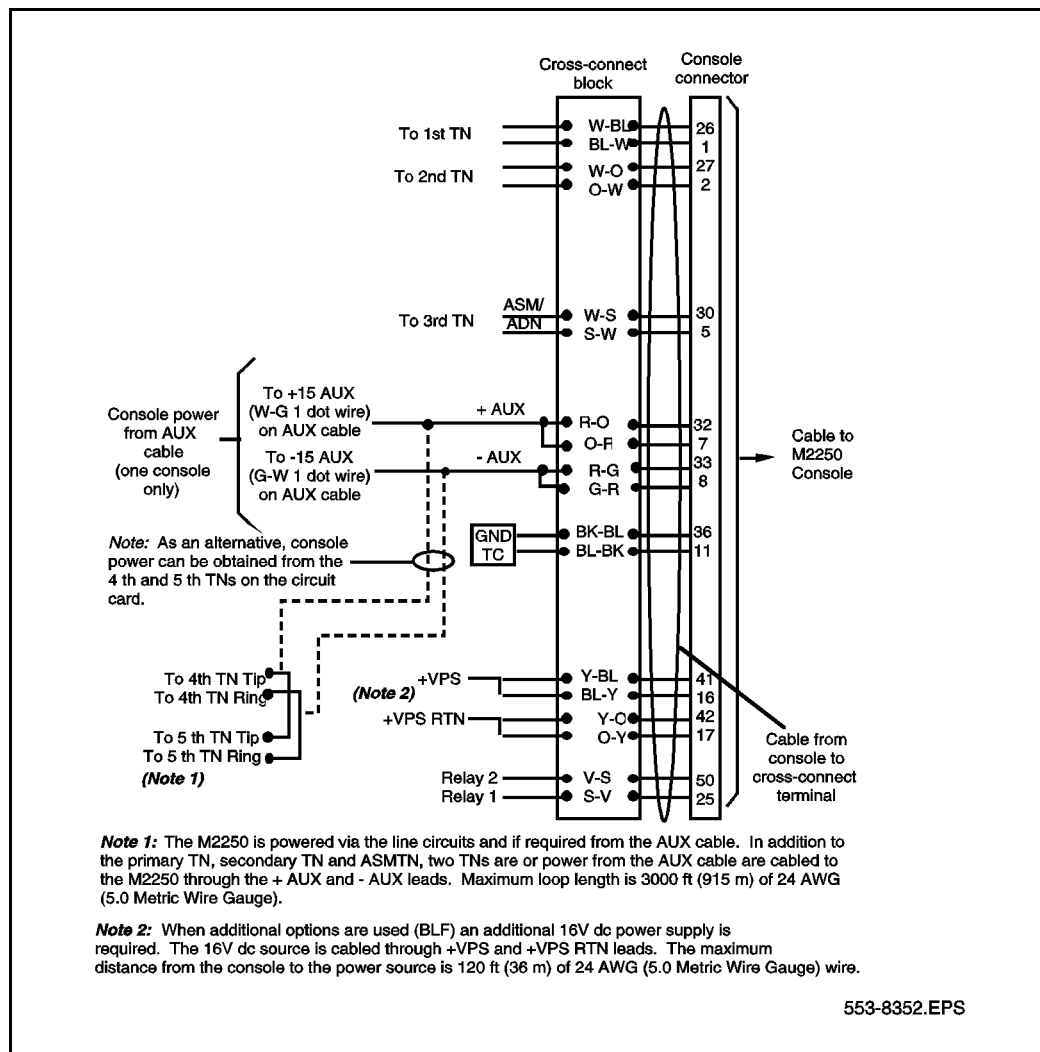Figure 129
Attendant console connections



553-8352.EPS

Table 43
Terminal number assignments — Main and Expansion Cabinets 1 and 2 (Part 1 of 2)

Card	First TN.....Last TN	Cable	Cabinet
1	01 00.....01 15	J1	Main
2	02 00.....02 15	J2	Main
3	03 00.....03 15	J3	Main
4	04 00.....04 15	J4	Main
5	05 00.....05 15	J5	Main
6	06 00.....06 15	J6	Main
7	07 00.....07 15	J7	Main
8	08 00.....08 15	J8	Main
9	09 00.....09 15	J9	Main
10	10 00.....10 15	J10	Main
11	11 00.....11 15	J1	Expansion Cabinet 1
12	12 00.....12 15	J2	Expansion Cabinet 1
13	13 00.....13 15	J3	Expansion Cabinet 1
14	14 00.....14 15	J4	Expansion Cabinet 1
15	15 00.....15 15	J5	Expansion Cabinet 1
16	16 00.....16 15	J6	Expansion Cabinet 1
17	17 00.....17 15	J7	Expansion Cabinet 1
18	18 00.....18 15	J8	Expansion Cabinet 1
19	19 00.....19 15	J9	Expansion Cabinet 1
20	20 00.....20 15	J10	Expansion Cabinet 1

Table 43
Terminal number assignments — Main and Expansion Cabinets 1 and 2 (Part 2 of 2)

Card	First TN.....Last TN	Cable	Cabinet
21	21 00.....21 15	J1	Expansion Cabinet 2
22	22 00.....22 15	J2	Expansion Cabinet 2
23	23 00.....23 15	J3	Expansion Cabinet 2
24	24 00.....24 15	J4	Expansion Cabinet 2
25	25 00.....25 15	J5	Expansion Cabinet 2
26	26 00.....26 15	J6	Expansion Cabinet 2
27	27 00.....27 15	J7	Expansion Cabinet 2
28	28 00.....28 15	J8	Expansion Cabinet 2
29	29 00.....29 15	J9	Expansion Cabinet 2
30	30 00.....30 15	J10	Expansion Cabinet 2

Table 44
Terminal number assignments – Expansion Cabinets 3 and 4 (Part 1 of 2)

Card	First TN.....Last TN	Cable	Cabinet
31	31 00.....31 15	J1	Expansion Cabinet 3
32	32 00.....32 15	J2	Expansion Cabinet 3
33	33 00.....33 15	J3	Expansion Cabinet 3
34	34 00.....34 15	J4	Expansion Cabinet 3
35	35 00.....35 15	J5	Expansion Cabinet 3
36	36 00.....36 15	J6	Expansion Cabinet 3
37	37 00.....37 15	J7	Expansion Cabinet 3
38	38 00.....38 15	J8	Expansion Cabinet 3

Table 44
Terminal number assignments – Expansion Cabinets 3 and 4 (Part 2 of 2)

Card	First TN.....Last TN	Cable	Cabinet
39	39 00.....39 15	J9	Expansion Cabinet 3
40	40 00.....40 15	J10	Expansion Cabinet 3
41	41 00.....41 15	J1	Expansion Cabinet 4
42	42 00.....42 15	J2	Expansion Cabinet 4
43	43 00.....43 15	J3	Expansion Cabinet 4
44	44 00.....44 15	J4	Expansion Cabinet 4
45	45 00.....45 15	J5	Expansion Cabinet 4
46	46 00.....46 15	J6	Expansion Cabinet 4
47	47 00.....47 15	J7	Expansion Cabinet 4
48	48 00.....48 15	J8	Expansion Cabinet 4
49	49 00.....49 15	J9	Expansion Cabinet 4
50	50 00.....50 15	J10	Expansion Cabinet 4

Table 45
Terminal Number assignments — Chassis and chassis expander

Physical slot	Logical slot	First TN...Last TN	Cable	Chassis
1	1	01 00...01 15	Card 1	Main
2	2	02 00...02 15	Card 2	Main
3	3	03 00...03 15	Card 3	Main
4	4 5 6	04 00...04 15 05 00...05 15 06 00...06 07 06 08...06 15	Card 4/Card 6 Card 5/Card 6 Card 4/Card 6 Card 5/Card 6 (see note)	Main Main Main Main
7	7	07 00...07 15	Card 7	Expander
8	8	08 00...08 15	Card 8	Expander
9	9	09 00...09 15	Card 9	Expander
10	10	10 00...10 15	Card 10	Expander
Note: Refer to the labels on the back of the chassis. See Figure 102 on page 250 .				

Table 46
Power Failure Transfer Unit connections (Part 1 of 2)

QUA6 J1 Cable			
Function	Pair	Color	Connects to
PFT 1	5T 5R	W-S S-W	Connect to the telephone
	6T 6R	R-BL BL-R	Connect to the telephone line card
	7T 7R	R-O O-R	Connect to the Central Office trunk
	8T 8R	R-G G-R	Connect to the trunk line card
PFT 2	9T 9R	R-BR BR-R	Connect to the telephone
	10T 10R	R-S S-R	Connect to the telephone line card
	11T 11R	BK-BL BL-BK	Connect to the Central Office trunk
	12T 12R	BK-O O-BK	Connect to the trunk line card
PFT 3	13T 13R	BK-G G-BK	Connect to the telephone
	14T 14R	BK-BR BR-BK	Connect to the telephone line card
	15T 15R	BK-S S-BK	Connect to the Central Office trunk
	16T 16R	Y-BL BL-Y	Connect to the trunk line card

Table 46
Power Failure Transfer Unit connections (Part 2 of 2)

QUA6 J1 Cable			
Function	Pair	Color	Connects to
PFT 4	17T 17R	Y-O O-Y	Connect to the telephone
	18T 18R	Y-G G-Y	Connect to the telephone line card
	19T 19R	Y-BR BR-Y	Connect to the Central Office trunk
	20T 20R	Y-S S-Y	Connect to the trunk line card
PFT 5	21T 21R	V-BL BL-V	Connect to the telephone
	22T 22R	V-O O-V	Connect to the telephone line card
	23T 23R	V-G G-V	Connect to the Central Office trunk
	24T 24R	V-BR BR-V	Connect to the trunk line card

Table 47
Cable Pair Color Combinations

Color	W-BI BI-W	W-O O-W	W-G G-W	W-BR BR-W	W-S S-W	R-BL BL-R	R-O O-R	R-G G-R
Unit	0	1	2	3	4	5	6	7
Color	R-BR BR-R	R-S S-R	BK-BL BL-BK	BK-O O-BK	BK-G G-BK	BK-BR BR-BK	BK-S S-BK	Y-B B-Y
Unit	8	9	10	11	12	12	14	15

Cross-connecting terminal Digital Subscriber Loops

Refer to *ISDN Basic Rate Interface: Installation and Configuration* (553-3001-218) for a complete description of terminal Digital Subscriber Loops (DSL) cross-connecting and installation.

Activating telephones

Activating telephones is not difficult. Activate each telephone by performing a procedure on the telephone. Automatic Set Configuration is the software feature used to activate telephone sets.

Note: You cannot activate the data feature using the procedures in this chapter. To program a telephone with the data feature, configure it in LD 11 with Data Class of Service as described in *Software Input/Output: Maintenance* (553-3001-511).

This chapter contains procedures for activating the following models of telephones:

- a default model with a default extension number
- a customized model with a customized extension number

This chapter provides these procedures for telephones with and without character displays.

Telephone tones

There are a number of different telephone tones. Table 48 on [page 351](#) includes tones that you hear during telephone activation. Table 49 on [page 351](#) includes tones that you hear during telephone activation in Germany.

Table 48
Telephone tones

Tone	Description
Dial tone	A continuous tone.
Special dial tone	Three beeps followed by continuous dial tone.
Overflow tone	Like a busy tone, except faster and higher.
Relocation tone	A short high-pitched beep that continues for 4 seconds, followed by silence.

Table 49
Telephone tones for Germany

Tone	Description	Specification
Dial tone	Sequences of three short beeps with a pause between cycles	Beep: 420 Hz tone for 200 ms Pause between beeps: 275 ms Pause between cycles: 875 ms
Special dial tone	Six short beeps followed by continuous tone	Beep: 420 Hz tone for 125 ms Pause between beeps: 125 ms
Overflow tone	Continuous beeping, like a busy tone	Beep: 420 Hz tone for 200 ms Pause: 600 ms
Relocation tone	Short, high-pitched beep followed by silence	Beep: 1400 Hz tone for 1.4 seconds

Note 1: Before you activate a telephone, make sure that you have decided on its final location. Also, know the model number assigned to the telephone and if it is to be customized.

Note 2: When you are activating Meridian Digital Telephones, remember that they are different from the older Meridian Modular Telephones. Meridian Modular Telephones can have a combined total of 128 model telephones. Meridian Digital Telephones can have 128 models for each type of telephone. When you activate a Meridian Digital Telephone, select the model associated with that telephone type, or the telephone will not work.

Activating a default model with a character display

Procedure 58

Activating a default model telephone with a character display

- 1 Plug the telephone set into the jack and wait 20 seconds before picking up the handset. If you do not receive a dial tone, replace the handset and wait another 10 seconds before going off-hook again. Repeat this procedure until dial tone is received.

If successful, the character display shows either "MODEL? X" (if the telephone relocation feature is **not** in use) or "RELOC OR MODEL? X" (if the telephone relocation feature **is** in use). "X" represents the default model for the telephone that you are activating.

Note 1: If you do not see the prompt "MODEL X" after lifting the handset, disconnect the telephone from the wall jack, wait five seconds, and reinsert the telephone into the jack. The telephone now shows "MODEL X" when you lift the handset.

Note 2: The 20 second time interval is required for the system to determine whether the set is new or if it is being relocated using the Modular Telephone Relocation feature.

- 2 Press the pound key (#) to select the default model.

The character display shows "OK, EXTENSION? XXXX". "XXXX" represents the default extension number for this telephone type.

- 3 Press the pound key again to select the default extension number.

You hear the relocation tone. The character display, shows "OK".

OR

If the extension number is already in use by another telephone, you hear the special dial tone. If the telephone has a display it shows “MULTI-LINE, EXTENSION?”.

To accept the default extension number press the pound key.

To select a new extension number, manually enter an extension number and press the pound key.

OR

If the extension number is not available for use, the character display shows “ERROR, EXTENSION?” and you hear overflow tone.

This happens when you choose an extension number manually or when extension numbers are entered for additional keys. A default extension number will not be offered if it is not available.

You must repeat step 3 and manually enter a new extension number.

Note 1: If other keys require secondary extension numbers, you are prompted until you enter all of the required extension numbers for the model.

Note 2: These extension numbers cannot be defaulted. The text display prompting for further extension numbers is “KEY kk EXT?” where “kk” represents the key number requiring the extension number.

Note 3: Each prompt for another extension number is accompanied by special dial tone. When you are programming an extension number, the lamp associated with that number on the telephone is lit.

4 Hang up the telephone receiver.

After approximately 10 seconds, the telephone is configured.

Note: If you replace the handset before completing the prompt sequence, the installation will automatically fail. This can be useful if you make an error and want to restart the procedure.

End of Procedure

Activating a default model without a character display

Procedure 59

Activating a default model telephone without a character display

- 1 Plug the telephone set into the jack and wait 20 seconds before picking up the handset. If you do not receive dial tone, replace the handset and wait another 10 seconds before going off-hook again. Repeat this procedure until dial tone is received.

Note: The 20 second time interval is required for the system to determine whether the set is new or if it is being relocated using the Modular Telephone Relocation feature.

- 2 Press the pound key (#) to select the default model.
- 3 Press the pound key again to select the default extension number.

You hear a short, high-pitched beep lasting four seconds followed by silence (relocation tone).

Note: If the extension number is already in use by another telephone, you hear three beeps followed by continuous dial tone (special dial tone).

To accept the default extension number press the pound key.

To select a new extension number, manually enter an extension number and press the pound key.

If the extension number is not available for use, you hear a fast, high-pitched broken tone (overflow tone). This happens when you choose an extension number manually or when extension numbers are entered for additional keys. A default extension number is not offered if it is not available. You must repeat step 3 and you must manually enter a new extension number.

Note: If other keys require secondary extension numbers, you are prompted until you enter all of the required extension numbers for the model. These extension numbers cannot be defaulted. You are prompted for each additional extension number with three beeps followed by continuous dial tone (special dial tone). When you are programming an extension number, the lamp associated with that number on the telephone is lit.

End of Procedure

Activating a customized model with a character display

Procedure 60

Activating a customized telephone

- 1 Plug the telephone set into the jack and wait 20 seconds before picking up the handset. If you do not receive dial tone, replace the handset and wait another 10 seconds before going off-hook again. Repeat this procedure until dial tone is received.

If successful, the character display shows either “MODEL? X” (if the telephone relocation feature is **not** in use) or “RELOC OR MODEL? X” (if the telephone relocation feature **is** in use). “X” represents the default model for the telephone that you are activating.

Note 1: If you do not see the prompt “MODEL X” after lifting the handset, disconnect the telephone from the wall jack, wait five seconds, and reinsert the telephone into the jack. The telephone now shows “MODEL X” when you lift the handset.

Note 2: The 20 second time interval is required for the system to determine whether the set is new or if it is being relocated using the Modular Telephone Relocation feature.

- 2 Press the digits associated with the customized model and press the pound key (#).

Dial tone disappears after the first digit is pressed and you hear special dial tone after you press the pound key. If you enter a valid model number the character display reads “OK, EXTENSION?”. If you enter an invalid model, the previous prompt is reissued and you hear overflow tone.

- 3 Enter the customized extension number and press the pound key.

You hear relocation tone. The character display shows “OK”.

OR

If the extension number is already in use by another telephone, you hear special dial tone again. The character display shows “MULTI-LINE, EXTENSION?”.

OR

If the extension number is not available for use, you hear overflow tone. The character display shows "ERROR, EXTENSION?" and you must repeat this step.

Note: If other keys require secondary extension numbers, you are prompted until you enter all of the required extension numbers for the model. These extension numbers cannot be defaulted. The text display prompting for further extension numbers is "KEY kk EXT?" where "kk" represents the key number requiring the extension number. Each prompt for another extension number is accompanied by special dial tone. When you are programming an extension number, the lamp associated with that number on the telephone is lit.

- 4 Hang up the telephone handset.

After approximately 10 seconds, the telephone is configured.

Note: If you replace the handset before you complete the prompt sequence, the installation automatically fails. This can be useful if you make an error and want to restart the procedure.

End of Procedure

Activating a customized model without a character display

Procedure 61

Activating a customized telephone

- 1 Plug the telephone set into the jack and wait 20 seconds before picking up the handset. If you do not receive dial tone, replace the handset and wait another 10 seconds before going off-hook again. Repeat this procedure until dial tone is received.

Note: The 20 second time interval is required for the system to determine whether the set is new or if it is being relocated using the Modular Telephone Relocation feature.

- 2 Press the digits associated with the customized model and press the pound key (#).

Dial tone disappears after the first digit is pressed, and you hear three beeps followed by continuous dial tone (special dial tone) after you press the pound key.

- 3 Enter the customized extension number and press the pound key.

You hear a short high-pitched beep lasting four seconds, followed by silence (relocation tone).

If the extension number is already in use by another telephone, you hear special dial tone again.

If the extension number is not available for use, you hear a fast, high-pitched broken tone (overflow tone), and you must repeat this step.

4 Hang up the telephone handset.

After approximately 10 seconds, the telephone is configured.

Note: If other keys require secondary extension numbers, you are prompted until you enter all of the required extension numbers for the model. These extension numbers cannot be defaulted. You are prompted for each additional extension number with three beeps followed by continuous dial tone (special dial tone). When you are programming an extension number, the lamp associated with that number on the telephone is lit.

End of Procedure

Activating terminals on a DSL

Refer to *ISDN Basic Rate Interface: Installation and Configuration* (553-3001-218), for information about activating and initializing the various terminals that can be connected to a terminal DSL.

Connecting the trunks

Contents

This section contains information on the following topics:

Introduction	360
Connecting trunks without PFTU	361
Connecting trunks with PFTU	361
Trunk connections	364
NT8D14 Universal Trunk card	364
NT8D15 E&M Trunk card	367
NT6D70 SILC and NT6D71 UILC cards	369
Trunk connections (Europe)	370
E&M TIE trunk card (2-wire)	370
E&M TIE trunk card (4-wire)	372
E&M TIE trunk card (2280 Hz)	376
E&M TIE trunk card (RAN)	377
E&M TIE trunk card (MUS)	378
CO & DID trunk card	378
Central Office trunk card	380
Trunk connections (UK)	381
NT5K17 Direct Inward Dial card terminations	381
NT5K18 Exchange line trunk card terminations	383
NT5K19 Analog TIE line trunk card terminations	385
Activating a default model trunk	389
Activating a selected model trunk	391

Introduction

This chapter describes how to connect trunks directly to the trunk card, with or without the use of a Power Failure Transfer Unit (PFTU). This chapter contains the following procedures:

- Procedure 62: “Connecting trunks without PFTU” on [page 361](#)
- Procedure 63: “Connecting trunks with PFTU” on [page 361](#)
- Procedure 64: “Activating a default model trunk” on [page 389](#)
- Procedure 65: “Activating a selected model trunk” on [page 391](#)

Note: The QUA6 PFTU operates with loop start and ground start CO trunks. However, with ground-start trunks the related telephone set must have a ground-start button.

During initial software installation on the Small System, you can load a default database, containing preprogrammed trunk data, into software. If necessary, you can modify the default data at any time to meet the specific needs of a customer. For a description of how to modify preprogrammed trunking data, refer to “Preprogrammed data” on [page 399](#) in this document.



DANGER OF ELECTRIC SHOCK

Always use caution when installing or modifying telephone lines. Avoid installing telephone wiring during a lightning storm. Do not install telephone jacks in wet locations unless the jack is specifically designed for wet locations. Never touch uninsulated telephone wiring unless the line has been disconnected at the network interface.

Connecting trunks without PFTU

Procedure 62

Connecting trunks without PFTU

- 1 From the assignment record, determine the location of the trunk connection and its associated Terminal Number (TN) at the cross-connect terminal.
- 2 With cross-connect wire, connect the trunk to the TN.

Make sure that the wiring is not reversed and is on the correct terminals.

Tables 51 to 53 list the connections for trunks. For trunk connections for Europe, see Tables 54 to 62. For trunk connections for the UK, see Tables 63 to 69.

End of Procedure

Connecting trunks with PFTU

Procedure 63

Connecting trunks with PFTU

- 1 Locate the PFTU terminal blocks at the cross-connect terminal.
- 2 Cross-connect the first pair of the assigned PFT to the telephone.
Refer to Table 50 on [page 362](#) for PFTU connections.
- 3 Cross-connect the second pair of the PFT to the TN assigned to the telephone.
- 4 Cross-connect the third pair of the PFT to the Central Office trunk.
- 5 Cross-connect the third pair of the PFT to the TN assigned to the trunk.
- 6 Repeat for each trunk assigned to the PFTU.

End of Procedure

Table 50
Power Failure Transfer Unit connections (Part 1 of 2)

QUA6 J1 cable				
Function	Pair	Color	Connects to	Comments
P F T 1	5T 5R	W-S S-W	Connect to the telephone	
	6T 6R	R-BL BL-R	Connect to the telephone line card	Connect to TN assigned to the telephone
	7T 7R	R-O O-R	Connect to the Central Office trunk	
	8T 8R	R-G G-R	Connect to the trunk line card	Connect to TN assigned to the trunk
P F T 2	9T 9R	R-BR BR-R	Connect to the telephone	
	10T 10R	R-S S-R	Connect to the telephone line card	Connect to TN assigned to the telephone
	11T 11R	BK-BL BL-BK	Connect to the Central Office trunk	
	12T 12R	BK-O O-BK	Connect to the trunk line card	Connect to TN assigned to the trunk
P F T 3	13T 13R	BK-G G-BK	Connect to the telephone	
	14T 14R	BK-BR BR-BK	Connect to the telephone line card	Connect to TN assigned to the telephone
	15T 15R	BK-S S-BK	Connect to the Central Office trunk	
	16T 16R	Y-BL BL-Y	Connect to the trunk line card	Connect to TN assigned to the trunk

Table 50
Power Failure Transfer Unit connections (Part 2 of 2)

QUA6 J1 cable			Connects to	Comments
Function	Pair	Color		
P F T 4	17T 17R	Y-O O-Y	Connect to the telephone	
	18T 18R	Y-G G-Y	Connect to the telephone line card	Connect to TN assigned to the telephone
	19T 19R	Y-BR BR-Y	Connect to the Central Office trunk	
	20T 20R	Y-S S-Y	Connect to the trunk line card	Connect to TN assigned to the trunk
P F T 5	21T 21R	V-BL BL-V	Connect to the telephone	
	22T 22R	V-O O-V	Connect to the telephone line card	Connect to TN assigned to the telephone
	23T 23R	V-G G-V	Connect to the Central Office trunk	
	24T 24R	V-BR BR-V	Connect to the trunk line card	Connect to TN assigned to the trunk

Trunk connections

NT8D14 Universal Trunk card

The Universal Trunk card provides eight analog trunks which can function in the modes shown in Table 51.

Table 51
NT8D14 Universal Trunk — modes and option settings

Modes	Location	Jumper strap
Central (CO)	J1, J2	OFF
2-way TIE trunk (loop Dial Repeat)	J1, J2	OFF
2 -way TIE trunk (Outgoing Incoming Dial)	J1, J2	OFF
Recorded Announcement (RAN)	J1, J2	OFF
Paging trunk	J1, J2	OFF
Japan CO/DID operation	J1, J2	OFF
DID operation Loop length > 2000 ohms	J1, J2	ON
DID operation Loop length < 2000 ohms	J1, J2	OFF
Note: OFF indicates no strap present. J1 and J2 locations apply to all eight trunks.		

Refer to Table 52 for the connections to the NT8D14 Universal Trunk at the cross-connect terminal.

Table 52
NT8D14 Universal Trunk connections (Part 1 of 2)

Cable from cabinet or chassis		Designations			
Pair	Color	Unit #	RAN mode	Paging mode	All other modes
1T 1R	W-BL BL-W	0	T0 R0	T0 R0	T0 R0
2T 2R	W-O O-W		CP MB	A PG	
3T 3R	W-G G-W	1	T1 R1	T1 R1	T1 R1
4T 4R	W-BR BR-W		CP MB	A PG	
5T 5R	W-S S-W	2	T2 R2	T2 R2	T2 R2
6T 6R	R-BL BL-R		CP MB	A PG	
7T 7R	R-O O-R	3	T3 R3	T3 R3	T3 R3
8T 8R	R-G G-R		CP MB	A PG	
9T 9R	R-BR BR-R	4	T4 R4	T4 R4	T4 R4
10T 10R	R-S S-R		CP MB	A PG	

Table 52
NT8D14 Universal Trunk connections (Part 2 of 2)

Cable from cabinet or chassis		Designations			
Pair	Color	Unit #	RAN mode	Paging mode	All other modes
11T 11R	BK-BL BL-BK	5	T5 R5	T5 R5	T5 R5
12T 12R	BK-O O-BK		CP MB	A PG	
13T 13R	BK-G G-BK	6	T6 R6	T6 R6	T6 R6
14T 14R	BK-BR BR-BK		CP MB	A PG	
15T 15R	BK-S S-BK	7	T7 R7	T7 R7	T7 R7
16T 16R	Y-BL BL-Y		CP MB	A PG	
Note: Remaining pairs are spares.					

NT8D15 E&M Trunk card

Table 53
NT8D15 E&M Trunk card (Part 1 of 2)

Cables J1 through J10 from cabinet/Card 1 through Card 10 from chassis		Unit #	Designations			
Pair	Color		2W Paging mode	2W Type 1 mode	4W Type 1 mode	4W Type 2 mode
1T 1R	W-BL BL-W	0	T0 R0	T0 R0	TA TB	TA TB
2T 2R	W-O O-W				RA RB	RA RB
3T 3R	W-G G-W			E M	E M	EA EB
4T 4R	W-BR BR-W		A PG		ESC ESCG	MA MB
5T 5R	W-S S-W	1	T1 R1	T1 R1	TA TB	TA TB
6T 6R	R-BL BL-R				RA RB	RA RB
7T 7R	R-O O-R			E M	E M	EA EB
8T 8R	R-G G-R		A PG		ESC ESCG	MA MB

Table 53
NT8D15 E&M Trunk card (Part 2 of 2)

Cables J1 through J10 from cabinet/Card 1 through Card 10 from chassis		Unit #	Designations			
Pair	Color		2W Paging mode	2W	4W	4W
				Type 1 mode	Type 1 mode	Type 2 mode
9T 9R	R-BR BR-R	2	T2 R2	T2 R2	TA TB	TA TB
10T 10R	R-S S-R				RA RB	RA RB
11T 11R	BK-BL BL-BK			E M	E M	EA EB
12T 12R	BK-O O-BK			A PG		ESC ESCG
13T 13R	BK-G G-BK	3	T3 R3	T3 R3	TA TB	TA TB
14T 14R	BK-BR BR-BK				RA RB	RA RB
15T 15R	BK-S S-BK			E M	E M	EA EB
16T 16R	Y-BL BL-Y			A PG		ESC ESCG
Note: A and B are the transmit and receive pairs, where: TA = Transmit Tip, and RA = Receive Tip TB = Transmit Ring, and RB = Receive Ring						

NT6D70 SILC and NT6D71 UILC cards

Refer to *ISDN Basic Rate Interface: Installation and Configuration* (553-3001-218) for a complete description of trunk DSL installation and connections.

Trunk connections (Europe)

E&M TIE trunk card (2-wire)

Note: Refer to *Circuit Card: Description and Installation* (553-3001-211) for a complete description of European circuit cards.

Table 54
E&M TIE trunk card (2-wire)

Cables J1 through J10 from cabinet/Card 1 through Card 10 from chassis		Unit #	Pins	Typical lead designations		
Pair	Color			Paging	Paging	Type 5 (BPO)
1T 1R	W-O O-W	0	27 2	T0 R0	T0 R0	T0 R0
2T 2R	W-BR BR-W		29 4	A PG	SIGB SIGA	E M
3T 3R	R-BL BL-R	1	31 6	T1 R1	T1 R1	T1 R1
4T 4R	R-G G-R		33 8	A PG	SIGB SIGA	E M
5T 5R	R-S S-R	2	35 10	T2 R2	T2 R2	T2 R2
6T 6R	BK-O O-BK		37 12	A PG	SIGB SIGA	E M
7T 7R	BK-BR BR-BK	3	39 14	T3 R3	T3 R3	T3 R3
8T 8R	Y-BL BL-Y		41 16	A PG	SIGB SIGA	E M

Table 55
E&M 2-wire Type 2

Lead designations	Pins	Pair color	Unit number
T0 R0	27 2	W-O O-W	Unit 0
E1 E2	28 3	W-G G-W	
M1 M2	29 4	W-G G-W	
T1 R1	31 6	R-BL BL-R	
E1 E2	32 7	R-O O-R	
M1 M2	33 8	R-G G-R	
T2 R2	35 10	R-S S-R	Unit 2
E1 E2	36 11	BK-BL BL-BK	
M1 M2	37 12	BK-O O-BK	
T3 R3	39 14	BK-BR BR-BK	
E1 E2	40 15	BK-S S-BK	
M1 M2	41 16	Y-BL BL-Y	

E&M TIE trunk card (4-wire)

Table 56

E&M TIE trunk card (4-wire) (Part 1 of 2)

Cables J1 through J10 from cabinet/Card 1 through Card 10 from chassis		Unit #	Pins	Typical lead designations	
Pair	Color			Type 1 & 5	Type 1 & 5
1T 1R	W-BL BL-W	0	26 1	RA RB	TA TB
2T 2R	W-O O-W		27 2	TA TB	RA RB
3T 3R	W-G G-W		28 3	E M	E M
4T 4R	W-S S-W		30 5	RA RB	TA TB
5T 5R	R-BL BL-R		31 6	TA TB	RA RB
6T 6R	R-O O-R		32 7	E M	E M
7T 7R	R-BR BR-R	2	34 9	RA RB	TA TB
8T 8R	R-S S-R		35 10	TA TB	RA RB
9T 9R	BK-BL BL-BK		36 11	E M	E M

Table 56
E&M TIE trunk card (4-wire) (Part 2 of 2)

Cables J1 through J10 from cabinet/Card 1 through Card 10 from chassis		Unit #	Pins	Typical lead designations	
Pair	Color			Type 1 & 5	Type 1 & 5
10T	BK-G	3	38	RA	TA
10R	G-BK		13	RB	TB
11T	BK-BR-		39	TA	RA
11R	BR-BK		14	TB	RB
12T	BK-S		40	E	E
12R	S-BK		15	M	M
Note: The cable pair designated TA, TB is the transmit pair. The pair designated RA, RB is the receive pair.					

Table 57
E&M TIE trunk card (4-wire) (Part 1 of 2)

Cables J1 through J10 from cabinet/Card 1 through Card 10 from chassis		Unit #	Pins	Typical lead designations	
Pair	Color			Type 2	Type 2
1T	W-BL	0	26	RA	RA
1R	BL-W		1	RB	RB
2T	W-O		27	TA	TA
2R	O-W		2	TB	TB
3T	W-G		28	E1	E
3R	G-W		3	E2	M
4T	W-BR		29	M1	SIG0A
4R	BR-W		4	M2	SIG0B
5T	W-S	1	30	RA	RA
5R	S-W		5	RB	RB
6T	R-BL		31	TA	TA
6R	BL-R		6	TB	TB
7T	R-O		32	E1	E
7R	O-R		7	E2	M
8T	R-G		33	M1	SIG1A
8R	G-R		8	M2	SIG1B

Table 57
E&M TIE trunk card (4-wire) (Part 2 of 2)

Cables J1 through J10 from cabinet/Card 1 through Card 10 from chassis		Unit #	Pins	Typical lead designations		
Pair	Color			Type 2	Type 2	
9T 9R	R-BR BR-R	2	34 9	RA RB	RA RB	
10T 10R	R-S S-R		35 10	TA TB	TA TB	
11T 11R	BK-BL BL-BK		36 11	E1 E2	E M	
12T 12R	BK-O O-BK		37 12	M1 M2	SIG2A SIG2B	
13T 13R	BK-G G-BK		3	38 13	RA RB	RA RB
14T 14R	BK-BR BR-BK			39 14	TA TB	TA TB
15T 15R	BK-S S-BK			40 15	E1 E2	E M
16T 16R	Y-BL BL-Y			41 16	M1 M2	SIG3A SIG3B

Note: The cable pair designated TA, TB is the transmit pair. The pair designated RA, RB is the receive pair.

E&M TIE trunk card (2280 Hz)

Table 58
E&M 2280 Hz TIE trunk connections

Lead designations	Pins	Pair color	Unit #
TA TB RA RB	26 1 27 2	W-BL BL-W W-O O-W	0
TA TB RA RB	30 5 31 6	W-S S-W R-BL BL-R	1
TA TB RA RB	34 9 35 10	R-BR BR-R R-S S-R	2
TA TB RA RB	38 13 39 14	BK-G G-BK BK-BR BR-BK	3

E&M TIE trunk card (RAN)

Table 59
E&M 2-wire Recorded Announcement trunk connections

Lead designations	Pins	Pair color	Unit #
T0 R0 SIG B SIG A	26 1 29 4	W-BL BL-W W-BR BR-W	0
T1 R1 SIG B SIG A	30 5 33 8	W-S S-W R-G G-R	1
T2 R2 SIG B SIG A	34 9 37 12	R-BR BR-R BK-O O-BK	2
T3 R3 SIG B SIG A	38 13 41 16	BK-G G-BK Y-BL BL-Y	3

E&M TIE trunk card (MUS)

Table 60
E&M 2-wire Music trunk connections

Lead designations	Pins	Pair color	Unit#
T0 R0	26 1	W-BL BL-W	0
T1 R1	30 5	W-S S-W	1
T2 R2	34 9	R-BR BR-R	2
T3 R3	38 13	BK-G G-BK	3

CO & DID trunk card

Table 61
Central Office & Direct Inward Dial trunk connection (Part 1 of 2)

Cable from cabinets or chassis		Unit #	Pins	Lead designations		
Pair	Color			Column 1	Column 2	Column 3
1T 1R	W-BL BL-W	0	26 1	T0 R0	T0 R0	A0 B0
2T 2R	W-O O-W		27 2		PPM0 —	C0 Spare
3T 3R	W-G G-W	1	28 3	T1 R1	T1 R1	A1 B1
4T 4R	W-BR BR-W		29 4		PPM1 —	C1 Spare

Table 61
Central Office & Direct Inward Dial trunk connection (Part 2 of 2)

Cable from cabinets or chassis		Unit #	Pins	Lead designations		
Pair	Color			Column 1	Column 2	Column 3
5T 5R	W-S S-W	2	30 5	T2 R2	T2 R2	A2 B2
6T 6R	R-BL BL-R		31 6		PPM2 —	C2 Spare
7T 7R	R-O O-R		32 7		T3 R3	A3 B3
8T 8R	R-G G-R		33 8		PPM3 —	C3 Spare
9T 9R	R-BR BR-R	4	34 9	T4 R4	T4 R4	A4 B4
10T 10R	R-S S-R		35 10		PPM4 —	C4 Spare
11T 11R	BK-BL BL-BK		36 11		T5 R5	A5 B5
12T 12R	BK-O O-BK		37 12		PPM5 —	C5 Spare
13T 13R	BK-G G-BK	6	38 13	T6 R6	T6 R6	A6 B6
14T 14R	BK-BR BR-BK		39 14		PPM6 —	C6 Spare
15T 15R	BK-S S-BK		40 15		T7 R7	A7 B7
16T 16R	Y-BL BL-Y		41 16		PPM7 —	C7 Spare

Central Office trunk card

Table 62

Central Office trunk connections (Part 1 of 2)

Cable from cabinets or chassis		Unit #	Pins	Lead designations
Pair	Color			
1T 1R	W-BL BL-W	0	26 1	T0 R0
2T 2R	W-O O-W		27 2	
3T 3R	W-G G-W		28 3	
4T 4R	W-BR BR-W		29 4	
5T 5R	W-S S-W		30 5	
6T 6R	R-BL BL-R	1	31 6	T1 R1
7T 7R	R-O O-R		32 7	
8T 8R	R-G G-R		33 8	
9T 9R	R-BR BR-R	2	34 9	T2 R2
10T 10R	R-S S-R		35 10	
11T 11R	BK-BL BL-BK		36 11	
12T 12R	BK-O O-BK		37 12	

Table 62
Central Office trunk connections (Part 2 of 2)

Cable from cabinets or chassis		Unit #	Pins	Lead designations
Pair	Color			
13T	BK-G	3	38	T3
13R	G-BK		13	R3
14T	BK-BR		39	
14R	BR-BK		14	
15T	BK-S		40	
15R	S-BK		15	
16T	Y-BL		41	
16R	BL-Y		16	

Trunk connections (UK)

NT5K17 Direct Inward Dial card terminations

Cross-connect the NT5K17 DID card as shown in Table 63.

Table 63
NT5K17 DID cross-connect terminations (Part 1 of 2)

Pair	Pins	Pair color	Unit #
T0	26	W-BL	0
R0	1	BL-W	
	27	W-O	
	2	O-W	
T1	28	W-G	1
R1	3	G-W	
	29	W-BR	
	4	BR-W	

Table 63
NT5K17 DID cross-connect terminations (Part 2 of 2)

Pair	Pins	Pair color	Unit #
T2 R2	30 5 31 6	W-S S-W R-BL BL-R	2
T3 R3	32 7 33 8	R-O O-R R-G G-R	3
T4 R4	34 9 35 10	R-BR BR-R R-S S-R	4
T5 R5	36 11 37 12	BK-BL BL-BK BK-O O-BK	5
T6 R6	38 13 39 14	BK-G G-BK BK-BR BR-BK	6
T7 R7	40 15 41 16	BK-S S-BK Y-BL BL-Y	7

NT5K18 Exchange line trunk card terminations

Cross-connect the NT5K18 Exchange line trunk card as shown in Table 64.

Note: The connections on the NT5K18 Exchange line trunk card are polarity sensitive. Make sure the ground side of the trunk is connected to the A leg of the NT5K18 circuit. Make sure the -50 volt side of the trunk is connected to the B leg of the NT5K18 circuit.

Table 64
NT5K18 Exchange line trunk card cross-connect terminations (Part 1 of 2)

Pair	Pins	Pair color	Unit #
T0 R0	26 1 27 2	W-BL BL-W W-O O-W	0
T1 R1	28 3 29 4	W-G G-W W-BR BR-W	1
T2 R2	30 5 31 6	W-S S-W R-BL BL-R	2
T3 R3	32 7 33 8	R-O O-R R-G G-R	3
T4 R4	34 9 35 10	R-BR BR-R R-S S-R	4

Table 64

NT5K18 Exchange line trunk card cross-connect terminations (Part 2 of 2)

Pair	Pins	Pair color	Unit #
T5 R5	36 11 37 12	BK-BL BL-BK BK-O O-BK	5
T6 R6	38 13 39 14	BK-G G-BK BK-BR BR-BK	6
T7 R7	40 15 41 16	BK-S S-BK Y-BL BL-Y	7

NT5K19 Analog TIE line trunk card terminations

Cross connect the NT5K19 analog TIE line trunk card as shown in Table 65 on [page 385](#).

Note: The speech pairs on the NT5K19 card are polarity insensitive. The E&M signalling pairs, however, are polarity sensitive. Make sure the ground side of the trunk is connected to the A leg of the NT5K19 circuit. Make sure the -50 volt side of the trunk is connected to the B leg.

Table 65
NT5K19 2W paging mode terminations

Pair	Pins	Pair color	Unit #
T0 R0 A PG	27 2 29 4	W-O O-W W-BR BR-W	0
T1 R1 A PG	31 6 33 8	R-BL BL-R R-G G-R	1
T2 R2 A PG	35 10 37 12	R-S S-R BK-O O-BK	2
T3 R3 A PG	39 14 41 16	BK-BR BR-BK Y-BL BL-Y	3

Table 66
NT5K19 2W Type 1 mode terminations

Pair	Pins	Pair color	Unit #
T0 R0 E M	27 2 28 3	W-O O-W W-G G-W	0
T1 R1 E M	31 6 32 &	R-BL BL-R R-O O-R	1
T2 R2 E M	35 10 36 11	R-S S-R BK-BL BL-BK	2
T3 R3 E M	39 14 40 15	BK-BR BR-BK BK-S S-BK	3

Table 67
NT5K19 4W Type 1 mode terminations

Pair	Pins	Pair color	Unit #
TA TB RA RB E M	26 1 27 2 28 3	W-BL BL-W W-O O-W W-G G-W	0
RA RB TA RB E M	30 5 31 6 32 7	W-S S-W R-BL BL-R R-O O-R	1
TA TB RA RB E M	34 9 35 10 36 11	R-BR BR-R R-S S-R BK-BL BL-BK	2
TA TB RA TB E M	38 13 39 14 40 15	BK-G G-BK BK-BR BR-BK BK-S S-BK	3

Table 68
NT5K19 AC15 mode pair terminations

Pair	Pins	Pair color	Unit #
TA TB RA RB	26 1 27 2	W-BL BL-W W-O O-W	0
TA TB RA RB	30 5 31 6	W-S S-W R-BL BL-R	1
TA TB RA RB	34 9 35 10	R-BR BR-R R-S S-R	2
TA TB RA TB	38 13 39 14	BK-G G-BK BK-BR BR-BK	3

Table 69
NT5K19 Recorded Announcement mode pair terminations

Pair	Pins	Pair color	Unit #
T0 R0 SIG B SIG A	26 1 29 4	W-BL BL-W W-BR BR-W	0
T1 R1 SIG B SIG A	30 5 33 8	W-S S-W R-G G-R	1
T2 R2 SIG B SIG A	34 9 37 12	R-BR BR-R BK-O O-BK	2
T3 R3 SIG B SIG A	38 13 41 16	BK-G G-BK Y-BL BL-Y	3

Activating a default model trunk

Due to the automatic 30 second timeout on the administration menu, prepare the data that you want to input before you begin. To determine the corresponding TNs and trunks, check the location of trunk cards in the cabinet or chassis or use LD 32.

Procedure 64 **Activating a default model trunk**

- 1 Pick up the handset of the administration telephone.
- 2 Enter the administration Flexible Feature Code to access the administration menu.

The prompt "PASSWORD?" appears.

- 3 Enter the default administration telephone password.
 You hear special dial tone, and the prompt
 "TASK?"
 appears in the top line of the character display.
 The second line of the display reads "1 ADD TRUNK".
- 4 Select "1 ADD TRUNK" by entering the number "1".
 The prompt "ROUTE ACCESS?" appears on the character display.
- 5 Enter the access code of the route to which you want to add a trunk and
 press the pound key (#).
 The prompt
 "TN?"
 asks you to enter a TN (Terminal Number) from one of the installed trunk
 cards.
 If you do not enter a valid route number, "TN?" does not appear and the
 screen remains the same. If the type of trunk card does not match the
 route, the prompt "ROUTE ACCESS?" appears again, and you hear
 overflow tone.
- 6 Enter the TN in Small System format (cu) and press the pound key.
 The prompt
 "MODEL"
 appears. If you enter an invalid TN, the display shows "INVALID, TN?"
 and you must enter a new TN using the Small System format.
- 7 Press the digits to select a trunk model (as assigned in LD 16).
 The character display shows
 "OK".
 After a delay of approximately 4 seconds you hear special dial tone.
 The sequence is repeated when the prompt
 "TN?"
 appears on the character display.
 The next valid trunk TN is automatically incremented after each trunk is
 activated.
- 8 Terminate the sequence by hanging up the telephone receiver.
 OR
 Repeat the sequence by going through the steps again.

By entering “#” when the procedure repeats, you accept the next TN and are prompted for the model type.

By entering “#” again, you accept the previously accepted model.

Note: The model chosen during the first trunk activation sequence will be the default model for all subsequent trunks until you hang up the telephone or manually enter a new trunk model number.

End of Procedure

Activating a selected model trunk

Due to the automatic 30 second time-out on the administration menu, prepare the data that you want to input before you begin. To determine the corresponding TNs and trunks, check the location of trunk cards in the cabinet or chassis or use LD 32.

Procedure 65

Activating a selected model trunk

- 1** Pick up the handset of the administration telephone.
- 2** Enter the administration Flexible Feature Code to access the administration menu.
- 3** Enter the default administration telephone password.

You hear special dial tone and the prompt “TASK?” appears on the top line of the character display. The second line of the character display reads “1 ADD TRUNK”.

- 4** Select “1 ADD TRUNK” by entering the number “1”.

The prompt
“ROUTE ACCESS?”
appears.

- 5** Enter the access code of the configured trunk route to which you want to add the trunk and press the pound key (#).

The prompt
“TN?”

asks you to enter a TN from one of the installed trunk cards. If you do not enter a valid route number, “TN?” does not appear and the screen remains the same. If the card does not match the route, the prompt “ROUTE ACCESS?” appears again, and you hear overflow tone.

- 6 Enter the TN in Small System format (cu).

The response

“MODEL?”

prompts you to select a model number for the trunk.

- 7 Enter a trunk model number for the specified TN and route, and press the pound key.

The character display shows:

“OK”

After a delay of approximately 4 seconds you hear special dial tone and the sequence is repeated when the following prompt appears on the character display.

“TN?”

- 8 Hang up or repeat the sequence.

The sequence ends when the last unit in the card is used and the program is complete, or when you hang up the telephone receiver.

Note: The model used for the first trunk activated in the sequence will be the default for all subsequent trunks until the telephone is hung up unless you manually enter a new trunk model number.

End of Procedure

Connecting an external alarm

Contents

This section contains information on the following topics:

Introduction	393
Alarm port assigned in software	393
Alarm through a QUA6 PFTU	395

Introduction

This chapter describes the procedures for connecting an external alarm to the Small System.

There are two methods of connecting an external alarm to the system:

- through an alarm port assigned in software
- through contacts in a QUA6 Power Failure Transfer Unit (PFTU)

This chapter contains the following procedure:

- Procedure 66: “Installing an alarm using an alarm port” on [page 394](#)

Alarm port assigned in software

The system can be equipped with an alarm port using an analog line connected to an analog (500/2500-type) telephone or other similar type of ringing or alerting device.

The alarm will operate when a BSD090 message indicates a power fault in the system. Information about BSD090 messages is contained in *Software Input/Output: Maintenance* (553-3001-511).

Procedure 66

Installing an alarm using an alarm port

- 1** Install an analog (500/2500-type) line as described in “Connecting the telephones” on [page 333](#).
- 2** Install an analog (500/2500-type) telephone or other similar alerting device used as an alarm to the line.

You can assign the set as Model 20.

- 3** Use LD 15 and make the following changes. Only the prompts requiring a response are listed. Use a Carriage Return, <CR>, to accept the default values for the other prompts.
 - a.** Enter CHG in response to the prompt REQ .
 - b.** Enter CDB in response to the prompt TYPE.
 - c.** Enter the customer number (0–99) in response to the prompt CUST.
 - d.** Enter the DN of the line assigned as an alarm port in response to the prompt ALDN.

Note: If the DN assigned to the alarm is accidentally called, the alarm activates. To avoid false alarms, make sure the DN is not consistent with the assigned numbering.

- e.** Press <CR> in response to the remaining prompts.

End of Procedure

Alarm through a QUA6 PFTU

A QUA6 PFTU can be used to connect an external alarm through normally open or normally closed contacts of one of its units. The contacts operate under the same conditions as the PFTU, and can support the capacities listed in Table 70.

Table 70
AC and dc capacities

	AC	DC (for cabinet)
Maximum switching power	50.0 V A.	30.0 W
Maximum switching voltage	125.0 V rms	150.0 V
Maximum switching current	0.5 A	0.5 A

Figure 130 shows an example of the contacts on one unit (PFT1) of the PFTU. The contacts are shown in normal operating mode, not in failure mode. Table 71 on [page 397](#) gives the connections for all units on the PFTU.

Figure 130
Contacts in PFTU

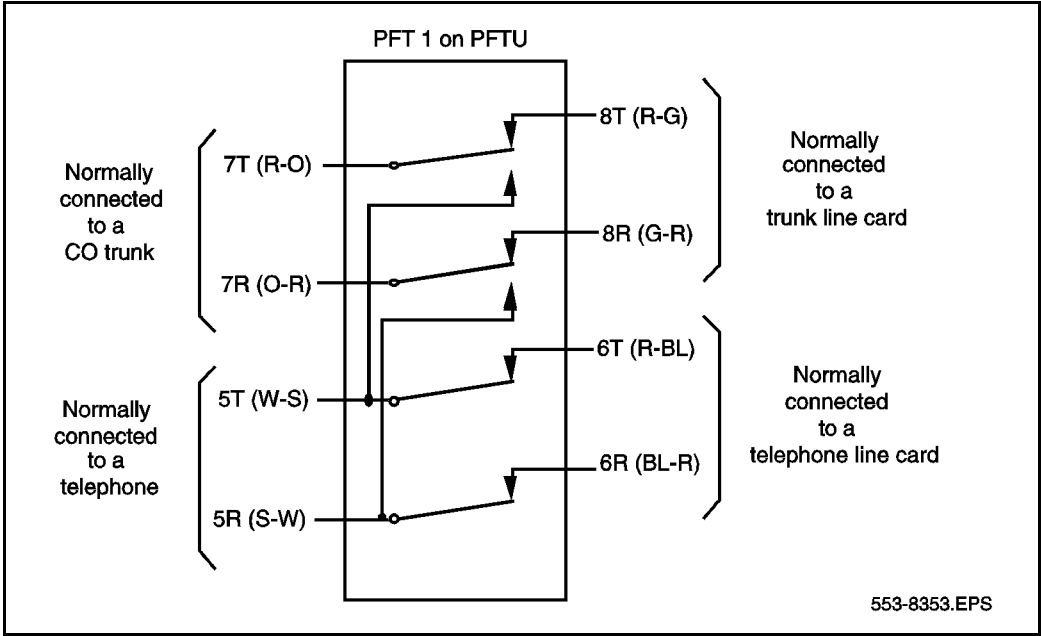


Table 71
Power Failure Transfer Unit connections (Part 1 of 2)

Unit	Pair	Color	Normal mode	Failure mode
P F T 1	5T	W-S	Makes with 6T and 6R	Opens 6T and 6R
	5R	S-W		Makes with 7T and 7R
	6T	R-BL	Makes with 5T and 5R	Open
	6R	BL-R		
	7T	R-O	Makes with 8T and 8R	Opens 8T and 8R
	7R	O-R		Makes with 5T and 5R
	8T	R-G	Makes with 7T and 7R	Open
	8R	G-R		
P F T 2	9T	R-BR	Makes with 10T and 10R	Opens 10T and 10R
	9R	BR-R		Makes with 11T and 11R
	10T	R-S	Makes with 9T and 9R	Open
	10R	S-R		
	11T	BK-BL	Makes with 12T and 12R	Opens 12T and 12R
	11R	BL-BK		Makes with 9T and 9R
	12T	BK-O	Makes with 11T and 11R	Open
	12R	O-BK		
P F T 3	13T	BK-G	Makes with 14T and 14R	Opens 14T and 14R
	13R	G-BK		Makes with 15T and 15R
	14T	BK-BR	Makes with 13T and 13R	Open
	14R	BR-BK		
	15T	BK-S	Makes with 16T and 16R	Opens 16T and 16R
	15R	S-BK		Makes with 13T and 13R
	16T	Y-BL	Makes with 15T and 15R	Open
	16R	BL-Y		

Table 71
Power Failure Transfer Unit connections (Part 2 of 2)

Unit	Pair	Color	Normal mode	Failure mode
P F T 4	17T	Y-O	Makes with 18T and 18R	Opens 18T and 18R Makes with 19T and 19R
	17R	O-Y		
	18T	Y-G	Makes with 17T and 17R	Open
	18R	G-Y		
	19T	Y-BR	Makes with 20T and 20R	Opens 20T and 20R Makes with 17T and 17R
	19R	BR-Y		
P F T 5	20T	Y-S	Makes with 19T and 19R	Open
	20R	S-Y		
	21T	V-BL	Makes with 22T and 22R	Opens 22T and 22R Makes with 23T and 23R
	21R	BL-V		
	22T	V-O	Makes with 21T and 21R	Open
	22R	O-V		
	23T	V-G	Makes with 24T and 24R	Opens 24T and 24R Makes with 21T and 21R
	23R	G-V		
	24T	V-BR	Makes with 23T and 23R	Open
	24R	BR-V		

Preprogrammed data

Contents

This section contains information on the following topics:

Introduction	400
Passwords and codes	401
Default numbering plan.	401
First digits.	402
Important extension numbers	404
Extensions assigned to card slots	405
Flexible Feature Codes	420
SDI ports	421
Modem port	421
Enhanced Serial Data Interface (ESDI) port	422
Telephone tones	423
Trunk routes	424
Trunk models.	425
Model telephones	430
Administration telephone models.	433
Central Answering Position (CAP) telephone models	435
General business telephone models	436
Analog (500/2500-type) telephone models	442
Digital telephone models	460

Introduction

When you first install a Small System, you must enter customer data into the overlay programs. You must, for example, assign features to telephone keys for the telephones to work correctly.

Nortel Networks or its distributors can program the Small System's Software Daughterboard with customer data before they send the card to the customer site. If you load preprogrammed data into the system during the installation process, some overlay entries configure automatically on the telephones. For example, you can select a telephone model that has feature and key assignments already determined and a Class of Service already assigned. If you have to program several types of telephone models, using preprogrammed data can save you time.

Preprogrammed data is not mandatory for software installation. In fact, the Software Daughterboard or SSC card can be programmed with the minimum number of files to allow the system to operate.

Passwords and codes

Table 72 shows each function in the left column and a corresponding password or code on the right.

Table 72
Passwords and codes

Function	Code or extension(s)
TTY password (for access to TTY Small System overlays)	0000
Meridian Mail administration password	adminpwd
Administration telephone password	1234
Administration telephone FFC	*41
SPRE code	1
Telephone relocation Flexible Feature Code	*40
Telephone Removal Flexible Feature Code	*42
Telephone relocation password (SCRD)	1234

Default numbering plan

The default numbering plan for Small Systems is based on the following guidelines:

- The default numbering plan uses four digits and starts at 2200.
- The prime extension number (DN) for each telephone is in the range 2200–2XXX. The value of “XXX” varies depending on the number of telephones that you have in the system. Any secondary extension numbers use numbers outside this range. This arrangement allows the Small System and Meridian Mail to automatically configure telephones and corresponding mailboxes without manual intervention.
- Meridian Mail uses extension 7000 for access, 7001 for Auto Attendant, 7002 for Express Messaging, and 7003 for Prompt Maintenance.

- For the Cabinet system:*
Meridian Mail Virtual Agents are preconfigured for Card 10 in Unit 0, 1, 2, 8, 9, and 10 of the main cabinet.

For the Chassis system:
Meridian Mail Virtual Agents are preconfigured for card slot 10 in Units 0, 1, 2, 4, 5, 8, 9, 10, 11, 12, and 13 of the chassis expander.
- The Central Answering Position has an extension of 7700. You can change this extension in LD 15.

First digits

Table 73 shows the default numbering plan for Small Systems.

Table 73
Default numbering plan — First digit

First digit	Preprogrammed use for digit
1	SPRE code
2	Not used
3	Not used
4	Not used
5	Not used
6	Not used
7	COT/TIE/DID/WATS/FEX/RAN/MUS/AWR/Paging Trunk access codes, Meridian Mail queues and attendant DN, Call park DNs
8	Not used
9	Not used
0	Attendant extension

Note: The first number of the default numbering plan is preprogrammed as 2200. The remaining numbers in the default numbering plan are assigned in software. These numbers do not become active, however, until you select the numbers during the telephone activation procedure.

The digit “7” in the default numbering plan is programmed with many system features to assist you in configuring the Small System. If you have the Meridian Mail card option software, it automatically configures user mailboxes to correspond with the 2200 numbering plan. In addition, the preprogrammed Meridian Mail queues in the Meridian Mail software match the default data on the system.

Important extension numbers

Table 74
Default numbering plan — important extension numbers

Extension	Use
Attendant extension	0
First number in numbering plan	2200
Night number	7700*
Queue for Central Answering Position	7700*
General ACD queue	7750*
Meridian Mail miscellaneous ACD queues:	7000–7009
• Meridian Mail extension	7000
Auto attendant extension	7001
Express messaging	7002
Prompt maintenance	7003
Miscellaneous queues	7004–7009
Meridian Mail position I.D.	7800–7811
Meridian Mail agent extensions	7830–7841
Call park extensions	7900–7919

* The thresholds which control the agent AWC keys have been set as follows:

CWTH 1
 CWLF 2
 CWLW 4

Extensions assigned to card slots

For the Cabinet system: Tables 75 through Table 79 provide the extension numbers assigned to card slots in the main and expansion cabinets. *For the Chassis system:* Table 80 on [page 410](#) provides the extension numbers assigned to card slots in the chassis and chassis expander.

Table 75
Extensions assigned to card slots in the main cabinet

Slot number	Extension numbers
1	2200 through 2215
2	2216 through 2231
3	2232 through 2247
4	2248 through 2263
5	2264 through 2279
6	2280 through 2295
7	2296 through 2311
8	2312 through 2327
9	2328 through 2343
10	2344 through 2359

Table 76
Extensions assigned to card slots in Expansion Cabinet 1

Slot number	Extension numbers
1	2360 through 2375
2	2376 through 2391
3	2392 through 2407
4	2408 through 2423
5	2424 through 2439
6	2440 through 2455
7	2456 through 2471
8	2472 through 2487
9	2488 through 2503
10	2504 through 2519

Table 77
Extensions assigned to card slots in Expansion Cabinet 2

Slot number	Extension numbers
1	2520 through 2535
2	2536 through 2551
3	2552 through 2567
4	2568 through 2583
5	2584 through 2599
6	2600 through 2615
7	2616 through 2631
8	2632 through 2647
9	2648 through 2663
10	2664 through 2679

Table 78
Extensions assigned to card slots in Expansion Cabinet 3

Slot number	Extension numbers
1	2680 through 2695
2	2696 through 2711
3	2712 through 2727
4	2728 through 2743
5	2744 through 2759
6	2760 through 2775
7	2776 through 2791
8	2792 through 2807
9	2808 through 2823
10	2824 through 2839

Table 79
Extensions assigned to card slots in Expansion Cabinet 4

Slot number	Extension numbers
1	2840 through 2855
2	2856 through 2871
3	2872 through 2887
4	2888 through 2903
5	2904 through 2919
6	2920 through 2935
7	2936 through 2951
8	2952 through 2967
9	2968 through 2983
10	2984 through 2999

Table 80
Extensions assigned to card slots in the chassis and chassis expander

Slot number	Card number	Extension numbers
Chassis		
1	1	2200 through 2215
2	2	2216 through 2231
3	3	2232 through 2247
4	4	2248 through 2263
4	5	2264 through 2279
4	6	2280 through 2295
Chassis expander		
7	7	2296 through 2311
8	8	2312 through 2327
9	9	2328 through 2343
10	10	2344 through 2359

Tables 81 through 87 provide the default DN assignments for Cabinet and Chassis systems.

Table 81
Main cabinet default DN assignments (Part 1 of 2)

Cable	Unit	Default Directory Number (DN)							
J1	0 - 7	2200	2201	2202	2203	2204	2205	2206	2207
J1	8 - 15	2208	2209	2210	2211	2212	2213	2214	2215
J2	0 - 7	2216	2217	2218	2219	2220	2221	2222	2223
J2	8 - 15	2224	2225	2226	2227	2228	2229	2230	2231
J3	0 - 7	2232	2233	2234	2235	2236	2237	2238	2239
J3	8 - 15	2240	2241	2242	2243	2244	2245	2246	2247
J4	0 - 7	2248	2249	2250	2251	2252	2253	2254	2255
J4	8 - 15	2256	2257	2258	2259	2260	2261	2262	2263
J5	0 - 7	2264	2265	2266	2267	2268	2269	2270	2271
J5	8 - 15	2272	2273	2274	2275	2276	2277	2278	2279
J6	0 - 7	2280	2281	2282	2283	2284	2285	2286	2287
J6	8 - 15	2288	2289	2290	2291	2292	2293	2294	2295
J7	0 - 7	2296	2297	2298	2299	2300	2301	2302	2303
J7	8 - 15	2304	2305	2306	2307	2308	2309	2310	2311
J8	0 - 7	2312	2313	2314	2315	2316	2317	2318	2319
J8	8 - 15	2320	2321	2322	2323	2324	2325	2326	2327
J9	0 - 7	2328	2329	2330	2331	2332	2333	2334	2335

Table 81
Main cabinet default DN assignments (Part 2 of 2)

Cable	Unit	Default Directory Number (DN)							
J9	8 - 15	2336	2337	2338	2339	2340	2341	2342	2343
J10	0 - 7	2344	2345	2346	2347	2348	2349	2350	2351
J10	8 - 15	2352	2353	2354	2355	2356	2357	2358	2359

Table 82
Expansion Cabinet 1 default DN assignments (Part 1 of 2)

Cable	Unit	Default Directory Number (DN)							
J1	0 - 7	2360	2361	2362	2363	2364	2365	2366	2367
J1	8 - 15	2368	2369	2370	2371	2372	2373	2374	2375
J2	0 - 7	2376	2377	2378	2379	2380	2381	2382	2383
J2	8 - 15	2384	2385	2386	2387	2388	2389	2390	2391
J3	0 - 7	2392	2393	2394	2395	2396	2397	2398	2399
J3	8 - 15	2400	2401	2402	2403	2404	2405	2406	2407
J4	0 - 7	2408	2409	2410	2411	2412	2413	2414	2415
J4	8 - 15	2416	2417	2418	2419	2420	2421	2422	2423
J5	0 - 7	2424	2425	2426	2427	2428	2429	2430	2431
J5	8 - 15	2432	2433	2434	2435	2436	2437	2438	2439
J6	0 - 7	2440	2441	2442	2443	2444	2445	2446	2447
J6	8 - 15	2448	2449	2450	2451	2452	2453	2454	2455

Table 82
Expansion Cabinet 1 default DN assignments (Part 2 of 2)

Cable	Unit	Default Directory Number (DN)							
J7	0 - 7	2456	2457	2458	2459	2460	2461	2462	2463
J7	8 - 15	2464	2465	2466	2467	2468	2469	2470	2471
J8	0 - 7	2472	2473	2474	2475	2476	2477	2478	2479
J8	8 - 15	2480	2481	2482	2483	2484	2485	2486	2487
J9	0 - 7	2488	2489	2490	2491	2492	2493	2494	2495
J9	8 - 15	2496	2497	2498	2499	2500	2501	2502	2503
J10	0 - 7	2504	2505	2506	2507	2508	2509	2510	2511
J10	8 - 15	2512	2513	2514	2515	2516	2517	2518	2519

Table 83
Expansion Cabinet 2 default DN assignments (Part 1 of 2)

Cable	Unit	Default Directory Number (DN)							
J1	0 - 7	2520	2521	2522	2523	2524	2525	2526	2527
J1	8 - 15	2528	2529	2530	2531	2532	2533	2534	2535
J2	0 - 7	2536	2537	2538	2539	2540	2541	2542	2543
J2	8 - 15	2544	2545	2546	2547	2548	2549	2552	2551
J3	0 - 7	2552	2553	2554	2555	2556	2557	2558	2559
J3	8 - 15	2560	2561	2562	2563	2564	2565	2566	2567
J4	0 - 7	2568	2569	2570	2571	2572	2573	2574	2575

Table 83
Expansion Cabinet 2 default DN assignments (Part 2 of 2)

Cable	Unit	Default Directory Number (DN)							
J4	8 - 15	2576	2577	2578	2579	2580	2581	2582	2583
J5	0 - 7	2584	2585	2586	2587	2588	2589	2590	2591
J5	8 - 15	2592	2593	2594	2595	2596	2597	2598	2599
J6	0 - 7	2600	2601	2602	2603	2604	2605	2606	2607
J6	8 - 15	2608	2609	2610	2611	2612	2613	2614	2615
J7	0 - 7	2616	2617	2618	2619	2620	2621	2622	2623
J7	8 - 15	2624	2625	2626	2627	2628	2629	2630	2631
J8	0 - 7	2632	2633	2634	2635	2636	2637	2638	2639
J8	8 - 15	2640	2641	2642	2643	2644	2645	2646	2647
J9	0 - 7	2648	2649	2650	2651	2652	2653	2654	2655
J9	8 - 15	2656	2657	2658	2659	2660	2661	2662	2663
J10	0 - 7	2664	2665	2666	2667	2668	2669	2670	2671
J10	8 - 15	2672	2673	2674	2675	2676	2677	2678	2679

Table 84
Expansion Cabinet 3 default DN assignments (Part 1 of 2)

Cable	Unit	Default Directory Number (DN)							
J1	0 - 7	2680	2681	2682	2683	2684	2685	2686	2687
J1	8 - 15	2688	2689	2690	2691	2692	2693	2694	2695

Table 84
Expansion Cabinet 3 default DN assignments (Part 2 of 2)

Cable	Unit	Default Directory Number (DN)							
J2	0 - 7	2696	2697	2698	2699	2700	2701	2702	2703
J2	8 - 15	2704	2705	2706	2707	2708	2709	2710	2711
J3	0 - 7	2712	2713	2714	2715	2716	2717	2718	2719
J3	8 - 15	2720	2721	2722	2723	2724	2725	2726	2727
J4	0 - 7	2728	2729	2730	2731	2732	2733	2734	2735
J4	8 - 15	2736	2737	2738	2739	2740	2741	2742	2743
J5	0 - 7	2744	2745	2746	2747	2748	2749	2750	2751
J5	8 - 15	2752	2753	2754	2755	2756	2757	2758	2759
J6	0 - 7	2760	2761	2762	2763	2764	2765	2766	2767
J6	8 - 15	2768	2769	2770	2771	2772	2773	2774	2775
J7	0 - 7	2776	2777	2778	2779	2780	2781	2782	2783
J7	8 - 15	2784	2785	2786	2787	2788	2789	2790	2791
J8	0 - 7	2792	2793	2794	2795	2796	2797	2798	2799
J8	8 - 15	2800	2801	2802	2803	2804	2805	2806	2807
J9	0 - 7	2808	2809	2810	2811	2812	2813	2814	2815
J9	8 - 15	2816	2817	2818	2819	2820	2821	2822	2823
J10	0 - 7	2824	2825	2826	2827	2828	2829	2830	2831
J10	8 - 15	2832	2833	2834	2835	2836	2837	2838	2839

Table 85
Expansion Cabinet 4 default DN assignments (Part 1 of 2)

Cable	Unit	Default Directory Number (DN)							
J1	0 - 7	2840	2841	2842	2843	2844	2845	2846	2847
J1	8 - 15	2848	2849	2850	2851	2852	2853	2854	2855
J2	0 - 7	2856	2857	2858	2859	2860	2861	2862	2863
J2	8 - 15	2864	2865	2866	2867	2868	2869	2870	2871
J3	0 - 7	2872	2873	2874	2875	2876	2877	2878	2879
J3	8 - 15	2880	2881	2882	2883	2884	2885	2886	2887
J4	0 - 7	2888	2889	2890	2891	2892	2893	2894	2895
J4	8 - 15	2896	2897	2898	2899	2900	2901	2902	2903
J5	0 - 7	2904	2905	2906	2907	2908	2909	2910	2911
J5	8 - 15	2912	2913	2914	2915	2916	2917	2918	2919
J6	0 - 7	2920	2921	2922	2923	2924	2925	2926	2927
J6	8 - 15	2928	2929	2930	2931	2932	2933	2934	2935
J7	0 - 7	2936	2937	2938	2939	2940	2941	2942	2943
J7	8 - 15	2944	2945	2946	2947	2948	2949	2950	2951
J8	0 - 7	2952	2953	2954	2955	2956	2957	2958	2959
J8	8 - 15	2960	2961	2962	2963	2964	2965	2966	2967
J9	0 - 7	2968	2969	2970	2971	2972	2973	2974	2975

Table 85
Expansion Cabinet 4 default DN assignments (Part 2 of 2)

Cable	Unit	Default Directory Number (DN)							
J9	8 - 15	2976	2977	2978	2979	2980	2981	2982	2983
J10	0 - 7	2984	2985	2986	2987	2988	2989	2990	2991
J10	8 - 15	2992	2993	2994	2995	2996	2997	2998	2999

Table 86 lists the default DN assignments for the chassis and chassis expander.

Table 86
Default DN assignments for the chassis and chassis expander (Part 1 of 2)

	Cable	Unit	Default Directory Number (DN)							
Chassis	Card 1	0 - 7	2200	2201	2202	2203	2204	2205	2206	2207
	Card 1	8 - 15	2208	2209	2210	2211	2212	2213	2214	2215
	Card 2	0 - 7	2216	2217	2218	2219	2220	2221	2222	2223
	Card 2	8 - 15	2224	2225	2226	2227	2228	2229	2230	2231
	Card 3	0 - 7	2232	2233	2234	2235	2236	2237	2238	2239
	Card 3	8 - 15	2240	2241	2242	2243	2244	2245	2246	2247
	Card 4	0 - 7	2248	2249	2250	2251	2252	2253	2254	2255
	Card 4	8 - 15	2256	2257	2258	2259	2260	2261	2262	2263
	Card 5	0 - 7	2264	2265	2266	2267	2268	2269	2270	2271
	Card 5	8 - 15	2272	2273	2274	2275	2276	2277	2278	2279
	Card 6	0 - 7	2280	2281	2282	2283	2284	2285	2286	2287
	Card 6	8 - 15	2288	2289	2290	2291	2292	2293	2294	2295

Table 86
Default DN assignments for the chassis and chassis expander (Part 2 of 2)

	Cable	Unit	Default Directory Number (DN)							
Chassis expander	Card 7	0 - 7	2296	2297	2298	2299	2300	2301	2302	2303
	Card 7	8 - 15	2304	2305	2306	2307	2308	2309	2310	2311
	Card 8	0 - 7	2312	2313	2314	2315	2316	2317	2318	2319
	Card 8	8 - 15	2320	2321	2322	2323	2324	2325	2326	2327
	Card 9	0 - 7	2328	2329	2330	2331	2332	2333	2334	2335
	Card 9	8 - 15	2336	2337	2338	2339	2340	2341	2342	2343
	Card 10	0 - 7	2344	2345	2346	2347	2348	2349	2350	2351
	Card 10	8 - 15	2352	2353	2354	2355	2356	2357	2358	2359

Table 87 lists the default DN assignments for the chassis and chassis expander for Germany.

Table 87
Default DN assignments for the chassis and chassis expander (Germany)

	Cable	Unit	Default Directory Number (DN)							
Chassis	Card 1	0 - 7	100	101	102	103	104	105	106	107
	Card 1	8 - 15	108	109	110	111	112	113	114	115
	Card 2	0 - 7	116	117	118	119	120	121	122	123
	Card 2	8 - 15	124	125	126	127	128	129	130	131
	Card 3	0 - 7	132	133	134	135	136	137	138	139
	Card 3	8 - 15	140	141	142	143	144	145	146	147
	Card 4	0 - 7	148	149	150	151	152	153	154	155
	Card 4	8 - 15	156	157	158	159	160	161	162	163
	Card 5	0 - 7	164	165	166	167	168	169	170	171
	Card 5	8 - 15	172	173	174	175	176	177	178	179
	Card 6	0 - 7	180	181	182	183	184	185	186	187
	Card 6	8 - 15	188	189	190	191	192	193	194	195
Chassis expander	Card 7	0 - 7	196	197	198	199	200	201	202	203
	Card 7	8 - 15	204	205	206	207	208	209	210	211
	Card 8	0 - 7	212	213	214	215	216	217	218	219
	Card 8	8 - 15	220	221	222	223	224	225	226	227
	Card 9	0 - 7	228	229	230	231	232	233	234	235
	Card 9	8 - 15	236	237	238	239	240	241	242	243
	Card 10	0 - 7	244	245	246	247	248	249	250	251
	Card 10	8 - 15	252	253	254	255	256	257	258	259

Flexible Feature Codes

Many administrative procedures use Flexible Feature Code (FFC) data. Table 88 lists the FFCs for the Small Systems.

Table 88
Flexible Feature Codes

FFC prompt	FFC	Definition
ASRC	*40	Automatic Set Relocation
AREM	*42	Automatic Set Removal Code
ADMN	*41	Administration Set Access Code
CFWA	#1	Call Forward All Calls Activate
CFWD	#1	Call Forward All Calls Deactivate
C6DS	*70	6 Party Conference Code
HOLD	#4	Permanent Call Hold
MNTC	*43	Maintenance Access Code
PUGR	*71	Pick-Up Group Code
RDLN	*72	Last Number Re-dial
RDST	*73	Store Last Number Re-dial
RGAA	*74	Ring Again Activate
RGAD	*75	Ring Again Deactivate
RGAV	*77	Ring Again Verify
SPCC	#2/*80	Speed Call Controller Code
SPCU	#3/*81	Speed Call User Code
SSPU	*89	System Speed Call User Code

SDI ports

The minimum system port configuration for the Small System is 3 SDI ports, all of which can be found on the Small System's NTDK20 SSC card.

You can obtain additional ports by installing an NTAK02 SDI/DCH circuit card. The SDI/DCH card has 4 serial I/O ports with three possible configurations:

- 2 asynchronous ESDI ports with 2 DCHI ports
- 2 synchronous ESDI ports, or
- 2 SDI ports.

Table 89 shows the default SDI port configuration. The value for "XX" is set on the faceplate of the Cabinet system's CPU/CONF circuit card or the Chassis system's SSC circuit card.

Table 89
Preconfigured SDI ports

TTY Number	Card	Port	Use	Configuration
0	0	0	MTC/SCH/BUG	XX/8/1/NONE
1	0	0	MTC/SCH/BUG	1200/8/1/NONE
2	0	1	MTC/SCH/BUG	1200/8/1/NONE
8	10	0	LSL	1200/8/1/NONE
9	10	1	CMS	4800

Modem port

The preconfigured modem port allows the remote maintenance modem to be connected without further system programming. This port is preconfigured as TTY 0 (port 0 on the SSC card) and is programmed for Maintenance (MTC), Service Change (SCH), and BUG messages.

Enhanced Serial Data Interface (ESDI) port

Port 9 is preprogrammed as an ESDI port and supports Meridian Mail. It functions as a Command Status Link with the settings given in Table 90.

Table 90
ESDI settings

Setting	Code
BPS	4800
CLOK	EXT
IADR	003
RADR	001
T1	10
T2	002
T3	040
N1	128
N2	08
K	7
RXMT	05
CRC	10
ORUR	005
ABOR	005
USER	CMS
ENL	NO

Telephone tones

The telephone tones in North America are as follows:

- **Dial tone:** A continuous tone.
- **Special dial tone:** Three beeps followed by continuous dial tone.
- **Overflow tone:** Like a busy tone, except faster and higher.
- **Relocation tone:** A short high-pitched beep that continues for 4 seconds, followed by silence.

Trunk routes

Table 91 shows preprogrammed trunk route information that you need on hand to activate and modify trunks.

Table 91
Preprogrammed trunk route information

Route	Type	Access Code	Mode	Interface
00 *	COT	7100	IAO	–
01 *	COT	7101	ICT	–
02 *	COT	7102	OGT	–
03	TIE	7103	IAO	-
04	TIE	7104	ICT	–
05	TIE	7105	OGT	–
06	DID	7106	ICT	–
07	WAT	7107	IAO	–
08	WAT	7108	ICT	–
09	WAT	7109	OGT	–
40	MUS	7140	OGT	–
41	AWR	7141	–	AUD
42	RAN	7142	–	DGT
43	RAN	7143	–	AUD
44	PAG	7144	OGT	–
50	FEX	7150	IAO	–
51	FEX	7151	ICT	–
52	FEX	7152	OGT	–

Note: Trunk routes marked with an asterisk (*) are configured support

Call Detail Recording (CDR) output. The CDR is preconfigured as follows:

CDR YES
 INC YES
 OAL YES
 AIA YES

Trunk models

Note: All trunks are programmed as immediate start/supervision = Yes, with the exception of trunks with an asterisk (*) next to them. Trunks marked with an asterisk (*) are set for Wink start/supervision = Yes.

Table 92
Trunk model information (Part 1 of 5)

Mode	Pack	Model	Signaling	DIP or DTN	BIMP and TIMP
COT	XUT	1	GRD	DIP	3COM/600
		2	LOP	DIP	3COM/600
		3	GRD	DTN	3COM/600
		4	LOP	DTN	3COM/600
		5	GRD	DIP	3COM/900
		6	LOP	DIP	3COM/900
		7	GRD	DTN	3COM/900
		8	LOP	DTN	3COM/900

Table 92
Trunk model information (Part 2 of 5)

Mode	Pack	Model	Signaling	DIP or DTN	BIMP and TIMP
TIE	XUT	1	OAD	DIP	3COM/600
		2	LDR	DIP	3COM/600
		3	OAD	DTN	3COM/600
		4	LDR	DTN	3COM/600
		5	OAD	DIP	3COM/900
		6	LDR	DIP	3COM/900
		7	OAD	DTN	3COM/900
		8	LDR	DIP	3COM/900
	XEM	16	EAM	DIP	—/600
		17	EM4	DIP	—
		18	EAM	DTN	—/ 600
		19	EM4	DIP	—

Table 92
Trunk model information (Part 3 of 5)

Mode	Pack	Model	Signaling	DIP or DTN	BIMP and TIMP
DID	XUT	1	LDR (Wink Start Supv = Yes)	DIP	3COM/600
		2	LDR (Wink Start Supv = Yes)	DTN	3COM/600
		3	LDR (Wink Start Supv = Yes)	DIP	3COM/900
		4	LDR (Wink Start Supv = Yes)	DTN	3COM/900
		5*	LDR (Wink Start Supv = Yes)	DIP	3COM/600
		6*	LDR (Wink Start Supv = Yes)	DTN	3COM/600
		7*	LDR (Wink Start Supv = Yes)	DIP	3COM/900
		8*	LDR (Wink Start Supv = Yes)	DTN	3COM/900
WAT	XUT	1	GRD	DIP	3COM/600
		2	LOP	DIP	3COM/600
		3	GRD	DTN	3COM/600
		4	LOP	DTN	3COM/600
		5	GRD	DIP	3COM/900
		6	LOP	DIP	3COM/900
		7	GRD	DTN	3COM/900
		8	LOP	DTN	3COM/900
MUS	XUT	1			3COM/600

Table 92
Trunk model information (Part 4 of 5)

Mode	Pack	Model	Signaling	DIP or DTN	BIMP and TIMP
AWR	XUT	1			600/1200
RAN	XUT	1			600/1200
PAG	XUT	1	LDR	DIP	3COM/600
		2	OAD	DIP	3COM/600
		3	LDR	DTN	3COM/600
		4	OAD	DTN	3COM/600
		5	LDR	DIP	3COM/900
		6	OAD	DIP	3COM/900
		7	LDR	DTN	3COM/900
		8	OAD	DTN	3COM/900
	XEM	16	EAM	DIP	—/600
		17	EM4	DIP	—
		18	EAM	DTN	—/600
		19	EM4	DTN	—

Table 92
Trunk model information (Part 5 of 5)

Mode	Pack	Model	Signaling	DIP or DTN	BIMP and TIMP
FEX	XUT	1	GRD	DIP	3COM/600
		2	LOP	DIP	3COM/600
		3	GRD	DTN	3COM/600
		4	LOP	DTN	3COM/600
		5	GRD	DIP	3COM/900
		6	LOP	DIP	3COM/900
		7	GRD	DTN	3COM/900
		8	LOP	DTN	3COM/900
* These trunks are set for Wink start.					

Model telephones

This section provides model numbers for each telephone type and tables showing the numbering and placement of the keys, and the feature assigned to each key.

Note: OPS telephones do not have their own telephone models. You can, however, create OPS models in by entering DD in response to the CDEN prompt in LD 10.

With the exception of the administration and CAP model telephones, the models are organized according to software packages, as follows:

Administration telephones

- M2008 — one model
- M2616 — one model

CAP telephones

- M2616 — one model
- M2216 — one model

General business telephones

- Analog (500/2500-type) telephones — seven models
- M2000 telephones
 - M2317 — two models
 - M2009 — two models
 - M2112 — two models
 - M2018 — two models
- M2006 — five models
- M2008 — fifteen models
- M2616 — twelve models

- M2216 — two models
- M3000 — two models

Hotel and Motel telephones

- 500- and 2500-type telephones — one model
- M2006 — two models
- M2008 — two models
- M2616 — one model

Health Care telephones

- M2006 — one model
- M2008 — four models
- M2616 — two models

Tables 93 through 95 show the acronyms for the Class of Service options for each telephone model in this section.

Table 93
Class of Service options — analog telephones

Prompt	Meaning
TLD	Toll Denied
HTA	Hunting Allowed
LNA	Last Number Redial Allowed
FNA	Call Forward No Answer Allowed
PUA	Pickup Allowed
XRA	Ring Again Allowed
MWA	Message Waiting Allowed

Table 94
Class of Service options — digital telephones

Prompt	Meaning
TLD	Toll Denied
AAD	Automatic Answerback Denied
ADD	Automatic Digit Display
HTA	Hunting Allowed
LNA	Last Number Redial Allowed
FNA	Call Forward No Answer Allowed
PUA	Pickup Allowed
XRA	Ring Again Allowed
MWA	Message Waiting Allowed

Table 95
Class of Service Options — ACD telephones

Prompt	Meaning
UNR	Unrestricted
AAD	Automatic Answerback Denied
ADD	Automatic Digit Display
HTA	Hunting Allowed
LNA	Last Number Redial Allowed
FND	Call Forward No Answer Allowed
PUD	Pickup Denied
MWA	Message Waiting Allowed

Administration telephone models

M2008 model 99

Intended use: Administration (maintenance) telephone

Assigned Class of Service options:

MTA/ADD/LNA/FNA/GPUA/MWA/FBD

Table 96

M2008 model 99

Key number position	Feature
7	Blank
6	Message
5	Transfer
4	Speed Call (personnel: 99)
3	Forward
2	Conference
1	DN
0	DN

M2616 model 99

Intended use: Administration (maintenance) telephone

Assigned Class of Service options:

MTA/LNA/FNA/GPUA/MWA/ADD//HFA/FBD

Table 97

M2616 model 99

Feature	Key number position	Key number position	Feature
—	15	7	—
Auto Dial	14	6	Message
Auto Dial	13	5	Transfer
Auto Dial	12	4	Ring Again
Auto Dial	11	3	Forward
Auto Dial	10	2	Conference
Auto Dial	9	1	DN
Speed Call (personnel: 99)	8	0	DN

Central Answering Position (CAP) telephone models

M2616 and 2216 CAP telephone model 60

Intended use: Central Answering Position telephone

Assigned Class of Service options:

LNA/FND/GPUA/MWA/ADD/HFD/AGN/FBD/SPV

Table 98

M2616 and 2216 CAP telephone model 60

Feature	Key number position	Key number position	Feature
Hot *	15	7	—
Make Set Busy	14	6	DN
Display Waiting Calls	13	5	Park
Auto Dial	12	4	Override
Auto Dial	11	3	Add
Auto Dial	10	2	Consult/Join
Auto Dial	9	1	Extend
Auto Dial	8	0	ACD Queue (7700)

* This key is used as a Hotline to connect to the office paging system. Assign it with the paging route access code and define it when you activate the telephone.

Note: With the M2616 CAP you must use an ACD character display. In the system software, the Extend key is actually called a Transfer key; the Consult/Join key is called a Conference key; and the Add key is called a No Hold Conference key.

General business telephone models

M2000 series telephones

The M2000 series telephones — M2112, M2018, M2317, M2009, and M3000 — are limited to a **combined total** of 128 model telephones. (In other words, there can be no more than a combined total of 128 different models for all the M2000 series telephones.)

It is up to you to make sure that the model associated with the telephone you are activating is predefined. You must select the model associated with the telephone or the telephone will not work.

M2317 model 20

Intended use: Two-line general business telephone with display

Assigned Class of Service options: FND/GPUA/LND/MWD/ADD/FBD

Table 99
M2317 model 20

Feature	Key number position	Key number position	Feature
—	—	5	Auto Dial
Auto Dial	10	4	Auto Dial
Auto Dial	9	3	Auto Dial
Auto Dial	8	2	Auto Dial
Auto Dial	7	1	DN
Auto Dial	6	0	DN

Table 100
Default features available using M2317 model 20 softkeys

Key number position	Feature
29	Language
28	Privacy Release
27	Ring Again
26	Transfer
25	Charge Account
24	Calling Party Number
23	Conference
17	Call Park

M2317 model 25

Intended use: Two-line general business telephone with message indication and display

Assigned Class of Service options: FNA/GPUA/LND/MWA/ADD/FBD

Table 101
M2317 model 25

Feature	Key number position	Key number position	Feature
—	—	5	Auto Dial
Auto Dial	10	4	Auto Dial
Auto Dial	9	3	Auto Dial
Auto Dial	8	2	Auto Dial
Auto Dial	7	1	DN
Auto Dial	6	0	DN

Table 102
Default features available using M2317 model 25 softkeys

Key number position	Feature
29	Language
28	Privacy Release
27	Ring Again
26	Transfer
25	Charge Account
24	Calling Party Number
23	Conference
20	Message
17	Call Park

M2009 model 21

Intended use: Two-line general business telephone

Assigned Class of Service options: FND/GPUA/LNA/MWA/NDD/FBD

Table 103
M2009 model 21 (Part 1 of 2)

Key number position	Feature
8	Auto Dial
7	Auto Dial
6	Transfer
5	Ring Again
4	Pick-Up
3	Call Forward

Table 103
M2009 model 21 (Part 2 of 2)

Key number position	Feature
2	Conference
1	DN
0	DN

M2009 model 26

Intended use: Two-line general business telephones with message indication
Assigned Class of Service options: FNA/GPUA/LNA/MWA/NDD/FBD

Table 104
M2009 model 26

Key number position	Feature
8	Auto Dial
7	Message
6	Transfer
5	Ring Again
4	Pick-Up
3	Call Forward
2	Conference
1	DN
0	DN

M2112 model 22

Intended use: Two-line general business telephone

Assigned Class of Service options: FND/GPUA/LNA/MWA/NDD/FBD

Table 105

M2112 model 22

Feature	Key number position	Key number position	Feature
—	—	5	Ring Again
Auto Dial	10	4	Pick-Up
Auto Dial	9	3	Call Forward
Auto Dial	8	2	Conference
Transfer	7	1	DN
Speed Call	6	0	DN

M2112 model 27

Intended use: Two-line general business telephone with message indication

Assigned Class of Service options: FNA/GPUA/LNA/MWA/NDD/FBD

Table 106

M2112 model 27

Feature	Key number position	Key number position	Feature
—	—	5	Ring Again
Auto Dial	10	4	Pick-Up
Auto Dial	9	3	Call Forward
Message	8	2	Conference
Transfer	7	1	DN
Speed Call	6	0	DN

M2018 model 24**Intended use:** Two-line general business telephone**Assigned Class of Service options:** FND/GPUA/LNA/MWA/NDD/FBD**Table 107****M2018 model 24**

Feature	Key number position	Key number position	Feature
Auto Dial	17	8	Auto Dial
Auto Dial	16	7	Auto Dial
Auto Dial	15	6	Transfer
Auto Dial	14	5	Ring Again
Auto Dial	13	4	Pick-Up
Auto Dial	12	3	Call Forward
Auto Dial	11	2	Conference
Auto Dial	10	1	DN
Auto Dial	9	0	DN

M2018 model 29**Intended use:** Two-line general business telephone with message indication**Assigned Class of Service options:** FNA/GPUA/LNA/MWA/NDD/FBD**Table 108****M2018 model 29 (Part 1 of 2)**

Feature	Key number position	Key number position	Feature
Auto Dial	17	8	Auto Dial
Auto Dial	16	7	Message
Auto Dial	15	6	Transfer

Table 108
M2018 model 29 (Part 2 of 2)

Feature	Key number position	Key number position	Feature
Auto Dial	14	5	Ring Again
Auto Dial	13	4	Pick-Up
Auto Dial	12	3	Call Forward
Auto Dial	11	2	Conference
Auto Dial	10	1	DN
Auto Dial	9	0	DN

Analog (500/2500-type) telephone models

Note: When you are activating an analog (500-type) telephone, you must use an analog (2500-type) telephone to define the features. When you have done this, disconnect the analog (2500-type) telephone and replace it with the analog (500-type) telephone that you are activating.

Analog (500/2500-type) support personnel telephone models**Table 109****Analog (500/2500-type) telephone models**

Model	Type of telephone	Assigned Class of Service options
20	Support personnel telephone with toll denied	TLD, C6A, CFXD, DTN, FND, GPU, LNA, XFA, XRA, FBD
21	Support personnel telephone	UNR, C6A, CFXD, DTN, FND, GPU, LNA, XFA, XRA, FBD
22	Support personnel telephone with message indication lamp	MWA, TLD, C6A, CFXD, DTN, FNA, GPU, LNA, XFA, XRA, FBD, LPA
23	Support personnel telephone with message indication lamp	MWA, UNR, C6A, CFXD, DTN, FNA, GPU, LNA, XFA, XRA, FBD, LPA
24	Support personnel telephone with message indication and no lamp	MWA, TLD, C6A, CFXD, DTN, FNA, GPU, LNA, XFA, XRA, FBD, LPD
25	Support personnel telephone with message indication and no lamp	MWA, UNR, C6A, CFXD, DTN, FNA, GPU, LNA, XFA, XRA, FBD, LPD
26	Courtesy telephone	MNL, TLD

Hotel and motel models

Note: When you are activating a 500-type telephone, you must use a 2500-type telephone to define the features. Once you have done this, unplug the 2500-type telephone and replace it with the 500-type telephone that you are activating.

Table 110**Hotel and motel models**

Model	Type of telephone	Assigned Class of Service options
40	Guest room telephone	CCSA, MWA, DTN

Health care telephone models

Note: When you are activating a 500-type telephone, you must use a 2500-type telephone to define the features. Once you have done this, unplug the 2500-type telephone and replace it with the 500-type telephone that you are activating.

Table 111
Health care telephone models

Model	Type of telephone	Assigned Class of Service options
50	Nurses' station telephone with speed call	FND, LNA, GPU, MWA, FBD
51	Nurses' station telephone with message and speed call	FND, LNA, GPU, MWA, NDD, FBD
52	Nurses' station telephone with speed call and display	FND, LNA, GPU, MWA, ADD, FBD
53	Nurses' station set with message, speed call and display	ND, LNA, GPU, MWA, ADD, FBD

M2006 General business telephone models**Table 112****M2006 General business telephone models (Part 1 of 2)**

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature
20	General business telephone	FND, GPU, LNA, MWA, FBD, UNR	5 - Transfer 4 - Ring Again 3 - Pick-Up 2 - Forward 1 - Conference 0 - DN
21	General business telephone with message indicator	FNA, GPU, LNA, MWA, FBD, UNR	5 - Message 4 - Transfer 3 - Pick-Up 2 - Forward 1 - Conference 0 - DN
22	General business telephone with message indication and speed call	FNA, GPU, LNA, MWA, FBD, UNR	5 - Message 4 - Speed Call 3 - Pick-Up 2 - Forward 1 - Conference 0 - DN
23	General business telephone	FND, GPU, LNA, MWA, FBD, TLD	5 - Transfer 4 - Ring Again 3 - Pick-Up 2 - Forward 1 - Conference 0 - DN

Table 112
M2006 General business telephone models (Part 2 of 2)

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature
24	General business telephone with message indicator	FNA, GPU, LNA, MWA, FBD, TLD	5 - Message 4 - Transfer 3 - Pick-Up 2 - Forward 1 - Conference 0 - DN
25	General business telephone with message indication and speed call	FNA, GPU, LNA, MWA, FBD, TLD	5 - Message 4 - Speed Call 3 - Pick-Up 2 - Forward 1 - Conference 0 - DN

M2006 model 40

Intended use: Hotel guest room telephone without message indication

Assigned Class of Service options: CCSA/MWA/FBD/CNDD/TLD/FND

Table 113
M2006 model 40

Key number position	Feature
5	Hot *
4	Hot *
3	Hot *
2	Hot *
1	Hot *
0	DN
* These keys are Hotlines to various Hotel and Motel services, such as Room service, and the front desk. You define them when you activate the telephone.	

M2006 model 41

Intended use: Hotel guest room telephone with message indication

Assigned Class of Service options: CCSA/MWA/FBD/FNA/CNDD/TLD

Table 114

M2006 model 41

Key number position	Feature
5	Message
4	Hot *
3	Hot *
2	Hot *
1	Hot *
0	DN
* These keys are Hotlines to various Hotel and Motel services, such as Room service, and the front desk. You define them when you activate the telephone.	

M2006 model 50

Intended use: Nurses' station telephone with speed call

Assigned Class of Service options: FND/LNA/GPUA/MWA/FBD

Table 115

M2006 model 50

Key number position	Feature
5	Speed Call (personnel: 20)
4	Ring Again
3	Pick-Up
2	Forward
1	Conference
0	DN

M2008 General business telephone models**Table 116****M2008 General business telephone models (Part 1 of 2)**

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature
20	General business telephone	FND, GPU, LNA, MWA, NDD, FBD	7 - Auto Dial 6 - Auto Dial 5 - Transfer 4 - Ring Again 3 - Pick-Up 2 - Forward 1 - Conference 0 - DN
21	General business telephone with message indication	FNA, GPU, LNA, MWA, NDD, FBD	7 - Auto Dial 6 - Message 5 - Transfer 4 - Ring Again 3 - Pick-Up 2 - Forward 1 - Conference 0 - DN

Table 116
M2008 General business telephone models (Part 2 of 2)

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature
22	General business telephone with display	FND, GPUUA, LNA, MWA, ADD, FBD	7 - 6 - Auto Dial 5 - Transfer 4 - Ring Again 3 - Pick-Up 2 - Forward 1 - Conference 0 - DN
23	General business telephone with message indication and display	FNA, GPUUA, LNA, MWA, ADD, FBD	7 - 6 - Message 5 - Transfer 4 - Ring Again 3 - Pick-Up 2 - Forward 1 - Conference 0 - DN

M2008 Two-line general business telephone models
Table 117**M2008 Two-line general business telephone models (Part 1 of 2)**

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature
24	Two-line general business telephone	FND, GPU, LNA, MWA, NDD, FBD	7 - Auto Dial 6 - Transfer 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN
25	Two-line general business telephone with message indication	FNA, GPU, LNA, MWA, NDD, FBD	7 - Auto Dial 6 - Message 5 - Transfer 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN
26	Two-line general business telephone with display	FND, GPU, LNA, MWA, ADD, FBD	7 - 6 - Transfer 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN

Table 117
M2008 Two-line general business telephone models (Part 2 of 2)

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature
27	Two-line general business telephone with message indication and display	FNA, GPUUA, LNA, MWA, ADD, FBD	7 - 6 - Message 5 - Transfer 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN
28	Two-line general business telephone	FND, GPUUA, LNA, MWA, NDD, FBD	7 - Auto Dial 6 - Auto Dial 5 - Auto Dial 4 - Auto Dial 3 - Forward 2 - Conference 1 - DN 0 - DN

M2008 manager telephone models**Table 118****M2008 Manager telephone models (Part 1 of 2)**

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature
30	Manager telephone	FND, GPUUA, LNA, MWA, NDD, FBD	7 - Transfer 6 - Voice Call 5 - Speed Call (personnel: 20) 4 - Ring Again 3 - Forward 2 - Conference 1 - DN 0 - DN
31	Manager telephone with message indication	FNA, GPUUA, LNA, MWA, NDD, FBD	7 - Voice Call 6 - Message 5 - Speed Call (personnel: 20) 4 - Ring Again 3 - Forward 2 - Conference 1 - DN 0 - DN

Table 118
M2008 Manager telephone models (Part 2 of 2)

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature
32	Manager telephone with display	FND, GPUUA, LNA, MWA, ADD, FBD	7 - 6 - Voice Call 5 - Speed Call (personnel: 20) 4 - Ring Again 3 - Forward 2 - Conference 1 - DN 0 - DN
33	Manager telephone with message indication and display	FNA, GPUUA, LNA, MWA, ADD, FBD	7 - 6 - Message 5 - Voice Call 4 - Speed Call (personnel: 20) 3 - Forward 2 - Conference 1 - DN 0 - DN

M2008 model 40

Intended use: Two-line guest room telephone

Assigned Class of Service options: CCSA/MWA/FBD/CNDD/FND/TLD

Table 119
M2008 model 40 (Part 1 of 2)

Key number position	Feature
7	Hot *
6	Hot *
5	Hot *
4	Hot *
3	Hot *

Table 119
M2008 model 40 (Part 2 of 2)

Key number position	Feature
2	Hot *
1	DN
0	DN
* These keys are Hotlines to various Hotel and Motel services, such as Room service, and the front desk. You define them when you activate the telephone.	

M2008 model 41

Intended use: Two-line guest room telephone with message indication

Assigned Class of Service options: CCSA/MWA/FBD/FNA/CNDD/TLD

Table 120
M2008 model 41

Key number position	Feature
7	Message
6	Hot *
5	Hot *
4	Hot *
3	Hot *
2	Hot *
1	DN
0	DN
* These keys are Hotlines to various Hotel and Motel services, such as Room service, and the front desk. You define them when you activate the telephone.	

M2008 model 50

Intended use: Nurses' station telephone with speed call

Assigned Class of Service options: FND/LNA/GPUA/MWA/NDD/FBD

Table 121

M2008 model 50

Key number position	Feature
7	Auto Dial
6	Transfer
5	Speed Call
4	Ring Again
3	Pick-Up
2	Forward
1	Conference
0	DN

M2008 model 51

Intended use: Nurses' station telephone with message and speed call

Assigned Class of Service options: FNA/LNA/GPUA/MWA/NDD/FBD

Table 122

M2008 model 51 (Part 1 of 2)

Key number position	Feature
7	Auto Dial
6	Message
5	Speed Call
4	Ring Again
3	Pick-Up

Table 122
M2008 model 51 (Part 2 of 2)

Key number position	Feature
2	Forward
1	Conference
0	DN

M2008 model 52

Intended use: Nurses' station telephone with speed call and display

Assigned Class of Service options: FND/LNA/GPUA/MWA/ADD/FBD

Table 123
M2008 model 52

Key number position	Feature
7	—
6	Auto Dial
5	Speed Call
4	Ring Again
3	Pick-Up
2	Forward
1	Conference
0	DN

M2008 model 53**Intended use:** Nurses' station set with message, speed call and display**Assigned Class of Service options:** FNA/LNA/GPUA/MWA/ADD/FBD**Table 124****M2008 model 53**

Key number position	Feature
7	–
6	Message
5	Speed Call
4	Ring Again
3	Pick-Up
2	Forward
1	Conference
0	DN

M2008 Message center telephone models**Table 125****M2008 Message center telephone models**

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature
60	Message center telephone	FND, GPU, LNA, MWA, NDD, FBD	7- Message Cancellation 6 - Message Indication 5 - Speed Call (personnel: 20) 4 - Ring Again 3 - Forward 2 - Conference 1 - DN 0 - DN
61	Message center telephone with display	FND, GPU, LNA, MWA, ADD, FBD	7- 6 - Message Cancellation 5 - Message Indication 4 - Speed Call (personnel: 20) 3 - Forward 2 - Conference 1 - DN 0 - DN

M2216 ACD telephone models

Table 126
M2216 ACD telephone models

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature	
20	ACD agent with display	LNA, FND, GPU, MWA, ADD, FBD	15 - Auto Dial 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Auto Dial 9 - ACD calls waiting 8 - DN	7 - 6 - Transfer 5 - Speed Call 4 - Forward 3 - Conference 2 - Make Set Busy 1 - Not ready 0 - ACD DN (7750)
30	ACD supervisor with display	LNA, FND, GPU, MWA, ADD, FBD	15 - Auto Dial 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Display Agents 9 - Display Queue 8 - DN	7 - 6 - Transfer 5 - Speed Call 4 - Forward 3 - Conference 2 - Make Set Busy 1 - Not Ready 0 - ACD DN (7750)

Digital telephone models

M2616 Secretary telephone models

Table 127

M2616 Secretary telephone models

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature	
20	Secretary telephone with display	LNA, FND, GPU, MWA, ADD, HFA, FBD	15 - Auto Dial 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Auto Dial 9 - Auto Dial 8 - Auto Dial	7 - 6 - Speed Call (personnel: 20) 5 - Transfer 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN
21	Secretary telephone with display and message indication	LNA, FNA, GPU, MWA, ADD, HFD, FBD	15 - Auto Dial 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Auto Dial 9 - Auto Dial 8 - Transfer	7 - 6 - Message 5 - Ring Again 4 - Speed Call (personnel: 20) 3 - Forward 2 - Conference 1 - DN 0 - DN

M2616 Advanced business telephone**Table 128****M2616 Advanced telephone models (Part 1 of 2)**

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature	
22	Advanced business telephone	LNA, FND, GPU, MWA, NDD, HFA, FBD	15 - 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Auto Dial 9 - Auto Dial 8 - Auto Dial	7 - Transfer 6 - Speed Call 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN
23	Advanced business telephone with message indication	LNA, FNA, GPU, MWA, NDD, HFA, FBD	15 - 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Auto Dial 9 - Auto Dial 8 - Transfer	7 - Speed Call 6 - Message 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN

Table 128
M2616 Advanced telephone models (Part 2 of 2)

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature	
24	Advanced business telephone with display	LNA, FND, GPU, MWA, ADD, HFA, FBD	15 - 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Auto Dial 9 - Auto Dial 8 - Transfer	7 - 6 - Speed Call 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN
25	Advanced business telephone with message indication and display	LNA, FNA, GPU, MWA, ADD, HFA, FBD	15 - 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Auto Dial 9 - Transfer 8 - Speed Call	7 - 6 - Message 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN

M2616 Manager telephone models**Table 129****M2616 Manager telephone models (Part 1 of 2)**

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature	
30	Manager telephone	LNA, FND, GPU, MWA, NDD, HFA, FBD	15 - 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Auto Dial 9 - Auto Dial 8 - Voice Call	7 - Transfer 6 - Speed Call (personnel: 20) 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN
31	Manager telephone with message indication	LNA, FNA, GPU, MWA, NDD, HFA, FBD	15 - 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Auto Dial 9 - Voice Call 8 - Transfer	7 - Speed Call (personnel: 20) 6 - Message 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN

Table 129
M2616 Manager telephone models (Part 2 of 2)

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature	
32	Manager telephone with display	LNA, FND, GPU, MWA, ADD, HFA, FBD	15 - 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Auto Dial 9 - Voice Call 8 - Transfer	7 - 6 - Speed Call (personnel: 20) 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN
33	Manager telephone with message indication and display	LNA, FNA, GPU, MWA, ADD, HFA, FBD	15 - 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Voice Call 9 - Transfer 8 - Speed Call (personnel: 20)	7 - 6 - Message 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN

M2616 model 40**Intended use:** Front desk console with display**Assigned Class of Service options:**

LNA/FND/GPUA/MWA/ADD/CNDA/HFA/FBD

Table 130
M2616 model 40

Feature	Key number position	Key number position	Feature
–	15	7	–
Hot *	14	6	Speed Call (personnel: 20)
Control Class of Service	13	5	Ring Again
Message Registration	12	4	Pick-Up
Room Status	11	3	Forward
Message Cancellation	10	2	Conference
Message Indication	9	1	DN
Transfer	8	0	DN
* These keys are Hotlines to various Hotel and Motel services, such as Room service, and the front desk. You define them when you activate the telephone.			

M2616 model 50

Intended use: Nurses' station telephone

Assigned Class of Service options:

LNA/FND/GPUA/MWA/NDD/HFA/FBD

Table 131
M2616 model 50

Feature	Key number position	Key number position	Feature
—	15	7	Transfer
Auto Dial	14	6	Speed Call (personnel: 20)
Auto Dial	13	5	Ring Again
Auto Dial	12	4	Pick-Up
Auto Dial	11	3	Forward
Auto Dial	10	2	Conference
Hot *	9	1	DN
Group Call - Group 0 **	8	0	DN
* These keys are Hotlines to various Hotel and Motel services, such as Room service, and the front desk. Define them when you activate the set.			
** Although group 0 is predefined in LD 18, you must assign extensions for this group when the telephones have been installed.			

M2616 model 51**Intended use:** Nurses' station telephone with display**Assigned Class of Service options:**

LNA/FND/GPUA/MWA/ADD/HFA/FBD

Table 132
M2616 model 51

Feature	Key number position	Key number position	Feature
–	15	7	Speed Call (personnel: 20)
Auto Dial	14	6	–
Auto Dial	13	5	Ring Again
Auto Dial	12	4	Pick-Up
Auto Dial	11	3	Forward
Hot *	10	2	Conference
Group Call - Group 0 **	9	1	DN
Transfer	8	0	DN
* These keys are Hotlines to various Hotel and Motel services, such as Room service, and the front desk. You define them when you activate the telephone.			
** Although group 0 is predefined in LD 18, you must assign extensions for this group when the telephones have been installed.			

M2616 Message center telephone models

Table 133

M2616 Message center telephone models

Model	Intended use	Assigned Class of Service options	Key number position with assigned feature	
61	Message center telephone	LNA, FND, GPU, MWA, NDD, HFA, FBD	15 - 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Auto Dial 9 - Message Cancellation 8 - Message Indication	7 - Transfer 6 - Speed Call (personnel: 20) 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN
62	Message center telephone with display	LNA, FND, GPU, MWA, ADD, HFA, FBD	15 - 14 - Auto Dial 13 - Auto Dial 12 - Auto Dial 11 - Auto Dial 10 - Message Cancellation 9 - Message Indication 8 - Transfer	7 - 6 - Speed Call (personnel: 20) 5 - Ring Again 4 - Pick-Up 3 - Forward 2 - Conference 1 - DN 0 - DN

Changing preprogrammed data

Contents

This section contains information on the following topics:

Introduction	470
Changing the default numbering plan	471
Extensions assigned differ from the default numbering plan	471
Changing the first number in the numbering plan	471
Determining new extension numbers	472
Using the Meridian Mail Auto-configure feature	474
Shifting the numbering plan to a new card slot	474
Removing numbering plan conflicts	475
Conflicts with Meridian Mail data	475
Conflicts with ACD queues	476
Conflicts with Call Park extension numbers	477
Conflicts with SDI ports	477
Conflicts with the SPRE code	478
Conflicts with the attendant extension number	478
Changing or removing the preprogrammed night number	478
Conflicts with Flexible Feature Codes	479
Creating, changing, and removing model telephones	481
Creating analog telephone models	481
Modifying analog model telephones	482
Creating digital model telephones	482
Modifying digital model telephones	483

Printing model information.	484
Analog telephones	484
Digital telephones	484
Removing model telephones.	485
Creating model trunks and changing route access codes	485
Creating model trunks	486
Modifying model trunks.	487
Removing model trunks.	487
Printing model information.	488
Changing a route access code.	488

Introduction

The preprogrammed data on the Small System can provide an effective starting point for programming the system's telephone and trunking information.

This chapter shows how to change the default Small System numbering plan. You may want to change the numbering plan for one or more of the following reasons:

- to change the first number in the numbering plan
- to shift the start of the numbering plan to another card slot
- because the default numbering plan interferes with the system data

This section describes how to make changes to the default numbering plan. This section also provides information about modifying model telephone and trunk programming stored in the system's preprogrammed data.

Changing the default numbering plan

You may need to change the default numbering plan in order to improve performance or to remove numbering plan conflicts. Refer to Tables 81 through 87 on [pages 411 to 419](#) for a full listing of the default DN assignments for Cabinet and Chassis systems.

Extensions assigned differ from the default numbering plan

Compare the first digits assigned to this system with the default numbering plan as shown in Table 73 on [page 402](#).

- If the first digit is in the unused range, change the first number in the default numbering plan. To do this, follow the instructions in “Changing the first number in the numbering plan” on [page 471](#).
- If the first digit is being used by Meridian Mail, trunk routes, or other data, you must remove these interferences. Follow the instructions found in “Removing numbering plan conflicts” on [page 475](#).

Changing the first number in the numbering plan

To change the first number in the numbering plan perform the following procedure.

Procedure 67

Changing the first number in the numbering plan

- 1 Pick up the handset of the administration telephone.
- 2 Enter the administration Flexible Feature Code. (For some countries, this value is listed in the Table 88 on [page 420](#).)
- 3 Enter the administration telephone password. (For some countries, this value is listed in Table 72 on [page 401](#).)
- 4 You hear special dial tone and the prompt “TASK?” appears on the top line of the character display.
- 5 Press the asterisk (*) three times.

The second line of the character display reads “4 INSTALLATION OPTIONS”.

- 6 Select “4 INSTALLATION OPTIONS” by entering the number “4”.

The character display reads:

1 DEFAULT SETS

2 NUMBERING PLAN

- 7 Select "2 NUMBERING PLAN" by entering the number "2".

The character display reads:

FIRST NUMBER (XXXX)?

- 8 To create a new first number, enter the digits you want and press the pound key.
- 9 The number you enter as the first number in the numbering plan is assigned to slot 1, unit 0 of the main cabinet or chassis. The default numbers assigned to the remaining card and unit combinations are in sequence, assuming each slot has up to 16 units.

End of Procedure

Determining new extension numbers

If you wish to change the default numbering plan, and need to determine the extension number that will be assigned to a specific telephone, perform the following procedure:

Procedure 68

Determining the extension number

- 1 Identify the line card to which the telephone is connected. Take the card slot number associated with the card and subtract 1.
- 2 Multiply this number by 16.
- 3 Add the first extension number in the new numbering plan.
- 4 Identify the unit number the telephone is terminated on and add it to the result obtained in step 3.

End of Procedure

Example:

Assume the new numbering plan starts at extension number 4500. You wish to know the extension number of the telephone connected to card 8, unit 12:

- 1 Subtract 1 from the card slot number (8 - 1):=7
- 2 Multiply by 16:x 16
= 112
- 3 Add the first extension number:+ 4500
- 4 Add the unit number:+ 12
- 5 Number assigned to card 8, unit 12 is 4624

Note: If you are using a three digit numbering plan, follow the same procedure.

Example:

The new three digit numbering plan starts at extension number 300, and you wish to know the extension number of the telephone connected to card 8 unit 12:

- 1 Subtract 1 from the card slot number (8 -1):=7
- 2 Multiply by 16:x 16
= 112
- 3 Add the first extension number:+ 300
- 4 Add the unit number:+ 12
- 5 Number assigned to card 8, unit 12 is 424

If you want the system to have a consecutive numbering plan, make sure that the line cards are in consecutive card slots in the cabinet or chassis.

If you arrange the line cards consecutively, the preassigned telephone extensions automatically configure during telephone activation. You do not have to manually enter the extensions.

Using the Meridian Mail Auto-configure feature

The Meridian Mail Auto-configure feature automatically matches Meridian Mail mailboxes with telephone extensions. If you have the Meridian Mail card option and you want to use the Meridian Mail Auto-configure feature, make sure:

- The numbering plan is consecutive.
- The first number in the Small System and the Meridian Mail system are the same.

Shifting the numbering plan to a new card slot

The first number in the numbering plan is assigned to slot 1, unit 0. You may wish to shift the first number in the numbering plan to a different card slot, since the TDS/DTR card is preprogrammed for slot 1.

The following procedure describes how to shift the first number in the numbering plan to a specific card slot.

Procedure 69

Shifting the first number in the numbering plan to a different card slot

- 1 Locate the first line card. Subtract 1 from the number of the card slot that it is in.
- 2 Multiply this number by 16.
- 3 Take the first number in the numbering plan and subtract the value obtained in step 2.

Note: When you enter the value from step 3 in response to the prompt "FIRST NUMBER (XXXX)?" on the administration telephone menu, the number is shifted to the appropriate slot.

End of Procedure

Example:

The first number in the numbering plan is 2200. If you want the first number in the numbering plan to be 2300, and the first line card is located in slot 6, perform the following calculation:

- 1 Locate the first line card. Subtract 1 from the card slot number it is housed in:

$$6 - 1 = 5$$

- 2 Multiply the number obtained in step 1 by 16:

$$5 \times 16 = 80$$

- 3 Subtract this number from the first number in the numbering plan:

$$2300 - 80 = 2220$$

- 4 Enter this value in response to the "FIRST NUMBER (2200)?" prompt on the administration telephone:

FIRST NUMBER (2200)? **2220**

Removing numbering plan conflicts

This section contains methods for removing any numbering plan conflicts that occur.

Conflicts with Meridian Mail data

The Small System is shipped with preprogrammed data to support a Meridian Mail card option. The preprogrammed Meridian Mail data may cause problems in the following situations:

- There is a numbering plan conflict with preprogrammed Meridian Mail data and the programming required for another feature.
- Card slot 10 is required for another circuit card.

Obtaining the use of card slot 10

If card slot 10 is required for another circuit card, simply remove the six Meridian Mail agents programmed for this card slot. To do this, load LD 11

on the TTY and respond to the system prompts as shown below. Repeat the procedure once for each of the six units that you want to remove.

LD 11

REQ OUT

TYPE 2008

TN 10 XX where “XX” = a value of 0,1,2,8,9, or 10

Obtaining the use of Meridian Mail ACD queues

The Meridian Mail feature also uses a number of ACD queues in the Small System. See “Conflicts with ACD queues” on [page 476](#) for information on how to remove this data from the system.

Conflicts with ACD queues

The Small System has preprogrammed ACD queues for Meridian Mail, the Central Answering Position, and general purpose ACD. (For some countries, preprogrammed ACD queues are listed in [Table 74 on page 404](#).) To remove these values, use LD 23.

Note: Before you remove this data from the system, make sure that all ACD agent information is removed from the queue.

In LD 23, respond to the prompts as follows:

LD 23

REQ OUT

TYPE ACD

CUST 0

ACDN XXXX where “XXXX” = value of ACD queue

Repeat for each ACD queue you wish to remove.

Conflicts with Call Park extension numbers

System call park extension numbers are preprogrammed for the Central Answering Position. (For some countries, the default call park extensions are listed in Table 74 on page 404.) To remove this data from the system, load LD 50 and respond to the prompts as follows:

LD 50

REQ	OUT	
TYPE	CPK	
CUST	0	
SPDN	XXXX	where "XXXX" = value of Call Park extension

Repeat for each Call Park extension you wish to remove.

Conflicts with SDI ports

Five SDI/ESDI ports are preprogrammed on the Small System. Ports 8 and 9 are associated with the Meridian Mail card option, and ports 0, 1, and 2 are associated with the NTDK20 Small System Controller (SSC) card. You cannot remove port 0; however, you can remove any of the remaining ports using LD 17 as follows.

LD 17

REQ	CHG	
TYPE	CFN	
ADAN	OUT TTY X	where "X" = the TTY that you are removing

Conflicts with the SPRE code

If the preprogrammed SPRE code interferes with the programming required for the Small System, use LD 15 to remove it. (For some countries, the default SPRE access code is listed in Table 73 on page 402.) For customer 0 enter the following in response to the SPRE prompt:

LD 15

SPRE X y where “y” = the value of the SPRE code

Note: To define a new SPRE code, type a space and enter the new number.

Conflicts with the attendant extension number

You cannot remove the attendant extension number entirely from the Small System data; you can only replace it with another number.

LD 15

REQ CHG where CHG = Change

TYPE CDB where CDB = Customer Data Block

CUST x where “x” = Customer number

ATDN xxxx where “xxxx” = the new extension number

Changing or removing the preprogrammed night number

If you wish to change or remove the night number, use LD 15. (For some countries, the default value of the night number is listed in [Table 74 on page 404](#).)

LD 15

REQ CHG where CHG = Change

TYPE CDB where CDB = Customer Data Block

CUST x where “x” = Customer number

NIT1 bbbb where “bbbb” = the new extension number (DN)
or

X aaaa where “aaaa” = the current night number (the night number now removed)

Conflicts with Flexible Feature Codes

If the preprogrammed Flexible Feature Codes interfere with the programming required for the Small System, use LD 57 to remove the data from the system. (For some countries, default FFCs are listed in [Table 88 on page 420.](#))

LD 57

To change one or more access codes, enter the following commands:

REQ	CHG END	Change or end
TYPE	FFC	FFC = Flexible feature codes
CUST	0-31	Customer Number
FFCT	YES (NO)	FFFC Confirmation tone
CODE	aaaa	Enter access code prompt (aaaa)
AAAA	xx	Enter the new access code prompt (AAAA)
CODE	<CR>	Return to REQ
REQ	END	End program

To remove one access code, enter the following commands:

REQ	OUT	Action request
TYPE	FFC	FFC = Flexible feature codes
CUST	0-31	Customer Number
FFCT	YES (NO)	FFC Confirmation tone
ALL	NO	Remove specific access code
CODE	aaaa	Enter access code prompt (aaaa)
AAAA	xx	Enter the new access code prompt (AAAA)
CODE	<CR>	Return to REQ
REQ	END	End program

To remove all access codes, enter the following commands:

REQ	OUT	Action request
TYPE	FFC	FFC = Flexible feature codes
CUST	0-31	Customer Number
FFCT	YES (NO)	FFC Confirmation tone
ALL	YES	Remove all access codes
CODE	<CR>	Return to REQ
REQ	END	End program

Creating, changing, and removing model telephones

If you need a model telephone different from the default models provided in Small System software, use overlays to design your own models using the information in [Table 134 on page 481](#).

Table 134
Design model telephones

Task	Overlay (LD)
Create your own model telephones:	
Analog telephones (500/2500-type telephones)	10
Digital telephones	11
Get information on model telephones	20 (printout)

If you require additional assistance when creating your own model telephones and trunks, refer to the system software NTPs that are shipped with every system.

Creating analog telephone models

You must enter the following information in LD 10 to create an analog (500/2500- type) telephone model:

LD 10

REQ NEW

TYPE 500 M

MODL YYY where “YYY” = the model number of the
telephone that you are creating

Enter responses to the remaining prompts in order to complete the new model. Refer to the system software guides for a complete list of prompts and possible responses.

Modifying analog model telephones

If you want to modify an analog telephone, use LD 10 and type in the following commands on the TTY.

LD 10

REQ CHG

TYPE 500 M

MODL YYY where “YYY” = the model number of the
 telephone that you are modifying

For more information about LD 10 and its associated prompts and commands, refer to the system software NTPs that are shipped with the system.

Creating digital model telephones

When you create model telephones for digital telephones, you must program key 0 with a function that can act as a prime extension number or its equivalent. This includes telephones that are programmed to have Single Call Ringing (SCR), Multiple Call Ringing (MCR), Single Call Non-Ringing (SCN), Multiple Call Non-Ringing (MCN), and Automatic Call Distribution (ACD).

For ACD telephones, the model telephone defines the ACD queue. To define the extension number, you must enter the ID number of the agent or the Central Answering Position.

You must enter the following information in LD 11 in order to create a digital telephone model.

LD 11

REQ	NEW	
TYPE	2XXX M or 3000 M	where “XXX” = allowed telephone types
MODL	YYY	where “YYY” = the model number of the telephone that you are creating (between 1–127)

Enter the responses to the remaining prompts in order to complete the new model. Refer to the system software NTPs for a complete list of prompts and possible responses.

Modifying digital model telephones

If you want to modify a digital telephone, load LD 11 and enter the following commands on the TTY:

LD 11

REQ	CHG	
TYPE	2XXX M or 3000 M	where “XXX” = allowed telephone types
MODL	YYY	where “YYY” = the model number of the telephone that you are modifying

For more information about LD 11 and its associated prompts and commands, refer to the system software NTPs that are shipped with the system.

Printing model information

To print information about model telephones, use LD 20.

Analog telephones

LD 20

REQ	PRT	
TYPE	500 M	
MODL	YYY	where “YYY” = the telephone model number. If you want to print all of the models for this telephone type, leave this value blank.

Digital telephones

Note: To print M3000 telephone models, you must enter “TYPE 3000 M”. If you enter “TYPE 2XXX M”, you print all the Meridian Digital Telephone models except the M3000.

LD 20

REQ	PRT	
TYPE	2XXX M or 3000 M	where “XXX” = the telephone type
MODL	YYY	where “YYY” = the telephone model number (between 1–127). If you want to print all of the models for this telephone type, leave this value blank.

Removing model telephones

Use LD 10 to remove analog telephone models and LD 11 to remove digital telephone models. Respond as follows to the prompts in either overlay:

LD 10 or LD 11

REQ	OUT	
TYPE	XXXX M	where “XXXX” = telephone type for the model you are removing. (Example: 500, 2006, 2317, 2216, 3000, etc.)
CUST	0	
MODL	YYY	where “YYY” = the model number associated with the telephone type you are removing. (Valid range is 1–127.)

Creating model trunks and changing route access codes

If you need a trunk that is different from the default models provided in Small System software, use LD 14 to design your own model. Change route access codes using the administration telephone.

If you require additional assistance when creating your own model telephones and trunks, refer to the system software NTPs that are shipped with every system.

Creating model trunks

To create a new model trunk, load LD 14 and enter the following commands on the TTY:

LD 14

REQ	NEW	
TYPE	aaa M	where "aaa" = the type of trunk that you are creating (TIE, COT, WATS, and so on)
MODL	YYY	where "YYY" = the model number of the trunk that you are creating (between 1–127)
XTRK	a...a	Where a...a = XUT, XEM, XCOT, XDID

This prompt only appears when you define the first model in a group. Each group consists of 16 consecutive model definitions. (Refer to the group boundaries listed below.) Once the first model in a group is defined, the remaining model numbers in the group(s) are assumed to be of the same type.

Group boundaries are as follows:

1–15, 16–31, 32–47, 48–63, 64–79, 80–95, 96–111, 112–127.

Examples:

If, for example, you define a model trunk as XUT, with a model number of 12, all models in the group 1–15 will automatically be XUT models. If you define another model trunk as an XEM, with a model number of 33, all models in the group 32–47 will automatically be XEM models.

Note: When you create trunk models you are not prompted for the trunk route or member number. This information is defined by using the administration telephone to program the XUT or XEM circuit card.

For more information about LD 14 and its associated prompts and commands, refer to the system software NTPs that are shipped with the system.

Modifying model trunks

If you want to modify a trunk, load LD 14 and enter the following commands on the TTY:

LD 14

REQ	CHG	
TYPE	aaa M	where “aaa” = the type of trunk that you are modifying
MODL	YYY	where “YYY” = the model number of the trunk that you are modifying (between 1–127)

Removing model trunks

To remove a trunk model from the system, load LD 14 and respond to the prompts as follows:

LD 14

REQ	OUT	
TYPE	XXX M	where “XXX” = the trunk type of the model that you are removing. (Examples: COT, TIE, DID, FEX, WAT, etc.)
CUST	0	
MODL	YYY	where “YYY” = the model number associated with the trunk type you are removing. (Valid range is 1–127).

Printing model information

To print information about model trunks, load LD 20 and enter the following commands on the TTY:

LD 20

REQ PRT

TYPE TTTT where “TTTT” = the trunk type

MODL YYY where “YYY” = the model number. If you want to
print all of the models for this trunk type, leave
this value blank.

Changing a route access code

Use this procedure to change a route access code.

Procedure 70

Changing a route access code

- 1 Pick up the handset of the administration telephone.
- 2 Enter the administration Flexible Feature Code to access the administration menu. (For some countries, this value is listed in Table 88 on [page 420](#).)
- 3 Enter the default administration telephone password. (For some countries, this value is listed in Table 72 on [page 401](#).)

You hear special dial tone and the prompt

“TASK?”

appears on the top line of the character display. If you press the asterisk, “2 CHANGE ROUTE ACCESS” appears on the second line of the character display.

- 4 Select “2 CHANGE ROUTE ACCESS” by entering the number “2”.

The prompt

“ROUTE ACCESS?”

appears on the character display.

- 5 Enter the access code of the route you want to modify, and press the pound key (#).

The prompt
"NEW ACCESS CODE?"
asks you for a new access code for the route.

- 6** Enter the new access code and press the pound key.

The display shows
"CODE CHANGED".
After a delay of approximately 4 seconds you hear special dial tone and
the sequence is repeated when the prompt
"ROUTE ACCESS?"
appears.

OR

If the route access code is not available for use, you hear overflow tone.
The display shows
"USED, ROUTE ACCESS?"
and you must repeat this step.
You must enter a **different** access code. This sequence continues until
you enter an appropriate new access code.

- 7** Terminate the sequence by hanging up the telephone.

OR

Repeat the sequence by going through the steps again.

End of Procedure

Survivability

Contents

This section contains information on the following topics:

Introduction	492
Operating modes.	492
Required software.	492
Description	493
Incremental Software Management	493
Switchover to survival mode	494
Switchback from survival mode.	496
Survivability notification	497
Database synchronization.	500
TN mapping during survival mode.	508
Configuring for Survivability	508
Configuring a new system for Survivability	508
Configuring trunks for Survivability	510
IP Line in survivable Small Systems	517
Retrieving Call Detail Recording records.	519

Introduction

This chapter provides a brief overview of the Small System's Survivability feature. It also describes the procedures to configure Survivability on a new system, or add the capability to an existing Small System.

Operating modes

The following are the two modes of operation:


- **Survivability** is the ability of a Small System's IP expansion cabinet or chassis to perform Call Processing, for its local resources, when it is no longer connected to the main cabinet or chassis. This is referred to as survival mode.
- **Normal mode** is when the local resources of an IP expansion cabinet or chassis are controlled by the Call Processing of the main cabinet or chassis.

Required software

Survivability is available for any IP expansion cabinet or chassis with Succession 3.0 Software.

Description

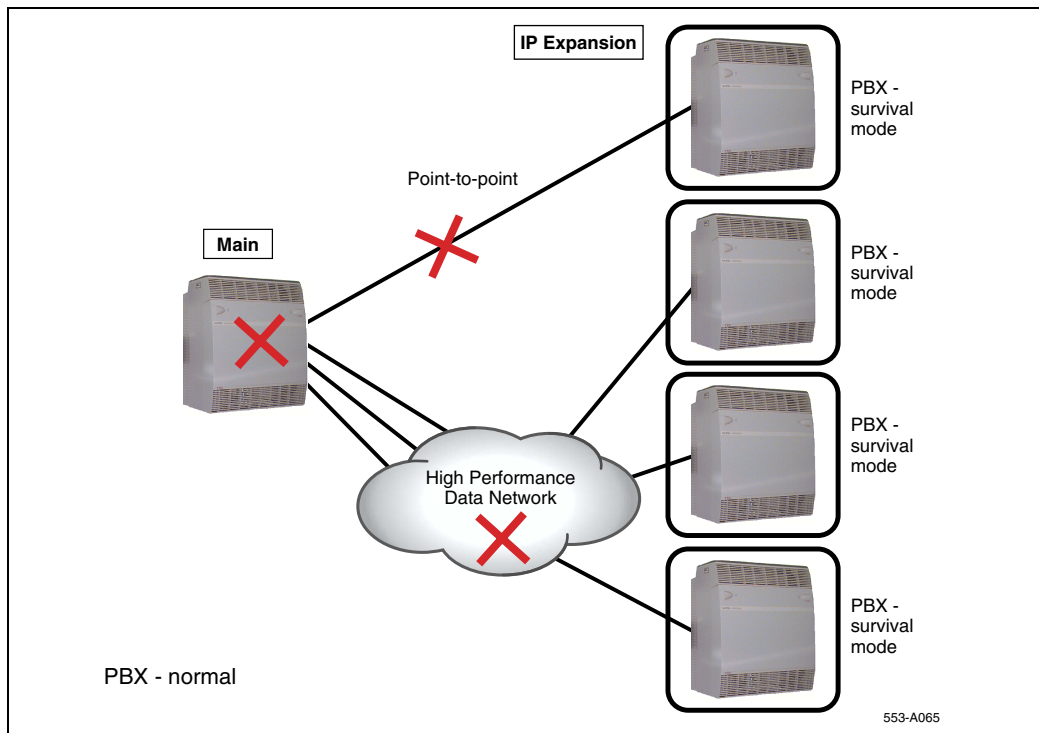Figure 131
Small System Survivability



Incremental Software Management

The number of survivable cabinets or chassis in a system is defined by an Incremental Software Management (ISM) parameter labeled SURVIVABILITY. The Survivability parameter is keycode activated.

Database synchronization between the main cabinet or chassis and an IP expansion cabinet or chassis occurs with a datadump from the main cabinet or chassis, or with an IP expansion cabinet or chassis startup in normal mode.

Switchover to survival mode

A survivable IP expansion cabinet or chassis is able to restart after it loses communication with the main cabinet or chassis, due to an outage of the main cabinet or chassis or due to a failure of the link between the cabinets or chassis. During the restart procedure, the survivable IP expansion cabinet or chassis attempts to register with the main cabinet or chassis. If a connection cannot be made with the main cabinet or chassis within approximately two minutes, the IP expansion cabinet or chassis switches to survival mode and acts as a stand-alone Small System.

Triggers

If Survivability is configured on a cabinet or chassis, the following two scenarios can trigger a switchover to survival mode:

- Automatic Switchover is triggered when the IP expansion cabinet or chassis loses communication with the main cabinet or chassis and the Switchover Time Out timer (SWOTO) expires. This can occur if there is a catastrophic failure of the main cabinet or chassis, or the link is lost between the main cabinet or chassis and the IP expansion cabinet or chassis.
- Manual Switchover is triggered with the Switchover to Survival (SOTS) command in LD 135.

Automatic switchover to survival mode

When an IP expansion cabinet or chassis, with Survivability configured, loses communication with the main cabinet or chassis, the IP expansion cabinet or chassis automatically switches over to survival mode when the SWOTO timer expires.

The state of communication between the main cabinet or chassis and the IP expansion cabinet or chassis is monitored by a simple polling mechanism called a Heartbeat.

The following example illustrates the tasks performed by the Small System's IP expansion cabinet or chassis when communication with the main cabinet or chassis is lost:

- 1** The IP expansion cabinet or chassis attempts to reestablish the connection to the main cabinet or chassis. After four reconnection attempts with a predefined delay between each attempt, the SWOTO starts.
- 2** The SWOTO expires after the time defined in LD 117.
- 3** The IP expansion cabinet or chassis restarts. As the IP expansion cabinet or chassis is going through the restart procedure, it attempts to register with the main cabinet or chassis.
- 4** If a connection cannot be made to the main cabinet or chassis, the IP expansion cabinet or chassis comes up in survival mode.

Manual switchover to survival mode

Manual commands are provided to allow a technician to force a switchover to survival mode. These commands are only available on the main cabinet or chassis. They can be used only if there is an established link between the main cabinet or chassis and an IP expansion cabinet or chassis. To manually switch over to survival mode, use the SOTS command in LD 135.



CAUTION — Service Interruption

A manually invoked switchover causes a restart of the IP expansion cabinet or chassis.

After the SOTS command has been successfully executed, the IP expansion cabinet or chassis remains in survival mode until the Switch Back From Survival (SBFS) command is issued in LD 135 by the technician.

Switchback from survival mode

A survivable IP expansion cabinet or chassis can switch back to normal mode after communication with the main cabinet or chassis is restored.

The following two scenarios can trigger a cabinet or chassis in survival mode to return to normal mode:

- Automatic Switch Back (AUTOSB) allows an IP expansion cabinet or chassis to automatically switch back from survival mode to normal mode as soon as the link with the main cabinet or chassis is restored, and the SWOTO timer has expired. A restart is initiated on the IP expansion cabinet or chassis. At the end of the system start, the IP expansion cabinet or chassis is ready to operate in normal mode.
- Manual Switch Back allows a technician to force the system into normal mode by issuing the SBFS command. This command returns the system to normal mode after the SOTS command has been used.

Automatic Switch Back from survival mode

When the Automatic Switch Back option is configured for a survivable IP expansion cabinet or chassis, the IP expansion cabinet or chassis automatically switches back from survival mode to normal mode as soon as the link with the main cabinet or chassis is restored and the SWOTO timer expires.

A valid database must be downloaded to the IP expansion cabinet or chassis for this option to take effect. The database is downloaded or “synchronized” each time a datadump is performed.

The AUTOSB command is available in LD 117:

CHG AUTOSB <cab#> <Switchback setting>

Where:

cab# = 1–4

Switchback setting = (YES) NO

When the switchback parameter is set to YES, the cabinet or chassis automatically switches back from survival mode as soon as the SWOTO

timer expires. If switchback is set to NO, the cabinet or chassis remains in survival mode until a technician enters the SBFS command.

Switchover timer

The timer is started on a survivable IP expansion cabinet or chassis as soon as the link with the main cabinet or chassis goes up or down. When the timer expires, the switchover (or switchback) is triggered. The timer is used to avoid instability in the operating mode of the IP expansion cabinet or chassis when the IP link with the main cabinet or chassis becomes unstable.

The switchover timer is also used during the startup of a survivable IP expansion cabinet or chassis in order to allow the cabinet or chassis to go into survival mode if the IP expansion cannot connect to the main cabinet or chassis on system startup.

When the link restores for an IP expansion cabinet or chassis in survival mode with AUTOSB configured, the SWOTO timer is started.

If the timer expires, a switchback is initiated to change from survival to normal mode. If a polling message is missed before the timer expires, the timer is reset.

If the link is detected as down again before the expiration of the SWOTO timer, the Operating Mode Manager stops the timer, and the IP expansion cabinet or chassis remains in survival operating mode.

Manual switchback from survival mode

After the SOTS command has been successfully executed, the IP expansion cabinet or chassis remains in survival mode until the technician issues the Switch Back From Survival (SBFS) command in LD 135.

Survivability notification

Telephones and terminals

When an IP expansion cabinet or chassis operates in survival mode, users are notified with a special dial tone and display information. Special text is also displayed on the remote TTYs connected to the IP expansion cabinet or chassis.

Special dial tone

The dial tone provided to the telephones in survival mode is different from the dial tone for telephones in normal mode. This Flexible Survivable Dial Tone is provided with the Small System; however, the user can alter the Flexible Survivable Dial Tone in LD 56.

The table “LD 56 – Flexible Survivable Dial Tone” on [page 498](#) displays the prompts from LD 56 associated with the Flexible Survivable Dial Tone.


LD 56 – Flexible Survivable Dial Tone

Prompt	Response	Description
REQ	CHG	Change existing data.
TYPE	FTC	Flexible Tone and Cadence data block
TABL	0	Flexible Tone and Cadence data block number
...		
RING	(NO)	
HCCT	YES	Hardware Controlled Cadences and Tones
...		
SURV		Flexible Survivable Dial Tone
- XTON	0-(4)-255	Flexible Survivable Dial Tone Code
- XCAD	0-(253)-255	Flexible Survivable Dial Tone Cadence number

Display Information

During survival mode, telephones display the string “Local mode” in the first line of the display. Refer to Figure 132.

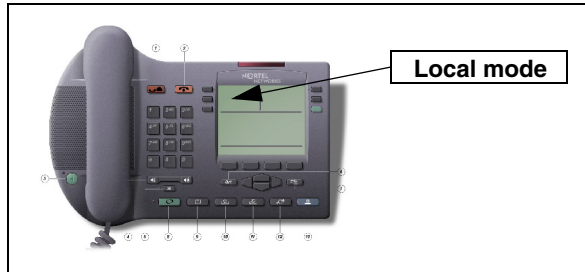Figure 132
Display telephone



Remote TTY

Survivable IP remote TTY

The three Serial Data Interface (SDI) ports on the Small System Controller (SSC) card of an IP expansion cabinet or chassis are available for use as additional system remote TTYs.

If the IP expansion cabinet or chassis is configured for Survivability, the SDI ports of the IP expansion SSC can be used during survival mode. In this mode, they function as a TTY connected to a stand-alone Small System. However, the TTY has no access to either LD 43 or LD 143. When in survival mode, the SDI ports of the IP expansion cannot be used to access the main cabinet or chassis. Refer to Table 135 for SDI port numbering.

Table 135
SDI port numbering

Cabinet or chassis	Normal mode	Survival mode
Main	0, 1, 2	0, 1, 2
IP Expansion 1	3, 4, 5	0, 1, 2
IP Expansion 2	6, 7, 8	0, 1, 2
IP Expansion 3	9, 10, 11	0, 1, 2
IP Expansion 4	12, 13, 14	0, 1, 2

Special text, which is displayed on the TTY of the IP expansion cabinet or chassis, indicates when the IP expansion cabinet or chassis is operating in survival mode. This text informs the technician of the difference between the remote TTY's access to the main cabinet or chassis in normal mode and the IP expansion cabinet or chassis in survival mode. The text displayed prior to login is as follows:

```
OVL111 0000 IDLE

TY 00 SCH MTC BUG 21:44

SURVIVAL MODE
```

The text displayed on the TTY of the IP expansion cabinet or chassis after login is as follows:

```
TTY 00 LOGGED IN 21:44 3/10/1999 SURVIVAL MODE

OVL000 SURVIVAL MODE
```

Database synchronization

During survival mode, survivable IP expansion cabinets or chassis use a copy of the database that was configured at the main and previously downloaded to the survivable IP expansion cabinet or chassis. Use the Invoke Datadump Program (EDD) command at the main cabinet or chassis, or upon startup in normal mode, to download the database.

Data can be changed on the IP expansion cabinet or chassis while in survival mode, but new or changed data is lost when switched back to the main cabinet or chassis. The local datadump (EDD) is supported only on the main cabinet or chassis.

Datadump enhancements and new commands

With the introduction of survivable IP expansion cabinets or chassis, the EDD command is enhanced to first perform an EDD on the main and then download the database files to each survivable IP expansion cabinet or chassis.

Before the file transfer, the main cabinet or chassis verifies that the software release of the survivable IP expansion cabinet or chassis matches its own

software release. If this check fails, the download operation is aborted for that cabinet or chassis.

The data files are loaded from the primary (C:) drive of the IP expansion cabinet or chassis to protected memory when a switchover to survival mode occurs. The database files downloaded from the main are used only when the survivable IP expansion cabinet or chassis switches to survival mode.

DWL command (download)

If the download fails, the system prints a message that indicates on which cabinet or chassis the failure occurred. The download can be reattempted using the new command **DWL** [**<cab#>**]. This command triggers the transfer of the database to the cabinet or chassis specified as a parameter, without performing another datadump on the main cabinet or chassis.

The DWL command is available in LD 43:

DWL [**<cab#>**]

Where:

cab# = specified survivable IP expansion cabinet or chassis

Programming the cab# parameter is optional. If omitted, the database is downloaded to all connected survivable IP expansion cabinets or chassis.

EDD LCL command (local EDD)

The Invoke Datadump Program (EDD) command supports the Invoke Datadump Program Local (EDD LCL) command. It performs a local datadump where data is dumped only on the main cabinet or chassis. The databases on the survivable IP expansion cabinets or chassis are not updated. This operation is used when the database changes are tested by the technician prior to downloading them to the survivable IP expansion cabinets or chassis.

The EDD LCL command has the same effect as the former Option 11C EDD command. Its sequence of operations is as follows:

- 1 Prior to an actual dump, the main cabinet or chassis performs a security check. If the security check fails, the datadump operation is aborted.
- 2 If the security check passes, the existing database files on the primary flash drive are renamed with the extension “.bak”.

- 3 The data is then written to the primary flash drive.
- 4 When the database files in the primary flash drive are updated, data and patches are written to the internal backup flash drive (Z:).

Note: LD 43 and 143 are not available on an IP expansion cabinet or chassis in survival mode.

SWP, RES, and RIB commands for Survivability

To ensure the database synchronization on the main and the survivable IP expansion cabinet(s) or chassis, the Swap (SWP), Restore (RES), and Restore Backup (RIB) commands are modified to produce the same results on the survivable IP expansion cabinet(s) or chassis as on the main cabinet or chassis.

The optional parameter, [`<cab#>`], allows the technician to select a specific cabinet or chassis in order to restrict the effect of the command to a specific cabinet or chassis.


If no parameter is provided, the command is first performed on the main cabinet or chassis. The technician is then prompted with a confirmation request. If `<YES>`, the command is performed on all survivable IP expansion cabinets or chassis.

As with the database download operation, preliminary security checks are performed by the main cabinet or chassis against the security ID and software release of the survivable IP expansion cabinet(s) or chassis. If these security checks fail for any cabinet or chassis, synchronization is aborted for that cabinet or chassis.

SWP command

The SWP command is used to swap the regular and `“*.bak”` copies of the database on the primary flash drive. It restores the database to the state prior to the most recent datadump. Figure 133 on [page 503](#) illustrates the operation of the SWP command. Only one IP expansion cabinet is shown for illustration purposes.

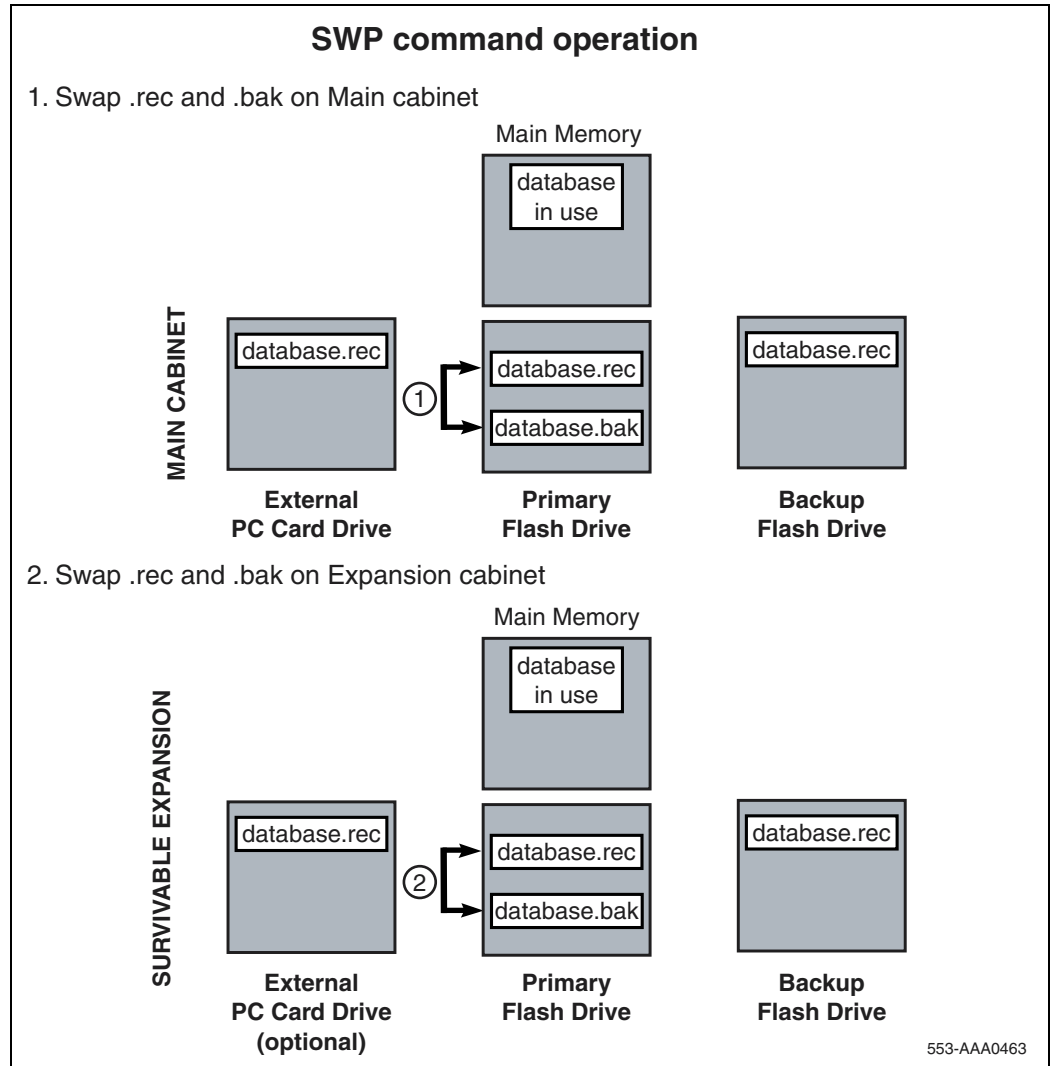Figure 133
SWP command operation



RES and RIB Command

The RES command restores data from the main cabinet or chassis external PC Card drive to the main cabinet or chassis (C:) drive and all survivable IP expansion cabinet or chassis (C:) drives. The RIB command restores data from the main cabinet or chassis internal backup flash drive to the main cabinet or chassis (C:) drive and from the survivable IP expansion cabinet or chassis internal backup flash drive to the (C:) drive. These commands are illustrated in Figure 134 and Figure 135. Only one IP expansion cabinet is shown for illustration purpose; however, the synchronization is performed sequentially on all survivable IP expansion cabinets or chassis.

Figure 134
RES command


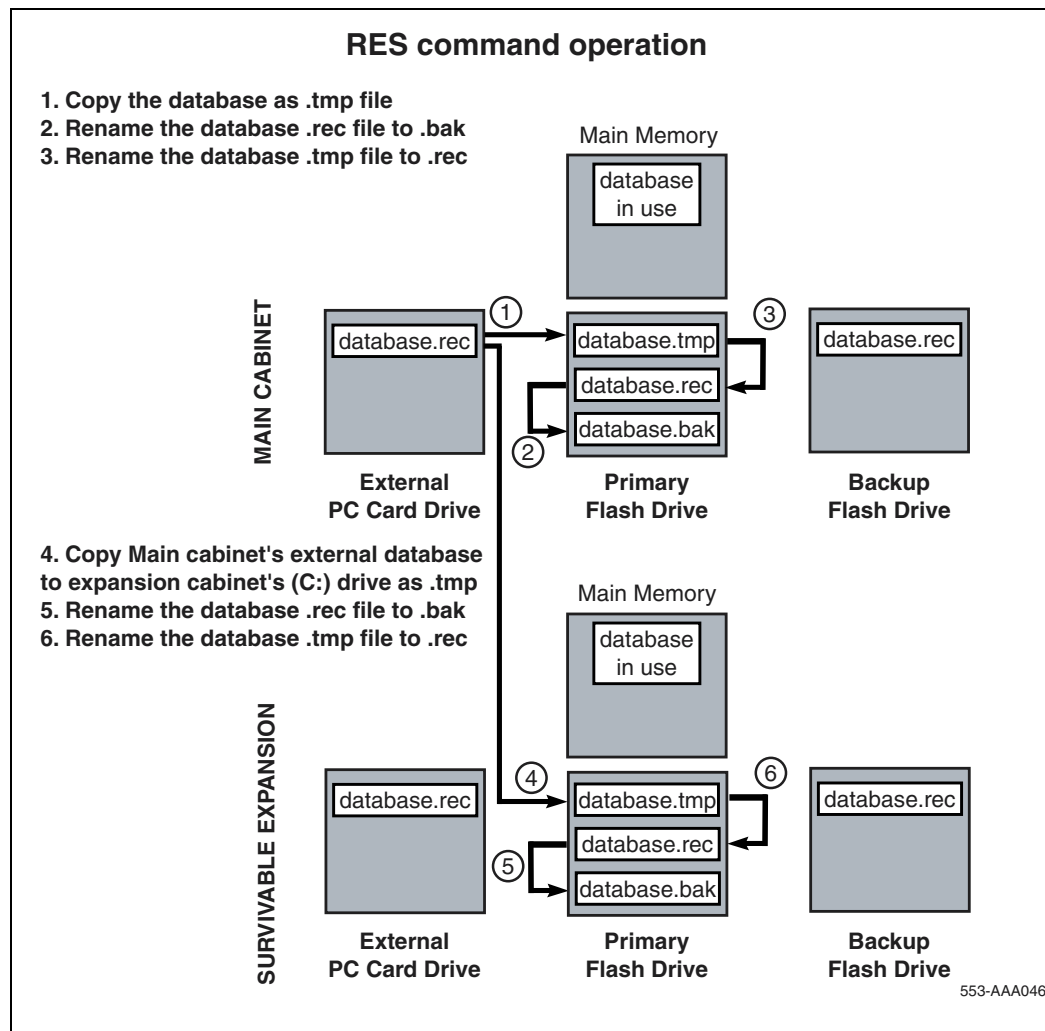


Figure 135
RIB command

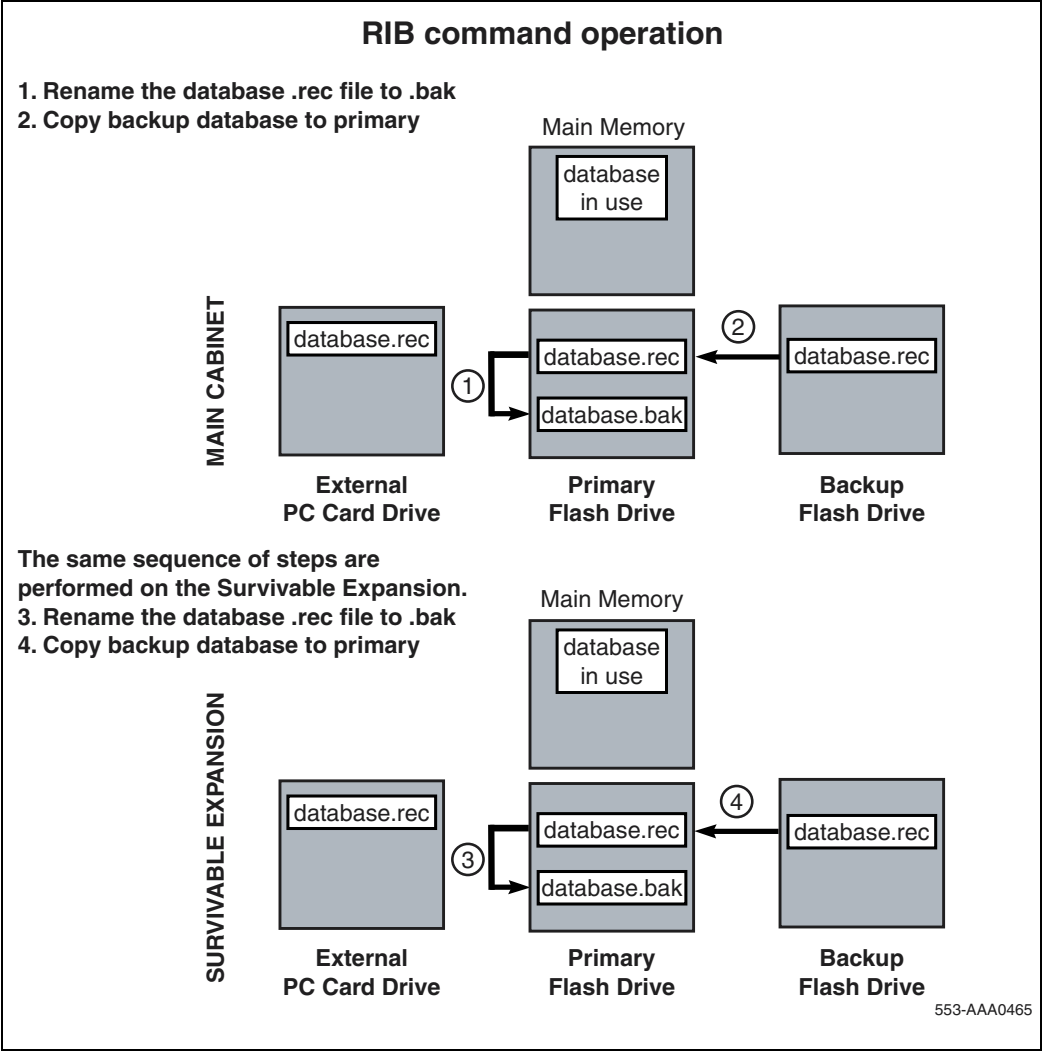

DAT command

Use the DAT command to print the data issue and creation date of the main cabinet or chassis primary and backup databases, as well as those of the survivable IP expansion cabinets or chassis. The software release of the survivable IP expansion cabinets or chassis must match that of the main cabinet or chassis.

The DAT command is available in LD 43.

LOCK and UNLOCK commands

The LOCK and UNLOCK commands are available from the main cabinet or chassis.

The LOCK command locks an IP expansion cabinet or chassis in the mode that it is in when the command is invoked. This does not require a restart of the selected IP expansion cabinet or chassis.

- If the IP expansion cabinet or chassis receives the LOCK command in normal mode, it goes into normal locked mode.
- If the IP expansion cabinet or chassis receives the LOCK command in survival mode, it goes into survival locked mode.
- When an IP expansion cabinet or chassis is in normal locked or in survival locked mode, no switchover (or switchback) is possible (automatic or manual) until the UNLOCK command is issued.

The UNLOCK command unlocks an IP expansion cabinet or chassis. This does not require a restart of the selected IP expansion cabinet or chassis.

- If the UNLOCK command is received in normal locked mode, the IP expansion cabinet or chassis returns to normal mode.
- If the UNLOCK command is received in survival locked mode, the IP expansion cabinet or chassis returns to survival mode.
- This command has no impact if it is received by an IP expansion cabinet or chassis that has not been locked into either normal or survival mode.

The LOCK/UNLOCK command can be used in any mode by a technician to keep an IP expansion cabinet or chassis in the current mode, regardless of the state of the link to the main cabinet or chassis. For example, a technician can

issue a SOTS command. This forces the selected IP expansion cabinet or chassis into survival mode prior to restarting the main cabinet or chassis. A LOCK command can be issued from the main cabinet or chassis prior to a restart. This keeps the selected IP expansion cabinet or chassis in survival mode, until manually returned to normal mode. Manually returning to normal mode reboots the IP expansion cabinet or chassis.

These commands are applicable to both modes and can be used to keep a cabinet or chassis in survival mode after the Automatic Switch Back occurs.

The LOCK/UNLOCK command is issued in LD 135.

LOCK <cab #>

Where:

cab# = specified survivable IP expansion cabinet or chassis

UNLOCK <cab #>

Where:

cab# = specified survivable IP expansion cabinet or chassis

TN mapping during survival mode

TN mapping remains the same for both normal and survival modes. For example, in a survivable Cabinet system, the second card slot of the first expansion cabinet is always card number 12.

Configuring for Survivability

Use this information to configure Survivability on a new system, or add the capability to an existing Small System. Before you configure Survivability, make sure you read and understand the information in “Description” on [page 493](#) of this chapter.

Configuring a new system for Survivability

Follow the steps in Procedure 71 to configure Survivability on a new Small System.

Procedure 71**Configuring for Survivability — new system**

- 1 Ensure that you have the proper hardware installed to support Survivability.

You can only configure Survivability on an IP expansion cabinet or chassis. This means an IP expansion cabinet or chassis that is connected to the main cabinet or chassis with a 100BaseT or 100BaseF link. Refer to “Installing the Cabinet system” on [page 91](#) for further details.

- 2 Ensure that the Survivability ISM is set on your system for each cabinet or chassis that is to be configured as survivable.
- 3 Configure the Survivability (SURV) capability.

Each IP expansion cabinet or chassis must be separately configured to be survivable.

The SURV command is configured in LD 117:

```
CHG SURV <cab#> <Survival setting>
```

Where:

cab# = 1–4

Survival setting = (NO) YES

- 4 Configure the Automatic Switch Back parameter.

The Automatic Switch Back (AUTOSB) option allows a survivable IP expansion cabinet or chassis to switch back from survival mode to normal mode automatically as soon as the link with the main cabinet or chassis is restored and the Switchover Time Out timer (SWOTO) expires.

The AUTOSB command is configured in LD 117:

```
CHG AUTOSB <cab#> <Switchback setting>
```

Where:

cab# = 1–4

Switchback setting = (YES) NO

- 5 Configure the SWOTO.

Configure the SWOTO separately for each IP expansion cabinet or chassis.

The SWOTO command is configured in LD 117:

CHG SWOTO <cab#> <value>

Where:

cab# = 1–4

value = 2 - (120) - 600 seconds

For point-to-point connection (cabinets or chassis that are not connected over a LAN), it is recommended that you set the timer to a low value to minimize service interruption.

End of Procedure

Printing survivable Small System parameters

The following Print commands, available in LD 117, print the Small System parameters and Survivability for all, or specified, IP expansion cabinets or chassis:

PRT SURV cab

Where:

cab = 1–4

PRT CAB cab

Where:

cab = 1–4

Configuring trunks for Survivability

When properly configured, the IP expansion cabinets or chassis can make outgoing calls and, in some cases, receive incoming calls when in survival mode.

In order to make or receive calls, the survivable cabinet or chassis must be configured with the appropriate trunks. The sections below detail some examples of configuration options that may or may not suit your specific system setup.

Option 1: Dedicated DID/DOD trunks

Procedure 72

Configuring dedicated DID/DOD trunks for Survivability

- 1 Configure each IP expansion cabinet or chassis with incoming and outgoing DID trunks.
- 2 Configure the main cabinet or chassis with incoming and outgoing CO trunks.

These Central Office (CO) trunks will handle most external calls. The DID trunks not only provide direct inward access for certain users, but they also provide a means of outward dialing for users of the IP expansion cabinets or chassis in survival mode. They can also be programmed as outgoing overflow trunks for the CO trunks in normal mode. Ensure that the CO has configured the DID trunks to work in this mode.

- 3 Use the Network Alternate Route Selection (NARS), Basic Alternate Route Selection (BARS), or Alternate Trunk Route (STEP) prompt in LD 16 to program the CO trunks as outgoing overflow trunks in normal mode.

Example: In survival mode, incoming calls (non-DID) are still directed to the main cabinet by the CO trunks. If the called non-DID DN exists in an expansion cabinet currently in survival mode, the call is intercepted since it cannot be completed to its intended destination. The call is then given the intercept treatment that is configured for Maintenance Busy Numbers (MBNR) in the Customer Data Block. The options are busy tone, overflow tone, transfer to attendant, recorded announcement, or voice mail. If the intercept treatment is "Mail", then the call is transferred to the called person's voicemail, such as Meridian Mail or CallPilot. The users of the IP expansion cabinets that are in survival mode can detect that they are in survival mode by the Flexible Survivable Dial Tone and "Local mode" display on their telephones.

End of Procedure

Advantages:

- Users can make outgoing calls at any time.
- Users can still access their mailboxes in survival mode if the Mail intercept feature is configured.

- The outgoing DOD trunks are used in both normal and survival modes.
- Users with DID numbers have direct inward access in both normal and survival modes.

Disadvantages:

- Non-DID users of the expansion cabinets or chassis cannot directly receive incoming calls in survival mode.
- The customer must purchase enough DID/DOD trunks to handle entire outgoing call volume in survival mode.

Option 2: Outgoing-only, analog CO trunks

Procedure 73

Configuring analog CO trunks for Survivability

- 1 Configure each IP expansion cabinet or chassis with some outgoing-only, analog CO trunks.
- 2 Configure the main cabinet or chassis with incoming and outgoing CO trunks to handle most external calls.

The operation is similar to Option 1 except that there are no inward DID capabilities. The Mail intercept feature can again be used in survival mode to allow incoming calls to be directed to the called person's voicemail.

End of Procedure

Advantages:

- Users can make outgoing calls at any time.
- Users can still access their mailboxes in survival mode if the Mail intercept feature is configured.
- The outgoing-only, analog CO trunks are more cost-effective than DID/DOD trunks.

Disadvantages:

- Users of the IP expansion cabinets or chassis cannot directly receive incoming calls in survival mode.

Option 3: Multiple, public-exchange Listed Directory Numbers

Procedure 74

Configuring multiple, public-exchange Listed Directory Numbers (LDN) for Survivability

- 1 Configure the main cabinet or chassis with incoming and outgoing CO trunks.
- 2 Configure the IP expansion cabinets or chassis with incoming and outgoing CO trunks.
- 3 Assign each cabinet or chassis a unique public LDN (referred to here as LDN #0, LDN #1).

When an external caller dials LDN #0, the CO trunks on the main cabinet or chassis are accessed. When the external caller dials LDN #1, the CO trunks on the first IP expansion cabinet or chassis are accessed.

In normal mode, all the CO trunks are used for both incoming and outgoing calls. Unique LDNs are necessary to receive incoming calls when the system goes into survival mode.

In survival mode, incoming calls to the main cabinet or chassis cannot be redirected to an IP expansion cabinet or chassis. The only way for an external caller to reach a user of an IP expansion cabinet or chassis is through the unique LDN of that cabinet or chassis. When an external caller dials this LDN, the switch must be configured to manually distribute the calls to the users on the cabinet or chassis. These alternatives are described below.

Distributing calls to the users

- a. Define one multiple appearance, Single Call Ringing (SCR) DN on at least one telephone on each cabinet or chassis.
- b. Assign this DN as the general Night DN for the system.
- c. Assign these telephones to users who will answer and redirect incoming calls in survival mode for each cabinet or chassis.

The following example illustrates the process for manually distributing calls to the user:

- In normal mode, incoming calls to IP Expansion Cabinet 1 are processed by the main cabinet's answering service (which could be an attendant, or Meridian Mail). When the main cabinet's answering service is in night mode, all the telephones with the multiple

appearance DN ring for incoming calls. The calls can be manually redirected by any of the users assigned to those telephones.

- However, when IP Expansion Cabinet 1 is in survival mode, incoming calls to IP Expansion Cabinet 1 (by LDN #1) are terminated only on IP Expansion Cabinet 1's telephone with the multiple appearance DN. Only the user assigned to IP Expansion Cabinet 1 is able to redirect these calls. The telephones with the multiple appearance DN on all other cabinets will not ring in this case.

End of Procedure

Advantages:

- Users can receive incoming calls at any time.
- Users can make outgoing calls at any time.
- The CO trunks on the IP expansion cabinets or chassis function in both normal and survival modes.

Disadvantages:

- Users must inform their contacts of their new LDN.
- The LDN changes if a user relocates to an area serviced by a different cabinet or chassis.
- Each cabinet or chassis must have a method of redirecting incoming calls while in survival mode. Use one of the procedures above.

Implementing the Mail intercept feature

When a system's IP expansion cabinets or chassis are in survival mode, the Mail intercept feature allows incoming calls that cannot be redirected to an IP expansion cabinet or chassis, to go to the called person's voicemail. The MBNR prompt in the Customer Data Block must be set to "mail". Enter the Meridian Mail DN after MLDN is prompted.

The MBNR and MLDN prompts are configured in LD 15.

LD 15 – Customer Data Block

Prompt	Response	Description
REQ:	CHG	Change existing data block
TYPE:	INT	Change Intercept Treatment
CUST	0–31	Customer number
...		
MBNR	MAIL MAIL MAIL MAIL	
MLDN	xxxx	Mail DN

The following is a sample printout of the Customer Data Block (CDB). Use LD 21 to print the CDB.

```

>ld 21
REQ: prt
TYPE: int
TYPE INT_DATA
CUST 0
TYPE INT_DATA
CUST 00
ACCD OVF OVF OVF ATN
CTVN OVF OVF OVF ATN
MBNR MAIL MAIL MAIL MAIL
MLDN 3001
CTRC OVF NAP OVF NAP
CLDN NAP OVF NAP NAP
NINV OVF OVF OVF ATN
NITR OVF OVF OVF ATN
NRES OVF OVF OVF ATN
NBLK OVF OVF OVF ATN
MVFO OVF OVF OVF ATN
MFVN OVF OVF OVF ATN
MFCG OVF OVF OVF ATN
LCKT BSY BSY BSY BSY
RCLE ATN OVF ATN ATN

```

CONG OVF
DLT OVF
LLT OVF
DNDT BSY
REQ:

Supported applications

The Small System has been provisioned to support the following applications and telephones, and their circuit cards (if applicable). Contact your system supplier or your Nortel Networks representative to verify that the functionality of the following is supported at this time:

- Attendant console and PC based console
- Desktop Accessories
 - Power in line patch panel
 - Internet Telephone Switch Module
- Internet Telephone sets
- IP Line
- MIXX portfolio — MICB, MICA, MIPCD, MIRAN, MIVS
- MDECT
- OTM
- Remote Office

Administration Tools

The Optivity Manager (OTM) is compatible with the Small System. OTM is an integrated suite of system management tools. Use OTM to configure, control, and manage your Small System. OTM operates on a platform that is compatible with a standard IBM PC.

Refer to the OTM User Guides — *Optivity Telephony Manager: Installation and Configuration* (553-3001-230), *Optivity Telephony Manager: System Administration* (553-3001-330), and *Optivity Telephony Manager Telemanagement Applications: System Administration* (553-3001-331) — for information about the OTM application, its requirements, and how to install it for the Succession 1000M system.

Peripheral Software Download

Peripheral Software Download (PSDL) is available from the main cabinet or chassis in normal mode only. PSDL is not supported on IP expansion cabinets or chassis when they are in survival mode.

IP Line in survivable Small Systems

This section describes certain aspects of IP Line card configuration that are specific to survivable IP expansion. For more information about configuring Voice Gateway Media Cards and the IP Line application in Small Systems, refer to “IP Line card configuration” on [page 321](#).

When distributing IP Line cards across different IP expansion cabinets or chassis, the IP expansion cabinets or chassis can be configured to each have their own node or to belong to the same node. If the IP expansion cabinets or chassis are NOT in the same location as the main cabinet or chassis, then each IP expansion cabinet or chassis must have its own node.

This is related to which survival IP address is configured on the IP Line cards:

- For a remote location, the survival IP address of the IP Line cards on that node = the IP address of the SSC on that node.
- For the same building, all survivable IP addresses on IP Line cards are configured to the IP address of only one IP expansion cabinet or chassis.

There are two survivable mode options:

1 IP expansion cabinets or chassis in separate nodes for IP Line cards (mandatory if IP expansion cabinets or chassis are in a different location from the main cabinet or chassis)

- Trunks and gateway channels are available in all IP expansion cabinets or chassis.
- More administration is required as there is more than one node to manage.

- If IP Line card fails, Internet Telephone sets can register to another IP Line card only if it is contained within that particular IP expansion cabinet or chassis.
- Users cannot make Internet Telephone calls from one IP expansion cabinet or chassis to another.

2 IP expansion cabinets or chassis in the same node for IP Line cards

- Trunks and gateway channels only available for Internet Telephone sets on one IP expansion cabinet or chassis but can be used by all IP Line cards.
- Less administration as there is only one node to manage.
- If IP Line card fails, Internet Telephone sets can register to other IP Line cards (in different IP expansion cabinets or chassis).
- Users can make Internet Telephone calls from one IP expansion cabinet or chassis to another.

Configuring IP Line data on survivable Small Systems

When the IP Line card is installed in the main cabinet or chassis, only one IP address is required. When the card is installed in a survivable IP expansion cabinet or chassis, two IP addresses are required. The first IP address is for the main cabinet or chassis SSC. The second IP address is for the SSC in the survivable IP expansion cabinet or chassis that has the IP Line card.

Each Internet Telephone configured on the IP Line card must have the IP address of the survivable IP expansion cabinet or chassis configured as the second IP address. These IP addresses must be on the same subnet.

Refer to Procedure 51 on [page 324](#) and Procedure 52 on [page 325](#) to configure the Small System's main cabinet or chassis and any IP expansion cabinets or chassis.

Verifying IP Line operation in survival mode

To verify the operation of an IP Line card in an IP expansion cabinet or chassis in survival mode, complete Procedure 75 on [page 519](#).

Procedure 75**Verifying the operation of an IP Line card in an IP expansion cabinet or chassis in survival mode**

- 1 Go into LD 135 and use the SOTS command to force the IP expansion cabinet or chassis into survival mode.

The IP expansion cabinet or chassis will reboot and come up in survival mode.

When it is finished rebooting and in full operation, the IP Line card on the IP expansion cabinet or chassis reboots and comes back up communicating with the survivable IP expansion's ELAN.

- 2 Check the Internet Telephones and TTY:
 - Local Mode is visible on the telephone display.
 - The Flexible Survivable Dial Tone is apparent.
 - Special text is also displayed on the remote TTYs connected to the IP expansion cabinet or chassis as shown below.

```
TTY 00 SCH MTC BUG CTY      14:10
SURVIVAL MODE
OVL111 IDLE
```

- 3 Return to normal mode using the SBFS command in LD 135.

The IP expansion cabinet or chassis and IP Line card will reboot again.

End of Procedure

Retrieving Call Detail Recording records

Call Detail Recording (CDR) records are available from an IP expansion cabinet or chassis that has entered into survival mode. These records must be manually retrieved when the cabinet or chassis returns to normal mode (from survival mode) using the following XModem procedure.

CDR is only generated from the survivable IP expansion cabinet or chassis when the system is operating in survival mode. The CDR files are deleted from the IP expansion cabinet or chassis after a successful transfer to a PC.

The XCDR command, file retrieval for small systems in LD 143, transfers the CDR file from the survivable IP expansion directly to the PC connected to the main cabinet or chassis.

Use the following procedure to retrieve the CDR files stored on the survivable IP expansion cabinets or chassis (one file per cabinet or chassis) using XModem.

Procedure 76
CDR retrieval using XModem

- 1 Connect a PC to the main cabinet or chassis either remotely using a modem or directly using an SDI cable and a modem eliminator. Using a terminal emulation program such as Hyperterminal, establish a TTY session with the Small System through the modem or SDI cable.
- 2 Go into LD 143 on the main cabinet or chassis from the PC. Enter the following command:

XCDR

- 3 The system prompts for the IP expansion cabinet or chassis number. Enter the number of the IP expansion cabinet or chassis on which the <dba.cdr> file is stored.
- 4 The system prints the following:

```
Getting CDR file for EXP_CAB <num>  
Ready to transmit..."
```
- 5 Invoke the XModem protocol on the PC to receive the CDR file.

Use the Hyperterminal transfer function to receive the file using XModem protocol. Rename the file to indicate which IP expansion cabinet or chassis the CDR data is from.

Note: Use a filename that will not overwrite any DBA-specific files if DBA is used to retrieve CDR/Traffic files from the main cabinet or chassis.
- 6 Parse the CDR file into the main cabinet or chassis database on the PC.

Refer to the OTM NTPs for how to retrieve CDR records for Billing applications.

End of Procedure

Central Answering Position

Contents

This section contains information on the following topics:

Introduction	522
About the Central Answering Position	522
CAP functionality versus M2250 functionality	523
Key layout	525
Key expansion modules	527
Installing the key expansion module(s)	529
Removing the key expansion module(s)	530
Configuring your CAP	532
Logging into and out of the ACD queue	537
Small System configured in Position ID mode	538
Small System configured in Agent ID mode	538
Using common CAP features	539
Conference	539
Direct Station Select (BFS)	540
Directory Number (DN)	540
Display Queue (Disp Queue)	541
Make Busy	541
No Hold Conference (N. H. Conf)	542
Override	543
Park	543
Privacy Release (Priv Rls)	544

Program	545
Transfer	545
Other CAP features.....	547
Call Forward and Busy Status	547
Forced Camp-on/Priority Override	550

Introduction

This chapter contains the following information:

- overview of the Central Answering Position (CAP) feature
- descriptions of the CAP key layouts and key expansion modules
- procedures for installing and removing key expansion modules
- overlays used to configure the CAP on a TTY
- common CAP features and how to use them

About the Central Answering Position

The Central Answering Position (CAP) is an alternative to the M2250 attendant console, and must be a Meridian Digital 2616 or 2216 Automatic Call Distribution (ACD) telephone. It provides many console features, including responding to requests for information and transferring, parking, and placing calls. If you choose to add an optional key expansion module(s), the CAP also has Direct Station Select and Busy Lamp Field features.

The equipment required for a basic CAP is:

- an M2616 or M2216 ACD digital telephone
- an ACD Liquid Crystal Display (LCD) display

Note: With the M2616 CAP telephone, you must use an ACD display.

- optional key expansion module(s)

Up to two NT2K22XH Meridian key expansion modules can be used with the CAP for a total of 60 keys (22 keys per module, plus 16 keys on the

telephone). If you use key expansion modules, you require a local power supply and power board as well as an expanded telephone footstand.

A preprogrammed Small System uses an attendant console; if the console is not activated or is unstaffed, it is said to be in Night Service. Calls that come in to be answered by a console that is not activated or is in Night Service are transferred to the CAP extension number (ACD queue). Calls are placed in the queue in the order of their arrival.

The CAP receives all calls that come in on the ACD queue. To answer calls, the CAP agent must be logged onto the ACD queue. There are two ways of logging onto the ACD queue, described in “Logging into and out of the ACD queue” on [page 537](#).

If multiple CAP telephones are configured, calls are distributed among these positions. For example, the CAP that has been idle the longest receives the next incoming call. If equipped, a recorded announcement (RAN) can be used to advise the calling party of any delay in answering.

CAP functionality versus M2250 functionality

Although the CAP is an attendant position, it does NOT operate in the same way as the M2250 attendant console. The CAP is an ACD agent, and therefore provides attendant functionality in a different manner than the attendant console.

Note: The CAP console should not be viewed as having M2250 attendant console capabilities, because it is just an M2616 or M2216 digital telephone with optional key expansion modules. As a result of this limitation, the CAP set does not have access to attendant features such as Network Attendant Services (NAS).

Table 136 illustrates the CAP features which duplicate or simulate attendant console features.

Table 136
CAP features versus M2250 features

Central Answering Position (CAP)	M2250 attendant console
Override.	Busy Verify
Not Ready.	Position Busy
Make Set Busy (Night Service is entered when the last Central Answering Position logs out of the ACD queue by depressing the Make Set Busy Key).	Night Service
A Night Service key can also be defined, for the ACD DN with that service.	
Transfer / No Hold Conference.	Release (to extend)
Transfer.	Exclude Source/Destination
Conference / No Hold Conference.	Conference
In Calls Key (Key 0) — incoming calls only.	Loop Key 0
(One or more DN keys can be assigned for outgoing calls.)	
Call Forward and Busy Status (BFS) and Add-on modules.	Busy Lamp Field
Keys configured as BFS keys enable you to connect to an extension by pressing a single key.	Direct Station Select
ACD position configured as supervisor and provisioned with an ACD agent observe key.	Supervisor Console
Overflow/Interflow.	Attendant Overflow Position
ACD Recorded Announcement.	Attendant RAN
ACD position configured as supervisor and provisioned with a Display Calls Waiting key.	Call Waiting Indicator

Attendant console features not available with a CAP

The following is a list of attendant console features that are not available with a CAP:

- The CAP does not have the capability to provision feature keys which function like incoming call indicators.
- The following attendant features have no equivalent on the CAP:
 - Trunk Group Busy
 - Incoming Call Indicators
 - Attendant Administration Function Keys
 - Multiple Loop Keys (for incoming/outgoing calls)
 - Signal Source/Destination

The above information should be carefully considered when deciding between the functionality of a CAP and that of an M2250 console.

Key layout

A number of features make it easy for you to respond to and transfer calls using the CAP. Each CAP telephone is preconfigured with certain features. (Preprogrammed data can be found in “Preprogrammed data” on [page 399](#).)


To activate preconfigured CAP data, select a CAP model using the administration telephone and carry out the appropriate overlays on the CAP, as described later in this chapter. You are not locked into the preconfigured model, however. If you choose, you can change features to meet your specific needs.

The feature keys shown in Figure 136 on [page 526](#) provide an example of the most commonly used CAP functions. The CAP extension key (ACD queue) is found at the bottom right-hand corner of the keypad and has a default extension number.

Note: See “Using common CAP features” on [page 539](#) for a brief description of the common features for a CAP and for detailed instructions on how to use each feature.

Figure 136 on [page 526](#) shows the model feature key assignments on the CAP telephone. These are the features you get when you select a CAP model using the administration telephone.

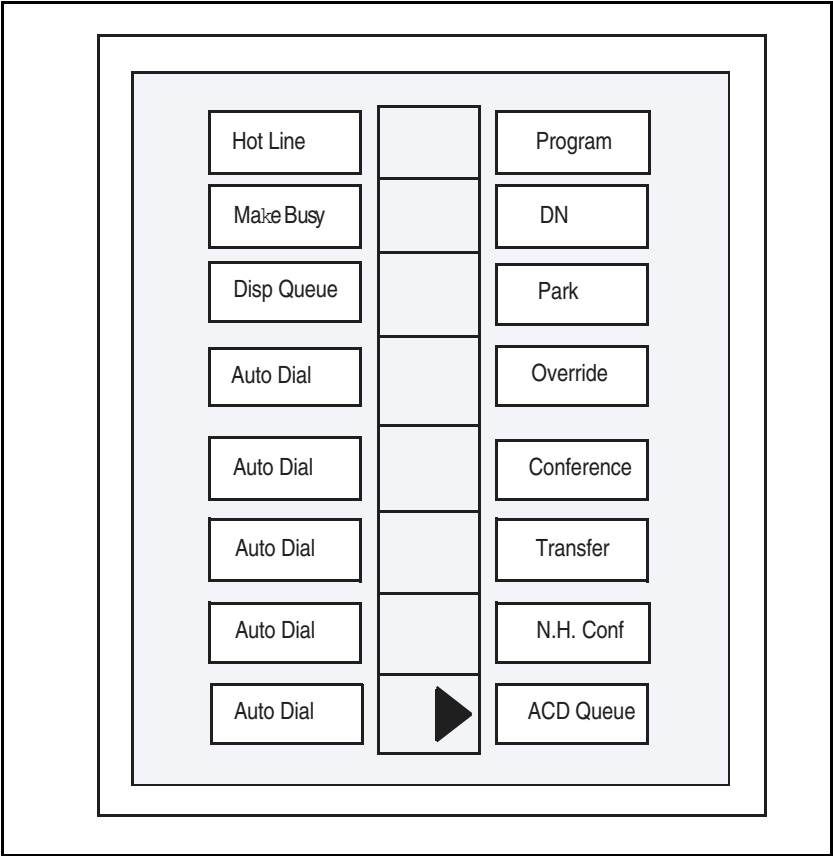Figure 136
Default M2216 or 2616 CAP model



* This key is used to connect to the office paging system. Assign it with the paging route access code and define it when you activate the telephone.

Key expansion modules

Up to two optional Meridian Key Expansion Modules (NT2K22XH) can be used with the base CAP telephone. The keys in Figure 137 on [page 528](#) show the key expansion module with example labels for department or individual names. These keys act as Direct Station Select (DSS) keys and Busy Lamp Field arrays. Each of these keys is programmed with the Terminal Number (TN) of the telephone to which it corresponds. To program these keys use LD 11, explained later in this chapter.

You can use these keys to visually find out the status of a telephone, or to contact and extend calls to telephones. The status of a telephone is indicated by the key lamp in the following ways:


Idle — The key lamp is off.

Busy — The key lamp is steadily lit.

Forwarding — The key lamp is flashing.

Figure 137 shows an example of a key expansion module.

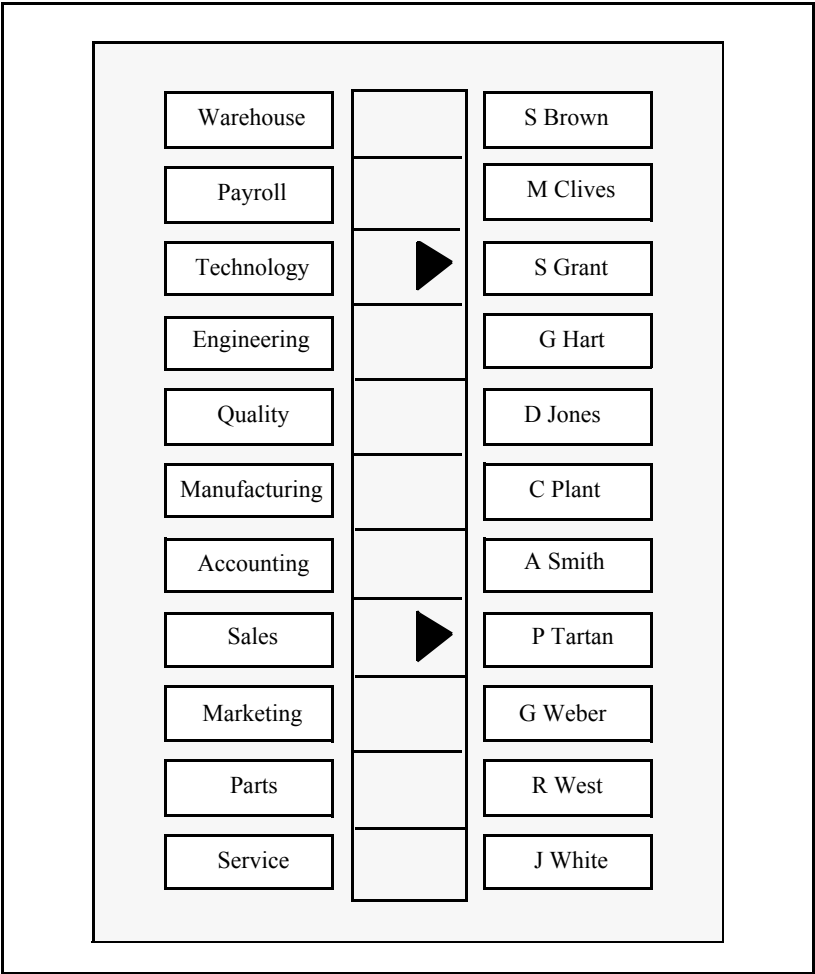Figure 137
Optional key expansion module



Installing the key expansion module(s)

Use this procedure to add one (single) or two (double) key expansion module(s) to the M2616 or M2216 ACD CAP telephone.

Note: Before installing the key expansion module(s), make sure that you have the associated footstand, the power supply board, and the additional power source.

Procedure 77

Installing a key expansion module

- 1 Remove the telephone handset and place the telephone upside down on top of a level, solid work surface covered with soft material or paper to avoid damaging the keys or the telephone face.
- 2 Disconnect all cords from the telephone.
- 3 Remove the two screws from the stand assembly and unsnap it from the telephone by pressing inward at the back of the stand (where it meets the base) and pulling upward.

Note: If you are using an M2616 telephone and it is equipped with a Programmable Data Adapter, the Programmable Data Adapter must be removed and installed into the key expansion module footstand.

- 4 If the telephone is not yet equipped with the power board, install the power board now.
- 5 Align the bottom of the key expansion module(s) to the bottom of the telephone. (Refer to Figure 138 on [page 531](#).)
- 6 Snap the end of the ribbon cable connector(s) into the bottom interface jack on the key expansion module. Snap the other end of the ribbon cable into the interface jack in the left side of the telephone. Gather the excess cable in the base of the key expansion module.
- 7 If you are adding a second key expansion module, snap the end of a second ribbon cable connector into the bottom interface jack on the second key expansion module. Snap the other end of the ribbon cable into the top interface jack on the first key expansion module. (Refer to Figure 138 on [page 531](#).) Gather the excess cable in the base of the second key expansion module.

- 8 If the telephone is equipped with a Programmable Data Adapter, reconnect the data cable to the base telephone jack. Make sure that the Programmable Data Adapter cable and the interface cable do not get pinched between the base and the stand.
- 9 Secure the footstand to the key expansion module(s) and to the telephone by placing the footstand tabs into the slots provided on the base of the key expansion module and telephone and pressing down. Make sure that the stand is firmly attached to the base. Ensure that the ribbon cable(s) are not pinched between the footstand and the mounting posts.
- 10 Insert the three (or four if you have two modules) self-tapping Phillips head screws supplied with the key expansion module into the mounting holes in the bottom of the footstand. Tighten the screws firmly with a #1 Phillips screwdriver.
- 11 Tighten all screws, replace all cords and place the telephone in its normal operating position. Place the label supplied with the key expansion module(s) on the bottom cover of the telephone (or the footstand) for tracking purposes.
- 12 Perform the self test and acceptance test procedures. (Refer to *Software Input/Output: Administration* (553-3001-311) for information about these test procedures.)

End of Procedure

Removing the key expansion module(s)

Use this procedure to remove one (single) or two (double) key expansion modules to the M2616 or M2216 ACD CAP telephones.


Procedure 78

Removing a key expansion module

- 1 Remove the telephone handset and place the telephone upside down on top of a level, solid work surface covered with soft material or paper to avoid damaging the keys or the telephone face.
- 2 Disconnect all cords from the telephone.
- 3 Remove the screws from the stand assembly (where it meets the key expansion module) and unsnap the stand assembly from the key expansion module and the telephone by pressing inward at the back of the stand (where it meets the base) and pulling upward.

- 4 Remove the interface cable from the telephone by pressing down on the locking tab. If you have an interface cable on the first key expansion module (closest to the telephone), remove it now.

End of Procedure

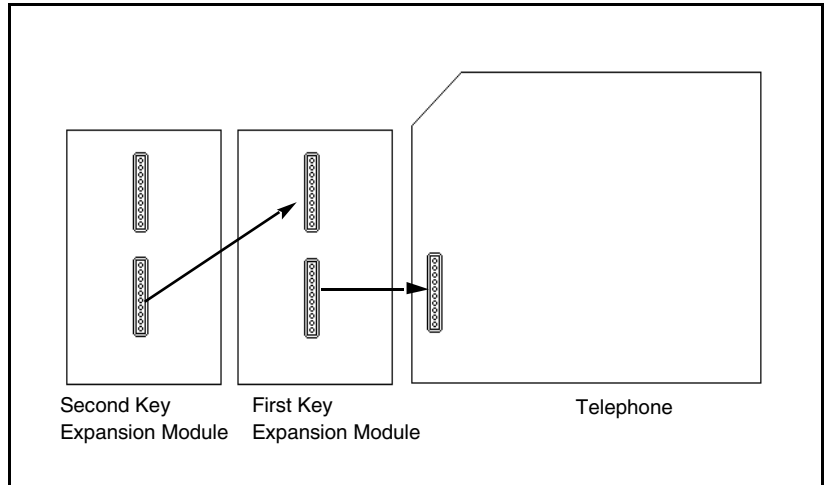Figure 138**Key expansion module connections (bottom view)**

For more information about installing key expansion modules, refer to *Telephones and Consoles* (553-3001-367).

Configuring your CAP

The CAP can be configured using the CAP telephone model as described in “Preprogrammed data” on [page 399](#).

The CAP can also be configured using a TTY.

To configure the CAP, use the system’s TTY to access the following overlays in the order listed:

- LD 16: Use this overlay to configure your RAN trunk routes.
- LD 14: Use this overlay to configure your RAN trunks.
- LD 23: Use this overlay to configure the CAP queue.
- LD 15: Use this overlay to do the following:
 - Define and modify the attendant extension number.
 - Define the night number and time.
 - If necessary, define a second night number and time.
 - Define customer options.
- LD 11: Use this overlay to define the CAP features, including Busy Lamp Field and Direct Station Select.

Note: The following is a summary of the steps to follow when configuring the CAP from a TTY. Refer to *Software Input/Output: Administration* (553-3001-311) for a complete listing of prompts and responses for the overlays.

To configure RAN trunk routes, respond as follows for prompts in LD 16:

LD 16 – Defining and modifying trunk routes

Prompt	Response	Description
REQ	aaa	“aaa” = NEW, OUT, CHG, END
TYPE	bbb	“bbb” = trunk type (COT, TIE, DID, etc.)
DMODL	ccc	“ccc” = the route default model number for this route.

To configure RAN trunks, respond as follows for prompts in LD 14:

Note: LD 14 is also used to assign incoming trunks with a Priority (via CLS=APY)

LD 14 – Defining and modifying trunks

Prompt	Response	Description
REQ	aaa	“aaa” = NEW, OUT, CHG, MOV, END
TYPE	bbb <M>	“bbb” = the trunk type (COT, TIE, DID, etc.) “M” is optional. Enter “M” if you are using a model trunk.
MODL	ccc	“ccc” = a 1 to 3 digit model number. This prompt comes up only if you enter a value for “M”.
TN	cc uu	If you enter a value for “M” this prompt does not appear.
CDEN		If you enter a value for “M” this prompt does not appear.
TOTN	cc uu	If you enter a value for “M” this prompt does not appear.

The CAP queue (ACD queue) is configured using LD 23. Respond as follows for the specified prompt:

LD 23 – Configuring ACD as the night number

Prompt	Response	Description
REQ	NEW	
TYPE	ACD	“ACD” = ACD data block
CUST	0–31	customer number
ACDN	xxxx	“xxxx” = ACD directory number
MWC	NO	not message center
ACPQ	(NO) YES	answered calls are (are not) given priority when re-entered in queue

LD 23 – Configuring ACD as the night number

Prompt	Response	Description
AST	<CR>	Associated set (used with Meridian Link only).
DSAC	<CR>	Server IS/data service access code (used with Meridian Link only).
MAXP	1–120	Maximum number of positions.
SDNB	(NO) YES	Block (or not) calls to the Secondary DN.
BSCW	(NO) YES	Block (or not) calls to the secondary DN on walkaway.
ISAP	(NO) YES	ACD messages sent (not sent) across the ISDN/AP link.
FRT	0–2044	Time in seconds allowed before unanswered incoming ACD calls are connected to the first RAN (appears if FRRT RAN route number is identified above).
SRRT	0–511	Second RAN route number for ACD.
SRT	0-2044	Time in seconds before second RAN is connected to ACD calls (appears if SRRT RAN route number is identified above).
NRRT	0-127	RAN route number assigned as night announcement for ACD calls.
FROA	(NO) YES	First RAN to be given to incoming calls immediately.
NCFW	x...x	Night call forward DN for ACD calls (up to 23 digits).
FORC	(NO) YES	Call forcing option.
FRT	0–2044	Time in seconds allowed before unanswered incoming ACD calls are connected to the first RAN (appears if FRRT RAN route number is identified above).
SRRT	0–511	Second RAN route number for ACD.

LD 23 – Configuring ACD as the night number

Prompt	Response	Description
SRT	0–2044	Time in seconds before second RAN is connected to ACD calls (appears if SRRT RAN route number is identified above).
NRRT	0–127	RAN route number assigned as night announcement for ACD calls.

In LD 15, respond as follows for the specified prompts:

LD 15 – Configuring customer options (Part 1 of 2)

Prompt	Response	Description
REQ:	CHG	Change
TYPE:	NIT	Night Service
CUST	0-99	Customer Number
NIT1	xxxxxxx	xxxxxxx is the ACD directory number of the CAP queue defined in LD 23. Up to 7 digits are allowed if the DNXP package is equipped, otherwise only 4 digits can be entered.
TIM1	hh mm	Hour and Minute for First Night Service DN
...		
REQ:	CHG	change
TYPE:	MPO	Multi-Party Operations
CUST	0-99	Customer Number
FMOP	YES	set misoperation prompts
- RGNA	STD ATN	Ring No Answer treatment

LD 15 – Configuring customer options (Part 2 of 2)

Prompt	Response	Description
- AOCS	<CR>	Ring Cycles before forwarding to attendant
- RCY1	<CR>	
- RCY2	1 - (6) - 15	

In LD 15, the customer data block, the prompt **ATDN**, or Attendant Directory Number, defaults to **0**. When **0** is dialed by a station user, the non-existent console is seen by the Small System as being in Night Service. Therefore, all dial **0** calls are directed to the night number, which is the ACD directory number of the CAP.

All calls redirected to the CAP which are subsequently transferred to a station, may be redirected to Meridian Mail or recalled to the CAP ACD queue. The software associated with this produces prompts in LD 15, which determine whether or not a call is recalled to the CAP queue or redirected to a forward no answer destination such as Meridian Mail.

In LD 11, respond as follows for the specified prompts:

LD 11 – Configuring your CAP (Part 1 of 2)

Prompt	Response	Description
AOM	0, 1, 2	add-on modules 0, 1, or 2
CLS	SPV ADD SWA	“SPV” = supervisor “ADD” = automatic digit display “SWA” = station-to-station call waiting allowed
KEY	0 ACD xxxx yyyy xx MSB	“xxxx” = ACD queue directory number “yyyy” = position ID “xx” = key number MSB = Make Set Busy

LD 11 – Configuring your CAP (Part 2 of 2)

Prompt	Response	Description
	xx DWC yyyy	“xx” = key number DWC = ACD Display Waiting Calls “yyyy” = ACD-DN
	xx TRN	“xx” = key number TRN = Transfer
	xx AO6	“xx” = key number A06 = Conference
	xx NHC	“xx” = key number NHC = No Hold Conference
	xx PRK	“xx” = key number PRK = Call Park
	xx BFS aa bb	“xx” = key number BFS = Busy-Forward Status “aa bb” = TN (repeated for all digital stations being monitored)

Logging into and out of the ACD queue

There are two different procedures for logging into the ACD queue. The method by which you log in depends on whether your Small System is configured in “Position ID” mode or “Agent ID” mode.

Small System configured in Position ID mode

Logging into the ACD queue

- The CAP is in the Make Set Busy state.
 - The Make Set Busy lamp may or may not be on.
- Pick up the handset.
- Press the **Make Set Busy** key.
 - You are now logged into the ACD queue.

Logging out of the ACD queue

- You are logged into the ACD queue.
- Press the **Make Set Busy** key or unplug the headset.
 - You are now logged out of the ACD queue.

Small System configured in Agent ID mode

Logging into the ACD queue

- The CAP is in the Make Set Busy state.
 - The Make Set Busy lamp may or may not be on.
- Press the **Make Set Busy** key.
- Enter your agent ID.

Note: The length and valid range of numbers in your agent ID depends on how the ADS feature is programmed in LD 23.

- You are now logged into the ACD queue.

Logging out of the ACD queue

- You are logged into ACD queue.
- Press the **Make Set Busy** key on the CAP or unplug the headset.
 - You are now logged out of the ACD queue.

Using common CAP features

This section describes each of the commonly configured features on the CAP and explains how to use them. The feature keys in Figure 136 on [page 526](#) correspond to the features listed in this section. All of the features are listed in alphabetical order.

Note: If you are using an M2616 as your CAP and are logged into the CAP queue, placing the handset in the cradle or unintentionally pressing the switchhook will automatically log you out. In this situation, the lamp is not lit. The only situation that this will not occur in is if you have the HOML prompt set to “YES” in LD 23. If this prompt is set to “YES”, you must press the **Make Set Busy** key to log out.

Conference

This key allows the CAP to create conferences and to join parties together. The first party is put on hold while the second party is being added.

Procedure 79**Adding a person to a call**

- 1 You have answered a call from the ACD queue.
- 2 Press **Conference**.
- 3 Dial the number of the person to be added to the call.
OR
Press the appropriate Direct Station Select key.

The incoming call is put on hold.

You can consult with the person called when they answer.
- 4 Press **Conference** to link the conference.

- 5 You can repeat the process to add more people to the call.
OR
Press **RI**s to disconnect yourself from the call.
- 6 To talk with two people back and forth, press **Hold**, placing your second caller on hold, and press the ACD queue key to connect with your first caller. To connect to the second caller, press **Hold** and then press **Conference**.

End of Procedure

Direct Station Select (BFS)

Keys configured as Busy Forward Status (BFS) keys enable you to connect to an extension by a BFS key. The keys on the add-on module(s) work as Direct Station Select (DSS) keys.

Note: When you press a DSS key, it is important to remember that you need to press an extension (DN) key first.

Procedure 80 Making a Direct Station Select call

- 1 Press the **DN** key.
- 2 Press the DSS extension key.

End of Procedure

Directory Number (DN)

This key is used for internal calling or when required by one of the feature keys. For example, you use the DN key to retrieve a parked call. If you have a PBX system, this feature can be used for outgoing public network calls.

Note: To make outgoing calls from the CAP you must use the DN key. You cannot use the ACD queue to make outgoing calls, since it is only able to receive calls.

Procedure 81
Making an internal call

- 1** Lift the handset.
- 2** Press the **DN** key.
- 3** Dial the extension of the person that you want to call or press the DSS key.

End of Procedure

Display Queue (Disp Queue)

This key shows the number of calls in the queue, the number of staffed CAPs, and the waiting time of the oldest call in the queue. With this feature, the telephone does not have to be idle for you to display information. If the CAP is an M2616, you must have an ACD display, as a regular business display will not support this feature.

Note: To use this feature, the CAP must be programmed to have Supervisor (SPV) class of service. This is done in LD 11.

Procedure 82
Displaying CAP information

- 1** Press the **Disp Queue** key.
- 2** To remove information from the display, press the **Disp Queue** key again.

End of Procedure

Make Busy

This key allows the CAP to indicate that it is not staffed or cannot receive calls. When the CAP is in the Make Busy state, calls are directed to the programmed night call forward number for the CAP queue.

Procedure 83

Making the CAP appear busy

- 1 Press **Make Busy**.
OR
For an M2616 CAP, place the handset in the cradle or press the hookswitch.

The indicator comes on.
- 2 To cancel the Make Busy feature, press **Make Busy** again.

The indicator goes off.

End of Procedure

No Hold Conference (N. H. Conf)

This key allows you to add people to a conversation. The original party is **not** put on hold as others are added.

Procedure 84

Adding a person to a call

- 1 You have answered a call from the ACD queue.
 - 2 Press **N. H. Conf**.
 - 3 Dial the number of the person to be added to the call.
OR
Press the appropriate Direct Station Select key.

The incoming call is not put on hold. You do not hear the phone ringing and you can still talk to the caller.
 - 4 The called person answers and is automatically connected to the conversation.
 - 5 You can repeat the process to add more people to the call.
OR
Press the **Rls** key to disconnect yourself from the call.
- Note:** The maximum number of people that you can add to a conversation is four. This means that the total number of people in a conference, including the originator of the conference, cannot exceed six.

End of Procedure

Override

This key allows the CAP to “break in” to an established call. The priority level of the telephone involved in the call and the level of the CAP determine whether override is permitted.

Procedure 85

Overriding a busy signal and connecting to a call

- 1 You have dialed an internal call and received a busy signal.
- 2 Press **Override**.

You are now joined to the call in progress.

End of Procedure

Park

Since you cannot hold multiple calls on the ACD queue, a call can be parked in order to receive other calls. The parked call can be retrieved by the CAP or another telephone that has access to Call Park.

Note: To retrieve calls before the call timer expires, note the extension that the calls are parked on.

Procedure 86

Parking a call on the System Park extension

- 1 You are on a call.
- 2 Press **Park** twice.
- 3 Press **RI**s.

End of Procedure

Procedure 87

Parking a call on an extension other than the System Park extension

- 1 You are on a call.
- 2 Press **Park**.
- 3 Dial the extension number on which you want to park the call.

- 4 Press **Park** again.
- 5 Press **RI**s.

End of Procedure

Procedure 88
Retrieving a parked call

- 1 Press the **DN** key.
- 2 Dial the extension on which the call is parked if the call is parked on an extension other than the system call park number.

Note: Any telephone with access to Call Park can retrieve a call that is parked.

End of Procedure

Privacy Release (Priv RIs)

This key allows someone to join or pick up a call that is on a private line. This “added party” must have a telephone which shows the private line.

Procedure 89
Removing privacy from a line

- 1 You are on a call on a private line.
- 2 Press **Priv RI**s.

Any telephone that has access to this line can now join the conversation.
- 3 To disconnect yourself from the call once someone else has joined the conversation, press the **RI**s key.

End of Procedure

Program

This key allows you to change various display features. Data parameters such as transmission speed, parity, and terminal mode can also be changed if the CAP is equipped with an optional data adapter.

- Press **Program**.
- Use the volume control bar to scroll through the programmable features, and press the number associated with the feature you wish to program.
- Use the volume bar to adjust the feature you select.

The display features that can be programmed using this key are:

- Volume adjustment
- Predial recall
- Contrast adjustment
- Call timer enable
- Idle screen format
- Language selection
- Display diagnostics
- Key click

Transfer

This key is used to transfer a call to an extension without having to wait for the desired party to answer.

Procedure 90

Transferring a call without consultation

- 1 You have answered a call from the ACD queue.
- 2 Press **Transfer**.
- 3 Dial the desired number.
OR
Press the appropriate Direct Station Select key.

- 4 Press **Transfer** while you still hear the phone ringing. You are no longer connected to the call.
- 5 If the call is not answered or forwarded by the call forward feature, it rings back to the CAP telephone (programmable in LD 15).

End of Procedure

Procedure 91

Transferring a call with consultation

- 1 You have answered a call from the ACD queue.
- 2 Press **Transfer**.
- 3 Dial the desired number.
OR
Press the appropriate Direct Station Select key.
- 4 Wait until the call is answered.
The original call is put on hold.
- 5 Speak to the person called.
- 6 To return to the original caller without extending the call, press the ACD queue extension key.
- 7 To disconnect yourself from the call and connect the calling and called parties, press **Transfer** again.

End of Procedure

Other CAP features

Your CAP also supports other features, which are discussed in detail in this section.

Call Forward and Busy Status

The Call Forward and Busy Status (BFS) feature was designed for an environment where party A forwards their calls to party B, for screening.

Feature operation

By using a BFS key, party B can:

- monitor, activate or deactivate the Call Forward feature of party A
- override the Call Forward feature of party A, in order to place a call to party A
- determine whether party A is busy on a call

The BFS lamp state of party B indicates whether party A is:

- forwarded and not busy (lamp in “wink” state)
- forwarded and busy (lamp in “flash” state)
- not forwarded and not busy (lamp in “dark” state)
- not forwarded and busy (lamp in “lit” state)

If the customer associated with party A has Forward Key Denied Class of Service (FKD) defined in the customer data, party A’s Call Forward key becomes inoperative and party B’s BFS key will operate as follows when depressed:

- Party A has already been forwarded to another station by another BFS key, then party A remains forwarded to that station.
- Party A has been forwarded to a DN by a remote Flexible Feature Code, then the call forward is overridden and all new calls are forwarded to party B.

- Party A's calls were forwarded to party B, then party A's call forward is canceled.
- Party A's call forward is not activated, then party A's calls are forwarded to party B and the CFW lamp on party A's set lights up.

If the customer associated with Party A has Forward Key Allowed Class of Service (FKA), then depressing the BFS key by party B will result in one of the following:

- Party A has already been forwarded to a station other than station B, then party A remains forwarded to that station.
- Party A's calls are not forwarded, then party A's calls are forwarded to party B and the CFW lamp on party A's set lights up.
- Party A's calls were forwarded to party B, then party A's call forward is canceled.

Note: If party B presses the BFS key while receiving dial tone or special dial tone, the BFS key then works as an Auto Dial key to party A.

If a call originates to party A, a CAP set with the BFS key depressed, the call will automatically transfer to the designated Call Forward/Busy number, party B. If party B is in Call Forward state, the call will ring three times, then immediately transfer to party C.

In contrast, if a call originates to party A, a CAP set without the BFS key depressed, the call will automatically transfer to party C.

Feature requirements

Party B must have a Meridian Digital Telephone. Party A may have a Meridian Digital Telephone or an analog (500/2500-type) set, with Call Forward All Calls equipped.

A station may be monitored by a maximum of 16 other stations, using the BFS key.

The same feature requirements apply as for Call Forward All Calls.

Feature interactions

None.

Feature programming

To activate this feature, use the following task list in LD 11 and LD 15.

LD 11 – Configuring a BFS key

Prompt	Response	Description
REQ:	CHG	Modify existing data.
TYPE:	xxxx xxxx M	xxxx is one of 2006, 2008, 2616, 2216, 2317, 2009, M2016, 2018, 2112, 3000 Digital telephone. If the set type is followed by an “M” then the set definition is that of a model set.
MODL	xx	Prompted if “xxxx M” is entered in response to the “TYPE” prompt.
TN	c u	Not prompted if “xxxx M” is entered in response to the “TYPE” prompt.
...		
KEY	nn BFS cc uu	Key number nn = 0–69, Busy Forward Status, TN to be monitored/screened.

LD 15 – Configuring customer for Forward Key Allowed

Prompt	Response	Description
REQ:	CHG	Modify existing data.
TYPE:	FTR	Features and Options.
CUST	xx	Customer Number as defined in LD 15.
....
OPT	FKA	Forward Key Allowed.

Forced Camp-on/Priority Override

Forced Camp-on allows a station to “camp-on” to another party involved in an active call regardless of whether they have an internal or external call on hold. When used with Priority Override, the capability is called Enhanced Override. Forced Camp-on is activated automatically (if Automatic Forced Camp-on, AFCD, is defined for the customer) or manually using the Enhanced Override (**EOVR**) key on Meridian Digital Telephone sets, or the Enhanced Override Flexible Feature Code on analog (500/2500-type) sets. Associated with this feature are four new station Class Of Service entries:

- CPFD/CPFA — Forced camp-on from another set denied/allowed.
- CPTD/CPTA — Forced camp-on to another set denied/allowed.

These are used to identify the ability of a station to invoke the camp-on feature or to be camp-on by another station.

The Priority Override feature allows an established call to be broken into and another call presented to the desired party. Before break-in occurs, a warning tone is given to all parties involved in the established call. The set performing the override must have a priority level equal to or higher than both sets being overridden. To activate Priority Override, the user of an analog (500/2500-type) set must invoke a recall followed by the dialing of the Override Flexible Feature Code, while the user of a Meridian Digital Telephone presses the Override key (**OVR**). Priority Override can also be

activated using the Enhanced Override Flexible Feature Code or the Enhanced Override key (**EOVR**), as described in the preceding paragraph.

Associated with the Priority Override feature are seven priority levels which can be assigned to analog (500/2500-type) and Meridian Digital Telephones. This level defines the ability of one set to override another as follows:

- level 0 — This set cannot override and cannot be overridden.
- level 1 — This set cannot override but can be overridden.
- level 2 — This set can override level 1 and 2 sets and can be overridden by sets with priorities 2–7. (This is the default level.)
- level 3–6 — Similar to level 2 — Can override sets of equal or lesser priority level other than 0, and can be overridden by sets of greater or equal priority level.
- level 7 — Can override levels 1–7, but can only be overridden by another set of priority 7.

Note: Camp-on is not affected by the override levels.

A new Class Of Service (COS), named Override Denied/Allowed (OVRD/OVRA), has been introduced for stations which defines the ability of a station to use or be overridden by the Priority Override feature.

Feature operation

Several combinations of the Automatic Forced Camp-on and Priority Override features exist. Each combination provides the station with specific call scenarios. For this reason, they are detailed below.

Setting the Automatic Forced Camp-On (AFCO) prompt to “NO” in the customer data, and equipping only an **OVR** key or OVRD Flexible Feature Code disallows the use of forced camp-on. The Priority Override feature remains operational as described above.

Setting the Automatic Forced Camp-On (AFCO) prompt to “NO”, the priority level to “0”, and the camp-on classes of service to CPFA and CPTA gives only manual camp-on.

Setting the Automatic Forced Camp-On (AFCO) prompt to “NO”, and adding an **OVR** and **EOVR** key/FFC gives the user the option of using only Priority Override (**OVR** key/FFC) or using manual Forced Camp-on which is invoked by the first depression of the **EOVR** key/FFC, followed by Priority Override (second depression of the **EOVR** key/FFC).

Setting the Automatic Forced Camp-On (AFCO) prompt to “YES” and equipping only the **OVR** key/FFC automatically applies Forced Camp-on where applicable, and allows the use of the **OVR** key/FFC to implement Priority Override.

Using the **EOVR** key/FFC with AFCO set to “YES” simulates the **OVR** key/FFC and attempts a Priority Override, unless Automatic Forced Camp-on was initially denied. In this case, Forced Camp-on is reattempted.

Feature requirements

The Flexible Feature Code package (FFC) 139 and Multiple-Party Operation package (MPO) 141 must be equipped.

All stations involved in an established call being broken into must have Warning Tone Allowed Class of Service. Otherwise, both Priority Override and Forced Camp-on features are denied.

Priority Override and Forced Camp-on can operate independently of each other.

Priority Override and Forced Camp-on cannot be applied to telephones involved in any of the following:

- a non-established call
- a conference call
- an attendant call
- a Release Link attendant call
- an attendant call through a Centralized Attendant Service or Primary Rate Access/Integrated Services Digital Network trunk
- an ACD call
- a data call

- a parked call
- a call-waiting call
- a held call
- an operator callback or toll operator break-in call
- Make Set Busy active
- Do Not Disturb active

External trunks cannot perform priority override. They can be overridden only if they are the undesired party of an established call being broken into.

Feature interactions

Multiple-Party Operation: When a consultation call is made on a set equipped with Priority Override, a control digit has to be dialed from the set to perform a recall and return the call on hold.

Override: Priority Override, when activated, replaces normal Override.

Digit Display: Once Priority Override has been performed on a set, its digit display shows the DN of the overriding set.

Feature programming

To activate this feature, use the following task list in LD 10, LD 11, LD 14, LD 15, LD 16, and LD 57.

LD 10 – Configuring Forward Camp-on/Priority Override on a set

Prompt	Response	Description
REQ:	CHG	Modify the existing data.
TYPE:	500	500/2500 telephone data block.
	500 M	Model set.
MODL	xx	Only prompted if “xxx M” is entered in response to the “TYPE” prompt.
TN	c u	Not prompted if “500 M” is entered in response to the “TYPE” prompt.
....		
CLS	CPFA	Forced Camp-on from another set allowed.
	CPTA	Forced Camp-on to another set allowed.
	WTA	Warning Tone allowed.
....		
PLEV	0-(2)-7	<p>Priority Level.</p> <p>2 = set can override sets of level 1 and 2, and can be overridden by sets of level 2–7.</p> <p>Note: Prompted when POVR package is equipped.</p>

LD 11 – Configuring Forward Camp-on/Priority Override on a set

Prompt	Response	Description
REQ:	CHG	Modify existing data.
TYPE:	xxxx	xxxx is one of 2006, 2008, 2616, 2216, 2317, 2009, M2016, 2018, 2112, 3000 Digital telephone.
	xxxx M	Model set.
MODL	xx	Only prompted if “xxxx M” is entered in response to the “TYPE” prompt.
TN	c u	Not prompted if “xxxx M” is entered in response to the “TYPE” prompt.
....		
CLS	CPFA	Forced Camp-on from another set allowed.
	CPTA	Forced Camp-on to another set allowed.
	WTA	Warning Tone allowed.
....		
PLEV	0-(2)-7	Priority Level. 2 = set can override sets of level 1 and 2, and can be overridden by sets of level 2–7. Prompted when POVR package is equipped.
KEY	xx OVR	Key number, override.
	xx EOVR	Key number, enhanced override.

LD 14 – Configuring Warning Tone Allowed

Prompt	Response	Description
REQ	CHG	Modify existing data.
TYPE	aaa	Trunk type.
....		
CLS	WTA	Warning Tone allowed.

LD 15 – Configuring Multi Party Operations

Prompt	Response	Description
REQ:	CHG	Modify existing data.
TYPE:	MPO	Multi Party Operations data block.
CUST	0–31	Customer Number.
....		
AFCO	YES	Automatic Forced Camp-on. Prompted when the POVR package is equipped.

LD 16 – Configuring Priority Level in route data

Prompt	Response	Description
REQ	CHG	Modify existing data.
TYPE	RDB	Route data block.
CUST	xx	As defined in LD 15.
DMODL	1–127	Default model number for this route.
ROUT	0–127	Route Number.
TKTP	xxx	Trunk data block.
....		
PLEV	0-(2)-7	Priority Level. 2 = set can override sets of level 1 and 2, and can be overridden by sets of level 2–7. Prompted when POVR package is equipped.

LD 57 – Configuring Flexible Feature Codes

Prompt	Response	Description
REQ	NEW	Add new data to the system.
	CHG	Modify existing data.
....		
	EOVR	Enhanced Override FFC.
	OVRD	Override/Priority Override.

Appendix A: Communications protocol specifications

Contents

This section contains information on the following topics:

Introduction	559
XModem protocol specifications	559
CRC protocol specifications	560

Introduction

The protocol specifications information given in this chapter is intended to assist those who wish to create a personal communications software package that is compatible with the protocols used by the SDI port in the Small System.

XModem protocol specifications

Note: Not all XModem CRC protocols are identical. Some may not operate properly with the CCBR feature. Ensure that your communications package complies to the protocol specifications outlined in this chapter.

XModem transmission medium level protocol is asynchronous, 8 data bits no parity, one stop bit. It allows the sending of all types of data including binary, which is the data type used with the Customer Configuration Backup and Restore (CCBR) feature.

The following definitions apply to XModem protocol:

<soh>01H
<eot>04H
<ack>06H
<nak>15H
<C>43H

This protocol does not restrict the contents of data sent. Control characters are not processed in the 128-byte data messages (they are handled the same as other characters).

CRC protocol specifications

The Cyclic Redundancy Check (CRC) protocol is a form of block check which provides more robust error detection than the original checksum. The CRC-CCITT used by the modem protocol detects all single- and double-bit errors, all errors with an odd number of bits, all burst errors of length 16 or less, 99.97% of 17-bit error bursts, and 99.98% of 18-bit and longer bursts.

Each block of the transfer in CRC mode looks like:

<soh><blk #><255-blk #><--128 data bytes--><CRC hi><CRC lo>

in which:

<soh>= 01 hex
<blk #>= binary number, starts at 01 increments by 1, and wraps OFFH to 00H (not 01)
<255-blk #>= ones complement of blk #
<CRC hi>= byte containing the 8 hi order coefficients of the CRC
<CRC lo>= byte containing the 8 lo order coefficients of the CRC

CRC Calculation

To calculate the 16-bit CRC, the message bits are considered to be the coefficients of a polynomial. This message polynomial is first multiplied by X^{16} and then divided by the generator polynomial ($X^{16} + X^{12} + X^5 + 1$) using modulo 2 arithmetic. The remainder left after the division is the desired CRC. Since a message block in the Modem Protocol is 128 bytes or 1024 bits, the

message polynomial will be to the order of X^{1023} . The hi order bit of the first byte of the message block is the coefficient of X^{1023} in the message polynomial. The lo order bit of the last byte of the message is the coefficient of X^0 in the message polynomial.

Example:

```
/* update CRC */
unsigned short
updcrc(c, crc)
register c;

register unsigned crc;
{
    register count;

    for (count=8; --count>=0;) {
        if (crc & 0x8000) {
            crc <<= 1;
            crc += (((c<<=1) & 0400)!= 0);
            crc ^= 0x1021;
        }
        else {
            crc <<= 1;
            crc += (((c<<=1) & 0400)!= 0);
        }
    }
    return crc;
}
```

A receiving program that wishes to receive in CRC mode implements the mode setting handshake by sending a <C>. After the receiver has sent the <C> it waits up to 3 seconds for the <soh> that starts the first block. If no <soh> is received within 3 seconds, the receiver will resend a <C>. After the mode has been sent by the initial <C> the protocol follows the flow shown in the following example.

Example

This flow example shows a case where the receiver requests transmission in the CRC mode and the sender supports the CRC option. The example includes various transmission errors. <xxxx> represents 2 CRC bytes.

SENDERRECEIVER

```
<---<C>
times out after 3.4 seconds,
<---<C>
times out after 3.4 seconds,
<---<C>
times out after 3.4 seconds,
<---<C>
times out after 3.4 seconds,
<---<C>
<soh> 01 FE -data- <xxxx>--->
<---<ack>
<soh> 02 FD -data- <xxxx> --->(data gets line hit)
<---<nak>
<soh> 02 FD -data- <xxxx>--->
<---<ack>
<soh> 03 FC -data- <xxxx>--->
(ack gets garbage)<---<ack>
times out after 6.8 seconds
<---<nak>
<soh> 03 FC -data- <xxxx>--->
<---<ack>
<eot> --->
<---<ack>
```


Meridian 1, Succession 1000M

Small System

Installation and Configuration

Copyright © 2003 Nortel Networks

All Rights Reserved

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules, and the radio interference regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

SL-1, Meridian 1, and Succession are trademarks of Nortel Networks.

Publication number: 553-3011-210

Document release: Standard 1.00

Date: October 2003

Produced in Canada

