

Feature Operation

| Auto Dial | | | |
|---------------------------|----------|----------|-----------|
| store | AutoDial | | ▶AutoDial |
| use | | AutoDial | |
| display | Display | AutoDial | |
| Hold | | | |
| place a call on hold | | | |
| return to a held call | | | |
| Transfer | Trans | | ▶Trans |
| Handsfree (if configured) | | | |
| | | | |
| switch to handset | | | |
| handset to handsfree | | | |
| Mute (On/Off) | | | |
| Corporate directory | | | |
| Shift | | | |
| Conference | Conf | | ▶Conf |
| Last Number Redial | | | |
| Ring Again | | | |
| activate | RingAgn | | |
| when notified | | ▶RingAg | |
| Quit | ▶RingAg | | |
| Call Forward | | | |
| activate | Forward | | ▶Forwar |
| Quit | ▶Forwar | | |
| reinstate | Forward | ▶Forwar | |
| view number | Display | ▶Forwar | |
| Call Pickup | | Pickup | |
| Call Waiting | | | |
| answer | | ▶CWait | |
| return to first call | | | |
| Message | | | |

Explanations


| Legend | |
|--------|---|
| | Lift the handset, or press the DN key, or press the Hands-free key. |
| | Replace handset, or press to end the call. |
| | Dial a number. |



| | |
|---------|---|
| | Press the line (DN) key. |
| ▶AutoDI | The ▶ flashes when a feature is being programmed. The ▶ lights steadily when a feature is active. |

Your i2004 Telephone Option Menu

Services Menu

Access the Services Menu



 / 

Select



The Services menu contains the Telephone Option, Virtual Office, and Branch Office menus (if Virtual Office and Branch Office have been configured for your telephone).

Telephone Option

Volume adjustment

Ringer

Select

 / 



Select

Quit

Quit

Handset Listen

Select

 / 



Select

Quit

Quit

Handsfree Listen

Select

 / 



Select

Quit

Quit

Headset Listen

Select

 / 



Select

Quit

Quit

Buzzer

Select



 / 

Select

Quit

Quit



Contrast adjustment

 / 

Select

Quit

Language



 / 

Select

Select

Quit



Date/time format

 / 

Select



Quit

Display diagnostics

 / 

Quit



Key click enable

 / 

Select

Quit

Ring type



 / 

Play

Select

Quit



Call timer

 / 

Select

Quit

OnHook Default Path

 / 

Select

Quit

Set Feature Key label

Feature Key

Enter new label

Select

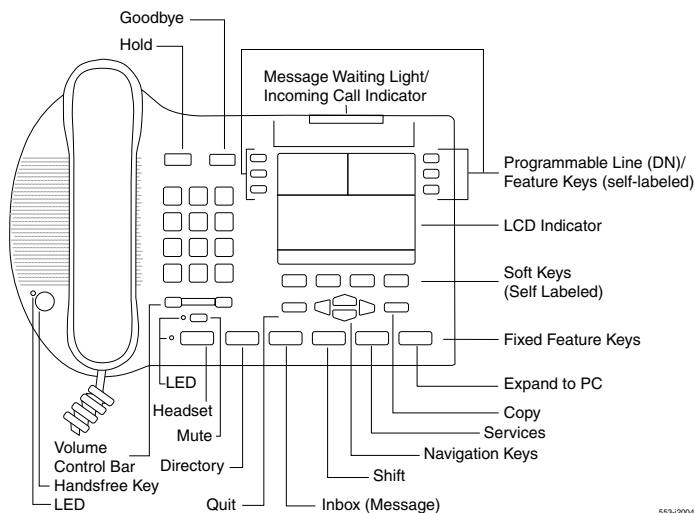
Delete

Clear

More..

For additional information on the operation of your internet telephone, please consult the *i2004 Internet Telephone User Guide*.

Introducing the i2004 Internet Telephone



553-i2004

NORTEL
NETWORKS

i2004 Internet Telephone

For Meridian 1 and Succession
Communication Server for Enterprise 1000

Quick Reference Card

