

---

**Meridian 1**  
**Succession 1000**  
**Succession 1000M**  
Succession 3.0 Software

---

# Software Input/Output Administration

Document Number: 553-3001-311  
Document Release: Standard 11.00  
Date: October 2003

---

Copyright © 1995–2003 Nortel Networks  
All Rights Reserved

Produced in Canada

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules, and the radio interference regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

SL-1, Meridian 1, and Succession are trademarks of Nortel Networks. Intel and Pentium are trademarks of Intel Corporation. cPCI is a trademark of PCI Industrial Computer Manufacturers Group.

---



---

## Revision history

---

**October 2003**

Standard 11.00. This document is up-issued to support Succession 3.0 Software.

**November 2002**

Standard 10.00. This document is up-issued to include content changes for Meridian 1 Release 25.4x and Succession Communication Server for Enterprise 1000, Release 2.0.

**January 2002**

Standard 9.00. This is a global document and is up-issued for Release 25.40.

**December 2000**

Standard 8.00. This document is up-issued for X11 Release 25.3x and now contains information on Small System IP Expansion.

**April 2000**

Standard 7.00. This is a global document and is up-issued for X11 Release 25.0x. Document changes include removal of: redundant content; references to equipment types except Options 11C, 51C, 61C and 81C; and references to previous software releases.

**June 1999**

Standard 6.00. This document is up-issued to include updates and changes required for X11 Release 24.2x.

**March 1999**

Standard 5.00. This document is up-issued to include updates and changes required for X11 Release 24.0x.

**October 1997**

Standard 4.00. This document is up-issued to include updates and changes required for X11 Release 23.0x.

**April 1996**

Standard 3.00. This document is up-issued to include updates and changes required for X11 Release 22.0x.

**December 1995**

Standard 2.00. This document is up-issued to include updates and changes required for X11 Release 21.1x.

**July 1995**

Standard 1.00. This document is issued to include updates and changes required for X11 Release 21.0x. This document has the new NTP number 553-3001-311 and replaces NTP 553-2311-311.

---

# Contents

---

<b>About this document</b> .....	<b>13</b>
Subject .....	13
Applicable systems .....	16
Intended audience .....	18
Conventions .....	18
Related information .....	21
<b>Communicating with the system</b> .....	<b>23</b>
Accessing the system .....	24
Preview of overlay content .....	30
System Lookup messages .....	31
Multi-User Login .....	31
Maintenance display codes .....	32
Time and date of fault .....	33
<b>Alphabetical list of packages</b> .....	<b>35</b>
<b>Numerical list of packages</b> .....	<b>47</b>
<b>Overlay loader and Multi-User Login</b> .....	<b>59</b>
<b>LD 02: Traffic</b> .....	<b>63</b>
Basic commands .....	63
How to use traffic commands .....	65
Print alarm and exception filter summary .....	78

<b>LD 10: Analog (500/2500) Telephone Administration</b> .....	<b>79</b>
Prompts and responses .....	81
Prompts and responses by task .....	84
Alphabetical list of prompts .....	89
<b>LD 11: Digital Telephone Administration</b> .....	<b>121</b>
Prompts and responses .....	123
Prompts and responses by task .....	128
Alphabetical list of prompts .....	138
<b>LD 12: Attendant Consoles</b> .....	<b>211</b>
Prompts and responses .....	212
Alphabetical list of prompts .....	213
<b>LD 13: Digitone Receivers, Tone Detectors, Multifrequency Senders and Receivers</b> .....	<b>223</b>
Prompts and responses .....	224
Alphabetical list of prompts .....	225
<b>LD 14: Trunk Data Block</b> .....	<b>229</b>
Prompts and responses .....	230
Alphabetical list of prompts .....	233
<b>LD 15: Customer Data Block</b> .....	<b>261</b>
Prompts and responses .....	262
Data Block: AML (Application Module Link) .....	266
Data Block: ANI (Automatic Number Identification) .....	266
Data Block: ATT (Attendant Consoles) .....	268
Data Block: AWU (Automatic Wake Up Data) .....	270
Data Block: CAS (Centralized Attendant Service Data) .....	271
Data Block: CCS (Controlled Class of Service) .....	271

---

Data Block: CDR (Call Detail Recording) . . . . .	272
Data Block: FCR (Flexible Code Restriction) . . . . .	273
Data Block: FFC (Flexible Feature Codes) . . . . .	274
Data Block: FTR (Features and options) . . . . .	274
Data Block: HSP (Hospitality Management) . . . . .	278
Data Block: ICP (Intercept Computer Update) . . . . .	279
Data Block: IMS (Integrated Message Service) . . . . .	280
Data Block: INT (Intercept Treatments) . . . . .	280
Data Block: LDN (Listed Directory Numbers) . . . . .	282
Data Block: MON (Set-based Monitoring) . . . . .	283
Data Block: MPO (Multi-Party Operations) . . . . .	284
Data Block: NET (Networking) . . . . .	284
Data Block: NIT (Night Service) . . . . .	288
Data Block: OAS (Off Hook Alarm Security) . . . . .	288
Data Block: PPM (Periodic Pulse Metering) . . . . .	289
Data Block: PWD (Password) . . . . .	290
Data Block: RDR (Call Redirection) . . . . .	290
Data Block: ROA (Recorded Overflow Announcement) . . . . .	292
Data Block: TIM (Timers) . . . . .	292
Data Block: TST (Test lines) . . . . .	293
Alphabetical list of prompts . . . . .	294
<b>LD 16: Route Data Block, Automatic Trunk Maintenance . . . . .</b>	<b>381</b>
Prompts and responses . . . . .	382
Alphabetical list of prompts . . . . .	400
<b>LD 17: Configuration Record 1 . . . . .</b>	<b>475</b>
Prompts and responses . . . . .	477
ROLR / TOLR / AOLR Offsets and Values . . . . .	493
HRLR / HTLR Offsets and Values . . . . .	494

Alphabetical list of prompts . . . . .	495
<b>LD 18: Speed/Group Call, Pretranslation, Special Service, 16-Button DTMF and Hotline . . . . .</b>	<b>563</b>
Prompts and responses . . . . .	564
Flexible feature code information . . . . .	570
Alphabetical list of prompts . . . . .	573
<b>LD 19: Code Restriction . . . . .</b>	<b>581</b>
Prompts and responses . . . . .	582
Alphabetical list of prompts . . . . .	585
<b>LD 20-22: Print Reports Guide . . . . .</b>	<b>591</b>
<b>LD 20: Print Routine 1 . . . . .</b>	<b>597</b>
Prompts and responses . . . . .	599
Alphabetical list of print reports . . . . .	600
Alphabetical list of prompts . . . . .	619
<b>LD 21: Print Routine 2 . . . . .</b>	<b>633</b>
Prompts and responses . . . . .	634
Alphabetical list of print reports . . . . .	635
Alphabetical list of prompts . . . . .	644
<b>LD 22: Print Routine 3 . . . . .</b>	<b>649</b>
Prompts and responses . . . . .	650
Alphabetical list of prompts . . . . .	656
<b>LD 23: Automatic Call Distribution, Management Reports, Message Center . . . . .</b>	<b>665</b>
Prompts and responses . . . . .	666
Prompts and responses by data block . . . . .	670
Alphabetical list of prompts . . . . .	674

<b>LD 24: Direct Inward System Access</b> . . . . .	<b>697</b>
Prompts and responses by gate opener . . . . .	698
Prompts and responses . . . . .	699
Alphabetical list of prompts . . . . .	700
<b>LD 25: Move Data Blocks</b> . . . . .	<b>705</b>
Prompts and responses . . . . .	706
Move and swap rules . . . . .	707
Alphabetical list of prompts . . . . .	708
<b>LD 26: Group Do Not Disturb</b> . . . . .	<b>713</b>
Prompts and responses . . . . .	714
Alphabetical list of prompts . . . . .	715
<b>LD 27: ISDN Basic Rate Interface (BRI)</b>	
<b>Administration</b> . . . . .	<b>717</b>
Prompts and responses . . . . .	718
Alphabetical list of prompts . . . . .	729
<b>LD 28: Route Selection for Automatic</b>	
<b>Number Identification</b> . . . . .	<b>751</b>
Prompts and responses . . . . .	752
Alphabetical list of prompts . . . . .	753
<b>LD 29: Memory Management</b> . . . . .	<b>755</b>
Prompts and responses . . . . .	756
Alphabetical list of prompts . . . . .	757
<b>LD 49: New Flexible Code Restriction</b>	
<b>and Incoming Digit Conversion</b> . . . . .	<b>763</b>
Prompts and responses . . . . .	764
Alphabetical list of prompts . . . . .	765

<b>LD 50: Call Park and Modular Telephone Relocation</b> .....	<b>769</b>
Prompts and responses .....	770
Alphabetical list of prompts .....	772
<b>LD 52: 2.0 Mb/s Remote Peripheral Equipment</b> .....	<b>775</b>
Prompts and responses .....	776
Alphabetical list of prompts .....	779
<b>LD 56: Flexible Tones and Cadences</b> .....	<b>783</b>
What are tones and cadences? .....	783
Flexible Tone and Cadence (FTC) tables .....	784
Master Cadence (MCAD) table .....	784
Firmware Cadence (FCAD) table .....	786
TDS and NT8D17 Conference/TDS/MFS cards .....	787
Time interval for Call Forward .....	788
Installing FTC .....	789
Prompts and responses .....	792
Default Master Cadence (MCAD) tables .....	808
Default Firmware Cadence (FCAD) tables .....	809
Alphabetical list of prompts .....	813
<b>LD 57: Flexible Feature Codes</b> .....	<b>829</b>
Prompts and responses .....	830
Alphabetical list of prompts .....	838
<b>LD 58: Radio Paging</b> .....	<b>847</b>
Prompts and responses .....	848
Alphabetical List of Prompts .....	851
<b>LD 73: Digital Trunk Interface</b> .....	<b>857</b>
Prompts and responses .....	858

---

Prompts and responses by data block .....	859
Prompts and responses for setting pad values .....	865
Signaling category assignment and modification .....	872
Prompts and responses for ABCD signaling category .....	875
Alphabetical list of prompts .....	882
<b>LD 74: Digital Private Network Signaling System Link .....</b>	<b>915</b>
Prompts and responses .....	916
Alphabetical list of prompts .....	917
<b>LD 79: Virtual Network Service .....</b>	<b>921</b>
Prompts and responses .....	922
Alphabetical list of prompts .....	923
<b>LD 81: Features and Station Print .....</b>	<b>925</b>
Prompts and responses .....	926
Alphabetical list of prompts .....	927
<b>LD 82: Print Hunt Chain, Multiple Appearance Group .....</b>	<b>945</b>
Prompts and responses .....	946
Alphabetical list of prompts .....	947
<b>LD 83: Terminal Number Sort and Print .....</b>	<b>949</b>
Prompts and responses .....	950
Alphabetical list of prompts .....	951
<b>LD 84, 85: Set Designation Entry (ODAS) .....</b>	<b>953</b>
Prompts and responses .....	954
Alphabetical list of prompts .....	954
<b>LD 86: Electronic Switched Network 1 .....</b>	<b>955</b>
Prompts and responses .....	956

Alphabetical list of prompts . . . . .	961
<b>LD 87: Electronic Switched Network 2 . . . . .</b>	<b>971</b>
Prompts and responses . . . . .	972
Alphabetical list of prompts . . . . .	976
<b>LD 88: Authorization Code . . . . .</b>	<b>983</b>
Prompts and responses . . . . .	984
Alphabetical list of prompts . . . . .	987
<b>LD 90: Electronic Switched Network 3 . . . . .</b>	<b>991</b>
Prompts and responses . . . . .	992
Alphabetical list of prompts . . . . .	998
<b>LD 93: Multi-Tenant Service . . . . .</b>	<b>1007</b>
Prompts and responses . . . . .	1008
Alphabetical list of prompts . . . . .	1010
<b>LD 94: Multifrequency Signaling . . . . .</b>	<b>1019</b>
Prompts and responses . . . . .	1021
Alphabetical list of prompts . . . . .	1043
<b>LD 95: Call Party Name Display . . . . .</b>	<b>1047</b>
Prompts and responses . . . . .	1048
Alphabetical list of prompts . . . . .	1052
<b>LD 97: Configuration Record 2 . . . . .</b>	<b>1057</b>
Prompts and responses . . . . .	1058
Alphabetical list of prompts . . . . .	1070
<b>Index of prompts . . . . .</b>	<b>1097</b>

---

## About this document

---

This document is a global document. Contact your system supplier or your Nortel Networks representative to verify that the hardware and software described are supported in your area.

## Subject

The system uses a prompt-response system for switch configuration and alteration. When the data administrator loads an Administration Overlay into memory on a Terminal, the switch outputs a prompt. The data administrator is then able to type a response to answer that prompt. If the response is valid, the program outputs the next prompt. If the response is invalid, an SCHxxxx message is output.

To configure or change a feature, the data administrator may have to respond specifically to several prompts. This Data Administration NTP documents input and output in the Meridian 1, Succession 1000, and Succession 1000M prompt-response system. (The term “overlay” is synonymous with the terms “load” and “overlay program”.)

### Format and structure

This NTP presents only data administration overlays and text supplementary to these overlays. Overlay programs are identified by LD XX or XXX where XX or XXX is the load number. Administration overlays are arranged in numerical order and appear in this NTP as separate modules.

Two general table types appear in each Load. The first table type is the *Prompts and responses* table. It appears at the front of each load and often follows introductory text. The second general table concludes each Administration Load and is titled *Alphabetical list of prompts*.

### The *Prompts and responses* table

Many *Prompts and responses* tables present a complete list of an overlays prompts. When this is the case, they are simply titled *Prompts and responses*. Other *Prompts and responses* tables present only a subset of an overlays prompts. These tables present a list of prompts associated with a given data block, task, or feature.

In some Overlays, the complete prompt list as well as several prompt sublists are presented in a *Prompts and responses* section. Overlays which feature multiple *Prompts and responses* tables begin with a *Contents* box to help you find a particular prompt listing.

All *Prompts and responses* tables list prompts in the order in which they are output in each overlay. Acceptable responses or response variables are listed beside each prompt. A brief explanation of the prompt is provided in a *Comment* column. Subprompts (prompts which are indented with a hyphen) also appear in the *Prompts and responses* table. To have subprompts appear on the TTY, the data administrator must enter specific responses at the previous non-indented prompt. Shown below is an excerpt from a *Prompts and responses* table.

Prompt	Response	Comment
REQ	aaa	Request
TYPE	aaa	Type of data block
TN	l s c u	Terminal Number
CDEN	SD, DD	Card Density

Note that in a *Prompts and responses* table:

- 1 Responses are often left as generic variables.
- 2 The comment entry is typically brief and explains the prompt.

### The *Alphabetical list of prompts* table

This table provides a more detailed description of a response. Shown below is an excerpt from Overlay 14 *Alphabetical list of prompts* table:

Prompt	Response	Comment	Package Release
REQ	CHG END	Request Change existing data Exit overlay program	basic-1
TN	I ch	Terminal Number for digital trunks when TYPE = RDC or VDC:  I = 0-159, Large System I = 0-255: loops, Systems with Fibre Network Fabric I = 1-9 Option 11C I = 1-9, 11-19, 21-29, 31-39, 41-49, Option 11C with Survivable IP I = 11-14, 21-24, 31-34, 41-44 for Succession 1000 ch = channel 1-24 for 1.5 Mb/s DTI/PRI or 1-30 for 2.0 Mb/s DTI/PRI.	fnf-25  sipe-25 basic-1

Note that in an *Alphabetical list of prompts* table:

- 1 Responses are actual alternatives and not generic variables.
- 2 The comment entry is often expansive and may explain the prompt, the response, or both.

- 3 The package and release column provides the mnemonic of the package that must be equipped on the switch in order to receive this prompt. (In this example, the “basic” package must be equipped to view REQ.) The number following the hyphen (“1” in this example) denotes the Release of software in which the package was made available. When there are two or more entries in the package and release column for a prompt, the Comment column provides clarification. In the example, the prompt TN has multiple entries for package and release. The Large System opposite the “fnf-25” entry in the Package Release column indicates that the Fibre Network Fabric package does not apply for small systems. The second “basic-1” entry in the Package Release column is applicable to the Succession 1000 system.

### Feature Packages

A listing of Feature Packages appears twice in this NTP. An alphabetical listing (sorted by Package mnemonic) of Feature Packages can be found on page 35. A numerical listing (sorted by Package number) of Feature Packages can be found on page 47.

### Note on legacy products and releases

This NTP contains information about systems, components, and features that are compatible with Succession 3.0 Software. For more information on legacy products and releases, click the **Technical Documentation** link under **Support** on the Nortel Networks home page:

<http://www.nortelnetworks.com/>

## Applicable systems

This document applies to the following systems:

- Meridian 1 Option 11C Chassis
- Meridian 1 Option 11C Cabinet
- Meridian 1 Option 51C
- Meridian 1 Option 61
- Meridian 1 Option 61C
- Meridian 1 Option 61C CP PII

- Meridian 1 Option 81
- Meridian 1 Option 81C
- Meridian 1 Option 81C CP PII
- Succession 1000
- Succession 1000M Chassis
- Succession 1000M Cabinet
- Succession 1000M Half Group
- Succession 1000M Single Group
- Succession 1000M Multi Group

Note that memory upgrades may be required to run Succession 3.0 Software on CP3 or CP4 systems (Options 51C, 61, 61C, 81, 81C).

### **System migration**

When particular Meridian 1 systems are upgraded to run Succession 3.0 Software and configured to include a Succession Signaling Server, they become Succession 1000M systems. Table 1 lists each Meridian 1 system that supports an upgrade path to a Succession 1000M system.

**Table 1**  
**Meridian 1 systems to Succession 1000M systems (Part 1 of 2)**

<b>This Meridian 1 system...</b>	<b>Maps to this Succession 1000M system</b>
Meridian 1 Option 11C Chassis	Succession 1000M Chassis
Meridian 1 Option 11C Cabinet	Succession 1000M Cabinet
Meridian 1 Option 51C	Succession 1000M Half Group
Meridian 1 Option 61	Succession 1000M Single Group
Meridian 1 Option 61C	Succession 1000M Single Group
Meridian 1 Option 61C CP PII	Succession 1000M Single Group
Meridian 1 Option 81	Succession 1000M Multi Group

**Table 1**  
**Meridian 1 systems to Succession 1000M systems (Part 2 of 2)**

<b>This Meridian 1 system...</b>	<b>Maps to this Succession 1000M system</b>
Meridian 1 Option 81C	Succession 1000M Multi Group
Meridian 1 Option 81C CP PII	Succession 1000M Multi Group

Note the following:

- When an Option 11C Mini system is upgraded to run Succession 3.0 Software, that system becomes a Meridian 1 Option 11C Chassis.
- When an Option 11C system is upgraded to run Succession 3.0 Software, that system becomes a Meridian 1 Option 11C Cabinet.

For more information, see one or more of the following NTPs:

- *Small System: Upgrade Procedures (553-3011-258)*
- *Large System: Upgrade Procedures (553-3021-258)*
- *Succession 1000 System: Upgrade Procedures (553-3031-258)*

## Intended audience

This document is intended for individuals responsible for the maintenance of *Succession 1000M*, *Succession 1000*, and *Meridian 1* systems.

## Conventions

### Terminology

In this document, the following systems are referred to generically as “system”:

- Meridian 1
- Succession 1000
- Succession 1000M

The following systems are referred to generically as “Small System”:

- Succession 1000M Chassis
- Succession 1000M Cabinet
- Meridian 1 Option 11C Chassis
- Meridian 1 Option 11C Cabinet

The following systems are referred to generically as “Large System”:

- Meridian 1 Option 51C
- Meridian 1 Option 61
- Meridian 1 Option 61C
- Meridian 1 Option 61C CP PII
- Meridian 1 Option 81
- Meridian 1 Option 81C
- Meridian 1 Option 81C CP PII
- Succession 1000M Half Group
- Succession 1000M Single Group
- Succession 1000M Multi Group

The call processor in Succession 1000 and Succession 1000M systems is referred to as the “Succession Call Server”.

## **Notational conventions**

- Both upper and lower case are used in this book to distinguish between Prompts, Commands, and Variables.
- Lowercase variables are used in this book to represent many possible responses. The following table lists a few key variables which appear throughout this NTP.

Variable	Meaning
<b>a</b>	Alphabetic characters
<b>#</b>	Alphanumeric characters
<b>x</b>	Numeric characters
<b>c</b>	Customer Number
<b>c (u)</b>	Small System and Succession 1000 Terminal Number (TN) Card, Unit; where unit is optional
<b>c u</b>	Small System and Succession 1000 Terminal Number (TN) Card and Unit
<b>c 0 0 u</b>	Terminal Number (TN) for Small System and Succession 1000. A TN consists of a card, two filler digits, and a unit.
<b>dn</b>	Directory Number (DN)
<b>hh mm</b>	Hours (0 - 23) and Minutes (00 - 59)
<b>loop</b>	Network Loop Number (0-159)
<b>l s c (u)</b>	Large System Terminal Number (TN), Loop, Shelf, Card, Unit; where unit is optional
<b>l s c u</b>	Large System Terminal Number (TN) (loop, shelf, card, and unit number)
<b>mmm</b>	Month (JAN - DEC) when used in a date.
<b>nnn xxx</b>	Numeric characters
<b>xxx</b>	Numeric value of set number of digits
<b>x...x</b>	Numeric value of several digits
<b>yy mm dd</b>	Year (00 - 99), Month (1 - 12) and Day (1 - 31)

- **<cr>** denotes that the carriage return key is to be depressed without inputting any data. The carriage return leaves the existing value unchanged, or enters the default value if there is no existing value.
- **<space>** denotes that the space bar is to be depressed instead of **<cr>**.
- **<value>** denotes a variable value, generally for a prompt response.
- For example, **<NIPN>** is the value responded to the NIPN prompt and **<min>** is a minimum value.
- Default values are shown in parentheses.

- A range of numbers is denoted by giving the lower and upper limits of the range. For example, given the range **0 - (2) - 3**, the user may manually enter 0, 1, 2, or 3, or carriage return (press **<cr>**) to enter the default of 2.
- Default values are shown in brackets in the response column where applicable. Pressing **<cr>** enters the default.
- Where applicable, precede an entry with an **X** to delete that entry or set your entry to default value.

## Related information

This section lists information sources that relate to this document.

### NTPs

The following NTPs are referenced in this document:

- *Features and Services (553-3001-306)*  
(contains information on features and the testing of features and services for telephone sets and attendant (ATT) consoles)
- *Software Input/Output: System Messages (553-3001-411)*  
(contains information on system error messages)
- *Software Input/Output: Maintenance (553-3001-511)*  
(contains information on Maintenance overlay programs)

### Online

To access Nortel Networks documentation online, click the **Technical Documentation** link under **Support** on the Nortel Networks home page:

<http://www.nortelnetworks.com/>

### CD-ROM

To obtain Nortel Networks documentation on CD-ROM, contact your Nortel Networks customer representative.



---

## Communicating with the system

---

To communicate with the system, the following input/output devices at either on-site (local) or remote locations are required:

- TTY or VDT terminal as an input/output device
- RS-232-C compatible printer as an output only device
- Maintenance telephone set as an input only device
- Element Manager for Succession 1000 and Succession 1000M
- Optivity Telephony Manager (OTM)

The input/output system can operate with terminals having the following characteristics:

- Interface: RS-232-C
- Code: ASCII
- Speed: 110, 300, 1200, 2400, 4800, and 9600 baud
- Loop Current: 20 mA

# Accessing the system

## Logging in and out

When you access the system through a system terminal, a login procedure is required (refer to Procedure 1). All system passwords are initially set as 0000, but you can change passwords through the Configuration Record (LD 17). See also “Limited Access to Overlays” in the *Features and Services* (553-3001-306).

- **Level 1 password.** This general password is used in the log in sequence to provide general access to the system by service personnel. Once the system is accessed, the service personnel may then perform any necessary administration or maintenance tasks.
- **Level 2 password.** This administrative password is known and used only by the data administration manager. The password is used to protect the system configuration record and is required when using LD 17 to change either the general or the administrative passwords.


## Local and remote access

Input/output terminals may operate either locally or remotely. However, data modems are required for terminals located more than 50 feet (15 meters) from the central control interface. Both local and remote terminals interface with the system through Serial Data Interface (SDI) packs.

Many devices can be installed at local and remote locations. When a system terminal is installed locally, it is connected directly to a SDI Card. When a system terminal is installed at a remote location, modems (or data sets) and a telephone line are required between the terminal and the SDI card. Figure 1, “Local and remote access to a system terminal” on page 25, shows typical system terminal configurations.

Multiple devices can simultaneously communicate with the Meridian 1 if Multi User Login is enabled. Refer to the *System Management* (553-3001-300) for details regarding the Multi User Login Feature.

**Figure 1**  
**Local and remote access to a system terminal**

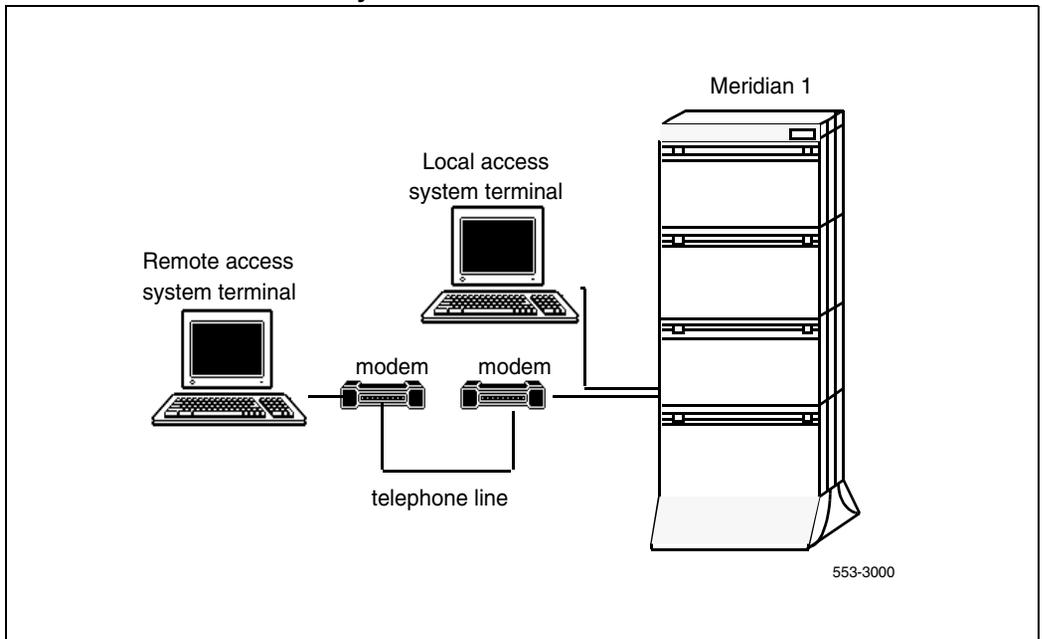

## HOST mode access

A system terminal is connected through an SDI port. SDI ports are defined in LD 17 and may be configured for different types of outputs. For example, one terminal may be defined for traffic reports, another for maintenance messages. Two ports may be defined for the same output.

It is possible to log in as a HOST. When in the HOST mode, the outputs defined for the port are only output to that port. This is useful for applications, such as Meridian Manager, which require high speed ports. Once the HOST port has logged out, the outputs to the other ports are restored.

To configure a system terminal, see the “System and limited access passwords” in the configuration record (LD 17). See also OVL403 and OVL404 messages, which are output to the ports affected by a HOST log in.

## Line mode interface log in procedure

The Overlay Loader offers a Line Mode interface. With Line Mode enabled (LON), the backspace can be used to edit input. The entered information (responses, for example) is not processed until the <CR> is entered. When the Line Mode is disabled (LOF), the system terminal interface processes information as it is entered.

*Note:* Line Mode interface requires the setting: seven data bits, space parity and one stop bit.

The Serial Data Interface (SDI) application on the Multi-Purpose Serial Data Link (MSDL) card offers the Line Mode Editing (LME) function. With the LME function enabled (FUNC=LME), the backspace can be used to edit input. The LME function is only supported on VT200 type terminals running EM200 emulation mode.

### Procedure 1 Logging in and out

1 Press <cr>

- If the response is: **OVL111 nn TTY** or **OVL111 nn SL-1**
- That means: Someone else is logged into the system. When they have logged off, press <cr> and go to Step 2.
- If the response is: **OVL111 nn IDLE** or **OVL111 nn BKGD**
- That means: You are ready to log into the system. Go to Step 2.
- If the response is: **OVL000 >**

That means: This is the program identifier which indicates that you are have already logged into the system. Go to Step 4.

2 Enter: **LOGI**, then press <cr>

The normal response is: **PASS?**

If there is any other response, refer to the message text in the System Error Messages NTP.

3 Enter: **Level 1 or Level 2 password** and press <cr>.

If the password is correct, the system responds with the prompt: >

- 4 Load a program by entering: **LD XXX**(where *XXX* represents the overlay program number).
- 5 Perform tasks
- 6 End the program by entering: **END** or **\*\*\*\***
- 7 Always end the log in session with: **LOGO**

The background routines are then loaded automatically.

## **Access through the maintenance telephone**

A telephone functions as a maintenance telephone when you define the class-of-service as MTA (maintenance telephone allowed) in the Multi-line Telephone Administration program (LD 11). A maintenance telephone allows you to send commands to the system, but you can only use a subset of the commands that can be entered from a system terminal.

You can test tones and outpulsing through the maintenance telephone. Specific commands for those tests are given in the Tone and Digit Switch and Digitone Receiver Diagnostic (LD 34).

To access the system using the maintenance telephone, see Procedure 2. To enter commands, press the keys that correspond to the letters and numbers of the command (for example, to enter LD 42 return, key in 53#42##). Table 2 shows the translation from a keyboard to a dial pad.

The following overlays (LDs) ARE accessible from a maintenance telephone: 30, 32, 33, 34, 35, 36, 37, 38, 41, 42, 43, 45, 46, 60, 61, and 62

The following overlays (LDs) ARE NOT accessible from a maintenance telephone: 31, 40, 48, 77, 80, 92, 96, 135, 137

**Note:** To use the maintenance telephone, the loop for that telephone must be operating.

**Table 2**  
**Translation from keyboard to dial pad**

Keyboard				Dial pad
			1	1
A	B	C	2	2
D	E	F	3	3
G	H	I	4	4
J	K	L	5	5
M	N	O	6	6
P	R	S	7	7
T	U	V	8	8
W	X	Y	9	9
			0	0
		Space or #		#
		Return		##
		*		*

**Note:** There is no equivalent for Q or Z on a dial pad.

**Procedure 2**  
**Accessing through the maintenance telephone**

- 1 Press the prime DN key.
- 2 Place the set in maintenance mode by entering: **xxxx91**  
 Where: “xxxx” is the customer Special Prefix (SPRE) number. It is defined in the Customer Data Block and can be printed using LD 21. The SPRE number is typically “1” (which means you would enter 191).
- 3 Check for busy tone by entering “return”: **##**
  - If there is no busy tone, go to Step 4.
  - If there is a busy tone, a program is active. To end an active program and access the system enter: **\*\*\*\***
- 4 Load a program by entering: **53#xx##**  
 Where: “xx” represents the number of the overlay program
- 5 Perform tasks.
- 6 To exit the program and return the telephone to call processing mode, enter: **\*\*\*\***

Background routines are then loaded automatically.

## **Accessing Meridian Mail**

Small System allows access to Meridian Mail Administration & Maintenance through a shared terminal on the Small System. To access the Meridian Mail system, log in and enter: AX. To exit from Meridian Mail, press the Control key and the closed square bracket ( ] ) simultaneously.

## Preview of overlay content

System information, call information, features and services are all controlled by overlays (LDs). Data blocks are used to control this information. Listed below are some of the items accessible through the overlays.

Type	Overlay(s)	Item
Terminal Number data block	10, 11, 12, 14	busy lamp field Class of Service (CLS) feature access and requirements key assignments route assignment telephone features (# of key strips, data modules) telephone type trunk access trunk type
Customer data block	15	attendant console information customer number feature access codes incoming call identification intercept options Listed Directory Number (LDN) night service Recorded Announcement (RAN)
Route data block	16	access codes Call Detail Recording (CDR) information code restrictions network trunk features route number trunk route type trunking features (timers, starting arrangements)
Configuration data block	17	input/output devices memory location network loop usage number of memory modules number of network loops system parameters (call register, buffer sizes, traffic)

## System Lookup messages

On systems equipped with System Errors and Events Lookup package 245, it is possible to display system messages on screen. Specific system messages may then be viewed on screen if the user enters ERR followed by the desired system error code and <cr>. The following example shows the data entries necessary to view error message SCH946:

- Login to switch
- PASS(Enter only your password)
- ERR SCH946<cr>(The user must type “ERR SCH946” and press return)

The screen will now display the error message corresponding to SCH946. In this case, that message is:

**Invalid User Type**

## Multi-User Login

Meridian 1 Multi-User Login (MULTI\_USER) (package 242) enables up to five users to log in, load, and execute overlays simultaneously. These users are in addition to an attendant console or maintenance terminal. The multi-user capability increases the efficiency of technicians by enabling them to perform tasks in parallel. To facilitate this operating environment, Multi-User Login includes significant functionality:

- Database conflict prevention
- Additional user commands
- TTY log files
- TTY directed I/O

With multiple overlays operating concurrently, there is the potential for a database conflict if two or more overlays attempt to modify the same data structure. Multi-User Login software prevents such conflicts. When a user requests that an overlay be loaded, the software determines if it could pose a potential conflict with an overlay that is already executing. If no conflict exists, the requested overlay is loaded. If a conflict does exist, the system issues the following message:

**OVL429-OVERLAY CONFLICT**

The user can try again later, or try to load a different overlay.

Multi-User Login also introduces several user commands. With these commands, the user has the ability to:

- communicate with other users
- determine who is logged into the system
- halt and resume background and midnight routines
- initiate and terminate terminal monitoring
- change printer output assignment

*Note:* For complete feature information on Multi-User Login, consult the *Overlay Loader and Multi-User Login* section in this NTP.

## Maintenance display codes

Maintenance displays are located on the faceplate of certain circuit cards. A maintenance display code is a one-, two-, or three-digit alphanumeric code which can indicate the status of the system and identify faulty equipment. For a detailed definition of these codes, see the section titled “HEX” in the System Error Messages NTP.

## Time and date of fault

The system identifies the time that faults are detected. When a diagnostic message is output, a timestamp is output within 15 minutes. The format is:

TIMxxx hh:mm dd/mm/yy CPU x

Where: **xxx** is the system ID

The time, date, and system ID are set in LD 2.

---



---

## Alphabetical list of packages

---

Listed below is a comprehensive alphabetical list of packages which may be equipped on a Meridian 1 or Succession Communication Server for Enterprise 1000. For a numerical list of available packages, refer to the section titled “Numerical list of packages” on page 47.

Mnemonic	Feature Name	Number	Release
AA	Attendant Administration	54	1
AAA	Attendant Alternative Answering	174	15
AAB	Automatic Answerback	47	1
ABCD	16-Button Digitone/Multifrequency Telephone	144	14
ACDA	Automatic Call Distribution, Package A	45	1
ACDB	Automatic Call Distribution, Package B	41	1
ACDC	Automatic Call Distribution Package C	42	1
ACDD	Automatic Call Distribution Package D	50	2
ACDE	ACD/CDN Expansion	388	25.4
ACLI	Analog Calling Line Identification	349	24
ACNT	Automatic Call Distribution, Account Code	155	13
ACRL	AC15 Recall	236	20
ADMINSET	Set Based Administration	256	21
ADSP	ACD Night Call Forward without Disconnect Supervision	289	23
AFNA	Attendant Forward No Answer	134	14
AINS	Automatic Installation	200	16
AIOD	Automatic ID of Outward Dialing	3	1
ALRM_FILTER	Alarm Filtering	243	19
AMP	Automated Modem Pooling	78	5
ANI	Automatic Number Identification	12	1

Mnemonic	Feature Name	Number	Release
ANIR	ANI Route Selection	13	1
AOP	Attendant Overflow Position	56	1
APL	Auxiliary Processor Link	109	10
ARDL	Automatic Redial	304	22
ARFW	Attendant Remote Call Forward	253	20
ARIE	Aries Digital Sets	170	14
ATAN	Attendant Announcement	384	25.4
ATM	Automatic Trunk Maintenance	84	7
ATX	Autodial Tandem Transfer	258	20
AUXS	Automatic Call Distribution Package D, Auxiliary Security	114	12
AWU	Automatic Wake-Up	102	10
BACD	Basic Automatic Call Distribution	40	1
BARS	Basic Alternate Route Selection	57	1
BASIC	Basic Call Processing	0	1
BAUT	Basic Authorization Code	25	1
BGD	Background Terminal	99	10
BKI	Attendant Break-In/Trunk Offer	127	1
BNE	Business Network Expansion	367	25
BQUE	Basic Queuing	28	1
BRI	Basic Rate Interface	216	18
BRIL	BRI line application	235	18
BRIT	ISDN BRI Trunk Access	233	18
BRTE	Basic Routing	14	1
BTD	Busy Tone Detection Tone	294	21
CAB	Charge Account/Authorization Code	24	1
CALL ID	Call ID (for AML applications)	247	19
CASM	Centralized Attendant Services (Main)	26	1
CASR	Centralized Attendant Services (Remote)	27	1
CBC	Call-by-Call Service	117	13
CCB	Collect Call Blocking	290	21
CCDR	Calling line Identification in Call Detail Recording	118	13
CCOS	Controlled Class Of Service	81	7
CDP	Coordinated Dialing Plan	59	1
CDIR	Corporate Directory	381	

Mnemonic	Feature Name	Number	Release
CDR	Call Detail Recording	4	1
CDRE	Call Detail Recording Expansion (7 digit)	151	13
CDRQ	ACD CDR Queue Record	83	3
CDRX	Call Detail Recording Enhancement	259	20
CHG	Charge Account for CDR	23	1
CHINA	China Attendant Monitor Package	285	21
CHTL	China Toll Package	292	21
CISMFS	Commonwealth of Independent States Multifrequency Shuttle Signalling	326	23
CIST	Commonwealth of Independent States - Trunk	221	21
CLNK	Call Detail Recording, Data Link	6	1
CMAC	N/W Communications Management Center	30	1
CNAME	Calling Name Delivery	333	23
CNUMB	Calling Number Delivery	332	23
COOP	Console Operations	169	14
CORENET	Core Network Module	299	21
CDIR	Corporate Directory	381	25
CPCI	Called Party Control on Internal Calls	310	22
CPGS	Console Presentation Group	172	15
CPIO	Call Processor Input/Output (Option 81C)	298	21
CPND	Calling Party Name Display	95	10
CPP	Calling Party Privacy	301	21
CPP_CNI	CP Pentium Backplane for Intel Machine	368	25
CPRK	Call Park	33	2
CPRKNET	Call Park Networkwide	306	22
CSL	Command Status Link	77	8
CSLA	CSL with Alpha Signalling	85	8
CTY	Call Detail Recording on Teletype Terminal	5	1
CUST	Multiple-Customer Operation	2	1
CWNT	Call Waiting Notification (Meridian 911)	225	19
DASS2	Digital Access Signaling System 2	124	16
DBA	Data Buffering and Access	351	24
DCON	M2250 Attendant Console	140	15
DCP	Directed Call Pickup	115	12
DDSP	Digit Display	19	1

Mnemonic	Feature Name	Number	Release
DHLD	Deluxe Hold	71	4
DI	Dial Intercom	21	1
DISA	Direct Inward System Access	22	1
DKS	Digit Key Signaling	180	1
DLDN	Departmental Listed Directory Number	76	5
DLT2	M2317 Digital Sets	91	9
DMWI	DPNSSI Message Waiting Indication	325	23
DNDG	Do-Not-Disturb, Group	16	1
DNDI	Do-Not-Disturb, Individual	9	1
DNIS	Dialed Number Identification System	98	10
DNWK	DPNSS Network Services	231	16
DNXP	Directory Number Expansion (7 Digit)	150	13
DPNA	Direct Private Network Access	250	21
DPNSS189I	Enhanced DPNSS1 Gateway	284	20
DPNSS	Digital Private Network Signaling System 1	123	16
DPNSS_ES	DPNSS Enhanced Services	288	21
DRNG	Distinctive Ringing	74	4/9
DSET	M2000 Digital Sets	88	7
DTI2	2 Mbit Digital Trunk Interface	129	10
DTD	Dial Tone Detector	138	10
DTOT	DID to Tie (Japan only)	176	16
EAR	Enhanced ACD Routing	214	17
ECCS	Enhanced Controlled Class of Service	173	15
ECT	Enhanced Call Trace	215	18
EDRG	Executive Distinctive Ringing	185	16
EES	End-To-End Signaling	10	1
EMUS	Enhanced Music	119	12
ENS	Enhanced Night Service	133	20
EOVF	ACD Enhanced Overflow	178	15
ESA	Emergency Services Access	329	23
ESA_CLMP	Emergency Services Access Calling Number Mapping	331	23
ESA_SUPP	Emergency Services Access Supplementary	330	23
ETSI_SS	Euro Supplementary service	323	22
EURO	Euro ISDN	261	20

Mnemonic	Feature Name	Number	Release
FAXS	HiMail Fax Server	195	18
FCC68	FCC Compliance for DID Answer Supervision	223	17
FCA	Forced Charge Account	52	1
FCBQ	Flexible Call Back Queuing	61	1
FCDR	New Format CDR	234	18
FDID	Flexible DID	362	24
FFC	Flexible Feature Codes	139	15
FFCSF	Boss Secretary Filtering (FFC activation)	198	15
FGD	Feature Group D	158	17
FIBN	Fiber Network	365	25
FNPN	Flexible Numbering Plan	160	14
FRTA	French Type Approval	197	15
FTC	Flexible Tones and Cadences	125	16
FTDS	Fast Tone and Digit Switch	87	7
FXS	Flexible Services Package	152	25
GCM	General Call Monitor	344	24
GRP	Group Call	48	1
GPRI	International 1.5/2.0 Mb/s Gateway	167	18
GSCM	Global Call Monitoring	344	24
H323_VTRK	H323 Virtual Trunk	399	3.0
HIST	History File	55	1
HOSP	Hospitality Management	166	16
HOT	Enhanced Hot Line	70	4/10
HSE	Hospitality Screen Enhancement	208	17
HVS	Meridian Hospitality Voice Service	179	16
IAP3P	Integrated Services Digital Network Application Module Link for Third Party Vendors	153	13
ICDR	Internal CDR	108	10
ICON_PACKAGE	M3900 Full Icon Support	397	3.0
ICP	Intercept Computer Interface	143	10
IDA	Integrated Digital Access	122	16
IDC	Incoming DID Digit Conversion	113	12
IEC	Inter-Exchange Carrier	149	13
IMS	Integrated Message System UST and UMG are part of IMS Package.	35	2

Mnemonic	Feature Name	Number	Release
INBD	International nB+D	255	20
INTR	Intercept Treatment	11	1
IPEX	IP Expansion	295	3.0
IPRA	International Primary Rate Access	202	15
ISDN	Integrated Services Digital Network	145	13
ISDN INTL SUP	ISDN Supplementary Features	161	14
ISL	ISDN signaling Link	147	13
ISPC	ISDN Semi-Permanent Connection	313	22
IVR	Hold in Queue for IVR	218	18
JDMI	Japan Digital Multiplex Interface	136	14
JPN	Japan Central Office Trunks	97	9
JTDS	Japan Tone and Digit Switch	171	14
JTTC	Japan Telecommunication Technology Committee	335	23
KD3	Spanish KD3 DID/DOD interface	252	20
LAPW	Limited Access to Overlays	164	16
L1MF	X08 to X11 Gateway	188	15
LLC	Line Load Control	105	10
LMAN	Automatic Call Distribution Load Management (C2)	43	1
LNK	ACDD, Auxiliary Link Processor	51	2
LNR	Last Number Redial	90	8
LSCM	Local Steering Code Modifications	137	10
LSEL	Automatic Line Selection	72	4
M3900_PROD_ENH	M3900 Phase III Productivity Enhancement	386	25.4
M3900_RGA_PROG	M3900 Ring Again	396	3.0
M911 ENH	M911 Enhancement Display	249	25
MAID	Maid Identification	210	17
MASTER	Euro ISDN Trunk - Network Side	309	22
MAT	MAT 5.0	296	22
MC32	Meridian Companion Enhanced Capacity	350	24
MCBQ	Network callback Queuing	38	2
MCDR	Mini CDR	31	1
MCMO	Meridian 1 Companion Option	240	19
MCT	Malicious Call Trace	107	10
MED_LANG	M3904 Mediterranean Language group	395	3.0

Mnemonic	Feature Name	Number	Release
MEET	MCDN End to End Transparency	348	24
MFC	Multifrequency Compelled Signaling	128	9
MFE	Multifrequency Signaling for Socotel	135	10
MINT	Message Intercept	163	15
MLIO	Multi-Language I/O Package	211	16
MLM	Meridian Link Modular Server	209	16
MLMS: Brazilian	Meridian Link Modular Server: Brazilian	264	20
MLMS: Chinese (PRC)	Meridian Link Modular Server: Chinese (PRC)	265	20
MLMS: Chinese (ROC)	Meridian Link Modular Server: Chinese (ROC)	266	20
MLMS: Dainish	Meridian Link Modular Server: Dainish	267	20
MLMS: Dutch	Meridian Link Modular Server: Dutch	268	20
MLMS: Finnish	Meridian Link Modular Server: Finnish	269	20
MLMS: Canadian French	Meridian Link Modular Server: Canadian French	270	20
MLMS: European French	Meridian Link Modular Server: European French	271	20
MLMS: German	Meridian Link Modular Server: German	272	20
MLMS: Italian	Meridian Link Modular Server: Italian	273	20
MLMS: Japanese	Meridian Link Modular Server: Japanese	274	20
MLMS: Korean	Meridian Link Modular Server: Korean	275	20
MLMS: Norwegian	Meridian Link Modular Server: Norwegian	276	20
MLMS: Russian	Meridian Link Modular Server: Russian	277	20
MLMS: European Spanish	Meridian Link Modular Server: European Spanish	278	20
MLMS: Latin Am. Spanish	Meridian Link Modular Server: Latin American Spanish	279	20
MLMS: Swedish	Meridian Link Modular Server: Swedish	280	20
MLWU	Multi-Language Wake Up	206	16
MMOPKG	M1 Microcellular Option	303	22
MMSN	M1 Mobility Multi-Site Networking	314	22
MPH	Meridian 1 Packet Handler	248	19
MPO	Multi-Party Operations	141	20
MOSRPKG	Mobility Server	302	22
MQA	Multiple Queue Assignment	297	21

Mnemonic	Feature Name	Number	Release
MR	PPM/Message Registration	101	10
MSB	Make Set Busy	17	1
MSDL	Multipurpose Serial Data Link	222	18
MSDL SDI	MSDL Serial Data Interface	227	19
MSDL STA	MSDL Single Terminal Access	228	19
MSMN	Mobility Networking	370	25
MULTI_USER	Multi-User Login	242	19
MUS	Music	44	1
MUSBRD	Music Broadcast	328	23
MWC	Message Waiting Center	46	1
MWI	Message Waiting Indication Interworking with DMS	219	19
M911	Meridian 911	224	19
NACD	Network Automatic Call Distribution	207	15
NARS	Network Alternate Route Selection	58	1
NAS	Network Attendant Service	159	20
NAUT	Network Authorization Code	63	1
NCOS	Network Class Of Service	32	1
NFCR	New Flexible Code Restriction	49	2
NGCC	Nortel Symposium Call Center	311	22
NGEN	Next Generation Connectivity	324	22
NI2	North America National ISDN Class II Equipment	291	21
NI-2 CBC	NI-2 Call By Call Service Selection	334	23
NI-2 Name	NI-2 Name Display Supplementary Service	385	25.4
NMCE	NGenR2/Meridian Communications Exchange Connectivity	364	24
NMS	Network Message Services	175	16
NSC	Network Speed Call	39	2
NSIG	Network Signaling	37	2
NTRF	Network Traffic Measurements	29	1
NTWK	Advanced ISDN Network Services	148	13
NXFR	Network Call Transfer	67	3
OAS	Observe Agent Security	394	3.0
ODAS	Office Data Administration System	20	1
OHOL	On Hold On Loudspeaker	196	20
OHQ	Off-Hook Queuing	62	1

Mnemonic	Feature Name	Number	Release
OOD	Optional Outpulsing Delay	79	5
OPAO	Outpulsing, asterisk (*) and octothorpe (#)	104	
OPCB	Operator Call Back (China #1)	126	14
OPEN ALARM	Open Alarms	315	22
OPTF	Optional Features	1	1
ORC_RVQ	Remote Virtual Queueing	192	18
OVLP	Overlap Signaling (M1 to M1 and M1 to 1TR6 CO)	184	15
PAGENET	Call Page Networkwide	307	22
PAGT	Automatic Call Distribution, Priority Agent	116	12
PBXI	1.5 Mbit Digital Trunk Interface	75	5
PCA	Personal Call Assistant	398	3.0
PEMD	Pulsed E&M (Indonesia, French Colisée)	232	18
PHTN	Phantom TN	254	20
PLDN	Group Hunt/DN Access to SCL	120	15
PLUGIN	Plug-In	366	24
PMSI	Property Management System Interface	103	10
PONW	Priority Network Override	389	25.4
POVR	Priority Override/Forced Camp-On	186	20
PQUE	Network Priority Queueing	60	1
PRA	Primary Rate Access (CO)	146	13
PRI2	2.0 Mb/s Primary Rate Interface	154	14
PXLT	Pretranslation	92	8
QSIG	Q reference signaling point Interface	263	20
QSIG GF	QSIG Generic Functional protocol	305	22
QSIG SS	QSIG Supplementary service	316	22
RAN	Recorded Announcement	7	1
RANBRD	Recorded Announcement Broadcast	327	23
RCK	Ringing Change Key	193	15
REMOTE_IPE	Remote IPE	286	
RMS	Room Status	100	10
ROA	Recorded Overflow Announcement	36	2
RPA	Radio Paging	187	15
RPE1.5	1.5 Mbit Remote Peripheral Equipment	15	1
RPE2	2.0 Mb/s Remote Peripheral Equipment	165	15

Mnemonic	Feature Name	Number	Release
RSDB	Resident Debug	82	9
RUCM	Russian Call Monitoring	353	24
RVQ	Remote Virtual Queuing	192	18
SACP	Semi-Automatic Camp-On	181	15
SAMM	Stand-alone Meridian Mail	262	20
SAR	Scheduled Access Restrictions	162	20
SBO	Succession Branch Office	390	cse2
SCC	Tone Detector Special Common Carrier	66	7
SCDR	Station Activity Records	251	20
SCI	Station Category Indication	80	7
SCMP	Station Camp-On	121	20
SECL	Series Call	191	15
SLP	Station Loop Preemption	106	10
SLST	Meridian SL-1 ST Package	96	9
SMS	Short Message Service	346	24
SNR	Stored Number Redial	64	3
SR	Set Relocation	53	1
SSAU	Station Specific Authorization Codes	229	19
SS5	500 Set Dial Access to Features	73	4
SS25	2500 Set Features	18	1
SSC	System Speed Call	34	2
STA	Single Term Access	228	19
STS	Set to Set Messaging	380	25
SUPP	International Supplementary Features	131	9
SUPV	Supervisory Attendant Console	93	8
SVCT	Supervisory Console Tones	189	20
SYS_MSG_LKUP	System Errors and Events Lookup	245	19
TAD	Time and Date	8	1
TAT	Trunk AntiTromboning	293	21
TATO	Trunk AntiTromboning	312	
TBAR	Trunk Barring	132	20
TDET	Tone Detector	65	7
TENS	Multiple-Tenant Service	86	7
TFM	Trunk Failure Monitor	182	15

---

<b>Mnemonic</b>	<b>Feature Name</b>	<b>Number</b>	<b>Release</b>
THF	Trunk Hook Flash (Centrex)	157	14
TMON	Traffic Monitoring	168	
TOF	Automatic Call Distribution, Timed Overflow Queuing	111	10
TSET	M3000 Digital Sets	89	7
TVS	Trunk Verification from Station	110	9.32
TWR1	Taiwan R1	347	24
UIGW	Universal ISDN Gateways	283	20
UK	United Kingdom	190	16
UUI	Call Center Transfer Connect	393	3.0
VAWU	VIP Auto Wake Up	212	17
VMBA	Voice Mailbox Administration	246	19
VIR_OFF_ENH	M3900 Phase III Virtual Office Enhancement	387	25.4
VIRTUAL_OFFICE	Virtual Office	382	25
VNS	Virtual Network Services	183	16
VO	Virtual Office	382	3.0
VOE	Virtual Office Enhancement	387	3.0
XCT0	M1 Enhanced Conference, TDS and MFS	204	15
XCT1	M1 Superloop Administration (LD 97)	205	15
XPE	Meridian 1 XPE	203	15
ZPAG	Zone Paging	281	25

---



---

## Numerical list of packages

---

Listed below is a comprehensive numerical list of available packages which may be equipped on a Meridian 1 or a Succession Communication Server for Enterprise 1000. For an alphabetical list of packages, “Alphabetical list of packages” on page 35.

Number	Mnemonic	Name
0	BASIC	Basic Call Processing
1	OPTF	Optional Features
2	CUST	Multi-Customer Operation
3	AIOD	Automatic ID of Outward Dialing
4	CDR	Call Detail Recording, Teletype Terminal
5	CTY	Call Detail Recording, Teletype Terminal
6	CLNK	Call Detail Recording, Data Link
7	RAN	Recorded Announcement
8	TAD	Time and Date
9	DNDI	Do Not Disturb Individual
10	EES	End-to-End Signaling
11	INTR	Intercept Treatment
12	ANI	Automatic Number Identification
13	ANIR	Automatic Number Identification, Route Selection
14	BRTE	Basic Routing
15	RPE1.5	1.5-Mbit Remote Peripheral Equipment
16	DNDG	Do Not Disturb Group
17	MSB	Make Set Busy
18	SS25	Special Service for 2500 Sets
19	DDSP	Digit Display
20	ODAS	Office Data Administration System

Number	Mnemonic	Name
21	DI	Dial Intercom
22	DISA	Direct Inward System Access
23	CHG	Charge Account for CDR
24	CAB	Charge Account/Authorization code
25	BAUT	Basic Authorization code
26	CASM	Centralized Attendant Service (Main)
27	CASR	Centralized Attendant Service (Remote)
28	BQUE	Basic Queuing
29	NTRF	Network Traffic must have NWK packages.
30	CMAC	N/W Communications Management Center
31	MCDR	Mini CDR
32	NCOS	Network Class of Service
33	CPRK	Call Park
34	SSC	System Speed Call
35	IMS	Integrated Message Services. UST and UMG are part of the IMS package.
36	ROA	Recorded Overflow Announcement
37	NSIG	Network Signaling
38	MCBQ	Network Call Back Queuing
39	NSC	Network Speed Call
40	BACD	Basic Automatic Call Distribution
41	ACDB	Automatic Call Distribution, Package B
42	ACDC	Automatic Call Distribution, Package C
43	LMAN	Automatic Call Distribution, Load Management Reports
44	MUS	Music
45	ACDA	Automatic Call Distribution, Package A
46	MWC	Message Waiting Center
47	AAB	Automatic Answerback
48	GRP	Group call
49	NFCR	New Flexible Code Restriction
50	ACDD	Automatic Call Distribution, Package D
51	LNK	ACDD, Auxiliary Link Processor
52	FCA	Forced Charge Account
53	SR	Set Relocation
54	AA	Attendant Administration

---

<b>Number</b>	<b>Mnemonic</b>	<b>Name</b>
55	HIST	History File
56	AOP	Attendant Overflow Position
57	BARS	Basic Alternate Route Selection
58	NARS	Network Alternate Route Selection
59	CDP	Coordinated Dialing Plan
60	PQUE	Network Priority Queuing
61	FCBQ	Flexible Call Back Queuing
62	OHQ	Off-Hook Queuing
63	NAUT	Network Authorization code
64	SNR	Stored Number Redial
65	TDET	Tone Detector
66	SCC	Tone Detector Special Common Carrier
67	NXFR	Network Call Transfer
68	ATVN	Autovon
69	ACDR	ACD Queue Call Restore
70	HOT	Enhanced Hot Line
71	DHLD	Deluxe Hold
72	LSEL	Automatic Line Selection
73	SS5	500 Set Dial Access to Features
74	DRNG	Distinctive Ringing
75	PBXI	1.5 Mbit Digital Trunk Interface
76	DLDN	Departmental Listed Directory Number
77	CSL	Command Status Link
78	AMP	Automated Modem Pooling
79	OOD	Optional Outpulsing Delay
80	SCI	Station Category Information
81	CCOS	Controlled Class of Service
82	RSDB	Resident Debug
83	CDRQ	ACD CDR Queue Record
84	ATM	Automatic Trunk Maintenance
85	CSLA	CSL with Alpha Signaling
86	TENS	Multi-Tenant Service
87	FTDS	Fast Tone and Digit Switch
88	DSET	M2000 Digital Sets

Number	Mnemonic	Name
89	TSET	M3000 Digital Sets
90	LNR	Last Number Redial
91	DLT2	M2317 Digital Sets
92	PXLT	Pretranslation
93	SUPV	Supervisory Console
95	CPND	Calling Party Name Display
96	SLST	Meridian SL-1 ST Package
97	JPN	Japan Central Office Trunks
98	DNIS	Dialed Number Identification System
99	BGD	Background Terminal
100	RMS	Room Status
101	MR	PPM / Message Registration
102	AWU	Automatic Wake Up
103	PMSI	Property Management System Interface
104	OPAO	Outpulsing, asterisk (*) and octothorpe (#)
105	LLC	Line Load Control
106	SLP	Station Loop Pre-emption
107	MCT	Malicious Call Trace
108	ICDR	Internal CDR
109	APL	Auxiliary Processor Link
110	TVS	Trunk Verification from Station
111	TOF	Automatic Call Distribution, Timed Overflow Queuing
112	NKL	Notification Key Lamps
113	IDC	Incoming Digit Conversion
114	AUXS	Automatic Call Distribution Package D, Auxiliary Security
115	DCP	Directed Call Pickup
116	PAGT	Automatic Call Distribution, Priority Agent
117	CBC	Call by Call Service
118	CCDR	Calling Line Identification in Call Detail Recording
119	EMUS	Enhanced Music
120	PLDN	Group Hunt/DN Access to SCL
121	SCMP	Station Camp-On
122	IDA	Integrated Digital Access. COMDT is part of IDA Package
123	DPNSS	Digital Private Network Signaling System 1

---

<b>Number</b>	<b>Mnemonic</b>	<b>Name</b>
124	DASS2	Digital Access Signaling System 2
125	FTC	Flexible Tones and Cadences
126	OPCB	Operator Call Back (China #1)
127	BKI	Attendant Break-In/Trunk Offer
128	MFC	Multifrequency Compelled Signaling
129	DTI2	2 Mbit Digital Trunk Interface
131	SUPP	International Supplementary Features
132	TBAR	Trunk Barring
133	ENS	Enhanced Night Service
134	AFNA	Attendant Forward No Answer
135	MFE	Multifrequency Signaling for Socotel
136	JDMI	Japan Digital Multiplex Interface
137	LSCM	Local Steering Code Modification
138	DTD	Dial Tone Detection
139	FFC	Flexible Feature Codes
140	DCON	M2250 Attendant Console
141	MPO	Multi-Party Operations
143	ICP	Intercept Computer Interface
144	ABCD	16-Button Digitone/Multifrequency Telephone
145	ISDN	Integrated Services Digital Network
146	PRA	Primary Rate Access (CO)
147	ISL	ISDN Signaling Link
148	NTWK	Advanced ISDN Network Services
149	IEC	Inter-Exchange Carrier
150	DNXP	DN Expansion (7 digit)
151	CDRE	CDR Expansion (7 digit)
153	IAP3P	ISDN AP for 3rd Party Vendors
154	PRI2	2.0 Mb/s Primary Rate Interface
155	ACNT	Automatic Call Distribution, Account Code
157	THF	Trunk Hook Flash (Centrex)
158	FGD	Feature Group D
159	NAS	Network Attendant Service
160	FNP	Flexible Numbering Plan
161	ISDN INTL SUP	ISDN Supplementary Features

Number	Mnemonic	Name
162	SAR	Scheduled Access Restrictions
163	MINT	Message Intercept
164	LAPW	Limited Access to Overlays
165	RPE2	2.0 Mb/s Remote Peripheral Equipment
166	HOSP	Hospitality Management
167	GPRI	International 1.5/2.0 Mb/s Gateway
168	TMON	Traffic Monitoring
169	COOP	Console Operations
170	ARIE	Aries Digital Sets
171	JTDS	Japan Tone and Digit Switch
172	CPGS	Console Presentation Groups
173	ECCS	Enhanced Controlled Class of Service
174	AAA	Attendant Alternative Answering
175	NMS	Network Message Services
176	DTOT	DID To Tie (Japan only)
178	EOVF	ACD Enhanced Overflow
179	HVS	Meridian Hospitality Voice Service
180	DKS	Digit Key Signaling
181	SACP	Semi-Automatic Camp-On
182	TFM	Trunk Failure Monitor
183	VNS	Virtual Network Services
184	OVLP	Overlap Signaling (M1 to M1 and M1 to 1TR6 CO)
185	EDRG	Executive Distinctive Ringing
186	POVR	Priority Override/Forced Camp-On
187	RPA	Radio Paging
188	L1MF	X08 to X11 Gateway
189	SVCT	Supervisory Console Tones
190	UK	United Kingdom
191	SECL	Series Call
192	ORC_RVQ	Remote Virtual Queuing
193	RCK	Ringing Change Key
195	FAXS	HiMail Fax Server
196	OHOL	On-Hold On-Loudspeaker
197	FRTA	French Type Approval

---

<b>Number</b>	<b>Mnemonic</b>	<b>Name</b>
198	FFCSF	Boss Secretary Filtering (FFC activation)
200	AINS	Automatic Installation
202	IPRA	International Primary Rate Access (CO)
203	XPE	Meridian 1 XPE
204	XCT0	M1 Enhanced Conference, TDS and MFS
205	XCT1	M1 Superloop Administration (LD 97)
206	MLWU	Multi Language Wake Up
207	NACD	Network Automatic Call Distribution
208	HSE	Hospitality Screen Enhancement
209	MLM	Meridian Link Modular Server
210	MAID	Maid Identification
211	MLIO	Multi Language Input/Output
212	VAWU	VIP Automatic Wake Up
214	EAR	Enhanced ACD Routing
215	ECT	Enhanced Call Trace
216	BRI	Basic Rate Interface
218	IVR	Hold in queue for IVR
219	MWI	Message Waiting Indication Interworking with DMS
221	CIST	Commonwealth of Independent States -Trunk
222	MSDL	Multi-purpose Serial Data Link
223	FCC68	FCC Compliance for DID Answer Supervision
224	M911	Meridian 911
225	CWNT	Call Waiting Notification (Meridian 911)
227	MSDL SDI	MSDL Serial Data Interface
228	MSDL STA	Single Terminal Access
229	SSAU	Station Specific Authorization Codes
231	DNWK	DPNSS Network Services
232	PEMD	Pulsed E & M (Indonesia, French Colisée)
233	BRIT	ISDN BRI Trunk Access
234	FCDR	New Format CDR
235	BRIL	BRI line application
236	ACRL	AC15 Recall
240	MCMO	Meridian 1 Companion Option
242	MULTI_USER	Multi-User Login

Number	Mnemonic	Name
243	ALRM_FILTER	Alarm Filtering
245	SYS_MSG_LKUP	System Errors and Events Lookup (Option 81C)
246	VMBA	Voice Mailbox Administration
247	CALL ID	Call ID (for AML applications)
248	MPH	Meridian1 Packet Handler
249	M911 EHN	M911 Enhancement Display
250	DPNA	Direct Private Network Access
251	SCDR	Station Activity Records
252	KD3	Spanish KD3 DID/DOD interface
253	ARFW	Attendant Remote Call Forward
254	PHTN	Phantom TN
255	INBD	International nB+D
256	ADMINSET	Set Based Administration
257	EQA	Equal Access
258	ATX	Autodial Tandem Transfer
259	CDRX	Enhanced Call Detail Recording
261	EURO	EuroISDN
262	SAMM	Standalone Meridian Mail
263	QSIG	QSIG Interface
264	MLMS: Brazilian	Meridian Link Modular Server: Brazilian
265	MLMS: Chinese (PRC)	Meridian Link Modular Server: Chinese (PRC)
266	MLMS: Chinese (ROC)	Meridian Link Modular Server: Chinese (ROC)
267	MLMS: Danish	Meridian Link Modular Server: Danish
268	MLMS: Dutch	Meridian Link Modular Server: Dutch
269	MLMS: Finnish	Meridian Link Modular Server: Finnish
270	MLMS: Canadian French	Meridian Link Modular Server: Canadian French
271	MLMS: European French	Meridian Link Modular Server: European French
272	MLMS: German	Meridian Link Modular Server: German
273	MLMS: Italian	Meridian Link Modular Server: Italian
274	MLMS: Japanese	Meridian Link Modular Server: Japanese
275	MLMS: Korean	Meridian Link Modular Server: Korean
276	MLMS: Norwegian	Meridian Link Modular Server: Norwegian
277	MLMS: Russian	Meridian Link Modular Server: Russian

---

<b>Number</b>	<b>Mnemonic</b>	<b>Name</b>
278	MLMS: European Spanish	Meridian Link Modular Server: European Spanish
279	MLMS: Latin Am. Spanish	Meridian Link Modular Server: Latin American Spanish
280	MLMS: Swedish	Meridian Link Modular Server: Swedish
281	ZPAG	Zone Paging
283	UIGW	Universal ISDN Gateways
284	DPNSS 189I	Enhanced DPNSS1 Gateway
285	CHINA	China Attendant Monitor Package
286	REMOTE_IPE	Remote IPE
288	DPNSS_ES	DPNSS Enhanced Services
289	ADSP	ACD Night Call Forward without Disconnect Supervision
290	CCB	Collect Call Blocking
291	NI2	North American National ISDN Class II Equipment
292	CHTL	China Toll Package
293	TAT	Trunk Anti-Tromboning
294	BTD	Busy Tone Detection
295	IPEX	IP Expansion
296	MAT	MAT 5.0
297	MQA	Multiple Queue Assignment
298	CPIO	Call Processor Input/Output (Option 81C)
299	CORENET	Core Network Module
301	CPP	Calling Party Privacy
302	MOSRPKG	Mobility Server
303	MMOPKG	M1 Microcellular Option
304	ARDL	Automatic Redial
305	QSIG GF	QSIG Generic Functional protocol
306	CPRKNET	Call Park Networkwide
307	PAGENET	Call Page Networkwide
308	PTU	Preference Trunk Usage
309	MASTER	Euro ISDN Trunk - Network Side
310	CPCI	Called Party Control on Internal Calls
311	NGCC	Nortel Symposium Call Center
312	TATO	Trunk Anti Tromboning
313	ISPC	ISDN Semi-Permanent Connection

Number	Mnemonic	Name
314	MMSN	M1 Mobility Multi-Site Networking
315	OPEN_ALARM	Open Alarms
316	QSIG_SS	QSIG Supplementary service
321	QTN	
323	ETSI_SS	Euro Supplementary service
324	NGEN	Next Generation Connectivity
325	DMWI	DPNSSI Message Waiting Indication
326	CISMFS	Commonwealth of Independent States Multifrequency Shuttle Signalling
327	RANBRD	Recorded Announcement Broadcast
328	MUSBRD	Music Broadcast
329	ESA	Emergency Services Access
330	ESA_SUPP	Emergency Services Access Supplementary
331	ESA_CLMP	Emergency Services Access Calling Number Mapping
332	CNUMB	Calling Number Delivery
333	CNAME	Calling Name Delivery
334	NI-2_CBC	NI-2 Call By Call Service Selection
335	JTTC	Japan Telecommunication Technology Committee
344	GCM	General Call Monitoring
346	SMS	Short Message Service
347	TWR1	Taiwan R1
348	MEET	MCDN End to End Transparency
349	ACLI	Analog Calling Line Identification
350	MC32	Meridian Companion Enhanced Capacity
351	DBA	Data Buffering and Access
353	RUCM	Russian Call Monitoring
362	FDID	Flexible DID
364	NMCE	NGenR2/Meridian Communications Exchange Connectivity
365	FIBN	Fiber Network
366	PLUGIN	Plug-In
367	BNE	Business Network Express
368	CPP_CNI	CP Pentium Backplane for Intel Machine
370	MSMN	Mobility Networking
380	STS	Set to Set Messaging
381	CDIR	Corporate Directory

---

<b>Number</b>	<b>Mnemonic</b>	<b>Name</b>
382	VIRTUAL_OFFICE	Virtual Office
384	ATAN	Attendant Announcement
385	NI-2 Name	NI-2 Name Display Supplementary Service
386	M3900_PROD_ENH	M3900 Phase III Productivity Enhancement
387	VIR_OFF_ENH	M3900 Phase III Virtual Office Enhancement
388	ACDE	ACD/CDN Expansion
389	PONW	Priority Network Override
390	SBO	Succession Branch Office
393	UUI	Call Center Transfer Connect
394	OAS	Observe Agent Security
395	MED_LANG	M3904 Mediterranean Language group
396	M3900_RGA_PROG	M3900 Ring Again
397	ICON_PACKAGE	M3900 Full Icon Support
398	PCA	Personal Call Assistant
399	H323_VTRK	H323 Virtual Office

---



---

# Overlay loader and Multi-User Login

---

## Overlay loader

The Overlay loader becomes active after the login sequence and password, it will then accept input commands from the Serial Data Interface Terminals (SDI) after the “>” prompt (after login but with no overlay executing).

## Overlay loader commands

The Overlay loader commands are as follows:

Command	Description
DIST	Disable the tape interface or the MSI, FDU, MDU card.
ENLT	Enable the tape interface or the MSI, FDU, MDU card.
ERR x..x	Specific system messages are displayed (package 245 required). Where: x..x = specific error type and number (ex. ERR SCH1001)
FDLC	Cancel or stop the system wide download for M39xx units
LD xxx	Load overlay program into the overlay area, then the loaded program assumes control. Where: xxx = number of the desired overlay program.
LD xx D	Load overlay programs from disk into the overlay area, even if the program resides in cache memory. Where: <ul style="list-style-type: none"> <li>• xx = number of the desired overlay.</li> <li>• D = entered as part of command to specify the active disk.</li> </ul>
LOF	Disable Line Mode interface (TTY setup: 7 data bits, space parity, 1 stop bit).
LOGO	Exit overlay loader and Log-off the system.

LON	Enable Line Mode interface (TTY setup: 7 data bits, space parity, 1 stop bit).
STAT	Print the status of the tape interface or the MSI, FDU, MDU card.
****	Aborts the current overlay program, allowing another overlay program to be loaded into the overlay area.

---

## Multi-User Login commands

Multi-User Login enables up to five users to log in, load, and execute overlay programs simultaneously. These five users are in addition to an attendant console or maintenance terminal. The Multi-User capability also introduces several user commands. With these commands, the user has the ability to:

- determine who is logged into the system
- communicate with other connected users
- halt and resume background and midnight routines
- initiate and terminate terminal monitoring
- change printer output assignment

*Note:* MULTI\_USER must be enabled in LD 17.

## Multi-User commands

A user can issue any of the commands listed in the following table from Overlay loader or from any position within an overlay. Precede the command with an exclamation point (!) to issue a command from within an overlay.

For example, to issue the WHO command from within an overlay, type:

!

>WHO

> <CR> takes user back to the same position in current overlay

Command	Description
WHO	Displays user name, port ID, and overlay loaded for each logged-in terminal, as well as the user's MON and SPRT commands (see below).
SEND xx	Sends a message to logged-in terminal xx. When the system responds with a "SEND MSG:" prompt, enter the message text yy...yy (up to 80 characters). The text of a message is considered private and therefore is not written to any log file.
SEND ALL	Sends a message to all logged-in terminals. When the system responds with a "SEND MSG:" prompt, enter the message text yy...yy (up to 80 characters). The text of a message is considered private and therefore is not written to any log file.
SEND OFF	Prevents messages sent by other terminals from appearing at the user's terminal.
SEND ON	Enables messages sent by other terminals to appear at the user's terminal.
FORC xx	Forces terminal xx to log off (the requesting user must log in with LAPW or a level 2 password).
HALT	Stops background and midnight routines during a login session.
HALT OFF	Resumes halted background and midnight routines.
MON xx	Initiates monitoring for terminal xx (the requesting user must log in with LAPW or a level 2 password). The monitored terminal receives a message at the beginning and end of the monitored period.
MON OFF	Turns off the monitor function.
SPRT xx	Assigns printer output to port xx.
SPRT OFF	Resets printer output assignment.

**Note:** For complete feature information on Multi-User Login, consult the *System Management* (553-3001-300).



---

## LD 02: Traffic

---

### Basic commands

Command	Description
ASUM	Print Alarm/Exception summary
ASUM A	Print all the alarms that have at least one occurrence
ASUM E	Print all the alarms that have escalated
BWTM	Set the date and time for the clock to move backward
CITM	Clear Individual Traffic Measurement from TNs
COPC C R R	Clear one or more customer report types
COPN C R R	Clear one or more network report types
COPS R R	Clear one or more system report types
FWTM	Set the date and time for the clock to move forward
IDLT 0	No title is printed unless further data is also printed
IDLT 1	The title is always printed
INVC C R R ...	Print one or more of the last customer reports
INVN C R R ...	Print one or more of the last network reports
INVS R R ...	Print one or more of last system reports
ITHC C TH	Perform threshold tests on customer reports
ITHS TH	Perform threshold tests on system reports
SCFT C	Set the customer to be measured for feature key usage
SCTL X	Set blocking probability
SDTA X X Y	Set the time of day adjustment

# LD 02

<b>Command</b>	<b>Description</b>
SDST	Enable or disable the automatic daylight savings time adjustment
SITM	Set Individual Traffic Measurement on terminals
LLC X	Activate Line Load Control at Level X
SOPC C R R	Set one or more customer report types
SOPN C R R	Set one or more network report types
SOPS R R	Set one or more system report types
SSHC C	Set customer report schedule
SSHS	Set system report schedule
SSID SID	Change the system ID number
STAD	Set the time and date
STHC C TH TV	Set the customer thresholds
STHS TH TV	Set the system thresholds
TCFT	Print current customer being measured for feature key usage
TDST	Query the daylight savings time adjustment information
TDTA X	Print the current time of day adjustment
TITM	Print the current TNs with Individual Traffic Measurement set
TLLC	Print current LLC level and blocking probability
TOPC C	Print the current customer report types
TOPN C	Print the current network report types
TOPS	Print the current system report types
TSHC C	Print current customer report schedule
TSHS	Print current system report schedule
TSID	Print the current system ID number
TTAD	Print the current time and date
TTHC C TH	Print the current customer thresholds
TTHS TH	Print the current system thresholds

---

## How to use traffic commands

The Traffic Control program is used to set traffic options, system ID, date and time. The conventions used to describe the traffic commands are:

- data entered by the user is shown in upper case, data output by the system is shown in lower case
- a period (.) prompt indicates that the system is ready to receive a new command
- a double dash (--) indicates that the system is ready to receive data
- a <cr> indicates that the return key should be pressed

*Note:* The message TFC000 output on your switch indicates that the traffic program is running.

### Set traffic report schedules

To print current customer report schedule:

```
TSHC C sd sm ed em  
sh eh so  
d d ...
```

To print current system report schedule:

```
TSHS sd sm ed em  
sh eh so  
d d ...
```

To set customer report schedule:

```
SSHHC C sd sm ed em -- SD SM ED EM  
sh eh so -- SH EH SO  
d d ... -- D D ...<cr>
```

To set system report schedule:

```
SSHHS sd sm ed em -- SD SM ED EM
```

sh eh so -- SH EH SO  
d d ... -- D D ...<cr>

## Legend

C = customer number

D = day of the week:

1 = Sunday

2 = Monday

3 = Tuesday

4 = Wednesday

5 = Thursday

6 = Friday

7 = Saturday

ED = end day (1-31)

EH = end hour (0-23)

EM = end month (1-12)

SD = start day (1-31)

SH = start hour (0-23)

SM = start month (1-12)

SO = schedule options:

0 = no traffic scheduled

1 = hourly on the hour

2 = hourly on the half-hour

3 = every half-hour

**Example**

To change the system reports schedule:

```
SSHS 25 4 16 7 -- 1 10 1 12  
12 21 2 -- 0 23 1  
2 3 4 5 6 -- 1 7<cr>
```

**Old schedule**

start time: April 25 at 12 noon  
end time: July 16 at 9 P.M.  
frequency: hourly on the half-hour (SO = 2)  
days of the week: Monday to Friday

**New schedule**

start time: October 1 at 12 midnight  
end time: December 1 at 11 P.M.  
frequency: hourly on the hour (SO = 1)  
days of the week: Sunday and Saturday

**Note 1:** In order to obtain traffic reports at the scheduled intervals, the output device must have prompt USER = TRF in (LD 17). If TRF is not defined for any device, reports are still generated to allow the printing of the last reports.

**Note 2:** Half hour start and end times are not possible.

**Set system ID**

Each Meridian 1 system has a unique system ID number (SID) selected from 0000 to 9999. The 4-digit ID number can be printed or set by the following commands.

To print the current SID: TSID sid

To change the SID: SSID sid -- SID

## System reports

To print the current report types: TOPS r r ...

To set one or more report types: SOPS r r ... -- R R ...<cr>

To clear one or more report types: COPS r r ... -- R R ...<cr>

### Legend

R is traffic report type:

- 1 = networks
- 2 = service loops
- 3 = dial tone delay
- 4 = processor load
- 5 = selected terminals
- 7 = junctor group traffic
- 8 = CSL and ISDN/AP links
- 9 = D-channel
- 10 = ISDN GF Transport
- 11 = MISP and EIMC traffic
- 12 = MISP D-channel management
- 13 = MISP messaging
- 14 = ISDN BRI trunk DSL system report
- 15 = MPH traffic
- 16 = Internet Telephone Zone traffic report

**Note 1:** To use the print command enter a space (not a carriage return) after the customer number.

**Note 2:** If no reports are currently set, NIL is output by the system.

## Customer reports

To print the current report types: TOPC C r r ...

To set one or more report types: SOPC C r r ... -- R R ....<cr>

To clear one or more report types: COPC C r r ... -- R R ....<cr>

### Legend

C = customer number

R is traffic report type:

1 = networks

2 = trunks

3 = customer console measurements

4 = individual console measurement

5 = feature key usage

6 = Radio Paging

7 = Call Park

8 = messaging and auxiliary processor links

9 = Network Attendant Service

10 = ISPC links establishment

11 = usage of broadcasting routes

**Note 1:** To use the print command enter a space (not a carriage return) after the customer number.

**Note 2:** If no reports are currently set, NIL is output by the system. For report 5, see "Set customer for feature key usage measurement".

## Network reports

To print the current report types: TOPN C r r ...

To set one or more report types: SOPN C r r ... -- R R ....<cr>

To clear one or more report types: COPN C r r ... -- R R ....<cr>

### Legend

C = customer number

R is traffic report type:

1 = route list measurements

2 = network class of service measurements

3 = incoming trunk group measurements

**Note 1:** To use the print command enter a space (not a carriage return) after the customer number.

**Note 2:** If no reports are currently set, NIL is output by the system.

## Set customer for feature key usage measurement

To print current customer being measured: TCFT c

To set the customer to be measured: SCFT c -- C

**Note:** Where C is the customer number. Only one customer can have feature measurement set at a time.

## Stop printing of title, date and time

It is possible to suppress the printing of the title (TFS000), date and time in cases where traffic measurement is scheduled but no other data is printed. The command format is:

IDLT 0,1

0 = no title is printed unless further data is also printed

1 = the title is always printed

## Set traffic measurement on selected terminals

These commands are used to print, set and clear the Individual Traffic Measurement (ITM) class of service for given terminal numbers for traffic report TFS005. Telephone sets, trunk and DTI channels can have this class of service. Terminals with ITM set are included in the groups for which Line Traffic Measurements are recorded.

*Note:* Do not use these commands on superloops or octal density cards (NT8D02, NT8D03, NT8D09, NT8D14, or NT8D16).

To print the current TNs with ITM set: TITM

### Example

TITM

shelf 4 0 (all units on loop 4 shelf 0 have ITM set)

loop 5 (all units on loop 5 have ITM set)

tn 11 3 4 1 (unit on TN 11 3 4 1 has ITM set)

card 13 2 1 (all units on card 13 2 1 has ITM set)

chnl 34 18 (loop 34 channel 18 has ITM set)

To set ITM on terminals: SITM

## Example

```
SITM (prints current settings)
shelf 4 1 (current settings)
loop 05 (all units on loop 5 have ITM set)
tn 11 3 4 1 (unit on TN 11 3 4 1 has ITM set)
card 13 2 1 (all units on card 13 2 1 has ITM set)
chnl 34 18 (only loop 34 channel 18 has ITM set)
-- 7 (set ITM on all units on this loop)
-- 6 1 (set ITM on all units this shelf, or on channel 1)
-- 8 1 1 (set ITM on all units on this card)
-- 8 1 1 1 (set ITM on this unit)
-- 30 18 (set ITM on this loop 30 channel 18)
-- <cr> (stop "--" prompt)
```

To clear line traffic TNs: CITM (the ITM class of service is removed from all units)

## Example

```
CITM (print current settings)
shelf 4 1 (all units on loop 4 shelf 1 have ITM set)
loop 05 (all units on loop 5 have ITM set)
tn 11 3 4 1 (unit on TN 11 3 4 1 has ITM set)
card 19 1 1 (all units on card 13 2 1 has ITM set)
chnl 34 18 (only loop 34 channel 18 has ITM set)
-- 4 1 (clear ITM on all units on this loop 4 shelf 1)
-- 5 (clear ITM on all units on this loop)
-- 11 3 4 1 (clear ITM on this unit)
-- 19 1 1 (clear ITM on all units on this card)
-- 34 18 (clear ITM on this loop 34 channel 18)
-- <cr> (stop "--" prompt)
```

To clear line traffic TNs: CITM (the ITM class of service is removed from all units)

## Set blocking probability for Line Load Control (LLC)

To print current LLC level and blocking probability: TLLC

To set blocking probability: SCTL X aaa

To activate Line Load Control at level X: SLLC X

### Legend

x = F, S or T (for LLC level F, S, or T)

aaa = blocking probability in %

## Set time and date

To print the current time and date:

TTAD day-of-week day month year hour minute second

### Example

TTAD WED 24 11 1976 15 41 49

To set the time and date:

STAD DAY MONTH YEAR HOUR MINUTE SECOND

### Example

STAD 24 11 1976 15 41 49

*Note:* Except for the year, the other entries in the time of day output are 2-digit numbers. The year may be any year from 1901 to 2099 inclusive. It may be input as a full 4-digit field or as a 2-digit short form. The 2-digit short form is assumed to be in the range 1976 to 2075 and the appropriate addition is made when calculating the day-of-week and leap years.

## Set daily time adjustment

The time of day can be adjusted during the midnight routines to compensate for a fast or slow system clock.

To print the current adjustment: TDTA X y

To set the adjustment: SDTA X y -- X Y

### Legend

x = 0 (negative increment) or 1 (positive increment)

y = 0-60 second adjustment in increments of 100 ms

## Set and print Daylight Savings Time

The daylight savings time adjustment can be programmed to take place automatically. You can set the date to change to daylight savings, and to return to standard time. This information can be queried at any time.

The following commands are accepted by this program for this capability. The system clock **MUST ALREADY** be set for the daylight savings time to be updated. This information survives sysload:

- FWTM = Set the date and time for the clock to move forward.
- BWTM = Set the date and time for the clock to move backward.
- SDST = Enable or disable the automatic change.
- TDST = Query the change information.

To implement these commands, use the following:

- FWTM <month> <week> <day> <hour>  
month = 1-(4)-12 [January-December]  
week = (1)-5, L [1st-5th, L is the last week of the month]  
day = (1)-7 [Sunday-Saturday]  
hour = 1-(2)-22 [Midnight-11:00 pm]
- BWTM <month> <week> <day> <hour>  
month = 1-(10)-12 [January-December]  
week = (1)-5, L [1st-5th, L is the last week of the month]  
day = (1)-7 [Sunday-Saturday]  
hour = 1-(2)-22 [Midnight-11:00 pm]
- SDST ON, (OFF)  
ON enables the automatic change capability  
OFF disables the automatic change capability
- TDST <CR>

The output reflects the input format to indicate the change information.

## Set thresholds

To print the current system thresholds: TTHS TH tv

To set the system thresholds: STHS TH tv -- TV

The system thresholds (TH) and range of values (TV) are:

- 1 = dial tone speed (range 0.00% to 99.9%)
- 2 = loop traffic (range 000 to 999 CCS)
- 3 = junctor group traffic (range 0000 to 9999 CCS)
- 4 = superloop traffic (range 0000 to 9999 CCS)
- 5 = zone bandwidth (range 000 to 999)

To print the current customer thresholds: TTHC C TH tv

To set the customer thresholds: STHC C TH tv -- TV

### Legend

The thresholds (TC) and range of values (TV) for customer C are:

- 1 = incoming matching loss (TV range 00.0% to 99.9%)
- 2 = outgoing matching loss (TV range 00.0% to 99.9%)
- 3 = average Speed of Answer (TV range 00.0 to 99.9 seconds)
- 4 = percent All Trunks Busy (TV range 00.0% to 99.9%)
- 5 = percent OHQ Overflow (TV range 00.0% to 99.9%)

## Perform threshold tests on last reports

To perform threshold tests on customer reports: ITHC C TH

### Legend

C = customer number

TH is the threshold type:

- 1 = incoming matching loss
- 2 = outgoing matching loss
- 3 = average speed of answer
- 4 = percent all trunks busy
- 5 = percent OHQ overflow

To perform threshold tests on system reports: ITHS TH

### Legend

TH is the threshold type:

- 1 = dial tone speed
- 2 = loop traffic
- 3 = junctor group traffic
- 4 = superloop traffic

**Note:** When a threshold test passes, OK is output.

## Print last reports

The last traffic reports can be printed or tested against threshold values. Data accumulating for the next reports is not accessible.

To print one or more of the last customer reports: INVC C R R ...

### Legend

C = customer number

R is traffic report type:

1 = networks

2 = trunks

3 = customer console measurements

4 = individual console measurement

5 = feature key usage

6 = Radio Paging

7 = Call Park

8 = messaging and auxiliary processor links

9 = Network Attendant Service

10 = ISPC links establishment

11 = usage of broadcasting routes

To print one or more of the last network reports: INVN C R R ...

### Legend

C = customer number

R is traffic report type:

1 = route list measurements

2 = network class of service measurements

3 = incoming trunk group measurements

To print one or more of last system reports: INVS R R ...

## Legend

R is traffic report type:

- 1 = networks (per loop)
- 2 = services
- 3 = dial tone delay
- 4 = processor load
- 5 = selected terminals
- 7 = junctor group traffic
- 8 = CSL and ISDN/AP links
- 9 = D-channel
- 10 = ISDN GF Transport
- 11 = MISP traffic
- 12 = MISP D-channel management
- 13 = MISP messaging
- 14 = ISDN BRI trunk DSL system report
- 15 = MPH traffic
- 16 = Internet Telephone Zone traffic report

## Print alarm and exception filter summary

Alarms status summaries can be printed by this overlay. The alarms printed by this overlay are discussed in the *System Management* (553-3001-300).

Enter any of the following commands at the dot (.) prompt.

Command	Description	Release
ASUM	Print Alarm/Exception summary	alm_filter-19
ASUM A	Print all the alarms that have at least one occurrence	alm_filter-21
ASUM E	Print all the alarms that have escalated	alm_filter-21

---

## LD 10: Analog (500/2500) Telephone Administration

---

This Overlay program allows data blocks for the 500/2500, DTMF type telephones and Displayphone 1000/220 to be created or modified.

When the Overlay is loaded the available system memory, disk records and system configuration limits are output in a header as follows:

```
>ld 10
```

```
PBX000
```

```
MEM AVAIL: (U/P): xxxxxx USED U P: xxxxxx xxxxxx TOT: xxxxxx
```

```
DISK RECS AVAIL: xxx
```

```
TNS AVAIL: xxx USED: xxx TOT: xxx
```

```
ACD AGENTS AVAIL: xxx USED: xxx TOT: xxx
```

```
ANALOGUE TELEPHONES AVAIL: xxx USED: xxx TOT: xxx
```

```
AST AVAIL: xxx USED: xxx TOT: xxx
```

```
ANALOGUE TELEPHONES AVAIL : xxxxxUSED: xx TOT: xxxx
```

```
AST AVAIL: xxxxxUSED: XX TOT: xxxx
```

```
WIRELESS TELEPHONES AVAIL: xxxxx USED: xx TOT: xxxx
```

```
WIRELESS VISITORS AVAIL: xxxxx USED: xx TOT: xxxx
```

```
CLASS TELEPHONES AVAIL: xxxxx USED: xx TOT: xxxx
```

```
DATA PORTS AVAIL: xxxxx USED: xx TOT: xxxx
```

```
PHANTOM PORTS AVAIL: xxxxx USED: xx TOT: xxxx
```

If an Incremental Software Management (ISM) limit is set to the maximum value 32767, then the information for that ISM will not be printed. This does not apply for the TNs ISM.

The Group Hunt/DN Access to SCL (PLDN) package 120 allows an asterisk (\*) or double asterisk(\*\*) as a valid input to a number of prompts. Usually the asterisk will be part of a dialed number. Without this package, for example, inputting one asterisk will cause the system to reissue the last prompt, and two asterisks will cause a restart of the Overlay at REQ.

## Linked Overlay programs

Overlay programs 10, 11, 20 and 32 are linked thus eliminating the need to exit one Overlay and enter another. Once one of the above Overlays has been loaded it is possible to add, print and get the status of a set without having to exit one Overlay and load another.

The input processing has also been enhanced. Prompts ending with a colon (:) allow the user to enter either:

- 1 a question mark (?) followed by a carriage return (<cr>) to get a list of valid responses to that prompt or
- 2 an abbreviated response. The system then responds with the nearest match. If there is more than one possible match the system responds with SCH0099 and the input followed by a question mark and a list of possible responses. The user can then enter the valid response.

# Prompts and responses

## Contents

Section	Page
<i>Prompts and responses by task:</i>	
Add a telephone	84
Copy a set	86
Easy change	87
Remove a telephone	87
Move a telephone	88

Prompt	Response	Comment
REQ:	a...a	Request (REQ responses begin on page 113)
DMC	l s c	DECT Mobility Controller Location
TYPE:	a...a	Type of data block (TYPE responses begin on page 118)
MODL	1-127	Model number for Small System and Succession 1000
CFTN	l s c u	Copy From Terminal Number (l s c u ranges are defined on page 117)
SFMT	a...a	Select format for copy command (a...a = TNDN, TN, DN, or AUTO)
TN	l s c u	Terminal Number (l s c u ranges are defined on page 117)
DELETE_VMB	(YES) NO	Delete Voice Mailbox
ECHG	(NO) YES	Easy Change
- ITEM	aaaa yyy	Item (aaaa = Program mnemonic; yyy = its new value)
TOTN	l s c u	To Terminal Number (l s c u ranges are defined on page 117)
CDEN	aa	Card Density (aa = SD, DD, 4D, or 8D)
DES	d...d	Office Data Administration System Station Designator
CUST	xx	Customer number associated with this set

# LD 10

WRLS	(NO) YES	TN corresponds to a portable personal telephone
- WTYP	aaaa	Meridian Companion Mobility Option
- MWUN	(16) 32	Maximum number of Wireless Units
- DMC	l s c	DECT Mobility Controller Location
- INDX	0-509	DECT Mobility Controller index to map hand set to Virtual TN
- VSIT	(NO) YES	Visiting DECT set
- HMDN	x..x	Home Directory Number
DIG	0-2045 0-99	Dial Intercom Group number and Member number
DN	x..x yyyy	Directory Number and CLID table entry (Range is (0)-value entered for SIZE prompt in LD 15 minus one)
- MARP	(NO) YES	Multiple Appearance Redirection Prime
-- CPND_LANG	aaa	Calling Party Name Display Language (aa = (ROM) or KAT)
-- NAME	aaaa,bbbb	Calling Party Name Display Name
-- XPLN	xx	Expected name length
- DISPLAY_FMT	aaaa,bbbb	Display Format for Calling Party Name Display
- VMB	aaa	Voice Mailbox (aaa = NEW, CHG, or OUT)
-- VMB_COS	0-127	Voice Mailbox Class Of Service
-- SECOND_DN	x...x	Second DN sharing the Voice Mailbox
-- THIRD_DN	x...x	Third DN sharing the Voice Mailbox
-- KEEP_MSGS	(NO) YES	Preserve Meridian Mail messages and current password
- ANIE	(0)-n	Automatic Number Identification Entry
AST	(NO) YES	Associate Set assignment
IAPG	(0)-15	Meridian Link Unsolicited Status Message (USM) group
HUNT	x...x	Hunt DN of the next station in the Hunt chain
TGAR	xx	Trunk Group Access Restriction
LDN	a...a	Departmental Listed DN (a...a = (NO), 0-3, or 0-5)
NCOS	(0)-99	Network Class Of Service group number
RNPG	(0)-4095	Ringing Number Pickup Group
XLST	(0)-254	Pretranslation group with which this station is associated
SCPW	xxxx	Station Control Password
SGRP	(0)-999	Scheduled Access Restriction group number
CRCS	0-7	Code Restriction Block
ELKP	x...x	Electronic Lock Password
SFLT	a...a	Secretarial Filtering (a...a = (NO), BOSS, or SEC)
- SFDN	xxxx	Secretarial Forwarding DN of secretary set
CAC	(0)-10	Category Code for outgoing CNI of MFC trunks
CAC_CIS	0-(3)-9	CIS ANI Category Code

---

CAC_MFC	(0)-10	MFC CNI Category Code
CLS	a...a	Class of Service options (CLS responses begin on page 90)
MAUT	(NO) YES	Modify assigned authorization codes for this telephone
- SPWD	xxxx	Secure data password
- AUTH	n xxxx	Authorization code
RCO	(0)-2	Ringing cycle option for Call Forward No Answer
DCLP	0-159	Dealer Conference Loop
ICT	0-<NIPN>	Intercept Computer Terminal or printer number
LNRS	4-(16)-31	Last Number Redial Size
TEN	1-51	Tenant Number
OHID	(0)-9	Off-Hook Alarm Security DN Index defined in LD 15
HDID	(0)-9	Off-Hook Alarm Security Half Disconnect Index defined in LD 15
PLEV	0-(2)-7	Priority Level
SCI	(0)-7	Station Category Indication priority level
FCAR	(NO) YES	Forced Charge Account Restriction
MLWU_LANG	(0)-5	Language choice for Automatic Wake Up service
PLEV	0-(2)-7	Priority Level
SPID	x...x	Supervisor Position ID
PRI	(1)-48	Priority level for ACD Agent
AACD	(NO) YES	AST ACD telephone
ARTO	(0)-3	Alternate Redirection Time Option for call redirection
ADAY	(0)-3	Alternate Days as defined in LD 15
AHOL	(0)-3	Alternate Redirection Holiday as defined in LD 15
FTR	a...a x...x	Feature name and related data (FTR responses begin on page 104)
TIMP	xxx	Termination Impedance for XOPS unit (xxx = (600) or 900)
BIMP	a...a	Balance Impedance for XOPS unit (a...a = 600, 900, 3COM, or 3CM2)

---

## Prompts and responses by task

### Add a telephone

Prompt	Response	Comment
REQ:	NEW	
TYPE:	a...a	Type of data block (TYPE responses begin on page 118)
MODL	1-127	Model number for Small System and Succession 1000
TN	l s c u	Terminal Number (l s c u ranges are defined for TN on page 117)
CDEN	aa	Card Density (aa = SD, DD, 4D, or 8D)
DES	d...d	Office Data Administration System Station Designator
CUST	xx	Customer number associated with this set
WRLS	(NO) YES	TN corresponds to a portable personal telephone
- WTYP	aaaa	Meridian Companion Mobility Option
- MWUN	(16) 32	Maximum number of Wireless Units
- DMC	l s c	DECT Mobility Controller Location
- INDX	0-509	DECT Mobility Controller index to map hand set to Virtual TN
- VSIT	(NO) YES	Visiting DECT set
- HMDN	x..x	Home Directory Number
DIG	0-2045 0-99	Dial Intercom Group number and Member number
DN	x..x yyyy	Directory Number and CLID table entry (Range is (0)-value entered for SIZE prompt in LD 15 minus one)
- MARP	(NO) YES	Multiple Appearance Redirection Prime
- CPND	aaa	Calling Party Name Display
-- CPND_LAN	aaa	Calling Party Name Display Language (aaa = (ROM) or KAT)
-- NAME	aaaa,bbbb	Calling Party Name Display Name
-- XPLN	xx	Expected name length
- DISPLAY_FMT	aaaa,bbbb	Display Format for Calling Party Name Display
- VMB	aaa	Voice Mailbox (aaa = NEW, CHG or OUT)
-- VMB_COS	0-127	Voice Mailbox Class Of Service
-- SECOND_DN	x...x	Second DN sharing the Voice Mailbox
-- THIRD_DN	x...x	Third DN sharing the Voice Mailbox
-- KEEP_MSGS	(NO) YES	Preserve Meridian Mail messages and current password

---

- ANIE	(0)-n	Automatic Number Identification Entry
AST	(NO) YES	Associate Set assignment
IAPG	(0)-15	Meridian Link Unsolicited Status Message (USM) group
HUNT	x...x	Hunt DN of the next station in the Hunt chain
TGAR	xx	Trunk Group Access Restriction
LDN	aaa	Departmental Listed DN (aaa = (NO), 0-3, or 0-5)
NCOS	(0)-99	Network Class of Service group number
RNPG	(0)-4095	Ringing Number Pickup Group
XLST	(0)-254	Pretranslation group with which this station is associated
SCPW	xxxx	Station Control Password
SGRP	(0)-999	Scheduled Access Restriction Group number
CRCS	0-7	Code Restriction Block
ELKP	x...x	Electronic Lock Password
SFLT	aaa	Secretarial Filtering (aaa = (NO), BOSS, or SEC)
- SFDN	xxxx	Secretarial Forwarding DN of secretary set
CAC	(0)-10	Category Code for outgoing CNI of MFC trunks
CAC_CIS	0-(3)-9	CIS ANI Category Code
CAC_MFC	(0)-10	MFC CNI Category Code
CLS	a...a	Class of Service options (CLS options begin on page 90)
MAUT	(NO) YES	Modify assigned authorization codes for this telephone
- SPWD	xxxx	Secure Data Password
- AUTH	n xxxx	Authorization code
RCO	(0)-2	Ringing Cycle Option for Call Forward No Answer
DCLP	0-159	Dealer Conference Loop
ICT	0-<NIPN>	Intercept Computer Terminal or printer number
LNRS	4-(16)-31	Last Number Redial Size
TEN	1-51	Tenant Number
OHID	(0)-9	Off-Hook Alarm Security DN Index defined in LD 15
HDID	(0)-9	Off-Hook Alarm Security Half Disconnect Index defined in LD 15
SCI	(0)-7	Station Category Indication priority level
FCAR	(NO) YES	Forced Charge Account Restriction
MLWU_LANG	(0)-5	Language choice for Automatic Wake Up service
PLEV	0-(2)-7	Priority Level
SPID	x...x	Supervisor Position ID
PRI	(1)-48	Priority level for ACD Agent
AACD	(NO) YES	AST ACD telephone

---

# LD 10

ARTO	(0)-3	Alternate Redirection Time Option for call redirection
ADAY	(0)-3	Alternate Days as defined in LD 15
AHOL	(0)-3	Alternate Redirection Holiday as defined in LD 15
FTR	a...a x...x	Feature name and related data (FTR options begin on page 104)
TIMP	xxx	Termination Impedance for XOPS unit (xxx = (600) or 900)
BIMP	a...a	Balance Impedance for XOPS unit (a...a = 600, 900, 3COM, or 3CM2)

---

## Copy a set

---

Prompt	Response	Comment
REQ:	CPY 1-32	Request = CPY x
TYPE:	a...a	Type of data block
CFTN	l s c u	Copy from Terminal Number (l s c u ranges are defined on page 117)
SFMT	aaaa	Select Format. You may respond to SFMT with: AUTO, TNDN, TN or DN. Subprompts follow each of these responses as follows:
	<b>AUTO</b>	The system provides the new TNs, DNs and ACD position ID for ACD telephones are provided by the system.
- TN	l s c u	TN of new set (l s c u ranges are defined on page 117)
- DN	x..x yyyy	Directory Number and CLID table entry (Range is (0)-value entered for SIZE prompt in LD 15 minus one)
- POS	xxxx	ACD position ID
	<b>TNDN</b>	Manual selection of TNs, DNs and ACD position IDs for ACD telephones. TN, DN and are prompted -n- times as defined by the CPY command.
- TN	l s c u	TN of new set (l s c u ranges are defined on page 117)
- DN	x..x yyyy	Directory Number and CLID table entry (Range is (0)-value entered for SIZE prompt in LD 15 minus one)
- POS	xxxx	ACD position ID
	<b>TN</b>	New DNs and ACD position IDs for ACD telephones are provided by the system. TN is prompted -n- times as defined in the CPY command.
- DN	x..x yyyy	Directory Number and CLID table entry (Range is (0)-value entered for SIZE prompt in LD 15 minus one)
- POS	xxxx	ACD position ID
- TN	l s c u	TN of new set (l s c u ranges are defined on page 117)

---

	<b>DN</b>	The new TNs are provided by the system. You are prompted for the starting TN and each DN and ACD position ID for ACD telephones. DN and/or POS are prompted n times as defined in the CPY command.
- TN	l s c u	TN of new set (l s c u ranges are defined on page 117)
- DN	x..x yyyy	Directory Number and CLID table entry (Range is (0)-value entered for SIZE prompt in LD 15 minus one)
- POS	xxxx	ACD position ID

## Easy change

Prompt	Response	Comment
REQ:	CHG	Request = CHG
TYPE:	a...a	Type of data block
MODL	1-127	Model number for Small System and Succession 1000
TN	l s c u	Terminal Number (l s c u ranges are defined on page 117)
ECHG	YES	Easy Change
ITEM	aaaa yyy	Item (aaaa = Program mnemonic; yyy = its new value)

## Remove a telephone

When removing more than one telephone at a time, you are prompted for the starting TN. The next consecutive assigned TNs are removed.

Prompt	Response	Comment
REQ:	OUT 1-32	Request = OUT x
TYPE:	a...a	Type of data block
TN	l s c u	Terminal Number (l s c u ranges are defined on page 117)
DELETE_VMB	(YES) NO	Delete Voice Mailbox

# LD 10

## Move a telephone

Telephones with mixed directory numbers can only be moved to a TN on the same loop unless the prompt MLDN = YES in LD 17.

---

Prompt	Response	Comment
REQ:	MOV	Request = MOV
TYPE:	a...a	Type of data block
TN	l s c u	Terminal Number (l s c u ranges are defined on page 117)
TOTN	l s c u	To Terminal Number (l s c u ranges are defined on page 118)

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
AACD	(NO) YES	Associate set (AST) ACD telephone	ism-17
ADAY	(0)-3	Alternate Days as defined in LD 15 Prompted if CLS = RBDA	basic-24
AHOL	(0)-3	Alternate Redirection Holiday as defined in LD 15 Prompted if CLS = RBHA	basic-24
ANIE	(0)-n	ANI Entry: it is of (0)-N where N=S_SIZE in customer data block.  If ANIE=0, no entry is associated with the set. The old mechanism will be used for building the ANI message.  If ANIE is of 1-N: <ul style="list-style-type: none"> <li>• If ANIC = YES for the outgoing CIS route where the call takes place, then the components of the ANI message are retrieved from the ANI entry in Customer Data Block, if configured.</li> <li>• If the given ANI Entry is not configured, or if ANIC = NO for the outgoing CIS route where the call takes place, then the old mechanism is used for building the ANI message.</li> </ul>	cist-24
ARTO	(0)-3	Alternate Redirection Time Option for call redirection, defined in the customer data block. Prompted if CLS = RTDA.	basic-22
AST	(NO) YES	Associate Set assignment For sets associated with ISDN Applications Protocol features.	iap3-12
AUTH	n xxxx	Authorization code. Where:  n = number (1-6) of assigned authorization code xxxx = assigned authorization code (Any customer authorization code assigned in LD 88 is valid.)  AUTH is prompted when CLS = AUTR (Class of Service = Authorization code required).	ssau-19

# LD 10

Prompt	Response	Comment	Pack/Rel
BIMP		Balance Impedance for Enhanced Off-Premise Station (XOPS) unit	basic-20
	600	600 ohms. This is the default, except when CLS = OPS.	
	900	900 ohms	
	3COM	3 component	
	3CM2	3 component 2. This is the default if CLS = OPS.	
CAC		Category code	mfc-14
	(0)-10	Category Code range for outgoing CNI of MFC trunks when Multifrequency Compelled Signaling (MFC) package 128 is equipped.	
	0-(3)-9	Category Code for CIS ANI when Commonwealth of Independent States (CIST) package 211 is equipped.	cist-21
CAC_CIS	0-(3)-9	CIS ANI Category Access Code	cist-24
CAC_MFC	(0)-10	MFC CNI Category Access Code	cist-24
CDEN	SD	Single Density Card	basic-7
	DD	Double Density Card	
	4D	Quadruple Density Card	
	8D	Octal Density Card	
		XOPS cards are configured as DD on superloops or small systems.	
		If REQ=NEW and the loop is a superloop, the default is 4D. If REQ=NEW and the XOPS card is to be configured on the loop, set CDEN to DD. If REQ=CHG, the card density is not changed.	
		<b>Note:</b> If a QPC192 (off-premises extension) card is configured in superloop, then the response for CDEN should be Quadruple Density.	
CFTN		Copy From Terminal Number. Prompted if REQ = CPY.	basic-12
	l s c u	For Large System	
	c u	For Small System	
		Use this TN as a template for the new sets. Associate set (AST) assignments are not copied to the new telephones.	
CLS	CLS	Class of Service options	basic-1
		The following CLS assignments determine the calling options and features available to an analog telephone. Defaults are shown in parentheses. Enter each non-default option required, separated by a space.	

Prompt	Response	Comment	Pack/Rel
		Access Restrictions	basic-1
(CTD)		Conditionally Toll Denied (default)	
UNR		Unrestricted	
CUN		Conditionally Unrestricted.	
TLD		Toll Denied.	
SRE		Semi-Restricted.	
FRE		Fully Restricted.	
FR1		Fully Restricted 1.	
FR2		Fully Restricted 2.	
(ABDD)		Abandoned call record and time to answer denied	fcdr-18
ABDA		Abandoned call record and time to answer allowed	
(AGTD)		ACD services for 500/2500 type telephone sets denied	phtn-20
AGTA		ACD services for 500/2500 type telephone sets allowed	
		An AGTA entry will not be validated if you do not define FEAT = ACD in the same pass through this overlay.	
(ALCA)		ALC loss plan class A port type	cdr-18
ALCB		ALC loss plan class B port type	
(ARHD)		Audible Reminder of Held Call Denied	basic-14
ARHA		Audible Reminder of Held Call Allowed	
(ASCD)		Alarm Security Denied	ohas-18
ASCA		Alarm Security Allowed	
		Mutually exclusive with Three-Party Service Allowed (TSA)	
(AUTU)		Unrestricted Authcode	ssau-19
AUTD		Denied Authcode	
AUTR		Restricted Authcode	
		When the CLS is changed from AUTR to either AUTU or AUTD, all previous telephone authorization code information is removed. Must have Station Specific Authorization Codes (SSAU) package 229.	
(BNRD)		Busy Number Redial Denied	ffc-21
BNRA		Busy Number Redial Allowed	
		Must have ADL configured and Flexible Feature Codes (FFC) package 139.	

# LD 10

Prompt	Response	Comment	Pack/Rel
(C6D) C6A	Six-Party Conference Denied Six-Party Conference Allowed	C6A requires Transfer Allowed (XFA) Class of Service.	basic-10
(CCBD) CCBA	Collect Call Blocking Denied (permits a set to accept collect calls) Collect Call Blocking Allowed (prevents a set from accepting collect calls)	Must have Collect Call Blocking (CCB) package 290.	ccb-21
(CCSD) CCSA	Controlled Class of Service Denied Controlled Class of Service Allowed	CCSA is required for the Electronic Lock feature. See the Flexible Feature Codes section in the <i>Features and Services</i> (553-3001-306). Must have Controlled Class of Service (CCOS) package 81.	phfn-20
(CDMD) CDMA	CDMD denies record generation CDMA allows external station activity records to be generated for the set		emct-20
(CFHD) CFHA	Call Forward/HUNT Override Denied Call Forward/HUNT Override Allowed		cfho-20
(CFTD) CFTA	Call Forward by Call Type Denied Call Forward by Call Type Allowed	Call Forward by Call Type enhances Hunt and Call Forward No Answer. CFTA requires Hunting Allowed (HTA) and/or Call Forward Allowed (FNA) Class of Service.	opft-10

Prompt	Response	Comment	Pack/Rel
(CFXD) CFXA		Call Forward All Calls to external DN Denied Call Forward All Calls to external DN Allowed  Examples of external DNs are: Route Access Code ESN Access Code CDP Distant Steering Code  When Denied, a call can only be forwarded to the following internal DNs: Single or multi-line telephone Attendant DN or CAS local attendant DN Listed DN as defined in LD 15 Message center DN where MWC = YES	optf-19
(CLBD) CLBA		Deactivate Calling Party Number and Name per-line blocking Activate Calling Party Number and Name per-line blocking The user may still request CPP by dialing the CPP code.	cpp-21
(CLTD) CLTA		Network Call Trace from this telephone Denied Network Call Trace from this telephone Allowed	pra-17
(CNAD) CNA A		CLASS Calling Name Denied. CLASS Calling Name Multiple Data Format Allowed.  Note: CNUD/CNUD/CNUS/CNAD/CNA A are not a valid input for a Dial Intercom Group (DIG) set.	cname-23
(CNAD) CNA A		CLASS Calling Name Denied. CLASS Calling Name Multiple Data Format Allowed.  Note: CNUD/CNUD/CNUS/CNAD/CNA A are not a valid input for a Dial Intercom Group (DIG) set.	cname-23
(CNDD) CNDA		Call Number Display Denied Call Number Display Allowed  Allows user to see calling or called name associated with the number dialed if CPND is set up for the customer associated with the portable personal telephone. Allowed if WRLS = YES.	mcmo-20

# LD 10

Prompt	Response	Comment	Pack/Rel
	(CNID) CNIA	Call Number Information Denied Call Number Information Allowed	bgd-10
	(CNUD) CNUA CNUS	CLASS Calling Number Delivery Denied. CLASS Calling Number Multiple Data Format Allowed. CLASS Calling Number Single Data Format Allowed.	cnumb-23
	(CPFA) CPFD	Forced Camp-On from another set Allowed Forced Camp-On from another set Denied	scmp-15
	(CPTA) CPTD	Forced Camp-On to another set Allowed Forced Camp-On to another set Denied	scmp-15
	(CRD) CRA	Continuous Ring Denied Continuous Ring Allowed	scmp-15
	(CWD) CWA	Call Waiting Denied Call Waiting Allowed The telephone should also have CLS = HTD (Hunting Denied) since hunting takes precedence.	basic-1
	(CWND) CWNA	Call Waiting Notification Denied Call Waiting Notification Allowed Must have Call Waiting Notification (CWNT) package 225.	cwnt-19
	(DDGA) DDGD	DN display on other set Allowed DN display on other set Denied	dpd-21
	(DNAA) DNAD	DN of set will be used in 3WT ANI messages. Outgoing 3WT route will be used as DN in 3WT ANI messages. Must have Commonwealth of Independent States (CIST) package 221.	cist-21
	(DNDY) DNDN	Diversion Notification with called party's number and name when available. Diversion Notification without called party's number and name.	qsigss-23
	(DNO3) DNO1 DNO2	Diversion Notification Option with diverted-to party's number and name when available. Diversion Notification Option without notification. Diversion Notification Option without diverted-to party's number and name.	qsigss-23

Prompt	Response	Comment	Pack/Rel
(DTN)		Digitone. DTN is used for 2500, UNITY and digitone telephones.	basic-20
DIP		Dial Pulse. DIP is used for 500, rotary and dial pulse telephones.	
MNL		Manual service. MNL is used for manual service to the attendant and Flexible Hot Line	
(DPUD)		DN Pickup Denied	dcp-12
DPUA		DN Pickup Allowed DN Pickup is not allowed on telephones in group zero (RNPG = 0). Must have Directed Call Pickup (DCP) package 115.	
(DSH)		Digital Short telephone set	ida-16
DLO		Digital Long telephone set Select DLO for line lengths of 2 km or 1.2 miles or more. Must have Integrated Digital Access (IDA) package 122.	
(EHTD)		Enhanced Hot Line Denied	phtn-20
EHTA		Enhanced Hot Line Allowed Cannot be assigned with LLC1, LLC2, LLC3, LNA, MNL or Permanent Hold feature.	
(EXR0)		Executive Distinctive Ringing Off 0	edrg-16
EXR1		Executive Distinctive Ringing On 1	
EXR2		Executive Distinctive Ringing On 2	
EXR3		Executive Distinctive Ringing On 3	
EXR4		Executive Distinctive Ringing On 4	
		The digit indicates which of the four distinctive ringing tones and cadences defined in LD 56 is to be used. Must have Executive Distinctive Ringing (EDRG) package 185.	
(FAXD)		Fax denied	euro-22
FAXA		Fax allowed. ISDN call is generated with 3.1 KHz Bearer Capability. Set is a modem or a FAX machine.	
(FBD)		Call Forward Busy Denied	basic-1
FBA		Call Forward Busy Allowed  Call Forward Busy Allowed sends DID calls which encounter a busy condition to the attendant. Call Forward Busy should have Hunting and Call Waiting Denied or CLS = HTD and CWD, since Hunting and Call Waiting take precedence over FBA.	

# LD 10

Prompt	Response	Comment	Pack/Rel
	(FDSD) FDSA	Force Disconnect Denied Force Disconnect Allowed	ponw-25.4
	(FND) FNA	Call Forward No answer Denied Call Forward No answer Allowed	basic-1
	(FTTC) FTTR	Flexible Trunk to Trunk Connections Conditional allows trunk to trunk connections for supervised Conference. Flexible Trunk to Trunk Connections Restricted denies trunk to trunk connections for Transfer and unsupervised Conference.	basic-23
	FTTU	Flexible Trunk to Trunk Connections Unrestricted allows trunk to trunk connections for both Conference and Transfer.	
	(GPUD) GPUA	Group Pickup Denied Group Pickup Allowed Group Pickup is not allowed on telephones in group zero. Must have Directed Call Pickup (DCP) package 115.	dcp-12
	(HBTD) HBTA	Hunt By call Type Denied Hunt By call Type Allowed	basic-10
	(HSPD) HSPA	Hospitality Denied. HSPD is for administration sets. Hospitality Allowed. HSPA is for room sets.  For HSPA, you must also enter CLS = CCSA and CLS = MRA. HSPA CLS cannot be entered for a set with transfer or conference capability. This feature is used for Hospitality Management.	hvs-16
	(HTD) HTA	Hunting Denied Hunting Allowed	basic-1
	(IAMD) IAMA	ICP Answering Machine Denied ICP Answering Machine Allowed This features allows a 2500 set to be a channel in the Intercept Computer Interface (ICP) Answering Machine.	icp-16
	(ICDD) ICDA	Internal Call Detail Recording Denied Internal Call Detail Recording Allowed	icdr-10
	(IRGD) IRGA	Interrogation set Denied for intercept computer Interrogation set Allowed for intercept computer	icp-14

Prompt	Response	Comment	Pack/Rel
	(LDTD) LDTA	Line Disconnect Tone Denied Line Disconnect Tone Allowed	basic-17
	(LLCN) LLC1 LLC2 LLC3	Line Load Control off Line Load Control Class 1 Line Load Control Class 2 Line Load Control Class 3	llc-13
	(LND) LNA	Last Number Redial Denied Last Number Redial Allowed Must have OPT = LRA in LD 15	lnr-8
	(LPD) LPA	Message Waiting Lamp Denied Message Waiting Lamp Allowed	phtn-20
		If a modem is connected to a port on the message waiting line card, that port should be defined as LPD. With LPA the modem may be damaged by the message waiting lamp voltage 150 V.	
	(LPR) HPR	Low Priority station High Priority station High Priority will place this set or trunk at the top of the dial tone queue.	povr-1
	(MBXD)  MBXA	Multi-Party Operation (MPO) Blind Transfer Denied. When CLS = MBXD, blind transfers occur with mis-operation treatment.  Multi-Party Operation (MPO) Blind Transfer Allowed. When CLS = MBXA, blind transfers occur without mis-operation treatment. To configure CLS = MBXA, CLS must first be defined as TSA or XFA. Multi-Party Operations (MPO) package 141 must be equipped to enter MBXD or MBXA.	mpo-21
	(MCRD) MCRA	Multiple Call Arrangement Denied Multiple Call Arrangement Allowed	basic-15
	(MCTD) MCTA	Malicious Call Trace signal Denied Malicious Call Trace signal Allowed MCT is applied on a TN basis.	mct-10
	(MIND) MINA	Message Interrupt Denied Message Interrupt Allowed	mr-15

# LD 10

Prompt	Response	Comment	Pack/Rel
(MRD) MRA		Message Registration Denied Message Registration Allowed	mr-10
(MWD) MWA		Message Waiting Denied Message Waiting Allowed	mwc-1
(NAMA) NAMD		Name display Allowed Name display Denied	dpd-21
(NOVD) NOVA		Network Override/Breakin Denied Network Override/Breakin Allowed	ponw-25.4
(NRCD) NRCA		Night Restriction for forced Camp-On Denied Night Restriction for forced Camp-On Allowed If night restriction is allowed, then forced Camp-On for this set is allowed during night service only.	povr-16
(NROD) NROA		Night Restriction for Priority Override Denied Night Restriction for Priority Override Allowed If night restriction is allowed, then Priority Override for this set is allowed during night service only.	povr-16
(NRWD) NRWA		Night Restriction for Call Waiting Denied Night Restriction for Call Waiting Allowed If Night Restriction is allowed, then Call Waiting for this set is allowed during night service only.	povr-16
(OCBD) OCBA		Outgoing Call Barring Denied Outgoing Call Barring Allowed Must have FFC and NFCR packages.	ccb-21
(ONP) OPX		On-Premises extension Off-Premises extension Supported by QPC192 only.	basic-1
OPS ONS		Off-Premises Station (default if CDEN is DD) On-Premises Station (default for all others)	xpe-20
(OVDD) OVDA		Override Denied Override Allowed Must have Flexible Feature Codes (FFC) package 139	ffc-15

Prompt	Response	Comment	Pack/Rel
	(PCWD) PCWA	Deny Precedence Call Waiting. Allow Precedence Call Waiting Requires Station Loop Preemption (SLP) package. Requires PRMA class of service.	atvn
	(PDN) LDN	Primary Directory Number Listed Directory Number The number used for the Calling Line Identification (CLID). 500/2500 sets have no display capability but prompt functions to transmit CLID information to sets with digit displays.	pra-12
	(PGND) PGNA	Deny PAGENET access Allow PAGENET access Requires PAGENET package 307.	pagenet-22
	(PHTD) PHTA	Deny Precedence Hunting Allow Precedence Hunting Requires Station Loop Preemption (SLP) package. Requires HTA and PRMA class of service.	
	(PRMD) PRMA	Deny Preemption Allow Preemption Allowed only if Station Loop Preemption (SLP) is equipped. Requires Warning Tone Allowed (WTA) class of service.	atvn
	(PRSD) PRSA	Priority Call Pickup Station Denied Priority Call Pickup Station Allowed	povr-15
	(PUD) PUA	Call Pickup Denied Call Pickup Allowed Default changes to PUA if Ringing Number Pickup Group (RNPG) is defined. Call Pickup is not allowed on telephones in group zero or RNPG = 0.	grp-1
	(RBDD) RBDA	Redirection By Day Denied Redirection By Day Allowed	basic-24
	(RBHD) RBHA	Redirection By Holiday Denied Redirection By Holiday Allowed	basic-24
	(RCC) UCC	Restricted from Receiving Collect Calls Unrestricted from Receiving Collect Calls	fca-10

# LD 10

Prompt	Response	Comment	Pack/Rel
	(RMMD) RMMA RMMO	Remote Monitoring of Messages Denied Remote Monitoring of Messages Allowed Allow Remote Monitoring of Messages and to Override, if it is being already monitored	vmba-24
	(RTDD) RTDA	Call Redirection by Time of day denied Call Redirection by Time of day allowed If CLS = RTDD, AFD/AHNT/AEFD/AEHT will be removed, and ARTO will be reset to zero.	basic-22
	(SFD) SFA	Second Level CFNA Denied Second Level CFNA Allowed SFA requires FNA Class of Service.	basic-10
	(SHL) LOL	Short line Class of Service Long line Class of Service (default if CLS = OPS)  Enter ALC Loss Plan Class of Service to be used for determining the Loss Plan Classification for this unit. If neither SHL or LOL is specified for a NEW unit, then SHL will be set as the default.	xops-20
	(SMSD) SMSA	Standalone Mail Server Denied Standalone Mail Server Allowed	samm-20
	(SMWD) SMWA	Extended Message Waiting Indication Denied. Extended Message Waiting Indication Allowed.	vmba-24
	(SPKD) SPKA	Speaker Denied Speaker Allowed Must have On-Hold on Loudspeaker (OHOL) package 196.	ohol-15
	(SWD) SWA	Station-to-Station Call Waiting Denied Station-to-Station Call Waiting Allowed Enhances Call Waiting Allowed. Must have CLS = CWA. Must also have CLS = HTD, because hunting takes precedence over Station-to-Station Call Waiting.	basic-8
	(TEND) TENA	Tenant Service Denied Tenant Service Allowed	tens-7
	(THFD) THFA	Centrex Trunk Switch Hook Flash on this set denied Centrex Trunk Switch Hook Flash on this set allowed	thf-14

Prompt	Response	Comment	Pack/Rel
	TSA	Three-Party Service allowed TSA is mutually exclusive with ASCA and XFA. If TSA is requested and XFA is currently set, then XFA will be changed to XFD.	mpo-20
	(TVD) TVA	Trunk Verification from station Denied Trunk Verification from station Allowed	tvS-10
	(UDI) RDI	Station is not restricted from receiving DID calls Station is restricted from receiving DID calls	supp-10
	(ULAD) ULAA	Set Based Administration User Access Denied Set Based Administration User Access Allowed	adminset-21
	(USMD) USMA	Meridian 911 position Denied Meridian 911 position Allowed Must have Meridian 911 (M911) package 224	m911-19
	(USRD) USRA	User Selectable Call Redirection Denied User Selectable Call Redirection Allowed	uscr-19
	(WTA) WTD	Warning Tone Allowed Warning Tone Denied	basic-1
	(XFD) XFA XFR	Call Transfer Denied Call Transfer Allowed Call Transfer Restricted  TSA is mutually exclusive with XFA. If TSA is requested and XFA is currently set, then XFA will be changed to XFD. The most recently entered CLS overwrites the prior CLS of the same category. Note that one can specify XFR instead of XFD.	basic-1
	(XHD) XHA	Exclusive Hold Denied Exclusive Hold Allowed	dhld-4
	(XMWD) XMWI	Extended Message Waiting indication Denied Extended Message Waiting indication Allowed	vmba-24
	(XRD) XRA	Ring Again Denied Ring Again Allowed Must have CLS= XFA. RANA may be activated if OPT = RNA in LD 15. When OPT = RND in LD 15, all sets with CLS = XRA will be able to activate only Ring Again Busy.	optf-1

# LD 10

Prompt	Response	Comment	Pack/Rel
CPND	NEW CHG OUT	Calling Party Name Display Add data block Change existing data block Remove existing data block Must have CPND data block defined in LD 95.	cpnd-19
CPND_LANG	(ROM) KAT	Calling Party Name Display Language Roman Katakana CPND_LANG applies when FTR = CPND. CPND_LANG appears only when Multi-Language I/O (MLIO) package 211 is equipped.	cpnd-19
CRCS	0-7	Code Restriction Block	nfc-2
CUST	xx	Customer number associated with this set as defined in LD 15.	cust-1
DCLP	0-159	Dealer Conference Loop DCLP input defines the conference loop assigned to the unit. The loop should be in the same group as the unit.	ohol-20
DELETE_VMB	(YES)  NO	Delete Voice Mailbox Remove the Voice Mailbox from the Meridian 1 and Meridian Mail Remove the Voice Mailbox from the Meridian 1 Prompted if REQ = OUT and TN has an associated Voice Mailbox. Allowed if the DN is either a single appearance or a multiple appearance DN on a single TN.	vmba-19
DES	d...d	ODAS Station Designator Enter a 1-6 alphanumeric character representing an Office Data Administration System (ODAS) Station Designator.	odas-1

Prompt	Response	Comment	Pack/Rel
DIG	0-2045 0-99	<p>Dial Intercom Group (DIG) number and Dial Intercom Member (DIM) numbers.</p> <p>The value entered for the member number cannot be equal to the SPRE code. In the case of double-digit values, the first digit cannot be the same as the SPRE code. For example, if SPRE = 1, the member number cannot be 10, 11...19.</p> <p>Single line telephones assigned as Dial Intercom sets can only make calls within their own dial intercom groups. No DN can be assigned to them.</p> <p>If any member in the group has a two digit member number, all members have a two digit number. The system enters leading zeros.</p> <p>Must have maximum number of Dial Intercom Groups (DGRP) defined in LD 15.</p>	di-1
DISPLAY_FMT	(FIRST, LAST)  LAST, FIRST	<p>Display Format for CPND name</p> <p>May be input as FIRST To view names as John Doe</p> <p>May be input as Last To view names as Doe John</p>	cpnd-19
DMC		Digital Enhanced Cordless Telecommunications (DECT) Mobility Controller Location	mc32-25
	l s c c c	<p>Large System format</p> <p>Small System format</p> <p>Succession 1000 format</p>	basic-1
DN	x..x yyyy	<p>Directory Number (x..x) and CLID table entry (yyyy)</p> <p>The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. DN is not prompted for Small System and Succession 1000 model sets or if DIG is defined.</p> <p>Range for CLID table entry is: [(0) - (value entered for SIZE prompt in LD 15 minus 1)</p>	basic-1

# LD 10

Prompt	Response	Comment	Pack/Rel
		<p>If the new DN entered already exists, one of the following messages will be output when the TNB is updated:</p> <ul style="list-style-type: none"><li>MIX (DN entered already appears on another set)</li><li>PVR (DN is a Private Line number)</li><li>HNT (DN exists and is defined as Hunting Allowed)</li><li>FNA (DN exists and has Forward No Answer)</li></ul> <p>Before the DN can be modified, the station DN must be removed from all Group Hunt lists in which it is a member.</p> <p>ISDN is not required for Calling Line Identification entry.</p>	
ECHG	(NO) YES	<p>Easy Change. Prompted when REQ = CHG.</p> <p>This allows change to any prompt in this program without toggling through all the prompts.</p>	basic-12
ELKP	x...x	<p>Electronic Lock Password</p> <p>Prompted with the Flexible Feature Codes (FFC) package 139. Password length is one to 15 digits, and is set in LD 15.</p>	ffc-14
FCAR	(NO) YES	<p>Forced Charge Account</p> <p>Must use Forced Charge Account</p> <p>Restrict from using Forced Charge Account</p> <p>Prompted if FCAF = YES in LD 15 and CLS = TLD, CUN or CTD. TLD is recommended.</p>	fca-1
FTR	FTR	<p>Enter the feature name and related data.</p> <p>Precede feature mnemonic with X to remove it from the allowed features for the telephone. Prompted with Special Service for 2500 sets (SS25) package 18.</p>	ss25-1
	ACD x...x yyyy	<p>The ACD DN and the ACD position (POS ID)</p> <p>The ACD queue must be set in LD 23. ACD can be up to 4 digits; up to 7 digits with Directory Number Expansion (DNXP) package 150.</p> <p>An ACD entry is only allowed if you have already defined CLS = AGTA in the same pass through this overlay.</p>	ism-16

Prompt	Response	Comment	Pack/Rel
	ADL nn x..x	Auto Dial Auto Dial cannot be configured if Hot Line is defined. nn = number of digits, up to 31 maximum in Auto Dial DN x..x = Auto Dial DN Auto Dial is required for BNRA. Must have Flexible Feature Codes (FFC) package 139.	ffc-15
	AEFD y...y	Alternate External Flexible Call Forward DN, up to 13 digits. Remove by setting CLS = RTDD or CFTD. Where yyyy = Alternate Redirection DN.	basic-22
	AEHT y...y	Alternate External Hunt DN, up to 13 digits. Remove by setting CLS = RTDD or CFTD. Where yyyy = Alternate Redirection DN.	basic-22
	AFD y...y	Alternate Flexible Call Forward DN, up to 13 digits. Remove by setting CLS = RTDD. Where yyyy = Alternate Redirection DN.	basic-22
	AHNT y...y	Alternate Hunt DN, up to 13 digits. Remove by setting CLS = RTDD. Where yyyy = Alternate Redirection DN.	basic-22
	CFW nn x...x	Call Forward all calls  Valid entries are any integer in the range of (4)-31.  Where: nn = maximum number of digits in the CFW DN; it must be large enough to hold the customer Reply DN. Where: x...x = Call Forward DN  If the Enhanced System Access feature is configured, valid entries are 4, 8, 12, (16), 20, 24, 28, 31. Numbers between 4 and 31 are rounded up to the next valid number.  If the Enhanced System Access feature is not configured you may input any integer in the range of (4)-23.	ss25-1

# LD 10

Prompt	Response	Comment	Pack/Rel
	CPND	Call Party Name Display, name assignment allowed Response required only if Background Terminal or PMSI is used to configure names. Response is not required if CPND is programmed in LD 95.	cpnd-10
	DCFW nn x...x	Default Call Forward Where: nn = maximum number of digits in the DCFW DN. Valid entries for nn are: 4, 8, 12, 16, 20, 24, 28, 31. Where: x...x = Default Call Forward DN.	supp-10
	EFD x...x	External Flexible call forward DN (a Group Hunt pilot DN can be entered)  This is the DN to which external no answer calls are routed when Class of Service is Call Forward by Call Type allowed (CLS = CFTA). Must also have CLS = FNA.  EFD is only used if one of the following customer options are defined in LD 15:  FNAD = FDN FNAT = FDN FNAL = FDN  Listed DNs, Departmental Listed DNs and prime DNs are accepted as valid input. EFDs can be up to 13 digits.	basic-10
	EHT x...x	External Hunt DN  This is the DN to which external busy calls Hunt when Class of Service is Call Forward by Call Type allowed (CLS = CFTA). Must also have CLS = HTA.  Listed DNs, Departmental Listed DNs and prime DNs are accepted as valid input. A Group Hunt pilot DN can be entered with up to:  4 digits without DNX package 150 7 digits with DNX package 150 13 digits for Network Call Redirection	basic-10

Prompt	Response	Comment	Pack/Rel
	FAXS x...x	<p>Facsimile server and command sequence</p> <p>The command sequence includes the following:</p> <p>Wx = waiting time of 0 to 9 seconds  Cxxx = control command digits  Oxxxx = originating or designated fax DN  D = the called fax DN</p> <p>For HiMail server, if the designated fax DN is 1234:  FTR FAXS W6 O1234 C#10* D C## W4, or  FTR FAXS W6 O1234 C#20* D C## W4</p> <p>For Phi-Net server, if the designated fax DN is 1234:  FTR FAXS W4 C30 O1234 C*0 D C#</p> <p>The facsimile server TNs must have Digitone (DTN) Class of Service and cannot have FNA, CWA, or FBA Class of Service, or FTR CFW feature.</p> <p>Use the HUNT feature to define the DN of the next port on the facsimile server.</p>	faxs-18
	FDN x...x	<p>Flexible Call Forward No Answer</p> <p>The DN cannot be an LDN</p> <p>A Group Hunt pilot DN can be entered of up to:</p> <p>4 digits without DNXF package 150  7 digits with DNXF package 150  13 digits for Network Call Redirection</p> <p>FDN is used for internal calls, if CLS is CFTA and FNA.  FDN is used for all calls if CLS is CFTD and FNA.  FDN requires that CLS = MWA or FNA.</p> <p>FDN is only used if one or more of the following customer options are defined in LD 15:</p> <p>FNAD = FDN  FNAT = FDN  FNAL = FDN</p>	basic-1
	HOT	<p>Small System Model set</p> <p>Direct entry for Hotline model set. Automatic termination DN is 8 digits.</p> <p>Succession 1000 Model set</p>	hot-16  basic-1

# LD 10

Prompt	Response	Comment	Pack/Rel
	HOT D nn x...x	Direct entry for one way Enhanced Hot Line. Where: nn = up to 31 digits maximum in Target DN x...x = Terminating DN CLS = EHTA and DIP or DTN	hot-10
	HOT D nn x...x yyyy	Direct entry for two way Enhanced Hot Line. Where: nn = up to 31 digits maximum in Target DN x...x = Terminating DN yyyy = optional two way Hot Line DN. This DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. CLS = EHTA and DIP or DTN.	hot-10
	HOT nn x..x	Flexible Hot Line. Where: nn = up to 31 digits maximum in Target DN and x..x = Terminating DN. Flexible Hot Line requires that CLS = MNL.	
	HOT L bbb	One way list entry for Enhanced Hot Line Where: bbb = list entry position from Hot Line list in LD 18. The Hot Line list NCOS overrides the set NCOS.  Enhanced Hot Line requires CLS = EHTA, LLCN, PHTD and DIP or DTN. To remove Hot Line DN, change CLS EHTA to EHTD.  Hot Line DN's can be programmed with * as operands only if OPAO is enabled.	hot-10
	HOT L bbb x...x	Two way list entry for Enhanced Hot Line. Where: bbb = list entry position xxxx = optional two way Hot Line DN. This DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.  Enhanced Hot Line requires CLS = EHTA, LLCN, PHTD and DIP or DTN. To remove Hot Line DN, change CLS EHTA to EHTD.  Hot Line DN's can be programmed with * as operands only if OPAO is enabled.	hot-10

Prompt	Response	Comment	Pack/Rel
	ICF x...x	Internal Call Forward and Forward DN length. Valid entries for x...x are: any integer in the range of (4)-31.	icf-19
	ISP 1-(75)-255	Enable hook flash disconnect supervision with flash timer in 10 milliseconds units. If the numeric parameter is not entered and the saved value is null, it is defaulted to 75 (750 ms). Otherwise, it does not change.	basic-21
	OSP (1)	Enable battery reversal answer and disconnect supervision for outgoing calls with absolute and assumed answer indication.	basic-21
	OSP 2	Enable battery reversal answer and disconnect supervision for outgoing calls with absolute answer indication only.  If the numeric parameter is not entered and the saved value is null, it is defaulted to 1. Otherwise, it does not change.	
	PHD	Permanent Hold. Allowed with CLS = XFA.	basic-1
	RDL nn	Stored Number Redial  Where: nn = DN length 4, 8, 12, (16), 24, 28, 31. Numbers between 5 and 30 are rounded up to the next valid number. Allowed with CLS = XFA.	snr-3
	SCC 0-8190	Speed Call Controller list number The speed call list must be defined in LD 18.	optf-1
	SCU 0-8190	Speed Call User list number The speed call list must be defined in LD 18.	optf-1
	SSU 0-4095	System Speed call User list number The speed call list must be defined in LD 18.	ssc-2
	XISP	Disable hook flash disconnect supervision	
	XOSP	Disable battery reversal answer and disconnect supervision	

# LD 10

Prompt	Response	Comment	Pack/Rel
HDID	(0)-9	Off-Hook Alarm Security Half Disconnect Index defined in LD 15	basic-24
HMDN	x..x	Home Directory Number	msmn-32
HUNT	x...x	Home Directory Number Sets the DN as a valid MCDN network DN Hunt DN of the next station in the Hunt chain A Group Hunt pilot DN can be entered of up to: 4 digits without DNX package 150 13 digits with DNX package 150 Precede with X to remove. With Call Forward and Hunt by Call Type, this is the Hunt DN for: internal calls if CLS = CFTA, or all busy calls if CLS = CFTD A Control Directory Number (CDN) can be defined as a Hunt DN for both physical and phantom 500/2500 sets. When a CDN is configured in this way, a call which comes to a busy DN can be Hunting or Call Forward Busy to a CDN.	basic-1
IAPG	(0)-15	Meridian Link Unsolicited Status Message (USM) group Assign Associate (AST) telephones to an USM group defined in LD 15. These groups determine which status messages are sent to the host computer for an AST telephone. The default Group 0 sends no messages, while Group 1 sends all messages.	aml-16 aml-16
ICT	0-<NIPN>	Intercept Computer Terminal or Printer Number The Number of Intercept Positions (NIPN) is defined in LD 15.	icp-16
INDX	0-509	DECT Mobility Controller index Maps hand set to Virtual TN	mc32-25
ITEM	aaaa yyy	Change any prompt Respond with the desired program mnemonic (aaaa) and its new value (yyy). ITEM is reprompted until only a carriage return <cr> is entered.	basic-12
KEEP_MSGS	(NO) YES	Keep Messages Preserve Meridian Mail messages and current password	vmba-19

Prompt	Response	Comment	Pack/Rel
LDN	(NO) 0-5	Departmental Listed Directory Number is not activated for this set Departmental Listed Directory Number (LDN) as defined in LD 15	dldn-5
LNRS	4-(16)-31	Last Number Redial Size  Enter the maximum number of digits that can be stored. Valid entries are 4, 8, 12, (16), 24, 28, 31. Invalid entries are rounded up to the next valid entry. Prompted if CLS = LNA.	Inr-8
MARP	(NO) YES	Multiple Appearance Redirection Prime Use TN as the Multiple Appearance DN Redirection Prime. The MARP prompt, or MARP information, is given only when assigning a DN.	basic-18
MAUT	(NO) YES	Modify assigned authorization codes for this telephone Prompted with Station Specific Authorization Codes (SSAU) package 229 and CLS = AUTR.	ssau-19
MLWU_LANG		Language choice for Automatic Wake Up service. Prompted with Multi-Language Wake Up (MLWU) package 206. This entry defines the language presented for the Automatic Wake Up recorded announcement (RAN) for language 0 through 5 as follows:	mlwu-19
	(0)	See RAN1/RAN2 in LD 15	
	1	See LA11/LA12 in LD 15	
	2	See LA21/LA22 in LD 15	
	3	See LA31/LA32 in LD 15	
	4	See LA41/LA42 in LD 15	
	5	See LA51/LA52 in LD 15	
	X	Remove entry	
MODL	1-127	Model number Prompted for Small System and Succession 1000 Model sets. Prompted for Succession 1000 model sets.	basic-16 basic-1
MWUN	(16) 32	Maximum number of Wireless Units Standard line card = 16 Octal line card = 32	mc32-24

# LD 10

Prompt	Response	Comment	Pack/Rel
NAME	aaaa,bbbb	Calling Party Name Display Name First name comma Last name.  For example, John Doe is entered as John,Doe. The first single comma is treated as the delimiter. Up to 27 characters (including the comma) may be input. The last occurrence of the first comma group serves as the name delimiter and is translated into a space between the first and last name.	cpnd-21
	aaaa	When the delimiter is omitted, the input is stored as a first name.	
	aaaa,	When the delimiter follows the input, the input is stored as the first name.	
	,bbbb	When the delimiter precedes the input, the input is stored as a last name.	
NCOS	(0)-3 (0)-7 (0)-15 (0)-99	Network Class of Service group number CDP BARS or NFCR NARS Network Class of Service group number	ncos-2
OHID	(0)-9	Off-Hook Alarm Security DN index  Enter the index number 0-9 of the DN defined by LD 15 prompt ODNx. When a dial tone or interdigit timeout occurs on a set with Alarm Security Allowed (ASCA) Class of Service, the set is intercepted to a predefined DN.	basic-18
PLEV	0-(2)-7	Priority Level  Where: 2 = set can override sets of level 1 and 2, and can be overridden by sets of level 2-7. Prompted with Priority Override/ Forced Camp-On (POVR) package 186 or Enhanced DPNSS1 Services (DPNSS_ES) package 288.	povr-20
POS	xxxx	ACD position ID. Prompted when SFMT = AUTO, TNDN, TN or DN.	basic-12

Prompt	Response	Comment	Pack/Rel
PRI	(1)-48	Priority level for ACD Agent. The agent with the lowest number assigned has the highest priority and is the first ACD agent to receive calls. (Priority 1 has the highest priority level)  PRI is prompted if Automatic Call Distribution, Priority Agent package 116 is equipped and CLS = AGTA.	pagt-16
RCO	(0)-2	Ringing cycle option for Call Forward No Answer Prompted when CLS = FNA or MWA (or both).	uscr-19
REQ:		Request	basic-1
	?	To get a list of valid responses	
	CHG	Change existing data block	
	CDCS	Convert Digital Communications Set  <b>Note:</b> The CDCS command can also be used on MCMO type telephones	mc32-25
	CPY n	Copy or create 1 to 32 new station data block or blocks automatically from the specified station data block. Not valid for Option11 models.	
	END	Exit Overlay program	
	MOV	Move data block from one TN to another.  MOV command can be used to move analogue "IPE" telephones from one loop, shelf, card, unit to another lscu with the following restrictions (includes moves across Superloops):  -ACD sets must not be moved. Remove (out) data and re-enter at destination.  -Telephones with mixed directory numbers can only be moved to a TN on the same loop; unless the prompt MLDN = Yes in LD 17.  -Cannot be used for Small System and Succession 1000 Model sets  MOV command can be used to move analogue "EPE" telephones from one unit or card to another, but does not support moving these phones across shelves or loops.	basic-25.4

# LD 10

Prompt	Response	Comment	Pack/Rel
	NEW X	Add new data block or blocks Follow NEW with a value of 1-255 to create that number of consecutive telephone data block or blocks.	
	OUT X	Remove data block or blocks Follow OUT with a value of 1-255 to remove that number of consecutive telephones.  The following is a list of valid responses. For further information, consult the appropriate Overlay program.  <b>LD 32:</b> CDSP CMIN CONV CPWD DISC DISI DISL DISN DISS DISU DSCT DSPS DSXP ENCT ENLC ENLG ENLL ENLN ENLS ENLU ENPS ENXP IDC IDCS IDU LBSY LDIS LIDL LMNT PBXT SDLC STAT SUPL TRK XNTT XPCT XPEC  <b>LD 20:</b> LTN LUC LUDU LUU LUVU PRT  <b>LD 10:</b> CHG CPY MOV NEW OUT	
RNPG	(0)-255 (0)-4095	Ringing Number Pickup Group Ringing Number Pickup Group with Capacity Expansion To remove a telephone from a group, enter 0 in response to the RNPG prompt.	grp-1 grp-1
SCI	(0)-7	Station Category Indication priority level The Station Category number 1 to 7 must be defined as attendant console Incoming Call Indicator in LD 15 prompt ICI = CA1-CA7.	sci-7
SCPW	xxxx	Station Control Password  The Station Control password is used for the Electronic Lock and Remote Call Forward features. This entry must equal the Station Control Password Length (SCPL) as defined in LD 15.  Not prompted if SCPL = 0. See Flexible Feature Codes in the <i>Features and Services</i> (553-3001-306).	ffc-15
SECOND_DN	x...x  X	Second Directory Number sharing the Voice Mailbox. This number can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Enter the letter "X" to delete the second directory number	vmba-19

Prompt	Response	Comment	Pack/Rel
SFDN	xxxx	Secretarial Forwarding DN of secretary set SFDN is prompted if SFLT = BOSS.	ftcsf-15
SFLT	(NO) BOSS SEC	Secretarial Filtering Assign no designation to telephone set Designate telephone set as a Boss set Designate telephone set as a Secretary set (NO), SEC and <cr> takes you to the next prompt. SFLT is prompted with Boss Secretary Filtering (FTCSF) package 198.	ftcsf-15
SFMT		Select Format for the copy command  The DN may be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. The POS prompt appears if CLS = AGTA.	basic-12
TNDN		Manual selection of TNs, DNs and ACD position IDs for ACD telephones. TN, DN and POS are prompted -n- times as defined by the CPY command.	
TN		The new DNs and ACD position IDs for ACD telephones are provided by the system. You are prompted for the starting DN, ACD position ID and each TN. TN is prompted n times as defined in the CPY command.	
DN		The new TNs are provided by the system. You are prompted for the starting TN and each DN and ACD position ID for ACD telephones. DN and/or POS are prompted n times as defined in the CPY command.	
AUTO		The new TNs, DNs and ACD position ID for ACD telephones are provided by the system. You are prompted for the starting TN, DN and ACD position ID.	
SGRP	(0)-999	Scheduled Access Restriction Group Number Prompted with Schedule Access Restrictions (SAR) package 162. The group must be defined in LD 88.	sar-15

# LD 10

Prompt	Response	Comment	Pack/Rel
SPID	x...x	Supervisor Position ID  This input assigns an agent to a supervisor when agent lamps are not assigned on the supervisor telephone.  This number can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. However, ISDN applications can accept up to 13 digits.  Prompted for ACD packages B, C and D when CLS = AGTA.	acdb-1
SPWD	xxxx	Secure Data Password  Prompted if the password is defined in LD 15. If the password is not entered, the security codes will not print when PRT is requested.	ssau-19
TEN	1-51	Multi-Tenant Number  Enter the Multi-Tenant number for this telephone. Prompted with Multiple-Tenant Service (TENS) package 86 and Tenant Service enabled.	tens-7
TGAR	0-(1)-31	Trunk Group Access Restriction  The default of (1) automatically blocks direct access.	basic-1
THIRD_DN	x...x	Third DN sharing the Voice Mailbox  Third Directory Number. This number can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	vmba-19
	X	Deletes the third directory number	



# LD 10

Prompt	Response	Comment	Pack/Rel
	c u	Small System format: c u = card, unit c = 1-50 u = 0-15	basic-16
	c u	Succession 1000 format: c u = card, unit c = 11-14, 17-24, 27-34, 37- 44, 47-50 u = 0-31	basic-1
TOTN		To Terminal Number. Prompted when REQ = MOV.	basic-1
	l s c u	Large System TN format: l s c u = loop, shelf, card, unit	
	c u	Small System TN format: c u = card, unit	basic-16
		TOTN is not prompted for Small System model sets.	
	c u	Succession 1000 TN format: c u = card, unit	basic-1
TYPE:	TYPE:	Type of data block.	basic-20
	?	To get a list of valid responses	
	500	500/2500 telephone set data block	
	500 M	500/2500 Model telephone set data block for Small System and Succession 1000	
	CARD	500/2500 card block for Automatic Set Relocation (ASR)	
	CARDSLT	Single-line telephone line card	
	DCS	Digital Cordless Set	mc32-25
	OOSLT	Out-of-Service Single Line Terminal unit	
VMB	NEW CHG OUT	Add Voice Mailbox Change Voice Mailbox Remove Voice Mailbox	vmba-19
VMB_COS			vmba-19
	0-127	Voice Mailbox Class of Service	
VSIT	(NO) YES	Visiting DECT set Determines the difference between a local handset and a visiting handset.	msmn-32

Prompt	Response	Comment	Pack/Rel
WRLS	(NO) YES	TN corresponds to a portable personal telephone. Must have Meridian 1 Companion Option (MCMO) package 240.  <b>Note:</b> Additional units configured on either the MCMO or DECT card requires identical entries for WRLS, WTYP and MWUN prompts.	mcmo-20
WTYP	(MCMO) DECT	Meridian Companion Mobility Option Digital Enhanced Cordless Telephone	mcmo-23
XLST	(0)-254	Pretranslation group associated with this station If the user wants to use a 16-button DTMF ABCD set as a call forward destination station to deactivate the call forward all calls function, then XLST must be set equal to the table number defined in LD 18.	pxlt-10
XPLN	xx	Expected name length (this value should be set to a sufficient length for current and future names for that DN)  When REQ=NEW, the XPLN prompt defines the maximum name length for that particular DN or DIG. The XPLN for a DN cannot be changed without deleting that name entry.  XPLN must range from the actual length of the name string to MXLN, or defaults to DFLN.	cpnd-19

# LD 10

---

## LD 11: Digital Telephone Administration

---

This Overlay program allows data blocks for SL-1, Displayphone 1200, M1000 series, M2000 series, M3000 digital telephones, and Internet Telephones to be created or modified.

When the Overlay is loaded the available system memory, disk records and system configuration limits are output in a header as follows:

```
>ld 11
```

```
SL1000
```

```
MEM AVAIL: (U/P): xxxxxx USED U P: xxxxxx xxxxxx TOT: xxxxxx
```

```
DISK RECS AVAIL: xxx
```

```
TNS AVAIL: xxx USED: xxx TOT: xxx
```

```
INTERNET TELEPHONES AVAIL: xxx USED: xxx TOT: xxx
```

```
ACD AGENTS AVAIL: xxx USED: xxx TOT: xxx
```

```
AST AVAIL: xxx USED: xxx TOT: xxx
```

```
DIGITAL TELEPHONES AVAIL: xxx USED: xxx TOT: xxx
```

```
WIRELESS TELEPHONES AVAIL: xxx USED: xx TOT: xxx
```

```
DATA PORTS AVAIL: xxx USED: xx TOT: xxx
```

If an Incremental Software Management (ISM) limit is set to the maximum value 32767, then the information for that ISM will not be printed. This does not apply for the TNs ISM.

The Group Hunt/DN Access to SCL (PLDN) package 120 allows an asterisk (\*) or double asterisk (\*\*) as a valid input to a number of prompts. Usually the asterisk will be part of a dialed number. Without this package, for example, inputting one asterisk will cause the system to reissue the last prompt, and two asterisks will cause a restart of the Overlay at REQ.

## Linked Overlay programs

Overlay programs 10, 11, 20 and 32 are linked thus eliminating the need to exit one Overlay and enter another. Once one of the above Overlays has been loaded it is possible to add, print and get the status of a set without having to exit one Overlay and load another.

The input processing has also been enhanced. Prompts ending with a colon (: ) allow the user to enter either:

- a question mark (?) followed by a carriage return (<cr>) to get a list of valid responses to that prompt or
- an abbreviated response. The system then responds with the nearest match. If there is more than one possible match the system responds with SCH0099 and the input followed by a question mark and a list of possible responses. The user can then enter the valid response.

# Prompts and responses

## Contents

Section	Page
<i>Prompts and responses by task:</i>	
Add a voice telephone	128
Add a data telephone	131
Copy a telephone	134
Easy change	136
Move a telephone	136
Remove a telephone	137

Prompt	Response	Comment
REQ:	a...a	Request
TYPE:	a...a	Type of data block (TYPE responses begin on page 206)
MODL	1-127	Model number for small systems and Succession 1000
CFTN	l s c u c u	Copy From Terminal Number (as defined on page 205)
SFMT	a...a	Select Format (a...a = TNDN, TN, DN, or AUTO)
TN	l s c u c u	Terminal Number (as defined on page 205)
DELETE_VMB	(YES) NO	Delete Voice Mailbox
ECHG	(NO) YES	Easy Change
- ITEM	aaaa yy	Item (aaaa = Program mnemonic ; yy = its new value)
TOTN	l s c u c u	To Terminal Number (as defined on page 205)
CDEN	aa	Card Density (aa = SD, DD, 4D, or 8D)
DES	d...d	Office Data Administration System Station Designator
CTYP	(XDLC) EDLC	Card type
VISI	(NO) YES	Visiting

# LD 11

CUST	xx	Customer number associated with this set
BUID	x...x	dialable DN, Main Office user id
MOTN		Main Office TN
	<cr>	Accept default when Succession 1000 is the Main Office
	l s c u	When main office is a Large System.
MPHI	(NO) YES	Meridian Communications Unit used as MPH Interface
KLS	1-7	Number of Key/Lamp Strips
AOM	0-2	Number of Add-on Modules
KBA	(0)-2	Key-Based Accessory
DBA	(0)-1	Display-Based Accessory
PUTYP	(PRIVATE) IS-41	Portable Subscriber Type
DSPL	(0)-500	Length (in characters) of portable display
DSPT	(0)-2	Type of portable display
ESN	x..x	Electronic Serial Number (11 Hex digits)
ZONE	0-255	Zone Number which i2002, i2004, and i2050 set belongs
LANG	a	Language choice
FDN	x...x	Flexible CFNA DN
TGAR	xx	Trunk Group Access Restriction
LDN	aaa	Listed Directory Number Index as defined in LD 15
MIN	a..a	Mobile Identification Number (10 BCD digits)
NCOS	(0)-99	Network Class of Service group
RNPG	(0)-4095	Ringing Number Pickup Group
SSU	0-4095	System Speed call list number
XLST	(0)-7	Pretranslation group associated with this station
SCPW	xxxx	Station Control Password
SGRP	(0)-999	Scheduled Access Restriction Group number
ELKP	x...x	Electronic Lock Password (1-15 digits)
SFLT	a...a	Secretarial Filtering (a...a = (NO), BOSS, or SEC)
- SFDN	xxxx	Secretarial Forwarding DN of secretary set
CAC	(0)-10	Category Code for CNI of MFC trunks
CAC_CIS	0-(3)-9	CIS ANI category code
CAC_MFC	(0)-10	MFC CNI Category Code
CLS	a...a	Class of Service (CLS responses begin on page 142)
ARTO	(0)-3	Alternate Redirection Time Option for call redirection
ADAY	(0)-3	Alternate Days as defined in LD 15
AHOL	(0)-3	Alternate Redirection Holiday as defined in LD 15

---

AFD	x...x	Alternate Flexible Call Forward DN
AHNT	x...x	Alternate Hunt DN
AEFD	x...x	Alternate External Flexible Call Forward DN
AEHT	x...x	Alternate External Hunt DN
MAUT	(NO) YES	Modify authorization codes for this telephone
- SPWD	xxxx	Secure Data Password
- AUTH	n xxxx	Authorization code
RCO	(0)-2	Ringing Cycle Option for Call Forward No Answer
ICT	0-<NIPN>	Intercept Computer Terminal or printer number
EFD	x...x	Flexible CFNA DN for External calls
HUNT	x...x	Hunt DN of next station in hunt chain
EHT	x...x	External Hunt DN
LHK	(0)-69	Last Hunt Key number limit
LNRS	4-(16)-31	Last Number Redial Size
TEN	1-511	Tenant number
OHID	(0)-9	Off-Hook Alarm Security DN index for off-hook or interdigit timeout.
FSVC	(0)-9	Forced Out-of-Service Off-Hook Alarm Security DN index
SCI	(0)-7	Station Category Indication priority level
DTYP	aaa	Data Station Type
- TOV	(0)-(0)-23	Timeout Value for the data port
- DTAO	a...a	Data Option (a...a = (MPDA) or MCA)
- PSEL	a...a	Protocol Selection (a...a = (DMDM) or TLNK)
- OPE	(NO) YES	Change data port Operating Parameters
- PSDS	(NO) YES	Public Switched Data Service option
- TRAN	a...a	Port Transmission type (a...a = (ASYN) or SYN)
- PAR	a...a	Parity (a...a = (SPACE), EVEN, ODD, or MARK)
- DTR	(OFF) ON	Data Terminal Ready settings
- DUP	aaaa	Duplex (aaaa = (FULL) or HALF)
- HOT	(OFF) ON	Hotline
- AUT	(ON) OFF	Auto-answer
- AUTOB	(ON) OFF	Auto Baud rate
- BAUD	0-(7)-10	Baud rate index for the data port
- DCD	(ON) OFF	Dynamic Carrier Detect
- PRM	(ON) OFF	Prompt for terminal or host mode
- VLL	(OFF) ON	Virtual Leased Line
- MOD	(NO) YES	Mode

---

# LD 11

- INT	(OFF) ON	Meridian 1/SL-100 Interworking
- CLK	(OFF) ON	Clock
- DEM	aaa	Data Equipment Mode (aaa = (DCE) or DTE)
- DLNG	aaa	Language preference for DAC prompts (aaa = (ENG) or FRN)
- KBD	(ON) OFF	Keyboard Dialing
- V25	(NO) YES	V.25 bis option (synchronous mode only)
- HDLC	(NO) YES	High Level Data Link Control
- RTS	(ON) OFF	Request To Send (applies only to asynchronous mode)
- WIRE	(OFF) ON	Wire test
- PBDO	(OFF) ON	Port Busy when DTR off
- ADCP	(NO) YES	All-Digital Connection Prefix
- MPR	0-511	Modem Pool Route number
LPK	(0)-69	Line Preference Key
PLEV	0-(2)-7	Priority Level
FCAR	(NO) YES	Forced Charge Account Restricted
LTN	1-253 0-15	Logical TN and AUX link number
SPID	x...x	ACD Supervisor Position ID DN
AST	xx yy	Associate Set Assignment for Meridian Link applications
IAPG	(0)-15	Meridian Link Unsolicited Status Message (USM) group
ITNA	(NO) YES	Idle TN for the Third Party Application
DGRP	(1)-5	Device Group
PRI	(1)-32	Priority level for ACD agent
LANG	a	Language choice for Automatic Wakeup (AWU) calls (a = (0)-5 or X)
MLWU_LANG	a	Language choice for Automatic Wakeup (AWU) calls (a = (0)-5 or X)
MLNG	a...a	Language selection for the M3902, M3903, M3904, or M3905. Where a...a is: <ul style="list-style-type: none"><li>• &lt;CR&gt; no change</li><li>• ENG, FRE, GER, DUT, SPA, ITA, NOR, SWE, DAN, POR, FIN, POL, CZE, HUN, JAP, RUS, LAT, TUR.</li></ul>
DTMK	x...x	Data Mode Key number for a dynamic voice/data TN
DNDR	(0)-120	Directory Number Delayed Ringing in seconds
DCFW	x...x	Default Call Forward DN
KEY	xx aaa yyyy zz..z	Telephone function key assignments (KEY responses begin on page 168)
- MARP	(NO) YES	Multiple Appearance Redirection Prime

- CPND	aaa	Calling Party Name Display
--	aaa	Calling Party Name Display Language (aaa = (ROM) or KAT)
CPND_LANG		
-- NAME	aaaa,bbbb	Calling Party Name Display name
-- XPLN	xx	Expected Name Length
-- DISPLAY_FMT		
	aaaa,bbbb	Display Format for CPND name
- VMB	aaa	Voice Mailbox
-- VMB_COS	0-127	Voice Mailbox Class of Service
--	x...x	Second DN sharing the voice mailbox
SECOND_DN		
-- THIRD_DN	x...x	Third DN sharing the voice mailbox
--	(NO) YES	Preserve Meridian Mail messages and current password
KEEP_MSGS		
- ANIE	(0)-n	ANI entry
- DNRO	(0)-4	Distinctive Number Ringing index for Outgoing calls
- DNRI	(0)-4	Distinctive Number Ringing index for Incoming calls

---

## Prompts and responses by task

### Add a voice telephone

Prompt	Response	Comment
REQ:	NEW	Request = NEW
TYPE:	a...a	Type of data block (TYPE responses begin on page 206)
MODL	1-127	Model number for small systems and Succession 1000
TN	l s c u c u	Terminal Number (as defined on page 205)
CDEN	aa	Card Density (aa = SD, DD, 4D, or 8D)
DES	d...d	Office Data Administration System Station Designator
CTYP	(XDLC) EDLC	Card type
VISI	(NO) YES	Visiting
CUST	xx	Customer number associated with this set
BUID	x...x	dialable DN, Main Office user id
MOTN		Main Office TN
	<cr> l s c u	Accept default when Succession 1000 is the Main Office When main office is a Large System.
MPHI	(NO) YES	Meridian Communications Unit used as MPH interface
KLS	1-7	Number of Key/Lamp Strips
AOM	0-2	Number of Add-on Modules
KBA	(0)-2	Key-Based Accessory
PUTYP	(PRIVATE) IS-41	Portable Subscriber Type
DSPL	(0)-500	Length (in characters) of portable display
DSPT	(0)-2	Type of portable display
ESN	x...x	Electronic Serial Number (11 Hex digits)
ZONE	0-255	Zone Number which i2004 set belongs
LANG	a	Language choice
FDN	x...x	Flexible CFNA DN
TGAR	xx	Trunk Group Access Restriction
LDN	aaa	Listed Directory Number Index as defined in LD 15
MIN	a...a	Mobile Identification Number (10 BCD digits)
NCOS	(0)-99	Network Class of Service group

---

RNPG	(0)-4095	Ringing Number Pickup Group
SSU	0-4095	System Speed Call list number
XLST	(0)-7	Pretranslation group associated with this station
SCPW	xxxx	Station Control Password
SGRP	(0)-999	Scheduled Access Restriction Group number
ELKP	x...x	Electronic Lock Password (1-15 digits)
SFLT	a...a	Secretarial Filtering (a...a = (NO), BOSS, or SEC)
- SFDN	xxxx	Secretarial Forwarding DN of secretary set
CAC	(0)-10	Category Code for CNI of MFC trunks
CAC_CIS	0-(3)-9	CIS ANI category code
CAC_MFC	(0)-10	MFC CNI Category Code
CLS	aaaa	Class of Service (CLS responses begin on page 142)
ARTO	(0)-3	Alternate Redirection Time Option for call redirection
ADAY	(0)-3	Alternate Days as defined in LD 15
AHOL	(0)-3	Alternate Redirection Holiday as defined in LD 15
AFD	x...x	Alternate Flexible Call Forward DN
AHNT	x...x	Alternate Hunt DN
AEFD	x...x	Alternate External Flexible Call Forward DN
AEHT	x...x	Alternate External Hunt DN
MAUT	(NO) YES	Modify authorization codes for this telephone
- SPWD	xxxx	Secure Data Password
- AUTH	n xxxx	Authorization code
RCO	(0)-2	Ringing Cycle Option for Call Forward No Answer
ICT	0-<NIPN>	Intercept Computer Terminal or printer number
EFD	x...x	Flexible CFNA DN for External calls
HUNT	x...x	Hunt DN of next station in hunt chain
EHT	x...x	External Hunt DN
LHK	(0)-69	Last Hunt Key number limit
LNRS	4-(16)-31	Last Number Redial Size
TEN	1-511	Tenant number
OHID	(0)-9	Off-Hook Alarm Security DN index for off-hook or interdigit timeout.
FSVC	(0)-9	Forced Out-of-Service Off-Hook Alarm Security DN index
SCI	(0)-7	Station Category Indication priority level
LPK	(0)-69	Line Preference Key
PLEV	0-(2)-7	Priority Level
FCAR	(NO) YES	Forced Charge Account Restricted

---

# LD 11

LTN	1-253 0-15	Logical TN and AUX link number
SPID	x...x	ACD Supervisor Position ID DN
AST	xx yy	Associate Set Assignment for Meridian Link applications
IAPG	(0)-15	Meridian Link Unsolicited Status Message (USM) group
ITNA	(NO) YES	Idle TN for the Third Party Application
DGRP	(1)-5	Device Group
PRI	(1)-32	Priority level for ACD agent
LANG	(0)-5 X	Language choice for Automatic Wake Up (AWU) calls
MLWU_LANG	a	Language choice for Automatic Wakeup (AWU) calls (a = (0)-5 or X)
MLNG	a...a	Language selection for the M3902, M3903, M3904, or M3905. Where: a...a = <CR> no change. a...a = ENG, FRE, GER, DUT, SPA, ITA, NOR, SWE, DAN, POR, FIN, POL, CZE, HUN, JAP, RUS, LAT, TUR.
DTMK	x...x	Data Mode Key number for a dynamic voice/data TN
DNDR	(0)-120	Directory Number Delayed Ringing (in seconds)
DCFW	x...x	Default Call Forward DN
KEY	xx aaa yyyy zz..z	Telephone function key assignments (KEY responses begin on page 168)
- MARP	(NO) YES	Multiple Appearance Redirection Prime
- CPND	aaa	Calling Party Name Display (aaa = NEW, CHG or OUT)
-- CPND_LANG	aaa	Calling Party Name Display Language (aaa = (ROM) or KAT)
-- NAME	aaaa,bbbb	Calling Party Name Display name
-- XPLN	xx	Expected Name Length
-- DISPLAY_FMT	aaaa,bbbb	Display Format for CPND name
- VMB	aaa	Voice Mailbox
-- VMB_COS	0-127	Voice Mailbox Class of Service
-- SECOND_DN	x...x	Second DN sharing the Voice Mailbox
-- THIRD_DN	x...x	Third DN sharing the Voice Mailbox
-- KEEP_MSGS	(NO) YES	Preserve Meridian Mail Messages and current password
- ANIE	(0)-n	ANI entry
- DNRO	(0)-4	Distinctive Number Ringing index for Outgoing calls
- DNRI	(0)-4	Distinctive Number Ringing index for Incoming calls

---

## Add a data telephone

The following prompts apply to M2006, M2008, M2216, M2616 data ports (MPDA), DAC card units and Meridian Communications Adapter (MCA) only.

All operating parameter information is stored in the MPDA. If the hardware does not exist, the parameter information is lost. The hardware must be connected before configuring the operating parameters in this program. In the event that the parameters are lost, it is possible to enter the data through the data adapter. It is not necessary to re-enter the program.

Prompt	Response	Comment
REQ:	NEW	Request = NEW
TYPE:	a...a	Type of data block (TYPE responses begin on page 206)
TN	l s c u c u	Terminal Number (as defined on page 205)
CDEN	aa	Card Density (aa = SD, DD, 4D, or 8D)
DES	d...d	Office Data Administration System Station Designator
CTYP	(XDLC) EDLC	Card type
CUST	xx	Customer number associated with this set
BUID	x...x	dialable DN, Main Office user id
MOTN	<cr> l s c u	Main Office TN Accept default when Succession 1000 is the Main Office When main office is a Large System.
MPHI	(NO) YES	Meridian Communications Unit used as MPH interface
KLS	1-7	Number of Key/Lamp Strips
AOM	0-2	Number of Add-on Modules
KBA	(0)-2	Key-Based Accessory
ZONE	0-255	Zone Number which i2004 set belongs
LANG	a	Language choice
FDN	x...x	Flexible CFNA DN
TGAR	xx	Trunk Group Access Restriction
LDN	aaa	Listed Directory Number Index as defined in LD 15
NCOS	(0)-99	Network Class of Service group
RNPG	(0)-4095	Ringing Number Pickup Group
SSU	0-4095	System Speed call list number

# LD 11

XLST	(0)-7	Pretranslation group associated with this station
SCPW	xxxx	Station Control Password
SGRP	(0)-999	Scheduled Access Restriction Group number
ELKP	x...x	Electronic Lock Password (1-15 digits)
SFLT	a...a	Secretarial Filtering (a...a = (NO), BOSS, or SEC)
- SFDN	xxxx	Secretarial Forwarding DN of secretary set
CAC	(0)-10	Category Code for CNI of MFC trunks
CAC_CIS	0-(3)-9	CIS ANI category code
CAC_MFC	(0)-10	MFC CNI Category Code
CLS	aaaa	Class of Service (CLS responses begin on page 142)
ARTO	(0)-3	Alternate Redirection Time Option for call redirection
AFD	x...x	Alternate Flexible Call Forward DN
AHNT	x...x	Alternate Hunt DN
AEFD	x...x	Alternate External Flexible Call Forward DN
AEHT	x...x	Alternate External Hunt DN
MAUT	(NO) YES	Modify authorization codes for this telephone
- SPWD	xxxx	Secure Data Password
- AUTH	n xxxx	Authorization code
RCO	(0)-2	Ringing cycle option for Call Forward No Answer
ICT	0-<NIPN>	Intercept Computer Terminal or printer number
DTYP	aaa	Data station Type
TOV	(0)-3	Timeout Value for the Data port
DTAO	a...a	Data Option (a...a = (MPDA) or MCA)
PSEL	a...a	Protocol Selection (a...a = (DMDM) or TLNK)
OPE	(NO) YES	Change data port Operating Parameters
- PSDS	(NO) YES	Public Switched Data Service option
- TRAN	a...a	Port Transmission type (a...a = (ASYN) or SYN)
- PAR	a...a	Parity (a...a = (SPACE), EVEN, ODD, or MARK)
- DTR	(OFF) ON	Data Terminal Ready settings
- DUP	aaaa	Duplex (aaaa = (FULL) or HALF)
- HOT	(OFF) ON	Hotline
- AUT	(ON) OFF	Auto Answer
- AUTB	(ON) OFF	Auto Baud rate
- BAUD	0-(7)-10	Baud rate index for the data port
- DCD	(ON) OFF	Dynamic Carrier Detect
- PRM	(ON) OFF	Prompt for terminal or host mode

---

- VLL	(OFF) ON	Virtual Leased Line
- MOD	(NO) YES	Mode
- INT	(OFF) ON	Meridian 1/SL-100 Interworking
- CLK	(OFF) ON	Clock
- DEM	aaa	Data Equipment Mode (aaa = (DCE) or DTE)
- DLNG	aaa	Language preference for DAC prompts (aaa = (ENG) or FRN)
- KBD	(ON) OFF	Keyboard Dialing
- V25	(NO) YES	V.25 bis option, synchronous mode only
- HDLC	(NO) YES	High Level Data Link Control
- RTS	(ON) OFF	Request To Send (applies to asynchronous mode only)
EFD	x...x	Flexible CFNA DN for External calls
HUNT	x...x	Hunt DN of next station in hunt chain
EHT	x...x	External Hunt DN
LHK	(0)-69	Last Hunt Key number limit
LNRS	4-(16)-31	Last Number Redial Size
TEN	1-511	Tenant number
OHID	(0)-9	Off-Hook Alarm Security DN index for off-hook or interdigit timeout.
FSVC	(0)-9	Forced Out of Service Off-Hook Alarm Security DN index
SCI	(0)-7	Station Category Indication priority level
WIRE	(OFF) ON	Wire test
PBDO	(OFF) ON	Port Busy when DTR off
ADCP	(NO) YES	All-Digital Connection Prefix
MPR	0-511	Modem Pool Route number
LPK	(0)-69	Line Preference Key
PLEV	0-(2)-7	Priority Level
FCAR	(NO) YES	Forced Charge Account Restricted
LTN	1-253 0-15	Logical TN and AUX link number
SPID	x...x	ACD Supervisor Position ID DN
AST	xx yy	Associate Set Assignment for Meridian Link applications
IAPG	(0)-15	Meridian Link Unsolicited Status Message (USM) group
ITNA	(NO) YES	Idle TN for the Third Party Application
DGRP	(1)-5	Device Group
PRI	(1)-32	Priority level for ACD agent
LANG	(0)-5 X	Language choice for Automatic Wake Up (AWU) calls
MLWU_LANG	aaaa,bbbb	Language choice for Automatic Wake Up (AWU) calls

---

# LD 11

MLNG	a...a	Language selection for the M3902, M3903, M3904, or M3905. Where: a...a = <CR> no change. a...a = ENG, FRE, GER, DUT, SPA, ITA, NOR, SWE, DAN, POR, FIN, POL, CZE, HUN, JAP, RUS, LAT, TUR.
DTMK	x...x	Data Mode Key number for a dynamic voice/data TN
DNDR	(0)-120	Directory Number Delayed Ringing (in seconds)
DCFWD	x...x	Default Call Forward DN
KEY	xx aaa yyyy zz...z	Telephone function key assignments (KEY responses begin on page 168)
- MARP	(NO) YES	Multiple Appearance Redirection Prime
- CPND	aaa	Calling Party Name Display
--	aaa	Calling Party Name Display Language
CPND_LANG		
-- NAME	aaaa,bbbb	Calling Party Name Display name
-- XPLN	xx	Expected NameLength
--	aaa	Display Format for CPND name
DISPLAY_FMT		
- VMB	aaa	Voice Mailbox
-- VMB_COS	0-127	Voice Mailbox Class of Service
--	x...x	Second DN sharing the Voice Mailbox
SECOND_DN		
-- THIRD_DN	x...x	Third DN sharing the Voice Mailbox
--	(NO) YES	Preserve Meridian Mail Messages and current password
KEEP_MSGS		

---

## Copy a telephone

ACD supervisory telephones cannot be copied. Associate set (AST) assignments are not copied to the new telephones.

---

Prompt	Response	Comment
REQ:	CPY n	Request = CPY n
TYPE:	a...a	Type of data block (TYPE responses begin on page 206)
CFTN	l s c u c u	Copy From Terminal Number (as defined on page 205)

---

---

SFMT	aaaa	Select Format. You may respond to SFMT with: AUTO, TNDN, TN or DN. Subprompts follow each of these responses as follows:
	AUTO	The system provides the new DNs or position IDs (for ACD telephones) and TNs by automatically selecting consecutive unused DNs or ACD position IDs and TNs.
- TN	l s c u c u	TN of new set (as defined on page 205)
- DN	x...x yyyy	Directory Number and CLID table entry (Range is (0)-value entered for SIZE prompt in LD 15 minus one)
- POS	xxxx	ACD position ID of new set
	TNDN	Manual selection of DNs or ACD position IDs and TNs. You are prompted for the DN or ACD position ID and TN of each new telephone.
- TN	l s c u c u	TN of new set (as defined on page 205)
- DN	x..x yyyy	Directory Number and CLID table entry (Range is (0)-value entered for SIZE prompt in LD 15 minus one)
- POS	xxxx	ACD Position ID of new set
	TN	The new DNs or ACD Position IDs are provided by the system. You are prompted for the starting DN or ACD Position ID and each TN. TN is prompted -n- times as defined in the CPY command.
- TN	l s c u c u	TN of new set (as defined on page 205)
- DN	x..x yyyy	Directory Number and CLID table entry (Range is (0)-value entered for SIZE prompt in LD 15 minus one)
- POS	xxxx	ACD Position ID of new set
	DN	The new TNs are provided by the system. You are prompted for the starting TN and each DN or ACD Position ID.
- TN	l s c u c u	TN of new set (as defined on page 205)
- DN	x..x yyyy	Directory Number and CLID table entry (Range is (0)-value entered for SIZE prompt in LD 15 minus one)
- POS	xxxx	ACD Position ID of new set

---

# LD 11

## Easy change

---

Prompt	Response	Comment
REQ:	CHG	Request = CHG
TYPE:	a...a	Type of data block (TYPE responses begin on page 206)
TN	l s c u c u	Terminal Number (as defined on page 205)
ECHG	YES	Easy Change
ITEM	aaaa bbbb	Item (aaaa = Program mnemonic ; yyy = its new value)

---

## Move a telephone

If moving a voice unit with an associated data unit, the data unit must also be moved. On NT8D02 Digital Line Card, both voice and data TNs can be moved by entering MOV PAIR in response to the REQ prompt.

---

Prompt	Response	Comment
REQ:	a...a	Request = MOV or MOV PAIR
TYPE:	a...a	Type of data block (TYPE responses begin on page 206)
TN	l s c u c u	Terminal Number (as defined on page 205)
TOTN	l s c u c u	To Terminal Number (as defined on page 205)

---

## Remove a telephone

Before removing an ACD agent telephone, first remove the associated AGT key on the supervisor's telephone.

---

Prompt	Response	Comment
REQ:	OUT	Request = OUT
TYPE:	a...a	Type of data block (TYPE responses begin on page 206)
TN	I s c u cu	Terminal Number (as defined on page 205)

---

# LD 11

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ADAY	(0)-3	Alternate Days as defined in LD 15 Prompted if CLS = RBDA	basic-24
ADCP	(NO) YES	All-Digital Connection Prefix. ADCP appears when DTYP = ODS or IOS. Do not enable All-Digital Connection Prefix Enable All-Digital Connection Prefix	adm-5
AEFD	x...x	Alternate External Flexible Call Forward DN. Remove by setting CLS = RTDD or CFTD. Alternate Redirection DN (up to 13 digits)	basic-22
AEHT	x...x	Alternate External Hunt DN. Remove by setting CLS = RTDD or CFTD. Alternate Redirection DN (up to 13 digits)	basic-22
AFD	x...x	Alternate Flexible Call Forward DN. Remove by setting CLS = RTDD. Alternate Redirection DN (up to 13 digits)	basic-22
AHNT	x...x	Alternate Hunt DN. Remove by setting CLS = RTDD. Alternate Redirection DN (up to 13 digits)	basic-22
AHOL	(0)-3	Alternate Redirection Holiday as defined in LD 15 Prompted if CLS = RBHA	basic-24

Prompt	Response	Comment	Pack/Rel
ANIE	(0)-n	<p>ANI Entry: it is of (0)-N where N=S_SIZE in customer data block.</p> <p>If ANIE=0, no entry is associated with the set. The old mechanism will be used for building the ANI message.</p> <p>If ANIE is of 1-N:</p> <ul style="list-style-type: none"> <li>• If ANIC = YES for the outgoing CIS route where the call takes place, then the components of the ANI message are retrieved from the ANI entry in Customer Data Block, if configured.</li> <li>• If the given ANI Entry is not configured, or if ANIC = NO for the outgoing CIS route where the call takes place, then the old mechanism is used for building the ANI message.</li> </ul>	cist-24
AOM	0-2	Number of Add-on Modules. AOM appears if TYPE = M2216 and M2616.	arie-14
ARTO	(0)-3	Alternate Redirection Time Option for call redirection, defined in the customer data block. ARTO is prompted if CLS = RTDA.	basic-22
AST	xx yy	<p>Associate Set Assignment for Meridian Link applications</p> <p>A maximum of two DN keys, xx and yy, can be controlled by the host computer. Precede with X to delete.</p>	iap3p-12
AUT	(ON) OFF	<p>Enable Auto-Answer</p> <p>Do not enable Auto-Answer</p>	arie-14
AUTB	(ON) OFF	<p>Auto Baud rate enabled</p> <p>Auto Baud rate disabled</p> <p>AUTB is prompted if TYPE = R232 or R422 and if HOT = OFF.</p>	dac-16

# LD 11

Prompt	Response	Comment	Pack/Rel
AUTH	n xxxx	Authorization code. Where: n = the number of the assigned authorization code (1-6) xxxx = assigned authorization code (Any authorization code assigned in LD 88 is valid).  AUTH appears when CLS = Authorization Code Required (AUTR).	ssau-19
BAUD	0-(7)-8	Baud rate  Baud rate index for the data port for data port on M2006, M2008, M2216 and M2616 telephones and Data Access Card.	mcu/arie-19
	0-(7)-10	Baud rate index for the data port for M3901,M3902, M3903, M3904, and M3905 telephones.  The following values apply to: MPDA-1 MCA with DTAO = MPDA and TRAN = ASYN MCA with DTAO = MCA TYPE = MCU and TRAN = ASYN  Where: 0 = 110, 1 = 150, 2 = 300, 3 = 600, 4 = 1200, 5 = 2400, 6 = 4800, (7) = 9600, 8 = 19,200, 9=28,800, and 10=33,600.	basic-24
	0-(11)-12	The following values apply to:  MCA with DTAO = MPDA, with MCA hardware TRAN = SYN, MCA with TRAN = SYN MCA with DTAO = MCA  Where: 0 = 1200, 1 = 2400, 2 = 3600, 3 = 4800, 4 = 7200, 5 = 9600, 6 = 14,400, 7 = 19,200, 8 = 38,400, 9 = 40,800, 10 = 48,000, (11) = 56,000, and 12 = 64,000.  With DAC, BAUD is only prompted if AUTB (Auto Baud Rate) = OFF.	

Prompt	Response	Comment	Pack/Rel
BUID	x...x	Dialable DN, Main Office user id For Succession 1000  Enter X to delete	sbo-2
CAC_CIS	0-(3)-9	CIS ANI Category Access Code	cist-24
CAC_MFC	(0)-10	MFC CNI Category Access Code	cist-24
CDEN	SD DD 4D 8D	Single Card Density Double Card Density Quadruple Card Density Octal Card Density  CDEN defaults to the density of the network loop. CDEN is not prompted for Small System and Succession 1000 Model sets or superloops.	basic-7
CFTN	l s c u  c u c u	Copy From Terminal Number General TN format  Large System format: l s c u = loop, shelf, card, unit Small System format: c u = card, unit Succession 1000 format: c u = card, unit  Use this TN as a template for new sets. ACD supervisory sets cannot be copied. Associate set (AST) assignments are not copied to the new sets.  With the introduction of Phantom TNs, the system checks to be sure that TNs are not moved or copied from phantom TNs to non-Phantom TNs or visa versa.  CFTN appears if REQ = CPY.	basic-12         basic-1
CLK	(OFF) ON	Clock off Clock on	arie-14

# LD 11

Prompt	Response	Comment	Pack/Rel
CLS		Class of Service options	basic-1
		The following CLS assignments determine the calling options and features available to the telephone. Defaults are shown in parentheses. Enter each non-default option required, separated by a space.	
		Access Restrictions	basic-1
	(CTD)	Conditionally Toll Denied (default)	
	UNR	Unrestricted	
	CUN	Conditionally Unrestricted.	
	TLD	Toll Denied.	
	SRE	Semi-Restricted.	
	FRE	Fully Restricted.	
	FR1	Fully Restricted 1.	
	FR2	Fully Restricted 2.	
	(AAD)	Automatic Answerback Denied	aab-10
	AAA	Automatic Answerback Allowed	
		Automatic Answerback can be used on M2112, M2317, M2616, M3000 and SL-1 telephones with handsfree capability. A special hardware kit is required for SL-1 sets and Companion 4 speakerphones.	
		Automatic Answerback must have CLS = HFA for M2616 telephones. CLS AAA or AAK keys are not allowed for M2317 TNs.	
	(ABDD)	Abandoned call record and time to answer Denied	fcdr-18
	ABDA	Abandoned call record and time to answer Allowed	
		Digit Display	ddsp-1
	ADD	Automatic Digit Display, default for M2008, M2216, M2317, M2616, M3000, M3902, M3903, M3904, and M3905	
	DDS	Delay Display, display activates after call is answered	

Prompt	Response	Comment	Pack/Rel
	NDD	No Digit Display, default for SL-1, M2006, M2009, M2112, M2018	
	TDD	Tandem Digit Display. Automatic set display feature, TDD Class of Service is applicable to all Meridian 1 proprietary sets except for the M2006 which does not have display capability.  <b>Note:</b> Manufacturer discontinued sets, such as the M2317 and the SL1, can be configured with TDD Class of Service however, may not have full functionality of the Automatic Set Display feature.	
	(AGN)	ACD Agent	
	SPV	ACD Supervisor	
	(AGRD)	Agent Greeting Denied	fxs-25
	AGRA	Agent Greeting Allowed	
	(AHD)	Automatic Hold Denied	supp-10
	AHA	Automatic Hold Allowed	
	(ARHD)	Audible Reminder of Held Call Denied	basic-14
	ARHA	Audible Reminder of Held Call Allowed	
	(ASCD)	Alarm Security Denied	ohas-18
	ASCA	Alarm Security Allowed	
	(AUTU)	Unrestricted Authorization code Class of Service	ssau-19
	AUTD	Denied Authorization code Class of Service	
	AUTR	Restricted Authorization code Class of Service	
		When the CLS is changed from AUTR to AUTU or AUTD, all previous telephone authorization code information is removed. This Class of Service is valid only when Station Specific Authorization Codes (SSAU) package 229 is equipped.	

# LD 11

Prompt	Response	Comment	Pack/Rel
	(BFED)	Boss Secretary Feature Enhancement Denied	ffcsf-24
	BFEA	Boss Secretary Feature Enhancement Allowed	
	(BUZZ)	Buzz	basic-24
	RNGI	Apply ringing when idle but off hook	
	RNGB	Apply ringing when idle but off hook or busy on the other line	
	(CCBD)	Collect Call Blocking Denied (permits a set to accept collect calls)	ccb-21
	CCBA	Collect Call Blocking Allowed (prevents a set from accepting collect calls Collect Call Blocking (CCB) package 290 is required.	
	(CCSD)	Controlled Class of Service Denied	ccos-7
	CCSA	Controlled Class of Service Allowed CCSA is required for the Electronic Lock feature. Must have Controlled Class of Service (CCOS) package 81.	
	(CDCA)	Conferee Display Count Allowed.	basic-23
	CDCD	Conferee Display Count Denied.	
	(CDMD)	CDMD denies external station activity records to be generated for the set	emct-20
	CDMA	CDMA allows external station activity records to be generated for the set	
	(CFHD)	Call Forward Hunt Override Denied	cfho-20
	CFHA	Call Forward Hunt Override Allowed	
	(CFTD)	Call Forward by Call Type Denied/Allowed	optf-10
	CFTA	If response is CFTA, you must also designate HTA, FNA or both.	

Prompt	Response	Comment	Pack/Rel
(CFXD)		Call Forward All Calls to External DN Denied	optf-19
CFXA		Call Forward All Calls to External DN Allowed Examples of external DNs are: Route Access Code ESN Access Code CDP Distant Steering Code  When denied, a call can only be forwarded to the following internal DNs: Single or multi-line telephone Attendant DN or CAS local attendant DN Listed DN as defined in LD 15 Message Center DN where MWC = YES	
(CLBD)		Deactivate Calling Party Number and Name per-line blocking	cpp-21
CLBA		Activate Calling Party Number and Name per-line blocking The user may still request CPP by dialing the CPP code.	
(CLTD)		Network Call Trace from this telephone Denied	pra-17
CLTA		Network Call Trace from this telephone Allowed	
(CMSD)		Command and Status link Denied	csi-8
CMSA		Command and Status link Allowed CMSA is not supported by M2009, M2018, M2112, M2317, and M3000.	
(CNDD)		Call Party Name Display Denied	cpnd-10
CNDA		Call Party Name Display Allowed CNDA allows user names to be displayed on the telephone's digit display.	
(CNID)		Call Number Information Denied	bgd-10
CNIA		Call Number Information Allowed	

# LD 11

Prompt	Response	Comment	Pack/Rel
	(CNTD)	Network ACD Countdown Denied	nacd-15
	CNTA	Network ACD Countdown Allowed Only allowed on ACD agent telephones.	
	(CPFA)	Forced Camp-On from another set Allowed	scmp-15
	CPFD	Forced Camp-On from another set Denied	
	(CPTA)	Forced Camp-On to another set Allowed. CPTA is the default for VCE TNs.	scmp-15
	CPTD	Forced Camp-On to another set Denied	
	(CRPD)	Corporate Directory Denied	arie-25
	CRPA	Corporate Directory Allowed Only applies for M3903 and M3904 units.	
	(DAPA)	Display Access Prefix Allowed	isdn-24
	DAPD	Display Access Prefix Denied	
	(DDGA)	DN Display on other set Allowed	dpd-21
	DDGD	DN Display on other set Denied	
	(DDV)	Data Port Verification Denied	amp-5
	ADV	Data Port Verification Allowed	
	(DELD)	Dealer Denied	ohol-20
	DELA	Dealer Allowed Must have On-Hold On Loudspeaker (OHOL) package 196.	
	(DNAA)	DN of the key that makes the call used in ANI messages.	cist-21
	DNAD	Outgoing CDTI2/CSDTI2 route ANDN used as DN in ANI messages Must have Commonwealth of Independent States Trunk Interface (CIST) package 221.	

Prompt	Response	Comment	Pack/Rel
	(DNDD)	Dialed Name Display Denied	cpnd-13
	DNDA	Dialed Name Display Allowed  DNDA allows the display of the originally dialed DN's names on redirected calls. Name display applies to M2317, M3000 or Meridian Modular telephones with displays.  Must have Calling Party Name Display (CPND) package 95. Must also have CLS = CNDA. CLS is not DTA.	
	(DNDY)	Diversion Notification with called party's number and name when available.	qsig ss-23
	DNDN	Diversion Notification without called party's number and name notification.	
	(DNO3)	Diversion Notification Option with diverted-to party's number and name when available.	qsig ss-23
	DNO1	Diversion Notification Option without notification.	
	DNO2	Diversion Notification Option without diverted-to party's number and name.	
	(DOS)	ACD Supervisory Set Denied observation of other supervisory sets	acdb-1
	AOS	ACD Supervisory Set Allowed observation of other supervisory sets  Must have CLS = SPV.	
	(DPUD)	DN Pickup Denied	dcp-12
	DPUA	DN Pickup Allowed	
	(DRDD)	Distinctive Ringing by Directory Number Denied.	edrg-24
	DRDA	Distinctive Ringing by Directory Number Allowed.	

# LD 11

Prompt	Response	Comment	Pack/Rel
		Digital telephone distinctive ringing	drng-7
(DRG1)		High fast tone, frequency 667 Hz/500 Hz, warble rate 10.4 Hz	
DRG2		High slow tone, frequency 667 Hz/ 500 Hz, warble rate 2.6 Hz	
DRG3		Low fast tone, frequency 333 Hz/ 250 Hz, warble rate 10.4 Hz	
DRG4		Low slow tone, frequency 333 Hz/ 250 Hz, warble rate 2.6 Hz	
		DRG3 and DRG4 distinctive ringing for M2006 and M2008 telephones are different.	
DRG3		Low fast tone, frequency 1600/ 2000 Hz, warble rate 10.0 Hz	
DRG4		Low slow tone, frequency 1600/ 2000 Hz, warble rate 2.5 Hz	
(DSX)		Data Service access or IS Server TN Denied	cls-8
DSI		Data Service access or IS Server TN Allowed CLS is automatically set to DTA.	
(ELD)		Erase lists Denied	basic-25.4
ELA		Erase lists Allowed	
(EXR0)		Executive Distinctive Ringing Off (0)	edrg-16
EXR1		Executive Distinctive Ringing Tone 1	
EXR2		Executive Distinctive Ringing Tone 2	
EXR3		Executive Distinctive Ringing Tone 3	
EXR4		Executive Distinctive Ringing Tone 4	
		The digit indicates which of the four distinctive ringing tones and cadences defined in LD 56 is to be used. Executive Distinctive Ringing (EDRG) package 185 is required. Must have (DRDD) class of service	

Prompt	Response	Comment	Pack/Rel
(FBD)		Call Forward Busy Denied	basic-1
FBA		Call Forward Busy Allowed	
		This feature sends DID calls encountering a busy condition to the attendant. Call Forward Busy should have Hunting and Call Waiting denied, CLS = HTD and CWD, since Hunting and Call Waiting take precedence over FBA.	
(FDSD)		Force Disconnect Denied	ponw-25.4
FDSA		Force Disconnect Allowed	
(FICD)		Forward Intercom Calls Denied	basic-21
FICA		Forward Intercom Calls Allowed	
(FITD)		Flexible Incoming Tones Denied	basic-14
FITA		Flexible Incoming Tones Allowed	
		For SL-1 sets OPT must be SBA in LD 15. For Digital sets OPT must be DBA in LD 15.	
(FLXD)		Flexible voice/data Denied	basic-22
FLXA		Flexible voice/data Allowed	
		FLXA is only allowed for Aries sets.	
		By entering FLXA, you may configure dynamic voice/data TNs by assigning VCE to the upper TN (unit 16-31) and DTA to the lower TN (unit 0-15). You also have the option of designating a SCR key as DTM (data mode).	
		Warning: If connecting the Aries set only to the TCM loop, this option should not be specified. External equipment which can use this capability should be connected.	
		Warning: When changing from CLS DTA to CLS VCE, CLS WTA should also be assigned to avoid conflict with CLS CPTA. CLS CPTA is the default for VCE TNs.	

# LD 11

Prompt	Response	Comment	Pack/Rel
	(FND)	Call Forward No Answer Denied	basic-1
	FNA	Call Forward No Answer Allowed	
	(FRN)	French language display	dlt2-12
	ENG	English language display For M2317 alphanumeric display sets.	
	(FTTC)	Flexible Trunk to Trunk Connections Conditional allows trunk to trunk connections for supervised Conference.	basic-23
	FTTR	Flexible Trunk to Trunk Connections Restricted denies trunk to trunk connections for Transfer and unsupervised Conference.	
	FTTU	Flexible Trunk to Trunk Connections Unrestricted allows trunk to trunk connections for both Conference and Transfer.	
	FXSP	Flexible Services Port	fxs-25
	(GPUD)	Group Pickup Denied	dcp-12
	GPUA	Group Pickup Allowed Group Pickup is not allowed on telephones in group zero, RNPG = 0.	
	(GRLD)	Group Listening Denied	basic-24
	GRLA	Group Listening Allowed For M3902, M3903, M3904 sets.	
	(HBTD)	Hunt By Call Type Denied	basic-10
	HBTA	Hunt By Call Type Allowed	

Prompt	Response	Comment	Pack/Rel
(HFD)		Digital Telephone Handsfree Denied	arie-14
HFA		Digital Telephone Handsfree Allowed Available for M2008, M2616, M3902, M3903, M3904, i2002, i2004, and i2050 telephones. Handsfree capability on all other telephones is a function of the hardware and does not require HFA Class of Service in order to operate.	
(HSPD)		Hospitality Denied, used for Hospitality Management	hvs-16
HSPA		Hospitality Allowed, used for Hospitality Management HSPA is for room sets. For HSPA, you must also enter CLS = CCSA and CLS = MRA. HSPA CLS cannot be entered for a set with transfer or conference capability. Prime DN must be single appearance, single call ringing or non-ringing.	
(HSTD)		Host Terminal Denied	arie-25
HSTA		Host Terminal Allowed	
(HTD)		Hunting Denied	basic-1
HTA		Hunting Allowed	
(ICDD)		Internal Call Detail Recording Denied	icdr-10
ICDA		Internal Call Detail Recording Allowed	
(IMD)		Integrated Messaging Service Attendant Denied	ims-2
IMA		Integrated Messaging Service Attendant Allowed	
(IPND)		Intercept Position Denied	icp-10
IPNA		Intercept Position Allowed	
(IRD)		Incoming Ringing Line Preference Denied	Isel-4
IRA		Incoming Ringing Line Preference Allowed	

# LD 11

Prompt	Response	Comment	Pack/Rel
	(LLCN)	Line Load Control off	llc-10
	LLC1	Class 1	
	LLC2	Class 2	
	LLC3	Class 3	
	(LMPN)	Red LED on Meridian Modular Telephone reflects the status of the mailbox associated with the PDN	vmba-24
	LMPX	Red LED on Meridian Modular Telephone reflects the status of the mailbox associated with the PDN and non-PDNs	
	(LND)	Last Number Redial Denied	lnr-8
	LNA	Last Number Redial Allowed Must have OPT = LRA in LD 15.	
	(LPR)	Low Priority Station	povr-16
	HPR	High Priority Station High Priority will place this set or trunk at the top of the dial tone queue.	
	(LVXD)	LOGIVOX Class of Service Denied	supp-10
	LVXA	LOGIVOX Class of Service Allowed	
	MCBY	Set linked to a MICB line card.	basic-25
	MCBN	Set linked to a non-MICB line card.	
	(MCTD)	Malicious Call Trace Denied	mct-10
	MCTA	Malicious Call Trace Allowed The MCT key must be removed before changing MCTA to MCTD. MCT is applied on a TN basis.	
	(MIND)	Message Interrupt Denied	mr-15
	MINA	Message Interrupt Allowed	

Prompt	Response	Comment	Pack/Rel
	MMA	Multimedia Allowed	ngen-24
	(MOAD)	Mute on Answer Denied	fxs-25
	MOAA	Mute on Answer Allowed	
	(MRD)	Message Registration Denied	mr-10
	MRA	Message Registration Allowed	
	(MSID)	Make Set Busy Improvement Denied	msb-24
	MSIA	Make Set Busy Improvement Allowed	
	(MTD)	Maintenance Telephone Denied	basic-1
	MTA	Maintenance Telephone Allowed	
	(MWD)	Message Waiting Denied	mwc-1
	MWA	Message Waiting Allowed If CLS = MWA and there is no Message Waiting Key (MWK) defined, then the red Message Waiting LED lights to indicate Message Waiting notification.	
	(NAID)	No Answer Indication Denied	basic-21
	NAIA	No Answer Indication Allowed	
	(NAMA)	Name Display on other set Allowed	dpc-21
	NAMD	Name Display on other set Denied	
	(NOVD)	Network Override/Breakin Denied	pomw-25.4
	NOVA	Network Override/Breakin Allowed	
	(NID)	Non-ringing Incoming Line Preference Denied	lsl-4
	NIA	Non-ringing Incoming Line Preference Allowed	
	(NRCD)	Night Restriction for Forced Campon Denied	povr-16
	NRCA	Night Restriction for Forced Campon Allowed If Night Restriction is allowed, then Forced Campon for this set is allowed during Night Service only.	

# LD 11

Prompt	Response	Comment	Pack/Rel
	(NROD) NROA	Night Restriction for Priority Override Denied Night Restriction for Priority Override Allowed If Night Restriction is allowed then Priority Override for this set is allowed during Night Service only.	povr-16
	(NRWD) NRWA	Night Restriction for Call Waiting Denied Night Restriction for Call Waiting Allowed If Night Restriction is allowed Call Waiting for this set is permitted during Night Service only.	povr-16
	(OBPD) OBPA	Observe Password Disabled Observe Password Allowed	oas-3.0
	(OCBD) OCBA	Outgoing Call Barring Denied Outgoing Call Barring Allowed Flexible Feature Codes (FFC) package 139 and New Flexible Code Restriction (NFCR) package 49 are required.	ccb-21
	(OLD) OLA	Outgoing Line Preference Denied Outgoing Line Preference Allowed	lsl-4
	(ONDD) ONDA	One Number Delivery Denied for a portable One Number Delivery Allowed for a portable	basic-22
	(OUSD) OUSA	Observe using SCL Denied Observe using SCL Allowed	oas-3.0
	(PCWD) PCWA	Deny Precedence Call Waiting. Allow Precedence Call Waiting. Requires Station Loop Preemption (SLP) package. Requires PRMA class of service.	atvn

Prompt	Response	Comment	Pack/Rel
	(PDN)	Primary Directory Number	pra-12
	LDN	Listed Directory Number Index as defined in LD 15 This is the number used for Calling Line Identification or CLID.	
	(PGND)	Deny PAGENET access	pagenet-22
	PGNA	Allow PAGENET access PGND/A allowed if PAGENET package 307 is equipped.	
	(PHTD)	Deny Precedence Hunting	atvn
	PHTA	Allow Precedence Hunting Requires Station Loop Preemption (SLP) package. Requires HTA and PRMA class of service.	
	(PRMD)	Deny Preemption	atvn
	PRMA	Allow Preemption Requires Station Loop Preemption (SLP) package. Requires Warning Tone Allowed (WTA) class of service.	
	(POD)	Privacy Override Denied	basic-5
	POA	Privacy Override Allowed The Privacy Optional feature is used with multiple appearance DNs.	
	(PRSD)	Priority Call Pickup Denied	povr-15
	PRSA	Priority Call Pickup Allowed	
	(PUD)	Call Pickup Denied	grp-1
	PUA	Call Pickup Allowed Default changes to PUA if Ringing Number Pickup Group (RNPG) is defined. Call Pickup is not allowed on telephones in group zero or RNPG = 0.	

# LD 11

Prompt	Response	Comment	Pack/Rel
	(RBDD)	Redirection By Day Denied	basic-24
	RBDA	Redirection By Day Allowed	
	(RCC)	Restricted from Receiving Collect Calls	fca-10
	UCC	Unrestricted from Receiving Collect Calls	
	(RBHD)	Redirection By Holiday Denied	basic-24
	RBHA	Redirection By Holiday Allowed	
	(RCBD)	Recall to Boss Denied	bfs-24
	RCBA	Recall to Boss Allowed	
	(RDLA)	Automatic Redial Allowed	ardl-22
	RDLA	Automatic Redial Denied	
	(RLFD)	Reversed Lamp Flash Denied	supp-10
	RLFA	Reversed Lamp Flash Allowed LOGIVOX must be assigned RLFA.	
	(RMMD)	Remote Monitoring of Messages Denied	vmbs-24
	RMMA	Remote Monitoring of Messages Allowed	
	RMMO	Allow Remote Monitoring of Messages and to Override, if it is being already monitored	
	(RTDD)	Call Redirection by Time of day denied	basic-22
	RTDA	Call Redirection by Time of day allowed	
	(SFD)	Second level CFNA Denied	basic-10
	SFA	Second level CFNA Allowed SFA requires the FNA Class of Service.	
	(SMWD)	Extended Message Waiting Indication Denied	mw-24
	SMWA	Extended Message Waiting Indication Allowed Only applies for M3903, M3904 and M3905 units.	

Prompt	Response	Comment	Pack/Rel
	(STSD)	Set-to-Set Messaging Denied	arie-25
	STSA	Set-to-Set Messaging Allowed Only applies for M3903 and M3904 units.	
	(SWD)	Station-to-Station Call Waiting Denied	basic-8
	SWA	Station-to-Station Call Waiting Allowed A Call Waiting key or CWT must be defined. Must have CLS = HTD since hunting takes precedence.	
	(TEND)	Tenant Service Denied	tens-7
	TENA	Tenant Service Allowed	
	(ULAD)	Deny access to Set Based Administration	adminset-21
	ULAA	Allow access to Set Based Administration Must have Set Based Administration (ADMINSET) package 256.	
	(UDI)	Station is (not) restricted from receiving DID calls.	supp-10
	RDI	Station is restricted from receiving DID calls.	
	(USMD)	Meridian 911 position denied	m911-19
	USMA	Meridian 911 position allowed Must have Meridian 911 (M911) package 224.	
	(USRD)	User Selectable Call Redirection Denied	uscr-19
	USRA	User Selectable Call Redirection Allowed	
	(VOLA)	Allow Virtual Office operation from this TN For Succession 1000	sbo-2
	VOLD	Deny Virtual Office operation from this TN For Succession 1000	sbo-2

# LD 11

Prompt	Response	Comment	Pack/Rel
	(VOUA)	Allow Virtual Office login onto this TN using other phone (destination of Virtual Office login) For Succession 1000	sbo-2
	VOUD	Deny Virtual Office login onto this TN using other phone (destination of Virtual Office login) For Succession 1000	sbo-2
	XMWI	Extended Message Waiting indication Allowed	
	(VCE) DTA	Voice Terminal Data Terminal VCE is used for voice TNs. DTA is used for data. For 8 port Digital Line Cards, VCE for units 0-7 and DTA for units 8-15. For 16 port Digital Line Cards, VCE for units 0-15 and DTA for units 16-31. For 24 port Digital Line Card, VCE for units 0-23 and DTA is for units 24-31. <b>Note:</b> 24 port Digital Line Card not supported on small systemsmall system and Succession 1000.	basic-5
	(VMD) VMA	Server Voice Messaging Denied Server Voice Messaging Allowed	cls-8
	(WTA) WTD	Warning Tone Allowed Warning Tone Denied	basic-1
	(XHD) XHA	Exclusive Hold Denied Exclusive Hold Allowed	dhld-4
CPND		Calling Party Name Display	cpnd-19
	NEW	New CPND entry	
	OUT	Delete CPND entry	
	CHG	Change CPND entry	
		Must have Calling Party Name Display (CPND) package 95 and CPND data block defined in LD 95.	

Prompt	Response	Comment	Pack/Rel
CPND_LANG	(ROM) KAT	Calling Party Name Display Language Roman Katakana	cpnd-19
CTYP	(XDLC) EDLC	Card type is 16 port DLC Card type is 24 port DLCVCE/DTA <b>Note:</b> EDLC not supported on Small System and Succession 1000	basic-25
CUST	xx	Customer number associated with this set as defined in LD 15	basic-1
DBA	(0)-1	Display-Based Accessory <b>Note:</b> The Key-Based Accessory (KBA) and Display-Based Accessory (DBA) are mutually exclusive.	arie-25
DCD	(ON) OFF	Dynamic Carrier Detect Enables Dynamic CD Carrier Detect starts as inactive and follows the state of the call. With DAC, DCD is only prompted if TYPE = R232.	arie-14
DCFW	x...x	Default Call Forward DN. Prompted for Virtual Terminals only. Where: x...x = Default Call Forward DN where calls are to be forwarded. Maximum of 31 digits allowed. Precede with X to remove.	arie-25

# LD 11

Prompt	Response	Comment	Pack/Rel
DELETE_VMB		Delete Voice Mailbox	vmba-19
	(YES)	Remove the Voice Mailbox from the Meridian 1 and Meridian Mail	
	NO	Remove the Voice Mailbox from the Meridian 1	
		DELETE_VMB is prompted if REQ = OUT and TN has an associated Voice Mailbox. DELETE_VMB is allowed if the DN is a single appearance or multiple appearance DN on a single TN.	
DEM		Data Equipment Mode. Prompted if TYPE = R232.	dac-16
	(DCE)	Data Carrier Equipment	
	DTE	Data Terminal Equipment	
DES	d...d	ODAS Station Designator Enter a 1-6 alphanumeric character representing an Office Data Administration System (ODAS) Station Designator.	odas-1
DGRP	(1)-5	Device Group DGRP designates an AST BCS set into a specific device group. It is recommended that an AST phantom (BCS) TN should be a non-display BCS set. An AST BCS set of a phantom loop cannot be an ACD set.	basic-20
DISPLAY_FMT		Display Format for CPND name	cpnd-19
	(FIRST, LAST)	May be input as FIRST To view names as John Doe	
	LAST, FIRST	May be input as LAST To view names as Doe John	

Prompt	Response	Comment	Pack/Rel
DLNG	(ENG) FRN	Language preference for the DAC prompts. English French Prompted if TYPE = R232 or R422.	dac-16
DN	x..x yyyy	Directory Number (x..x) and CLID table entry (yyyy) The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. DN is not prompted for Small System and Succession 1000 Model sets or if DIG is defined. Range for CLID table entry is: [(0) - (value entered for SIZE prompt in LD 15 minus 1)]	basic-12
DNAN	(DNAA) DNAD	Customer Attendant DN (ATDN) + Attendant Number (ANUM) are used as ANI DN in 3WT ANI messages. ANDN of outgoing 3WT route is used as ANI DN in 3WT ANI messages. Prompted with Commonwealth of Independent States (CIST) package 221.	cist-21
DNDR	(0)-120	Delay Value in seconds. A DNDR value of 0 disables this feature. If the DNDR value is an odd number, then it is incremented to the next even number.	basic-21
DNRI	(0)-4	Distinctive Number Ringing index for Incoming calls The index NDR1-4 BCS is defined in LD 56	edrg-24
DNRO	(0)-4	Distinctive Number Ringing index for Outgoing calls The index NDR1-4 BCS is defined in LD 56	edrg-24
DSPL	(0)-500	Length of portable display (in characters).	basic-22

# LD 11

Prompt	Response	Comment	Pack/Rel
DSPT	(0)-2	Type of portable display: 0 = display is numeric 1 = display is alphabetic 2 = display is alphanumeric	basic-22
DTAO	(MPDA) MCA	Data Option, not prompted if TYPE = MCU. Software for Meridian Programmable Data Adapter Software for Meridian Communications Adapter The DTAO prompt determines the downloaded data, system, and operating parameters.	arie-18
DTMK	x...x  <cr>	Data Mode Key number for a dynamic voice/data TN.  DTMK is prompted if the TN has both CLS = VCE and CLS = FLXA. There can be only one data mode key per TN. Any response to DTMK will overwrite a previous setting.  When changing from CLS = DTA to CLS = VCE, CLS = WTA should also be assigned to avoid conflict with CLS = CPTA.  Where x...x = number of the SCR/SCN key to be designated as the data mode key. This cannot be key 00.  No data mode key. TN is not a dynamic voice/data TN.	basic-22
DTR	(OFF) ON	Data Terminal Ready settings Dynamic DTR Forced DTR, force the data port to always be ready for transmission. With the Data Access Card (DAC). DTR is prompted if TYPE = R232.	arie-14
DTYP	(IOS) IDS ODS	Data Station Type Inbound/Outbound Data Station Inbound Data Station Outbound Data Station	amp-5

Prompt	Response	Comment	Pack/Rel
DUP	(FULL) HALF	Full Duplex Half Duplex	arie-14
ECHG	(NO) YES	Easy Change  This allows change to any prompt in this program without having to <cr> through all unrelated prompts. ECHG is prompted when REQ = CHG.	basic-12
EFD	x...x	Flexible CFNA DN for External calls  EFD is the DN to which external calls are routed when there is no answer, if one of the following customer options is defined in LD 15:  FNAD = FDN FNAT = FDN FNAL = FDN  A Group Hunt DN can be entered.  The DN can be up to 4 digits without Directory Number Expansion (DNXP) package 150, or 13 digits with DNXP package 150.  Call Forward by Call Type Allowed and Forward No Answer must be defined as the Class of Service (CLS = CFTA and FNA). LDNs, DLDNs, and Prime DNs will be accepted as valid input.	optf-10

# LD 11

Prompt	Response	Comment	Pack/Rel
EHT	x...x	External Hunt DN EHT is the DN hunted for by external busy calls when: Class of Service is Call Forward by Call Type Allowed (CFTA) and Hunting Allowed (HTA) the LD 15 prompt FNAD, FNAT, or FNAL = HNT A Group Hunt DN can be entered. This DN can be up to 4 digits without Directory Number Expansion (DNXP) package 150 or 13 digits with DNXP package 150. LDNs, DLDNs, and Prime DNs are accepted as valid input. To remove EFD or EHT DNs, change CFTA Class of Service to CFTD. Prompted when CFTA is defined.	basic-10
	000	Short Hunt for external calls	
ELKP	x...x	Electronic Lock Password. Length is 1-15 digits	ffc-15
ESN	x...x	Electronic Serial Number for a portable. Length is 11 Hex digits.	basic-22
FCAR	(NO) YES	Forced Charge Account Restricted Must use Forced Charge Account Restricted from using Forced Charge Account Prompted if FCAF = YES in LD 15 and CLS = TLD, CUN or CTD.	chg-1

Prompt	Response	Comment	Pack/Rel
FDN	x...x	<p>Flexible CFNA DN</p> <p>FDN is used for internal calls, if CLS is CFTA and FNA. FDN is used for all calls if CLS is CFTD and FNA.</p> <p>FDN can be up to 4 digits without Directory Number Expansion (DNXP) package 150 or 13 digits with DNXP package 150.</p> <p>A Group Hunt pilot DN can be entered. Precede with X to delete.</p> <p>FDN requires CLS = MWA or FNA. FDN is only used if one or more of the following customer options are defined in LD 15:</p> <p style="padding-left: 40px;">FNAD = FDN FNAT = FDN FNAL = FDN</p>	optf-1
FSVC	(0)-9	<p>Forced Out-of-Service Off-Hook Alarm Security DN index.</p> <p>When Forced Out-of-Service condition occurs on a digital telephone with Alarm Security Allowed (ASCA) Class of Service, the telephone is intercepted to a predefined DN.</p> <p>Enter the index number (0)-9 of the DN defined by LD 15 prompts ODN 0-9. ODN is the acronym for Change Off-Hook Alarm Security Directory Number options (OHAS DN).</p>	basic-18
HDLC	(NO) YES	<p>High Level Data Link Control</p> <p>Prompted if V25 = YES.</p>	arie-18

# LD 11

Prompt	Response	Comment	Pack/Rel
HOT	(OFF) ON	Hotline Hotline is inactive for data port. Enables Hotline for data port. If HOT = ON, Auto Baud is forced OFF for the Data Access Card.	arie-14
HUNT	x...x  000	Hunt DN of next station in hunt chain  This Hunt DN can be up to 4 digits without Directory Number Expansion (DNXP) package 150 or 13 digits with Directory Number Expansion (DNXP) package 150.  Precede with X to delete.  Short Hunting  A Group Hunt pilot DN can be entered.  A A Control Directory Number (CDN) can be defined as a Hunt DN for both physical and phantom 500/2500 sets. When a CDN is configured in this way, a call which comes to a busy DN can be Hunting or Call Forward Busy to a CDN.  With Call Forward and Hunt by Call Type, this is the Hunt DN for:  internal calls if CLS = CFTA, or for all busy calls if CLS = CFTD	basic-10
IAPG	0-9 (0)-15	Meridian Link Unsolicited Status Message (USM) group  IAPG assigns AST DNs to a status message group defined in LD 15. These groups determine which status messages are sent for an AST set. The default Group 0 sends no messages, while Group 1 sends all messages.	aml-16
ICT	0-<NIPN>	Intercept Computer Terminal or printer number  Number of Intercept Positions (NIPN) is defined in LD 15.	icp-16

Prompt	Response	Comment	Pack/Rel
INT	ON (OFF)	Meridian 1/SL-100 Interworking Enable Meridian 1 and SL-100 interworking Do not enable Meridian 1 and SL-100 interworking	arie-14
ITEM	aaaa yyy	Respond with the desired program mnemonic (aaaa) and its new value (yyy).  ITEM is reprompted until only a carriage return <cr> is entered. For example:  REQ CHG TYPE SL1 TN III ss cc uu ECHG YES ITEM KEY 07 ADL KEY <cr> KEY is prompted until <cr> is entered ITEM <cr> REQ	basic-12
	<cr>	Return to REQ	
ITNA	(NO)  YES	Idle TN for the Third Party Application.  Do not identify an Associated Set (AST) to be used only by Third Party Application  Identify an Associated Set (AST) to be used only by Third Party Application	basic-20
KBA	(0) 1 2	Key-Based Accessory for M3904 and M3905 which support key-based modules.  Configure keys up to and including 31 Configure keys up to and including 53 Configure keys up to and including 75	basic-24

# LD 11

Prompt	Response	Comment	Pack/Rel
KBD	(ON) OFF	Keyboard Dialing Option Enable Keyboard Dialing for data port Enables Hayes mode	dac-16
KEEP_MSGS	(NO) YES	Preserve Meridian Mail Messages and current password	vmba-19
KEY	xx aaa yyyy (cccc <b>or</b> D) zz..z	Telephone function key assignments  The following key assignments determine calling options and features available to a telephone. Note that KEY is prompted until just a carriage return <cr> is entered.  Where:  xx = key number aaa = key name or function yyyy = additional information required for the key zz..z = additional information required for the key aaa.  The cccc or D entry deals specifically with the Calling Line identification feature. Where:  cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1. D = the character "D". When the character "D" is entered, the system searches the DN keys from key 0 and up, to find a DN key with CLID table entry. The CLID associated with the found DN key will then be used.	basic-1

Prompt	Response	Comment	Pack/Rel
		<p><b>Note:</b> The position of the (cccc or D) field varies depending on the key name or function.</p>	
		<p>You may enter a CLID table entry if aaa = ACD , HOT d, HOT L, MCN, MCR, PVN, PVR, SCN or SCR.</p>	
		<p>Type xx NUL to remove a key function or feature.</p>	
		<p>Some data ports require specific key assignments. Refer to the <i>Meridian Data Services</i> NTPs for information regarding these requirements.</p>	
		<p>Key number limits that can be assigned are as follows:</p>	
		<p>0-7 for Meridian Communications Adapter (MCA)</p>	
		<p>0-5 for M2006</p>	
		<p>0-7 for M2008</p>	
		<p>0-59 for M2616, varies with number of add-on modules</p>	
		<p>0-69 for SL1, varies with number of key/lamp strips</p>	
		<p>If either the Meridian Programmable Data Adapter (MPDA) or the Display Module is equipped, then key 7 on sets M2008, M2216, and M2616 sets and key 5 on set M2006 will become Program keys which cannot be used as function keys.</p>	
		<p>Any printout of the TN block will not show key 7 because it is a local function key.</p>	
		<p>On the M2616, if CLS = HFA, key 15 on the voice TN defaults to the Handsfree key. No other feature assignment is accepted.</p>	
		<p>Primary and secondary data DNs must be unique.</p>	
		<p>A station SCR, SCN, MCR, or MCN DN must be removed as a member from all Group Hunt lists before the DN can be modified.</p>	

# LD 11

Prompt	Response	Comment	Pack/Rel
		<p>On the M3903, keys 4-15 are blocked. No feature assignment is accepted for keys 2-15.</p> <p>On the M3903,M3904, M3905, keys 27-31 are reserved. No feature assignment is accepted for keys 17-31 other than NUL.</p> <p>On M3904, no feature assignment is accepted for keys 12-15.</p> <p>On M3905, the craftsperson can assign NUL or a server application on key 5. On key 6, the craftsperson can assign NUL or a local application.</p> <p>On M3905, the craftsperson can assign NUL or the program key on key 7.</p> <p>On M3905, the craftsperson can assign AAG, AMG, ASP,DWC, EMR, MSB, or NRD on keys 8-11. Other features are blocked.</p>	basic-24
	xx AAG	<p>ACD Answer Agent key</p> <p>Must have CLS = SPV.</p>	acdb-1
		<p>On the M3905 key numbers 8-11 are reserved for AAG, AMG, ASP, DWC, MSB and NRD.</p>	basic-24
	xx AAK	<p>Automatic Answerback key</p> <p>AAA CLS and AAK key cannot be assigned to the same telephone. Only one type of Automatic Answerback is allowed. M2616 telephone must have CLS = HFA.</p>	aab-1

Prompt	Response	Comment	Pack/Rel
	xx ACD yyyy (cccc or D) zzz	Automatic Call Distribution key Where: xx = key number ( <i>must be key 0</i> ) yyyy = ACD DN or Message Center DN cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1. D = the character "D". When the character "D" is entered, the system searches the DN keys, from key 0, up to find a DN key with CLID table entry. The CLID associated with the found DN key will then be used. zzzz = agent's position ID  yyyy and zzzz can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Only ACD DN for Small System and Succession 1000 Model set.	bacd-1
	xx ACNT	Activity Code entry key  This key must have an associated lamp and applies to ACD-D and ACD-MAX only. ADS data block must be configured in LD 23.	acdd-13
	xx ADL yy z...z	Autodial key Where: xx = key number yy = maximum length of the ADL DN. Valid entries are: 4, 8, 12, (16), 20, 24, 28, 31. Note that other values are rounded up to the next valid number. z...z = actual Autodial DN (this entry is optional)	optf-1

# LD 11

Prompt	Response	Comment	Pack/Rel
	xx AGT yyyy	ACD Agent status key Where: yyyy = agent's ID. The agent ID number can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Must have CLS = SPV.	bacd-1
	xx AMG	ACD Answer Emergency call key Must have CLS = SPV. The Answer Emergency Key can be defined as a secondary supervisor's Position ID. The secondary supervisor's Position ID can be NULL by default. The Position ID of the ACD set cannot be changed once the ACD set is acquired as a Human Agent. On the M3905 key numbers 8-11 are reserved for AMG	acdb-1    basic-24
	xx AO3	Three-Party Conference key On the M3902 key number 4 is reserved for AO3, AO6, TRN, or NUL On the M3903, M3904, M3905 key number 18 is reserved for AO3, AO6, or NUL. On thel2004 key number 18 is reserved for AO3, AO6, or NUL.	basic-1 basic-24 basic-24 basic-25
	xx AO6	Six-Party Conference key On the M3902 key number 4 is reserved for AO3, AO6, TRN, NUL On the M3903, M3904, M3905 key number 18 is reserved for AO3, AO6, or NUL. On thel2004 key number 18 is reserved for AO3, AO6, or NUL.	basic-1 basic-24 basic-24 basic-25
	xx ARC	Attendant Recall key	basic-1

Prompt	Response	Comment	Pack/Rel
	xx ASP	ACD Supervisor call key (must have CLS = AGN) On the M3905 key numbers 8-11 are reserved for NRD, MSB, AAG, AMG, DWC and ASP.	acdb-1 basic-24
	xx ATW	ACD Call Waiting Time indication key	supp-14
	xx AWC	ACD Calls Waiting key Must have CLS = AGN and Supervisor Position ID or SPID must be configured.	bacd-1
	xx BFS TN	Busy Forward Status key Where: TN = Terminal Number to be screened. A Key cannot be assigned to a BRI set. <b>Note:</b> It is possible to configure the TN of the same set against the BFS key only if the Class of Service is BFEA.	bfs-20
	xx CA yy z...z	Combined No Hold Conference and Autodial key Where: yy = maximum length of the CA DN. Valid entries are: 4, 8, 12, (16), 20, 24, 28, 31. Note that other values are rounded up to the next valid number. z...z = actual Autodial DN (this entry is optional)	basic-14
	xx CAS	Centralized Attendant Service key	casm-1

# LD 11

Prompt	Response	Comment	Pack/Rel
	xx CFW yy z...z	Call Forward key Where: yy = maximum length of the CFW DN Valid entries for M2317 or M3000 sets are any integer in the range of (4)-23. For all other BCS type sets, you may enter any integer in the range of (4)-31. <b>Note:</b> The default for M3900 series telephones is (16). Where: z...z = Call Forward DN or range of DNs where calls are to be forwarded (the target DN). Must be key 11 for LOGIVOX telephones. A Group Hunt DN can be entered. If CLS = CFXD, the Call Forward number must be an internal DN.	optf-1
		On the M3903, M3904, M3905 key number 19 is reserved for CFW or NULL.	basic-24
		On the I2004 key number 19 is reserved for CFW or NULL.	basic-25
	xx CH D yy z...z	Combined No Hold Conference and Direct Hotline key Where: yy = number of digits in target DN (1-31) z...z = target DN	basic-14
	xx CH L yyy	Combined No Hold Conference and Hotline List key Where: yyy = 0-999 for Hotline list entry as defined in LD 18.	basic-14
	xx CHG	Charge account key On the M3903, M3904, M3905 key number 25 is reserved for CHG or NUL. On the I2004 key number 25 is reserved for CHG or NUL.	chg-1 basic-24 basic-25

Prompt	Response	Comment	Pack/Rel
	xx CLT	Configure Callers List key in context sensitive area, CLT/NUL are only options for key 27.	basic-25.4
	xx COS	Controlled Class of Service key	ccos-7
	xx CPN	Calling Party Number key On the M3903, M3904, M3905 key number 26 is reserved for CPN or NUL. On the I2004 key number 25 is reserved for CPN or NUL.	chg-1 basic-24 basic-25
	xx CS yyyy	Combined No Hold Conference and Speed Call key Where: yyyy = Speed Call list number from 0-8190. Not available on M3000 telephones.	basic-14
	xx CSD	Conferee Selectable Display key.	basic-23
	xx CWT	Call Waiting key Only one CWT Key is allowed. Should have CLS = HTD since Hunting takes precedence.	basic-1
	xx DAG	Display ACD Agents key This key displays the status of ACD agents appearing on the supervisor's telephone. Must have CLS = SPV and ADD or DDS.	bacd-1

# LD 11

Prompt	Response	Comment	Pack/Rel
	xx DIG yyyy zz R/V	Dial Intercom Group key Where: yyyy = group number, from 0-2045. zz = member number from 0-99. The zz value cannot be equal to or share the first digit of a 2 digit number with the SPRE code. For example, if SPRE = 1, zz cannot be 1, 10, 11...19. R = Ring option V = Voice option  Must have maximum number of Dial Intercom Groups DGRP defined in LD 15.  If any member in a group has a two-digit member number, then all members have a two-digit number. The system adds leading zeros to other entries.  Prompted with Dial Intercom (DI) package 21.	di-1
	xx DPU	Directed Call Pickup key  Key is optional, dial access code can be used if CLS = DPUA. Not available on M3000 telephones. This prompt appears with Directed Call Pickup (DCP) package 115.	dcp-12
	xx DRC yyy	DID Route Control key Where: yyy = route number = 0-511	basic-15
	xx DSP	Display key  This key must have an associated key/lamp pair.	ddsp-1

Prompt	Response	Comment	Pack/Rel
	xx DWC yyyy	<p>ACD Supervisor Display Waiting Calls key</p> <p>Where: yyyy = ACD DN. Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.</p> <p>A maximum of eight DWC keys can be assigned per queue on eight supervisors. Agent sets can only have 1 SWC key for their own queue.</p> <p>ACD agent telephones can support the display waiting calls key. Must have CLS = SPV and ADD or DDS.</p> <p>TTThe key can be used with supervisors and agents.</p> <p>On the M3905 key numbers 8-11 are reserved for AAG, AMG, ASP, DWC, MSB and NRD.</p>	<p>bacd-19</p> <p>basic-24</p>
	xx EMR	<p>ACD Emergency key (must have CLS = AGN)</p> <p>On the M3905 key numbers 8-11 are reserved for AAG, AMG, ASP, DWC, MSB and NRD.</p>	<p>acdb-1</p> <p>basic-24</p>
	xx ENI yyyy	<p>ACD Enable Interflow key</p> <p>Where: yyyy = DN. The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.</p> <p>Only one is allowed per ACD DN. Must have CLS = SPV.</p>	acdb-1
	xx EOVR	Enhanced Override key	povr-20
	xx FDIS	Force Disconnect Key	pomw-25.4
	xx FLH	DSN Flash Key	atvn
	xx FOV	DSN Flash Override Key	atvn

# LD 11

Prompt	Response	Comment	Pack/Rel
	xx GHD	Group Hunt Deactivation A station user can toggle the PDN in and out of all groups of which that PDN is a member.	pldn-15
	xx GPU	Group Call Pickup key The key is optional because a dial access code can be used if CLS = GPUUA. Not available on M3000 telephones. Allowed with Directed Call Pickup (DCP) package 115.	dcp-12
	xx GRC yy	Group Call key Where: yy = 0-63 for Group number as defined in LD 18	grp-1
	xx HLD	Hold	supp-10
	xx HOT	Direct entry for Hotline model set key (Small System and Succession 1000), Automatic termination DN is eight digits	hot-10

Prompt	Response	Comment	Pack/Rel
nn HOT D dd num DN m (cccc or D)		<p>Two-way Hotline key</p> <p>Where:</p> <p>dd = number of digits dialed</p> <p>num = target_number (terminating DN is a maximum of 31 digits)</p> <p>DN = two-way hotline DN</p> <p>m = one of the following Terminating Modes:  H = Hotline (default), N = Non-ringing,  R = Ringing, or V = Voice</p> <p>cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1.</p> <p>D = the character "D". When the character "D" is entered, the system searches the DN keys from key 0 and up, to find a DN key with CLID table entry. The CLID associated with the found DN key will then be used.</p>	hot-21
xx HOT D nn x...x		<p>Direct entry for One-way Enhanced Hotline key</p> <p>Where:</p> <p>nn = number of digits dialed</p> <p>x...x = Hotline terminating DN up to a 31 digit maximum</p>	hot-10

# LD 11

Prompt	Response	Comment	Pack/Rel
	xx HOT D nn x...x xxxx (cccc or D)	Direct entry for Two-way Enhanced Hotline key Where: nn = number of digits in Target DN x...x = Terminating DN up to a 31 digit maximum xxxx = optional two way Hotline DN. The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1. D = the character "D". When the character "D" is entered, the system searches the DN keys from key 0 and up, to find a DN key with CLID table entry. The CLID associated with the found DN key will then be used.	hot-10
	nn HOT I dd num m	Intercom key Where: dd = number of digits dialed num = target_number (terminating DN max 31 digits) m = one of the following Terminating Modes: V = Voice (default), N = Non-ringing, or R = Ringing	hot-21
	xx HOT L bbb	One-way Hotline key Where: bbb = Hotline list entry = 0-999. The Hotline list entry is defined in LD 18. Note that the Hotline list NCOS overrides the set NCOS.	hot-10

Prompt	Response	Comment	Pack/Rel
	xx HOT L bbb xxxx (cccc or D)	Two-way list entry for Enhanced Hotline key Where: bbb = List entry = 0-999 xxxx = Two-way Hotline DN. This DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1. D = the character "D". When the character "D" is entered, the system searches the DN keys, from key 0, up to find a DN key with CLID table entry. The CLID associated with the found DN key will then be used.  Hotline list entry is defined in LD 18. Note that the Hotline list NCOS overrides set NCOS.	hot-10
	xx ICF nn xxxx	Internal Call Forward key Where: nn = Forward DN length. Valid entries are any integer in the range of (4)-31. Where: xxxx = Forward DN (this entry is optional) An ICF key can be configured if Call Forward is enabled.	icf-19
	xx IMM KY1 aaa	DSN Immedicate Key Key 1 located far left, below dial pad. Where: aaa = VUP (Volume Up) by default for KY1. Any function not requiring a lamp may be assigned. CLS must be LVXA.	atvn

# LD 11

Prompt	Response	Comment	Pack/Rel
	KY2 aaa	Key 2 located middle, below dial pad. Where: aaa = VDN (Volume Down) by default for KY2. Any function not requiring a lamp may be assigned. CLS must be LVXA.	
	KY3 aaa	Key 3 located far right, below dial pad. Where: aaa = HLD (Hold) by default for KY3. Any function not requiring a lamp may be assigned. CLS must be LVXA.	supp-10
	xx LNG	M2317 Language Toggle key (No Language) Where: xx = key 29 LNG = Language Toggle enabled NUL = Remove Language Option  This feature allows set operator to set and reset language display, toggling between French and English versions on the alphanumeric display.	dlt2-9
	xx LNK	Last Number Redial key LNRS defines the Last Number Redial Size. For LOGIVOX telephones, key 8 is defined by set firmware as the Last Number Redial key. The key definition is optional, because the user can press the DN key twice to activate Last Number Redial. Must have OPT = LRA in LD 15 and CLS = LNA.	Inr-8
	xx LSPK yyyy	Loudspeaker key Where: yyyy = associated loudspeaker DN or SPEKABUS channel	ohol-20
	xx MCK	Message Cancellation Key This key should only be programmed on Message Center sets.	mwc-1

Prompt	Response	Comment	Pack/Rel
xx MCN yyyy (cccc or D) zz..z	Multiple Call Non-Ringing key	<p data-bbox="471 347 548 375">Where:</p> <p data-bbox="516 386 628 414">yyyy = DN</p> <p data-bbox="516 418 1014 493">cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1.</p> <p data-bbox="516 498 1018 630">D = the character "D". When the character "D" is entered, the system searches the DN keys from key 0 and up, to find a DN key with CLID table entry. The CLID associated with the found DN key will then be used.</p> <p data-bbox="516 634 989 688">zz..z = additional information required for the key aaa.</p> <p data-bbox="471 699 1018 802">The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. The DN cannot appear simultaneously on a PBX set DN or as an SCR DN or SCN DN.</p> <p data-bbox="471 818 967 873">Once the MCN key has been defined, MARP is prompted.</p>	basic-20
		<p data-bbox="471 883 971 958">On the M3901 and M3902 MCN cannot be configured on keys 1-5. MCN, if it is configured, must be assigned to key 0.</p>	basic-24

# LD 11

Prompt	Response	Comment	Pack/Rel
	xx MCR yyyy (cccc or D) zz..z	Multiple Call Ringing key Where: yyyy = DN cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1. D = the character "D". When the character "D" is entered, the system searches the DN keys from key 0 and up, to find a DN key with CLID table entry. The CLID associated with the found DN key will then be used. zz..z = additional information required for the key aaa.  The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. The DN cannot appear simultaneously on a PBX set DN or as a SCR Single Call or SCN DN.  Once the MCR key has been defined MARP is prompted.	basic-20
		On the M3901 and M3902 MCR cannot be configured on keys 1-5. MCR, if it is configured, must be assigned to key 0.	basic-24
	xx MIK	Message Indication Key  This key should only be programmed on Message Center sets.	mwc-1
	xx MMM	Voice/Data display key  Only key numbers 0-7 can be assigned for the M2008. M2x16 varies with additional add-on modules. Maximum key number is 59.  The Data Port requires specific key assignments. An ISDL line card, vintage C or higher, is required for M2006, M2008, M2216 and M2616 telephones.	amp-5

Prompt	Response	Comment	Pack/Rel
	xx MRK	Message Registration Key Requires PPM/Message Registration (MR) package 101 and CLS = ADD or DDS.	mr-10
	xx MSB	Make Set Busy key On the M3905 key numbers 8-11 are reserved for AAG, AMG, ASP, DWC, MSB and NRD.	msb-1 basic-24
	xx MWK yyyy	Message Waiting Key Where: yyyy = DN. The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. With the Network Message Service feature equipped, the NMS-DN can be up to 13 digits. On the M3902, key 5 is reserved for MWK or NUL. On the M3903, M3904, M3905, key 16 is reserved for MWK or NUL. On the i2004 key 16 is reserved for MWK or NUL.	mwc-1 basic-24 basic-25
	xx NHC	No Hold Conference key	basic-14
	xx NRD	Not Ready key AGN or SPV Class of Service must be assigned. On the M3905 key numbers 8-11 are reserved for AAG, AMG, ASP, DWC, MSB and NRD.	bacd-1 basic-24
	xx NSVC yyyy	Night Service key (must have CLS = SPV) Where: yyyy = ACD DN associated with that Night Service. The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	bacd-12
	xx NUL	Removes function or feature from key	basic-1

# LD 11

Prompt	Response	Comment	Pack/Rel
	xx OBV	Observe ACD agent key (must have CLS = OUSD)	bacd-12
	xx OBV yy..yy	Observe key with Speed Call List Number (must have CLS = OUSD). Where: yy.yy = SCL number	oas-3.0
	xx OSN	On-Site Notification key.	esa-23
	xx OVB	Overflow Position Busy key	aop-1
	xx OVR	Override key	optf-1
	xx PONW	Priority Override/Breakin Networkwide key	pomw-25.4
	xx PRK	Call Park key	cprk-2
		The Transfer (TRN), or Six-Party Conference (A06) key plus a Dial Access code can be used instead of the Park key.	
		On the M3903, M3904, M3905, key 21 is reserved for PRK or NUL.	basic-24
		On the i2004 key 21 is reserved for PRK or NUL.	basic-25
	xx PRS	Privacy Release key	basic-1
		On the M3903, M3904, M3905, key 24 is reserved for PRS or NUL.	basic-24
		On the i2004 key 24 is reserved for PRS or NUL.	basic-25
	xx PRY	DSN Priority Key	atvn

Prompt	Response	Comment	Pack/Rel
	xx PVN yyyy (cccc or D) zz..z	<p>Private Line Non-Ringing key</p> <p>Where:</p> <p>yyyy = DN  cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1.  D = the character "D". When the character "D" is entered, the system searches the DN keys from key 0 and up, to find a DN key with CLID table entry. The CLID associated with the found DN key will then be used.  zz..z = additional information required for the key aaa.</p> <p>The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Must have Private Line Directory Number (PRDN) defined in LD 14.</p> <p>On the M3901, M3902, key 0 is reserved for PVN.</p>	basic-20
	xx PVR yyyy (cccc or D) zz..z	<p>Private Line Ringing key</p> <p>Where:</p> <p>yyyy = DN  cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1.  D = the character "D". When the character "D" is entered, the system searches the DN keys from key 0 and up, to find a DN key with CLID table entry. The CLID associated with the found DN key will then be used.  zz..z = additional information required for the key aaa.</p> <p>The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Must have Private Line Directory Number (PRDN) defined in LD 14.</p> <p>On the M3901, M3902, key 0 is reserved for PRV.</p>	basic-20
			basic-24
			basic-24

# LD 11

Prompt	Response	Comment	Pack/Rel
xx RAG		ACD Ring Agent key (must have CLS =SPV)	acdb-1
xx RCK y z		Ringling Change Key Where: y = first key/lamp strip controlled by key = (0)-6 z = second key/lamp strip controlled by key = 0-(1)-6.  Only one ringing change key per set is permitted. Requires International Supplementary Features (SUPP) package 131 and Ringling Change Key (RCK) package 193.	rck-15
xx RDL yy		Redial stored number key Where: yy = number of digits = 4, 8, 12, (16), 20, 23. Numbers between 5 and 22 are rounded up to the next valid number.	snr-3
xx RGA		Ring Again key  Must be key 10 on LOGIVOX telephones. RANA may be activated if OPT = RNA in LD 15. When OPT = RND in LD 15, all sets with the RGA key will only be able to activate Ring Again Busy.	rga/optf-20
		On the M3903, M3904, M3905, key 20 is reserved for RGA or NUL.	basic-24
		On the i2004 key 20 is reserved for RGA or NUL.	basic-25
xx RLS		Release key  Requires CLS = LVXA. Key/lamp pair is not required. Must be KY3 on LOGIVOX telephones.	basic-1
xx RLT		Configure Redial List key in context sensitive area, RLT/NUL are only options for key 28.	basic-25.4
xx RMK		Room Status Key	rms-10

Prompt	Response	Comment	Pack/Rel
	xx RMWK xxxx [yyyy]	Remote Message Waiting indication key Where: xx= key number xxxx = Message Center DN [yyyy] = DN to be monitored [optional]	mw-24
	xx RNP yyyy	Ringing Number Pickup key Where: yyyy = Ringing Number Pickup group number is optional  If the group number is not entered, the key will pick up the group number assigned to the station. If the group number is entered, the key will pick up calls in the specified group yyyy.	basic-1
	xx RPAG yyyy	Radio Paging key Where: yyyy = Route Access Code Coordinated Dialing Plan (CDP) Trunk Steering Codes (TSC) and Distant Steering Codes (DSC) can be entered against yyyy.	rpa-15
	xx SCC yyyy	Speed Call Controller key Where: yyyy = SCL list number 0-8190. SCL must be defined in LD 18. On the M3903, M3904, M3905, key 23 is reserved for SCC, SCU, SSU, SSC or NUL.	optf-1 basic-24

# LD 11

Prompt	Response	Comment	Pack/Rel
	xx SCN yyyy (cccc or D) zz..z		basic-20
		Single Call Non-Ringing key	
		Where:	
		yyyy = DN	
		cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1.	
		D = the character "D". When the character "D" is entered, the system searches the DN keys from key 0 and up, to find a DN key with CLID table entry. The CLID associated with the found DN key will then be used.	
		zz..z = additional information required for the key aaa.	
		The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Once the SCN key has been defined, MARP is prompted.	
		On the M3901, M3902, key 0 is reserved for SCN.	basic-24

Prompt	Response	Comment	Pack/Rel
	xx SCR yyyy (cccc or D) zz..z	<p>Single Call Ringing key</p> <p>Where:</p> <p>yyyy = DN  cccc = CLID table entry of (0)-N, where N = the value entered at the SIZE prompt in LD 15 minus 1.  D = the character "D". When the character "D" is entered, the system searches the DN keys from key 0 and up, to find a DN key with CLID table entry. The CLID associated with the found DN key will then be used.  zz..z = additional information required for the key aaa.</p> <p>The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Use a single appearance DN to terminate VCC Voice Call or SIG Signaling calls.</p> <p>OOOnce the SCR key has been defined, MARP is prompted.</p> <p>On the M3901, M3902, key 0 is reserved for SCR.</p>	basic-20
	xx SCU yyyy	<p>Speed Call User key</p> <p>Where: yyyy = SCL list number 0-8190. SCL must be defined in LD 18.</p> <p>On the M3903, M3904, M3905, key 23 is reserved for SCC, SCU, SSU, SSC or NUL.</p> <p>On the i2004 key 23 is reserved for SCC, SCU, SSU, SSC or NUL.</p>	<p>optf-1</p> <p>basic-24</p> <p>basic-25</p>
	xx SIG yyyy	<p>Signal key</p> <p>Where: yyyy = Single appearance DN.</p> <p>The DN can be up to 4 digits, up to 7 digits with DNXP package 150. Key/lamp is not required.</p>	basic-1

# LD 11

Prompt	Response	Comment	Pack/Rel
xx SSC yyyy		System Speed Call controller key Where: yyyy = SSC list number 0-4095. SSC list must be defined in LD 18. On the M3903, M3904, M3905, key 23 is reserved for SCC, SCU, SSU, SSC or NUL.	optf-1 basic-24
xx SSU yyyy		System Speed Call User key Where: yyyy = SSC list number 0-4095. SSC list must be defined in LD 18.	optf-1
xx TAD		Time and Date key For SL-1 sets only, must have CLS = ADD or DDS, cannot be key 0. Blocked on the M3901, M3902, M3903, M3904, M3905.	ddsp-1 basic-24
xx THF		Centrex Trunk Switch Hook Flash key	thf-14
xx TRC		Malicious Call Trace key Key/lamp not required. MCT is applied on a TN basis. Yhis key can be configured on ACD telephones. Allowed when CLS = MCTA.	mct-10
xx TRN		Call Transfer key On the M3902, key 4 is reserved for TRN or NUL. On the M3903, M3904, M3905, key 17 is reserved for TRN or NUL. On the i2004 key 17 is reserved for TRN or NUL.	basic-1 basic-24 basic-25
xx USR		User Selectable Call Redirection key	uscr-19
xx UST		User Status key (must have UST = YES in LD15 and UST = YES in LD 23)	ims-2

Prompt	Response	Comment	Pack/Rel
	xx VCC yyyy	Voice Call key Where: yyyy = Single appearance DN. Not available on M3000 telephones.	basic-1
	xx VUP	Volume Up key (must be assigned if Volume Down is assigned)	
	xx VDN	Volume Down key (must be assigned if Volume Up is assigned)	
	xx WUK	Guest entry of automatic Wakeup key (Key/lamp pair is required)	gewu-16
	xx XMWK xxxx yyyy	Extended Message Waiting indication key Where: xx= key number xxxx = Message Center DN yyyy = DN to be monitored	mw-24
KLS	1-7	Number of key/lamp strips, including add-on key/lamp modules. Prompted if TYPE = SL-1	basic-1
LANG	(0)-5 X	Language choice for Automatic Wakeup (AWU) calls. Prompted with Multi-Language Wakeup (MLWU) package 206.  This entry defines the language presented for the Automatic Wakeup Recorded Announcement (RAN), for language 0 through 5 as follows:	mlwu-16
	(0)	See RAN1/RAN2 in LD 15	
	1	See LA11/LA12 in LD 15	
	2	See LA21/LA22 in LD 15	
	3	See LA31/LA32 in LD 15	
	4	See LA41/LA42 in LD 15	
	5	See LA51/LA52 in LD 15	
	X	Remove entry	

# LD 11

Prompt	Response	Comment	Pack/Rel
LDN	(NO) 0-3 0-5	Listed Directory Number Index as defined in LD 15 Listed Directory Number Index as defined in LD 15 Listed Directory Number Index as defined in LD 15	nldn-20
LHK	(0)-7 (0)-27 (0)-59 (0)-69 (0)	Last Hunt Key number limit For M2008 For M2616, varies with number of add-on modules (Small System and Succession 1000) For M2616, varies with number of add-on modules For SL-1, varies with number of key/lamp strips No Last Hunt Key or remove Last Hunt Key (used for Internal/External Short Hunt)	basic-10
LNRS	4-(16)-31	Last Number Redial Size  Enter the maximum number of digits that can be stored. Valid entries are 4, 8, 12, (16), 24, 28, or 31. Invalid entries are rounded up to the next valid entry.	Inr-8
LPK	(0)-5 (0)-7 (0)-27 (0)-59 (0)-69	Line Preference Key limit (last key scanned for Automatic Line Preference) For M2006 For M2008 For M2616, varies with number of add-on modules (Small System and Succession 1000) For M2616, varies with number of add-on modules For SL-1, varies with number of key/lamp strips Prompted when CLS = IRA, NIA or OLA.	lsel-4
LTN	1-253 0-15	Logical TN and AUX link number  This prompt appears when CLS = IMA and the valid APL link is defined in LD15.	amp-5

Prompt	Response	Comment	Pack/Rel
MARP	(NO) YES	Multiple Appearance Redirection Prime Use TN as the Multiple Appearance DN Redirection Prime. The MARP prompt, or MARP information, appears following the DN KEY designation, and is associated with those DN assignments.	basic-18
MAUT	(NO) YES	Modify Authorization Codes for this telephone This prompt appears with Station Specific Authorization Codes (SSAU)package 229 and CLS = AUTR.	ssau-19
MIN	x...x	Mobile Identification Number for a portable. Length is 10 BCD Digits.	basic-22
MLNG	a...a	Language selection for the M3902, M3903, M3904, or M3905. Where: a...a = <CR> no change. a...a = ENG, FRE, GER, DUT, SPA, ITA, NOR, SWE, DAN, POR, FIN, POL, CZE, HUN, JAP, RUS, LAT, TUR.	basic-25.4
MLWU_LANG		Language choice for Automatic Wakeup (AWU) calls. This entry defines the language presented for the Automatic Wakeup Recorded Announcement (RAN), for language 0 through 5 as follows:	mlwu-19
	(0)	See RAN1/RAN2 in LD 15	
	1	See LA11/LA12 in LD 15	
	2	See LA21/LA22 in LD 15	
	3	See LA31/LA32 in LD 15	
	4	See LA41/LA42 in LD 15	
	5	See LA51/LA52 in LD 15	
	X	Precede with X to remove	

# LD 11

Prompt	Response	Comment	Pack/Rel
MOD	(NO) YES	Mode Network is required for Meridian Programmable Data Adapter Modem synchronizes to clock in external device, such as QMT21	arie-14
MODL	1-127	Model number for small systems Model number for Succession 1000 This prompt appears for Small System and Succession 1000 model sets.	basic-16 basic-1
MOTN	<cr> l s c u	Main Office TN Accept default when Succession 1000 is the Main Office When Main Office is a Large System. For Succession 1000	sbo-2
MPHI	(NO) YES	Meridian Communications Unit used as MPH interface Prompted if TYPE = MCU.	mph-19
MPR	0-511	Modem Pool Route number	amp-5

Prompt	Response	Comment	Pack/Rel
NAME	aaaa,bbbb	<p>Calling Party Name Display name</p> <p>First name comma Last name.</p> <p>For example, John Doe is entered as John,Doe. The first single comma is treated as the delimiter. Up to 27 characters (including the comma) may be input. The last occurrence of the first comma group serves as the name delimiter and is translated into a space between the first and last name.</p>	cpnd-21
	aaaa	When the delimiter is omitted, the input is stored as a first name.	
	aaaa,	When the delimiter follows the input, the input is stored as the first name.	
	,bbbb	When the delimiter precedes the input, the input is stored as a last name.	
NCOS	(0)-99	Network Class of Service group	ncos-1
OHID	(0)-9	<p>Off-Hook Alarm Security DN index for off-hook or interdigit timeout.</p> <p>When a dial tone or interdigit timeout occurs on a set with Alarm Security Allowed (ASCA) Class of Service, the set is intercepted to a predefined DN.</p> <p>Enter the index number (0)-9 of the DN defined by LD 15 prompts ODNx.</p>	basic-18
OPE	(NO) YES	Change data port Operating Parameters	mcu/arie-19
PAR	(SPAC)	Space Parity	basic-1
	EVEN	Even Parity	
	ODD	Odd Parity	
	MARK	Mark Parity	

# LD 11

Prompt	Response	Comment	Pack/Rel
PBDO	(OFF) ON	Port Busy when DTR off Disabled Key 7 is automatically assigned as the Make Set Busy (MSB) key Switching to any other mode will force PBDO to OFF. Prompted if TYPE = R232 in operating modes 8 or 12.	dac-16
PLEV	0-(2)-7	Priority Level, prompted with Priority Override/ Forced Camp-On (POVR) package 186 or Enhanced DPNSS1 Services (DPNSS_ES) package 288. 2 = set can override sets of level 1 and 2, and can be overridden by sets of level 2-7.	povr-20
POS	xxxx	ACD position ID. Prompted when SFMT = AUTO, TNDN, TN or DN.	basic-12
PRI	(1)-48 (1)-32	Priority level for Automatic Call Distribution (ACD) agent Valid range for systems 11C, 51C, 61C, and 81C. Valid range for all other system options. The agent with the lowest number assigned has the highest priority and is the first ACD agent to receive calls. (Where Priority 1 has the highest priority level). PRI is prompted with Automatic Call Distribution, Priority Agent (PAGT) package 116 and CLS = AGN or SPV.	pagt-12
PRM	(ON) OFF	Prompt for terminal or host mode Terminal or Keyboard dial mode, prompts are output by data unit Host mode prompts are not output by data unit	arie-14
PSDS	(NO) YES	Public Switched Data Service option With PSDS = YES, transmission will be synchronous and the baud will be 56K or 64K. 56K is the default.	arie-18

Prompt	Response	Comment	Pack/Rel
PSEL		Protocol Selection, DM-DM or T-link	arie-18
	(DMDM)	DMDM is used by Meridian 1 data devices such as ASIM, AIM, ADM, SADM, Asynchronous Data Option or ADO, and MPDA. MCA can use both protocols.	
	TLNK	TLNK protocol is used by SL-100 and DMS data devices This prompt appears if DTAO = MCA, or TYPE = MCU	
PUTYP	(PRIVATE) IS-41	Portable Subscriber Type	IS-41-24
RCO	(0)-2	Ringling cycle option for Call Forward No Answer This prompt appears when CLS = FNA or MWA (or both)	uscr-18
REQ:		Request	basic-19
	?	To get a list of possible responses	
	CHG	Change existing data block	
	CPY 1-32	Copy or create 1 to 32 new station data block(s) automatically from the specified station data block. Model sets cannot be copied.	
	END	Exit overlay program	

# LD 11

Prompt	Response	Comment	Pack/Rel
	MOV	<p>Move data block from one TN to another.</p> <p>MOV command can be used to move digital "IPE" telephones from one loop, shelf, card, unit to another Iscu with the following restrictions (includes moves across Superloops):</p> <ul style="list-style-type: none"><li>-ACD sets must not be moved. Remove (out) data and re-enter at destination.</li><li>-Cannot be used for Small System and Succession 1000 Model sets</li></ul> <p>MOV command can be used to move digital "EPE" telephones from one unit or card to another, but does not support moving these phones across shelves or loops.</p> <p>MOV PAIR command can be used providing the system is on RIs 24 or 25. This command will not function properly on RIs 15 - 23. It is recommended to use MOV on these releases of software.</p> <p><b>Note:</b> If moving a voice unit with an associated data unit, the data unit must also be moved. On the NT8D02 DLC card, both voice and data TN's can be moved by the MOV PAIR command.</p> <p><b>Note:</b> If Call Forward is activated prior to the set move, the Call Forward data will be moved to the destination set.</p>	basic-25.4
	MOV PAIR	Move voice TN and data TN data blocks on NT8D02 Digital Line Card	
	NEW	Add new data block to the system	
	OUT	Remove data block	
		<p>Before removing an ACD agent telephone, first remove the associated AGT key on the supervisor's telephone. Select OUT and then NEW when switching resources between virtual and actual ACD DNs, to avoid unwanted information on ACD-D reports.</p>	

Prompt	Response	Comment	Pack/Rel
		The following is a list of valid responses. For further information, consult the appropriate Overlay program.	
		<b>LD 32:</b> CDSP CMIN CONV CPWD DISC DISI DISL DISN DISS DISU DSCT DSPS DSXP ENCT ENLC ENLG ENLL ENLN ENLS ENLU ENPS ENXP IDC IDCS IDU LBSY LDIS LIDL LMNT PBXT SDLC STAT SUPL TRK XNTT XPCT XPEC	
		<b>LD 20:</b> LTN LUC LUDU LUU LUVU PRT <b>LD 10:</b> CHG CPY MOV NEW OUT	
RNPG	(0)-4095	Ringing Number Pickup Group	grp-1
		To remove a telephone from a group, enter 0 in response to the RNPG prompt.	
RTS	(ON) OFF	Request To Send applies only to asynchronous mode.	mca-18
SCI	(0)-7	Station Category Indication priority level The station category number 1 to 7 must be defined as attendant console Incoming Call Indicator. LD 15 prompt ICI = CA1-CA7.	sci-7
SCPW	xxxx	Station Control Password Must equal Station Control Password Length (SCPL) as defined in LD 15. Not prompted if SCPL = 0. Precede with X to delete.	ffc-15
SECOND_DN		Second DN sharing the Voice Mailbox	vmba-19
	x...x	Second Directory Number. This DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	
	X	Deletes the second directory number	

# LD 11

Prompt	Response	Comment	Pack/Rel
SFDN	xxxx	Secretarial Forwarding DN of secretary set This prompt appears if response to SFLT = BOSS.	ftcsf-15
SFLT	(NO) BOSS SEC	Secretarial Filtering Assign no designation to telephone set Designate telephone set as a Boss set Designate telephone set as a Secretary set SEC (NO) and <cr> takes you to the next prompt. This prompt appears with Boss Secretary Filtering (FTCSF) package 198.	ftcsf-15
SFMT		Select one of the following formats for the copy command. The DN may be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	basic-1
	TNDN	Manual selection of TNs and DNs or ACD position IDs for ACD telephones.  The TN and DN or POS for ACD set prompts repeat n times as specified under the CPY n command.  TN            I s c u        TN of new set DN            xxxx            DN of new set POS          xxxx            ACD position ID of new set	
	TN	The new DNs or ACD position IDs for ACD telephones are provided by the system. You are prompted for the starting TN and DN or ACD position ID for ACD telephones and each TN.  The TN prompt repeats n times as specified under the CPY n command.  TN            I s c u        TN of new set DN            xxxx            DN of new set POS          xxxx            ACD position ID of new set	

Prompt	Response	Comment	Pack/Rel
	DN	<p>The new TNs are provided by the system. You are prompted for the starting TN and each DN or ACD position ID for ACD telephones.</p> <p>The DN or POS for ACD sets prompt repeats n times as specified under the CPY n command.</p> <p>TN            l s c u            TN of new set</p> <p>DN            xxxx                DN of new set</p> <p>POS          xxxx                ACD position ID of new set</p>	
	AUTO	<p>The new TNs and DNs or ACD position IDs for ACD telephones are provided by the system. You are prompted for the starting TN and DN or ACD position ID for ACD telephones.</p> <p>TN            l s c u            TN of new set</p> <p>DN            xxxx                DN of new set</p> <p>POS          xxxx                ACD position ID of new set</p>	
SGRP	(0)-999	<p>Scheduled Access Restriction group number</p> <p>This prompt appears with Scheduled Access Restrictions (SAR) package 162. Must have group defined in LD 88.</p>	sar-20
SPID	x...x	<p>Supervisor Position ID DN</p> <p>SPID is prompted for ACD packages B, C, and D when CLS = AGN. SPID can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.</p>	bacd-1
SPWD	xxxx	<p>Secure Data Password</p> <p>This prompt appears only if the password is defined in LD 15. If the password is not entered, the security codes will not print when PRT is requested.</p>	ssau-19
SSU	0-4095	<p>System Speed Call List number</p> <p>Precede with X to delete.</p>	ssc-2

# LD 11

Prompt	Response	Comment	Pack/Rel
TEN	1-511	Tenant number This prompt appears if Multi-tenant is configured for the customer.	tens-7
TGAR	0-(1)-31	Trunk Group Access Restriction. The default of (1) automatically blocks direct access.	basic-1
THIRD_DN	x...x	Third DN sharing the Voice Mailbox Third Directory Number. This DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. X Deletes the third directory number	vmba-19

Prompt	Response	Comment	Pack/Rel
TN		Terminal Number. The TN defines the location of the telephone set. TN appears when REQ = NEW, CHG, MOV, MOV PAIR or OUT.	basic-1
	I s c u	Large System TN format: I s c u = loop, shelf, card, unit Where I = 0-159: loops, superloops must be multiples of four, starting with superloop 0 0-255: loops, Option 81C Where s = 0-3: PE shelves on loops defined TERM in LD 17 0-1: PE shelves on loops defined TERD in LD 17 and superloops 0: PE shelf on loops defined TERQ in LD 17 Where c = 1-10: PE cards of dual and enhanced loops. 0-15: IPE cards of superloops. Where u = 0-3: single density units 0-7: double density units and SL-1 line cards 0-15: integrated services digital line (ISDL) cards 0-31: digital line cards or DLC For a static voice or data TN, u = 0-31. To assign VCE to TNs (where u = 16-31), CLS must be FLXA. To assign DTA to TNs (where u = 0-15), CLS must be FLXA. See text regarding FLXA on page 149.	fnf-25
	c u	Small System format: c u = card, unit For Small System c = 1-50 u = 0-31 For Small System Chassis c = 0-4, 7-14, 17-24, 27-34, 37- 44, 47-50 u = 0-31	basic-16

# LD 11

Prompt	Response	Comment	Pack/Rel
	c u	Succession 1000 format: c u = card, unit c = 11-14, 17-24, 27-34, 37- 44, 47-50 u = 0-31	basic-1
TOTN		To Terminal Number	basic-20
	l s c u	Large System TN format: l s c u = loop, shelf, card, unit	
	c u	Small System TN format	
	c u	Succession 1000 TN format: c u = card, unit This prompt appears when REQ = MOV and is not prompted for Model sets.	basic-1
TOV		Timeout Value for the Data port, for M2006, M2008, M2216 and M2616 data port only	mcu/arie-19
	(0)	No Timeout	
	1	15 minutes	
	2	30 minutes	
	3	60 minutes	
TRAN		Port transmission type for the data port on M2006, M2008, M2216, M2616 telephones	mcu/arie-19
	(ASYN)	Asynchronous data transmission	
	SYN	Synchronous data transmission Asynchronous data modules cannot be set as synchronous. An MMPO with DTAO, MPDA, or MMPO supports SYN.	
TYPE:		Type of data block	basic-1
	?	To get a list of possible responses	
	2006	M2006 Digital telephone.1 DN per set	
	2006 M	M2006 Digital telephone Model set	
	2008	M2008 Digital telephone	
	2008 M	M2008 Digital telephone Model set	

Prompt	Response	Comment	Pack/Rel
	2009	M2009 Digital telephone	
	2009 M	M2009 Digital telephone Model set	
	2016	M2009 Digital telephone	
	2018	M2018 Digital telephone	
	2018 M	M2009 Digital telephone Model set	
	2112	M2112 Digital telephone	
	2112 M	M2112 Digital telephone Model set	
	2216	M2216 Digital ACD telephone	
	2216 M	M2216 Digital ACD telephone Model set	
	2317	M2317 Digital telephone	
	2317 M	M2317 Digital telephone Model set	
	2616	M2616 Digital telephone	
	2616 M	M2616 Digital telephone Model set	
	3000	M3000 Digital Touchphone	
	3000 M	M3000 Digital Touchphone Model set	
	3901	M3901 Digital telephone	
	3902	M3902 Digital telephone	
	3903	M3903 Digital telephone	
	3903V	M3903 Virtual Terminal Set	arie-25
	3903H	M3903 Host Terminal Set	
	3904	M3904 Digital telephone	

# LD 11

Prompt	Response	Comment	Pack/Rel
	3904V	M3904 Virtual Terminal Set	arie-25
	3904H	M3904 Host Terminal Set	
	3905	M3905 Digital telephone.	
	CARD	Unused line card data block, used for Automatic Telephone Relocation.	
	CARDMLT	Multi-line Telephone Line Card	
	i2002	i2002 Internet Telephone For Succession 1000	basic-2
	i2004	i2004 Internet Telephone	basic-25
	i2050	i2050 Software Phone For Succession 1000	basic-2
	MCU	Meridian Communications Unit	
	MPORTBL	Mobility Portable	
	OOSMLT	Out of Service Multi-Line Terminal Unit Entering OOSMLT allows the administrator to mark any unit, regardless of card density or type, "Out of Service".	xpe-20
	PCA	Personal Call Assistant	pca-3.0
	R232	NT7D16 Data Access Card (DAC) port in RS-232 Data mode	
	R232 M	NT7D16 Data Access Card (DAC) port in RS-232 Data mode Model set	
	R422	NT7D16 Data Access Card (DAC) port in RS-422 mode	
	R422 M	NT7D16 Data Access Card (DAC) port in RS-422 mode Model set	
	SL1	SL-1 or M1000 series telephone data block	

Prompt	Response	Comment	Pack/Rel
		Not supported on Small System and Succession 1000	
		The M2006, M2008, M2216, and M2616 require ISDL line card Version C or greater. The data port requires specific key assignments.	
V25	(NO) YES	V.25 bis option, synchronous mode only.	arie-18
VISI		Visiting	mmsn-22
	(NO)	TN is not for visiting portables	
	YES	TN is for visiting portables	
VLL	(OFF) ON	Virtual Leased Line	arie-14
VMB		Voice Mailbox	vmba-19
	NEW	Add Voice Mailbox	
	CHG	Change Voice Mailbox	
	OUT	Remove Voice Mailbox	
		This prompt appears with Voice Mailbox Administration (VMBA) package 246.	
VMB_COS		Voice Mailbox Class of Service	vmba-19
	0-127	Valid range	
WIRE		Wire test. Prompted if TYPE = R232 or R422.	dac-16
	(OFF)	Wire test disabled	
	ON	System automatically tests wiring/cabling when DAC installed.	
XLST	(0)-254	Pretranslation group associated with this station.	pre-8

# LD 11

Prompt	Response	Comment	Pack/Rel
XPLN	xx	Expected name length	cpnd-19
ZONE	0-255	Zone Number which i2004 set belongs  The zone prompt applies only when the type is i2001, i2004, and i2050. Zone number is not checked against Overlay 117.	basic-25

---

---

## LD 12: Attendant Consoles

---

This program allows data blocks for attendant consoles to be created or modified.

When the Overlay is loaded the available system memory, disk records and system configuration limits are output in a header as follows:

```
>ld 12
ATT000
MEM AVAIL: (U/P): xxxxxx USED: xxxxx TOT: xxxxxxx
TNS AVAIL: xxxxx USED: xxxxx TOT: xxxxx
ATTENDANT CONSOLES AVAIL: xxxx USED: xx TOT: xxxx
```

If an Incremental Software Management (ISM) limit is set to the maximum value 32767, then the information for that ISM will not be printed. This does not apply for the TNs ISM.

## Prompts and responses

Prompt	Response	Comment
REQ:	aaa	Request (aaa = NEW, CHG, END, MOV, OUT)
TYPE:	a...a	Type of data block (a...a = 1250, 2250, ATT, or PWR)
TN	l s c u	Terminal Number (l s c u ranges are defined on page 221)
CTYP	(XDLC) EDLC	Card type
CDEN	aa	Card Density (aa = SD or DD)
SETN	l s c u	Second Terminal Number (l s c u ranges are defined on page 221)
CDEN	aa	Card Density of Second Terminal Number (aa = SD or DD)
TOTN	l s c u	To Terminal Number (l s c u ranges are defined on page 221)
CUST	xx	Customer number associated with this set
ANUM	1-63	Attendant Number
IADN	xxxx	Individual Attendant DN for this console.
ALPD	(NO) YES	Alphanumeric Display
DLEN	xx	Display Length (aa = (8) or 16)
SSU	yyyy	System Speed Call User list number
ICDR	(ICDD) ICDA	Internal Call Detail Recording (Denied) Allowed
- ABAN	(ABDD) ABDA	Abandoned call record and time to answer (Denied) Allowed
CPND	(CNDD) CNDA	Call Party Name Display feature (Denied) Allowed
- DNDI	(DNDD) DNDA	Dialed Name Display (Denied) Allowed
LANG	(00)-15	Language to download to M2250 on Sysload
EBLF	(BLFD) BLFA	Enhanced Busy Lamp Field (Denied) Allowed
SGRP	(0)-999	Scheduled Access Restriction Group number
PRES	0-19	ICI keys to have Presentation Status
QTHM	(NO) YES	Queue Thermometer equipped
- QDIS	0-3 0-19	Queue Thermometer Display position, and ICI key number
ICP	(NO) YES	Intercept Computer available
- ICT	0-<NIPN>	Intercept Computer Terminal or printer number
AADN	xxxx	Attendant Alternate Answering DN
DNAN	(DNAA) DNAD	(ANI DN used for 3WT ANI messages) or Outgoing CDTI2/ CSDTI2 route ANDN will be used as DN in ANI messages
DAPC	(DAPA) DAPD	Dial Access Prefix on Console
KEY	xx aaa yyyy	Key (KEY responses begin on page 215)

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
AADN	x...x	Attendant Alternate Answering DN  This DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. The DN must be a valid station DN or ACD DN. This prompt appears with Attendant Alternative Answering (AAA) package 174.	aaa-15
ABAN	(ABDD) ABDA	Abandoned call record and time to answer Denied Abandoned call record and time to answer Allowed  ABDA generates a B-Record in CDR reports. Refer to the <i>Call Detail Reporting</i> NTP for more information. ABAN appears with New Format Call Detail Recording (FCDR) package 234.	fcd-18
ALPD	(NO) YES	Alphanumeric Display QCW3 Attendant Console QCW4 Attendant Console  This prompt appears when TYPE = ATT.	basic-12
ANUM	1-63	Attendant Number	basic-1
CDEN	SD DD	Single Card Density Double Card Density  If the loop is a single density loop, the default is single density. If the loop is a double density, the default is double density. If the loop is a quad density, there is no default.  This prompt appears when TYPE = ATT or 1250 and the loop is a single or double density.	basic-7
CPND	(CNDD) CNDA	Call Party Name Display feature Denied Call Party Name Display feature Allowed  Prompted when TYPE = 1250/2250 and has Calling Party Name Display (CPND) package 95 and OPT = IDP in LD 15.	cpnd-12

# LD 12

Prompt	Response	Comment	Pack/Rel
CTYP	(XDLC) EDLC	Card type is 16 port DLC Card type is 24 port DLCVCE/DTA  <b>Note:</b> EDLC not supported on Small System and Succession 1000.	basic-25
CUST	xx	Customer number associated with this set Customer number is defined in LD 15.	basic-1
DAPC	(DAPA) DAPD	Dial Access Prefix on Console Display Access Prefix Allowed Display Access Prefix Denied	isdn-24
DLEN	(8) 16	Display Length QCW2 Attendant Console QCW3 or QCW4 Attendant Console Prompted when TYPE = ATT. DLEN applies for only a QCW type console.	basic-1
DNAN	(DNAA) DNAD	ANI DN will be used as the Customer Listed Directory Number 0 (as defined in LD 15). Outgoing CDTI2/CSDTI2 route ANDN will be used as DN in ANI messages. Prompted with Commonwealth of Independent States (CIST) package 221.	cist-21
DNDI	(DNDD) DNDA	Dialed Name Display Denied Dialed Name Display Allowed Prompted if TYPE is 1250/2250 and CPND = CNDA.	cpnd-13
EBLF	(BLFD) BLFA	Enhanced Busy Lamp Field Denied Enhanced Busy Lamp Field Allowed Prompted when TYPE = 1250/2250 and OPT = IBL or ILF in LD 15.	basic-15

Prompt	Response	Comment	Pack/Rel
IADN	xxxx	Individual Attendant DN for this console. The Individual Attendant DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with 'X' to delete an existing IADN.	basic- 23
ICDR	(ICDD) ICDA	Internal Call Detail Recording Denied Internal Call Detail Recording Allowed ICDA generates an L-Record in CDR reports. Refer to the <i>Call Detail Reporting</i> NTP for more information. ICDR is prompted with Internal Call Detail Recording (ICDR) package 108.	icdr-10
ICP	(NO) YES	Intercept Computer available Prompted when: <ol style="list-style-type: none"> <li>Intercept Computer Interface (ICP) package 143 is equipped</li> <li>LD 17 ADAN USER is set for ICP</li> <li>LD 15 prompt ICP = YES</li> </ol>	icp-16
ICT	0-<NIPN>	Intercept Computer Terminal or printer number Number of Intercept Positions (NIPN) is defined in LD 15.	icp-16
KEY	xx aaa yyyy	Console Key. Where: xx = key number 0-9 for QCW consoles, 0-19 for M1250 and M2250 consoles aaa = key name or function yyyy = additional information required for the key	basic-1
	xx ADL yy z...z	Autodial key. Where: xx = key number yy = ADL DN, maximum length is 31 digits. z...z = actual Autodial DN is optional	basic-1

# LD 12

Prompt	Response	Comment	Pack/Rel
	xx AUTO yyy...y	Direct Autoline DN, where: xx = Key number (0 - 19) yyy...y = Autoline DN. The Autoline DN can be 1 - 31 digits.	basic- 23
	xx AWU	Automatic Wake Up key (cannot be key 0 or 1)	awu-10
	01 BIN	Allow Barge-In on key 01.  Allow both Barge-In and Attendant Monitor on key 01 if China Attendant Monitor Package (CHINA) package 285 is equipped. Must have OPT = AMA in LD15.	basic-1  china-21
	xx BKI	Break-In key	bki-1
	00 BVR	Allow Busy Verify on key 0.  Allow both Busy Verify and Attendant Monitor on key 00 if China Attendant Monitor Package (CHINA) package 285 is equipped. Must have OPT = AMA in LD15.	basic-1  china-21
	xx CHG	Charge account key	fca-1
	xx COS	Controlled Class of Service key	eccs-15
	xx CPN	Calling Party Number key	cab-1
	xx DCW	Display Call Waiting key	basic-1
	xx DDL	Do Not Disturb Individual key	dndi-1
	xx DDT	Display Date key	basic-1
	xx DPD	Display Destination key	basic-1

Prompt	Response	Comment	Pack/Rel
xx DPS		Display Source key	basic-1
xx DRC		DID Route Control key	basic-1
xx DTM		Display Time key	basic-1
xx EES		End-to-End Signaling key (cannot be key 0 or 1)	basic-1
xx FLH		DSN Flash key	atvn
xx FOV		DSN Flash Override key	atvn
xx GND yy		Group Do Not Disturb key Where: yy = group number = 0-99	dngd-1
xx IMM		DSN Immedicate key	
xx LTA		Low Tape Alarm key for mini CDR	cdr-8
xx MCK		Message Cancellation key. Turns off indication at a telephone.	mwc-1
xx MDT		Maintain Change/Display Date key	tad-1
xx MIK		Message Indication key Turns on indication at a telephone.	mwc-1
xx MTM		Maintain Change/Display Time key	tad-1
xx MTR		Meter key	mr-10
xx NAS		Network Attendant Service key	nas-20
xx NUL		Remove feature or function from key	basic-1

# LD 12

Prompt	Response	Comment	Pack/Rel
	xx PAG yyyy	Paging key Where: yyyy = Route Access Code. This number can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. The route must be defined in LD 16.	basic-1
	xx PRG	Attendant Administration Program key	aa-1
	xx PRK	Call Park key	cprk-2
	xx PRY	DSN Priority key	atvn
	xx RDL	Redial stored number	basic-1
	xx RFW	Attendant Remote Call Forward key	arfw-20
	xx RPAG yyyy	Radio Paging key Where: yyyy = Route Access Code Coordinated Dialing Plan (CDP), Trunk Steering Codes (TSC) and Distant Steering Codes (DSC) can be entered against yyyy.	rpa-15
	xx RTC	Routing Controls key This key will activate the NCOS map defined in LD 86. Must have Network Class of Service (NCOS) package 32.	bars-1
	xx SACP	Semi-Automatic Camp-On key Must have Semi-Automatic Camp-On (SACP) package 181.	sacp-20
	xx SCC yyyy	Speed Call Controller key Where: yyyy = list number, 0-8190	optf-1
	xx SECL	Series Call key Must have Series Call (SECL) package 191	secl-15

Prompt	Response	Comment	Pack/Rel
	xx SSC yyyy	System Speed Call controller key Where: yyyy = list number, 0-4095	ssc-2
	xxTHF	Trunk Switch Hook Flash key	thf-20
	xx TRC	Malicious Call Trace key Must have Malicious Call Trace (MCT) package 107.	mct-10
LANG	(00)-15	Language to download to M2250 on Sysload Language choices: <ul style="list-style-type: none"> <li>(00) - English</li> <li>01 - French</li> <li>02 - Spanish</li> <li>03 - German</li> <li>04 - Italian</li> <li>05 - Norwegian</li> <li>06 - Galic</li> <li>07 - Turkish</li> <li>08 - Katakana</li> <li>09 - People's Republic of China</li> <li>10 - Taiwan</li> <li>11 - Korean</li> <li>12 - Polish</li> <li>13 - Czech/Slovak</li> <li>14 - Hungarian</li> <li>15 - No language assigned</li> </ul>	basic-1
PRES	0-19	ICI keys to have Presentation Status Up to 20 fields may be input, fields must be separated by a space.	coop-14
QDIS	0-3 0-19 0-3 REST 0-3 NUL <cr>	Queue Thermometer Display position, and ICI key number Queue Thermometer Display position, all ICI keys that are not displayed on any other displays for the Queue Thermometer Queue Thermometer Display position, no ICI key assigned Stop the repetition of this prompt	coop-14

# LD 12

Prompt	Response	Comment	Pack/Rel
QTHM	(NO) YES	Queue Thermometer equipped Prompted with Console Operations (COOP) package 169.	coop-14
REQ		Request	basic-1
	CHG	Change existing data	
	END	Exit overlay program	
	MOV	Move from one TN to another. CAUTION: There is a possibility of data corruption when consoles are moved using this response.  Trunk and Attendant Consoles cannot be moved across loops or superloops. Console data must be deleted "Out data" and reentered in the new location.	basic-25.4
		<b>Note:</b> Superloops on an Small System are as follows: internal superloops in a 2 cabinet Option11C system are (4 slots per Sloop):  slots 1- 4    5 - 8    9 - 12    13 - 16    17 - 20  ----- -----  cabinet 0                   cabinet 1	
	NEW	Add new data to the system	
SETN		Second Terminal Number	basic-1
	l s c u	Large System TN format  l s c u = loop, shelf, card, unit	
	c u	Small System and Succession 1000 format  SETN must have same loop, shelf and card as the primary TN if TYPE = 2250. This cannot be a phantom loop.	
SGRP	(0)-999	Scheduled Access Restriction (SAR) Group number Prompted with SAR package 162. Must have group defined in LD 88.	sar-20
SSU	yyyy	System Speed Call User list number Where: yyyy = 0-4095.	ssc-2



# LD 12

Prompt	Response	Comment	Pack/Rel
TYPE		Type of data block	basic-1
	1250	M1250 Console data block QCW3, QCW4 and M1250 require an SL-1 Line Card.	
	2250	M2250 Console data block M2250 requires an ISDL Card or a Digital Line Card.	
	ATT	QCW3 or QCW4 Attendant Console data block	
	PWR	Power data block TN used for power or Attendant Supervisory Module (ASM). Third and fourth TNs used for power, or third TN for ASM and fourth and fifth TNs used for power.	

---

---

## LD 13: Digitone Receivers, Tone Detectors, Multifrequency Senders and Receivers

---

This program enables the administrator to create or modify data blocks for the following:

- Digitone Receivers (DTR)
- SL-1 Tone Detectors (TDET)
- Multifrequency Receivers (MFR)
- Dial Tone Detectors (DTD)
- Multifrequency Signaling for Socotel (MFE) Senders/Receivers
- 2/5 Spanish KD3 MF Signalling (MFK5)
- 2/6 Spanish KD3 MF Signaling (MFK6)
- Extended Dial Tone Detector/Digitone Receivers (XTD)
- Multifrequency Compelled (MFC) Senders/Receivers
- Extended CLASS Modem Card (XCMC)

These cards are used by 2500-type telephones and trunks that send DTMF tones to the system, and by MF trunks to send MF tones to the system. All 2500 sets and some trunks must have Class of Service (CLS) defined as Digitone (DTN). MF reception is available to QPC916 cards only.

When the Overlay is loaded the available system memory, disk records and system configuration limits are output in a header as follows:

```
DTR000  
MEM AVAIL: (U/P): xxxxxx USED: xxxxx TOT: xxxxxxx
```

DISK RECS AVAIL: xxx  
TNS AVAIL: xxxxx USED: xxxxx TOT: xxxxx

If an Incremental Software Management (ISM) limit is set to the maximum value 32767, then the information for that ISM will not be printed. This does not apply for the TNs ISM.

## Prompts and responses

---

Prompt	Response	Comment
REQ:	aaa	Request (aaa = CHG, END, MOV, NEW, or OUT)
TYPE:	a...a	Type of data block (a...a = DTD, DTR, MFC, MFE, MFK5, MFK6, MFR, TDET, CMODCMOD or XTD)
TN	l s c u	Terminal Number (l s c u ranges are defined on page 226)
POLR	a...a	Polarity of LED messages for DTD (a...a = (NORM) or REV)
XTDT	(0)-7	Extended Tone Detector Table number
- DTO	(NO) YES	Dial Tone Detection Only
CDEN	aa	Card Density (aa = SD, DD, or 4D)
TOTN	l s c u	To Terminal Number (l s c u ranges are defined on page 226)

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
CDEN		Card Density	basic-1
	SD	Enter SD if this unit is on a single density circuit card. The card density cannot be changed from DD to SD if more than one unit is assigned.	
	DD	Enter DD if this unit is on a double density circuit card. DD is not allowed if the network loop is not configured for double density	
	4D	Enter 4D if this unit is on a quadruple density circuit card. 4D is not allowed if the network loop is not configured for quadruple density	
	<cr>	If REQ = NEW and TYPE = DTR then CDEN is set to the default density as specified in the configuration record.	
DTO		Dial Tone Detection Only	dtd-10
	(NO)	Do not disable DTR Detection	
	YES	Disable DTR detection, only perform dial tone detection. Prompted when TYPE = XTD	
POLR		Polarity of LED messages	dtd-10
	(NORM)	Normal	
	REV	Reversed	
REQ		Request	basic-1
	CHG	Change existing data	
	END	Exit overlay program	

# LD 13

Prompt	Response	Comment	Pack/Rel
	MOV	Move Digitone Receiver, Tone Detectors, MF Senders and Receivers from one TN to another  CAUTION: There is a possibility of data corruption when Digitone Receivers are moved using this response.  MOV command not supported due to complexity of restrictions and the risk of data corruption if restrictions not adhered to. Limited usefulness.	basic-25.4
	NEW	Add new data to the system	
	OUT	Remove information from data block	
TN		Terminal Number	basic-1
	I s c u	For Meridian: I s c u = loop, shelf, card, unit  The range values are as follows:  Where I =  0 - 159: loops, superloops must be multiples of 4, starting with superloop 0  0 - 255: loops, Systems with Fibre Network Fabric  Where s =  0 - 3: PE shelves on loops defined as TERM in LD 17  0 - 1: PE shelves on loops defined as TERD in LD 17 and superloops  0: PE shelf on loops defined as TERQ in LD 17  Where c =  1 - 10: PE cards of dual and enhanced loops  0 - 15: IPE cards of superloops  Where u =	fnf-25
	c u	For Small System: c u = card, unit  The range values are:  c = 1-50  u = 0-7  u = 8-11 when TYPE = MFR, MFC, MFE, MFK5, MFK6 for Card 0	

Prompt	Response	Comment	Pack/Rel
		Note that units 0-7 must be of one type. Units 8-15 must also be of one type. The new MFC/MFE/MFK5/MFK6 units on Card 0 must be enabled using the ENLX 0 command in LD 34.	
TOTN	I s c u c u	To Terminal Number Large System TN format Small System format	basic-1
TYPE		Type of data block	basic-1
	CMOD	CLASS modem unit. A CLASS modem unit is configured on the XCMC card. A maximum of 32 units can be configured on the XCMC card.	cname-23 cnumb-23
	CMOD	CLASS modem unit. A CLASS modem unit is configured on the XCMC card. A maximum of 32 units can be configured on the XCMC card.	cname-23 cnumb-23
	DTD	Dial Tone Detector data block	
	DTR	Digitone Receiver data block	
	MFC	Multifrequency Compelled sender/receiver data block Multifrequency Compelled Signaling (MFC) package 128 is required.	
	MFE	Multifrequency Signaling for Socotel sender/receiver data block. Multifrequency Signaling for Socotel (MFE) package 135 is required.	mfe-10
	MFK5	2/5 Spanish KD3 MF Signaling	kd3-20
	MFK6	2/6 Spanish KD3 MF Signaling	kd3-20
	MFR	Multifrequency Receiver data block  MFR applies to Feature Group D. Up to 255 MF Receivers can be defined. Only units 0 and 1 can be used. Feature Group D (FGD) package 158 is required.	

# LD 13

Prompt	Response	Comment	Pack/Rel
	TDET	Tone Detector data block (Not supported on Small System)	
	XTD	Extended Dial Tone Detector and Digitone Receiver data block	
XTDT	(0)-7	Extended Tone Detector Table number If a table other than 0 is entered, it must exist in LD 97. This prompt appears when TYPE = XTD.	tdet-7

---

---

## LD 14: Trunk Data Block

---

This program allows data blocks for trunks to be created or modified.

When the Overlay is loaded the available system memory, disk records and system configuration limits are output in a header as follows:

```
>ld 14
```

```
TRK000
```

```
MEM AVAIL: (U/P): xxxxxx USE D: xxxxx TOT: xxxxxxxx
```

```
DISK RECS AVAIL: xxx
```

```
TNS AVAIL: (U/P): xxxxxx USE D: xxxxx TOT: xxxxxxxx
```

```
RAN CON AVAIL: (U/P): xxxxxx USE D: xxxxx TOT: xxxxxxxx
```

```
MUS CON AVAIL: (U/P): xxxxxx USE D: xxxxx TOT: xxxxxxxx
```

```
AST SET AVAIL: xxxxx USED: xxxxx TOT: xxxxx
```

```
ITG ISDN TRUNKS AVAIL: xxxxx USED: xxxxx TOT: xxxxx
```

```
TRADITIONAL TRUNKS AVAIL: xxxxx USED: xx TOT: xxxxx
```

If an Incremental Software Management (ISM) limit is set to the maximum value 32767, then the information for that ISM will not be printed. This does not apply for the TNs ISM. The header includes Recorded Announcement Broadcast, Music Broadcast connections and Associated trunk ISM information.

After making any changes to the trunk data block, IPE trunk cards must be downloaded with **ENLC Is c** command in LD 32.

The Group Hunt/DN Access to SCL package or PLDN package 120 allows an asterisk (\*) or double asterisk (\*\*) as a valid input to a number of prompts, usually the asterisk will be part of a dialed number. Without this package, for example, inputting one asterisk will cause the system to reissue the last prompt, and two asterisks will cause a restart of the Overlay at REQ.

## Prompts and responses

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, MOV, LCHG, NEW x, or OUT x)
TYPE	a...a	Type of data block (TYPE responses begin on page 257)
T_TN	l ch	Loop number and channel for tandem PRI connection
- IPRI	l ch	Loop number and channel for incoming PRI channel
- OPRI	l ch	Loop number and channel for outgoing PRI channel
MODL	1-127	Model number for Small System and Succession 1000
TN	l s c u	Terminal Number (l s c u ranges are defined on page 256)
DES	x...x	Designator field for trunk (0-16 character alphanumeric)
CDEN	aa	Card Density (aa = SD, DD, 4D, or 8D)
XTRK	a...a	Extended Trunk (a...a = EXUT, ITG1, ITG2, ITG8, ITGP, MC8, MC32, XCOT, XDID, XEM, XFEM, or XUT)
MAXU	1 - 32	Maximum number of IP units supported (ITG card version dependant)
IPTN	(NO) YES	ITG card Physical TN.
ZONE	0-255	Zone number
FWTM	(NO) YES	Firmware Timing for trunk hook flash
SXS	(NO) YES	Step-by-step CO trunk
SICA	(1)-16	Signaling Category table number
PDCA	(1)-16	Pad Category table number for PRI2,DTI2,JDM,PRI,DTI trunks
PCML	aa	Pulse Code Modulation Law (aa = MU or A)
TOTN	l s c u	TO Terminal Number
DDSL	0-15	Digital DASS2/DPNSS Signaling Link (NT hardware)
DTSL	0-159	Digital Trunk Signaling Link (GPT hardware)
SIGL	aaa	Level 3 Signaling
CUST	xx	Customer number associated with this trunk
SFEX	(NO) YES	Special digital FEX trunk
IAPG	(0)-15	Event Group for USM message
NCOS	xx	Network Class of Service group
RTMB	xxx xxx	Route number, Member number
CONN	(4)-48	Maximum number of broadcast connections allowed for this trunk.
INC	(YES) NO	Increasing channel numbers and decreasing member numbers
PRIO	aaa	Priority designation (aaa = (XHP) or YLP)
CHID	1-382	Channel ID for this trunk.

---

SREF	1-9999999	ISDN Semi Permanent Connection (ISPC) Reference Number
SDCH	(NO) YES	Is the ISPC link used by a D-channel?
SMAS	(NO) YES	Is this ISPC acting as a MASTER when connecting data interfaces to the ISPC link?
MTN	l s c u	Modem Terminal Number
PRDN	xxxx	Private Line Directory Number
CMF	(NO) YES	Call Modification Features restriction
RLDN	xxxx	Release Link Trunk Directory Number
NGRP	(0)-9	Night Service Group number
NITE	xxxx	Night Service directory number
ATDN	xxxx	Auto Terminate DN
MNDN	xxxx	Manual Directory Number
TGAR	xx	Trunk Group Access Restriction
SIGL	aaa	Trunk Signaling (SIGL responses begin on page 249)
XDIC	aaa	Outpulsing for DIC trunks (aaa = (MUT) or NOR)
EMTY	aaa	E & M Type (aaa = (TY2), TY1, or BPO)
CPAD	a...a	Carrier Pad out or Carrier Pad in for 4-wire E & M duplex trunks (a...a = (COUT) or CIN)
LDOP	a...a	Loop Dial Outpulsing (a...a = (LOOP) or BOP)
TIMP	x...x	Termination Impedance
BIMP	a...a	Balance Impedance (a...a = (3COM), 600, 900, or 3CM2)
AUTO_BIMP		
	(NO) YES	Automatic Balance Impedance Option
STRI	a...a	Start arrangement Incoming (a...a = DDL, IMM, MWNK, OWK, PTSD, SACK, RT, or WNK)
STRO	a...a	Start arrangement Outgoing (a...a = DDL, IMM, MWNK, OWK, PTSD, SACK, RT, or WNK)
SUPN	(NO) YES	Answer and disconnect Supervision required
- STYP	a...a	Supervision Type (a...a = ARF, BAT, BST, BTS, JDID, JCO, LBS, PIP, and PSP)
AST	(NO) YES	Associated trunk for CTI trunk Monitoring and Control
SEIZ	(NO) YES	Automatic Guard Detection for outgoing trunk
PPID	(0)-15	Periodic Pulse Metering country ID
BTID	(0)-15	Busy Tone country ID
CLS	a...a	Class of Service (CLS responses begin on page 235)
MFL	(0)-15	Multifrequency digit level
MFLI	(0) 1	Multifrequency transmit level identifier
MFPD	(NO) YES	Multifrequency PAD

---

# LD 14

BTDT	(0)-7	Busy Tone Detection Table
FCAR	(NO) YES	Forced Charge Account
ADID	xxxx	AIOD four-digit Trunk Identifier
TKID	nnnnnnn	Trunk Identifier
DTCR	(NO) YES	Digit Collection Ready
CFLP	0-159	Music Conference Loop

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ADID	xxxx	<p>AIOD four-digit Trunk Identifier</p> <p>Represents the last 4-digits of the unique telephone number of a trunk that has AIOD service. The calling number received over an AID trunk is associated with the outgoing trunk used to make the call.</p>	aiod-1
AST	(NO) YES	Associated trunk for CTI trunk Monitoring and Control	basic-23
ATDN	x...x	<p>Auto Terminate DN</p> <p>This DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. A Group Hunt pilot DN can be entered.</p> <p>If a DNIS route is defined, then the response can only be an ACD DN. If no DN is assigned, the NITE number of the trunk will be used.</p> <p>Must have AUTO = YES in LD 16. Not prompted for Option 11C models.</p>	disa-1
AUTO_BIMP	(NO) YES	<p>Enable Automatic Balance Impedance Option.</p> <p>Prompted only for EXUT type trunks. Not supported on dual Busy Tone Detection card (NT5D31).</p>	btd-23
BIMP	(3COM) 600 900 3CM2	<p>3-component Complex Impedance</p> <p>Not prompted for RAN which exclusively uses 600</p> <p>Not prompted for XEM trunks</p> <p>For XUT trunks, the Termination Impedance (TIMP) must be compatible with the Balance Impedance (BIMP). See prompt TIMP for allowed combinations of BIMP/TIMP.</p> <p>When using the Enhanced Universal Trunk card only 600 or 900 <math>\frac{3}{4}</math> terminating impedance is allowed. However, more Terminating and Balance Impedance (BIMP) combinations are available.</p>	tip/ xpe-19

# LD 14

Prompt	Response	Comment	Pack/Rel
--------	----------	---------	----------

In the case of AUTO\_BIMP, this BIMP value will be used as default value if an optimum AUTO\_BIMP is not found or if the AUTO\_BIMP test is not complete.

btd-23

The Terminating and Balance Impedance options are listed below.

<u>TIMP</u>	<u>BIMP</u>
600	600
600	3COM
900	3COM
900	900
900	3CM2
600	3CM2

BTDT	(0)-7	Busy Tone Detection Table	btd-21
------	-------	---------------------------	--------

The BTID table must be defined in LD 97. BTDT is mutually exclusive with BTID.

BTID	xxxx	Busy Tone country ID	btd-21
------	------	----------------------	--------

This must be configured for a BTS supervised XCOT trunk. One BTID type per card. Trunks must be removed from card to change BTID. BTDT is mutually exclusive with BTDT.

<u>Busy Tone ID</u>	<u>Recommended Country</u>
0-2	Reserved for future use
3	Germany, Ireland
4	Switzerland
5	Denmark
6	Norway, Kuwait, Chile, Venezuela, Indonesia, Thailand, Korea
7	Holland
8	Australia, Mexico
9	Ireland
10	Taiwan, Brazil, Tortola, Mexico
11	Singapore
12	Argentina, Italy
13	Lebanon, Italy
14	Turkey
15	Reserved for future use

Prompt	Response	Comment	Pack/Rel
CDEN		Card Density	basic-7
	SD	Single Density	
	DD	Double Density	
	4D	Quad Density for XCOT only	
	8D	Octal Density for XCOT only and there is no default. Not prompted for superloops or Small System and Succession 1000 Models.	
CFLP	0-159	Music Conference Loop	mus-1
CHID	1-382	Channel ID for this trunk  Prompted when the Route specified has ISL enabled in LD 16. The number of ISL trunks allowed for the D-channel is specified in LD 17.  A different channel ID is requested for each Phantom TN which is used for ISPC links. The same channel ID must be configured for the same ISPC reference number on both PBXs linked by the connection.	isl-12
CIST	(NO) YES	Incoming CIS three wire trunk is not a toll trunk Incoming CIS three wire trunk is a toll trunk CIST appears for trunks when SIGL = CIS. Only prompted for incoming route.	cist-21
CLS		Class of Service options for trunks. Defaults are shown in parentheses. Enter each non-default option required, followed by a space.	basic-1
	(APN) APY	ACD Priority not required ACD Priority required Applies only to COT, WAT, DID and FEX trunks.	bacd-1
	(BARD) BARA	Barring Denied Barring Allowed	basic-7
	(CLID)	Calling Line Identification Denied	acli-24

# LD 14

Prompt	Response	Comment	Pack/Rel
	CLIA	Calling Line Identification Allowed	
	CMFS	CMFS trunk register signaling means that the CIS MF Shuttle protocol is supported by the trunk. CMFS may be defined only for trunks on CDTI2/CSDTI2 with "CISFW=MFS" and only if both the MFS and CIST Packages are equipped.	cismfs-23
(CND)		Calling party Denied	mfc-21
CNA		Calling party Allowed  Allowed for L1 Multifrequency Compelled Signaling and R2 MFC trunks. Automatic Number Identification is denied for an Outgoing Loop Start (LOP) Central Office Trunk (COT).  Must have Commonwealth of Independent States (CIST) package 221 or Multifrequency Compelled Signaling (MFC) package 128.	
(CORX)		Central Office Ringback not provided by SL-1	supp-14
CORP		Central Office Ringback provided by SL-1	
(DIP)		Dial Pulse	basic-21
DPDT		Dial Pulse Digitone (incoming dial pulse - outgoing digitone)	basic-24
DTDP		Digitone Dial Pulse (incoming digitone - outgoing dial pulse)	basic-24
DIPF		DIPF trunk register signaling requires that DP digit collection be performed by firmware. Applies to CDTI2 or CSDTI2.	
DTN		Digitone	
MFC		R2 Multifrequency Compelled Signaling. MFC can be configured on 1.5 DTI routes.	
MFE		Multifrequency Signaling for Socotel	
MFK		Multifrequency Signaling for KD3	basic-20
MFR		Multifrequency Receiver for Feature Group D	
MFX		Mixed Signaling (MFC/DTMF)	

Prompt	Response	Comment	Pack/Rel
(DRPD)		DTR PAD value Denied	dti2-10
DRPA		DTR PAD value Allowed Can only be configured for 2.0 Mb/s DID with DTI2 enabled.	
(ECD)		Echo Canceling Denied	basic-1
ECA		Echo Canceling Allowed ECA indicates Echo suppression equipment is connected to trunk.	
(HKD)		Hong Kong DTI Denied	basic-6
HKA		Hong Kong DTI Allowed May only be used with DTI TNs with DTN CLS on DID or TIE routes.	
(LNT)		Loop Start Non-supervisory Trunk	xutj-16
JDID		Japan DID (JDID not valid for XCOT trunks)	
JCO		Japan CO capabilities allowed. JCO should only be accepted with SIGL = LOP. Japan PSTN trunks, (QPC686), not allowed for XUT/XEM.  Answer NO to prompt SUPN for an unsupervised trunk, instead of using LNT. For supervised trunks answer YES to SUPN then enter the appropriate supervision type at prompt STYP.	
(LPR)		Low Priority	basic-1
HPR		High Priority DID and TIE trunks should use HPR and be installed in card slot 1. Superloops do not require any trunks assigned as high priority.	
(MID)		Manual Incoming Denied	basic-1
MIA		Manual Incoming Allowed	

# LD 14

Prompt	Response	Comment	Pack/Rel
		Make-break ratio for dial pulse dialing	basic-21
(P10)		10 pulses per second	
P12		(see explanation below)	
P20		20 pulses per second	
		P12 option: P10 = primary 10 pps make-break ratio of 50% P12 = secondary 10 pps make-break ratio of 50%	
		All three make-break ratios can be set for XUT, XUTJ and XEM trunks. See prompts P10R, P12R and P20R in LD 97. Use P10 for PPS1 and P12 for PPS2 XUT/XEM trunks. For Small System, P10 and P12 is also used for DTI/DTI2 trunks. P12 applies only to XUT, XUTJ and XEM trunks.	
(PIP)		Polarity Insensitive card. (PIP is used for QPC330 and QPC331 packs)	basic-10
PSP		Polarity Sensitive card (use PSP for QPC218, QPC219 and QPC295 packs). When using PSP in North America, the trunk route should have message registration set to reverse battery; the LD 16 prompt MR should be set to RVB.	
BST		Battery Supervised card (SIGL = LOP is required) For loop start trunks with Answer Supervision in U.S., the NT8D14 Universal Trunk does not provide Message Registration, PPM or PIP operation. This can be used for Answer Supervision on Ground Start trunks. Not valid for XCOT trunks.	basic-4
SHL		Short line Class of Service	basic-20
LOL		Long line Class of Service SHL replaces NTC and LOL replaces TRC and VNL for XDID and XCOT trunks.	

Prompt	Response	Comment	Pack/Rel
	(SPCD)	Analog Semi-Permanent Connections Denied	basic-24
	SPCA	Analog Semi-Permanent Connections Allowed	
	MIA	Manual Incoming Allowed	
	(THFD)	Centrex Switchhook Flash Denied	basic-14
	THFA	Centrex Switchhook Flash Allowed	
		Transmission Class of Service	tip-19
	(TRC)	Transmission Compensated	
	NTC	Non-Transmission Compensated	
	VNL	Via Net Loss	
		The default depends on the signaling type (SIGL)	
		DX2 = VNL	
		DX4 = VNL	
		EAM = VNL	
		EM4 = VNL	
		GRD = NTC	
		LDR = NTC	
		LOP = NTC	
		OAD = NTC	
		VNL Class of Service is allowed with Universal Trunk Tie trunks.	
		For XDID and XCOT cards:	
		NTC is replaced by SHL	
		TRC and VNL are replaced by LOL	
		Existing databases will be converted automatically. For EM4 and WR4, AC15 = 2280 Hz. on XFEM trunks:	
		NTC and VNL are equivalent to TIE designation	
		TRC is equivalent to LINK designation	
		TIE = PBX-PBX connections via leased line	
		LINK = PBX-PBX connections on-premises	

# LD 14

Prompt	Response	Comment	Pack/Rel
	(CTD)	Conditionally Toll Denied. CTD is the default for trunk types: TIE, CSA, ATVN, FGD, and IDA	
	CUN	Conditionally Unrestricted	
	FR1	Fully Restricted class 1	
	FR2	Fully Restricted class 2	
	FRE	Fully Restricted	
	SRE	Semi-Restricted	
	TLD	Toll Denied	
	UNR	Unrestricted. Only UNR is allowed for CO, FX and WATS trunks. UNR is the default for all trunk types <i>except</i> : TIE, CSA, ATVN, FGD, and IDA	
	(WTA)	Warning Tone Allowed	basic-7
	WTD	Warning Tone Denied	
	(XARF)	ARF Supervised COT denied	basic-7
	ARF	ARF Supervised COT allowed Must have TYPE = COT, XTRK = XCOT and SIGL = LOP. Answer YES to prompt SUPN then enter the appropriate supervision type at prompt STYP.	
	(XBAT)	Battery Supervised COT denied	basic-7
	BAT	Battery Supervised COT allowed Answer YES to prompt SUPN then enter the appropriate Supervision Type at prompt STYP. Must have TYPE = COT, XTRK = XCOT and SIGL = LOP.	
	(XBTS)	Busy Tone Supervised COT denied	basic-7
	BTS	Busy Tone Supervised COT allowed Answer YES to prompt SUPN and then enter the appropriate supervision type at prompt STYP.	

Prompt	Response	Comment	Pack/Rel
	(XLBS) LBS	Loop Break Supervised COT denied Loop Break Supervised COT allowed Answer YES to prompt SUPN and then enter the appropriate Supervision Type at prompt STYP. Must have TYPE = COT, XTRK = XCOT and SIGL = LOP.	basic-7
	(XREP) RVEP	Reversed Ear Piece denied Reversed Ear Piece allowed The E-lead is reversed for a radio paging trunk	rpa-15
CMF	(NO) YES	Call Modification restriction Call Modifications allowed Call Modifications not allowed	basic-1
CONN	(4)-48	Define the maximum number of broadcast connections allowed for this trunk.	ranbrd-23 ran-23
CPAD	(COUT) CIN	Carrier Pad Out for 4-wire E & M duplex trunks Carrier Pad In for 4-wire E & M duplex trunks With CPAD = CIN, a 7 dB pad attenuates the trunk input and a 16 dB pad attenuates the trunk output.	xpe-15
CUST	xx	Customer number (defined in LD 15 and prompted when REQ = NEW)	basic-1
DDSL	0-15	Digital DASS2/DPNSS Signaling Link DASS2/DPNSS D-channel	basic-7
DES	x...x	Designator field for trunk groups of 0-16 alphanumeric characters (DES is an optional entry)	basic-22

# LD 14

Prompt	Response	Comment	Pack/Rel
DTCR	(NO) YES	Digit Collection Ready  Send acknowledge when digit collection resources such as DTR, MFC, and S/R are ready and attached.  Prompted when TYPE = DID and CLS = DTN. Prompted with International Supplementary Features (SUPP) package 131. Prompted when the incoming trunk is analog, answer supervision is on, and EOS is set to BSY.	basic-7
DTSL	0-159	Digital Trunk Signaling Link DASS2/DPNSS Signaling Link Not supported on Small System and Succession 1000	basic-7
EMTY	(TY2) TY1 BPO X	E & M Type 4-wire E&M Type 2 4-wire E&M Type 1 4 wire E&M British Post Office. (BPO is allowed if TYPE = XFEM and SIGL = EAM or EM4) Precede with X to delete	xpe-15
FCAR	(NO) YES	Forced Charge Account	chg-1
FWTM	(NO)  YES	Firmware Timing for Trunk Hook Flash is not used by the card  Firmware timing for Trunk Hook Flash is used by the card  This prompt appears if Collect Call Blocking (CCB) package 290, Malicious Call Trace (MCT) package 107 or Trunk Hook Flash (THF) package 157 are enabled.	ccb-21
IAPG	(0)-15	Event Group for USM message	basic-23
INC	(YES) NO	Increasing channel numbers and member numbers Increasing channel numbers and decreasing member numbers	basic-7

Prompt	Response	Comment	Pack/Rel
IPRI	I ch	Incoming PRI channel This is the PRI channel through which the Meridian 1 gains access to the PSPDN. Where: Loop = PRI loop number Channel = PRI channel that holds the incoming nailed up connection (between 1-23)	mph-19
IPTN	(NO) YES	ITG card Physical TN. The Terminal Number is a trunk unit on ITG card. The Terminal Number is used for concentration purpose. IPTN is output only if XTRK is ITG1 or ITG2.	basic-25
LDOP	(LOOP) BOP	Loop Dial Outpulsing Loop outpulsing for Loop Dial Repeating signalling Battery Outpulsing for Loop Dial Repeating signalling	xpe-15
MAXU	1-32 1-24  32	Maximum number of Internet Protocol (IP) units supported Meridian Integrated IP Telephony Gateway (dual slot) Meridian Integrated IP Telephony Gateway (single slot) Maximum number of voice media channels supported For Succession 1000	itg- 25   basic-2

# LD 14

Prompt	Response	Comment	Pack/Rel																																																				
MFL	(0)-15	<p>Multifrequency digit level. MFL is not prompted for Option 11C.</p> <p>Expanded from 0-7 to 0-15 for Meridian 1 for superloop only. Enter the MFC digit level required for signals to the Public Switched Telephone Network (PSTN).</p> <p>Non-superloop codes and values:</p> <table><thead><tr><th><u>Codes</u></th><th><u>Level Values</u></th></tr></thead><tbody><tr><td>(0)</td><td>- 5 dBm</td></tr><tr><td>1</td><td>- 8 dBm</td></tr><tr><td>2</td><td>- 9 dBm</td></tr><tr><td>3</td><td>- 10 dBm</td></tr><tr><td>4</td><td>- 11 dBm</td></tr><tr><td>5</td><td>- 12 dBm</td></tr><tr><td>6</td><td>- 13 dBm</td></tr><tr><td>7</td><td>- 32 dBm</td></tr></tbody></table> <p>Superloop codes and values:</p> <table><thead><tr><th><u>Codes</u></th><th><u>Level Values</u></th></tr></thead><tbody><tr><td>(0)</td><td>- 8 dBm</td></tr><tr><td>1</td><td>- 11 dBm</td></tr><tr><td>2</td><td>- 12 dBm</td></tr><tr><td>3</td><td>- 13 dBm</td></tr><tr><td>4</td><td>- 14 dBm</td></tr><tr><td>5</td><td>- 15 dBm</td></tr><tr><td>6</td><td>- 16 dBm</td></tr><tr><td>7</td><td>- 31 dBm</td></tr><tr><td>8</td><td>- 4 dBm</td></tr><tr><td>9</td><td>- 5 dBm</td></tr><tr><td>10</td><td>- 6 dBm</td></tr><tr><td>11</td><td>- 7 dBm</td></tr><tr><td>12</td><td>- 9 dBm</td></tr><tr><td>13</td><td>- 10 dBm</td></tr><tr><td>14</td><td>Spare</td></tr><tr><td>15</td><td>Spare</td></tr></tbody></table>	<u>Codes</u>	<u>Level Values</u>	(0)	- 5 dBm	1	- 8 dBm	2	- 9 dBm	3	- 10 dBm	4	- 11 dBm	5	- 12 dBm	6	- 13 dBm	7	- 32 dBm	<u>Codes</u>	<u>Level Values</u>	(0)	- 8 dBm	1	- 11 dBm	2	- 12 dBm	3	- 13 dBm	4	- 14 dBm	5	- 15 dBm	6	- 16 dBm	7	- 31 dBm	8	- 4 dBm	9	- 5 dBm	10	- 6 dBm	11	- 7 dBm	12	- 9 dBm	13	- 10 dBm	14	Spare	15	Spare	basic-2
<u>Codes</u>	<u>Level Values</u>																																																						
(0)	- 5 dBm																																																						
1	- 8 dBm																																																						
2	- 9 dBm																																																						
3	- 10 dBm																																																						
4	- 11 dBm																																																						
5	- 12 dBm																																																						
6	- 13 dBm																																																						
7	- 32 dBm																																																						
<u>Codes</u>	<u>Level Values</u>																																																						
(0)	- 8 dBm																																																						
1	- 11 dBm																																																						
2	- 12 dBm																																																						
3	- 13 dBm																																																						
4	- 14 dBm																																																						
5	- 15 dBm																																																						
6	- 16 dBm																																																						
7	- 31 dBm																																																						
8	- 4 dBm																																																						
9	- 5 dBm																																																						
10	- 6 dBm																																																						
11	- 7 dBm																																																						
12	- 9 dBm																																																						
13	- 10 dBm																																																						
14	Spare																																																						
15	Spare																																																						

Prompt	Response	Comment	Pack/Rel
MFLI		Multifrequency transmit level identifier. MFLI is prompted exclusively for the Small System. MFLI is prompted when CLS = MFC, MFE, or MFK.	opt11c-22
	(0)	Use multifrequency transmit level as defined for MFTL0 in LD 97.	
	1	Use multifrequency transmit levels defined for MFTL1 in LD 97.	
MFPD	(NO) YES	Multifrequency PAD  MFPD is prompted if CLS = TLD, CUN or CTD, and if the trunk type is CSA or TIE. TLD is recommended. MFPD is not prompted if the route is 1.5 DTI and CLS= MFC.	basic-3
MNDN	x...x	Manual Directory Number  This DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. A Group Hunt pilot DN can be entered. CLS should be MIA.	basic-1
MODL	1-127	Model number for Small System Model number for Succession 1000	basic-14 basic-1
MTN	l s c u	Modem Terminal Number (l s c u ranges are defined on page 256)	amp-5
	c u	For Small System For Succession 1000	basic-7 basic-1
NCOS	(0)-99	Network Class of Service group	ncos-1
NGRP	(0)-9	Night Service Group number  NGRP appears when ENS = YES in LD15. This prompt replaces the NITE prompt.  If ENS is changed from NO to YES while Night Service is in effect, the system verifies that the NITE number defined is a group number or a DN. If a night DN or 0000 is defined, the existing NITE number is used.	basic-2

# LD 14

Prompt	Response	Comment	Pack/Rel
NITE	x...x	<p>Night Service directory number</p> <p>This DN can be up to 4 digits, up to seven digits with Directory Number Expansion (DNXP) package 150. A Group Hunt pilot DN can be entered.</p> <p>Night Service applies to trunks terminating at the attendant. This prompt takes precedence over the NITE and NIT1-NIT4 prompts in LD 15.</p> <p>If a DN is defined here, the call goes to this DN. If there is no DN here, the call goes to the defined LD 15 NITE prompts. Precede with X to remove.</p>	basic-1
OPRI	l ch	<p>Outgoing PRI channel (the PRI channel through which the Meridian 1 gains access to the PSPDN)</p> <p>Where: Loop = PRI loop number and Channel = PRI channel that holds the outgoing nailed up connection (between 1-23).</p>	mph-19
PCML	MU A	<p>Pulse Code Modulation Law</p> <p>Mu-law</p> <p>A-law</p> <p>PCML is not prompted for JDMI loops. Prompted if loop is PRI2, DTI2, or if loop is PRI/DTI and is equipped with International 1.5/2.0 Mb/s Gateway (GPRI) package 167.</p>	dti 2-15
PDCA	(1)-16	<p>Pad Category table number</p> <p>The PAD table must be defined in LD 73 first.</p>	dti 2-15

Prompt	Response	Comment	Pack/Rel																																	
PPID	xx	<p>Periodic Pulse Metering (PPM) country ID</p> <p>Must be configured if PPM is enabled. One PPID type per card. Trunks must be removed from card to change PPID.</p> <table border="1"> <thead> <tr> <th>PPMID</th> <th>Frequency</th> <th>Recommended Country</th> </tr> </thead> <tbody> <tr> <td>(0)</td> <td>50 Hz</td> <td>UK</td> </tr> <tr> <td>1</td> <td>12 kHz</td> <td>France</td> </tr> <tr> <td>2</td> <td>50 Hz</td> <td>France</td> </tr> <tr> <td>3</td> <td>16 kHz</td> <td>Germany, Turkey, Egypt, Venezuela, Indonesia, Finland</td> </tr> <tr> <td>4</td> <td>12 kHz</td> <td>Switzerland, Ireland, Portugal, Italy, Spain, Lebanon, Turkey</td> </tr> <tr> <td>5</td> <td>12 kHz</td> <td>Denmark</td> </tr> <tr> <td>6</td> <td>16 kHz</td> <td>Norway, Belgium</td> </tr> <tr> <td>7</td> <td>50 Hz</td> <td>Holland</td> </tr> <tr> <td>8</td> <td>12 kHz/50 Hz</td> <td>Australia (two different packs)</td> </tr> <tr> <td>9-15</td> <td>-----</td> <td>Reserved for future use</td> </tr> </tbody> </table>	PPMID	Frequency	Recommended Country	(0)	50 Hz	UK	1	12 kHz	France	2	50 Hz	France	3	16 kHz	Germany, Turkey, Egypt, Venezuela, Indonesia, Finland	4	12 kHz	Switzerland, Ireland, Portugal, Italy, Spain, Lebanon, Turkey	5	12 kHz	Denmark	6	16 kHz	Norway, Belgium	7	50 Hz	Holland	8	12 kHz/50 Hz	Australia (two different packs)	9-15	-----	Reserved for future use	basic-7
PPMID	Frequency	Recommended Country																																		
(0)	50 Hz	UK																																		
1	12 kHz	France																																		
2	50 Hz	France																																		
3	16 kHz	Germany, Turkey, Egypt, Venezuela, Indonesia, Finland																																		
4	12 kHz	Switzerland, Ireland, Portugal, Italy, Spain, Lebanon, Turkey																																		
5	12 kHz	Denmark																																		
6	16 kHz	Norway, Belgium																																		
7	50 Hz	Holland																																		
8	12 kHz/50 Hz	Australia (two different packs)																																		
9-15	-----	Reserved for future use																																		
PRDN	x...x	<p>Private Line Directory Number</p> <p>PRDN must be defined in LD 11. This DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.</p>	basic-1																																	
PRI0	(XHP) YLP	<p>Priority designation. Prompted if SIGL = DPN.</p> <p>X High Priority</p> <p>Y Low Priority</p> <p>Used to determine which end has priority in a glare condition, where both sides seize the trunk at same time. XHP always has priority over YLP.</p>	basic-7																																	

# LD 14

Prompt	Response	Comment	Pack/Rel
REQ		Request	basic-1
	CHG	Change existing data block	
	END	Exit overlay program	
	LCHG	Print date and time that a trunk data block was last changed. The change can be the result of a NEW, OUT, or CHG command.	
	MOV	Move data block from one TN to another. Not valid for Small System and Succession 1000 Models. MOV cannot be used to move a Phantom TN. MOV command cannot be used to move trunk data blocks.	basic-25.4
	NEW x	Add new data block to the system. Follow NEW with a value of 1-255 to create that number of consecutive trunks.  You are not allowed to create more than one Phantom TN at a time. When a value different than 1 is entered for the creation of a Phantom TN, it is simply ignored and only one TN is created.	
	OUT x	Remove data block. Follow OUT with a value of 1-255 to remove that number of consecutive trunks.	
RLDN	x...x	Release Link trunk Directory Number  This DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	cas-1
RTMB		Route number and Member number	basic-1
	0-511 1-510	Large System	basic-24
	0-127 1-510	Small System  B-Channel Signaling is output if CHTY = BCH in LD 16. A/ B Bit Signaling is output if CHTY = ABCH in LD 16.  To use the ISDN Semi Permanent Connection (ISPC) link, this entry must be an ISL TIE route.	basic-24
SDCH	(NO) YES	The ISPC link is not used by a D-channel The ISPC link is used by a D-channel	ispc-22
SEIZ	(NO) YES	Automatic Guard Detection for outgoing trunk	basic-2

Prompt	Response	Comment	Pack/Rel
SFEX	(NO) YES	Special digital FEX trunk This is used on Digital Trunk Interface (DTI).	dti-5
SICA	(1)-16	Signaling Category table number The Digital Signaling Category table must be defined first. See FEAT = ABCD in LD 73. Default is 16 if loop type = JDML.	dti 2-15
SIGL		Level 3 signaling	tip-21
	ALS APNS	ALS signaling on COT trunk with ground start Alternate Private Network Signaling System	
	CIS	CIS three wire trunk signaling for IPE. Commonwealth of Independent States (CIST) package 221 is required.	
	DAS	Digital Access Signaling System Number 2. This is allowed if DASS2 package 124 is equipped and PRIV = NO in DTSL data block in LD 74.	
	DPN	Digital Private Network Signaling System Number 1, allowed for DPNSS package 123.	
	DX2 DX4	2-wire duplex 4-wire duplex. The Enhanced Universal Trunk card uses DX4 signaling.	
	EAM EM4	E&M 2-wire E&M 4-wire	
	GRD	Ground start	
	LDC	Loop calling, Disconnect Clear. Accepted when TYPE = COT and UK package is equipped.	

# LD 14

Prompt	Response	Comment	Pack/Rel
	LDR	Loop Dial Repeating	
	LGR	Loop calling, Guarded Release. Accepted when TYPE = COT and UK package is equipped.	
	LOP	Loop start	
	OAD	Outgoing Automatic, incoming dial	
	WR4	AC15 = 2280 Hz, 4-wire	
SMAS	(NO)	This ISPC is not acting as a MASTER when connecting data interfaces to the ISPC link	ispc-22
	YES	This ISPC is acting as a MASTER when connecting data interfaces to the ISPC link  SMAS is prompted when SDCH =YES.  When the ISPC link is used to convey D-channel signaling, it is mandatory to have one side of the ISPC link configured with SMAS=YES and the other side with SMAS=NO.  SMAS must be YES on the side of the ISPC link where the data interface is configured with the auto dialing capability.	
SREF	1-9999999	ISDN Semi Permanent Connection (ISPC) Reference Number  The ISPC reference number is defined by Telecom administration at the time of subscription. The response is limited to seven digits.  When REQ=NEW, the number given must be different than all the other ISPC reference numbers already associated to other Phantom trunk TNs.	ispc-22
STRI		Start arrangement Incoming  Your response to STRI determines which type of signaling will be used by the trunk to initiate digit sending or collection. Your STRI response should reflect the type of operation in use at the near end.	basic-5

Prompt	Response	Comment	Pack/Rel
	DDL	<p>Delayed Dial</p> <p>The terminating trunk returns an off-hook to the originating trunk, which is interpreted as an instruction not to send digits immediately. This delay allows the terminating end to find and attach digit collections equipment. When the equipment is attached, the terminating end returns on-hook which is interpreted as a signal to start sending digits.</p> <p>For this application on incoming calls, the Meridian SL-1 sends a non-programmable 256-384 ms pulse. For outgoing calls, the Meridian SL-1 expects a delay-dial pulse from the far end to terminate before sending digits. Some types of delay-dial operation can also be accommodated by the IMM option.</p>	
	IMM	<p>Immediate</p> <p>The terminating trunk is not expected to return a pulse telling the originating end to begin sending digits. In this application for incoming calls, the Meridian 1 returns a 256-384 ms off-hook/on-hook wink to the far end. This wink accommodates certain types of delay-dial operation.</p> <p>For outgoing calls, the Meridian 1 starts a 300 ms timer when the outgoing trunk is seized. Digits are sent out when an off-hook/on-hook wink returned from the far end ends, or when the 300 ms timer expires (whichever occurs first).</p>	
	MWNK	Modified Wink (MWNK) is printed automatically for Taiwan R1 trunks.	twr1-24
	OWK	<p>Off-Hook Wink for RLR trunks equipped with signaling converter</p> <p>This mode of operation is similar to wink except that the Meridian 1 waits one second after seizure before sending a wink start pulse. This arrangement applies only to release link remote trunks.</p>	
	PTSD	<p>Proceed to Send for CEPT L1 signaling</p> <p>Allowed only for Tie trunk using WR4 signaling.</p>	basic-20

# LD 14

Prompt	Response	Comment	Pack/Rel
RT		RON/TRON start arrangement to be sent by the near end PABX upon reception of an Incoming Seize	basic-20
WNK		<p>Wink or Fast Flash</p> <p>The terminating trunk sends an off-hook/on-hook wink as in DDL operation. However, in WNK operation the pulse is interpreted as a signal that digit collection equipment has been attached. The pulse is expected to be of 140-290 ms duration.</p> <p>For this application, the Meridian 1 first waits 128-256 ms after seizure and then returns a 256 ms pulse to the far end. After this, the Meridian 1 is ready to collect digits. On outgoing calls, the Meridian 1 waits until the wink pulse is finished before sending digits.</p>	
SACK		Seize Acknowledge for CEPT L1 signaling Allowed only for Tie trunk using WR4 signaling.	basic-20
STRO		Start arrangement Outgoing  Your response to STRO determines which type of signaling will be used by the trunk to initiate digit sending or collection. Your STRO response should reflect the type of operation in use at the far end.	basic-5
DDL		Delayed Dial	
IMM		Immediate	
MWNK		Modified Wink (MWNK) is printed automatically for Taiwan R1 trunks.	twr1-24
OWK		Off-Hook Wink for RLR trunks equipped with signaling converter	
PTSD		Proceed to Send for CEPT L1 signaling Allowed only for Tie trunk using WR4 signaling.	xpe-20

Prompt	Response	Comment	Pack/Rel
	RT	RON/TRON start arrangement to be received by the near end PABX after an outgoing seize has been sent	xpe-20
	SACK	Seize Acknowledge for CEPT L1 signaling Allowed only for Tie trunk using WR4 signaling.	xpe-20
	WNK	Wink or Fast Flash	
STYP		Supervision Type. STYP is prompted when SUPN = YES.  For EPE equipment, only one response of PSP, PIP or BST will be accepted. For IPE equipment or with XUT/EXUT, only one of BST, PIP, JDID, or JCO will be accepted.  For XCOT, STYP will accept up to two responses. The responses BAT, ARF and LBS are mutually exclusive. However, BTS can be used with any one of the aforementioned three responses.  When BTM and Japan packages are equipped, BTS can be assigned to an XUT card. For Japan, TYPE = COT, SIGL = LOP, SUPN = YES, STYP = JCO BTS or TYPE = DID, SIGL = LOP, SUPN = YES, STYP = JDID BTS.	basic-20
	ARF	ARF supervised trunks. Must have XCOT LOP trunks.	
	BAT	Battery Supervised COT. Must have XCOT LOP trunks.	
	BST	Both Supervised Trunk Incoming and Outgoing supervised LOP CO/FEX/WATS trunk (QPC330/XUT/EXUT). BST and PIP are mutually exclusive.	
	(BTS)	Busy Tone Supervision. BTS is the default when XTRK = XCOT. Must have XCOT LOP trunks. BTM package must be equipped. BTS can be configured with any one of PIP, BST, JCO or JDID.	

# LD 14

Prompt	Response	Comment	Pack/Rel
	(PSP)	<p>Polarity Sensitive Pack. PSP is the default when SIGL = GRD.</p> <p>Outgoing supervised LOP or GRD start CO/FEX/WATS trunk (QPC218/XUT/EXUT)</p>	
	JCO	<p>Japan CO trunk.</p> <p>Must have Japan Central Office Trunks (JPN) package 97 with LOP trunks (XUTJ). JCO and BTS are no longer mutually exclusive.</p>	
	(JDID)	<p>Japan DID trunk.</p> <p>JDID is the default when the trunk is a LOP DID trunk. Must have Japan Central Office Trunks (JPN) package 97. JDID is not automatically displayed.</p>	
	LBS	<p>Loop Break Supervision. Must have XCOT LOP trunks.</p>	
	(PIP)	<p>Polarity Insensitive Pack. PIP is the default when SIGL = LOP.</p> <p>Outgoing supervised Loop start CO/FEX/WATS trunk (QPC330/XUT/EXUT). PIP and BST are mutually exclusive.</p>	
SUPN	(NO) YES	<p>Answer and disconnect supervision required</p> <p>SUPN must = YES for a COT with Virtual Network Service. For ground start trunks disconnect supervision is detected even if SUPN = NO.</p> <p>The operation of answer supervision is affected if Federal Communications Commission Compliance for DID Answer Supervision (FC68) package 223 is equipped.</p> <p>SUPN will automatically be prompted YES for DID LOP.</p>	basic-1
SXS	(NO) YES	<p>Step-by-step CO trunk</p> <p>Only prompted for Universal Trunks XTRK or XUT when TYPE = CO. The central office reverses polarity on outgoing calls.</p>	xpe-15

Prompt	Response	Comment	Pack/Rel																								
T_TN	I ch	<p>Tandem PRI connection. Where:</p> <p style="margin-left: 20px;">Loop = PRI loop number</p> <p style="margin-left: 20px;">Channel = PRI channel that holds the outgoing nailed up connection (between 1-23)</p> <p>If the connection exists, both channels are displayed. Prompted if TYPE = TCON.</p>	mph-19																								
TGAR	0-(1)-31	<p>Trunk Group Access Restriction. The default of (1) automatically blocks direct access.</p>	basic-1																								
TIMP	<p>(600)</p> <p>900</p> <p>1200</p>	<p>Termination Impedance. Prompted if XTRK = XEM or XUT. tip/xpe-19</p> <p>600 ohms</p> <p>900 ohms</p> <p>1200 ohms</p> <p>Use 1200 ohms for RAN trunks and (600) or 900 for all others.</p> <p>When using the Enhanced Universal Trunk card only 600 or 900 <math>\frac{3}{4}</math> terminating impedance is allowed. However, more Terminating and Balance impedance (BIMP) combinations are available.</p> <p>The terminating and balance impedance options are:</p> <table style="margin-left: 20px; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;"><u>TIMP</u></th> <th style="text-align: left;"><u>BIMP</u></th> </tr> </thead> <tbody> <tr><td>600</td><td>600</td></tr> <tr><td>600</td><td>3COM</td></tr> <tr><td>900</td><td>3COM</td></tr> <tr><td>900</td><td>900</td></tr> <tr><td>900</td><td>3CM2</td></tr> <tr><td>600</td><td>3CM2</td></tr> </tbody> </table> <p>For XUT trunks, the Termination Impedance or TIMP must be compatible with the Balance Impedance or BIMP.</p> <p>The following combination of BIMP/TIMP are allowed:</p> <table style="margin-left: 20px; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;"><u>Timp Impedance</u></th> <th style="text-align: left;"><u>Bimp Impedance</u></th> </tr> </thead> <tbody> <tr><td>600 ohms</td><td>3-component or 3com</td></tr> <tr><td>900 ohms</td><td>3-component or 3com</td></tr> <tr><td>600 ohms</td><td>600 ohms</td></tr> <tr><td>1200 ohms</td><td>600 ohms</td></tr> </tbody> </table>	<u>TIMP</u>	<u>BIMP</u>	600	600	600	3COM	900	3COM	900	900	900	3CM2	600	3CM2	<u>Timp Impedance</u>	<u>Bimp Impedance</u>	600 ohms	3-component or 3com	900 ohms	3-component or 3com	600 ohms	600 ohms	1200 ohms	600 ohms	tip/xpe-19
<u>TIMP</u>	<u>BIMP</u>																										
600	600																										
600	3COM																										
900	3COM																										
900	900																										
900	3CM2																										
600	3CM2																										
<u>Timp Impedance</u>	<u>Bimp Impedance</u>																										
600 ohms	3-component or 3com																										
900 ohms	3-component or 3com																										
600 ohms	600 ohms																										
1200 ohms	600 ohms																										

# LD 14

Prompt	Response	Comment	Pack/Rel
		For XEM trunks, TIMP must be set to 600. When CLS = JDID, TIMP must be set to 600.	
TKID	nnnnnnn	Trunk Identifier Does not have to be unique. Default is no trunk identifier assigned.	basic-6
TN	I s c u	Terminal Number, Large System format I = 0-159 I = 0-255 with Fibre Network Fabric	basic-1 fnf-25
	c u	Terminal Number, Small System format For Option 11C c = 1-50 u = 0-31 For Option 11C Chassis c = 0-4, 7-14, 17-24, 27-34, 37- 44, 47-50 u = 0-31	basic-14
		Terminal Number, Succession 1000 system format c = 11-14, 17-24, 27-34, 37- 44, 47-50 u = 0-31	basic-1
	I ch	Terminal Number for digital trunks when TYPE = RDC or VDC: I = 0-159, Large System I = 0-255: loops, Systems with Fibre Network Fabric I = 1-9 Option 11C I = 1-9, 11-19, 21-29, 31-39, 41-49, Option 11C with Survivable IP I = 11-14, 21-24, 31-34, 41-44 for Succession 1000 ch = channel 1-24 for 1.5 Mb/s DTI/PRI or 1-30 for 2.0 Mb/s DTI/PRI.	fnf-25 sipe-25 basic-1
		TN cannot be a phantom loop. TYPE must be TIE if this TN is on a Phantom loop. TN is not prompted for model sets.	

Prompt	Response	Comment	Pack/Rel
	c u	Terminal Number of the first Virtual Trunk For Succession 1000 system, where c = 61-99	basic-2
TOTN	xx xx	PRI loop and channel To Terminal Number. TOTN is prompted when REQ = MOV. TOTN cannot be a phantom loop.	atvn-25.47 basic-1
	l s c u	Large System format	
	c u	Small System and Succession 1000 format For Small System For Succession 1000 system	basic-7 basic-1
	l ch	Loop and channel for digital trunks when TYPE = RDC or VDC	
TYPE	ADM	Add-on Data Module data block Data port interfacing with a data line card	basic-1
	ADM M	Small System and Succession 1000 Model	
	AWR	Automatic Wake Up RAN/Music trunk data block.	
	AWR M	Small System and Succession 1000 Model	
	CAA	Common Control Switching Arrangement (CCSA) Automatic Number Identification (ANI) trunk data block	
	CAA M	Small System and Succession 1000 Model	
	CAM	CAMA trunk data block	
	CAM M	Small System and Succession 1000 Model	
	CBCT	NI-2 CBC trunk	
	COT	Central Office Trunk data block	
	COT M	Small System and Succession 1000 Model	
	CSA	Common Control Switching Arrangement access line data block	

# LD 14

Prompt	Response	Comment	Pack/Rel
	CSA M	Small System and Succession 1000 Model	
	DIC	Dictation trunk data block	
	DIC M	Small System and Succession 1000 Model	
	DID	Direct Inward Dial trunk data block.  Per FCC regulations, DID trunks used in the U.S. must be properly designated for answer supervision. Refer to FCC Compliance for DID Answer Supervision in <i>Features and Services</i> (553-3001-306). For an ISPC link when SDCH = YES, TYPE = DID.	
	DID M	Small System and Succession 1000 Model	
	FEX	Foreign Exchange trunk data block	
	FEX M	Small System and Succession 1000 Model	
	FGDT	Feature Group D Trunk data block	
	IPTI	IP TIE trunk data block	
	ISA	Integrated Services Access trunk data block. Also called Call-By-Call service trunk type.  There is no provision against the use of non-QPC237 trunk types for the analog ISA service route. Only TIE and ISA trunks are applicable for directly connecting SL-1 PBX to SL-1 PBX.	
	MCU	Meridian Communications Unit.	
	MDM	Modem/Data Module data block. Data port interfacing with QPC60 500/2500 type card.	
	MDM M	Small System and Succession 1000 Model	
	MUS	Music trunk data block	
	MUS M	Small System and Succession 1000 Model	
	PAG	Paging trunk data block	

Prompt	Response	Comment	Pack/Rel
	PAG M	Small System and Succession 1000 Model	
	R232	NT7D16 Data Access Card (DAC) port in RS-232 Data mode data block	
	R232 M	Small System and Succession 1000 Model	
	R422	NT7D16 Data Access Card (DAC) port in RS-422 Data mode data block	
	R422 M	Small System and Succession 1000 Model	
	RAC	Real Analog Channel data block	
	RAN	Recorded Announcement trunk data block	
	RAN M	Small System and Succession 1000 Model	
	RCD	Recorder trunk data block	
	RDC	Real Digital Channel data block	
	RLM	Release Link Main trunk data block	
	RLM M	Small System and Succession 1000 Model	
	RLR	Release Link Remote trunk data block	
	RLR M	Small System and Succession 1000 Model	
	TCON	Tandem Connection for MPH and PRI connections	
	TIE	TIE trunk data block For an ISPC link when SDCH = NO, TYPE must be TIE.	
	TIE M	Small System and Succession 1000 Model	
	VAC	Virtual Analog Channel data block	
	VDC	Virtual Digital Channel data block	
	VGW	Voice Gateway	
	WAT	Wide Area Telephone Service trunk data block	
	WAT M	Small System and Succession 1000 Model	

# LD 14

Prompt	Response	Comment	Pack/Rel
XDIC	(MUT)	Mute outpulsing for DIC trunks	xpe-15
	NOR	Normal outpulsing for DIC trunks	
XTRK		Extended trunk. Prompted for superloops when defining the first unit. Packages 97 and 294 must be equipped.	tip/xpe-19
	EXUT	Enhanced Extended Universal Trunk	
	ITG1	ITG card (1 cardslot circuit card)	itg- 25
	ITG2	ITG card (2 cardslot circuit card)	itg- 25
	ITG8	ITG 486 8-port card	basic-3.0
	ITGP	ITG-P 24-port card	basic-3.0
	MC8	Succession Media Card 8-port	basic-3.0
	MC32	Succession Media Card 32-port	basic-3.0
	XCOT	Extended CO trunk card. Type must be COT or DID. If one or more units are to be used on a PPM route, then unit 0 must be defined as a PPM route member. If not, PPM will not function for any other unit on the card.	
	XDID	Extended DID trunk card	
	XEM	Extended E & M trunk card	
	XFEM	Extended Flexible E & M trunk card	
	XUT	Extended Universal Trunk card	
	VTRK	Virtual trunk for Succession 1000	basic-2
VTRK	Virtual trunk For Succession 1000	basic-2	
ZONE	0-255	Zone Number which the physical unit of the ITG card belongs.  ZONE number is not checked against Overlay 117.  If xtrk is ITG1 or ITG2 and if IPTN is YES, the data block is saved and Overlay 14 returns to the REQ prompt after ZONE prompt	basic-25

---

---

## LD 15: Customer Data Block

---

This program allows data blocks for customers to be created or modified. When the Overlay is loaded, the available system memory and disk records are output in a header as follows:

```
CDB000  
MEM AVAIL: (U/P): xxxxxx  USED: xxxxxx  TOT: xxxxxxxx  
DISK RECS AVAIL: xxx
```

Overlay program 15 is structured to allow changes to be made by entering the desired gate opener mnemonic at the TYPE: prompt. The prompt sequence associated with that gate opener is then prompted in the usual manner. Once the end of the sub prompts has been reached, the Customer Data Block is updated and saved.

Enhanced input processing has also been applied to the REQ: and TYPE: prompts in LD 15. Thus, if the prompt ends with a colon a list of possible responses may be obtained by entering '?' followed by a carriage return. The REQ: and TYPE: prompts also accept abbreviated responses, thus allowing the user to only enter the first three unique characters of the gateway name.

# Prompts and responses

## Contents

Section	Page
<i>Contents:</i>	
Customer data block	263
Default Customer Data Block	264
Data Block: AML (Application Module Link)	266
Data Block: ANI (Automatic Number Identification)	266
Data Block: ATT (Attendant Consoles)	268
Data Block: AWU (Automatic Wake Up Data)	270
Data Block: CAS (Centralized Attendant Service Data)	271
Data Block: CCS (Controlled Class of Service)	271
Data Block: CDR (Call Detail Recording)	272
Data Block: FCR (Flexible Code Restriction)	273
Data Block: FFC (Flexible Feature Codes)	274
Data Block: FTR (Features and options)	274
Data Block: HSP (Hospitality Management)	278
Data Block: ICP (Intercept Computer Update)	279
Data Block: IMS (Integrated Message Service)	280
Data Block: INT (Intercept Treatments)	280
Data Block: LDN (Listed Directory Numbers)	282
Data Block: MON (Set-based Monitoring)	283
Data Block: MPO (Multi-Party Operations)	284
Data Block: NET (Networking)	284
Data Block: NIT (Night Service)	288
Data Block: OAS (Off Hook Alarm Security)	288
Data Block: PPM (Periodic Pulse Metering)	289
Data Block: PWD (Password)	290
Data Block: RDR (Call Redirection)	290
Data Block: ROA (Recorded Overflow Announcement)	292
Data Block: TIM (Timers)	292
Data Block: TST (Test lines)	293

## Customer data block

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	CDB	Customer Data Block
CUST	xx	Customer number
AML_DATA	(NO) YES	Change Application Module Link options (see page 266)
ANI_DATA	(NO) YES	Change Automatic Number Identification numbers (see page 266)
ATT_DATA	(NO) YES	Change Attendant Console options (see page 268)
AWU_DATA	(NO) YES	Change Automatic Wake Up options (see page 270)
CAS_DATA	(NO) YES	Change Centralized Attendant Service options (see page 271)
CCS_DATA	(NO) YES	Change Controlled Class of Service options (see page 271)
CDR_DATA	(NO) YES	Change CDR and Charge Account options (see page 272)
FCR_DATA	(NO) YES	Change New Flexible Code Restriction options (see page 273)
FFC_DATA	(NO) YES	Change Flexible Feature Code options (see page 274)
FTR_DATA	(NO) YES	Change Features and options (see page 274)
HSP_DATA	(NO) YES	Change Hospitality Management options (see page 278)
ICP_DATA	(NO) YES	Change Intercept Computer update (see page 279)
IMS_DATA	(NO) YES	Change Integrated Message Service options (see page 280)
INT_DATA	(NO) YES	Change Intercept treatment options (see page 280)
LDN_DATA	(NO) YES	Change Listed Directory Numbers (see page 282)
MPO_DATA	(NO) YES	Change Multi-Party Options (see page 284)
NET_DATA	(NO) YES	Change ISDN and ESN Networking options (see page 284)
NIT_DATA	(NO) YES	Change Night Service options (see page 288)
OAS_DATA	(NO) YES	Change Off-Hook Alarm Security options (see page 288)
PPM_DATA	(NO) YES	Change Periodic Pulse Metering options (see page 289)
PWD_DATA	(NO) YES	Change Customer related Passwords (see page 290)
RDR_DATA	(NO) YES	Change Call Redirection (see page 290)
ROA_DATA	(NO) YES	Change Recorded Overflow Announcement (see page 292)
TIM_DATA	(NO) YES	Change Timers (see page 292)
TST_DATA	(NO) YES	Change Test lines (see page 293)

**Note:** This *Prompts and responses* table does not list prompts which appear under each gate opener. To find prompts which appear under a given gate opener, refer to the page listed in the *Comment* section of this table.

---

## Default Customer Data Block

---

Prompt	Response	Comment
REQ:	NEW	Request = NEW
TYPE:	DEFAULT	Type = DEFAULT (Default Customer Data Block)
CUST	xx	Customer number
ANI_DATA		Automatic Number Identification prompts are automatically output when adding a new customer
ANAT	x...x	ANI billing number for attendants making ANI calls
ANLD	x...x	ANI Listed DN
PANI	(NO) YES	M911 Pseudo ANI display
CIS_ANI	(NO) YES	ANI option to allow the configuration of ANI entries for CIS ANI message composing.
- S_SIZE	(0)-2000	Maximum number of ANI entries that can be configured for sets.
-- S_ENTRY	1-2000	Entry of ANI table applying to a set
-- DNLG	0-(4)-15	DN Length
-- LEC	0-99..99	Local Exchange Code, 1 to 15 digits.
-- ADDG	0-(8)-99..9	Additional digits, 1 to 15 digits. They will be used to complete ANDN if LEC+ANDN is less than ANSZ digits (defined in OVL 16).
-- ANDN	0-99..99	Used as ANI DN if Calling number not available or DNLG=0. Up to 15 digits may be entered.
- R_SIZE	(1)-512	Maximum number of ANI entries that can be configured for incoming routes.
- R_ENTRY	(0)-aa	ANI entry for an incoming route to be created or modified
-- DNLG	0-(4)-15	DN Length
-- LEC	0-99..99	Local Exchange Code, 1 to 15 digits.
-- ADDG	0-(8)-99..9	Additional digits, 1 to 15 digits. They will be used to complete ANDN if LEC+ANDN is less than ANSZ digits (defined in OVL 16).
-- ANDN	0-99..99	Used as ANI DN if Calling number not available or DNLG=0. Up to 15 digits may be entered.
CACC	(NO) YES	CAC Conversion table option
- MFC_ENT	(0)-31	CAC conversion table to convert MFC CAC into CIS CAC
-- CAC0	0-(3)-9	CIS value corresponding to MFC DGT 0

---

-- CAC1	0-(3)-9	CIS value corresponding to MFC DGT 1
-- CAC2	0-(3)-9	CIS value corresponding to MFC DGT 2
-- CAC3	0-(3)-9	CIS value corresponding to MFC DGT 3
-- CAC4	0-(3)-9	CIS value corresponding to MFC DGT 4
-- CAC5	0-(3)-9	CIS value corresponding to MFC DGT 5
-- CAC6	0-(3)-9	CIS value corresponding to MFC DGT 6
-- CAC7	0-(3)-9	CIS value corresponding to MFC DGT 7
-- CAC8	0-(3)-9	CIS value corresponding to MFC DGT 8
-- CAC9	0-(3)-9	CIS value corresponding to MFC DGT 9
-- DFLT	0-(3)-9	CIS value used when MFC CAC has not been received, or MFC CAC received is not in the MFC CAC list of this table
- CIS_ENT	(0)-31	CAC conversion table to convert CIS CAC into MFC CAC
-- CAC0	0-(6)-10	MFC value corresponding to CIS 0
-- CAC1	0-(6)-10	MFC value corresponding to CIS 1
-- CAC2	0-(6)-10	MFC value corresponding to CIS 2
-- CAC3	0-(6)-10	MFC value corresponding to CIS 3
-- CAC4	0-(6)-10	MFC value corresponding to CIS 4
-- CAC5	0-(6)-10	MFC value corresponding to CIS 5
-- CAC6	0-(6)-10	MFC value corresponding to CIS 6
-- CAC7	0-(6)-10	MFC value corresponding to CIS 7
-- CAC8	0-(6)-10	MFC value corresponding to CIS 8
-- CAC9	0-(6)-10	MFC value corresponding to CIS 9
-- DFLT	0-(6)-10	CIS value used when CIS CAC has not been received, or CIS CAC received is not in the CIS CAC list of this table

---

# LD 15

## Data Block: AML (Application Module Link)

---

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	AML_DATA	Application Module Link
CUST	xx	Customer number
OPT	a..a	Options (OPT responses begin on page 351)
VSID	0-15	Value-Added Server Identifier
GP02	n n n n n n	Group 2 status events 1, 2, 3, 4, 5 or 6 assigned
GP03	n n n n n n	Group 3 status events 1, 2, 3, 4, 5 or 6 assigned
GP04	n n n n n n	Group 4 status events 1, 2, 3, 4, 5 or 6 assigned
GP05	n n n n n n	Group 5 status events 1, 2, 3, 4, 5 or 6 assigned
GP06	n n n n n n	Group 6 status events 1, 2, 3, 4, 5 or 6 assigned
GP07	n n n n n n	Group 7 status events 1, 2, 3, 4, 5 or 6 assigned
GP08	n n n n n n	Group 8 status events 1, 2, 3, 4, 5 or 6 assigned
GP09	n n n n n n	Group 9 status events 1, 2, 3, 4, 5 or 6 assigned
GP10	n n n n n n	Group 10 status events 1, 2, 3, 4, 5 or 6 assigned
GP11	n n n n n n	Group 11 status events 1, 2, 3, 4, 5 or 6 assigned
GP12	n n n n n n	Group 12 status events 1, 2, 3, 4, 5 or 6 assigned
GP13	n n n n n n	Group 13 status events 1, 2, 3, 4, 5 or 6 assigned
GP14	n n n n n n	Group 14 status events 1, 2, 3, 4, 5 or 6 assigned
GP15	n n n n n n	Group 15 status events 1, 2, 3, 4, 5 or 6 assigned

---

## Data Block: ANI (Automatic Number Identification)

---

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	ANI_DATA	Automatic Number Identification
CUST	xx	Customer number
ANAT	x...x	ANI Attendant Billing number
ANLD	x...x	ANI Listed Directory Number

---

---

CIS_ANI	(NO) YES	ANI option to allow the configuration of ANI entries for CIS ANI message composing.
- S_SIZE	(0)-2000	Maximum number of ANI entries that can be configured for sets.
-- S_ENTRY	1-2000	Entry of ANI table applying to a set
-- DNLG	0-(4)-15	DN Length
-- LEC	0-99..99	Local Exchange Code, 1 to 15 digits.
-- ADDG	0-(8)-99..9	Additional digits, 1 to 15 digits. They will be used to complete ANDN if LEC+ANDN is less than ANSZ digits (defined in OVL 16).
-- ANDN	0-99..99	Used as ANI DN if Calling number not available or DNLG=0. Up to 15 digits may be entered.
- R_SIZE	(1)-512	Maximum number of ANI entries that can be configured for incoming routes.
- R_ENTRY	(0)-aa	ANI entry for an incoming route to be created or modified
-- DNLG	0-(4)-15	DN Length
-- LEC	0-99..99	Local Exchange Code, 1 to 15 digits.
-- ADDG	0-(8)-99..9	Additional digits, 1 to 15 digits. They will be used to complete ANDN if LEC+ANDN is less than ANSZ digits (defined in OVL 16).
-- ANDN	0-99..99	Used as ANI DN if Calling number not available or DNLG=0. Up to 15 digits may be entered.
CACC	(NO) YES	CAC Conversion table option
- MFC_ENT	(0)-31	CAC conversion table to convert MFC CAC into CIS CAC
-- CAC0	0-(3)-9	CIS value corresponding to MFC DGT 0
-- CAC1	0-(3)-9	CIS value corresponding to MFC DGT 1
-- CAC2	0-(3)-9	CIS value corresponding to MFC DGT 2
-- CAC3	0-(3)-9	CIS value corresponding to MFC DGT 3
-- CAC4	0-(3)-9	CIS value corresponding to MFC DGT 4
-- CAC5	0-(3)-9	CIS value corresponding to MFC DGT 5
-- CAC6	0-(3)-9	CIS value corresponding to MFC DGT 6
-- CAC7	0-(3)-9	CIS value corresponding to MFC DGT 7
-- CAC8	0-(3)-9	CIS value corresponding to MFC DGT 8
-- CAC9	0-(3)-9	CIS value corresponding to MFC DGT 9
-- DFLT	0-(3)-9	CIS value used when MFC CAC has not been received, or MFC CAC received is not in the MFC CAC list of this table
- CIS_ENT	(0)-31	CAC conversion table to convert CIS CAC into MFC CAC
-- CAC0	0-(6)-10	MFC value corresponding to CIS 0
-- CAC1	0-(6)-10	MFC value corresponding to CIS 1
-- CAC2	0-(6)-10	MFC value corresponding to CIS 2

---

# LD 15

-- CAC3	0-(6)-10	MFC value corresponding to CIS 3
-- CAC4	0-(6)-10	MFC value corresponding to CIS 4
-- CAC5	0-(6)-10	MFC value corresponding to CIS 5
-- CAC6	0-(6)-10	MFC value corresponding to CIS 6
-- CAC7	0-(6)-10	MFC value corresponding to CIS 7
-- CAC8	0-(6)-10	MFC value corresponding to CIS 8
-- CAC9	0-(6)-10	MFC value corresponding to CIS 9
- DFLT	0-(6)-10	CIS value used when CIS CAC has not been received, or CIS CAC received is not in the CIS CAC list of this table

---

## Data Block: ATT (Attendant Consoles)

---

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	ATT_DATA	Attendant Consoles
CUST	xx	Customer number
OPT	a...a	Options (OPT responses begin on page 351)
ATDN	(0)-x...x	Attendant Directory Number
NCOS	(0)-99	Network Class of Service for all attendant consoles for this customer
ATAC	xxxxx	Attendant Administration Access Code
- PWD2	x...x	Second level administration Password
CWUP	(NO) YES	Call Waiting queue Update
CWCL	(0)-255 (0)-255	Call Waiting Call Limit
CWTM	(0)-511 (0)-511	Call Waiting Time
CWBZ	(NO) YES (NO) YES	Call Waiting Buzz
EFLL	(0)-8064	Efficiency Factor Loading Level
MATT	(NO) YES	Consoles used as Message Center
LFTN	l s c u	Lamp Field array Terminal Number (Opt 11 format is cu) (l s c u ranges are defined on page 339)
LFTN	l s c u	Second Lamp Field array Terminal Number (Opt 11 format is cu) (l s c u ranges are defined on page 339)
LFFD	x00...x00	First Directory Number of lamp field array
RTIM	xxx yyy zzz	Recall Timers for Slow-Answer, Camp-On and Call Waiting
ATIM	(0)-126	Attendant Alternative Answering Timer
AQTT	0-(30)-255	Attendant Queue Timing Threshold in seconds

---

---

AODN	x...x	Attendant Overflow DN
SPVC	(0)-63	Supervisory Console
- SBLF	(NO) YES	Standard Busy Lamp Field
- ITH1	1-255	Visual Indication Threshold 1
- ITH2	1-255	Visual Indication Threshold 2
- ITH3	1-255	Visual Indication Threshold 3
RTSA	aaaa	Recall To Same Attendant (aaaa = (RSAD), RSAA, or RSAX)
SACP	aaaa	Semi-Automatic Camp-On (aaaa = (NO), ALL, or SNGL)
ABDN	(NO) YES	Activation of the Attendant Blocking of DN feature
IRFR	(NO) YES	Internal Attendant Remote Call Forward Password
- IRFP	x...x	Internal Attendant Remote Call Forward Password
XRFR	(NO) YES	External Attendant Remote Call Forward Password
- XRFP	x...x	External Attendant Remote Call Forward Password
ADHT	(0)-14	Attendant Delay On-Hold Timer in seconds
AFNT	(0)-126	Attendant Forward No Answer Timer (must be an even number)
AFBT	(0)- AFNT	Attendant Forward Buzz Tone (Entry can be equal to or less than response to AFNT prompt and must be an even number)
IDBZ	(NO) YES	Trunk Buzzing IADN calls in the attendant queue.
PBUZ	xx yy	Flexible Priority Buzz cadence for IADN and Code Blue calls.
ICI	0-19 aaaa	Attendant Incoming Call Indicators
RICI	xx xx...	ICI key numbers that may receive Recorded Overflow Announcement

---

# LD 15

## Data Block: AWU (Automatic Wake Up Data)

---

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	AWU_DATA	Automatic Wake Up Data
CUST	xx	Customer number
AWU	(NO) YES	Automatic Wake Up
ATRC	(NO) YES	Attendant Recall allowed
RANF	0-511	Music route TYPE must be AWR in LD 16
RAN1	0-511	Primary Ran route TYPE must be AWR in LD 16
RAN2	0-511	Secondary RAN route TYPE must be AWR in LD 16
LA11	0-511	Primary RAN route for Language1
LA12	0-511	Secondary RAN route for Language1
LA21	0-511	Primary RAN route for Language 2
LA22	0-511	Secondary RAN route for Language 2
LA31	0-511	Primary RAN route for Language 3
LA32	0-511	Secondary RAN route for Language 3
LA41	0-511	Primary RAN route for Language 4
LA42	0-511	Secondary RAN route for Language 4
LA51	0-511	Primary RAN route for Language 5
LA52	0-511	Secondary RAN route for Language 5
R2BN	0-23 0-59	RAN2 Begin time; hour, minute
R2ED	0-23 0-59	RAN2 End time; hour, minute
NRWU	2-(5)	Number of Rings for Wake Up before recall to attendant
TAWU	1-(3)	Number of Tries for an unanswered AWU call
- WUD	(NO) YES	Is Wake-up Delimiter required
-- STE	(NO) YES	Is Standard Time Entry allowed?

---

## Data Block: CAS (Centralized Attendant Service Data)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	CAS_DATA	Centralized Attendant Service Data
CUST	xx	Customer number
CAS	(NO) YES	Centralized Attendant Service main
- MAIN	(NO) YES	CAS Main
- - CHDN	x...x	CAS silent Hold DN
- - HRCL	0-512	Hold Recall timer in units of 2 seconds
- - ICI	0-19 aaaa	Attendant Incoming Call Indicators
- DFLT	(NO) YES	Default
- LDNT	(NO) YES	Listed Directory Number Tone
- LADN	x...x	Local Attendant Directory Number
- RLA	0-511	Release Link route number

## Data Block: CCS (Controlled Class of Service)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	CCS_DATA	Controlled Class of Service
CUST	xx	Customer number
CCRS	aaa	Controlled Class of Service (CCOS) Restricted Service (aaa = (UNR), CTD, FR1, FR2, FRE, SRE, or TLD)
ECC1	aaa	Enhanced Controlled Class of Service level 1 (aaa = (UNR), CTD, FR1, FR2, FRE, SRE, or TLD)
ECC2	aaa	Enhanced Controlled Class of Service level 2 (aaa = (UNR), CTD, FR1, FR2, FRE, SRE, or TLD)
CNCS	0-99	Network Controlled Class of Service for Electronic Lock
PELK	(NO) YES	Electronic Lock on Private Lines

# LD 15

## Data Block: CDR (Call Detail Recording)

---

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	CDR_DATA	Call Detail Recording
CUST	xx	Customer number
CDR	(NO) YES	Change Call Detail Recording data
- IMPH	(NO) YES	CDR for Incoming Packet data call
- OMPH	(NO) YES	CDR for Outgoing Packet data call
- AXID	(NO) YES	Auxiliary Identification output in CDR record
- TRCR	(NO) YES	Carriage Return sent after each CDR message
- CDPR	(NO) YES	Coordinated Dialing Plan Record option
- ECDR	(NO) YES	End-to-End Signaling digits in CDR record
- BDI	(YES) NO	Buffer Data Interface for CDR
- OTCR	(NO) YES	CDR provided, based on Originally dialed Trunk Route
- PORT	0-15	CDR port
- - CNI	a...a	Calling Number Identification (a...a = (DGTS), CLID, or NONE)
- BCAP	(NO) YES	Bearer Capability in CDR
CHLN	(0)-23	Charge account number Length
FCAF	(NO) YES	Forced Charge Account active
- CHMN	(1)-CHLN	Minimum number of digits for FCA code (Entry can be equal to or less than response to prompt CHLN)
- FCNC	0-99	FCA Network Class of Service

---

## Data Block: FCR (Flexible Code Restriction)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	FCR_DATA	New Flexible Code Restriction
CUST	xx	Customer number
NFCR	(NO) YES	Enable New Flexible Code Restriction
- MAXT	1-255	Maximum number of NFCR translation tables
- OCB1	(0)-(MAXT-1), 255	NFCR tree number to be used for OCB level. Your entry can be either your response to the MAXT prompt minus one or 255. 255 is a special entry which disallows this level.
- OCB2	(0)-(MAXT-1), 255	NFCR tree number to be used for OCB level 2. Your entry can be either your response to the MAXT prompt minus one or 255. 255 is a special entry which disallows this level.
- OCB3	(0)-(MAXT-1), 255	NFCR tree number to be used for OCB level 3. Your entry can be either your response to the MAXT prompt minus one or 255. 255 is a special entry which disallows this level.
IDCA	(NO) YES	Incoming DID Digit Conversion allowed
- DCMX	1-255	Maximum number of IDC conversion tables

# LD 15

## Data Block: FFC (Flexible Feature Codes)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	FFC_DATA	Flexible Feature Code
CUST	xx	Customer number
CCRS	aaa	Controlled Class of Service (CCOS) Restricted Service
SCPL	0-8	Station Control Password Length
SBUP	(YES) NO	Enable use of station control passwords for set based administration user level access
- PWD2	xxxx	PWD2 password for confirmation
FFCS	(NO) YES	Change Flexible Feature Code end-of-dialing indicator
- STRL	1-3	String Length of end-of-dial indicator
- STRG	xxx	String to indicate end-of-dialing (Enterable characters are digits 0-9, *, and #.)
ADLD	(0)-20	Auto Dial Delay in seconds

## Data Block: FTR (Features and options)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	FTR_DATA	Customer Features and options
CUST	xx	Customer number
OPT	a...a	Options (OPT responses begin on page 351)
DGRP	(0)-2046	Maximum number of Dial Intercom Groups
IRNG	(NO) YES	Intercom Ring
PKND	(1)-4	Number of digits Dialed for Group Pickup
DNDL	(NO) YES	Do Not Disturb Lamp on 500/2500 telephones
SPRE	xxxx	Special Prefix number (1-4 digits)
LINK	(NO) YES	ACD DNIS Link option
- APL	0-15	Auxiliary Processor Link number
PREO	(0) 1	Pretranslation Option
BPSS	(NO) YES	Block Pretranslation on System Speed Call lists.
SRCD	xxxx	Set Relocation Security Code

---

EEST	(NO) YES	End-to-End Signaling Tone to originating party
- DTMF	(YES) NO	DTMF feedback tone
EESD	(NO) YES	End-to-End Signalling Digit Display
TTBL	(0)-31	Tone Table number
ADCP	xxxx	All-Digital Connection Prefix
MUS	(NO) YES	Music for sets
- MUSR	0-511	Music Route for sets
HCC	aaaa	Held Call Clearing (aaa = (NO), YES, or XFER)
ALDN	x...x	Alarm Directory Number
ALRM	(NO) YES	Malicious Call Trace Alarm for internal or external calls
TIME	0-(15)	Time for the alarm in minutes
INT	NO YES	Internal
RECD	(NO) YES	Recorder
- MCRT	0-511	Malicious Call Trace Recording Route number as defined in LD 16
TMON	(NO) YES	Traffic Monitoring
PORT	0-15	Serial Data Interface Port Monitor
STCB	(NO) YES	Station Camp-On Busy allowed
NSCP	(NO) YES	Network Station Camp-On to sets on this node allowed
TFDR	(NO) YES	Trunk Failure Display Required
RPA	(NO) YES	Radio Paging Allowed
MCDC	(NO) YES	Malicious Call DN/CLID printing allowed
NAUT	(NO) YES	Network Authorization Code
IDEF	(NO) YES	Internal/external definition
MTAR	(NO) YES	Meridian Mail Trunk Access Restriction
LEND	(NO) YES	List Entry Number Delimiter
MSCD	(NO) YES	Mandatory Speed Call Delimiter
CPCI	(NO) YES	Called Party Control on Internal Call (is not) is allowed for the customer
CONF_DSP	(NO) YES	Change Conference Display configurations
- CNFFIELD	(NO) YES	Enable Conference Count Display Field
- -CNF_NAME	(CONF) aaaa	Change Conferees Count Display Field Name
- INTFIELD	(NO) YES	Enable Internal Conferees Count display field
- -INT_NAME	(I) aaaa	Change Internal Conferees Count display field
- EXTFIELD	(NO) YES	Enable Total External Conferees Count display field
- -EXT_NAME	(E) aaaa	Change Total External Conferees Count field name
DAPC	(NO) YES	Dial Access Prefix on CLID table entry option

---

# LD 15

- TBL	1-15	Table Number
- NPI	aaa	Numbering Plan
-- TON	aaaa	Type of Number
--- PREF	0-9999	Access Prefix for a unique NPI/TON combination in the table.
BSFE	(NO) YES	Boss Secretary Filtering Enhancement
- ACT_IDLE	aaaa	Lamp status when boss's set has BSFE active and is idle, where aaaa = (WINK), FLSH, LIT or DARK
- ACT_BUSY	aaaa	Lamp status when boss's set has BSFE active and is idle, where aaaa = (FLSH), WINK, LIT or DARK
- DACT_IDLE	aaaa	Lamp status when boss's set doesn't have BSFE active and is idle, where aaaa = (DARK), WINK, LIT or FLASH
- DACT_BUSY	aaaa	Lamp status when boss's set doesn't have BSFE active and is busy, where aaaa = (LIT), WINK, FLASH or DARK
ARDL_ATTEMPT		
	1-(30)-60	Automatic Redial number of attempts
ASPCT	(10)-180	Analog Semi-Permanent Connection re-connection Timer
FXS	YES (NO)	Flexible Services
- FXSDN1	x...x	MADN of MIMS card 1
DFLT_LANG	a...a	Default language for M3900 on Remote Office. Where: a...a = (ENG), FRE, GER, DUT, SPA, ITA, NOR, SWE, DAN, POR, FIN, POL, CZE, HUN, JAP, RUS, LAT, TUR.
STS_MSG		
MSG1	(NO) YES a...a	Modify Set-to-Set Messages Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)
MSG2	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)
MSG3	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)

---

MSG4	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)
MSG5	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)
MSG6	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)
MSG7	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)
MSG8	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)
MSG9	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)
MSG10	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)
VO_ALO	(NO) YES	Enable Virtual Office Automatic Logout.
PCA	(OFF) ON	Personal Call Assistant
TPDN	yyyy	Target PCA DN

---

# LD 15

VO_ALOHR	(0)-23	Virtual Office Automatic Logout time using 24 hour clock.
MLPPSD	xxxxxx	Default MLPP service domain used when no value is entered for the MLPPSD prompt in Overlay 87.

Where:

xxxxxx = six hexadecimal characters in the range (000000 to FFFFFFFF) used to signify a 24 bit binary integer. Default is (000000).

---

## Data Block: HSP (Hospitality Management)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	HSP_DATA	Hospitality Management
CUST	xx	Customer number
FRAN	0-511	First RAN number for first PCR threshold
SRAN	0-511	Second RAN number for second PCR threshold
IDR	0-511	Identification Error RAN number
AUTR	0-511	Authcode Error RAN number
RLCR	0-511	Relocation FFC Error RAN number
FRAN	0-511	First RAN number for first PCR threshold
CLS1	aaa	Class of Service 1 (aaa = (UNR), CTD, CUN, FR1, FR2, FRE, SPE, or TLD)
NCS1	(0)-99	Network Class of Service
TGR1	(0)-31	Trunk Group Access Restriction
CLS2	aaa	Class of Service 2 (aaa = (UNR), CTD, CUN, FR1, FR2, FRE, SPE, or TLD)
NCS2	(0)-99	Network Class of Service
TGR2	(0)-31	Trunk Group Access Restriction

---

## Data Block: ICP (Intercept Computer Update)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	ICP_DATA	Intercept Computer
CUST	xx	Customer number
ICP	(NO) YES	Change Intercept Computer
- APL	0-15	Auxiliary Processor Link number used for ICP
- NIPN	0-(99)	Number of Intercept Positions that can be configured
- ICCR	(NO) YES	Intercept Position Canceling Reply is sent if transfer is canceled from Intercept computer
- ICMM	0-9	Message number shown when the transfer is caused by a maintenance program
- ICDN	x...x	Internal Call DN
- ECDN	x...x	External Call DN
- ICWN	(0)-511	Intercept Computer Owner
- ICPS	aaa	ICP Printer Search (aaa = (CIR) or COM)
- ICPR	0-<NIPN>	ICP Printer number
- ICDL	3-(4)-7	CP DN Length
- ICPD	(0)-9	ICP Padding Digit
- ICTD	(NO) YES	Intercept Computer Terminal Dial from directory

# LD 15

## Data Block: IMS (Integrated Message Service)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	IMS_DATA	Change Integrated Messaging System features
CUST	xx	Customer number
IMS	(NO) YES	Change Integrated Message System
- SAMM	(NO) YES	Standalone Meridian Mail
- IMA	(NO) YES	Integrated Messaging System enabled
- - APL	0-15	Auxiliary Processor Link number for IMS
- UST	(NO) YES	User Status Update enabled
- - APL	0-15	Auxiliary Processor Link number for UST
- UMG	(NO) YES	User-to-User Messaging enabled
- - APL	0-15	Auxiliary Processor Link number for UMG

## Data Block: INT (Intercept Treatments)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	INT_DATA	Change Intercept Treatment
CUST	xx	Customer number
ACCD	(OVF OVF OVF ATN)	Access Denied
- RANR	0-511	Intercept Recorded Announcement Route number
CTVN	(OVF OVF OVF ATN)	Call To Vacant Number
- RANR	0-511	Intercept Recorded Announcement Route number
MBNR	(OVF OVF OVF ATN)	Maintenance Busy Numbers
- RANR	0-511	Intercept Recorded Announcement Route number
CTRC	(OVF NAP OVF NAP)	Restricted Call
- RANR	0-511	Intercept Recorded Announcement Route number
CLDN	(NAP OVF NAP NAP)	Calls to Listed Directory Number
- RANR	0-511	Intercept Recorded Announcement Route number
NINV	(OVF OVF OVF ATN)	Invalid NARS/BARS call
- RANR	0-511	Intercept Recorded Announcement Route number

---

NITR	(OVF OVF OVF ATN)	NARS/BARS Invalid Translation
- RANR	0-511	Intercept Recorded Announcement Route number
NRES	(OVF OVF OVF ATN)	NARS/BARS Restricted calls
- RANR	0-511	Intercept Recorded Announcement Route number
NBLK	(OVF OVF OVF ATN)	NARS/BARS Blocked calls
- RANR	0-511	Intercept Recorded Announcement Route number
MFVO	(OVF OVF OVF ATN)	MFC Call to Vacant Office
- RANR	0-511	Intercept Recorded Announcement Route number
MFVN	(OVF OVF OVF ATN)	MFC Call to Vacant Number
- RANR	0-511	Intercept Recorded Announcement Route number
MFCG	(OVF OVF OVF ATN)	MFC Congestion
- RANR	0-511	Intercept Recorded Announcement Route number
LCKT	(BSY BSY BSY BSY)	Call to a Lockout set
- RANR	0-511	Intercept Recorded Announcement Route number
UBRI	(OVF NAP NAP NAP)	Universal BRI
- RANR	0-511	Intercept Recorded Announcement Route number
RCLE	(ATN OVF ATN ATN)	Redirection Count Limit Exceeded as defined by TRCL
- RANR	0-511	Intercept Recorded Announcement Route number
CONG	aaa	Congestion tone for all trunks busy condition (aaa = (OVF) or BSY)
DLT	aaa	Direct Inward System Access Lockout treatment (aaa = (OVF), ATN, or OFA)
LLT	aaa	Flexible Line Lockout treatment (aaa = (OVF), ATN, or OFA)
DNDT	aaa	Do Not Disturb intercept Treatment (aaa = (BST), ATT, or RAN)
- RRT	0-511	Intercept Recorded Announcement Route number
PINT	(NO) YES	Change Precedence Intercept treatment
- PHIP	(ATN) RAN CPAS OVF	Precedence dialed is higher than allowed
- RANR	0-511	Intercept Recorded Announcement Route number
PBLK	(ATN) RAN CPAS OVF	Call presented has higher precedence
- RANR	0-511	Intercept Recorded Announcement Route number
PFAN	(ATN) RAN CPAS	Intercept if dialed DN fails to answer (Call Waiting)
- RANR	0-511	Intercept Recorded Announcement Route number
PFNA	(ATN) RAN CPAS	Intercept if dialed DN fails to answer
- RANR	0-511	Intercept Recorded Announcement Route number
PICP	(ATN) RAN CPAS OVF	Intercept treatment if called party cannot be preempted

---

# LD 15

- RANR 0-511 Intercept Recorded Announcement Route number  
CPAS xxxx Central Precedence answering station listed DN

---

## Data Block: LDN (Listed Directory Numbers)

---

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	LDN_DATA	Listed Directory Numbers
CUST	xx	Customer number
OPT	a...a	Options (OPT responses begin on page 351)
DLDN	(NO) YES	Departmental Listed Directory Numbers
LDN0	xxxx	Listed Directory Number 0
LDA0	1-63 ALL	Attendant consoles associated with LDN0
LDN1	x...x	Listed DN 1
LDA1	a...a	Attendant consoles associated with LDN1 (a...a = 1-63 or ALL)
LDN2	x...x	Listed DN 2
LDA2	a...a	Attendant consoles associated with LDN2 (a...a = 1-63 or ALL)
LDN3	x...x	Listed DN 3
LDA3	a...a	Attendant consoles associated with LDN3 (a...a = 1-63 or ALL)
LDN4	x...x	Listed DN 4
LDA4	a...a	Attendant consoles associated with LDN4 (a...a = 1-63 or ALL)
LDN5	x...x	Listed DN 5
LDA5	a...a	Attendant console associated with LDN5 (a...a = 1-63 or ALL)
LDBZ	n n n n n n	Listed Directory Number Buzzing assigned groups (n = 0-5)
ICI	0-19 aaaa	Attendant Incoming Indicators

---

## Data Block: MON (Set-based Monitoring)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	MON	Set-based monitoring
USBM	(NO) YES	UIPE Set-based monitoring Where: (NO) = all previously configured TNs are flushed, and subsequent prompts are not prompted. YES = accept and prompt the next prompts. <CR> = previously stored value taken.
TN1	l s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000  Enter X to delete
TN2	l s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000  Enter X to delete
TN3	l s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000  Enter X to delete
TN4	l s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000  Enter X to delete
TN5	l s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000  Enter X to delete
TN6	l s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000  Enter X to delete

# LD 15

## Data Block: MPO (Multi-Party Operations)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	MPO_DATA	Multi-Party Operations
CUST	xx	Customer number
FMOP	(NO) YES	Flexible Misoperation Options
- RGNA	xxx yyy	Ringing No Answer treatment
- AOCS	xxx yyy	All Other Cases
- RCY1	1-(6)-15	Number of Cycles of Re-ringing before forwarding or disconnecting
- RCY2	1-(4)-15	Number of Cycles of Ringing before forwarding to transferring station
- RALL	(NO) YES	Mandatory recall is required prior to dialing control digits
- CDTO	2-(14)	Control digit timeout; in multiples of two seconds
IFLS	(NO) YES	Ignore Switchhook Flash signal from 500/2500 sets
MHLD	(NO) YES	Manual Hold after inquiry enabled
PCDS	(NO) YES	Programming of Control Digits required
- CNFD	0-(1)-9, *, #	Control Digit for Conference
- TGLD	0-(2)-9, *, #	Control Digit for Toggle
- DISD	0-(3)-9, *, #	Control Digit for Disconnect
CCDO	(NO) YES	Consultation Connection Disconnect Option alternative treatment
AFCO	(YES) NO	(Automatic)/Manual Forced Camp-On
- ACNS	aaa	Attendant Clearing during Night Service (aaa = (NO), EXT, or ALL)

## Data Block: NET (Networking)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	NET_DATA	Networking
CUST	xx	Customer number
OPT	a...a	Options (OPT responses begin on page 351)
AC2	aaaa	Access Code 2 as defined in LD 86 (aaaa = NPA, NXX, INTL, SPN, or LOC)
FNP	(YES) NO	Enable Flexible Numbering Plan for customer

---

ISDN	(NO) YES	Integrated Services Digital Network
VPNI	1 - 16283	Virtual Private Network Identifier
- PNI	(0)-16283	Private Network Identifier
- CLID	(NO) YES	(Do not allow) Allow Calling Line Identification option
-- SIZE	0-(256)- 4000	CLID entry size
-- INTL	0-9999	Country code (1-4 digits)
-- ENTRY	xx	CLID entry to be configured
--- HNTN	0-999999	National code for home national number (1-6 digits)
--- HLCL	0-99 ... 99	Local code for home local number or Listed DN (1-12 digits)
--- DIDN	a...a	Use DN as DID (a...a = YES, NO or SRCH)
--- HLOC	0-x...x	Home location code (ESN) (1-7 digits)
--- LSC	0-x...x	Local steering code (1-7 digits)
- ESA_APDN	(YES) NO	Append the originating Directory Number after the Home Local Number for Emergency Services Access calls
- ESA_HLCL	x..x	Home Local Number for Emergency Services Access calls
- ESA_INHN	(NO) YES	Home National Number in front of Home Local Number for Emergency Services Access calls
- CLASS_FMT	aaa	Send information to a CLASS set as the calling number
- PINX_DN	xx...x	Node DN
- MMSN	(NO) YES	(Do not allow) Allow Mobility Multi-Site Networking node
- APPL_DN	x...x	Originating node which communicates with Mobility User Database (MUD) server
- DIAL_PLAN	aaa	Dialing plan used by customer to communicate with MUD server (aaa = (UDP) or CDP)
-- MUD_SRVR	(NO) YES	(Do not allow) Allow MUD Server
--- MUD_DN	x...x	MUD server DN
--- SRVR_LOC	x...x	Home location code of MUD Server
--- SRVR_DN	x...x	MUD Server DN
- MBG	(0)-65535	Multi-location Business Group
- BSGC	0-(65535)	Business Sub Group Consult-only
- PFX1	xxxx	Prefix 1
- PFX2	xxxx	Prefix 2
- HNPA	200-999	Home Number Plan Area code defined in LD 90
- HNXX	100-9999	Prefix for Central Office defined in LD 90
- CNTP	aaa	Calling Number Type (aaa = (PDN) or LDN)
- RCNT	0-(5)	Redirection Count for ISDN calls
- PSTN	(NO) YES	Public Service Telephone Networks

---

# LD 15

-- TNDM	0-(15)-31	Tandem Threshold/Loop Avoidance Limit value permitted in a network connection
-- PCMC	0-(15)-31	Pulse Code Modulation Conversions permitted, $\mu$ -Law to A-Law or A-Law to $\mu$ -Law, in a network connection
- SATD	0-(1)-5	Satellite Delays
OCLI	aaa	CLID information for incoming/outgoing calls
TIDM	(NO) YES	Trunk Identity Meaningful
DASC	xxxx	Display Access Code
ROPT	aaa	Route Optimization (aaa = (NRO), RAX, ROA, or ROX)
DITI	(NO) YES	DID to TIE connections allowed
TRNX	(NO) YES	(Prevent) Allow transfer on ringing of supervised external trunks across the network
EXTT	(NO) YES	(Prevent) Allow unconditional external Trunk to Trunk transfer.  Enter YES to indicate that a caller can transfer a call made to one outgoing trunk to another outgoing trunk without restrictions based on supervision. Trunk to trunk connection features such as TGAR/TARG and Trunk Barring still apply as appropriate.  Enter NO to indicate that the transfer is allowed only if conditions regarding supervision are met. This prompt only applies to situations involving two calls originated by the same caller.
FTOP	(FRES) TBFT FTTB FTLY	Flexible Trunk to Trunk Connection Option
APAD	x y	Alternative Pad
DMWM	(NO) YES	Enable the output of DPNSSI Message Waiting Indication error messages
MWNS	(NO) YES	Message Waiting Indication Non Specified Information string to recognize.
- REQ	aaa	Message Waiting Indication Non Specified Information table
- MFID	a	Manufacturer Identifier
-- NOTI	(NO) YES	Non Specified Information string for Message Waiting Notification
-- MSSC	a	a = any alphanumeric character
-- PRMT	aaa	Subsequent Non Specified Information string for Message Waiting notification
-- CANC	YES NO	Non Specified Information string for Message Waiting Cancellation
VNR	(NO) YES	Vacant Number Routing
- RLI	0-999	Route List Index as defined in LD 86
- FLEN	1-(16)	Flexible length of digits expected

---

- CDPL	1-(10)	Flexible length of VNR CDP
- UDPL	1-(19)	Flexible length of Vacant Number Routing (VNR) Uniform Dialing Plan digits (UDP). Enter the maximum number of UDP digits expected by VNR.
NIT	2-(8)	Network Alternate Route Selection (NARS) Interdigit Timer
NAS_ATCL	(YES) NO	Network Attendant Service Attendant Control allowed
NAS_ACTV	(YES) NO	Network Attendant Service routing Activated
FOPT	0-(14)-30	Flexible Orbiting Prevention Timer
ARDL_ACCEPT	0-(20)-60	Automatic Redial Acceptance Timer in seconds
ARDL_RETRY	10-(30)-60	Automatic Redial Retry Timer in seconds
CNDN	0-x...x	Customer Calling Number Identification DN on outgoing MFC calls
- CNIP	(YES) NO	Calling Number Identification Presentation
CNAT	0-x...x	CNI Attendant DN on outgoing MFC calls
HMDN	xxxx	Home DN
CNTC	x	Country Code
NATC	x	National Access Code
INTC	xxx	International Access Code

---

# LD 15

## Data Block: NIT (Night Service)

---

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	NIT_DATA	Night Service
CUST	xx	Customer number
NIT1	x...x	First Night Service DN by Time of Day
TIM1	hh mm	Hour and Minute for First Night Service DN
NIT2	x...x	Second Night Service DN by Time of Day
TIM2	hh mm	Hour and Minute for Second Night Service DN
NIT3	x...x	Third Night Service DN by Time of Day
TIM3	hh mm	Hour and Minute for Third Night Service DN
NIT4	x...x	Fourth Night Service DN by Time of Day
TIM4	hh mm	Hour and Minute for Fourth Night Service DN
RPNS	(NO) YES	Recall With Priority During Night Service
ENS	(NO) YES	Enhanced Night Service enabled
- NWT	(NO) YES	Night Call Waiting Tone enabled
- NNT	0-253	Night Number Table
- NSO	(NO) YES	Enhanced Night Service enabled

---

## Data Block: OAS (Off Hook Alarm Security)

---

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	OAS_DATA	Change Off-Hook Alarm Security options
CUST	xx	Customer number
ODN0	xxxx	OHAS Security DN for zone 0
ODN1	xxxx	OHAS Security DN for zone 1
ODN2	xxxx	OHAS Security DN for zone 2
ODN3	xxxx	OHAS Security DN for zone 3
ODN4	xxxx	OHAS Security DN for zone 4
ODN5	xxxx	OHAS Security DN for zone 5
ODN6	xxxx	OHAS Security DN for zone 6

---

---

ODN7	xxxx	OHAS Security DN for zone 7
ODN8	xxxx	OHAS Security DN for zone 8
ODN9	xxxx	OHAS Security DN for zone 9
ASTM	1-(30)-63	OHAS off-hook or interdigit timeout timer in seconds
HDOPT	(0)-10 CONT	OHAS Half Disconnect Treatment Options
HDTM	1-(30)-600	OHAS Half Disconnect Timer in seconds

---

## Data Block: PPM (Periodic Pulse Metering)

---

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	PPM_DATA	Periodic Pulse Metering
CUST	xx	Customer number
HMTL	(YES) NO	Hotel/Motel environment
PCDL	(NO) YES	PPM output on CDR Link
UCST	(0)-9999	Unit Cost for Periodic Pulse Metering
ATCH	(NO) YES	Attendant display of call Charge
SCDL	(0)-3	Schedule for printing Message Registration and PPM data
- WKDY	1-7	Week Day for weekly printout; 1 = Sunday
- DAY	0-28	Day of month for printout; 0 = last day of month
- HOUR	hh	Hour of day for printout
	hh hh	Two printouts per day allowed when SCDL = 1
- MCLR	(NO) YES	Meter Clear after printing
- PTTY	(0)-15	PPM TTY number for printing meters (one per switch)

---

# LD 15

## Data Block: PWD (Password)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	PWD_DATA	Password
CUST	xx	Customer number
SPWD	xxxx	Secure data password for LD 88 authcodes and LD 24 DISA
- PWD2	xxxx	Second level administration Password
ATAC	xxxx	Attendant Administration Access code
- PWD2	xxxx	Second level administration Password

---

## Data Block: RDR (Call Redirection)

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	RDR_DATA	Call Redirection
CUST	xx	Customer number
OPT	a...a	Options (OPT responses begin on page 351)
FNAD	aaa	Call Forward No Answer treatment for DID calls (aaa = (HNT), ATT, NO, or FDN)
FNAT	aaa	Call Forward No Answer treatment for external Trunk non-DID calls (aaa = (HNT), ATT, NO, or FDN)
FNAL	aaa	Call Forward No Answer treatment for All other calls including trunk calls marked as internal (aaa = (HNT), ATT, NO, or FDN)
CFTA	(NO) YES	Call Forward to Trunk Access code allowed
CCFWDN	x...x	Customer Call Forward DN (maximum: 23 digits)
CFNA	1-(4)-15	Number of normal ringing cycles for Call Forward No Answer (CFNA)
CFN0	1-(4)-15	Number of normal ringing cycles for CFNA, Option 0
CFN1	1-(4)-15	Number of normal ringing cycles for CFNA, Option 1
CFN2	1-(4)-15	Number of normal ringing cycles for CFNA, Option 2
CRTOD	(NO) YES	Change Call Redirection by Time Of Day alternate time options

---

---

- CRT0	SH SM EH EM	Alternate time option 0, denotes time when Alternate Redirection DN will be used. (SH SM = Start time, EH EM = End time)
- CRT1	SH SM EH EM	Alternate time option 1 (SH SM = Start time; EH EM = End time)
- CRT2	SH SM EH EM	Alternate time option 2 (SH SM = Start time; EH EM = End time)
- CRT3	SH SM EH EM	Alternate time option 3 (SH SM = Start time; EH EM = End time)
CRDAY	(NO) YES	Call Redirection by Day
- DAY0	n n n n n n n	Days for day option 0 for which alternate treatment is given
- DAY1	n n n n n n n	Days for day option 1 for which alternate treatment is given
- DAY2	n n n n n n n	Days for day option 2 for which alternate treatment is given
- DAY3	n n n n n n n	Days for day option 3 for which alternate treatment is given
CRHOL	aaa	Redirection Holiday(s)
- DATE	dd mm yyyy	Date of the holiday
- - HOL_OPT	0-3	Holiday redirection option for which the date applies
NMDR	(0)-4	Number of normal ring cycles for DNDR
DFN0	1-(4)-15	Number of distinctive ringing cycles for CFNA, Option 0
DFN1	1-(4)-15	Number of distinctive ringing cycles for CFNA, Option 1
DFN2	1-(4)-15	Number of distinctive ringing cycles for CFNA, Option 2
DMDR	(0)-14	Number of distinctive ringing cycles for DNDR
DNDH	(NO) YES	Do Not Disturb Hunting allowed
MDID	(NO) YES	No Answer DID calls routed to Message Center
NDID	(NO) YES	No Answer non-DID calls routed to Message Center
MWFB	(NO) YES	DID calls to busy telephones routed to Message Center
TRCL	(0)-7	Total Redirection Count Limit
DFNR	(0)-15	DID Forward No Answer Ring cycles
FCWD	(0)-126	Number of seconds a DID call should wait on a set before being forwarded to the attendant

---

# LD 15

## Data Block: ROA (Recorded Overflow Announcement)

---

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	ROA_DATA	Recorded Overflow Announcement
CUST	xx	Customer number
OPT	a...a	Options (OPT responses begin on page 351)
FRRT	0-511	First RAN route
- FRT	0-(20)-2044	Time delay in seconds for the first RAN route
SRRT	0-511	Second RAN route number for ROA
- SRT	2-(40)-2044	Time delay in seconds for the second RAN route
WAIT	aaa	Treatment during Waiting time for ROA (aaa = (RGB), MUS, or SIL)
- MURT	0-511	Music Route
RICI	0-19	ICI key numbers that may receive ROA

---

## Data Block: TIM (Timers)

---

Prompt	Response	Comment
REQ:	CHG	Change existing data block
TYPE:	TIM_DATA	Timers
CUST	xx	Customer number
FLSH	20-(45)-768	Switchhook Flash timing
SDFL	384-(1024)-2048	Signal Destination Flash timing
PHDT	1-(30)-63	Permanent Hold Timer
DIND	2-(30)-60	Dial tone and Interdigit timeout for non-DTMF sets
DIDT	2-(14)-60	Dial tone and Interdigit timeout for DTMF sets
LDTT	2-(6)-30	Line disconnect tone timer for 500/2500 telephones in seconds
DLAT	(0)-120	Delayed Answer Timer
BOTO	2-(14)-60	Busy tone/Overflow tone Timeout

---

---

DBRC	2-(60)-120	Duration Between Reminder Cadences for Audible Reminder of Held Call
RTIM	xxx yyy zzz	Recall Timers for Slow Answer, Camp-On and Call Waiting
ATIM	(0)-126	Attendant Alternative Answering Timer
AQTT	0-(30)-255	Attendant Queue Timing Threshold in seconds
ADLD	(0)-20	Auto Dial Delay in seconds
AFNT	(0)-126	Attendant Forward No Answer Timer (must be an even number)
AFBT	(0)- <i>AFNT</i>	Attendant Forward Buzz Tone (Your entry can be equal to or less than your response to the AFNT prompt and must be an even number)
NFNA	(0)-63	Night Forward No Answer or ring cycles
NFNS	(0)-504	Night Forward No Answer in seconds
ADHT	(0)-14	Attendant Delay on Hold Timer in seconds
HWTT	0-(300)-600	Length of Howler Tone in seconds
NIT	2-(8)	Network Alternate Route Selection Interdigit Timer
FOPT	0-(14)-30	Flexible Orbiting Prevention Timer
PRNG	0 - (40) - 60	Precedence ringback timer in seconds.
PRMT	0 - (60)-120	Duration of preemption tone before set goes to line lock out.

---

## Data Block: TST (Test lines)

---

Prompt	Response	Comment
--------	----------	---------

---

REQ:	CHG	Change existing data block
TYPE:	TST_DATA	Test lines for transmission testing
CUST	xx	Customer number
T100	xxxx	DN for Type-100 test line
REF0	xxxx	DN for Reference trunk 0
TST0	xxxx	DN for Test trunk 0
REF1	xxxx	DN for Reference trunk1
TST1	xxxx	DN for Test trunk 1
REF2	xxxx	DN for Reference trunk 2
TST2	xxxx	DN for Test trunk 2
REF3	xxxx	DN for Reference trunk 3
TST3	xxxx	DN for Test trunk 3

---

# LD 15

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
AATT	xxxx	Automatic Identification of Outward Dial Attendant Identifier Precede with X to remove.	aiod-1
ABDN	(NO) YES	Activation of the Attendant Blocking of DN Prompted with Semi-Automatic Camp-On (SACP) package 181.	abdn-20
AC2	NPA NXX INTL SPN LOC	Access Code 2 E.164 National E.164 Subscriber International Special Number Location Code  For DPNSS1, only SPN and LOC values apply. Enter call types that use Access Code 2 (AC2) Multiple responses are permitted. If a numbering plan is not entered here, it is automatically defaulted to Access Code1 (AC1).  This prompt applies to both ISDN and non-ISDN calls if you have Network Message Services (NMS) package175.	pri-15
ACCD	(OVF OVF OVF ATN)	Access Denied	basic-1

Prompt	Response	Comment	Pack/Rel
ACNS	(NO) EXT ALL	Attendant Clearing during Night Service No automatic treatment External calls only All calls  This prompt appears when the Multi-Party Operations (MPO) package is equipped, MPOP = YES and FMOP = YES.	mpo-20
ACT_BUSY	(FLSH) WINK LIT DARK	LCD Lamp flash rate is 30 impulses per minute. LCD Lamp flash rate is 60 impulses per minute. LCD Lamp is on. LCD Lamp is off.	bfs-24
ACT_IDLE	(WINK) FLSH LIT DARK	LCD Lamp flash rate is 60 impulses per minute. LCD Lamp flash rate is 30 impulses per minute. LCD Lamp is on. LCD Lamp is off.	bfs-24
ADCP	x...x	All-Digital Connection Prefix Entry may be 1-4 digits; null input accepted. Prompted with 1.5 Mbit Digital Trunk Interface (PBXI) package 75 and AMP package.	basic-5
ADDG	0-(8)-99..99	Additional digits, 1 to 15 digits. They will be used to complete ANDN if LEC+ANDN is less than ANSZ digits (defined in OVL 16).	
ANDN	0-99..99  X	Used as ANI DN if Calling number not available or DNLG=0. Up to 15 digits may be entered.  remove ANDN	
ADHT	(0)-14	Attendant Delay on Hold Timer Prompted with International Supplementary Features (SUPP) package 131.	supp-9

# LD 15

Prompt	Response	Comment	Pack/Rel
ADLD	(0)-120	Auto Dial Delay Time in two-second interval. Prompted with the Flexible Feature Codes (FFC) package 139. 0 = Auto Dial does not take place.	ffc-20
AFBT	(0)-2-AFNT	Attendant Forward Buzz Tone The number of seconds in 2 second intervals that the attendant is buzzed at full volume. Odd entries are rounded down to the next valid entry. If entry is 0, the original volume is in effect.	afna-14
AFCO	(YES) NO	(Automatic)/Manual Forced Camp-On Prompted with Priority Override (POVR) package 186.	povr-20
AFNT	(0)-2-126	Attendant Forward No Answer Timer The number of seconds in 2 second intervals that the call is presented to the attendant before Attendant Forward No Answer (AFNA) is attempted. Odd entries are rounded down to the next valid entry. If entry is 0, the call is not forwarded. Prompted with Attendant Forward No Answer (AFNA) package 134.	afna-14
ALDN	x...x	Alarm Directory Number Must be a Single-Appearance 500-set DN. Precede with X to remove.	emct-20
ALRM	(NO) YES	Malicious Call Trace Alarm for internal or external calls ALRM has to set to YES if the alarm is to be rung for any call (external or internal) when MCT is activated.	emct-20
AML_DATA	(NO) YES	Change Application Module Link options	basic-21

Prompt	Response	Comment	Pack/Rel
ANAT	x...x	ANI Attendant Billing Number  Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. In either case, together with ANLD (ANI listed DN), the total number of digits must be seven.  Prompted with Automatic Number Identification (ANI) package 12.	ani-1
ANI_DATA	(NO) YES	Change Automatic Number Identification options	basic-21
ANLD	xxxxx	Automatic Number Identification (ANI) Listed Directory Number  May be 0-5 digits, depending on the length of ANAT. The combined number of digits for ANAT and ANLD must be 7. Prompted with Automatic Number Identification (ANI) package 12.	ani-1
	X	Enter the letter X to clear the field	
AOCS	xxx yyy	All Other Cases  Where: xxx is for internal calls and yyy or ATN is for external calls  Valid entries for xxx and yyy are:  AAR - forward to attendant or Night Service after re-ringing for RCY1 cycles ATN - forward to attendant or Night Service (ATN is the default for yyy or external calls) DAR - disconnect after re-ringing for RCY1 cycles DIS - disconnect default for xxx or internal calls OVF - provide overflow tone STD - standard operation.	mpo-20
AODN	x...x	Attendant Overflow DN  Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove an entry. Prompted with Attendant Overflow Position (AOP) package 56.	aop-1

# LD 15

Prompt	Response	Comment	Pack/Rel
APAD	x y	<p>Alternative Pad. Where: x = trunk pad selection and y = conference pad selection</p> <p>Valid inputs for x are:</p> <ul style="list-style-type: none"><li>(0) = default North America</li><li>1 = Australia</li><li>2 = New Zealand</li><li>3 = Italy</li><li>4 = China EPE or EPE/IPE systems</li><li>5 = China pure IPE system</li><li>6-7 = future usage currently set to default</li></ul> <p>Valid inputs for y are:</p> <ul style="list-style-type: none"><li>(0) = default North America</li><li>1 = Alternative Conference pads selected</li></ul> <p>The default = 0 when REQ = NEW. The default is the existing value when REQ = CHG. Alternative Conference pads are only provided on specific Conference cards.</p>	
APL	0 - 15	Auxiliary Processor Link number	apl-10
APPL_DN	x...x	<p>Application DN</p> <p>Originating node that communicates with the Mobility User Database (MUD) server. This DN can be up to 7 digits long.</p>	mmsn-22
APRF	xx	Automatic Identification of Outward Dial Prefix	aiod-1
AQTT	0-(30)-255	Attendant Queue Timing Threshold in seconds	basic-1

Prompt	Response	Comment	Pack/Rel
ARDL_ACCEPT	0-(20)-60	<p>Automatic Redial Acceptance Timer in seconds. An odd-numbered entry is rounded up to the next even number, and the following message is printed: "ARDL_ACCEPT ROUNDED TO <u>XX</u>." (where: xx = the even number).</p> <p>This is the maximum allotted time for the originator response on a successful automatic redial call. Prompted if Automatic Redial (ARDL) package 304 is equipped.</p>	ardl-22
ARDL_ATTEMPT	1-(30)-60	<p>Automatic Redial number of attempts</p> <p>Any single ARDL call is automatically redialed up to the number of retries entered at this prompt. Prompted if Automatic Redial (ARDL) package 304 is equipped.</p>	ardl-22
ARDL_RETRY	10-(30)-60	<p>Automatic Redial Retry Timer in seconds. An odd-numbered entry is rounded up to the next even number, and the following message is printed: "ARDL_ACCEPT ROUNDED TO <u>XX</u>." (where: xx = the even number).</p> <p>This timer controls successive automatic redial retry dialing. Prompted if Automatic Redial (ARDL) package 304 is equipped.</p>	ardl-22
ASPCT	10 180	<p>Analog Semi-Permanent Connections re-connection Timer</p> <p>minimum value in seconds maximum value in seconds</p>	basic-24

# LD 15

Prompt	Response	Comment	Pack/Rel
ASTM	1-(30)-63	<p>OHAS Off-Hook or interdigit timeout timer</p> <p>This timer is applied to telephones with Alarm Security Allowed (ASA) Class of Service. When the timer expires, the telephone is intercepted to the OHAS DN.</p> <p>ASTM applies to all OHAS DNs. If the telephone has Alarm Security Denied (ASD) Class of Service, the normal dial tone and interdigit timers are used. See LD 15 prompts DIND and DIDT.</p>	basic-18
ATAC	xxxx	<p>Attendant Administration Access Code</p> <p>The entered code is not actually accepted until the correct password is entered in the next prompt.</p> <p>Prompted with Attendant Administration (AA) package 54.</p>	aa-1
ATCH	(NO) YES	Attendant display of call Charge	supp-15
ATDN	(0)-x...x	<p>Attendant Directory Number</p> <p>Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Calls timed for recall by the DPNSS1 redirection feature are redirected to this number when the timer expires.</p>	basic-1
ATIM	(0)-126	<p>Attendant Alternative Answering Timer</p> <p>This timer is in increments of two seconds, odd numbers are rounded down to the next valid input. Use ATIM = 0 to disable AAA. Prompted with Attendant Alternative Answering (AAA) package 174.</p>	aaa-15
ATRC	(NO) YES	<p>Attendant Recall allowed</p> <p>A YES response enables Attendant Recall for unanswered Automatic Wake Up (AWU) call attempts.</p> <p>The number of Wake Up tries is defined at the TAWU prompt. The number of rings for a Wake Up call is defined at the NRWU prompt.</p>	awu-10

Prompt	Response	Comment	Pack/Rel
ATT_DATA	(NO) YES	Change Attendant Console options	basic-21
AUTR	0-511 X	Authcode Error RAN number To disable the RAN	disa-16
AWU	(NO) YES X	Enable Automatic Wake-Up All AWU related data is removed from CDB. Prompted with Automatic Wake-Up (AWU) package 102.	awu-10
AWU_DATA	(NO) YES	Change Automatic Wake Up options	basic-21
AXID	(NO) YES	Auxiliary Identification output in CDR record Auxiliary Identification provides the TN when the call involves a multiple appearance DN.	cdr-1
BCAP	(NO) YES	Bearer Capability in CDR	cdr-24
BDI	(YES) NO	Buffer Data Interface for CDR	dba-24
BOTO	2-(14)-60	Busy tone/Overflow tone Timeout Odd entries are rounded down to a valid multiple of two seconds.	basic-10
BPSS	(NO) YES	Block Pretranslation on System Speed Call lists when dial accessed.	pxlt- 23 ssc- 23
BSFE	(NO) YES	Boss Secretary Filtering Enhancement	ffcsf-24

# LD 15

Prompt	Response	Comment	Pack/Rel
BSGC	0-(65535)	Business Sub Group Consult-only. Where: 0 = no indication 1 - 65535 = Subgroup identifier  This value is sent as the Multi-location Business Group Subgroup (MBGS) identifier or tenant number when an existing call has more than two different MBGSs. In this case a consultation connection will be allowed, but completion of a call modification, conference or transfer, will be disallowed.  If BSGC = 0 then Call Transfer and Call Modifications may be restricted under certain circumstances. Ensure BSGC is not 0 if Call Transfer and Call Modifications to be allowed.	tens-16
CAC0	0-(6)-10	MFC value corresponding to CIS 0. Reserved.	cist-24
	0-(3)-9	CIS value corresponding to MFC DGT 0.	
CAC1	0-(6)-10	MFC value corresponding to CIS 1. Residential or business subset with the access to automatic regional, toll and international network".	cist-24
	0-(3)-9	CIS value corresponding to MFC DGT 1.	
CAC2	0-(6)-10	MFC value corresponding to CIS 2. Hotel subset with the access to automatic regional, toll international network.	cist-24
	0-(3)-9	CIS value corresponding to MFC DGT 2.	
CAC3	0-(6)-10	MFC value corresponding to CIS 3. Residential, business or Hotel subset with the access to local network only.	cist-24
	0-(3)-9	CIS value corresponding to MFC DGT 3.	

Prompt	Response	Comment	Pack/Rel
CAC4	0-(6)-10	MFC value corresponding to CIS 4. Business subset with the access to regional, toll, international network and to special service numbers; preferential access to regional and toll network.	cist-24
	0-(3)-9	CIS value corresponding to MFC DGT 4.	
CAC5	0-(6)-10	MFC value corresponding to CIS 5. Business subset of telecommunications administration with the access to automatic regional, toll, international network and to special service numbers free of charge.	cist-24
	0-(3)-9	CIS value corresponding to MFC DGT 5.	
CAC6	0-(6)-10	MFC value corresponding to CIS 6. Toll Coin box and public call paystation with the access to automatic regional and toll network also the general purpose coin box with the access to local and toll network (paying in cash) and the coin box with access to special services only.	cist-24
	0-(3)-9	CIS value corresponding to MFC DGT 6.	
CAC7	0-(6)-10	MFC value corresponding to CIS 7. Business or residential subset with automatic access to regional, toll and international network plus to chargeable service numbers.	cist-24
	0-(3)-9	CIS value corresponding to MFC DGT 7.	
CAC8	0-(6)-10	MFC value corresponding to CIS 8. Business subset for data, facsimile and electronic mail with automatic access to regional, toll and international network.	cist-24
	0-(3)-9	CIS value corresponding to MFC DGT 8.	
CAC9	0-(6)-10	MFC value corresponding to CIS 9. Local call coin box.	cist-24
	0-(3)-9	CIS value corresponding to MFC DGT 9.	
CACC	(NO) YES	CAC Conversion table option	

# LD 15

Prompt	Response	Comment	Pack/Rel
CANC	YES NO	Non Specified Information string for Message Waiting Cancellation.	dmwi- 23
CAS	(NO) YES	Centralized Attendant Service Prompted with Centralized Attendant Services (Main) (CASM) package 26 or Centralized Attendant Services (Remote) (CASR) package 27.	casw-1
CAS_DATA	(NO) YES	Change Centralized Attendant Service options	basic-21
CCDO	(NO)	Consultation Connection Disconnect Option alternative treatment is not required	mpo-20
	YES	Consultation Connection Disconnect Option alternative treatment is required	
CCFWDN	x...x	Customer Call Forward DN. Maximum of 23 digits allowed (0-23) CCFWDN allows subscribers to forward their phones to a central answering service by dialing a FFC. CCFWDN activates the regular Call Forward All Calls function, but without having to specify the DN to which calls will be forwarded. Customer Call Forward is only applicable to 500-type sets.	basic-21

Prompt	Response	Comment	Pack/Rel
CCRS		Controlled Class of Service (CCOS) Restricted Service. This applies when CCRS is active. If CCRS is inactive, the set defaults to the TN class of service access restriction. Allowed access restrictions are:	ccos-7
	(UNR)	Unrestricted	
	CTD	Conditionally Toll Denied	
	CUN	Conditional Unrestricted	
	FR1	Fully Restricted class 1	
	FR2	Fully Restricted class 2	
	FRE	Fully Restricted	
	SRE	Semi-Restricted	
	TLD	Toll Denied	
		Prompted with Controlled Class of Service (CCOS) package 81.	
CCS_DATA	(NO) YES	Change Controlled Class of Service options	basic-21
CDPL	1-(10)	Flexible length of Vacant Number Routing (VNR) Coordinated Dialing Plan (CDP)	cdp-10
CDPR		Coordinated Dialing Plan Record option. CDPR appears with Coordinated Dialing Plan (CDP) package 59. Applies only to trunk routes with OPD = NO.	cdp-10
	(NO)	Replace the Distant Steering Code (DSC) or Trunk Steering Code (TSC) with the Access Code (ACOD). The format is: ACOD + concluding digits	
	YES	Insert ACOD ahead of DSC or TSC. The format is : ACOD + DSC or TSC + concluding digits	
CDR	(NO) YES	Change Call Detail Recording record Prompted with Call Detail Recording (CDR) package 4.	cdr-1
CDR_DATA	(NO) YES	Change CDR and Charge Account options	basic-21

# LD 15

Prompt	Response	Comment	Pack/Rel
CDTO	2-(14)	Control digit timeout in multiples of 2 seconds.	mpo-20
CFNA	1-(4)-15	Number of normal ringing cycles for Call Forward No Answer  If the Flexible Tones and Cadences (FTC) package 125 is equipped, this interval is tied to the number of cycles of NCAD ringing. Refer to 553-2711-180 Flexible Tone and Digit Switches.	basic-1
CFN0	1-(4)-15	Number of normal ringing cycles for CFNA, Option 0  CFNA has three ringing cycle options. This assigns the normal ringing cycles for Option 0. Refer to <i>Features and Services</i> (553-3001-306) for details concerning this feature.	uscr-19
CFN1	1-(4)-15	Number of normal ringing cycles for CFNA	uscr-19
CFN2	1-(4)-15	Number of normal ringing cycles for CFNA	uscr-19
CFTA	(NO) YES	Call Forward to Trunk Access code not allowed Call Forward to Trunk Access code allowed	optf-12
CHDN	x...x	CAS silent Hold DN  Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	casm-1
CHLN	(0)-23	Charge Account Number Length  Prompted with Charge Account (CHG) package 23	fca-1
CHMN	(1)-CHLN	Minimum number of digits for FCA code  The range is from 1 to CHLN, where CHLN = Charge account Number Length.	fca-1
CIS_ANI	(NO) YES	ANI option to allow the configuration of ANI entries for CIS ANI message.	cist-24

Prompt	Response	Comment	Pack/Rel
CIS_ENT		CAC conversion table to convert CIS CAC into MFC CAC	cist-24
	(0)-31	CAC conversion table entry to be created or modified	
	Xaa	CAC conversion table entry to be deleted	
	Xaa Xbb	CAC conversion table entries between aa and bb to be deleted.	
		For REQ=NEW, only default table 0 is configurable. An ENTRY can be deleted even if still configured on an incoming route.	
		For all subprompts, if 0 is configured, the value configured for non-tie trunks in the outgoing R2MFC table (LD 94) is used.	
CLASS_FMT			cnumb- 23
	(DN)	Send internal Directory Number to a CLASS set as the calling number.	
	LCL	Send Local Number to a CLASS set as the calling number.	
	NTN	Send National Number to a CLASS set as the calling number.	
CLDN	(NAP OVF NAP NAP)	Calls to LDN	basic 1
CLID	(NO)	Do not allow Calling Line Identification option	isdn-22
	YES	Allow Calling Line Identification option	
		Calling Line Identification does not require ISDN.	

# LD 15

Prompt	Response	Comment	Pack/Rel
CLS1		Class of Service	basic-1
	(UNR)	Unrestricted	
	CTD	Conditionally Toll Denied	
	CUN	Conditional Unrestricted	
	FR1	Fully Restricted class 1	
	FR2	Fully Restricted class 2	
	FRE	Fully Restricted	
	SRE	Semi-Restricted	
	TLD	Toll Denied	
CLS2		Class of Service	supp-16
	(UNR)	Unrestricted	
	CTD	Conditionally Toll Denied	
	CUN	Conditional Unrestricted	
	FR1	Fully Restricted class 1	
	FR2	Fully Restricted class 2	
	FRE	Fully Restricted	
	SRE	Semi-Restricted	
	TLD	Toll Denied	
CNAT	0-9999	CNI Attendant DN on outgoing Multifrequency Compelled Signaling (MFC) calls.	mfc-9
	X	To remove Prompted with Multifrequency Compelled Signaling (MFC) package 128	
CNCS	0-99	Controlled NCOS	ffc -21
		CNCS allows the user to select a controlled NCOS to be used when the set is locked. When a set is locked, the NCOS defined at this prompt is used as the set NCOS when a trunk call is made.	
		Precede entry with X to remove.	

Prompt	Response	Comment	Pack/Rel
CNDN		Customer Calling Number Identification on outgoing MFC calls. Prompted with Multifrequency Compelled Signaling (MFC) package 128	mfc-9
	0-9999	Customer CNI sent	
	0-99999999	Customer CNI not sent	
	X	Precede with X to remove	
CNFD	0-(1)-9, *, #	Control Digit for Conference	mpo-20
CNFFIELD	(NO) YES	Enable Conference Count Display Field.	basic- 23
CNF_NAME	(CONF) aaaa	Change Conferees Count Display Field Name. aaaa = 1 to 4 alphanumeric characters.	basic- 23
CNI		Calling Number Identification (R2MFC) Your CNI response will determine which field of the CDR record will contain the Calling Number Identification for this customer.	basic-22
	(DGTS)	CNI is recorded in the digits field	
	CLID	CNI of R2MFC is recorded in CLID field	
	NONE	CNI will not be recorded in CDR	
		CNI is prompted if : CDR = YES FCDR, CLID, and MFC packages are equipped FCDR = NEW in LD 17 CLID = YES in LD 17	
CNIP		Calling Number Identification Presentation	basic-22
	(YES)	Send Customer Calling Number Identification (CNDN) + Trunk ID (TKID) if Calling Line ID (CLID) = NO in LD 17	
	NO	Respond to Calling Number Identification (CNI) request with End-of-CNI R2MFC level 1 forward signal (ECNI)	
CNTC	x	Country Code for Succession 1000	basic-2

# LD 15

Prompt	Response	Comment	Pack/Rel
CNTP	(PDN)	Calling Number Type The Calling Line ID (CLID) feature displays the set's Prime DN	pri-12
	LDN	The CLID feature displays the customer's Listed Directory Number (LDN)  This determines the default Calling Line ID (CLID) Class of Service (CLS) for all sets except those configured differently in LD 10 and LD 11. Attendant consoles only have a Listed Directory Number (LDN).	
CONF	loop	Conference loop number	awu-10
CONF_DSP	(NO) YES	Change Conference Display configurations.	basic-23
CONG	(OVFL) BUSY	Congestion tone for all trunks busy condition Overflow tone for all trunks busy condition Busy tone	basic-1
CPAS	xxxx	Central Precedence answering station listed DN	basic-21
CPCI	(NO) YES	Called Party Control on Internal Call is not allowed for the customer Called Party Control on Internal Call is allowed for the customer CPCI package 310 is required.	cpci-22
CRDAY	(NO) YES	Call Redirection by Day	basic-24
CRHOL	NEW CHG OUT OUT ALL	Add holiday(s) Change holiday(s) Remove holiday(s) Deletes all holidays in the list	basic-24

Prompt	Response	Comment	Pack/Rel
CRT0	SH SM EH EM	<p>Alternate time option 0, denoting a time when the Alternate Redirection DN will be used. Where:</p> <p>SH SM = Start time EH EM = End time</p> <p>Both entries are in international time format and are entered as HH MM (hour = 00-23; minute = 00-59). The default value is 00 00 00 00. The default disables CRTOD for that alternate time option.</p>	basic-22
CRT1	SH SM EH EM	<p>Alternate time option 1, denoting a time when the Alternate Redirection DN will be used. See the prompt CRT0 for an explanation of the response format.</p>	basic-22
CRT2	SH SM EH EM	<p>Alternate time option 2, denoting a time when the Alternate Redirection DN will be used. See the prompt CRT0 for an explanation of the response format.</p>	basic-22
CRT3	SH SM EH EM	<p>Alternate time option 3, denoting a time when the Alternate Redirection DN will be used. See the prompt CRT0 for an explanation of the response format.</p>	basic-22
CRTOD	(NO) YES	<p>Call Redirection by Time Of Day</p> <p>Do not change CRTOD alternate time options</p> <p>Change CRTOD alternate time options</p>	basic-22
CTRC	(OVF NAP OVF NAP)	Restricted Call	basic-1
CTVN	(OVF OVF OVF ATN)	Call to Vacant Number	basic-1

# LD 15

Prompt	Response	Comment	Pack/Rel
CUST	0-99 0-31	Customer number for Large Systems For Small Systems and Succession 1000	basic-1
CWBZ	(NO) YES (NO) YES	Call Waiting Buzz First field-Provide two second buzz on exceeding upper CWCL or CWTM threshold. Second field-Buzz on first call entering queue.	basic-1
CWCL	(0)-255 (0)-255  (0)-1000 (0)-1000	Call Waiting Call Limit Lower and upper thresholds. The Call Waiting lamp starts flashing when number of calls in the queue exceeds the upper threshold. The lamp continues to flash until the number of calls in queue is less than the lower threshold. Enter 0 to disable this feature.	basic-1
CWTM	(0)-511 (0)-511	Lower and upper thresholds defined as a percentage of the active consoles when OPT = FACA.  When the FACA/FACD option is changed, a new value for CWCL must be set or the default values are used. The CWCL values for the tenant-level are set equal to the customer-level values. CWCL is also prompted in LD 93.	basic-1

Prompt	Response	Comment	Pack/Rel
CWUP	(NO) YES	Call Waiting queue Update Prompted with M2250 Attendant Console (DCON) package 140. The M2250 type consoles can be notified every time there is a change to the Call Waiting queue.	dcon-15
DACT_BUSY	(LIT) WINK FLSH DARK	Boss's Lamp status when BSFE is disabled and set is busy. LCD Lamp is on. LCD Lamp flash rate is 60 impulses per minute. LCD Lamp flash rate is 30 impulses per minute. LCD Lamp is off.	ffcsf-24
DACT_IDLE	(DARK) WINK LIT FLSH	Boss's Lamp status when BSFE is disabled and set is idle. LCD Lamp is off. LCD Lamp flash rate is 60 impulses per minute. LCD Lamp is on. LCD Lamp flash rate is 30 impulses per minute.	ffcsf-24
DAPC	(NO) YES	Dial Access Prefix on CLID table entry option	isdn-24
DASC	xxxx	Display Access Code Enter the access code which is to be placed on displays before Originating Line Identities (OLI) and Terminating Line Identities (TLI) are received from the ISDN. The default is no code, when creating a new data block. Prompted with Multi Language Wake Up (MLWU) package 206 and Integrated Digital Access (IDA) package 122.	mlwu-16
DATE	dd mm yyyy	Date of the holiday Where: dd = day mm = month yyyy = year (optional, if no year is entered the holiday is repeated every year.	basic-24

# LD 15

Prompt	Response	Comment	Pack/Rel
DAY	0-28	Day of month for printout. Where 0 = last day of month	supp-15
DAY0	n n n n n n n	Days for day option 0 for which alternate treatment is given. Where: n = 1 (Sunday) n = 2 (Monday) n = 3 (Tuesday) n = 4 (Wednesday) n = 5 (Thursday) n = 6 (Friday) n = 7 (Saturday)	basic-24
	ALL	Alternate treatment is to be given throughout the week	
	Xn	Precede the day number with X to remove	
	Xn Xn Xn	Multiple days may be removed by preceding each day number with X and separating with a space.	
DAY1	n n n n n n n	Days for day option 1 for which alternate treatment is given Where: n = 1 (Sunday) n = 2 (Monday) n = 3 (Tuesday) n = 4 (Wednesday) n = 5 (Thursday) n = 6 (Friday) n = 7 (Saturday)	basic-24
	ALL	Alternate treatment is to be given throughout the week	
	Xn	Precede the day number with X to remove	
	Xn Xn Xn	Multiple days may be removed by preceding each day number with X and separating with a space.	

Prompt	Response	Comment	Pack/Rel
DAY2	n n n n n n n	Days for day option 2 for which alternate treatment is given Where: n = 1 (Sunday) n = 2 (Monday) n = 3 (Tuesday) n = 4 (Wednesday) n = 5 (Thursday) n = 6 (Friday) n = 7 (Saturday)	basic-24
	ALL	Alternate treatment is to be given throughout the week	
	Xn	Precede the day number with X to remove	
	Xn Xn Xn	Multiple days may be removed by preceding each day number with X and separating with a space.	
DAY3	n n n n n n n	Days for day option 3 for which alternate treatment is given Where: n = 1 (Sunday) n = 2 (Monday) n = 3 (Tuesday) n = 4 (Wednesday) n = 5 (Thursday) n = 6 (Friday) n = 7 (Saturday)	basic-24
	ALL	Alternate treatment is to be given throughout the week	
	Xn	Precede the day number with X to remove	
	Xn Xn Xn	Multiple days may be removed by preceding each day number with X and separating with a space.	
DBRC	2-(60)-120	Duration Between Reminder Cadences for audible reminder of held call Odd entries are rounded up to a valid multiple of two seconds.	basic-14
DCMX	1-255	Digit Conversion Maximum number of tables The sum of the values for MAXT and DCMX cannot exceed 255 or MAXT + DCMX = 255.	idc-12

# LD 15

Prompt	Response	Comment	Pack/Rel
DFLT	(NO) YES	Default CAS will not be activated after a SYSLOAD. CAS will be activated after a SYSLOAD.	casr-1
DFLT	0-(3)-9  0-(6)-10	CIS value used when MFC CAC has not been received, or MFC CAC received is not in the MFC CAC list of this table.  CIS value used when CIC CAC has not been received, or MFC CAC received is not in the CIC CAC list of this table.	cist-24
DFLT_LANG	a...a	Default language for M3900 on Remote Office Where: a...a = (ENG), FRE, GER, DUT, SPA, ITA, NOR, SWE, DAN, POR, FIN, POL, CZE, HUN, JAP, RUS, LAT, or TUR.	ponw-25.4
DFNA	1-(4)-15	Number of Distinctive Ringing Forward No Answer cycles Prompted with Distinctive Ringing (DRNG) package 74.	drng-4
DFN0	1-(4)-15	Number of Distinctive Ringing cycles for CFNA, Option 0  CFNA has three ringing cycle options. This assigns the Distinctive Ringing cycles for Option 0. Refer to <i>Features and Services</i> (553-3001-306) for details concerning this feature	uscr-19
DFN1	1-(4)-15	Number of Distinctive Ringing cycles for CFNA, Option 1	uscr-19
DFN2	1-(4)-15	Number of Distinctive Ringing cycles for CFNA, Option 2	uscr-19

Prompt	Response	Comment	Pack/Rel
DFNR	(0)-15	<p>DID Forward No Answer Ring cycles</p> <p>Defines the Number of ringing cycles before a DID call is Slow Answer Recalled to the attendant console after the last stage of CFNA or hunt treatment has been completed (the maximum number of CFNA or hunt steps is two).</p> <p>If DFNR = 0, then DID CFNA enhancement is disabled. DID Call Forward No Answer is the Master Timer. Prompted if the FNAD prompt is not ATT or NO.</p>	ffc-16
DGRP	(0)-2046	<p>Maximum number of Dial Intercom Groups (DIG)</p> <p>Prompted with Dial Intercom (DI) package 21</p>	di-1
DIAL_PLAN	(UDP) CDP	<p>Dialing Plan used by the customer to communicate with the Mobility User Database (MUD) server</p> <p>Uniform Dialing Plan</p> <p>Coordinated Dialing Plan</p> <p>Be sure that the dialing plan is consistent on all Meridian 1 nodes on the network.</p>	mmsn-22
DIDN	(YES)  NO SRCH	<p>Precede the DN of the active DN key with the digits in HLCL</p> <p>Use digits in HLCL</p> <p>Find a DN key of the set from key 0 which has DIDN of a CLID entry set to YES</p>	isdn-22
DIDT	0-(14)-60 0-(14)-60 0-(14)-60	<p>Dial tone and Interdigit timeout for DTMF sets when International Supplementary Features (SUPP) package 131 is equipped.</p> <p>The 1st parameter is the time before first digit or the dial tone time. The 2nd parameter is the time between the first and second digits. The 3rd parameter is the time between digits after the second digit.</p> <p>Odd entries are rounded down to a valid multiple of two seconds.</p>	supp-9

# LD 15

Prompt	Response	Comment	Pack/Rel
	2-(14)-60	Dial tone and Interdigit timeout for DTMF sets when International Supplementary Features (SUPP) package 131 is not equipped.  Odd entries are rounded down to a valid multiple of two seconds.	
DIND	0-(30)-60 0-(30)-60 0-(30)-60	Dial tone and Interdigit timeout for non-DTMF sets when International Supplementary Features (SUPP) package 131 is equipped.  The 1st parameter is the time before first digit or the dial tone time. The 2nd parameter is the time between the first and second digits. The 3rd parameter is the time between digits after the second digit.  Odd entries are rounded down to a valid multiple of two seconds.	basic-10
	2-(30)-60	Dial tone and Interdigit timeout for non-DTMF sets when International Supplementary Features (SUPP) package 131 is not equipped.	
DISD	0-(1)-9, *, #	Control digit for Disconnect	mpo-20
DITI	(NO) YES	DID to TIE connections allowed  To connect external DID and internal network TIE trunks for the customer (which allows an external trunk to be transferred across an internal network TIE trunk), set DITI = YES.	supp-10
DLAT	(0)-120	Delayed Answer Timer.  Where 0 = no time limit. In seconds for internal calls. Call disconnected if not answered. Prompted with Operator Call Back (OPCB) package 126.	opcb-14
DLDN	(NO) YES	Departmental Listed Directory Numbers.  Prompted with Departmental Listed Directory Number (DLDN) package 76.	dldn-5

Prompt	Response	Comment	Pack/Rel
DLT		Direct Inward System Access (DISA) Lockout treatment	disa-1
	(OVF)	Overflow tone	
	ATN	Attendant	
	OFA	Overflow then attendant	
DMWM	(NO) YES	Enable the output of DPNSSI Message Waiting Indication Non Specified Information error messages (ERR0001, ERR0002, ERR0003).	dmwi- 23
DNDH	(NO) YES	Do Not Disturb Hunting allowed Prompted with Meridian Hospitality Voice Services (MHVS) package 179.	hvs-16
DNDL	(NO) YES	Do Not Disturb Lamp on 500/2500 telephones Prompted with Do Not Disturb Individual (DNDI) package 9.	ndi-10
DNDT		Do Not Disturb intercept Treatment	ndi-1
	(BST)	Busy Tone	
	ATT	Attendant	
	RAN	RAN trunk Prompted with Do Not Disturb Individual (DNDI) package 9	
DNLG	0-(4)-15	DN Length	
DTMF		End-to-End Signaling feedback tone	ees-19
	(NO)	Use the improved EES for single tone feedback	
	YES	Use the current EES for DTMF feedback tone	

# LD 15

Prompt	Response	Comment	Pack/Rel
ECC1		Enhanced Controlled Class of Service level 1 ECC1 is prompted with Enhanced Control Class of Service (ECCS) package 173. This access restriction applies when CCRS is active. When CCRS is inactive, the set reverts to the Access Restrictions defined in LD 10 or LD 11. Allowed access restrictions are:	eccs-15
	(CTD)	Conditionally Toll Denied	
	CUN	Conditional Unrestricted	
	FR1	Fully Restricted class 1	
	FR2	Fully Restricted class 2	
	FRE	Fully Restricted	
	SRE	Semi-Restricted	
	TLD	Toll Denied	
	UNR	Unrestricted	
ECC2		Enhanced Controlled Class of Service level 2 ECC2 is prompted with Enhanced Control Class of Service (ECCS) package 173. This access restriction applies when CCRS is active. When CCRS is inactive, the set reverts to the Access Restrictions defined in LD 10 or LD 11. Allowed access restrictions are:	eccs-15
	(CTD)	Conditionally Toll Denied	
	CUN	Conditional Unrestricted	
	FR1	Fully Restricted class 1	
	FR2	Fully Restricted class 2	
	FRE	Fully Restricted	
	SRE	Semi-Restricted	
	TLD	Toll Denied	
	UNR	Unrestricted	

Prompt	Response	Comment	Pack/Rel
ECDN	x...x	External Call DN DN used for intercept transfer when the FDN and Multi-Tenant are not on intercept position. The DN is used for intercept treatment for external calls. Up to 13 digits allowed.	icp-16
ECDR	(NO) YES	Print End-to-End Signaling digits in CDR record	ees-19
EESD	(NO) YES	End-to-End Signalling Digit Display No End-to-End Signalling Digit Display Display End-to-End Signalling Digits	ees-24
EEST	(NO) YES	End-to-End Signaling Tone to originating party No feedback tone to the originator Send feedback tone to originator When EEST = NO or when EEST = YES and DTMF = NO, <i>Improved</i> End-to-End Signaling is used. When EEST = YES and DTMF = YES, <i>Enhanced</i> End-to-End Signaling is used. EEST is prompted with End-to-End Signaling (EES) package 10.	ees-19
EFLL	(0)-8064	Efficiency Factor Loading Level Prompted with Network Attendant Services (NAS) package 159	nas-14
ELPL	1-15	Electronic Lock Password Length (number of digits)	basic-12
ENS	(NO) YES	Enhanced Night Service enabled Prompted with Enhanced Night Service (ENS) package 133.	ens-20
ENTRY	xx	CLID entry to be configured. CLID entries must be between 0 and the value entered at the SIZE prompt - 1. Precede entry or entries with X to delete. ENTRY is repeated until a <cr> is entered.	isdn-22

# LD 15

Prompt	Response	Comment	Pack/Rel
ESA_APDN	(YES) NO	Append the originating Directory Number after the Home Local Number for Emergency Services Access calls.	esa- 23 esa_clmp-23
ESA_HLCL	x..x	Home Local Number for Emergency Services Access calls.  If the system is Flexible Numbering Plan (FNP) packaged, then up to 12 digits are accepted. If the system is not FNP packaged, then up to 7 digits are accepted. 'X' deletes the data.	esa- 23
ESA_INHN	(NO) YES	Insert Home National Number in front of Home Local Number for Emergency Services Access calls.	esa- 23
EXTFIELD	(NO) YES	Enable Total External Conferees Count display field.	basic- 23
EXT_NAME	(E) aaaa	Change Total External Conferees Count field name. aaaa = 1 to 4 alphanumeric characters.	basic- 23
EXTT	(NO) YES	Prevent unconditional external Trunk to Trunk transfer. Allow unconditional external Trunk to Trunk transfer.	basic-22
FCAF	(NO) YES	Forced Charge Account active Prompted with Forced Charge Account (FCA) package 52	fca-1
FCNC	0-99	FCA Network Class of Service	fca-1
FCR_DATA	(NO) YES	Change New Flexible Code Restriction options	basic-21

Prompt	Response	Comment	Pack/Rel
FCWD	(0)-126	Forwarded No Answer Call Waiting DID feature. FCWD determines the number of seconds a DID call should wait on a set before being forwarded to the attendant  If (0) is chosen, the call is not forwarded to attendant. Valid entries are even numbers between 0-126, odd numbers are rounded down.  Prompted with French Type Approval (FRTA) package 197	frta-15
FFC_DATA	(NO) YES	Change Flexible Feature Code options	basic-21
FFCS	(NO) YES	Change Flexible Feature Code end-of-dialing indicator	ffc-15
FLEN	1-(16)	Flexible length of digits expected	
FLSH	xxx	Switchhook Flash timing. (format when International Supplementary Features (SUPP) package 131 is not equipped)	basic-1
	xxx yyy	Minimum and maximum switchhook flash time in milliseconds (format when International Supplementary Features (SUPP) package 131 is equipped)  Where: xxx = 20-(45)-768; yyy = xxx-(896)-1500  The timing specified will be used for EPE equipment only. XPE equipment will use the FLSH specified in LD 97.	
FMOP	(NO) YES	Flexible Misoperation options are not required Flexible Misoperation options are required	mpo-20

# LD 15

Prompt	Response	Comment	Pack/Rel
FNAD	(HNT) ATT FDN NO	Call Forward No Answer treatment for DID calls Hunt DN, defined in telephone data block CFNA to attendant Flexible CFNA DN, defined in telephone data block CFNA not allowed	basic-2
FNAL	(HNT) ATT FDN NO	Call Forward No Answer treatment for all other calls including trunk calls marked as internal.  An internal trunk call is a trunk call in which LD 16 prompt RCLS = INT. If FNAL = HNT, no answer calls are forwarded to the Hunt DN.  Hunt DN (defined in telephone data block) CFNA to attendant Flexible CFNA DN (defined in telephone data block) CFNA not allowed	basic-10
FNAT	(HNT) ATT FDN NO	Call Forward No Answer treatment for external Trunk non-DID calls.  An external call is defined as a trunk call in which LD 16 prompt RCLS = EXT. If FNAT = FDN or HNT, then Call Forward by Call Type (CFCT) handles the call.  Hunt DN, defined in telephone data block CFNA to attendant Flexible CFNA DN, defined in telephone data block CFNA not allowed	basic-10
FNP	(YES) NO	Enable Flexible Numbering Plan for customer.	fnp-23
FOPT	0-(14)-30	Flexible Orbiting Prevention Timer  The number of seconds in two second intervals that CFW should be suspended on a set that has just forwarded a call off-node. Odd entries are rounded up to the next valid entry. A response of 0 disables FOPT.	nas-20

Prompt	Response	Comment	Pack/Rel
FRAN	0-511 X	First RAN number for first PCR threshold To disable the RAN	supp-16
FRRT	0-511	First Recorded Announcement or RAN Route for Recorded Overflow Announcement (ROA). Prompted with Recorded Overflow Announcement (ROA) package 36 and OPT = ROI. Enter X to remove	roa-14
FRT	0-(20)-2044	First RAN Time seconds before first RAN given.	frt-1
FTR_DATA	(NO) YES	Change Features and options	basic-21
FTOP		Flexible Trunk to Trunk Options.	basic-23
	(FRES)	Flexible Trunk to Trunk Connections Restricted. FTT feature is inactive.	
	TBFT	Trunk Barring Flexible Trunk to Trunk Connections. FTT adds new restrictions on connections not barred by TBAR	
	FTTB	Flexible Trunk to Trunk connections Trunk Barring. FTT lifts TBAR restrictions for routes barred by TBAR. FTT cannot add any new restrictions for non-barred routes.	
	FTLY	Flexible Trunk to Trunk Connections Only. All set based trunk to trunk connections for Transfer and Conference are controlled by FTT only.	

# LD 15

Prompt	Response	Comment	Pack/Rel
GPXX	x	<p>Unsolicited status events 1, 2, 3, 4, 5 or 6</p> <p>Unsolicited status events are used with Meridian Link applications. Enter the message to be sent to the host computer for telephones in the group, where:</p> <ul style="list-style-type: none"><li>0 = No status messages monitored</li><li>1 = On-Hook</li><li>2 = Off-Hook</li><li>3 = Ringing</li><li>4 = Active</li><li>5 = Disconnect</li><li>6 = Unringing</li></ul> <p>Precede the value with an X to remove a status from the Group report.</p> <p>The prompts GP02 through GP15 appear when Meridian Link package is equipped. Default values are in Group 0 and Group 1:</p> <ul style="list-style-type: none"><li>Group 0 = sends no messages</li><li>Group 1 = sends all messages</li></ul> <p>Groups 0 and 1 cannot be entered or changed here, but can be entered in response to the IAPG prompt in LD 10 and LD 11.</p>	mlm-19

Prompt	Response	Comment	Pack/Rel
GP02	n n n n n	<p>Group 2 status events</p> <p>The following comment applies to prompts GP03 through GP15:</p> <p>Unsolicited status events are used with Meridian Link applications. Enter the message to be sent to the host computer for telephones in the group, where:</p> <ul style="list-style-type: none"> <li>0 = No status messages monitored</li> <li>1 = On-Hook</li> <li>2 = Off-Hook</li> <li>3 = Ringing</li> <li>4 = Active</li> <li>5 = Disconnect</li> <li>6 = Unringing</li> </ul> <p>Precede the value with an X to remove a status from the Group report.</p> <p>Default values are in Group 0 and Group 1:</p> <ul style="list-style-type: none"> <li>Group 0 sends no messages</li> <li>Group 1 sends all messages</li> </ul> <p>Groups 0 and 1 cannot be entered or changed here, but can be entered in response to the IAPG prompt in LD 10 and LD 11.</p> <p>The prompt GP02 through GP15 are presented only with Integrated Services Digital Network Application Module Link for 3rd Party Vendors (IAP3P) package 153 equipped.</p>	iap3p-13
GP03	n n n n n	Group 3 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
GP04	n n n n n	Group 4 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
GP05	n n n n n	Group 5 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
GP06	n n n n n	Group 6 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
GP07	n n n n n	Group 7 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13

# LD 15

Prompt	Response	Comment	Pack/Rel
GP08	n n n n n	Group 8 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
GP09	n n n n n	Group 9 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
GP10	n n n n n	Group 10 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
GP11	n n n n n	Group 11 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
GP12	n n n n n	Group 12 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
GP13	n n n n n	Group 13 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
GP14	n n n n n	Group 14 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
GP15	n n n n n	Group 15 status events 1, 2, 3, 4, 5 or 6 assigned	iap3p-13
HCC		Held Call Clearing, prompted with International Supplementary Features (SUPP) package 131.	supp-9
	(NO)	feature not activated	
	YES	feature activated	
	XFER	feature activated and set to transfer	
HDOPT		Off-Hook Alarm Security Half Disconnect Options	basic-24
	(0)	No Off-Hook Alarm Security Half Disconnect treatment	
	1-10	Number of Off-Hook Alarm Security Half Disconnect treatments	
	CONT	Continuous Off-Hook Alarm Security Half Disconnect treatment	
HDTM	1-(30)-600	Off-Hook Alarm Security Half Disconnect Timer in seconds	basic-24
HLCL	0-99 ... 99	Local code for home local number or Listed directory number (1-12 digits). Precede with X to remove.	isdn-22

Prompt	Response	Comment	Pack/Rel
HLOC	100-99999999	Home Location Code (ESN) as defined in LD 90 Up to 7 digits with extended code. Prompted when ISDN=YES, or with Digital Private Network Signaling System 1 (DPNSS) package 123.	pri-12
HMDN	xxxx	Home DN	basic-21
HMTL	(YES) NO	Hotel/Motel environment	hosp-21
HNPA	200-999	Home Number Plan Area code defined in LD 90 Prompted with Multi Language Wake Up (MLWU) package 206. Not prompted with International Primary Rate Access (IPRA) package 202.	nanp-19
HNTN	0-999999	National code for home national number (1-6 digits). Precede with X to remove.	isdn-22
HNXX	100-9999	Prefix for Central Office defined in LD 90. Prompted with Multi Language Wake Up (MLWU) package 206. Not prompted with International Primary Rate Access (IPRA) package 202. Allow for digit insertion between HNXX and the DN. If HNXX is 4 digits long, only the last 3 digits of the DN are displayed in the Calling Line ID CLID.	mlwu-12
HOL_OPT	0-3 ALL X0-3	Holiday redirection option for which the date applies Date applies to all holiday options Precede the option number with X to remove the date from that option list	basic-24
HOSP	(NO) YES	Hospitality Management or Hospitality allowed Prompted with HOSP package 166.	hosp-21

# LD 15

Prompt	Response	Comment	Pack/Rel
HOUR	hh hh hh	Hour of day for printout Two printouts per day allowed when SCDL = 1	
HRCL	0-512	Hold Recall timer	casm-1
HSP_DATA	(NO) YES	Change Hospitality Management options	basic-21
HWTT	0-(300)-600	Length of Howler Tone in seconds. Prompted with Multi Language Wake Up (MLWU) package 206, and Operator Callback (OPCB) package 126. Where: 0 = continuous tone	mlwu-12
ICCR	(NO) YES	Intercept position Canceling Reply is sent if transfer is canceled from Intercept computer	icp-10
ICDN	xxxx	Internal Call DN  DN used for intercept transfer when the FDN and Multi-Tenant are not on intercept position. The DN is used for intercept treatment for internal calls. Up to 13 digits allowed.	icp-16
ICDL	3-(4)-7	ICP DN Length Length of DN to and from the ICP computer.	icp-10
ICI	x aaa  x CAy x CFB x CFN x DF0 x DL0	Attendant Incoming Call Indicators  Where: x = 0-9 if OPT = IC1, or x = 0-19 if OPT = IC2. Where: aaa = ICI function name. Multiple responses can be entered for the same key.  ICI number, Station Category Indication priority level, (where y = 1-7) ICI number, Call Forward Busy ICI number, Call Forward No Answer ICI number, dial 0 fully restricted ICI number, dial 0	basic-20

Prompt	Response	Comment	Pack/Rel
	xx IADN	xx = ICI key number (0 - 19) ICI key for individual attendant DN.	basic- 23
	x IAT	ICI number, Inter-Attendant call	
	x IEN	ICI number, Idle Extension Notification	
	x INT	ICI number, Intercept	
	x LCT	ICI number, lockout intercept	
	x LD0	ICI number, listed DN0	
	x LD1	ICI number, listed DN1	
	x LD2	ICI number, listed DN2	
	x LD3	ICI number, listed DN3	
	x LD4	ICI number, listed DN4	
	x LD5	ICI number, listed DN5	
	x MTR	ICI number, Meter Recall	
	x MWC	ICI number, Message Waiting Calls	
	x NCO	ICI number, Network CO trunk	
	x NDID	ICI number, Network DID trunk	
	x NFEX	ICI number, Network FEX trunk	
	x NTIE	ICI number, Network TIE trunk	
	x NUL	ICI number, remove ICI appearances	
	x NWAT	ICI number, Network WAT trunk	
	x RDI	ICI number, RDI intercept	
	x RLL	ICI number, Recall	
	x Ryyy Ryyy	ICI number, one or more Route numbers	
	x TRK	ICI number, Trunk types and local route numbers	
ICMM	0-9	Message number shown when the transfer is caused by a maintenance program	icp-14

# LD 15

Prompt	Response	Comment	Pack/Rel
ICP	(NO) YES	Intercept Computer available Prompted with Intercept Computer Interface (ICP) package 143. Must be defined in LD 17.	icp-10
ICP_DATA	(NO) YES	Change Intercept Treatment options	basic-21
ICPD	(0)-9	ICP Padding Digit Padding digit for DNs shorter than specified in ICDL.	icp-10
ICPR	0-<nipn>	ICP Printer number. Prompted if ICPS = COM.	icp-10
ICPS	(CIR) COM	ICP Printer Search Circular search Common printer for all consoles Type of Intercept Computer printer search, done when more than one console is used.	icp-10
ICTD	(NO) YES	Intercept Computer Terminal Dial from directory This prompt allows an intercept position of attendant type to dial an extension DN from the Intercept Computer Terminal.	icp-10
ICWN	(0)-511	Intercept Computer Owner Prompted with Multi-Tenant Service (TENS) package 86. Tenant that owns the intercept computer.	tens-9
IDBZ	(NO) YES	Enable Individual Attendant DN Buzing.	basic- 23
IDCA	(NO) YES	Incoming DID Digit Conversion Allowed NFCR must = YES before IDCA can = YES. Prompted with Incoming Digit Conversion (IDC) package 113	idc-12

Prompt	Response	Comment	Pack/Rel
IDEF		Internal/external definition Network wide INY/EXT definition for Call Forward/Hunt by Call Type, Internal Call Forward, and Break In Indication Prevention.	basic-22
	(NO)	A call will not be treated as internal or external according to the network wide definition of internal and external calls. When IDEF = NO, information that could have been entered previously at the IDEF prompt in LD 16 will not influence call treatment.	
	YES	A call will be treated as internal or external according to the network wide definition of internal and external calls. Changing IDEF to NO and then back to YES will not reset the data entered in LD 16.	
IDR	0-511 X	Identification Error RAN number To disable the RAN	supp-16
IFLS	(NO) YES	Allow switchhook flash signal from 500/2500 sets Ignore switchhook flash signal from 500/2500 sets If YES then sets require ground buttons.	mpo-20
IMA	(NO) YES	Integrated Messaging System enabled Prompted when OPT=MCI	ims-1
IMPH	(NO) YES	CDR for Incoming Packet data call	mph-19
IMS	(NO) YES	Change Integrated Messaging System features Prompted with Integrated Message System (IMS) package 35.	ims-1
IMS_DATA	(NO) YES	Change Integrated Message Service options	basic-21

# LD 15

Prompt	Response	Comment	Pack/Rel
INT	(NO) YES	Internal Malicious Call Trace Alarm If the alarm is to be rung when MCT is activated against internal calls ALRM = YES and INT = YES.	emct-20
INTFIELD	(NO) YES	Enable Internal Conferees Count display field.	basic- 23
INTL	0-9999	Country code (1-4 digits). Precede with X to remove.	isdn-22
INTC	xxx	International Access Code for Succession 1000	basic-2
INT_DATA	(NO) YES	Change Intercept Treatment options	basic-21
INT_NAME	(l) aaaa	Change Internal Conferees Count display field name. aaaa = 1 to 4 alphanumeric characters.	basic- 23
INTR	(NO) YES	Change Intercept Treatment  Intercept treatments determine the action performed when a user makes an invalid call. Each intercept prompt requires four entries representing the type call:  first entry = station/DISA second entry = attendant extended third entry = TIE trunk fourth entry = CCSA/DID trunk  One of the following responses is required for each entry:  ATN = Intercept to Attendant BSY = Busy Tone NAP = Not Applicable OVF = Overflow Tone RAN = Intercept to Recorded Announcement SRC1-SRC8 = Announcement Source Channel  The defaults are shown for each Intercept prompt. If RAN is specified, you are prompted for the RAN route number.	basic-1

Prompt	Response	Comment	Pack/Rel
IRFP	x....x	Internal Attendant Remote Call Forward Password The password length is 1-8 digits. The password is numeric only.	arfw-20
IRFR	(NO) YES	Internal Attendant Remote Call Forward Password Required	arfw-20
IRNG	(NO) YES	Intercom Ring Distinctive Ringing for Dial Intercom	drng-4
ISDN	(NO) YES	Integrated Services Digital Network allowed for customer  Prompted when ISDN signaling package 145 is equipped and either the Integrated Service Digital Network BRI Trunk Access (BRIT) package 233 is equipped or at least one PRA link is configured.	isdn-12
ITH1	1-255	Visual Indication Threshold 1 $TH1 \leq \text{calls in queue} \leq ITH2$	bacd-8
ITH2	1-255	Visual Indication Threshold 2 $ITH2 \leq \text{calls in queue} \leq ITH3$	bacd-8
ITH3	1-255	Visual Indication Threshold 3 calls in queue > ITH3	bacd-8
LA11	0-511	Primary RAN route for Language 1 Prompted with Multi-Language Wake Up (MLWU) package 206.	mlwu-16
LA12	0-511	Secondary RAN route for Language 1	mlwu-16
LA21	0-511	Primary RAN route for Language 2	mlwu-16

# LD 15

Prompt	Response	Comment	Pack/Rel
LA22	0-511	Secondary RAN route for Language 2	mlwu-16
LA31	0-511	Primary RAN route for Language 3	mlwu-16
LA32	0-511	Secondary RAN route for Language 3	mlwu-16
LA41	0-511	Primary RAN route for Language 4	mlwu-16
LA42	0-511	Secondary RAN route for Language 4	mlwu-16
LA51	0-511	Primary RAN route for Language 5	mlwu-16
LA52	0-511	Secondary RAN route for Language 5	mlwu-16
LADN	x...x	Local Attendant Directory Number This must be different from the DN entered for ATDN. Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	casr-1
LCKT	(BSY BSY BSY BSY)	Call to a lockout set	isdn-15
LDA0	1-63 ALL	Attendant consoles associated with LDN0 Allow LDN0 on all attendants. Precede X to remove.	basic-5
LDA1	1-63 ALL	Attendant consoles associated with LDN1 Allow LDN1 on all attendants. Precede with X to remove.	basic-5
7LDA2	1-63 ALL	Attendant consoles associated with LDN2 Allow LDN2 on all attendants. Precede X to remove.	basic-5
LDA3	1-63 ALL	Attendant consoles associated with LDN3 Allow LDN3 on all attendants. Precede X to remove.	basic-5

Prompt	Response	Comment	Pack/Rel
LDA4	1-63 ALL	Attendant consoles associated with LDN4 Attendant consoles associated with LDN4	nldn-20
LDA5	1-63 ALL	Attendant console associated with LDN5 Attendant console associated with LDN5	nldn-20
LDBZ	n n n n n n ALL	Listed Directory Number Buzzing groups 0,1,2,3,4, or 5.  The Departmental Listed Directory Number groups which should be buzzed when a Listed Directory Number/Code Blue call is in the attendant queue. Precede with 'X' to remove.	basic-23
LDN_DATA	(NO) YES	Change Departmental Listed Directory Numbers	basic-21
LDN0	x...x	Listed Directory Number 0  Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove an entry.  LDN0 must be defined for ISDN PRI DID service. The length of LDN0 determines the number of trailing digits translated as the dialed DN on PRI DID routes.	basic-1
LDN1	x...x	Listed DN 1  Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove an entry.	basic-1
LDN2	x...x	Listed DN 2  Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove an entry.	basic-1

# LD 15

Prompt	Response	Comment	Pack/Rel
LDN3	x...x	Listed DN 3 Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove an entry.	basic-1
LDN4	x...x	Listed DN 4 Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove an entry.	nldn-20
LDN5	x...x	Listed DN 5 Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove an entry.	nldn-20
LDNT	(NO) YES	Listed Directory Number Tone Special tone to CAS main attendant when presented with LDN calls.	casr-12
LDTT	2-(6)-30	Line disconnect tone timer for 500/2500 telephones in seconds	basic-17
LEC	0-99..99 X	Local Exchange Code, 1 to 15 digits. Remove LEC	
LEND	(NO) YES	List Entry Number Delimiter A delimiter (*) is neither required nor allowed between the list entry number and telephone number A delimiter (*) is required between the list entry number and telephone number. LEND is prompted with packages scc-1 or scc-34	ssc-22

Prompt	Response	Comment	Pack/Rel
LFFD	x00..x00	First DN of lamp field array for ILF.  The system shows the status of the next 150 consecutive DNs. Last two digits of first DN must be 00. First DN must start on even 100 (e. g., 3400 is acceptable, but 3450 is not).  Precede with X to remove. Prompted when OPT = ILF.	basic-1
LFTN	l s c u	Lamp Field array Terminal Number  LFTN is prompted again for a second lamp field array. For Supervisory Console, when assigning lamp field array to show Attendant status, enter the secondary TN of the console.  To remove the second LFTN, enter "0". To remove both LFTNs, enter XLF in response to prompt OPT. Prompted when OPT = ILF. Not allowed for 2000/3000 series telephones.	basic-1
	c u	For Small System	
LINK	(NO) YES	ACD DNIS Link option. Prompted if OPT = DNI.	dnis-10
LLT	(OVF) ATN OFA	Flexible Line Lockout Treatment Overflow tone Attendant Overflow, then Attendant	basic-4
LOCL	1-(10)	Flexible length of Vacant Number Routing (VNR) Location digits (LOC). Enter the maximum number of LOC digits expected by VNR.	fnp-14

# LD 15

Prompt	Response	Comment	Pack/Rel
LSC	1-9999999	<p>Local Steering Code. LSC can be one to seven digits.</p> <p>LSCs are required if the CDP DNs are longer than the local PDNs. The CLID sent for a CDP call is composed of the LSC defined in LD 15 plus the PDN of the calling set.</p> <p>Various ISDN network features depend on the CLID as the return address for sending feature control messages. Multiple LSCs may be defined in LD 87 for CDP but only one LSC can be defined here for the CLID.</p> <p>The LSC prompt appears only if the user has a five or six digit dialing plan, or if the DPNSS software package is equipped. LSC is prompted here if ISDN = NO, otherwise LSC is a sub-prompt of ISDN.</p> <p>Precede with X to remove</p>	cdp-12
MAIN	(NO) YES	CAS Main	casm-1
MATT	(NO) YES	<p>Consoles used as Message Center</p> <p>Prompted with Message Waiting Center (MWC) package 46 and OPT = MCI.</p>	mwc-1
MAXT	1-255	<p>Maximum number of NFCR translation tables</p> <p>Once defined a lower value cannot be entered for MAXT. The sum of the values for MAXT and DCMX cannot exceed 255 or <math>MAXT + DCMX \leq 255</math> per customer.</p>	nfc-2
MBG	(0)-65535	<p>Multi-location Business Group. Where:</p> <ul style="list-style-type: none"><li>0 = no indication</li><li>1 = reserved for public network</li><li>2-65535 = Business Group Identifiers</li></ul> <p>This parameter is used to define the Multi-location Business Group. It is not currently used by the MSL-1, but is added for interfacing with systems that require it.</p>	tens-16

Prompt	Response	Comment	Pack/Rel
MBNR	(OVF OVF OVF ATN)	Maintenance Busy Numbers	basic-1
	MAIL MAIL MAIL MAIL	Mail intercept treatment configuration	sipe-25
MCDC	(NO) YES	Malicious Call DN/CLID printing allowed	mct-10
MCLR	(NO) YES	Meter Clear after printing	supp-15
MCR	(NO) YES	Mini-CDR Equipped	mcdr-20
MCRT	xxxx	Malicious Call Trace Recorder route number as defined in LD 16.	emct-20
MDID	(NO) YES	No Answer DID calls routed to Message Center Prompted with Message Waiting Center (MWC) package 46 and OPT = MCI.	mwc-1
MFC_ENT		CAC conversion table to convert MFC CAC into CIS CAC	
	(0)-31	CAC conversion table entry to be created or modified	
	Xaa	CAC conversion table entry to be deleted	
	Xaa Xbb	CAC conversion table entries between aa and bb to be deleted.	
	<CR>	Exit MFC CAC conversion table, gives CIS_ENT prompt. This prompt is repeated until <CR> is entered as response. For REQ=NEW, only default table 0 is configurable. An ENTRY can be deleted even if still configured on an incoming route.	

# LD 15

Prompt	Response	Comment	Pack/Rel
MFCG	(OVF OVF OVF ATN)	MFC Congestion	opcb-14
MFID	a	Manufacturer Identifier. a = any alpha character  'X' followed by the Manufacturer Identifier of the Message Waiting Indication Non Specified Information table to delete.  'XALL' to remove all the existing Message Waiting Indication Non Specified Information tables.	dmwi- 23
MFVN	(OVF OVF OVF ATN)	MFC Call to Vacant Number	opcb-14
MFVO	(OVF OVF OVF ATN)	MFC Call to Vacant Office	opcb-14
MHLD	(NO) YES	Manual Hold after inquiry is not required Manual Hold after inquiry is required	mpo-20
MMSN	(NO) YES	Mobility Multi-Site Networking Node Do not allow Mobility Multi-Site Networking node Allow Mobility Multi-Site Networking node MMSN is prompted if MMSN package 314 is equipped.	mmsn-22
MLDN	<MAIL DN>	mail DN	sipe-25
MLPPSD	xxxxxx	Default MLPP service domain used when no value is entered for the MLPPSD prompt in Overlay 87.  Where:  xxxxxx = six hexadecimal characters in the range (000000 to FFFFFFFF) used to signify a 24 bit binary integer. Default is (000000).	atvn-25.47

Prompt	Response	Comment	Pack/Rel
MPH	(NO) YES	CDR for Meridian Packet Handler This is the Call Detail Records for an incoming packet data call from the Public Switched Packet Data Network to the Meridian Packet Handler	mph-19
MPO_DATA	(NO) YES	Change Multi Party Options	basic-21
MPOP	(NO) YES	Multi-Party Operations Do not define certain multi-party options Define certain multi-party options Prompted with Multi-Party Operations (MPO) package 141.	mpo-20
MSCD	(NO) YES	Mandatory Speed Call Delimiter End of dial speed call delimiter is optional A delimiter is required to store the number. A confirmation tone is given if this option is configured. MSCD is prompted with package scc-1.	ssc-22
MSG1	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)	basic-25.4
MSG2	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)	basic-25.4
MSG3	a...a	Set-to-Set Message Where: a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)	basic-25.4

# LD 15

Prompt	Response	Comment	Pack/Rel
MSG4	a...a	Set-to-Set Message Where:  a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)	basic-25.4
MSG5	a...a	Set-to-Set Message Where:  a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)	basic-25.4
MSG6	a...a	Set-to-Set Message Where:  a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)	basic-25.4
MSG7	a...a	Set-to-Set Message Where:  a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)	basic-25.4
MSG8	a...a	Set-to-Set Message Where:  a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)	basic-25.4
MSG9	a...a	Set-to-Set Message Where:  a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)	basic-25.4

Prompt	Response	Comment	Pack/Rel
MSG10	a...a	Set-to-Set Message Where:  a...a = <CR> keeps current message a...a = <text string> is the new message to be displayed (up to 24 characters)	basic-25.4
MSSC	a	a = any alphanumeric character  Manufacturer-specific service character for Message Waiting Notification.	dmwi- 23
MTAR	(NO) YES	Disable Meridian Mail Trunk Access Restriction Enable Meridian Mail Trunk Access Restriction MTAR is prompted if OPT = MCI and Message Center (MWC) package 46 is equipped.	mwc-22
MUD_DN	x...x	Mobility User Database (MUD) Server DN  This entry can be up to 7 digits. Er the MUD Server DN if this Meridian 1 node runs the MUD server. MUD_DN is prompted if MUD_SRVR = YES.	mmsn-22
MUD_SRVR	(NO) YES	Mobility User Database (MUD) Server Do not allow MUD Server Allow MUD Server MUD_SRVR is prompted is MMSN = YES.	mmsn-22
MURT	0-511  X	Music Route Prompted if WAIT = MUS.  To remove.	mus-1
MUS	(NO) YES	Music for Sets Prompted with Enhanced Music (EMUS) package 119.	emus-12
MUSR	(0)-511	Music Route for Sets  The default is route "0" which is not normally a music route. Enter X to remove. Prompted if MUS = YES.	emus-12

# LD 15

Prompt	Response	Comment	Pack/Rel
MWFB	(NO) YES	DID calls to busy telephones routed to Message Center Prompted with Message Waiting Center (MWC) package 46 and when OPT = MCI.	mwc-1
MWNS	(NO) YES	Message Waiting Indication DPNSSI Non Specified Information string to recognize.	dmwi- 23
NAS_ ACTV	(YES) NO	Network Attendant Service routing Activated	nas-20
NAS_ ATCL	(YES) NO	Network Attendant Service Attendant Control allowed	nas-20
NATC	x	National Access Code for Succession 1000	basic-2
NAUT	YES	Network Authorization Code prompt is given for every leg of a conference.	naut-1
	(NO)	Network Authorization Code prompt is given for first leg of a conference.	
NBLK	(OVF OVF OVF ATN)	NARS/BARS blocked calls	esn-1
NCOS	(0)-99	Network Class of Service for all Attendant consoles in this customer. Prompted with Network Class of Service (NCOS) package 32.	ncos-1
NCS1	(0)-99	Network Class of Service	ncos-1
NCS2	(0)-99	Network Class of Service	ncos-1

Prompt	Response	Comment	Pack/Rel
NDID	(NO) YES	No Answer non-DID calls routed to Message Center Prompted with Message Waiting Center (MWC) package 46 and when OPT = MCI.	mwc-1
NET_DATA	(NO) YES	Change ISDN and ESN networking options	basic-21
NFCR	(NO) YES	New Flexible Code Restriction Do not enable New Flexible Code Restriction Enable New Flexible Code Restriction To build an IDC table in LD 49, NFCR and IDCA must be set to YES. NFCR is prompted with New Flexible Code Restriction (NFCR) package 49.	nfc-1
NFNA	(0)-63	Night Forward No Answer ring cycles The number of times a DID/DOD and CO trunk call will ring a set before being disconnected during Night Service. Prompted if OPT = DNCA.	afna-14
NFNS	(0)-504	Night Forward No Answer Seconds If a value is entered for this prompt all outgoing CO/DOD trunk calls in a waiting state, and all incoming CO/DID trunk calls in the answered state will be disconnected after the time in seconds expires as entered in this prompt. The entered value must be a multiple of 8. Prompted if OPT = DNCS.	afna-14
NINV	(OVF OVF OVF ATN)	Invalid NARS/BARS call	esn-1
NIPN	2-(8)	Number of Intercept Positions that can be configured	icp-14
NIT	2-(8)	Network Alternate Route Selection (NARS) Interdigit Timer	
NIT_DATA	(NO) YES	Change Night Service options	basic-21

# LD 15

Prompt	Response	Comment	Pack/Rel
NIT1	x...x	First Night Service DN by time of day DN can be defined as a PLDN Up to four night service DNs can be defined. The time of day is specified by the prompts TIM1 to TIM4. A Group Hunt pilot DN can be entered. Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	basic-12
NIT2	x...x	Second Night Service DN by time of day DN can be defined as a PLDN	basic-12
NIT3	x...x	Third Night Service DN by time of day DN can be defined as a PLDN	basic-12
NIT4	x...x	Fourth Night Service DN by time of day DN can be defined as a PLDN	basic-12
NIT5	x...x	Network Alternate Route Selection Interdigit Timer	fnp-20
NITR	(OVF OVF OVF ATN)	NARS/BARS invalid translation	esn-1
NNT	0-253	Night Number Table Speed Call List number designated to be used as the Night Number Table	ens-20
NOTI	(NO) YES	Non Specified Information string for Message Waiting Notification.	dmwi- 23

Prompt	Response	Comment	Pack/Rel
NPI	E163 E164 NATL PRIV TELX UNKN X121	Numbering Plan based on E163 Numbering Plan based on E164 National Private Telex Unknown Data X121	isdn-24
NRES	(OVF OVF OVF ATN)	NARS/BARS calls which are restricted by Supplemental Digit Restriction (SDRR) intercept treatment. See prompt INTR for details.	esn-1
NRWU	2-(5)	Number of Rings for Wake Up before recall to attendant	awu-10
NSCP	(NO) YES	Network Station Camp-On to sets on this node allowed	sco-20
NSO	0-9	Night Service Option number	ens-20
NWT	(NO) YES	Night Call Waiting Tone enabled	ens-20
OAS_DATA	(NO) YES	Change Off-Hook Alarm Security options	basic-21
OCB1	(0)-[MAXT-1]  255	Outgoing Call Barring level 1 NFCR tree number to be used for OCB level 1. You may enter any digit between zero and your response to the MAXT prompt minus one. The default entry to OCB1 is zero (0). 255 is a special entry which disallows this level.	basic-21
OCB2	(0)-[MAXT-1]	Outgoing Call Barring level 2 NFCR tree number to be used for OCB level 2. You may enter any digit between zero and your response to the MAXT prompt minus one. The default entry to OCB2 is zero (0).	basic-21

# LD 15

Prompt	Response	Comment	Pack/Rel
	255	255 is a special entry which disallows this level.	
OCB3	(0)-[MAXT-1]	Outgoing Call Barring level 3 NFCR tree number to be used for OCB level 3. You may enter any digit between zero and your response to the MAXT prompt minus one. The default entry to OCB3 is zero (0).	basic-21
	255	255 is a special entry which disallows this level.	
OCLI	(NO)	NO manipulation is done on outgoing CLID for calls forwarded to EuroISDN link.	basic-23
	EXT	Last forwarding DN is sent as CLID information for incoming UIPE DID or CO calls landing on G/W node and forwarded back to this link.	
	ALL	The scenario described above still applies. Moreover, last forwarding DN is sent as CLID for internal calls on ISDN tie except DPNSS (MCDN/QSIG.) or local calls (Sets) redirected from G/W node to UIPE DID or CO link. If the redirection does not occur on G/W node, redirecting information number is sent as CLID if present in the incoming SETUP message received on G/W node from private network.	
ODN0	xxxx	OHAS Security DN for zone 0	basic-18
ODN1	xxxx	OHAS Security DN for zone 1	basic-18
ODN2	xxxx	OHAS Security DN for zone 2	basic-18
ODN3	xxxx	OHAS Security DN for zone 3	basic-18
ODN4	xxxx	OHAS Security DN for zone 4	basic-18
ODN5	xxxx	OHAS Security DN for zone 5	basic-18
ODN6	xxxx	OHAS Security DN for zone 6	basic-18

Prompt	Response	Comment	Pack/Rel
ODN7	xxxx	OHAS Security DN for zone 7	basic-18
ODN8	xxxx	OHAS Security DN for zone 8	basic-18
ODN9	xxxx	OHAS Security DN for zone 9	basic-18
OHAS	(NO) YES	Off-Hook Alarm Security Enter X to remove the OHAS DNs for the following zones.	basic-18
OMPH	(NO) YES	CDR for outgoing packet data call  This is the Call Detail Records for an outgoing packet data call from the Meridian Packet Handler to the Public Switched Packet Data Network	mph-19
OPT	aaa	Options  Multiple options separated by spaces are allowed in response to the OPT prompt. The last option must be followed by a carriage return <cr>. The <cr> inputs the options selected and is followed by either the next prompt or a system message.	basic-1
	(ABDD) ABDA	Attendant Busy Display Denied Attendant Busy Display Allowed Only with International Supplementary Features (SUPP) package 131.	supp-6
	(AHD) AHA	Autohold on Loop Key Denied Autohold on Loop Key Allowed Only with International Supplementary Features (SUPP) package 131.	misop-20
	(AMD) AMA	Attendant Monitor Denied Attendant Monitor Allowed Only with China Attendant Monitor (CHINA) package 285.	china-21

# LD 15

Prompt	Response	Comment	Pack/Rel
	(ATDA) ATDD	Attendant Through Dialling Allowed. Attendant Through Dialling Denied.	basic- 23
	(BIND) BBIN EBIN	Break-In Indication Denied Basic Break-In Indication Extended Break-In Indication Only with Attendant Break-In (BKI) package 127.	bki-9
	(BIXA) BIXD	Break-In to external call Allowed Break-In to external call Denied Only with Attendant Break-In (BKI) package 127.	bki-9
	(BLA) BLD	Break-In to Line Lockout Set Allowed Break-In to Line Lockout Set Denied Only with Attendant Break-In (BKI) package 127.	bki-9
	(BOHD) BOHA	Position Busy with Calls on Hold Denied Position Busy with Calls on Hold Allowed Only with International Supplementary Features (SUPP) package 131.	supp-6
	(BWTD) BWTA	Breakin Warning Tone Denied Breakin Warning Tone Allowed	ponw-25.4
	(CCBD) CCBA	Collect Call Blocking Denied Collect Call Blocking Allowed	ccb-21
	(CFO) CFF	Call Forward Originating Call Forward Forwarding Either the Originating or Forwarding party's Class of Service is used to determine access to services or features on Call Forward.	basic-1
	(CFRD) CFRA	Call Forward Reminder tone for 500/2500 telephone Call Forward Reminder tone for 500/2500 telephone	cfrt-19

Prompt	Response	Comment	Pack/Rel
	(CHDD)	Charge Display Denied at end of call	supp-16
	CHDA	Charge Display Allowed at end of call	
	(COX)	Central Office call No Priority for Ringing	dcp-12
	COP	Central Office call Priority for Ringing Number Pickup or RNPU and Group Call Pickup GPUA	
	(CPD)	Call Park Denied	cpk-2
	CPA	Call Park Allowed. Call Park (CPRK) package 33 must be equipped.	
	CPN	CPN enables the Call Park Network wide (CPRKNET) option. CPRKNET package 306 must be equipped.	
	(CTD)	Camp-On Tone Denied	basic-1
	CTA	Camp-On Tone Allowed	
	(CUI)	CI lamps show Attendant Console Group (ACG) information for incoming calls	coop-14
	MTI	CI lamps show Multi-Tenant Service (MTS) information for incoming calls Only with Console Operations (COOP) package 169	
	(CWRD)	CFNA treatment for Call Waiting calls on a DN Denied	basic-21
	CWRA	CFNA treatment for Call Waiting calls on a DN Allowed	
	(CXOD)	No Override of Call Forward External	
	CXOA	Overrides Call Forward External Denied (CFXD) to allow call forward to a CDP Distant Steering Code (DSC)	
	(DBD)	Flexible Incoming Tones Denied on digital sets	basic-14
	DBA	Flexible Incoming Tones Allowed on digital sets	

# LD 15

Prompt	Response	Comment	Pack/Rel
	(DNCA)	If DNCA is entered, all DID/CO or DOD calls are disconnected after the number of ring cycles defined by the response to the NFNA prompt while the system is in Night Service.	afna-14
	DNCS	If DNCS is entered, outgoing CO/DOD calls or incoming CO/DID calls in the answered state, and waiting on a set are disconnected after the number of seconds defined in response to the NFNS prompt expires.  Only with Attendant Forward No Answer (AFNA) package 134.	
	(DNX)	ACD Dialed Number Identification Service feature excluded	dnis-10
	DNI	ACD Dialed Number Identification Service feature Included  Only with Dialed Number Identification Service (DNIS) package 98	
	(DRE)	Queue thermometer REST Excludes Inter-Attendant calls, Recalls and Metered calls	coop- 5
	DRT	Queue thermometer REST Includes Inter-Attendant calls, Recalls and Metered calls  Only with Console Operations (COOP) package 169	
	(DSX)	Data Services or server IS Excluded	bkil-8
	DSI	Data Services or server IS Included  Only with Attendant Break-In (BKI) package 127.	

Prompt	Response	Comment	Pack/Rel
	(DSTD)	DID call to Second degree busy Treatment Denied	supp-6
	DSTA	DID call to Second degree busy Treatment Allowed If Allowed DID calls forwarded to a busy set are disconnected. If Denied DID calls forwarded to a busy set follow the set's CLS (FBA/FBD) treatment. Only with International Supplementary Features (SUPP) package 131.	
	(FACD)	Flexible Attendant Call Waiting (ACW) thresholds Denied	supp-15
	FACA	Flexible Attendant Call Waiting (ACW) thresholds Allowed If allowed, the Call Waiting thresholds are expressed as a percentage of the active consoles.	
	(FKA)	Forward Key Allowed	basic-6
	FKD	Forward Key Denied	
	(HLPD)	Individual Hold Lamp Option Denied.	dhld- 23
	HLPD	Individual Hold Lamp Option Allowed.	
	(HRLD)	Individual Hold Release Option Denied.	dhld- 23
	HRLA	Individual Hold Release Option Allowed.	
	(HTU)	Hot Line access Unrestricted	hot-10
	HTR	Hot Line access Restricted If Restricted only Hot Line calls may terminate on Hot Line DN's. Only with Enhanced Hot Line (HOT) package 70.	
	(HVD)	Handsfree Voice call Denied	hva-19
	HVA	Handsfree Voice call Allowed	

# LD 15

Prompt	Response	Comment	Pack/Rel
		Incoming Call Indicator key/lamp strips	basic-1
	(IC1)	One key/lamp strip = 10 ICIs	
	IC2	Two key/lamp strips = 20 ICIs	
	(IHD)	Individual Hold Denied	basic-1
	IHA	Individual Hold Allowed	
	(LLCD)	Line Load Control commands in LD 2 Denied	llc-10
	LLCA	Line Load Control commands in LD 2 Allowed	
	(LOD)	Lockout Denied	basic-1
	LOA	Lockout Allowed LOA locks an attendant out of re-entering an established call on the console Hold key. The attendant can override with the Barge-In feature.	
	(LRD)	Last Number Redial Denied	lnr-8
	LRA	Last Number Redial Allowed Only with Last Number Redial (LNR) package 90.	
	(MCTD)	Malicious Call Trace signal Denied	mct-10
	MCTA	Malicious Call Trace signal Allowed Only with Malicious Call Trace (MCT) package 107	
	(MCX)	Message Center Excluded	mwc-1
	MCI	Message Center Included	
	(MWUD)	Message Waiting Unconditional Denied	ffc-14
	MWUA	Message Waiting Unconditional Allowed	
	(NCD)	When an Attendant Console Group (ACG) is in Night Service, redirection of attendant calls is denied.	coop-5
	NCA	When an Attendant Console Group (ACG) is in Night Service, redirection of attendant calls is allowed. Only with Console Operations (COOP) package 169.	

Prompt	Response	Comment	Pack/Rel
(PCMD)		Periodic Clearing with Meridian Mail Denied	nas-14
PCMA		Periodic Clearing with Meridian Mail Allowed Must have PCMA to output PCMM prompt in LD 23. Requires International Supplementary Features (SUPP) package 131 and Network Attendant Services (NAS) package 157.	
(PSD)		Presentation Status selection Denied on attendant consoles	coop- 5
PSA		Presentation Status selection Allowed on attendant consoles Only with Console Operations (COOP) package 169	
(PVCA)		Prevention of reciprocal Call Forward Allowed	arfw-20
PVCD		Prevention of reciprocal Call Forward Denied	
(RECA)		Attendant calls will be redirected when all but one console is busy.	coop-5
RECO		Attendant calls will be redirected when all consoles are busy. <b>Note:</b> Attendant calls will also be redirected when there is no presentation status to other consoles in the console group. Console Operations (COOP) package 169 is required.	
(REA)		Release on Exclusion Allowed	misop-20
RED		Release on Exclusion Denied	
(RND)		Ring Again No Answer Denied	misop-20
RNA		Ring Again No Answer Allowed	
(ROX)		Recorded Overflow Announcement Excluded	roa-2
ROI		Recorded Overflow Announcement Included This treatment applies exclusively to congested consoles with Recorded Overflow Announcement (ROA) package 36.	

# LD 15

Prompt	Response	Comment	Pack/Rel
	(RTD)	Coordinated Dialing Plan routing feature Denied	cdp-15
	RTA	Coordinated Dialing Plan routing feature Allowed RTA allows DID routing with Distant Steering Codes over CO and WATS trunks. Only with Call Detail Recording (CDP) package 59.	
	(RTR)	Terminating side of call determines ringing or buzzing cadence used	ftc-14
	ROR	Originating side of call determines ringing or buzzing cadence used Only with Flexible Tones and Cadences (FTC) package 125.	
	(SBD)	Flexible Incoming Tones Denied for SL-1 telephones	ftc-14
	SBA	Flexible Incoming Tones Allowed for SL-1 telephones Only with Flexible Tones and Cadences (FTC) package 125.	
	(SDDE)	Single Digit Access to Hotel Services (Denied) Allowed	supp-6
	SDAL	Single Digit Access to Hotel Services (Denied) Allowed Only with International Supplementary Features (SUPP) package 131.	
	(SIAD)	Source Included when Attendant dials Denied	supp-18
	SIAA	Source Included when Attendant dials Allowed	
	(SLD)	Slow Answer Recall Enhancement Denied	supp-6
	SLA	Slow Answer Recall Enhancement Allowed Only with International Supplementary Features (SUPP) package 131.	
	(SYD)	Secrecy Denied	basic-1
	SYA	Secrecy Allowed	
	EHS	Enhanced Secrecy Allowed	

Prompt	Response	Comment	Pack/Rel
	(THPD)	ACD Threshold Percentage Denied	supp-5
	THPA	ACD Threshold Percentage Allowed Only with International Supplementary Features (SUPP) package 131.	
	(TOA)	Attendant Monitor Tone Allowed	china-21
	TOD	Attendant Monitor Tone Denied Only with China Attendant Monitor Package (CHINA) package 285.	
	(TTAD)	Time To Answer and Abandoned call records Denied	fcd-8
	TTAA	Time To Answer and Abandoned call records Allowed Only with New Format CDR (FCDR) package 234.	
	(VOBD)	Make Set Busy and Voice Call Override Enhancement Denied	basic-20
	VOBA	Make Set Busy and Voice Call Override Enhancement Allowed	
	(XBL)	Exclude Enhanced Busy Lamp Field	dcon-15
	IBL	Include Enhanced Busy Lamp Field IBL and ILF cannot be used together. Only with M2250 Attendant Console (DCON) package 140.	
	(XDP)	Exclude Digit Display	ddsp-1
	IDP	Include Digit Display	
	(XLDN)	Network-wide LDN denied	nldn-20
	NLDN	Network-wide LDN allowed	
	(XLF)	Exclude Busy Lamp Field array	basic-1
	ILF	Include Busy Lamp Field array Busy Lamp Field Array is only used on QCW type consoles. IBL and ILF cannot be used together. Cannot be used with Small System.	

# LD 15

Prompt	Response	Comment	Pack/Rel
	(XTG) ITG	Exclude key/lamp expansion module Include key/lamp expansion module Used as Trunk Group Busy field or supervisory lamp field	basic-1
OTCR	(NO) YES	CDR provided, based on Originally Dialed Trunk Route	supp-14
PANI	(NO) YES	M911 Pseudo ANI display where: No = no display pseudo ANI Yes = display pseudo ANI	basic-25
PBLK	(ATN) RAN CPAS OVF	Call presented has higher precedence. Attendant Ran trunk Central Precedence answering station Overflow tone	basic-21
PBUZ	xx yy	Priority Buzzing cadence for IADN and Code Blue calls. xx - priority buzz-on phase yy - priority buzz off phase Range is from 2 to 16 seconds. If the value entered is an odd number between 2 and 16, it is truncated to the next lowest even integer.	basic- 23
PCA	(OFF) ON	Personal Call Assistant, where: OFF = Turns PCA off at the customer level ON = Turns PCA on at the customer level <b>Note:</b> Configuration of the PCA is preserved and enabled regardless of whether or not the feature is enabled.	pca-3.0
PCDL	(NO) YES	PPM output on CDR Link. An additional three words will be added to tape record.	supp-15

Prompt	Response	Comment	Pack/Rel
PCDS	(NO) YES	Programming of Control Digits is not required Programming of Control Digits is required	mpo-20
PCMC	0-(15)-31	Pulse Code Modulation Conversions permitted in a network connection, $\mu$ -Law to A- Law or A- Law to $\mu$ -Law, in a network connection	esn-14
PELK	(NO) YES	Do not enable Electronic Lock on Private Lines Enable Electronic Lock on Private Lines	ffc-21
PFAN	(ATN) RAN CPAS	Intercept if dialed DN fails to answer (Call waiting) Attendant Ran trunk Central Precedence answering station	basic-21
PFNA	(ATN) RAN CPAS	Intercept if dialed DN fails to answer Attendant Ran trunk Central Precedence answering station	basic-21
PFX1	x...x	Prefix 1. Prefix or area code for International PRA. First element of Calling Party Number.  PFX1 + PFX2 + DN cannot exceed 8 numbers for AXE-10. Prompted with International Primary Rate Access (IPRA) package 202.	pri2-15
PFX2	x...x	Prefix 2. Central Office Prefix for International PRA. Second element of Calling Part Number.  PFX1 + PFX2 + DN cannot exceed 8 numbers for AXE-10. Prompted with International Primary Rate Access (IPRA) package 202.	pri2-15

# LD 15

Prompt	Response	Comment	Pack/Rel
PHDT	1-(30)-63	Permanent Hold Timer  Number of two second intervals between reminders, for example: 30 = 60 seconds. If Audible Reminder of Held Calls (ARHC) is enabled then DBRC takes precedence over PHDT.  Prompted with 2500 Set Features (SS25) package 18.	ss25-4
PHIP	(ATN) RAN CPAS OVF	Precedence dialed is higher than allowed. Attendant Ran trunk Central Precedence answering station Overflow tone	basic-21
PICP	(ATN) RAN CPAS OVF	Intercept treatment if called party cannot be preempted. Attendant Ran trunk Central Precedence answering station Overflow tone	basic-21
PINT	(NO) YES	Change precedence Intercept treatment.	basic-21
PINX_DN	xx...x	Node DN	basic-21
PKND	(1)-3 (1)-4	Number of digits Dialed for Group Pickup Prompted with Directed Call Pickup (DCP) package 115.  To determine the number of digits, count the number of digits of the highest number RNPG group.	dcp-12

Prompt	Response	Comment	Pack/Rel
PNI	1-16283	<p>Private Network Identifier</p> <p>Each customer data block must have a unique PNI when multi-customer option is equipped. The PNI in the CDB functions as a logical customer number for routing incoming non-call-associated Transaction Capability Application Part (TCAP) facility messages to the appropriate ESN translations.</p> <p>PNI = 1 is typical for customer 0. It must be matched by the PNI in the far end RDB. Default PNI = 0 prevents the operation of features such as NRAG, NACD and NMS.</p> <p>Within one network, use the same value for PNI in both LD 15 and LD 16. When inter-working with different networks, the LD 15 PNI is for the local system and the LD 16 PNI is for the target or remote switch.</p> <p><b>Note:</b> Requires package 148 (NTWK)</p>	
PORT	0-15 <cr>	<p>CDR port</p> <p>Stop PORT prompt</p> <p>To remove a CDR port, change CDR = NO. Exit and re-enter LD 15, select CDR = YES, then add only the desired CDR port numbers. Precede with X to remove.</p>	cdr-1
	(0)-15	<p>Serial Data Interface Port Monitor (Features and Options Data Block)</p> <p>One Serial Data Interface Port Monitor per customer is recommended.</p>	
PPMD	(YES) NO	<p>Periodic Pulse Metering</p> <p>Prompted with Message Registration (MR) package 101.</p>	mr-10
PPM_DATA	(NO) YES	Change Periodic Pulse Metering options	basic-21

# LD 15

Prompt	Response	Comment	Pack/Rel
PREF	0-9999	Up to 4 digit Access Prefix for a unique NPI/TON combination in the table.	isdn-24
	#	Wild character for replacement of any digit. The entry of # for wild card character will be stored as *.	
	X	Reset the access prefix value to nil	
PREO		Pretranslation Option	pxlt-8
	(0)	Disabled	
	1	Enabled	
		To enable the Pretranslation feature, the Pretranslation data block or Calling Group to Speed Call correlation must be configured in LD 18.	
		Prompted with Pretranslation (PXLT) package 92.	
PRMT	aaa	aaa = sequence of any alphanumeric character. max of 126 characters.  Subsequent Non Specified Information parameters for Message Waiting notification. 'PRMT' is re-prompted until <CR> is entered, then the next prompt 'CANC' is prompted.	dmwi- 23
PRNG	0 - (40) - 60	Precedence ringback timer in seconds.	atvn-25.47
PRMT	0 - (60)-120	Duration of preemption tone before set goes to line lock out.	atvn-25.47
PSTN	(NO) YES	Public Service Telephone Networks  Limit the number of PSTNs allowed in a network connection to one PSTN. The default (NO) puts no limit on the number of PSTN connections.	isdn-14
PTTY	(0)-15	PPM TTY number for printing meters (one per switch) Precede with X to remove.  Prompted with Multi Language Wake Up (MLWU) package 206. TTY must be defined with USER = BGD in LD 17.	mlwu-16

Prompt	Response	Comment	Pack/Rel
PWD_DATA	(NO) YES	Customer related passwords	basic-21
PWD2	x...x	Second level administration Password Password length is 4-16 characters and is defined in LD 17. The SPWD password is not updated unless the PWD2 password is entered correctly. PWD2 must be entered before new ATAC is accepted.	basic-1
R2BN	0-23 0-59	RAN2 Begin time	awu-10
R2ED	0-23 0-59	RAN2 End time	awu-10
RALL	(NO) YES	Mandatory Recall is not required prior to dialing control digits Mandatory Recall is required prior to dialing control digits	mpo-20
RAN1	0-511	Primary Ran route. Use RAN1 as the Primary route for Language 0 in a Multi Language AWU application. The route must be unique. TYPE must = AWR in LD 16.	mpo-20
RAN2	0-511	Secondary RAN route. Use RAN2 as the Secondary route for Language 0 in a Multi Language AWU application. The route must be unique. TYPE must = AWR in LD 16.	mpo-20
RANF	0-511	Music route. TYPE must = AWR in LD 16.	awu-10
RANR	0-511	RAN Route number	ran-1
RCLE	(ATN OVF ATN ATN)	Redirection Count Limit Exceeded as defined by TRCL ATN is not allowed for attendant calls. NAP is not allowed for any field for RCLE.	isdn-15

# LD 15

Prompt	Response	Comment	Pack/Rel
RCNT	0-(1)-5	Redirection Count for ISDN calls Maximum number of inter-node hops allowed in a network redirection call, only enforced when ISDN = YES. This field must be set to greater than 0 for a network redirection to take place.	esn-14
RCY1	1-(6)-15	Number of Cycles of Re-ringing before forwarding to attendant or disconnecting. Applies only if RGNA = DAR or AAR.	mpo-20
RCY2	1-(4)-15	Number of Cycles of Ringing before forwarding to transferring station Valid only for the RGNA option.	mpo-20
RDR_DATA	(NO) YES	Change Call Redirection	basic-21
RECD	(NO) YES	Malicious Call Trace Recorder is not activated Malicious Call Trace Recorder is activated Not prompted when defining a new customer.	emct-20
REF0	xxxx	DN for Reference trunk 0	basic-1
REF1	xxxx	DN for Reference trunk 1	basic-1
REF2	xxxx	DN for Reference trunk 2	basic-1
REF3	xxxx	DN for Reference trunk 3	basic-1

Prompt	Response	Comment	Pack/Rel
R_ENTRY	aa Xaa Xaa Xbb <CR>	ANI entry for an incoming route to be created or modified ANI entry for an incoming route to be deleted ANI entries for an incoming between aa and bb to be deleted. Exit This prompt is repeated until <CR> is entered as response. ANI entries must be between 0 and (R_SIZE-1). For REQ=NEW, only default table 0 is configurable. An R-ENTRY can be deleted even if still configured on an incoming route.	cist-24
REQ:		Request A colon following a prompt indicates enhanced processing. Enhanced processing allows a user to either view a list of possible responses or input an abbreviated response.	basic-1
	?	Get a list of possible responses	
	CHG	Change existing data block	
	END	Exit overlay program	
	NEW	Add new data block to the system	
	OUT	Remove data block	
		The REQ prompt will appear under the NET: Networking gate opener and the following responses will be valid with respect to the DPNSSI Message Waiting Indication feature.	dmwi- 23
	(NEW)	Create a new Message Waiting Indication Non Specified Information table.	
	CHG	Change a Message Waiting Indication Non Specified Information table.	
	OUT	Delete a Message Waiting Indication Non Specified Information table.	

# LD 15

Prompt	Response	Comment	Pack/Rel
RGNA	xxx yyy	Ringing No Answer treatment Where xxx is for internal calls and yyy is for external calls. Valid entries for xxx and yyy are: AAR - Forward to Attendant or Night Service after re-ringing for RCY1 cycles ATN - Forward to Attendant or Night Service DAR - Disconnect After Re-ringing for RCY1 cycles DIS - Disconnect OVF - provide Overflow Tone (STD) - Standard Operation (this is the default)	mpo-20
RICI	xx	ICI key numbers that may receive ROA Where: x = 0-9 if OPT = IC1 or 0-19 if OPT = IC2 Precede with X to remove.	roa-2
RLA	0-511	Release Link route number. Route 31 can be designated an exclusively private route in LD 16.	casr-1
RLCR	0-511 X	Relocation FFC Error RAN number To disable the RAN	supp-16
RLI	0-999	Route List Index	fnp-20
ROA_DATA	(NO) YES	Change Recorded Overflow Announcement	basic-21
ROPT	(NRO)  RAX  ROA ROX	No Route Optimization This option may be used to suppress Route Optimization on switches which already have high traffic.  Route optimization is performed on calls which have experienced alternative routing, been transferred or have been extended by an attendant.  Route Optimization after Alternative routing Route Optimization after Transfer and extension by an attendant	dnwk-16

Prompt	Response	Comment	Pack/Rel
RPA	(NO) YES	Radio Paging Allowed	rpa-20
RPNS	(NO) YES	Recall with Priority during Night Service	supp-15
RR	0-511	RAN route number.	ran-1
R_SIZE	1-512	<p>Maximum number of ANI entries that can be configured for incoming routes.</p> <p>If &lt;CR&gt; is entered when REQ=NEW (new customer, it defaults to 1.</p> <p>After conversion it defaults to the number of ANI entries for incoming route created during conversion.</p> <p>The R_SIZE can't be decreased if the entries are not empty</p>	cist-24
RTIM	xxx yyy zzz	<p>Recall. Where:</p> <p>xxx = 0-(30)-378 (for Slow-Answer)  yyy = 0-(30)-510 (for Camp-On)  zzz = 0-(30)-510 (for Call waiting)</p> <p>These timers indicate in seconds the elapsed time before attendant recall. Slow Answer must be a multiple of six seconds while Camp-On and Call Waiting must be a multiple of two seconds, with odd numbers are rounded down.</p> <p>To change one timer all three fields must be input.</p> <p>For recalls timed at the local node using the redirection feature developed for DPNSS, no distinction can be made between Call Waiting calls and Slow-Answer recalls. The Slow-Answer value is used in both cases.</p>	basic-1
RTSA	(RSAD) RSAA RSAX	<p>Recall To Same Attendant Denied</p> <p>Recall To Same Attendant Allowed</p> <p>Recall to Same Attendant allowed, with queuing on busy attendant</p>	rpa-20

# LD 15

Prompt	Response	Comment	Pack/Rel
SACP	(NO) SNGL ALL	Semi-Automatic Camp-On not allowed Semi-Automatic Camp-On on a per-call basis Semi-Automatic Camp-On for all occurrences Prompted with Semi-Automatic Camp-On (SACP) package 181.	sacp-20
SAMM	(NO) YES	Standalone Meridian Mail. Prompted with Standalone Meridian Mail (SAMM) package 262.	samm-20
SATD	0-(1)-5	Satellite Delays. Number of satellite delays allowed in a network connection.	isdn-14
SBLF	(NO) YES	Standard Busy Lamp Field Prompted when response to SPVC is in the range 1- 63.	bacd-8
SBUP	(YES) NO	Enable use of station control passwords for set based administration user level access.  If SBUP = YES, a user needs to dial the User FFC followed by the Station Control Password to access User Level changes. If SBUP = NO, a user needs to dial only the User FFC.	adminset-21
SCDL	(0) 1 2 3	Schedule for printing Message Registration and PPM data No scheduled printing Daily printout Weekly printout Monthly printout	supp-15

Prompt	Response	Comment	Pack/Rel
SCPL	0-8	Station Control Password Length Must match network wide. SCPL replaces ELPL prompt. Enter "0" to disable the Electronic Lock (ELK) and Remote Call Forward (RCFW) features. A data dump and SYSLOAD are required to implement a change in the password length.	ffc-15
SDFL	384-(1024)-2048	Signal Destination Flash Timing	basic-21
S_ENTRY	(1)-2000	Entry of ANI table applying to a set	
SIZE	0-(256)-4000	Specify maximum number of CLID entries needed. Recommended Maximum Ranges settings for machine types: <ul style="list-style-type: none"> <li>• Small System and Succession 1000 - 125 entries</li> <li>• Options 51C and 61C - 1000 entries</li> <li>• Option 81C - 4000</li> </ul>	isdn-22
SPRE	xxxx	Special Prefix number (1-4 digits) Precede with X to remove. The prefix must not conflict with the numbering plan.	basic-1
SPVC	(0) 1-63	Supervisory console No Supervisor console Attendant number of Supervisory console Prompted with Supervisory Attendant Console (SPVC) package 93.	bacd-8
SPWD	xxxx	Secure Data Password Precede with X to remove. This password is entered when using LD 88 for authorization codes and LD 24 for Direct Inward System Access (DISA) block.	disa-1

# LD 15

Prompt	Response	Comment	Pack/Rel
SRAN	0-511 X	Second RAN number for second PCR threshold To disable the RAN	supp-16
SRCD	(0000)-9999	Set Relocation Security Code Prompted with Set Relocation (SR) package 53. Precede with X to remove.	sr-1
SRRT	0-511 X	Second RAN Route for ROA. Enter X to remove.	roa-2
SRT	2-(40)-2044	Second RAN Time, in seconds before second RAN given	ran-1
SRVR_DN	x...x	Mobility User Database (MUD) Server DN. This entry can be up to 7 digits. SRVR_DN is prompted if MUD_SRVR = NO.	mmsn-22
SRVR_LOC	x...x	Home location code of Mobility User Database (MUD) Server. This entry can be up to 7 digits long. SRVR_LOC is prompted if DIAL_PLAN = UDP.	mmsn-22
S_SIZE	0-2000	Maximum number of ANI entries that can be configured for sets. The SIZE can't be decreased if the entries are not empty.	
STCB	(NO) YES	Station Camp-On Busy allowed	sco-20
STE	(NO) YES	Standard Time Entry not allowed Standard Time Entry allowed. The entry may be 3 or 4 digits long. STE is prompted if WUD = YES.	awu-22

Prompt	Response	Comment	Pack/Rel
STRG	(#), xxx	String to indicate end-of-dialing  Up to three characters are allowed as defined by STRL. Valid entries are: digits 0 through 9, asterisk or *, and octothorpe or #. Default is (#).  The default (#) cannot be used with the Outpulsing, Asterisk, and Octothorpe (OPAO) feature package 104.	ffc-15
STRL	1-3	String Length of end-of-dial indicator	ffc-15
T100	xxx...x	DN for Type-100 test line	basic-1
TAWU	1-(3)	Number of Tries for an unanswered AWU call  This defines the number of times an unanswered AWU call is presented before recall to the attendant for manual Wake Up calls.	awu-16
TBL	1-15	Table Number	isdn-24
TFDR	(NO) YES	Trunk Failure Display Required  Requires QCW3, QCW, M1250 or M2250 console. Prompted with Trunk Failure Monitor (TFM) package 182.	tfm-15
TGLD	0-(1)-9, *, #	Control digit for Toggle	mpo-20
TGR1	(0)-31	Trunk Group Access Restriction	supp-16
TGR2	(0)-31	Trunk Group Access Restriction	supp-16
TIDM	(NO)  YES	Trunk Identity Meaningful  PBX Reference Number is to be displayed without the Trunk Group Reference Number  Trunk Group Reference Number of a Trunk Identity (TIDY) in LD 16, is meaningful	supp-16

# LD 15

Prompt	Response	Comment	Pack/Rel
		Prompted with Multi Language Wake Up (MLWU) package 206 and Digital Private Network Signaling System 1 (DPNSS) package 123.	
TIM_DATA	(NO) YES	Change Timers	basic-21
TIM1	hh mm	Hour and Minute for First Night Service DN. Enter the hour and minute for First Night Service DN. Where: hh = 0-23, mm = 0-59 Enter X to remove the time. TIM1 should be set earlier than TIM2, 3 and 4. If no time is entered here, the system assumes a 24-hour clock.	basic-12
TIM2	hh mm	Time for Second Night Service DN	basic-12
TIM3	hh mm	Time for Third Night Service DN	basic-12
TIM4	hh mm	Hour and Minute for Fourth Night Service DN For all of the entries in the Night Service Time of Day (NSTOD) feature, entering X for the DN deletes the existing value for that entry. Entering <cr> allows the user to select an existing entry, or skip to another entry.	basic-12
TIME	0-(15)	Malicious Call Trace Alarm Time	emct-20
TMON	(NO) YES	Traffic Monitoring Prompted with Multi Language Wake Up (MLWU) package 206 and Traffic Monitoring (TMON) package 168.	mlwu-14
TN1	l s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000 Enter X to delete	basic-3.0

Prompt	Response	Comment	Pack/Rel
TN2	I s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000 Enter X to delete	basic-3.0
TN3	I s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000 Enter X to delete	basic-3.0
TN4	I s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000 Enter X to delete	basic-3.0
TN5	I s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000 Enter X to delete	basic-3.0
TN6	I s c u c u	Terminal Number For Large Systems For Small Systems and Succession 1000 Enter X to delete	basic-3.0
TNDM	0-(15)-31	Tandem threshold/loop avoidance limit  This is the value permitted in a network connection. If the value entered is greater than 25, then 25 will be used for DPNSS calls.  Prompted when Integrated Services Digital Network (ISDN) package 245 and ISDN Supplementary Features (ISDN INTL SUP) package 161, or Digital Private Signaling System Network Services (DNWK) package 231 is equipped.	isdn-14

# LD 15

Prompt	Response	Comment	Pack/Rel
TON	ECDP ELOC ESPN INTL LOCL NATL UNKN	ESN_CDP ESN_LOC ESN_SPN International Local National Unknown	isdn-24
TPDN	yyyy	Target PCA DN, where: yyyy = the primary DN  TPDN is prompted only if PCA is set to ON.  If there is no DN configured against the HOT P key in LD 11, this value is used to extend the call using the PCA feature.  Enter X to remove. However, if there is at least one PCA with no target DN configured in LD 11, then this operation does not succeed.	pca-3.0
TRCL	(0)-7	Total Redirection Count Limit  Number of times that a call can be redirected before being intercepted. (0) means that redirection is not limited by this feature, but is limited by various configurations.	isdn-15
TRCR	(NO) YES	Carriage Return sent after each CDR message	cdr-1
TRNX	(NO) YES	Prevent transfer on ringing of supervised external trunks across a private network  Allow transfer on ringing of supervised external trunks across a private network	basic-22
TST_DATA	(NO) YES	Change Test lines	basic-21
TST0	xxxx	DN for Test Trunk 0	basic-1

Prompt	Response	Comment	Pack/Rel
TST1	xxxx	DN for Test Trunk 1	basic-1
TST2	xxxx	DN for Test Trunk 2	basic-1
TST3	xxxx	DN for Test Trunk 3	basic-1
TSTL	(NO) YES	<p>Test Lines for this customer</p> <p>Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.</p> <p>The following prompts are used for transmission testing. Refer to NTP 553-2001-325 Transmission Capabilities.</p>	basic-1
TTBL	(0)-31	<p>Tone Table number</p> <p>Table 0, North American default values, is created when the first customer is created. Refer to the <i>Flexible Tone and Digit Switches</i> NTP for other tables.</p> <p>Prompted with Flexible Tones and Cadences (FTC) package 125.</p>	ftc-13

# LD 15

Prompt	Response	Comment	Pack/Rel
TYPE:		Type of data block	basic-1
	CDB	Customer Data Block	
	DEFAULT	Default Customer Data Block (when REQ = NEW)	
	?	Get list of possible responses	
		<p>You may directly access a given data block by entering the first three or all the letters of one of the responses listed below.</p> <p>A colon following a prompt indicates enhanced processing. Enhanced processing allows a user to either view a list of possible responses or input an abbreviated response.</p> <p>You may view the revised <i>Prompts and responses</i> sequence for LD 15 on page 263.</p> <p><b>Gate openers:</b></p> <p>AML_DATA Application Module Link options</p> <p>ANI_DATA Automatic Number Identification numbers</p> <p>ATT_DATA Attendant Console options</p> <p>AWU_DATA Automatic Wake Up options</p> <p>CAS_DATA Centralized Attendant Service options</p> <p>CCS_DATA Controlled Class of Service options</p> <p>CDR_DATA CDR and Charge Account options</p> <p>FCR_DATA New Flexible Code Restriction options</p> <p>FFC_DATA Flexible Feature Code options</p> <p>FTR_DATA Features and options</p> <p>HSP_DATA Hospitality Management options</p> <p>ICP_DATA Intercept Computer update</p> <p>IMS_DATA Integrated Message Service options</p> <p>INT_DATA Intercept treatment options</p> <p>LDN_DATA Departmental Listed Directory Numbers</p> <p>MON_DATA Set-based monitoring</p> <p>MPO_DATA Multi-Party Options</p> <p>NET_DATA ISDN and ESN Networking options</p> <p>NIT_DATA Night Service options</p>	

Prompt	Response	Comment	Pack/Rel
	OAS_DATA	Off-Hook Alarm Security options	
	PPM_DATA	Periodic Pulse Metering options	
	PWD_DATA	Customer related Passwords	
	RDR_DATA	Call Redirection	
	ROA_DATA	Recorded Overflow Announcement options	
	TIM_DATA	Timers	
	TST_DATA	Test lines	
UBRI	(OVF NAP NAP NAP)	Universal BRI	basic-20
UCST	(0)-9999	Unit Cost for periodic pulse metering	supp-15
UDPL	1-(19)	Flexible length of Vacant Number Routing (VNR) Uniform Dialing Plan digits (UDP). Enter the maximum number of UDP digits expected by VNR.	fnp-14
UMG	(NO) YES	User to User Messaging enabled	ims-4
USBM	(NO) YES	UIPE Set Based Monitoring Where: (NO) = all previously configured TNs are flushed, and subsequent prompts are not prompted. YES = accept and prompt the next prompts. <CR> = previously stored value taken.	basic-3.0
UST	(NO) YES	User Status Update enabled	ims-4
VNR	(NO) YES	Vacant Number Routing Prompted with Flexible Tones and Cadences (FTC) package 160.	fnp-20
VO_ALO	(NO) YES	Enable Virtual Office Automatic Logout	basic-25.4
VO_ALOHR	(0)-23	Virtual Office Automatic Logout time using 24 hour clock.	basic-25.4

# LD 15

Prompt	Response	Comment	Pack/Rel
VPNI	1 - 16283	Virtual Private Network Identifier for Succession 1000 <CR> = No Change Enter X to remove the VPNI.	basic-2
VSID	0-15	Value added Server Identifier Enter the identifier number of the Value-Added Server or VAS providing the services such as Voice Messaging. Enter X to remove the VSID.	usm-7
WAIT	(RGB) MUS SIL	Treatment during waiting time for ROA Ringback Music Silence	roa-2
WKDY	1-7	Week Day for weekly printout. Where 1 = Sunday.	supp-15
WUD	(NO) YES	Wake-up Delimiter is not required Wake-up Delimiter is required A time entered during use of the Automatic Wake Up FFC Delimiter feature is valid only if the user enters "#" at the end of the time digits.	awu-22
XRFP	x...x	External Attendant Remote Call Forward Password The password length is 1-8 digits. The password is numeric only.	arfw-20
XRFR	(NO) YES	External Attendant Remote Call Forward Password Required	arfw-20

---

---

## LD 16: Route Data Block, Automatic Trunk Maintenance

---

This Overlay program allows data for trunk routes, ATM schedule hours, or ATM routes to be created or modified.

When the Overlay is loaded the available system memory and disk records are output in a header as follows:

```
RDB000
MEM AVAIL: (U/P): xxxxxx USED: xxxxx TOT: xxxxxxx
DISK RECS AVAIL: xxx
RAN RTE AVAIL: (U/P): xxx USED: xxx TOT: xxx
```

The range for route numbers are system dependent:

- 0-511 for large systems
- 0-127 for small systems and Succession 1000

After making any changes to the route data block, IPE trunk cards must be downloaded with **ENLC I s c** command in LD 32.

The Incremental Software Management header includes Recorded Announcement Broadcast (RAN RTE) information. This information is updated each time a new RAN route is configured.

## Prompts and responses

### Contents

Section	Page
<i>Prompts and responses by data block:</i>	
RDB: Route data block	382
ATM: Automatic Trunk Maintenance data block	396
SCH: ATM Schedules data block	397
Meridian 911 Route data block	398
NPID: Numbering Plan Digit or Information Digit (NPID) Table	398
<i>Other Information:</i>	
Table 1 Release Mechanism Options	399

### RDB: Route data block

Prompt	Response	Comment
REQ:	aaaa	Request (aaaa = CHG, END, LCHG, NEW, or OUT)
TYPE:	RDB	Type of data block = RDB (Route data block)
CUST	xx	Customer number associated with this route
DMOD	1-127	Default Model number for this route (Small System and Succession 1000)
ROUT	x...x	Route Number Where x...x = 0-511: Large System 0-127: Small System and Succession 1000
DES	x...x	Designator field for trunk (0-16 character alphanumeric)
TKTP	a...a	Trunk Type (TKTP responses begin on page 468)
VTRK	(NO) YES	Virtual Trunk route

---

ZONE	0-255	Zone for codec selection and bandwidth management
NODE	xxxx	Node ID
PCID	a...a	Protocol ID for the route
TW_ROUTE	(NO) YES	Taiwan R1 route
- NACC	aaaa	Network access control (aaaa = (PGNR), PGNC, or PGNU)
M911_ANI	(NO) YES	Receive ANI digits for Meridian 911 routes
- M911_TRK_TYPE	aaaa	Meridian 911 ANI trunk types (aaaa = (911T) or 911E)
-	(1) 2	Automatic Number Identification Format
M911_FORM		
- M911_ABAN	(NO) YES	Optional call abandon treatment
- M911_TONE	(YES) NO	Optional call abandon tone
- NPID_TBL_NUM	0-7	Meridian 911 route table index
PRIV	(NO) YES	Private Line Route
RPA	(NO) YES	Radio Paging Route
ESN	(NO) YES	Electronic Switched Network or ESN pad control
SIGL	a...a	Layer 3 Signaling (a...a = APNS, BEL, DAS, DPN, NT4, or NTS)
CNVT	(NO) YES	Conventional (applies only to Tie trunks)
- DDMI	(0)-255	Digit Manipulation Index
- ATDN	(0)-x...x	Attendant DN
SAT	(NO) YES	Satellite used for trunk route via earth orbiting satellite
RCLS	aaa	Route Class (aaa = (EXT) or INT)
IDEF	(NET) LOC	Internal/external definition
DTRK	(NO) YES	Digital Trunk Route
- BRIP	(NO) YES	ISDN BRI Packet handler route
- DGTP	a...a	Digital Trunk Type (a...a = BRI, DTI, DTI2, JDMI, PRI, or PRI2)
- IFC	a...a	Interface type for route (IFC responses are listed on page 426)
- - CNTY	a...a	Country (CNTY responses can be found on page 412)
- CBCR	(NO) YES	Service route indicator
- CLID	OPTx	Calling Line Identification (x = 0, 1, 2, 3, 4, or 5)
- PROG	a...a	Progress signal (a...a = NCHG, MALE, or MCON)
- SBN	(NO) YES	Send Billing Number
- SIDE	aaa	Meridian SL-1 Node Type (aaa = (NET) or USR)
- CNEG	(NO) YES	Channel Negotiation

---

# LD 16

- OVL R	(NO) YES	Overlap Receiving
- DIDD	(0)-15	Digits ignored for DID call during Overlap Receiving
- OVLS	(NO) YES	Overlap Sending
- OVL T	(0)-8	Inter-INFO Timer during Overlap Sending
- NASA	(NO) YES	Network Attendant Service Allowed
- MBGA	(NO) YES	MBG Interface on the D-channel
- PGP N	0-15	Protocol Set Group Number
- RCAP	a...a	Remote Capabilities (RCAP responses can be found on page 449)
-- MWTO	(15) - 30	Message Waiting Time-out timer in seconds. This prompt is only printed if the RCAP is set to either QMWI or QMWO. The value entered is the duration of a timer started when a SETUP message is sent to set up a connection-oriented, call-independent connection for MWI transport. The timer is stopped on receipt of a CALL PROCEEDING message.
-- MWRT	0 - (2) - 15	Message Waiting Retry Timer. This prompt is only printed if the RCAP is set to either QMWI or QMWO. The value entered is the number of re-tries to be effected after a SETUP timeout.
- -MQC_FEAT	aaaa	MCDN QSIG Feature type, where aaaa = NAS, NACD or NMS
BCOT	(0) - 4000	B-channel Overload Control timer
INTC	(NO) YES	Speech calls to data sets are (NO = rejected; YES = intercepted) by the an attendant
ISDN	(NO) YES	Integrated Services Digital Network option
- SDID	(NO) YES	Send DID number instead of internal DN.IDC table with SDID Yes must be configured.
-- CTON	(NCHG) UKWN INTL NATL LOCL	Calling Party Number Call Type will not be changed. Unknown call type. International call type. National call type. Subscriber call type.
- MODE	a...a	Mode of operation (a...a = APN, ISLD, or PRA)
- DCH	0-159	D-channel number
- DCHI	1-15	DCHI port number
- IFC	a...a	Interface type for route (IFC responses are listed on page 426)
-- CNTY	a...a	Country (CNTY responses can be found on page 412)
- SBN	(NO) YES	Send Billing Number

---

- SRVC	a...a	Service type for AT&T ESS connections (SRVC responses can be found on page 459)
	(0) - 31	Service provisioned for National ISDN PRI (Rel 23 and later)
- - SRPM	0-(15)-255	Service Parameter
- - PNI	(0)-32700	Private Network Identifier (requires package 148 (NTWK))
- PR_TRIGS	aaa xx	Path Replacement Triggers
- PR_RTN	(NO) YES	Retain option for far end PINX
- NCNA	(YES) NO	Network Calling Name Allowed
- NCRD	(NO) YES	Network Call Redirection
- - TRO	(NO) YES	Trunk Route Optimization
- INAC	(NO) YES	Insert ESN Access Code to incoming private network call
- - SPN	(NO) YES	SPN's AC is inserted first to search for a valid UDP number
INC_T306	0-(2)-T306	Incoming T306 timer value in 2 second increments
OUT_T306	0-(30)-T306	Outgoing T306 timer value in 2 second increments
- FALT	(NO) YES	Recognition of DTI2 ABCD FALT signal for ISL
- NSF	(NO) YES	Network Service Facility
- COTR	0-511	DID/CO Trunk Reference route number
- TIER	0-511	Tie Reference route number
- WATR	0-511	Wide Area Telephone Service or WATS Reference route
- CHTY	a...a	Channel Type (a...a = (BCH) or ABCH)
- CTYP	a...a	Call Type for outgoing direct dialed TIE route (a...a = (UNKN), CDP, INTL, LOC, NPA, NXX, or SPN)
- INAC	(NO) YES	Insert ESN Access Code
- ISAR	(NO) YES	Integrated Service Access Route
- - RTN	0-511	Route Number
- - FACY	(NO) YES	Facility indicator
- - SID	0-511	Service Identification
- - MIN	0-510	Minimum number of channels
- - MAX	1-510	Maximum number of channels
- - PTUT	0-510	Preference Trunk Usage Threshold
- - PRIM	(YES) NO	Primary
- - NCOS	(0)-99	Network Class of Service group number
- - CLS	a...a	Class of Service (a...a = (CTD), CUN, FR1, FR2, FRE, SRE, TLD, or UNR)
- - TGAR	xx	Trunk Group Access Restrictions
- IEC	001-999	Inter-Exchange Carrier ID

---

# LD 16

DAPC	(NO) YES	Display of Access Prefix on CLID
- TBL	(0)-15	Prefix table number to be associated with this route
CPFXS	(YES) NO	Customer-defined Prefixes
HNTN	0-9999	Home National Number
HLCL	0-9999	Home Local Number
ADDP	(NO) YES	Add Public Prefixes
- DSEL	aaa	Data Selection (aaa = (VOD), DTA, TDN, 3DTA, 7DTA, 7VOD or 3VCE)
PTYP	a...a	Port Type at far end (PTYP responses begin on page 447)
AUTO	(NO) YES	Auto terminate
- ACMP	(NO) YES	Automatic Camp-On Calls to Busy Auto Terminate Line
- DNIS	(NO) YES	ACD DNIS route
- - NDGT	xx	Number of DNIS Digits
- - WDGT	a	First or last 4 DNIS digits to be sent on APL and HSL (a = (L) or F)
- - DDLY	(NO) YES	DNIS Interdigit Delay
- - DCDR	(NO) YES	Include DNIS number in CDR records
IANI	(NO) YES	In-Band Automatic Number Identification route
RTYP	aaa	Recording device for RAN trunks (aaa = AUD, CAP, CK2, CKM, CON, DGT, LVL, or PUL)
- LGTH	4-(60)- 7200	Maximum message length in seconds
- GRD	aaaa	Ground Start Arrangement (aaaa = (IDLE) or PLAY)
REP	1-15	Repetitions of recorded announcements
POST	aaa	RAN Post announcement treatment (aaa = DIS or ATT)
STRT	aaa	Start arrangement (aaa = IMM or DDL)
WAIT	(RGB) MUS	Ringback for calls queueing for RAN trunk
- MRT	0 - 511	Music route for RAN queueing
BDCT	(NO) YES	Broadcast capability for this route
- TITH	(0) - 300	Waiting Time Threshold (seconds)
- NCTH	(0) - 100	Number of Calls Waiting Threshold
RANH	xxx	RAN or Music route which will be used after post treatment. Where: xxx = 0 - 511 for Large System xxx = 0 - 128 for Small System and Succession 1000 Precede with x to remove.
ASUP	aaa	Answer Supervision returned by RAN to originator (aaa = (NO), YES, or CO)

---

SIGL	aaa	Signaling interface for CAMA trunks (aaa = BEL, NT4, or NT5)
FORM	aaa	Format for CAMA trunk signaling (aaa = M1A, M2B, or M3C)
AUDN	xxxx	Auto termination DN for ISA service routes
ICOG	aaa	Incoming and Outgoing trunk (aaa = IAO, ICT, or OGT)
PREM	(NO) YES	Preemption allowed on this route. If SLP package is equipped, then COT, DID, FX, ISDN and Tie trunk types can be preemptable.
TW_INC_CLID	(NO) YES	CLID Option on an incoming TWR1 route
RANX	(NO) YES	RAN for calls diverted to external trunks
- RANR	x...x	0-511 RAN Route number for the desired RAN route 0-127 Small System
SRCH	aaa	Search method for outgoing trunk member (aaa = (LIN) or RRB)
TRMB	(YES) NO	Tromboning
STEP	0-511	Alternate trunk route for outgoing trunks
FACN	(0) - 99999	Tie or FX facility number
BAND	(0) - 99	OUTWATS band number
ACOD	x...x	Access Code for the trunk route
CLEN	0 - (1)- 3999	CLID entry number
CPP	(NO) YES	Calling Party Privacy/Calling Party Privacy Override Flag
- TCPP	(NO) YES	CPP/CPPO flag for incoming non-ISDN trunk call tandemed to this trunk route
- DTPI	(*67) nnnn	Privacy indicator for a digitone trunk
- DPPI	(1167) nnnn	Privacy indicator for a dial-pulse trunk
- PII	(NO) YES	Privacy Indicator Ignored
- DTPO	(*82) nnnn	Privacy Override Indicator for a digitone trunk
- DPPO	(1182) nnnn	Privacy Override Indicator for a dial-pulse trunk
TARG	0-(1)-31	Trunk Access Restriction Group
BILN	(NO) YES	Billing Number Required
- BLEN	1-(10)-16	Billing Number Length
- BNUM	0-x...x	Billing number (1 to 16 digits depending on BLEN)
- BDSP	(NO) YES	Billing Number Displayed
ATGT	(0)-60	ADM Trunk Guard Timer
ASTP	1-(2)-15	ADM Step-Forward ring cycles
SGRP	(0)-999	Scheduled Access Restriction Group
OABS	0-9	Actual outgoing toll digits to be ignored for Code Restriction
IABS	(0)-3	Number of incoming digits to be absorbed

---

# LD 16

CAT	00-99	CAMA trunk route category digits
ID	(0)-9	Identification digit for CAMA trunk routes
STRK	(NO) YES	Super Trunk group feature
SPTO	(NO) YES	Super Trunk Option
ANKP	(NO) YES	KP signal suppressed
INST	(0)-99999999	Insert
JDGT	1-(4)	Japan central office Digits
IDC	(NO) YES	Incoming DID Digit Conversion on this route
- DCNO	(0)-254	Day IDC tree number
- NDNO	0-254	Night IDC tree number
- DEXT	(NO) YES	Display External dialed digits
-- DNAM	(NO) YES	Display IDC Name
LID	(0)-2	Line Identities option
- LCNO	0-255	Line identities Conversion tree number
AIOD	(NO) YES	Identification of outgoing calls
- ACNO	0-99	AIOD Customer number
- ARNO	0-511	AIOD Route number
- ATTK	xxxx	AIOD identifier number
ANTK	x...x	ANI identifier number
SIGO	a...a	Signaling arrangement (a...a = (STD), ESN2, ESN3, ESN5, ETN, or EN19)
- STYP	aaaa	Standard Signaling Type (aaaa = (SDAT) or STDN)
MFC	(NO) YES	Multifrequency Compelled or MFC Signaling
MFSS	(B1) B2 B3	First MFS digit request backward signal
TCRS	(YES) NO	Toll Category Request Supported
INDMF	(NO) YES	Indian R2MFC Operations
- CLEN	1 - (10) - 16	Maximum number of CNI digits requested for India Phase 2 feature
MFEI	(0)-127	MFE table number for Incoming calls
AUTM	(NO) YES	MFE Automatic Mode
- DIGS	(4)-5	Number of Digits expected
SGL	(NO) YES	Signal
MFEO	(0)-127	MFE table number for Outgoing calls
MFEA	(YES) NO	Access code signals are used in the signaling
MFED	0-(1)-9	First digit of special service call
MFKI	1-127	MFK table number for Incoming calls

---

AUTM	(NO) YES	MFK Automatic Mode
DIGS	4-(5)	Number of Digits expected
MFKO	1-127	MFK table number for Outgoing calls
LOCD	x	Number of digits used in a local call by the far end Central Office (aaa = (6) or 7)
CHRG	aaaa	Charge DOD calls by line of by Block (aaaa = (BLOK) or LINE)
MFCI	1-127	MFC Incoming table number
R2MD	(NO) YES	R2 modification
- DIG#	1-(4)-9	Number of digits
SGL	(NO) YES	Signal
BSSU	(NO) YES	Backward Signal Suppression for undefined signal
MFCO	1-127	MFC Outgoing table number
EMGY	(NO) YES	Emergency Route
OPP	aaa	Operator originated calls receive normal treatment for busy and intercept situations (aaa = (OPP) or ATT)
SWP	a...a	Subscriber with Priority (a...a = (NORM) or ATT)
ICIS	(YES) NO	Incoming Identifier Send
ICDN	x...x a...a	Incoming route DN (x...x = 1-7 digit CLID DN; a...a = (NO) or CLID entry of 0-125 for trunk DN)
ICNP	a...a	Incoming Numbering Plan (a...a = (UKWN), PUB, or PRV)
ICNT	a...a	Incoming Numbering Type (a...a = (UKWN), INTL, NTN, LCL, LOC, CDP or SPN)
ICPS	(YES) NO	Incoming Presentation Status
OGIS	(YES) NO	Outgoing Identifier Send
OGDN	x...x a...a	Outgoing route DN (x...x = 1-7 digit CLID DN; a...a = (NO) or CLID entry of 0-125 for trunk DN)
OGNP	a...a	Outgoing Numbering Plan (a...a = (UKWN), PUB, or PRV)
OGNT	a...a	Outgoing Numbering Type (a...a = (UKWN), INTL, NTN, LCL, LOC, CDP or SPN)
OGPS	(YES) NO	Outgoing Presentation Status
CCNI	(NO) YES	Call Number Indicator or CNi enabled on route
CNTL	(NO) YES	Changes to Controls or timers
- TIMR	aaa xxx	Trunk Timers (TIMR range definitions begin on page 462)
- SST	xx y	Seizure Supervision Timer in seconds
- DTD	(NO) YES	Dial Tone Detection
-- TABL	0-31	Flexible dial tone detection table number
-- XTDT	0-7	Extended Tone Detector Table Number

---

# LD 16

-- MDTD	1-(5)-31	Minimum Dial Tone Detection delay in seconds
-- DTFD	x y	Dial Tone Detector Fail threshold
-- SCDT	(NO) YES	Secondary Dial Tone detection will be used on route
-- 2 DT	(NO) YES	Secondary Dial Tone
- NEDC	aaa	Near End Disconnect Control (aaa = ORG or ETH)
- FEDC	aaa	Far End Disconnect Control (aaa = (ORG), ETH, JNT, or FEC)
CPDC	(NO) YES	SL-1 is the only Controlling Party on incoming calls
SPCT	aaa	Speech Path Cut-Through (aaa = (IMM) or DLY)
DLTN	(NO) YES	Dial Tone on originating calls
- TOV	(0)-3	Data Time-out Value
- PSEL	aaaa	Protocol Selection (aaaa = (DMDM) or TLNK)
- OPE	(NO) YES	Change data port Operating parameters
-- PSDS	(NO) YES	Public Switched Data Service option
-- TRAN	a...a	Transmission mode (a...a = (ASYN) or SYN)
-- PAR	a...a	Parity for data port (a...a = (SPAC), EVEN, MARK, or ODD)
-- DTR	(OFF) ON	Data Terminal Ready
-- DUP	aaaa	Duplex for data port (aaaa = (FULL) or HALF)
-- DCD	(ON) OFF	Data Carrier Detect
-- MOD	(NO) YES	Mode for synchronous operation
-- INT	(OFF) ON	Interworking
-- CLK	(OFF) ON	Clock source for synchronous operation
-- V25	(NO) YES	V.25 bis option for synchronous operation
-- HDLC	(NO) YES	High Level Data Link Control
-- DEM	aaa	Data Equipment Mode (aaa = (DCE) or DTE)
-- PBDO	(OFF) ON	Port Busy upon DTR Off
ANDT	(NO) YES	Automatic Number Identification Dial Tone
HOLD	ic dc ht	Hold failure threshold
SEIZ	ic dc	Seize failure threshold
RGFL	ic dc	Ring Failure threshold
RVSD	ic dc	Reversed wired CO trunk threshold
ILLR	ic dc	Illegal Ring threshold
SVFL	ic dc	Supervision Failure
OPCB	(NO) YES	Operator Call Back
- IMBI	(NO) YES	Perform Immediate Break-In on this route
- IMCB	(NO) YES	Perform Immediate Call Back on this route

---

- TOBO	(NO) YES	Toll Operator Break-Out
- BTCG	(NO) YES	Busy Tone to Calling Party disabled
- IHT	2-(30)-62	Number of seconds in increments of two
- OHT	0-(30)-126	Off-Hook Timer (2 second increments)
- OHTT	0-(30)-62	Toll Outgoing Calling Party Control call disconnect
- SRT	1-(30)-1023	Number of minutes on an outgoing CDPC call that a set is kept on-hold to a trunk (in increments of two)
- CGPC	(NO) YES	Calling Party Control
- CDCT	(NO) YES	Called Party Control
DDO	(NO) YES	Delay Digits Outpulsing for DOD and CO trunks
DRNG	(NO) YES	North American Distinctive Ringing for incoming calls
NDRI	(0)-4	Network Distinctive Ringing Index
BTUA	(NO) YES	Block Transfer of Unanswered Call
CDR	(NO) YES	Call Detail Recording
- INC	(NO) YES	CDR records generated on incoming calls
- LAST	(NO) YES	CDR record printing content option for redirected calls
- TTA	(NO) YES	Time To Answer output in CDR
- ABAN	(NO) YES	Abandoned call records output for this route
- QREC	(NO) YES	CDR ACD Q initial connection records to be generated
- OAL	(NO) YES	CDR on outgoing calls
-- OTL	(NO) YES	CDR on Outgoing Toll calls
-- AIA	(NO) YES	Answered call Identification Allowed
-- OAN	(YES) NO	CDR timing starts On Answer supervision of outgoing calls
-- OPD	(NO) YES	Outpulsed Digits in CDR
- CDRX	(NO) YES	Print CDRX records on multiple call transfer for non-PPM outgoing calls
- NDP	aaa 0-32	Number of Digits Printed (aaa = INC or EXC)
- CDRY	(NO) YES	CDR Public Network Feature Invoke records will be generated
CDRB	(NO) YES	Abandoned call on busy tone records
OPA	(NO) YES	Will generate CDR or CDAS record for PPM pulses
CCO	(NO) YES	Printing of CDR records for no PPM or AOC count
NATL	(YES) NO	North American Toll scheme
- TDG	x...x	Toll Digits
SSL	1-15	Special Service List number
CFWR	(NO) YES	Call Forward Restriction
- IDOP	(NO) YES	Identify Originating Party

---

# LD 16

VRAT	(NO) YES	Answer an Attendant Extended Call over VNS immediately on the incoming bearer trunk
MUS	(NO) YES	Music On-Hold
- MRT	0-511	Music Route number
MR	aaa	Message Registration (aaa = (NO), DURC, ENDC, PPM, RVB, STAC, or XLD)
DSPD	(NO) YES	Real Time AOC Display
PANS	(YES) NO	Pseudo Answer
RACD	(NO) YES	Route traffic information in ACD Reports
RUCS	0-9999	Route Unit Cost
RURC	x y	Route Unit Reference Cost
RUCF	x y	Route Unit Conversion Factor
MULT	(NO) YES	Multiplier for Charge Information
DSPT	0-(10)-60	Charge Display Timer
RPPM	xxx	Real-time Periodic Pulse Metering polling time in seconds
A1MR	(NO) YES	Answer is First Meter pulse
MANO	(NO) YES	Manual Outgoing trunk route
EQAR	(NO) YES	Enable Equal Access Restrictions
- GCR	(NO) YES	General Carrier Restriction to restrict Equal Access calls
-- NTOL	(DENY) ALLOW	North American Toll calls (i.e., 1+calls)
-- ITOL	(DENY) ALLOW	International Toll calls (i.e., 011+calls)
- SCR	(NO) YES	Selective Carrier Restriction to restrict Equal Access calls
DTOS	(NO) YES	Dial Tone on Outgoing Seizure
FRL	0-7 0-254	Facility Restriction Level
OHQ	(NO) YES	Off-Hook Queuing
OHQT	(0)-63	Off-Hook Queue Threshold
CBQ	(NO) YES	Call Back Queuing
NDIG	(2)-7	Number of Digits
AUTH	(NO) YES	Authcode
TDET	(NO) YES	Tone Detector required
TTBL	(0)-31	Tone Table number
PNNC	(NO) YES	Process Notification Networked Calls
- PNDL	2-(6)-10	Process Notification Delay Timer in seconds
- SLCT	TONE MSG	Select Tone or Message
- NRT	0-511	Notification Route number
- NMSG	(0)-30	Number of times Message is repeated

---

- PNPS	(0)-30	Interval between messages (2 seconds increments)
ATAN	(NO)	Attendant Announcement.
	YES	No Attendant Announcement.
	PSTN	Enable Attendant Announcement on this route.
		Enable Attendant Announcement on this route on PSTN calls only (For MCDN trunks only).
		Attendant announcement is available on DID/TIE and COT trunks only.
- ATBL	0 -31	Announcement profile table
		Uses announcement profile AANN defined in Overlay 56
- AAT	(NO) YES	Disable Alternative PC Attendant Announcement.
		Enable Alternative PC Attendant Announcement.
--AATO	(0) - 3	Alternative PC Attendant Announcement Time of Day Option for this Route
--ADAY	(0) - 3	Alternative PC Attendant Announcement Day of Week Option for this Route
--AHOL	(0) - 3	Alternative PC Attendant Announcement Holiday Option for this Route
--AATB	0 - 31	Announce profile table
		Uses announcement profile AANN defined in Overlay 56
-AAAO		Alternative PC Attendant Announcement
	(NO)	Where:
	CAA	(NO) = No call answer is given
	CAF	CAA = Call answer will be given on announcement
		CAF = Call answer will be given forced
		This prompt is for tone announcement valid only.
ACNI	(NO) YES	Accept Call Number Identification
OHT	0-(30)-126	Off-Hook Timer (2 seconds increments)
OHTD	(NO) YES	Off-Hook Timer Delay
PLEV	0-(2)-7	Priority Level
OPR	(NO) YES	Outpulsing Route
OPDL	(0)-8064	Outpulsing Delay in milliseconds
PRDL	(NO) YES	Partial Dial timing
EOS	(NO) YES	End-of-Selection Signal
DNSZ	(0)-7	Number of digits expected on DID routes
RCAL	aaa	Recall (aaa = (NO), ATT, or DRA)

# LD 16

MCTS	(NO) YES	Malicious Call Trace Signal
- MCCD	0-8	Malicious Call Trace request string
- MCDT	(0)-4	Malicious Call Trace Delay Time in seconds
- MCTM	(0)-30	Malicious Call Trace request Timer id
- MTND	(NO) YES	Malicious Call Trace Tandem Disconnect delay
FGNO	(0)-127	Feature Group D block number
CDPC	(NO) YES	Called Party Control
ALRM	(NO) YES	Malicious Call Trace Alarm is allowed for external calls
NCNI	(0)-7	Request CNI after the defined number of digits are received
CNIE	(NO) YES	Request CNI after an ESN code is dialed
CNIT	(NO) YES	Call Number Identification Trace
BTT	2-(30)-254	Busy Tone Time
ACKW	(NO) YES	Acknowledgment seizure signal
PECL	(NO) YES	Periodic Clearing Signal
DCTI	(0)-511	Time (in seconds) that an extension is allowed to ring or be On-hold or Call Park before the trunk is disconnected
NADT	(0)-255	No Answer Disconnect Timer in seconds
MON	(NO) YES	Monitoring for route
TIDY	xxxx yyyy	Trunk Identity
ATRR	(NO) YES	AC15 Timed Reminder Recall
TRRL	(NO) YES	Recall signal (may not) may be received and transmitted on this route
- FRIN	(NO) YES	Forward Release Indefinitely
-- FRRC	0-(4)-15	Forward Release Repetition Count
-- FRRS	(NO) YES	Forward Release Repetition Seize
--- FRRD	128-(384)	Forward Release Repetition Delay in milliseconds
--- RRBS	(NO) YES	Repeat Release Before Seize
- RLSM	(0)-15	Release Mechanism
CCB	(NO) YES	Collect Call Blocking enabled
- CCB1	512-(1536)-4992	Collect Call Blocking delay timer 1 in milliseconds
- CCB2	500-(1520)-2550	Collect Call Blocking delay timer 2 in milliseconds
CCBA	(NO) YES	Collect Call Blocking Allowed
ANIE	(0)-x	ANI table Entry for Route (configured in LD 15)
CISR	(NO) YES	CIS Route

---

- ANSZ	(7)-15	Size of the ANI information
- ANIC	(NO) YES	ANI Composing
- LEC	0-9999999	Local Exchange Code (used for building ANI messages)
- ADDG	0-(8)-9	Additional Digit to be used in ANI sequences
- ANDN	0-9999999	ANI DN
- DTOC	(NO) YES	Direct Toll Connection
- CTOC	aaaa	CIS Toll Outpulsing Criteria
- COAT	(NO) YES	Continue Outpulsing After ATO Timer expires
- CACD	(NO) BEF AFT	Defines how the CAC is displayed on the display of the set/ console.
- CACC	(NO) BEF AFT	Defines how the CAC is stored in the CDR.
- AANI	(NO) YES	Defines if the Automatic ANI request should be sent to the CIS CO when the incoming calls are originated from the CIS CO to the trunks within this route.
- ANFT	(CONT) FAIL ITDN	Defines the ANI Failure Treatment option.
- - ITDN	xxxx	Intercept DN (up to 8 digits) defines the DN to transfer the incoming calls which failed to provide ANI.
- CAC_CONV	(0)-31	CAC conversion table number for CIS gateway, configured against MFC_ENT in LD 15 Prompted only for non-outgoing R2MFC route
CAC	0-(3)-9	Specifies ANI category for an incoming trunk
CAC_CIS	0-(3)-9	CIS ANI Category Code
RDNL	0-(4)-7	Route DN length for ANI

---

# LD 16

## ATM: Automatic Trunk Maintenance data block

---

Prompt	Response	Comment
REQ	aaaa	Request (aaaa = CHG, END, LCHG, NEW, or OUT)
TYPE	ATM	Type of data block = ATM (Automatic Trunk Maintenance)
CUST	xx	Customer number associated with this route
ROUT	x...x	Route Number Where x...x = 0-511: Large System 0-127: Small System
DES	x...x	Designator field for trunk (0-16 character alphanumeric)
T100	n...n	T100 test line DN (2 to 10 digits)
PADT	0-63	Pad factor for T100 test line in dB
STND	(YES) NO	Standard T100 test line
NMNL	27-90	Noise Maintenance Limit
NOUT	27-90	Noise out-of-service limit
NTOF	(YES) NO	Near To Far measurement
- REF	n...n	Reference loop around DN (2 to 10 digits)
- TST	n...n	Test loop around DN
- PADL	0-63	Pad factor for loop around
EML	0-15	Expected Measured Loss
LMNL	0-15	Loss deviation Maintenance Limit
LOUT	0-15	Loss out-of-service deviation limit
DSBL	(0)-100	Percentage of trunks to be Disabled
MXTI	0-(5)-15	Maximum Time

---

---

## SCH: ATM Schedules data block

Prompt	Response	Comment
REQ	aaaa	Request (aaaa = CHG, END, LCHG, NEW, or OUT)
TYPE	SCH	Type of data block = SCH (ATM Schedules)
CUST	xx	Customer number associated with this route
HOUR	0-23	Hour to start Automatic Trunk Maintenance test
ROUT	x...x	Route Number Where x...x = 0-511: Large System 0-127: Small System
DES	x...x	Designator field for trunk (0-16 character alphanumeric)
MDMP	(NO) YES	Modem Data Module Pair
- MRAT	5-30	Modem Ring Again Timer
DTYP	aaa	Inbound/Outbound Data Port (aaa = (IOP), IDP, or ODP)
ADCP	(NO) YES	All-Digital Connection Prefix
OAMP	0-127	Outbound Modem Pool route number
IAMP	0-127	Inbound Modem Pool route number

---

# LD 16

## Meridian 911 Route data block

Prompt	Response	Comment
REQ	aaaa	Request (aaaa = CHG, END, LCHG, NEW, or OUT)
TYPE	RDB	Type of data block = RDB (Route data block)
CUST	xx	Customer number associated with this route
ROUT	x...x	Route Number Where x...x = 0-511: Large System 0-127: Small System
DES	x...x	Designator field for trunk (0-16 character alphanumeric)
TKTP	DID	DID trunk types must be used for M911 route
M911_ANI	YES	Receive ANI digits for M911 route
M911_TRK_TYPE	aaaa	Meridian 911 ANI trunk type (aaaa = (911T) or 911E)
M911_FORM	(1) 2	Automatic Number Identification Format
M911_ABAN	(NO) YES	Optional call abandon treatment
M911_TONE	(YES) NO	Optional call abandon tone
NPID_TBL_NUM	0-7	Meridian 911 route table index

---

## NPID: Numbering Plan Digit or Information Digit (NPID) Table

Prompt	Response	Comment
REQ	aaaa	Request (aaaa = CHG, END, LCHG, NEW, or OUT)
TYPE	NPID	Type of data block = NPID
IDTB	0-7	ID table index
NPID	0-9	Numbering Plan Digit or Information Digit
TRMT	a...a	NPID Treatment (a...a = (NONE), FAIL, TEST, or NPA)
-NPA	nnn	Numbering Plan Area

---

## Release Mechanism Options

The following table indicates whether a release signal is acknowledged or not. YES indicates the release signal is acknowledged, NO indicates the release signal is not acknowledged.

**Table 1**  
**Release Mechanism Options**

RLSM Option	Incoming Calls		Outgoing Calls	
	Originator On-Hooks first	Terminator On-Hooks first	Originator On-Hooks first	Terminator On-Hooks first
0	NO	NO	NO	NO
1	NO	NO	NO	YES
2	NO	NO	YES	NO
3	NO	NO	YES	YES
4	NO	YES	NO	NO
5	NO	YES	NO	YES
6	NO	YES	YES	NO
7	NO	YES	YES	YES
8	YES	NO	NO	NO
9	YES	NO	NO	YES
10	YES	NO	YES	NO
11	YES	NO	YES	YES
12	YES	YES	NO	NO
13	YES	YES	NO	YES
14	YES	YES	YES	NO
15	YES	YES	YES	YES

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
2DT	(NO) YES	Secondary Dial Tone	xpe-18
A1MR		Answer is First Meter pulse	permd-18
	(NO)	Meter pulses are counted from the moment of seizure of the outgoing trunk. When the trunk answers, the PPM count is left unchanged.	
	YES	Meter pulses received before Answer are invalid. Answer is taken as the start of the first charging period (i.e., when an answer signal is received the PPM count is incremented). Meter pulses mark the start of the subsequent charging periods.	
		A1MR is prompted when DTRK = YES, DGTP = DTI2, and MR = PPM.	
AAAO		Alternative Attendant Announcement	
	(NO) CAA CAF	No call answer is given 0-31. Call answer will be given on announcement. Call answer will be given forced.	-25.4
		This prompt is for tone announcement valid only.	
AANI	(NO) YES	Defines if the Automatic ANI request should be sent to the CIS CO when the incoming calls are originated from the CIS CO to the trunks within this route.	cist-24
AAT	(NO) YES	Disable Alternative Attendant Announcement. Enable Alternative Attendant Announcement.	atan-25.4
AATO	(0) - 3	Alternative Attendant Announcement Time of Day Option for this Route.	atan-25.4
AATB	xx	Announce profile table. Where xx = 0-31 0-31 uses announcement profile AANN defined in Overlay 56	atan-25.4
ABAN	(NO) YES	Abandoned call records output for this route	fcdr-18

Prompt	Response	Comment	Pack/Rel
ACKW	(NO) YES	Acknowledgment seizure signal is expected after seizure of a DID/DOD trunk	xpe-16
ACMP	(NO) YES	Automatic Camp-On calls to busy auto terminate Line	
ACNI	(NO) YES	Accept Call Number Identification This DPNSS route (does not allow) allows R2MFC CNI sent as an OLI string in the initial message (ISRM). Prompted when: IDA package equipped MFC package equipped TKTP = IDA SIGL = DPN/APNS	dpnss-20
ACNO	0-99	AIOD Customer Number Refer to the CUST prompt in LD 15 for details.	aiod-1
ACOD	x...x	Access Code for the trunk route The ACOD must not conflict with the numbering plan. Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	basic-1
ADAY	(0) - 3	Alternative Attendant Announcement Day of Week Option for this Route.	atan-25.4
ADDG	0-(8)-9	Additional digit(s) to be used in ANI sequences. If LEC and the DN to be transmitted consist of less than seven digits, ADDG is used as the last digit(s) of the ANI sequence. Prompted if: 1. Commonwealth of Independent States (CIST) package 221 is equipped 2. ICOG = OGT 3. TKTP = COT (for analog trunks, TKTP must = DID) 4. DGTP = DT12	cist-21

# LD 16

Prompt	Response	Comment	Pack/Rel
		If ANIC is NO or if ANIC=YES but the ANI entry associated with the originator of the call is not configured. It is used to complete ANI DN if LEC+ANI DN consists of less than ANSZ digits. Prompted for outgoing CIS route. May be from 1 up to the ANSZ length.	cist-24
ADDP		Add Public Prefixes	euroidn-22
	(NO)	The prefixes 0 (National) or 00 (International) <i>are not</i> added to the Calling Party Number if the Type of Number (TON) is Public on the set/attendant displays	
	YES	The prefixes 0 (National) or 00 (International) <i>are</i> added to the Calling Party Number if the Type of Number (TON) is Public on the set/attendant displays	
ADCP	(NO) YES	All-Digital Connection Prefix assigned to customer	basic-5
AHOL	(0) - 3	Alternative Attendant Announcement Holiday Option for this Route.	atan-25.4
AIA	(NO) YES	Answered call Identification Allowed Enter YES to output an "A" in the CDR TerID field to indicate answered calls. Prompted when OAL = YES or OTL = YES.	cdr-13
AIOD	(NO) YES	Identification of outgoing calls	aiod-1
ALRM	(NO) YES	Malicious Call Trace Alarm is allowed for external calls	mct-10

Prompt	Response	Comment	Pack/Rel
ANDN	0 - 9999999	<p>ANI DN</p> <p>ANDN is used for building ANI messages. ANDN is prompted if Commonwealth of Independent States (CIST) package 221 is equipped.</p> <p>ANDN is not prompted if the route is outgoing only (ICOG = OGT) and TKTP is not COT (for analog trunks, not DID).</p> <p><u>Incoming route:</u></p> <p>If ANDN is defined, it will be used as ANI DN in CDTI2/ CSDTI2 ANI messages when this incoming trunk is the originator of an outgoing CDTI2/ CSDTI2 call. If ANDN is not defined, the the ANDN of the outgoing CDTI2/ CSDTI2 trunk is used.</p> <p><u>Outgoing route:</u></p> <p>Default ANI DN in CDTI2/ CSDTI2 ANI messages. If the ANI DN of the call originator cannot be used, then ANDN for the outgoing CDTI2/ CSDTI2 route is used. This will happen for sets with CLS DNAD and for incoming routes if ANDN is not defined.</p>	cist-21
		<p>May be from 0 up to the ANSZ length.</p> <p>Prompted for outgoing CIS route.</p> <p>Used for building ANI message if ANIC=NO and DN of set is not allowed to be sent (CLS DNAD). Also used if ANIC=YES but the ANI entry associated with the originator of the call is not configured, and DN of set is not allowed to be sent (CLS DNAD).</p>	cist-24
	X	Remove ANDN	
ANDT	(NO) YES	Automatic Number Identification Dial Tone	ani-1
ANFT		Defines the ANI Failure Treatment option.	cist-24
	(CONT)	Provide call to the required destination	
	FAIL	Drop the call	
	ITDN	Transfer call to the intercept DN defined by the ITDN prompt	

# LD 16

Prompt	Response	Comment	Pack/Rel
ANIC	(NO) YES	<p>ANI Composing Prompted for outgoing CIS route.</p> <p>If ANIC=NO, old ANI composing is used: if the originator of the call is a set, ANI message will consist of the CAC of the originator + the LEC of the outgoing route + the DN of the originator or the ANDN of the outgoing CIS route, depending on the class of service (DNAA/DNAD) of the set. If the originator of the call is an incoming route, the components of the ANI message are retrieved from default ANI entries and/or from the data block of the outgoing CIS route.</p> <p>If ANIC=YES, the following is done:</p> <p>If no entry is associated to the calling set (ANIE=0), then old ANI composing is used.</p> <p>If an ANI entry is associated to the calling set (ANIE has a non-zero value), but the associated ANI entry is not configured, then old ANI composing is used.</p> <p>If an ANI entry is associated to the calling set (ANIE has a non-zero value), and the associated ANI entry is</p>	cist-24
ANIE	(0)-x	<p>ANI table Entry for Route (configured under prompt R_ENTRY, LD 15)</p> <p>x= R_SIZE-1</p> <p>R_Size is the maximum table entry number that can be configured. (R-SIZE is defined in LD 15)</p>	cist-24
ANKP	(NO) YES	KP signal suppressed	cam-1
ANSZ	(7)-15	<p>Size of the ANI information This is the length of LEC+ANI DN For analog routes, the only valid response is 7</p>	cist-24
ANTK	x...x	<p>ANI identifier number</p> <p>Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. In either case, together with ANLD and ANI Listed DN in LD 15, the total number of digits must be no less than 7.</p>	ani-1
ARNO	0-511	AIOD route number	aiod-1
ASTP	1-(2)-15	ADM Step-forward ring cycles	adm-12

Prompt	Response	Comment	Pack/Rel
ASUP	(NO) YES CO	Do not return Answer Supervision by RAN to originator Return Answer Supervision by RAN to originator Return Answer supervision only if the originator is a CO trunk  The operation of answer supervision is affected with FCC Compliance for DID Answer Supervision (FC68) package 223. Refer to FCC Compliance for DID Answer Supervision, in <i>Features and Services</i> (553-3001-306).	ran-1
ATAN	(NO) YES PSTN	Attendant Announcement. No Attendant Announcement. Enable Attendant Announcement on this route. Enable Attendant Announcement on this route on PSTN calls only (For MCDN trunks only).  Attendant announcement is available on DID/TIE and COT trunks only.	atan-25.4
ATBL	xx	Announcement profile table.  Where xx = 0-31 0-31 uses announcement profile AANN defined in Overlay 56.	atan-25.4
ATDN	(0)-x...x	Attendant DN of conventional main, ESN main, ESN node or ETN node. Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	casm-5
ATGT	(0)-60	Add on Data Module (ADM) Trunk Guard Timer  Two-second increments up to one minute, odd entries are rounded down to the next valid number.	adm-12
ATRR	(NO) YES	AC15 Timed Reminder Recall. Prompted with AC15 Recall (ACRL) package 236.	arcl-20
ATTK	xxxx	AIOD identifier number	aiod-1
ATVR	(NO) YES	Present call has higher precedence (called party cannot be preempted)	atvn
AUDN	xxxx	Auto termination DN for ISA service routes  Prompted when ISAR = YES and AUTO = YES. This must be an existing DN, and cannot be deleted. When DNIS = YES, it must be an ACD DN.	

# LD 16

Prompt	Response	Comment	Pack/Rel
AUTH	(NO) YES	Authcode to be prompted for incoming NARS/BARS calls	baut-1
AUTM	(NO)YES	Automatic Mode for MFE, MFK5 or MFK6	mfc-9
AUTO	YES (NO)	Auto-Terminate The route members terminate on DN defined by response to ATDN prompt in LD 14. The route members terminate normally at the console.  Only ACD DNs or DISA DNs support Auto-Terminate trunks. In order to set AUTO = YES for TIE, DID and CCSA trunks, all members of the route must have STRI = IMM in LD 14.	basic-1
BAND	(0) - 99	OUTWATS band number.	cbc_pkg-23
BCOT	(0) - 4000	B-channel Overload Control timer value indicates the delay the M1 PBX will introduce (in milli seconds) before starting the actual disconnect sequence.	isdn- 23
BDCT	(NO) YES	Enable broadcast capability for this route.	ranbrd- 23 ran- 23
BDSP	(NO) YES	Billing Number is not displayed at the CO Billing Number is displayed at the CO	basic-21
BILN	(NO) YES	Billing Number is not required Billing Number is required	basic-21
BLEN	1-(10)-16	Billing Number Length	basic-21
BNUM	0-9999	Billing Number  Depending on your response to BLEN, BNUM can be from 1 to 16 digits.  If BLEN is changed, a new BNUM must be entered. If the BNUM entered is less than the BLEN specified, the BNUM will be padded with leading zeros.	basic-21
BRIP	(NO) YES	ISDN BRI Packet handler route	bri-18
BSSU	(NO) YES	Backward Signal Suppression for undefined signal	mfc-9

Prompt	Response	Comment	Pack/Rel
BTCG	(NO) YES	Busy Tone to Calling Party disabled	opcb-14
BTT	2-(30)-254	Busy Tone Time Length of busy/overflow to be returned on DTI routes in seconds.	xct1-16
BTUA	(NO) YES	Block Transfer of Unanswered call	pra-14
CAC	0-(3)-9	Specifies ANI category for an incoming trunk.  CAC is used to build ANI messages on an outgoing trunk connected to this trunk. CAC is prompted if Commonwealth of Independent States (CIST) package 221 is equipped.  However, CAC is not prompted if the route is outgoing only (ICOG = OGT) and TKTP is not COT (for analog trunks, not DID).	cist-21
CACC	(NO) BEF AFT	Defines how the CAC is stored in the CDR. The options are  Do not store CAC Store CAC before the ANI Store CAC after the ANI	cist-24
CAC_CIS	0-(3)-9	CIS ANI Category Code range and default values	cist-24
CAC_CONV	(0)-31	CAC conversion table number for CIS gateway, configured against CIS_ENT in LD 15  Prompted only for non-outgoing CIS DTI2 route	cist-24
CACD	(NO) BEF AFT	Defines how the CAC is displayed on the display of the set/console. The option also controls presentation of the CAC in the messages to the auxiliary processors  Do not display CAC Display CAC before the ANI Display CAC after the ANI	cist-24
CAT	00-99	CAMA Trunk route category digits Prompted if SIGL = NT4 or NT5	cama-1

# LD 16

Prompt	Response	Comment	Pack/Rel
CBQ	(NO) YES	Call Back Queuing Use only for incoming TIE calls.	bque-1
CBCR	(NO) YES	Service route indicator	cbc_pkg-23
CCB	(NO) YES	Collect Call Blocking disabled on incoming route Collect Call Blocking enabled on incoming route  The route must be: <ol style="list-style-type: none"><li>1. either incoming or incoming and outgoing</li><li>2. COT, DID, FEX, or WAT</li><li>3. neither ISDN nor M911</li></ol> This prompt appears with Collect Call Blocking (CCB) package 290.	ccb-21
CCB1	512-(1536)-4992	Collect Call Blocking delay timer 1 (ms). The input is rounded to the next multiple of 128 ms.	ccb-21
CCB2	500-(1520)-2550	Collect Call Blocking delay timer 2 (ms). The input is rounded to the next multiple of 10 ms.  If any CCB route members (trunks) are using firmware timing (FWTM = YES in LD 14), the CCB2 timer will not change until the new timer value is downloaded to the card. This can be done by either enabling the card or initializing the switch. CCB2 is prompted when CCB = YES.	ccb-21
CCBA	(NO) YES	Collect Call Blocking denied (regular answer signal transmits) Collect Call Blocking Allowed (CCB answer signal transmits)  CCBA is used for outgoing routes when a call tandems out on this route. For example, collect calls will not be accepted on a RAN or TIE route when CCBA = YES. When CCBA = NO, these routes can accept collect calls.  This prompt appears with Collect Call Blocking (CCB) package 290.	ccb-21
CCNI	(NO) YES	Call Number Indicator enabled on route	mfc-15

Prompt	Response	Comment	Pack/Rel
CCO	(NO) YES	Printing of CDR records for no PPM or AOC count Prompted when OAL = YES or OTL = YES	cdr-10
CDCT	(NO) YES	Called Party Control is not enabled on incoming calls when MFC IDCT signal is sent Called Party Control is enabled on incoming calls when MFC IDCT signal is sent	opcb-14
CDPC	(NO) YES	Called Party Control is not enabled when MCT feature is activated. Called Party Control is enabled when MCT feature is activated. Prompted when OPCB = YES	supp-14
CDR	(NO) YES	Call Detail Recording Set and change CDR options for this route.	cdr-1
CDRB	(NO) YES	Abandoned call on busy tone records.	cdr- 23
CDRX	(NO) YES	Print CDRX records on multiple call transfer for non- PPM outgoing calls.  This prompt appears if CDRX package is equipped and MR is not equal to PPM. Also CDR = YES, TKTP = COT or DID for International DID/DOD and ICOG cannot be ICT.	cdrx-20
CDRY	(NO) YES	CDR Public Network Feature Invoke records will be generated	ddsp-20
CFWR	(NO) YES	Call Forward Restriction	supp-10
CGPC	(NO) YES	Calling Party Control on incoming calls on this route is not enabled Calling Party Control on incoming calls on this route is enabled	opcb-14
CHRG	(BLOK) LINE	A DOD Call over this MFK route must signal the CO that it wishes to be charged by block. A DOD Call over this MFK route must signal the CO that it wishes to be charged by line.	kd3-20

# LD 16

Prompt	Response	Comment	Pack/Rel
CHTY	(BCH) ABCH	Channel Type B-channel A/B bit signaling Prompted when DTRK = YES, ISDN = YES and Mode = PRA.	pra-12
CISR CLEN	(NO) YES 0 - (1)- 3999	CIS Route. CLID entry number.  This prompt is given only for non-ISDN routes (i.e. ISDN = NO and ISAR = NO).  1 - (10) - 16	cist-24 esa- 23
CLK	(OFF) ON	External Clock source Internal Clock source Prompted if TKTP = MCU and TRAN = SYN	basic-18
CLS	(CTD) CUN FR1 FR2 FRE SRE TLD UNR	Class of Service access restriction. Prompted if TKTP = TIE. Conditionally Toll Denied Conditionally Unrestricted Fully restricted class 1 Fully restricted class 2 Fully restricted Semi-Restricted Toll Denied Unrestricted	isa-12

Prompt	Response	Comment	Pack/Rel
CLID		Calling Line Identification. CLID is prompted only for UIPE-based protocols.	euroisdn-22
	OPT0	Prefix = 0 for North American dialing plan. OPT0 is the default for ESIG and ISIG interfaces.	
	OPT1	Prefix = 1 for international PFXs in CLID. Any numbering type is supported. OPT1 is the default for all EuroISDN interfaces.	
	OPT2	Prefix = 2, for international PFXs in CLID. CCITT numbering types supported are: UKWN, INTL, NPA, and NXX. OP2 is the default for CO/DID routes for the Telecom New Zealand interface.	
	OPT3	Prefix = 3 for international PFXs in CLID. Only the NXX number type is supported. OPT3 is the default for TIE routes for the Telecom New Zealand interface.	
	OPT4	For international COs, if the call originates from a CO trunk type, add nothing. Otherwise, add PFX1 and PFX2. OPT4 is the default for all Asia Pacific interfaces.	
	OPT5	This is the same as OPT4, except it supports a maximum of 10 digits in the CLID. OPT5 is the default for the Austrian interface.	
CNEG	(NO) YES	Channel Negotiation Channel Negotiation not allowed Channel Negotiation allowed CNEG is prompted if IFC = 1TR6, Numeris, APAC or D70.	bri-20

# LD 16

Prompt	Response	Comment	Pack/Rel
CNIE	(NO) YES	Request CNIE after an ESN code is dialed. The ESN code could be a Distant Steering Code (DSC), Trunk Steering Code (TSC), NARS Access Code 1 (AC1) or NARS Access Code 2 (AC2).  If NCNI > 0 and CNIE = YES, CNIE is requested when either one of the conditions is first met. CNIE is prompted when the following occur:  MFC package is equipped TKTP = DID or TIE MFC Table = R2MF MFC signaling table is defined for the route	dpnss-20
CNIT	(NO) YES	Call Number Identification Trace Request MFC Call Number Identification digits only if dialed station has MCTA Class of Service. Prompted when the following occur:  1. MCT and MFC packages are equipped 2. TKTP = DID or TIE 3. MFC = R2MF 4. MFC signaling table is defined on the route	supp-15
CNTL	(NO) YES	Changes to controls or timers	basic-1
CNTY	(ESTI) AUS AUST BEL CHNA CIS DEN DUT EAUS EIR ESP FIN FRA GER HKNG INDI INDO ITA JAPN	Country ETS 300-102 basic protocol Austria Australian UIPE PRI Belgium China Commonwealth of Independent States Denmark Holland Australia Ireland Spain Finland France Germany Hong Kong India Indonesia Italy Japan ISDN UIPE connectivity	supp-9    basic-23 euro- 23   ipra-24   euro- 23  isdn-24 basic-23  basic- 23

Prompt	Response	Comment	Pack/Rel
	MSIA	Malaysia connectivity	basic-23
	NET	ETSI network side protocol	
	NOR	Norway	
	PHLP	Philippines	isdn-24
	POR	Portugal	
	SING	Singapore	
	SWE	Sweden	
	SWI	Switzerland (BRI only)	
	TAIW	Taiwan	isdn-24
	TCNZ	New Zealand BRI	
	THAI	Thailand	
	UK	United Kingdom	
CNVT	(NO) YES	Conventional switch route Prompted with Network Signaling (NSIG) package 37.	nars-5
COAT	(NO) YES	Continue Outpulsing After ATO Timer expires	cist-24
COTR	0-511	DID/CO Trunk Reference route number	pra-12
CPDC	(NO) YES	Determines how incoming public call types are handled for the associated Integrated Service Access route or ISA. Prompted when TKTP = ISA and IFC = D100 or SL-1 and NSF = NO or YES. Precede with X to delete. SL-1 is the only controlling party on incoming calls. If CPDC = YES, the connection stays up until it is disconnected by SL-1. This is used for 911 emergency services.	basic-1
CPFXS	(YES)	Customer-defined Prefixes option. When constructing the Calling or Connected Line Identification, the prefixes are retrieved from the Customer Data Block via the PFX1 and PFX2 prompts in LD 15, as is currently done.	euroisdn-22
	NO	When constructing the Calling or Connected Line Identification, the prefixes are retrieved from the Route Data Block via the HNTN and HLCL prompts in LD 16.	

# LD 16

Prompt	Response	Comment	Pack/Rel
CPP	(NO) YES	Calling Party Privacy/Calling Party Privacy Override Flag provisioned for this route A response of YES indicates that the CPP feature is recognized in this trunk route. CPP is prompted only if: <ol style="list-style-type: none"><li>1. CPP package 301 is equipped</li><li>2. trunk is either OGT or IAO</li><li>3. non-ISDN option</li><li>4. trunk route type = COT, DID, FEX or WAT</li></ol>	cpp-24
CTOC	(DTDO) AADT  ANIO AODT	CIS Toll Outpulsing Criteria Dial Tone Detection only Automatic Number Identification And Dial Tone Connection Automatic Number Identification Only Automatic Number Identification Or Dial Tone Connection	cis-24
CTON	(NCHG) UKWN INTL NATL LOCL	Calling Party Number  Call Type will not be changed. Unknown call type. International call type. National call type. Subscriber call type.	basic-25.4
CTYP	(UKWN) CDP INTL LOC NPA NXX SPN	Call Type for outgoing direct dialed TIE route Unknown Call type Coordinated Dialing Plan International number Location code National number Subscriber number Special Number for other than international number format  The CTYP is used by the receiving switch so that it can associate a call with a call type and perform ESN access code insertion. This option only applies to direct dialing using trunk access codes. NARS and BARS dialing do not apply here.	pra-15

Prompt	Response	Comment	Pack/Rel
		If you intend to respond YES to prompt ISAR, use the default <cr> for this prompt. If ISAR = YES, then CTYP prints UNWN and does not permit you to enter a response.	
CUST	xx	Customer number associated with this route as defined in LD 15	basic-1
DAPC	(NO) YES	Display of Access Prefix on CLID	isdn-24
DCD	(ON) OFF	Data Carrier Detect Data Carrier Detect lead follows state of lead on device to which it is connected. Data Carrier Detect lead forced active. Prompted if TKTP = R232 or MCU.	
DCDR	(NO) YES	Include DNIS number in CDR records This prompt appears for ISDN routes to support Network ACD.	dnis-19
DCH	0-159	D-channel number	isdn-16
DCHI	1-15	DCHI Port Number. Prompted when MODE = ISLD. DCHI Port number must be defined in LD 17	pra-12
DCNO	(0)-254	Day IDC tree number	idc-12
DCTI	(0)-511	Time, in seconds, that an extension is allowed to ring or be On-Hold or Call Park before the trunk is disconnected.  Respond with a value equal to the number of seconds a set is to ring after recall, plus the value of the Call Park Recall Timer. The Call Park Recall Timer is defined in LD 50 in response to the CPTM prompt. Default or <cr> means that the condition goes on indefinitely. The value stored - which will be the closest lower multiple of four - is echoed back upon entry.	
DDLY	(NO) YES	DNIS Interdigit Delay A fixed interdigit delay of 4 seconds is assigned to all digits until NDGT is reached. A fixed interdigit delay of 12 seconds is assigned to the first three digits, and a delay of 4 seconds is assigned to all subsequent digits.	dnis-26

# LD 16

Prompt	Response	Comment	Pack/Rel
DDMI	(0)-127 (0)-255	Digit Manipulation Index Basic Alternate Route Selection Network Alternate Route Selection Prompted with either Basic Alternate Route Selection (BARS) package 57 or Network Alternate Route Selection (NARS) package 58.	nars-5
DDO	(NO) YES	Delay Digits Outpulsing for DOD and CO trunks Prompted with International Supplementary Features (SUPP) package 131 and ICOG = OGT or IAO.	supp-15
DEM	(DCE) DTE	Data Equipment Mode. Prompted if TKTP = R232. Data Carrier Equipment Data Terminal Equipment	basic-18
DES	x...x	Designator field for trunk groups of 0-16 alphanumeric characters (this is an optional entry)	basic-22
DEXT	(NO) YES	Display External dialed digits Do not display original digits Display original digits pre converted Prompted if AUTO = NO, DNIS = NO and IDC = YES.	icd-12
DGTP	BRI DTI DTI2 JDMI PRI PRI2	Digital Trunk Type for route. ISL routes that use Phantom Trunk TNs must be configured as DTI2 routes. Basic Rate Interface (Allowed if TKTP = TIE, COT or DID and BRIP = NO) 1.5 Mb/s DTI (If BRIP = NO, then default is DTI) 2.0 Mb/s DTI Japan Digital Multiplex Interface. This response is allowed if either 2 Mbit Digital Trunk Interface package 129 or 2 Mbit Primary Rate Interface package 154 is equipped. ISDN 23B + D (If BRIP = YES, then default is PRI) ISDN 30B + D	pra-14
DIDD	(0)-15	Number of leading digits ignored for DID call during Overlap Receiving	brit-18
DIG#	1-(4)-9	Number of Digits	mfc-9
DIGS	4-(5)	Number of Digits	mfc-9

Prompt	Response	Comment	Pack/Rel
DLTN	(NO) YES	Dial Tone on originating calls Provide dial tone to the far end when the trunk has been accessed from the far end.	basic-1
DMOD	1-127	Default Model number for this route (Small System and Succession 1000)	basic-16
DNAM	(NO) YES	Display IDC name Prompted with Calling Party Name Display (CPND) package 95. Prompted following NDNO if DNIS = YES.	dnis-17
DNIS	(NO) YES	ACD DNIS route Prompted with Automatic Call Distribution Package D (ACDD) package 50, and the RTYP = TIE or DID.	dnis-10
DNSZ	(0)-7	Number of digits expected on DID routes 0 indicates no fixed number	supp-10
DAPC	(NO) YES	Display of Access Prefix on CLID	isdn-24
DPPI	(1167) nnnn	Privacy indicator for a dial-pulse trunk. Any arbitrary digit (0-9) sequence up to 4 digits may be entered. If CPP prompt is changed from NO to YES and <cr> is entered, DPPI defaults to 1167.	cpp-21
DPPO	(1182) nnnn	Privacy Override Indicator for a dial pulse trunk. nnnn = any arbitrary digit (0-9) sequence up to 4 digits in length. DPPO is defaulted to 1182 if CPP is changed from NO to YES and <CR> is entered	cpp-23
DRNG		North American Distinctive Ringing for incoming calls	drng-8
	(NO)	For TIE trunks to provide normal ringing (i.e., make/ break/ make/ break, 0.25 sec./ 0.25 sec./ 2.25 sec. to incoming calls terminating on stations)	
	YES	For CO trunks to provide distinctive ringing (i.e., make/ break, one second/two seconds to incoming calls terminating on stations).  Distinctive Ringing only applies to CAM, COT, DID, FEX, TIE and WAT trunks. These trunks cannot be configured as outgoing only for prompt ICOG.	

# LD 16

Prompt	Response	Comment	Pack/Rel
DRNG	(NO) YES	Japan Distinctive Ringing	drng-9
DSBL	(0)-100	Percentage of trunks to be disabled if loss or noise reaches the out-of-service limit	atm-7
DSEL	(VOD) DTA TDN VCE 3DTA 3VCE 7VOD  7DTA	Data Selection Voice or Data route Data-only route Transparent Data Network Voice-only route Data route and 3.1 kHz Voice route and 3.1 kHz Route supports voice or data calls and the telephony 7 khz/Video telephony teleservices Route supports data calls and the telephony 7 khz/Video telephony teleservices Prompted if DGTP = DTI, DTI2 or JDML.	basic-19       euro-24
DSPD	(NO) YES	Real Time Advice Of Charge Display Do not display charge information during call Display charge information during call  DSPD applies to Aries sets (M2006, M2008, M2016, M2216, and M2616) on a per route basis. To activate this feature, the prompt MR must be set to either DURC or ENDC.	isdn-22
DSPT	0-(10)-60	Charge Display Timer in seconds  DSPT determines how long charge information is display at the end of the call.	isdn-22
DTD	(NO) YES	Dial Tone Detection	dtd-10
DTDF	x y	Dial Tone Detector Fail threshold. Where: x = increment threshold = 1-(2)-15 y = decrement threshold = 1-(2)-15	dtd-10
DTOC	(NO) YES	Direct Toll Connection	
DTOS	(NO) YES	Dial Tone on Outgoing Seizure Prompted if SIGL = DAS.	dass2-16

Prompt	Response	Comment	Pack/Rel
DTPI	(*67) nnnn	Privacy indicator for a digitone trunk  Any arbitrary digit (0-9) sequence up to 4 digits can be specified. Only the first digit may be an asterisk (*). If CPP prompt is changed from NO to YES and <cr> is entered, DTPI defaults to *67.	cpp-21
DTPO	(*82) nnnn	Privacy Override indicator for a digitone trunk.  nnnn = Any arbitrary digit (0-9) sequence up to 4 digits in length. The Asterisk (*) can only be entered as the first digit. DTPO is defaulted to *82 if CPP is changed from NO to YES and <CR> is entered	cpp-23
DTR	(OFF)  ON	Data Terminal Ready. Prompted if TKTP = R232 or MCU.  DTR lead follows state of the lead on the device to which it is connected DTR lead always forced active	basic-18
DTRK	(NO) YES	Digital Trunk Route.  Prompted with PBX Interface for:  DTI/CPI (PBXI) pkg 75 2 Mbit Digital Trunk Interface (DTI2) pkg 129 Japan Digital Multiplex Interface (JDMI) pkg 136 ISDN Primary Rate Access (PRA) pkg 146, or 2 Mbit Primary Rate Interface (PRI2) pkg 154	dti-5
DTYP	(IOP) IDP ODP	Inbound/Outbound Data Port Inbound Data Port Outbound Data Port	amp-5
DUP	(FULL) HALF	Duplex for data port Full duplex Half duplex Prompted if TKTP = MCU.	basic-18
EMGY	(NO) YES	Emergency Route	basic-24
EML	0-15	Expected Measured Loss (in dB)	atm-7
EOS	(NO) YES BSY	No End-of-Selection signal on DID routes End-of-Selection signal is enabled EOS and busy signals are enabled	supp-10

# LD 16

Prompt	Response	Comment	Pack/Rel
EQAR	(NO) YES	Enable Equal Access Restrictions Prompted when TKTP = CO, FEX, WAT, or ISA, and ICOG = OGT, or IAO.	eqa-17
ESN	(NO) YES	Electronic Switched Network pad control for NT8D15 XEM card.  This only applies to trunk routes whose members may use 4-wire E&M or DX signaling on an Electronic Switched Network. This prompt is the replacement for the ESN switch setting on the QPC237 circuit card.  When YES is selected, a 1 dB improvement in loss levels is provided on trunk to trunk calls using the NT8D15 units.  Prompted with Network Alternate Route Selection (NARS) package 58 and Meridian 1 Extended Peripheral Equipment (XPE) package 203.	xpe-15
FACN	(0) - 99999	Tie or FX facility number.	cbc_pkg- 23
FACY	(NO) YES	Facility indicator for Private or TIE connection. Tie connection in the NSF IE Private connection in the NSF IE  Trunk routes to a DMS-250 automatically have FACY set to YES. All others default to NO.  FACY is prompted when TKTP = TIE, ISAR = YES, and IFC = D100, D250 or S100.	isa-17
FALT	(NO) YES	Recognition of DTI2 ABCD FALT signal for ISL Prompted for DTI2 ISL routes.	pedm-18
FEDC	(ORG)	Far End Disconnect Control  This entry should correspond to the type of disconnect control used by the far end apparatus of this trunk route. Loop start trunks may be assigned either ORG or ETH.  Originating end control The apparatus recognizes conditions on the near end only for calls originated by the Meridian SL-1. This does not allow trunk to trunk connections.	basic-1

Prompt	Response	Comment	Pack/Rel
	ETH	<p>Either end control</p> <p>Conditions at the near end are recognized for both incoming and outgoing calls. This allows trunk to trunk connections subject to normal access restrictions. (e.g., TGAR)</p> <p><b>Note:</b> If SUPP (131) package is disabled, then outgoing trunk to trunk transfer is allowed only when the response for FEDC and NEDC is ETH.</p>	
	FEC	<p>Far end control</p> <p>FEC allows trunk to trunk connections. FEC involves the following sequences for disconnect at the near end:</p> <p>When the near end goes on-hook first, the DSI (half disconnect) timer starts. If the far end of the trunk goes on-hook before the DSI timer runs out, then the trunk is idled immediately and the DSI timer is cancelled. If the DSI timer expires, the trunk is locked out until an on-hook is received from the far-end, at which time the SL-1 idles the trunk.</p>	
	JNT	<p>Joint control</p> <p>JNT disallows trunk to trunk connections.</p>	
FGNO	(0)-127	Feature Group D block number	fgd-17
FORM	M1A M2B M3C	<p>Format 1 for CAMA trunk signaling</p> <p>Format 2 for CAMA trunk signaling</p> <p>Format 3 for CAMA trunk signaling</p>	cama-1
FRIN	(NO) YES	<p>Forward Release Indefinitely</p> <p>Forward Release is not resent.</p> <p>Forward Release is resent every time the Disconnect Supervision timer expires and the Disconnect Supervision timer is restarted.</p> <p>Prompted if DTRK = YES and DGTP = DTI2.</p>	pedm-18
FRL	0-7 0-254	Facility Restriction Level (FRL) and New Flexible Code Restriction (NFCR) tree number for this route	basic-1

# LD 16

Prompt	Response	Comment	Pack/Rel
FRRC	0-(4)-15	Forward Release Repetition Count  This represent the number of times a Forward Release signal is resent before an error message is printed, if an acknowledgment is expected but not received.  The length of time the software waits for acknowledgment before re-sending the signal is given by the Disconnect Supervision timer.  Prompted if FRIN = YES.	pedm-18
FRRD	128-(384)-1920	Forward Release Repetition Delay in milliseconds  This is the delay between sending the seize message and the Forward Release. The accuracy of this timer is governed by the accuracy of the 128 millisecond timing queue.  Prompted if FRIN = YES and FRRS = YES.	pedm-18
FRRS	(NO)  YES	Forward Release Repetition Seize Do not re-seize the trunk before re-sending the Forward Release. Re-seize the trunk before re-sending the Forward Release. Prompted if FRIN = YES.	pedm-18
GCR	(NO) YES	General Carrier Restriction to restrict Equal Access calls.	eqa-19
GRD	(IDLE)  PLAY	Ground Start Arrangement RAN machine send ground signal when idle.  RAN machine send ground signal when playing.	ranbrd-23 ran-23
HDLC	(NO) YES	High level Data Link Control Prompted if TKTP = MCU and V25 = YES.	basic-18

Prompt	Response	Comment	Pack/Rel
HLCL	0-9999	<p>Home Location Number</p> <p>This number is similar to PFX2 number prompted in LD 15. It is added to this overlay so that this prefix can be configured on a route basis as required in some countries (e.g., Italy).</p> <p>As is the case with PFX2, the HLCL prefix can be from one-to-four digits long. This prompt is displayed only if CPFXS = NO.</p> <p>If only a &lt;CR&gt; is entered, this prompt keeps its previous configuration. If no value was configured previously, no value will be configured.</p> <p>Enter X to delete the digits.</p>	euroids-22
HNTN	0-9999	<p>Home National Number</p> <p>This number is similar to the PFX1 number prompted in LD 15. It is added to this overlay so that this prefix can be configured on a route basis as required in some countries (e.g., Italy).</p> <p>As is the case with PFX1, the HNTN prefix can be from one-to-four digits long. This prompt is displayed only if CPFXS = NO.</p> <p>If only a &lt;CR&gt; is entered, this prompt keeps its previous configuration. If no value was configured previously, no value will be configured.</p> <p>Enter X to delete the digits.</p>	euroids-22
HOLD	ic dc ht	<p>Hold failure threshold. Where:</p> <p>ic = increment counter = 1-(2)-31  dc = decrement count = 1-(2)-31  ht = minimum hold time = 1-(40)-127 seconds</p> <p>The failure to hold applies to trunks which are not properly seized but disconnected sooner than the minimum hold or ht.</p> <p>See prompt ILLR for a description of increment count (ic) and decrement count (dc) values. The default for AID trunks is 2 1 40.</p>	basic-1

# LD 16

Prompt	Response	Comment	Pack/Rel
HOUR	0-23	Hour to start Automatic Trunk Maintenance test The system outputs xx:15 indicating the test start times are performed 15 minutes after the hour to avoid interactions with traffic reports.	atm-7
IABS	(0)-3	Number of Incoming digits to be Absorbed For CCSA trunks only.	ccsa-1
IAMP	0-127	Inbound Modem Pool route number Prompted if TKTP = ADM and DTYP = IOP or IDP.	amp-5
IANI	(NO) YES	In-band Automatic Number Identification route ISDN must be (NO) for this feature to be enabled. Prompted if AUTO = YES.	ani-15
ICDN	xxxx xxx xxxx (NO)	CLID DN for incoming route (1-7 digits) and CLID entry (0-125) for trunk DN CLID DN for incoming route (1-7 digits) and CLID is not generated for trunk DN ICDN is prompted if ICIS = NO or if the trunk route is not ISDN.	mfc/isdn-22
ICIS	(YES) NO	Incoming Identifier Send Use CLID/CNI from incoming ISDN/R2MFC trunk Do not use CLID/CNI from incoming ISDN/R2MFC trunk ICIS is prompted for incoming routes when ISDN = YES or if the table type of MFCI = R2MF.	mfc/ isdn-22
ICNP	(UKWN) PRV PUB	Incoming Numbering Plan Unknown Private Public ICNP is prompted if table type of MFCI = R2MF and ICIS = YES. ICNP is prompted only if the CLID entry for ICDN = 0-125.	mfc-22

Prompt	Response	Comment	Pack/Rel
ICNT	(UKWN) INTL NTN LCL LOC CDP SPN	Incoming Numbering Type Unknown International National Local Location Coordinated Dialing Plan Special number ICNT is prompted if table type of MFCI = R2MF and ICIS = YES. ICNT is prompted if CLID entry for ICDN = 0-125.	mfc-22
ICOG	IAO ICT OGT	Incoming and/or Outgoing trunk Incoming and Outgoing Incoming only Trunk Outgoing only Trunk	basic-1
ICPS	(YES) NO	Incoming Presentation Status Provide Trunk DN Do not provide Trunk DN ICPS is prompted if table type of MFCI = R2MF and ICIS = YES. ICPS is prompted if the CLID entry for ICDN = 0-125.	mfc-22
ID	(0)-9	Identification digit for CAMA trunk routes	cama-1
IDC	(NO) YES	Incoming DID Digit Conversion on this route	idc-12
IDEF	(NET)  LOC	Internal/external definition Use network information to define a call as internal or external. Calls over the selected route will receive a network treatment as defined by available network information. Use local data to define a call as internal or external. Internal calls will receive an internal treatment if RCLS = INT. External calls will receive an external treatment if RCLS = EXT. IDEF is prompted in LD 16 if IDEF = YES in LD 15.	basic-22
IDOP	(NO) YES	Identify Originating Party Call Detail Recording for Internal calls to identify forwarding station originating party. Prompted when CFWR = NO	supp-10
IDTB	0-7	ID table index to be used by this Meridian 911 route	m911-19

# LD 16

Prompt	Response	Comment	Pack/Rel
IEC	001-999	Inter-Exchange Carrier ID Precede with X to remove entry. If no value is entered "???" is printed in the route data block. Prompted when TKTP = COT, FEX or WAT.	pra-12
	(0) - xxx (0) - xxxxx	This value is used for information purposes only. Inter-Exchange carrier providing the service. Prompted if IFC = NI2 and SRVC is 0 - 16, 18, 21 - 31.	
IFC		Interface type for this PRI route. The IFC of an ISA route and its service route must match.	pra-12
	(SL1) 1TR6 APAC	Meridian SL-1 1 TR 6 for Germany Asia-Pacific ISDN interface for Australian BRI UIPE PRI, China, Hong Kong, Indonesia, Japan BRI UIPE PRI, Malaysia, Singapore & Thailand.	
	AXEA AXES	Ericsson AXE-10 for Australia Ericsson AXE-10 for Sweden	
	D70 D100 D250 E403	Interface to Japan D70 Meridian DMS-100 Interface to Meridian DMS-250 EuroISDN interface for ETS 300 403	euro-24
	EGF4	Q Reference Signalling Point interface	qsig gf-24
	ESIG ESGF	ETSI Q reference signalling point (QSIG) Interface ID. ESIG interface with GF platform.  ESGF can be entered if QSIG and QSIG GF packages are both equipped. If the Digital Route Type is BRI, then the associated DSLs must be removed before changing the interface type to ESGF.	
	ESS4 ESS5 EURO	Interface to AT&T ESS#4 Interface to AT&T ESS#5 EuroISDN interface	
	ISGF	ISIG interface with GF platform.  ISGF can be entered if QSIG and QSIG GF packages are both equipped. If the Digital Route Type is BRI, then the associated DSLs must be removed before changing the interface type to ISGF.	

Prompt	Response	Comment	Pack/Rel
	ISIG	ISO Q reference signalling point (QSIG) Interface ID	
	JTTC	JAPAN TTC DCH interface ID	jttc- 23
	NI2 NUME	NI-2 TR-1268 interface type Numeris for France	
	S100 SS12 SWIS TCNZ	Meridian SL-100 SYS-12 for Norway SwissNet for PRI2 (SN2) Telecom New Zealand (NEAX-61)	
IHT	2-(30)-62	Outgoing Calling Party Control call disconnect after the far end disconnects.  Number of seconds in increments of two after which an incoming Calling Party Control call will disconnect after the far end disconnects.	opcb-14
ILLR	ic dc	Illegal Ring threshold. Where:  ic = increment count = 0-(2)-15 dc = decrement count = 0-(2)-15  ILLR specifies illegal ringing on a seized trunk.  ILLR is only prompted for COT, FEX and WAT trunks.  The increment count (ic) and decrement count (dc) control the rate at which detected failures exceed the trunk error threshold. A counter (initially set to zero) records trunk successes and failures. The counter is incremented by the IC value each time a failure is detected, and by the DC value when a valid trunk condition is detected.  When the counter value exceeds the trunk threshold value (30), the overflow indicator is set, and a TRKxxx message displays. A high IC value increases the counter more rapidly than a low IC value, thus causing the counter to exceed the threshold with fewer detected failures.	basic-1

# LD 16

Prompt	Response	Comment	Pack/Rel
		<p>The threshold counter only preserves positive values. If the counter contains a negative value, it automatically resets to zero. The next detected failure immediately increases the counter toward the threshold value, enabling quicker trunk failure detection.</p> <p>ic dc = threshold percentage</p> <ul style="list-style-type: none"><li>41 = 20%</li><li>21 = 33%</li><li>32 = 40%</li><li>22 = 50%</li><li>24 = 67%</li><li>13 = 75%</li><li>14 = 80%</li><li>17 = 88%</li></ul> <p>The RSET command in LD 36 and LD 41 resets the threshold counters to zero.</p>	
IMBI	(NO) YES	<p>Immediate Break-In Line signal is required before Break-In. Prompted when MFC = R2MF, MFCI = a valid MFC table.</p>	opcb-14
IMCB	(NO) YES	<p>Immediate Call Back Desired party will be re-rung if IMCB = YES. Prompted when MFC = R2MF, MFCI = a valid MFC table.</p>	opcb-14
INAC	(NO) YES	<p>Insert ESN Access Code to incoming private network call</p> <p>INAC permits an ESN access code to be automatically added to an incoming ESN call from a private network.</p> <p>If INAC = YES, then digit insertion (INST) for NARS or BARS calls is bypassed and Access Code 1 (AC1) is used for all call types. However, calls may be specifically defined to use Access Code 2 (AC2) in LD 15 at the AC2 prompt.</p> <p>INAC is prompted when the route type is either a TIE trunk or an IDA trunk with DPNSS1 signaling.</p>	pra-21

Prompt	Response	Comment	Pack/Rel																				
INC	(NO) YES	CDR records generated on incoming calls	cdr-1																				
INC_T306	0-(2)-T306	<p>Incoming T306 timer value T306 is the variable timer for received DISCONNECT messages on incoming calls. This T306 allows in-band tones sent by the network to be heard.</p> <p>This timer is stored in 2 second increments. Listed below are region-specific T306 values:</p> <table style="margin-left: 40px;"> <thead> <tr> <th><u>APAC region</u></th> <th><u>T306 max value (in seconds)</u></th> </tr> </thead> <tbody> <tr><td>Australia</td><td>60</td></tr> <tr><td>China</td><td>30</td></tr> <tr><td>Hong Kong</td><td>30</td></tr> <tr><td>Indonesia</td><td>30</td></tr> <tr><td>Japan</td><td>30</td></tr> <tr><td>Malaysia</td><td>30</td></tr> <tr><td>New Zealand</td><td>30</td></tr> <tr><td>Singapore</td><td>30</td></tr> <tr><td>Thailand</td><td>30</td></tr> </tbody> </table>	<u>APAC region</u>	<u>T306 max value (in seconds)</u>	Australia	60	China	30	Hong Kong	30	Indonesia	30	Japan	30	Malaysia	30	New Zealand	30	Singapore	30	Thailand	30	bri-20
<u>APAC region</u>	<u>T306 max value (in seconds)</u>																						
Australia	60																						
China	30																						
Hong Kong	30																						
Indonesia	30																						
Japan	30																						
Malaysia	30																						
New Zealand	30																						
Singapore	30																						
Thailand	30																						
INDMF	(NO) YES	<p>Indian R2MFC Operations Disabled.</p> <p>Indian R2MFC Operations Enabled.</p>	mfc- 23																				
INST	0-99999999 <cr> X	<p>Insert. Not prompted when DNIS = YES.</p> <p>Digits to be inserted before leading digit</p> <p>No digits are entered</p> <p>Precede with X to remove entry</p>	basic-1																				
INT	(OFF) ON	<p>Interworking</p> <p>Far end data unit is not a DMS-100 or SL-100 Data Unit</p> <p>Far end data unit is a DMS-100 or SL-100 Data Unit</p> <p>Prompted if TKTP = MCU.</p>	basic-18																				
INTC	(NO) YES	<p>Do not intercept voice calls which call data sets to an attendant</p> <p>Intercept voice calls which call data sets to an attendant</p>	euroisdn-22																				
IPUB	0-511	Incoming Public Network call service route.	cbc_pkg-23																				

# LD 16

Prompt	Response	Comment	Pack/Rel
ISAR	(NO) YES	Integrated Service Access Route denied Integrated Service Access Route allowed  This prompt indicates whether this route is to be used as a service or reference route for the Integrated Service Access or ISA feature. ISAR can only be YES when there are no trunk assignments in LD 14.	pra-12
ISDN	(NO) YES	Integrated Services Digital Network  Defaults to YES when DGTP = PRI or PRI2 and REQ = NEW. Prompted for BRI routes when REQ = CHG. Prompted when ISDN = YES in LD 15 and with ISDN package 145.  Select YES to allow MLPP over N1-1 PRI trunks	pra-12  atvn-25.47
ITDN	xxxx	Intercept DN (up to 8 digits) The DN to which incoming calls which failed to provide ANI are transferred.	cist-24
ITOL	(DENY) ALOW	Deny International toll calls (i.e., 011+calls) Allow International toll calls	eqa-17
JDGT	1-(4)	Japan central office Digits This indicates the number of address digits sent from the CO to the Meridian 1. If the number of digits is not known, set the parameter to (4).	xutj-16
LAST	(NO)  YES	CDR record printing content option for redirected calls. The Terminating ID field in the CDR record will contain the one before the last party. The Terminating ID field in the CDR record will contain the last party.	cdr-1
LCNO	0-255	Line identities Conversion tree Number Enter tree number for DCNO tree in LD 49, to be used for converting Line Identities. Prompted if LID = 2.	dass2-16

Prompt	Response	Comment	Pack/Rel
LEC	0 - 9999999	Local Exchange Code LEC is used for building ANI messages. LEC is prompted if: <ol style="list-style-type: none"> <li>1. Commonwealth of Independent States (CIST) package 221 is equipped</li> <li>2. ICOG = OGT</li> <li>3. TKTP = COT (for analog trunks, TKTP must = DID)</li> <li>4. DGTP = DT12</li> </ol> May be from 0 up to the ANSZ length. Prompted for outgoing CIS route.  Used for building ANI message if ANIC is NO or if ANIC=YES but the ANI entry associated with the originator of the call is not configured.	cist-21
LGTH	4-(60)- 7200	Maximum message length in seconds. For fault detection purpose. Applicable to MPUL, MLVL & MCON RAN machine types.	ranbrd- 23 ran- 23
LID	(0)-2	Line Identities option. Where: <ol style="list-style-type: none"> <li>0 = do not send ISDN Line Identities</li> <li>1 = send ISDN Line Identities</li> <li>2 = convert and send ISDN Line Identities</li> </ol> Prompted with Integrated Digital Access (IDA) package 122 and SIGL = DAS	dass2-16
LMNL	0-15	Loss deviation Maintenance Limit (in dB)	atm-7
LOCD	(6) 7	Number of digits used in a local call by the far end Central Office	mfc-9
LOUT	0-15	Loss Out-of-Service deviation limit (in dB)	atm-7
MANO	(NO) YES	Manual Outgoing trunk route Define the manual DN in LD 14 at prompt MNDN.	basic-1

# LD 16

Prompt	Response	Comment	Pack/Rel
MAX	1-510	Maximum number of channels allowed on the ISA route, service dependent. The value entered is the maximum number of trunks limited by this service route. This value must match the one assigned at the CO. For example, if MAX = 8 for Tie routes, no more than 8 channels can be used simultaneously for Tie calls. Prompted when: <ol style="list-style-type: none"><li>1. ISAR = YES and IFC = ESS4, or</li><li>2. NSF = YES and IFC = SL-1 or D100 for the selected ISA route defined by response to RTN prompt.</li></ol>	isa-12
MBGA	(NO) YES	MBG Interface on the D-channel Prompted if Network Tenant Service feature active.	brit-18
MCCD	0- 8	The call trace request string can be 0-8 digits in length. Valid digits are 0-9, *, #.	emct-20
MCDT	(0)-4	Digit string delay time is in seconds. Granularity is 1 second.	emct-20
MCTM	(0)- 30	Malicious Call Trace request timer id (in seconds)  This is the disconnection delay which is used when the far end goes on hook. Granularity is 1 second. Prompted if interface type for the D-channel is AXE-10 Australia.	mct-10
MCTS	(NO) YES	Malicious Call Trace Signal	emct-20
MDMP	(NO) YES	Modem Data Module Pair ADM only route Modem Data Module Pair route	adm-5
MTD	1-(5)-31	Minimum Dial Tone Detection delay	dtd-10
MFC	(NO) YES CMFS	Multifrequency Compelled (MFC) Signaling No MFC Signaling Multifrequency Compelled or MFC Signaling CIS MFS route. This response is allowed only if both the CIST and CSMFS packages are equipped and only for the outgoing CO DTI2 routes and for the incoming DID DTI2 routes.	mfc-9  cismfs-23
	MFE MFK5 MFK6	Multifrequency Compelled Signaling for Socotel 2/5 Spanish KD3 MF Signaling 2/6 Spanish KD3 MF Signaling	mfe-10 kd3-20 kd3-20

Prompt	Response	Comment	Pack/Rel
MFCI	1-127	MFC Incoming table number Where 0 = Remove outgoing table	mfc-9
MFCO	1-127	MFC Outgoing table number Where 0 = Remove outgoing table	mfc-9
MFEA	(YES) NO	Access code signals are used in the signaling	mfe-10
MFED	0-(1)-9	First digit of special service call Precede with X to remove.	mfe-10
MFEI	(0)-127	MFE table number for Incoming calls Where 0 = Remove incoming table	mfe-10
MFEO	(0)-127	MFE table number for Outgoing calls Where 0 = Remove outgoing table	mfe-10
MFKI	1- 127	MFK table number for Incoming calls	kd3-20
MFKO	1- 127	MFK table number for Outgoing calls	kd3-20
MFSS	(B1) B2 B3	Specifies the first MFS digit request backward signal used by the incoming CDT12-MFS trunk for the requesting the next digit from the outgoing CIS CO party. The MFSS is prompted only if the MFC is set to CMFS only for incoming routes.	cismfs-23
MIN	0-510	Minimum number of channels allowed on the ISA route, service dependent For example, if MIN = 2 for Tie routes, at least two channels will be available for Tie calls. Prompted when: ISAR = YES and IFC = ESS4 NSF = YES and IFC = SL1 or D100 for the selected ISA route defined by response to RTN prompt.	isa-12
MOD	(NO) YES	Network Mode for synchronous operation Modem Mode for synchronous operation Prompted if TKTP = MCU and TRAN = SYN.	basic-18

# LD 16

Prompt	Response	Comment	Pack/Rel
MODE		Mode of operation	pra-12
	APN	Analog Private Network APN is allowed only with Integrated Services Digital Network Signaling Link (ISL) package 147 and Digital Private Signaling System 1 (DPNSS) package 123.	
	ISLD	Route uses ISDN Signaling Link (ISL) ISLD is allowed only if ISDN = YES, and the Integrated Services Digital Network Signaling Link (ISL) package 147 is equipped. ISLD is allowed only on ISA and TIE trunks.	
	PRA	ISDN/PRA route, DTRK must be YES PRA allowed only if ISDN = YES.	
	<cr>	Default is NULL for service/reference routes If you enter YES to prompt ISAR, then use the default <cr> for this prompt. If ISAR is YES, then MODE prints NULL and does not allow a response.	
MON	(NO) YES	Monitoring for route	basic-12
MQC_FEAT		MCDN QSIG Feature type	meet-24
	NAS NACD NMS	Prompted if RECAP = MQC Precede MQC Feature type with X to remove MCDN NAS functionalities are supported over QSIG MCDN NACD functionalities are supported over QSIG MCDN NMS - MC functionalities are supported over QSIG	
MR		Message Registration	mr-10
	(NO)	If a 1TR6 trunk route is created where TKTP = COT or DID, MR is automatic and is not prompted. However, if TKTP = TIE, then MR is not applicable to the route and is not prompted.  The route is not metered. If MR is set to NO, the trunk should have a Polarity Insensitive Class of Service in LD 14. (CLS = PIP)	
	DURC	The AOC information is decoded during and at the end of the call. IFC must be set to NUME or SWIS.	

Prompt	Response	Comment	Pack/Rel
	ENDC PPM RVB	The AOC information is decoded at the end of the call Buffered PPM signals to be counted on this route Reverse Battery signal from PSTN for CO interrupted as supervisory signal and used as MR on this route.	
	STAC XLD	Activation of the AOC-S sub-service M & MM Lead non-buffered is used. This is the only metering type allowed for TKTP = IDA and SIGL = DAS.  MR is not prompted for Danish and Swedish EuroISDN interfaces as AOC is not supported for those countries.	
MRAT	5-30	Modem Ring Again Timer, in minutes	amp-5
MRT	0-511	Music Route number Route 31 can be configured an exclusively private route in LD 16. MRT defines the Music Route number for Recorded Announcement queueing.	mus-1  ranbrd-23 ran-23 mus-23
MTND	(NO) YES	Malicious Call Trace Tandem Disconnect delay for AXE10 interface  If set to YES the disconnect operation is delayed at the node closest to the CO for up to MCTM time when the call is a tandem call.	emct-20
MULT	(NO) YES	Multiplier for Charge Information Do not change calculation of charge information. Provide the exact cost of charge information if the RURC exponent is configured to the value of the multiplier.  Your response to MULT should be YES when the Central Office sends charge information in one hundredth of currency and the currency multiplier is less than 1. The multiplier exponent should be equal to the RURC exponent. This is only used with functional protocol.	isdn-22
MUS	(NO) YES	Music on Hold	mus-1
MWRT	0 - (2) - 15	Message Waiting Retry Timer. This prompt is only printed if the RCAP is set to either QMWI or QMWO. The value entered is the number of retries to be effected after a SETUP timeout.	qsig-ss- 25.4

# LD 16

Prompt	Response	Comment	Pack/Rel
MWTO	(15) - 30	Message Waiting Time-out timer in seconds. This prompt is only printed if the RCAP is set to either QMWI or QMWO. The value entered is the duration of a timer started when a SETUP message is sent to set up a connection-oriented, call-independent connection for MWI transport. The timer is stopped on receipt of a CALL PROCEEDING message.	qsig-ss-25.4
MXTI	0-(5)-15	Maximum Time to wait for the far end to connect to test line (in seconds)	atm-7
M911_ABAN	(NO) YES	Meridian 911 Call Abandon Abandoned call treatment is not used on this route Abandoned call treatment is used on this route	m911-21
M911_ANI	(NO) YES	Receive ANI for Meridian 911 routes.  The M911_ANI prompt acts as a gate opener for Meridian 911 prompts and should always be YES. Prompted with Meridian 911 (M911) package 224 and TKTP = DID.	m911-19
M911_FORM	(1) 2	Automatic Number Identification Format 1 = NPD (1 digit) +7-digit ANI 2 = II (2 digits) +10/20-digit ANI	m911-25
M911_TONE	(YES) NO	Meridian 911 Tone Tone given on answer Tone not given on answer	m911-21
M911_TRK_TYPE	(T911T) 911E	Meridian 911 ANI trunk types E911 tandem connections End office connection	m911-19
NACC	(PGNR) PGNC PGNU	Network access control Paging route is PAGENET restricted Paging route is PAGENET controlled Paging route is PAGENET uncontrolled NACC is prompted if TKTP = PAG and PAGENET package 307 is equipped.	pagenet-22
NADT	(0)-255	No-Answer Disconnect Timer (in seconds) Only for 2.0 Mb/s DTI trunks.	isdn-10
NASA	(NO) YES	Network Attendant Service Allowed Only prompted if IFC is SL1	nas-20

Prompt	Response	Comment	Pack/Rel
NATL	(YES) NO	<p>North American Toll scheme; a toll call has 0 or 1 as first or second digit.</p> <p>If NXX second digit is "1" set NATL to "NO" and answer "0" "1" to TDG. All toll digits for TDG prompt can be removed by a YES response if REQ = CHG. Repeat LD 16 with a NO response to add toll digits.</p>	cdr-13
NCNA	(YES) NO	<p>Network Calling Name Allowed</p> <p>Prompted if ISDN = Yes.</p>	pra-13
NCNI	(0)-7	<p>Request CNI after the defined number of digits are received.</p> <p>If NCNI = 0, CNI request does not depend on the number of digits received.</p> <p>If NCNI is defined to be greater than the number of digits required for routing the call, CNI will not be requested but the call is routed.</p> <p>Prompted when the following occur:</p> <ul style="list-style-type: none"> <li>Multifrequency Compelled Signaling (MFC) package is equipped</li> <li>TKTP = DID or TIE</li> <li>MFC Table = R2MF</li> <li>MFC signaling table is defined for the route</li> </ul>	dpnss-20
NCOS	(0)-99	<p>Network Class of Service group number.</p> <p>Prompted if TKTP = TIE.</p>	pra-13
NCRD	(NO)YES	<p>Network Call Redirection allowed</p> <p>YES allows Network Call Redirection messages to be sent or blocked if NCRD = (NO).</p> <p>Network Call Redirection can occur without having NCRD = YES. This prompt only controls the sending of Network Call Redirection messages, not the actual redirection of the call.</p> <p>When NCRD = YES, the message supplied provides information for the CLID display. When NCRD = (NO), the call is redirected without the CLID redirection information if CLID is enabled.</p>	pra-14

# LD 16

Prompt	Response	Comment	Pack/Rel
NCTH	(0) - 100	Number of Calls Waiting Threshold. Prompted only if BDCT = YES and for Start/Stop RAN machine with STRT = DDL.  Default value zero means no threshold applies.	ranbrd- 23 ran- 23
NDGT	1-(4)-7 1-(4)-31	Number of DNIS Digits expected Number of DNIS digits required on the route The extension to 31 digits is only available for DID, TIE or IDA routes.	dnis-10 dnis-24
NDIG	(2)-10	Number of Digits in numbering plan at conventional main switch Prompted if SIGO = STD and CBQ = YES.	casm-1
NDNO	0-254	Night IDC tree number When REQ = NEW default is the DCNO tree defined. Otherwise, there is no default value.	idc-14
NDP		Number of Digits Printed  NDP affects dialed digits including EES digits with one exception. When both ECDR = YES in LD 15 and OPD = YES in LD 16, NDP affects only the outputted digits; the EES digits <i>are not</i> affected.	isdn-15
	INC 0-32 EXC 0-32 <cr>	Output the first 0-32 digits Suppress the last 0-32 digits  If REQ = NEW, output all digits and suppress none.	
NDRI	(0)-4	Network Distinctive Ringing Index (0) = Default/undefined	edrg-16

Prompt	Response	Comment	Pack/Rel
NEDC		Near End Disconnect Control This entry determines the type of control exercised by the Meridian SL - 1 on trunk disconnections.	basic-1
	(ORG)	Originating end control The far-end on-hook condition is recognized only for incoming calls. Far end conditions are ignored for outgoing calls. ORG is default for TIE, DID and CCSA trunks.	
	ETH	Either end control If the far end goes on-hook for either incoming or outgoing calls, the on-hook condition is recognized and the call is disconnected. ETH is the default for all trunks except TIE, DID and CCSA trunks. <b>Note:</b> If SUPP (131) package is disabled, then outgoing trunk to trunk transfer is allowed only when the response for FEDC and NEDC is ETH.	
NMNL	27-90	Noise Maintenance Limit (in dBrn)	atm-7
NMSG	(0)-30	Number of times Message is repeated	mfc-24
NODE	a...a	Node ID. For Succession 1000 system. The Node ID can have a maximum of 4 numeric characters.	basic-2
NOUT	27-90	Noise Out-of-Service limit (in dBrn)	atm-7
NPA	nnn	Numbering Plan Area	m911-19
NPID	0-9	Numbering Plan Digit or Information Digit If <CR> is entered, the NPID table is created.	m911-19
NPID_TBL_NUM	0-7	Meridian 911 route table index The ID table must be created before this prompt can be answered.	m911-19
NRT	0-511	Notification Route number	mfc-24

# LD 16

Prompt	Response	Comment	Pack/Rel
NSF	(NO) YES	Network Service Facility Prompted when TKTP = ISA and IFC = D100 or SL1. When NSF = YES, the ATB traffic counter is incremented when the MAX value is reached in the service route.	pra-12
NTOF	(YES) NO	Near To Far measurement See prompts REF, TST and PADL.	atm-7
NTOL	(DENY) ALLOW	Deny North American Toll calls (i.e., 1+ calls) Allow North American Toll calls	eqa-17
OABS	0-9	Actual outgoing toll digits to be ignored for Code Restriction OABS is frequently used with 1+calls. Precede with X to remove.	basic-1
OAL	(NO) YES	CDR on outgoing calls If answer supervision is defined for the trunk, CDR records will only be generated on call completion.	cdr-1
OAMP	0-127	Outbound Modem Pool route number Prompted if TKTP = ADM and DTYP = IOP or ODP.	amp-5
OAN	(YES) NO	CDR timing starts On Answer supervision of outgoing calls  Prompted if OAL or OTL = YES. This prompt only applies to trunks with answer supervision CLS = PSP, or SUPN = YES. With International Supplementary Features (SUPP) package 131, the default is NO. Without SUPP package 131, the default is YES.	
OGDN	xxxx xxx xxxx (NO)	CLID DN for outgoing route (1-7 digits) and CLID entry (0-125) for trunk DN CLID DN for outgoing route (1-7 digits) and CLID is not generated for trunk DN OGDN is prompted if ICIS = NO or if the trunk route is not ISDN.	mfc/isdn-22

Prompt	Response	Comment	Pack/Rel
OGIS	(YES)  NO	Outgoing Identifier Send Use CLID/CNI from incoming ISDN/R2MFC trunk or from the calling set. If OGIS = YES and the incoming trunk is R2MFC, the CNI from the incoming trunk CLID/CNI will be used in the CLID. Do not use CLID/CNI from incoming ISDN/R2MFC trunk or from the calling set. OGIS is prompted for outgoing routes when ISDN = YES or if table of MFCL = R2MF.	mfc/isdn-22
OGNP	(UKWN) PRV PUB	Outgoing Numbering Plan Unknown numbering plan Private Public OGNP is prompted only if the CLID entry for OGDN = 0-125.	mfc/isdn-22
OGNT	(UKWN) CDP INTL LCL LOC NTN SPN	Outgoing Numbering Type Unknown numbering type Coordinated dialing plan International number Local number Location number National number Special Number OGNT is prompted if CLID entry for OGDN = 0-125.	mfc/isdn-22
OGPS	(YES) NO	Outgoing Presentation Status Provide Trunk DN Do not provide Trunk DN OGPS is prompted if the CLID entry for OGDN = 0-125.	mfc/isdn-22
OHQ	(NO) YES	Off-Hook Queuing Used in NARS for incoming TIE callers.	ohq-1
OHQT	(0)-63	Off-Hook Queue Threshold BARS/NARS availability test. Compare with current P3 calls.	ohq-1
OHT	0-(30)-126	Off-Hook Timer Number of seconds in increments of two after which an outgoing Calling Party Control call will disconnect after the far end disconnects. Prompted when CNTL = YES and OPCB = YES.	opcb-14 basic-24

# LD 16

Prompt	Response	Comment	Pack/Rel
OHTD	(NO) YES	Off-Hook Timer Delay Masks the far end Off-Hook for up to 384 ms measured from the end of the interdigit pause of the digit send out. Masks the far end Off-Hook for up to 2 seconds.	basic-1
OHTT	0-(30)-62	Toll Off-Hook Timer  Number of seconds in increments of two after which a toll outgoing Calling Party Control call will disconnect after the far end disconnects. Toll calls are identified by the responses to TDG and SSL.  Prompted when CNTL = YES and OPCB = YES.	pemd-18
OPA	(NO) YES	Will generate CDR or CDAS record for PPM pulses.	isdn-10
OPCB	(NO) YES	Operator Call Back OPCB features to be assigned to this route. Prompted when: TKTP = DID NEDC = ETH FEDC = ETH CPDC = NO CNTL = YES Operator Callback (OPCB) package 126 is equipped.	opcb-14
OPD	(YES) NO	Outpulsed Digits in CDR Dialed digits in CDR System must be initialized for changes to the OPD settings to take effect. Prompted when OTL = YES, OAL = YES or OAN = YES.	cdr-12
OPDL	(0)-8064	Outpulsing Delay, in milliseconds If required for JDMI, OPDL = 3000 milliseconds. Prompted when DGTP = DT12 or JDMI.	pra-14
OPE	(NO) YES	Change data port or operating parameters Prompted only if TKTP = R232, R422 or MCU.	basic-18
OPP	(NORM) ATT	Operator originated calls receive normal treatment for busy and intercept situations Operator originated calls routed to attendant for busy and intercept situations	mfc-15

Prompt	Response	Comment	Pack/Rel																				
OPR	(NO) YES	<p>Outpulsing Route</p> <p>All trunk members for an OPR must have DTN CLS, unless they are on Route 31 or Private Line Routes. When RPA = YES, the default is YES.</p> <p>Prompted with Outpulsing of Asterisk "*" and Octothorpe "#" (OPAO) package 104, and prompted when TKTP = COT, DID, FEX, TIE, or WATS.</p>	opao-10																				
OTL	(NO) YES	<p>CDR on Outgoing Toll calls</p> <p>If answer supervision is defined for the trunk, CDR records will only be generated on call completion. Prompted when OAL = NO and Route = CAMA, CO, DID, FX, or WATS.</p>	cdr-1																				
OUT_T306	0-(30)-T306	<p>Outgoing T306 timer value</p> <p>T306 is the variable timer for received DISCONNECT messages on outgoing calls. This T306 allows in-band tones sent by the network to be heard.</p> <p>This timer is stored in 2 second increments. Listed below are region-specific T306 values:</p> <table border="1"> <thead> <tr> <th><u>APAC region</u></th> <th><u>T306 max value (in seconds)</u></th> </tr> </thead> <tbody> <tr> <td>Australia</td> <td>60</td> </tr> <tr> <td>China</td> <td>30</td> </tr> <tr> <td>Hong Kong</td> <td>30</td> </tr> <tr> <td>Indonesia</td> <td>30</td> </tr> <tr> <td>Japan</td> <td>30</td> </tr> <tr> <td>Malaysia</td> <td>30</td> </tr> <tr> <td>New Zealand</td> <td>30</td> </tr> <tr> <td>Singapore</td> <td>30</td> </tr> <tr> <td>Thailand</td> <td>30</td> </tr> </tbody> </table>	<u>APAC region</u>	<u>T306 max value (in seconds)</u>	Australia	60	China	30	Hong Kong	30	Indonesia	30	Japan	30	Malaysia	30	New Zealand	30	Singapore	30	Thailand	30	bri-20
<u>APAC region</u>	<u>T306 max value (in seconds)</u>																						
Australia	60																						
China	30																						
Hong Kong	30																						
Indonesia	30																						
Japan	30																						
Malaysia	30																						
New Zealand	30																						
Singapore	30																						
Thailand	30																						
OVLR	(NO) YES	<p>Overlap Receiving allowed</p> <p>Not prompted if IFC = Numeris.</p>	ovlp-15																				
OVLS	(NO) YES	<p>Overlap Sending allowed. This prompt appears for the following APISDN interfaces which support Overlap Sending: AUST, HKNG, SING, TCNZ, THAI. OVLS is not prompted if IFC = Numeris.</p>	ovlp-15																				
OFLT	(0)-8	<p>Inter-INFO Timer during Overlap Sending. This prompt appears only for APISDN interfaces which support Overlap Receiving: THAI.</p>	ovlp-15																				

# LD 16

Prompt	Response	Comment	Pack/Rel
PADL	0-63	Pad factor for loop around (in dB) This is the far end tone level, plus the total pad loss at both ends on two trunks.	atm-7
PADT	0-63	Pad factor for T100 test line (in dB) This is the near end tone level, plus the total pad loss at both ends.	atm-7
PANS	(YES) NO	Pseudo-Answer can be sent on some types of trunks as soon as end of dialing is detected. Pseudo-Answer is not sent on any type of trunk. SUPN in LD 14 should be YES, or PANS = YES has no meaning.	supp-14
PAR	(SPAC) EVEN MARK ODD	Data port Parity Space Even Mark Odd Prompted if TKTP = R232, R422 or MCU.	basic-18
PBDO	(OFF) ON	Port Busy upon DTR Off Prompted if TKTP = R232, DEM = DCE and DTR = OFF.	basic-18
PCID	a...a	Protocol ID for the route. For Succession 1000 system, where: a...a is H323 (SIP, H248 and MGCP are reserved for future use)	basic-2
PECL	(NO) YES	Periodic Clearing Signal Not supported on XCOT.	supp-14
PGPN	0-15	Protocol Set Group. This entry must be consistent with Protocol Group Number (PGPN) entry in LD 27.	mph-18

Prompt	Response	Comment	Pack/Rel
P11	(NO) YES	<p>Privacy Indicator Ignored</p> <p>Calling Party Privacy Indicator is honored and the existing functionality is maintained.</p> <p>The Calling Party Privacy Indicator is ignored. When P11 is set to YES, the CLID Presentation Indicator field in the Calling Party Number IE is changed from restricted to allowed and the CPND Indicator field in the Display IE is changed from denied to allowed.</p> <p><b>Note:</b> The P11 prompt is shown for information purposes only. The P11 prompt only applies to North American ISDN interfaces: DMS100, DMS250, ESS4, ESS5, and NI2.</p>	cpp-23
PLEV	0-(2)-7	<p>Priority Level</p> <p>Priority Level 2 sets can override sets of Level 1 and 2, and can be overridden by sets of Level 2-7.</p> <p>Prompted with Priority Override/Forced Camp-On (POVR) package 186 or Enhanced DPNSS1 Services (DPNSS_ES) package 288.</p>	povr-20
PNDL	2-(6)-10	Process Notification Delay Timer in seconds	mfc-24
PNI	(0)-32700	<p>Private Network Identifier</p> <p>Each customer data block must have a unique PNI when equipped with the multi-customer option. PNI = 1 is typical for customer 0. It must match the PNI in the far end CDB in order to support such features as NRAG, NACD and NMS.</p> <p>The PNI in the RDB functions as a logical customer number for routing outgoing non-call-associated Transaction Capability Application Part or TCAP facility messages to the appropriate ESN translations within the far end PBX.</p> <p>Using the default value of PNI = 0 prevents operation of features such as NRAG, NACD and NMS.</p> <p><b>Note:</b> Requires package 148 (NTWK)</p>	pra-12
PNNC	(NO) YES	Process Notification Networked Calls	mfc-24
PNPS	(0)-30	Interval between messages (2 seconds increments)	mfc-24

# LD 16

Prompt	Response	Comment	Pack/Rel
POST	DIS ATT	RAN Post announcement treatment Disconnect after maximum repetitions Route to attendant after maximum repetitions	ran-1
PRDL	(NO) YES BSY	No Partial Dial timing on DID routes Partial Dial timing is equipped using EOD Busy signal is sent on time-out	supp-10
PREM	(NO) YES	Preemption allowed on this route. If SLP package is equipped, then COT, DID, FX, ISDN and Tie trunk types can be preemptable.	atvn-25.47
PRIV	(NO) YES	Route is not a Private line route Route is a Private line route Any COT route can be a private route. Prompted if TKTP = COT and REQ = NEW.	basic-14
PROG		Progress	euroisdn-22
	NCHG	Send a PROGRESS signal when a CALL PROCEEDING message which contains a progress Indicator Information Element is received at the Meridian 1 EuroISDN gateway.  NCHG is the default for all interfaces except Australian and Austrian. NCHG is not supported with Japan interface.	
	MALE	Send an ALERT signal when a CALL PROCEEDING message which contains a progress Indicator Information Element is received at the Meridian 1 EuroISDN gateway.  MALE is the default for Japan interface.	
	MCON	Send a CONNECT signal when a CALL PROCEEDING message which contains a progress Indicator Information Element is received at the Meridian 1 EuroISDN gateway.  MCON the default for Australian and Austrian interface.	
PR_RTN	(NO) YES	Path Replacement Retain Option is supported by the far end Private Integrated Services Network Exchange.	qsig ss- 23

Prompt	Response	Comment	Pack/Rel
PR_TRIGS		Path Replacement Triggers are set to their default values: DIV 2 3 CNG 2 3 XCON 2 3 2 Path Replacement attempts with a delay of 3 minutes for Diversion and Congestion triggers but Connected number is not a trigger.	qsig ss-23
	DIV xx y CNG xx y	Diversion is used to trigger Path Replacement. Congestion is used to trigger Path Replacement.	
	CON xx y	A Connected number different from a called number is used to trigger Path Replacement. xx = 0 - 15, the number of Path Replacement attempts. y = 1 - 7, the delay between two Path Replacement attempts in minutes. Precede with X to remove.	
PSDS	(NO) YES	Public Switched Data Service Prompted if TKTP = MCU.	basic-18
PSEL	(DMDM) TLNK	DM-DM Protocol Selection T-link Protocol Selection  TLNK protocol is used by SL-100 and DMS data devices, DM-DM is used by Meridian 1 data devices such as ASIM, AIM, ADM, SADM, Asynch Data Option or ADO, and MPDA. MCA uses both protocols. PSEL is prompted if TKTP = R232, R422, or MCU.	basic-18
PTUT	0-510	Preference Trunk Usage Threshold	mfc-24
PTYT		Port Type at far end The response to this prompt is used in determining the required transmission level. Refer to the <i>International Loss and Level Plan NTP</i> for more information.	basic-5

*Analog TIE trunk routes:*

(ATT)	Analog TIE trunks
AOT	Analog TIE trunk, used instead of ATT whenever the PBX has one or more digital satellite trunk routes or DST to any digital satellite PBX which includes OPX telephones.
AST	Satellite PBX TIE or ESN trunks if SAT = YES

# LD 16

Prompt	Response	Comment	Pack/Rel
		<i>Digital TIE trunk routes:</i>	
	(DTT)	Digital or combination TIE trunk	
	DCT	Combination satellite PBX TIE trunk	
	DST	Digital satellite PBX TIE trunk (allowed if SAT = YES or NO)	
		<i>Analog CO trunk routes:</i>	
	(ACO)	Analog CO trunk	
	ATO	Analog toll office trunk	
		<i>Digital CO, FEX, DID, and WAT trunk routes:</i>	
	(DCO)	Digital or combination CO port	
	DTO	Digital or combination Toll Office trunk	
		<i>1.5 Mb/s PRI TIE trunk routes:</i>	
	(PRI)	B-channel port classification	
	DTT	Digital or combination TIE trunk	
	DCT	Combination satellite PBX TIE trunk	
	DST	Digital Satellite PBX TIE trunk	
		<i>1.5 Mb/s PRI CO, FEX, DID, and WAT trunk routes:</i>	
	(PRI)	B-channel port classification	
	DCO	Analog CO trunk	
	DTO	Analog toll office trunk	
QREC	(NO) YES	CDR ACD Q initial connection records to be generated	cdr-1
R2MD	(NO) YES	R2 modification	mfc-9
RACD	(NO) YES	Route traffic information in ACD Reports  Enter YES only if the route is used as the Interflow DN of at least one ACD DN and the Interflow Trunk traffic is desired.  Prompted for COT, TIE, DID, WAT, FEX and RAN trunk types.  Actual ACD Report format output examples are included in the <i>ACD Management Reporting</i> NTP.	acd-12

Prompt	Response	Comment	Pack/Rel
RANH	xxx	RAN or Music route which will be used after post treatment. Where: xxx = 0 - 511 for Large System xxx = 0 - 128 for Small System and Succession 1000 Precede with x to remove.	atan-25.4
RANR	0-511	RAN Route number for the desired RAN route.	ranx-20
RANX	(NO) YES	RAN for calls diverted to external trunks RAN not requested when a call is forwarded to this route. RAN requested when a call is forwarded to this route. Prompted when: 1. TKTP = COT 2. RPA = NO 3. DSEL = VCE or VOD 4. ICOG = IAO or OGT	ranx-20
RCAL	(NO) ATT DRA	Deny Manual Service Recall Allow Manual Service Recall DID Recall to Attendant for DT12 trunks RCAL is prompted when TKTP = DID or COT	supp-10
RCAP	BRI	Remote Capabilities. Precede with X to remove a configured capability. This prompt will be repeated until <cr> is entered. ISDN Line/Trunk interworking. Default for all Asia Pacific interfaces.	supp-10
	CCBI	Call Completion to busy subscriber using integer value for operation coding CCBO/CCBI are mutually exclusive.	qsig ss-24
	CCBO	Call Completion to busy subscriber using object identifier for operation coding CCBO/CCBI are mutually exclusive	qsig ss-24
	CCBS	Call Completion to Busy Subscriber for QSIG and EuroISDN BRI interfaces. CCBS is allowed if QSIG supplementary services package 316 is equipped.	
	CCNI	Call Completion on no response using integer value for operation coding CCNO/CCNI are mutually exclusive.	qsig ss-24

# LD 16

Prompt	Response	Comment	Pack/Rel
	CCNO	Call Completion on no response using object identifier for operation coding CCNO/CCNI are mutually exclusive.	qsig ss-24
	CCNR	Call Completion to No Reply for QSIG and EuroISDN BRI interfaces. CCNR is allowed if QSIG supplementary services package 316 is equipped.	
	COLP	Connected Number IE Presentation is supported on far end. COLP is supported on Indonesian interfaces, not as a default because it can be configured.  Default value for ESIG, ISIG, NI2 and EUROISDN interfaces except for AUS, EIR, DUT, BEL and FRA interfaces.	basic- 23
	CTI	Call Transfer Integer CTI and CTO are mutually exclusive.	qsig ss-24
	CTO	Call Transfer Object CTI and CTO are mutually exclusive.	qsig ss-24
		Add call transfer notification remote capability to the EuroISDN interface.	bne-25
	XCOLP	Precede with 'X' to remove capability. Remove COLP  Default value for all APAC, AUS, EIR, DUT, BEL and FRA interfaces.	
	CPK	This prompt is issued only for UIPE-based protocols. Network Call Park.CPK is allowed if IFC = SL1 and CPRKNET package 306 is equipped.  QSIG SS Call Diversion Notification remote capability. Configure sending of QSIG Diversion Notification Information, treatment of Rerouting request and coding of operations. If coded as Object Identifier, the remote capability ends with 'O', whereas for Integer Value, the remote capability ends with 'I'. Only one remote capability is allowed.	qsig ss- 23
	DV11	Diversion information is sent to remote switch.	
	DV10	Diversion information is sent to remote switch.	
	DV2I	Rerouting requests from remote switch are processed.	
	DV2O	Rerouting requests from remote switch are processed.	
	DV3I	Diversion information is sent to remote switch. Rerouting requests from remote switch are processed.	
		EuroI ISDN Call Diversion	bne-25
	DV3O	Diversion information is sent to remote switch. Rerouting requests from remote switch are processed.  Precede with 'X' to remove capability.	

Prompt	Response	Comment	Pack/Rel
	ECTO	Add call transfer notification and invocation remote capability to the EuroISDN Precede with 'X' to remove capability.	bne-25
	MCID	MCID = Add MCID as a new remote capability. Precede with 'X' to remove.	etsi ss- 23
	MQC	MCDN QSIG Conversion as a Remote capability	meet-24
	NAC	Network access data.NAC is allowed if IFC = SL1. Enter XNAC to remove NAC from Remote Capabilities.	
	NCT	Network Call Trace	
	ND1	Network Name Display 1	
	ND2	Network Name Display 2	
	ND3	Network Name Display 3. This ensures the same level of service between the MCDN and QSIG name display services.	
	NDI	Name Display - Integer ID Coding	qsig-24
	NDO	Name Display - Object ID Coding	qsig-24
	NDS	Name Display Services	
		Add Path Replacement as a remote capability. Only one capability can be configured per link.	qsig ss- 23
	PRI	The encoding method uses Integer Values.	
	PRO	The encoding method uses Object Identifier. Precede with 'x' to remove capability.	
	QMWI	Add Message Waiting Indication as a remote capability. The encoding method uses Integer Values.	qsig ss- 25.4
	QMWO	Add Message Waiting Indication as a remote capability. The encoding method uses Object Identifier.	qsig ss- 25.4
	XQMW	Remove Message Waiting Indication. QMWI and QMWO are exclusive and may not be configured at the same time on the same link.	qsig ss- 25.4
	RVQ	Remote Virtual Queuing	
	UUS1	User-to-User Service 1 Decode UUS IE sent by Central Office Send UUS IE to Central Office	bne-25
	XUUS	Remove User-to-User Service 1	bne-25

# LD 16

Prompt	Response	Comment	Pack/Rel
RCLS	(EXT) INT	Route Class marked as external Route Class marked as internal Applies only to CAA, COT, CSA, DID, FEX, TIE, FGDT, or WATS trunks.	basic-10
RDNL	0-(4)-7	Remote DN length used to extract the necessary number of DN digits from the MCDN or QSIG CLID or from the DPNSS OLI.  Prompted if Commonwealth of Independent States - Three Wire Analog Trunk (CIST) package 221 is equipped for QSIG, MCDN, or DPNSS TIE routes.	cist-21
REF	n...n	Reference loop around DN, range is 2 to 10 digits	basic-1
REP	1-15	Repetitions of recorded announcements	ran-1
REQ	CHG END OUT LCHG  NEW	Request Change existing data block Exit overlay program Remove data block Print date and time that a trunk data block was last changed. The change can be the result of a NEW, OUT, or CHG command. Add new data block to the system	basic-1
RGFL	ic dc	Ring Failure threshold. Where:  ic = increment count = 1-(2)-31 dc = decrement count = 1-(2)-31  RGFL specifies the percentage threshold for trunks which fail to produce the expected ringing and ground changes. See prompt ILLR for a description of ic and dc values.  RGFL is not prompted for AID, CAM, CSA, RLM, RLR and TIE trunks The default for RAN and MUS trunks is 12 6.	basic-1
RLSM	(0)-15	Release Mechanism.  Refer to Table 1, "Release Mechanism Options," on page 399. RLSM is prompted if DTRK = YES and DGTP = DT12.	pedm-18

Prompt	Response	Comment	Pack/Rel
ROUT	x...x	Route Number Where x...x = 0-511: Large System 0-127: Small System	basic-1
RPA	(NO) YES	Radio Paging Route If this prompt is set to NO, the route is not allowed to be used for Radio Paging. Prompted with Radio Paging (RPA) package 187 and TKTP = TIE or COT.	rpa-20
RPPM	(0) 10-250 251	Real-time Periodic Pulse Metering polling time (in seconds) Real-time Periodic Pulse Metering will not operate 1-9 Rounded up to 10 Rounded down to 250	pedm-16
RRBS	(NO) YES	Repeat Release Before Seize Seize the trunk normally. A release signal will be sent followed by the seize signal.  RRBS allows a FRLS signal to be sent immediately before a SEZ signal on a DTI2 trunk. RRBS is prompted if DTRK = YES, DGTP = DTI2 and FRRS is not set to YES.	pedm-18
RTN	0-511	Route Number for any configured ISA route  RTN is the Route Number of the associated Call-By-Call master route. Prompted if TKTP = TIE.	pra-12
RTYP	AUD CAP CK2 CKM CON DGT  LVL MCON MLSS	Recording device for RAN trunks  Audichron or Cook 212, required for XUT trunks Code-a-Phone Cook 201 or QAY1 Cook 201 Multichannel NT7M Digital Recorders 213300 and 213400 Digital Recorders  Level start/stop (Enhanced Universal Trunk cards) Continuous mode, multichannel. Multi-channel Level Start/Stop. (Enhanced Universal Trunk cards) Maximum length of message = 608 seconds.	ran-1         ranbrd- 23

# LD 16

Prompt	Response	Comment	Pack/Rel
	MLVL MPUL	Level start/stop, multichannel. Pulse start/stop, multichannel.	ran- 23
	PUL	These modes supports independent RAN trunks. Request the RAN broadcast package. Pulse start/stop (Enhanced Universal Trunk cards)  The Enhanced Universal Trunk cards work with CAP, CK2, or AUD RAN interfaces. The Pulse and Level start/ stop options are used in conjunction with the RAN interface selected.  The maximum length of the message allowed by software:  AUD = 64 seconds CAP = 608 seconds CK2 = 64 seconds CON = 608 seconds DGT = 256 seconds	
RUCF	x y	Route Unit Conversion Factor  Formula for Route Unit Conversion Factor is: $X*10^{(-Y)}$  Where:  x = 0-(1)-9999 y = (0)-3  This results in a range of .001 to 9999.  If the Central Office sends the call charge in AOC units (instead of AOC currency), RUCF is used to convert this charge into PPM format.  Call Charge scenarios:  1. When call charge in sent in currency: Displayed charge = (Received charge/RURC) * RUCS  2. When call charge in sent in AOC units: Displayed charge = (Received charge * RUCF) * RUCS units  RUCF is not prompted for Danish and Swedish EuroISDN.	isdn-15

Prompt	Response	Comment	Pack/Rel
RUCS	0-9999	<p>Route Unit Cost</p> <p>RUCS may be used in Motel/Hotel type environments to calculate the margin the Meridian 1 administrator wants to make per unit.</p> <p>Call Charge scenarios:</p> <ol style="list-style-type: none"> <li>1. When call charge in sent in currency: Displayed charge = (Received charge/RUCR) * RUCS</li> <li>2. When call charge in sent in AOC units: Displayed charge = (Received charge * RUCF) * RUCS units</li> </ol> <p>When REQ = NEW, RUCS defaults to the UCST value in CDB. RUCS is prompted when MR = PPM or XLD. Not prompted for Danish and Swedish EuroISDN.</p>	basic-10
RURC	x y	<p>Route Unit Reference Cost</p> <p>Formula for Route Unit reference Cost is: <math>X * 10^{(-Y)}</math></p> <p>Where:</p> $x = 0 - 9999$ $y = (0) - 3$ <p>This gives a range from.001 to 9999.</p> <p>Call Charge scenarios:</p> <ol style="list-style-type: none"> <li>1. When call charge in sent in currency: Displayed charge = (Received charge/RURC) * RUCS</li> <li>2. When call charge in sent in AOC units: Displayed charge = (Received charge * RUCF) * RUCS units</li> </ol> <p>The default value for x is identical to the previously entered RUCS value. Not prompted for Danish and Swedish EuroISDN.</p>	basic-20

# LD 16

Prompt	Response	Comment	Pack/Rel
RVSD	ic dc	Reversed wired CO trunk threshold. Where: ic = increment count = 1-(8)-31 dc = decrement count = 1-(31)  RVSD specifies the percentage threshold for CO trunks which have tip and ring or other trunk wiring problems. See prompt ILLR for a description of ic and dc values.  Prompted for COT, FEX and WATS trunks.	basic-16
SAT	(NO) YES	Satellite used for trunk route via earth orbiting satellite This prompt has no relation to the trunk route function connecting a main PBX to a satellite PBX.	esn-1
SBN	(NO) YES	Do not send Billing Number on this route Send Billing Number on this route	basic-21
SCDT	(NO) YES	Secondary Dial Tone detection	dtd-10
SCR	(NO) YES	Selective Carrier Restriction to restrict Equal Access calls  New Flexible Code Restriction is enabled. NTOL and ITOL must both be ALLOW.	eqa-19
SDID	YES (NO)	Send DID number instead of internal DN.  IDC table with SDID Yes must be configured.	basic-25.4
SEIZ	ic dc	Seize failure threshold. Where: ic = increment count = 1-(2)-31 dc = decrement count = 1-(2)-31  SEIZ specifies the percentage threshold of trunks which request seizure but are not seized (either no response from the far end or response is too late). See prompt ILLR for a description of ic and dc values.  The default for AID trunks is 2 1. The default for RAN and MUS trunks is 12 6.	basic-1
SGL	(NO) YES	Signal Return normal MFE signal Return MFE idle signal	mfe-10

Prompt	Response	Comment	Pack/Rel
SGRP	(0)-999	Scheduled access restriction group Prompted with Scheduled Access Restrictions (SAR) package 162. Must have group defined in LD 88.	sar-20 pra-15
SID	0-511	Service Identification for the route  Used to poll switches for traffic, ACD or CDR reports. Allows NSF to be turned on or off. The service route ID must match the far end.  Prompted if NSF = YES and TKTP = TIE/WAT/FX/COT.	
SIDE	(NET) USR	Meridian SL-1 Node Type Network User  SIDE defaults to NET if IFC = SL1. SIDE defaults to USR if IFC = 1TR6, NUME, APAC, EUROISDN or D70. Prompted if IFC = SL-1.	basic-22
SIGL	BEL NT4 NT5  APNS DAS  DPN	Signaling interface for CAMA trunks Bell method NT400 method NT500 method  Layer 3 Signaling APNSS signaling DASS2 signaling, allowed with Digital Access Signaling System 2 (DASS2) package 124 DPNSS signaling, allowed with Digital Private Network Signaling System 1 (DPNSS) package 123	cama-1
SIGO	(STD) ESN2 ESN3  ESN5 ETN EN19	Signaling arrangement  Standard signaling arrangement Supports NCOS, TCOS and CCBQ call types Supports network call transfer, Satellite Link Control and all ESN2 call types. It does not support DTI calls. Either ESN2 or ESN3 is recommended for ISA. Supports DTI data calls plus all other types. Electronic TIE Network signaling arrangement ESN Transparent Data Networking data call. Allowed when TKTP = TIE for PRI and DTI trunks.	esn-19
SLCT	TONE MSG	Select Tone Select Message	mfc-24

# LD 16

Prompt	Response	Comment	Pack/Rel
SPCT	(IMM) DLY	Speech Path Cut-Through Immediate cut-through Delayed cut-through	basic-1
SPN	(NO) YES	If yes is entered, the SPN's AC is inserted first to search for a valid UDP number. SPN is prompted when the route type is an IDA trunk with DPNSS1 signaling and when INAC = YES.	pra-21
SPTO	(NO) YES	Super Trunk Option 7-10 digit outpulsing on ANI calls 3 digit outpulsing on ANI calls Response must be YES for outpulsing to begin after three digits.	cam-1
SRCH	(LIN)	Linear Hunting Search method for outgoing trunk member. Start with the highest trunk number, used for 2-way trunks.	basic-1
	RRB	Round Robin Hunting Search for outgoing trunk member. Start with next lower trunk than the one seized, used for outgoing trunks.	
SRPM	0-(15)-255	Service Parameter. Prompted if SRVC = WATB.	pra-16
SRT	1-(30)-1023	Number of minutes on an outgoing CDPC call a set is kept on hold to a trunk	opcb-14

Prompt	Response	Comment	Pack/Rel
SRVC		Service type provisioned for AT&T ESS connections (where IFC = ESS#4 or ESS#5)  Prompted if ISDN = YES and IFC = ESS4 or ESS5. Prompted with Inter Exchange Carrier (IEC) pkg 149.	pra-12
	(NNSF)	No Network Specific Facility or NSF IE sent. NSF refers to the services provided on a Call-by-Call basis.	
	ACC	Accunet Data service	
	I800	International 800 service	
	IWAT	In-WATs service for AT&T interface	
	LDS	Long Distance Service	
	M800	MEGACOM 800 service	
	MEG	MEGACOM service	
	Q900	ATT&T Multiquest 900 service	
	SDN	Software Defined Network service	
	WATB	Wide Area Telephone Service Parameter Band for AT&T ESS#5	
	WATM	Wide Area Telephone Maximal service for AT&T ESS#5	
	(0) - 31	Service provisioned for National ISDN PRI. Prompted if IFC is NI2. Decimal value of the service is entered here:  0 - No NSF IE (public network call) One service route for incoming public network call and multiple service routes for outgoing public network call. The service route number for incoming public call has to be specified in IPUB prompt in the master route.  17 - INWATS selection  18 - OUTWATS selection  19 - Foreign Exchange Selection  20 - Tie Trunk Selection  AT&T defines services other than the one defined in the Bellcore CBC specification. These values (defined in the facility coding field in the NSF IE) can be entered here in order to allow M1 to recognize the AT&T proprietary service.	cbc_pkg- 23
SSL	1-15	Special Service List number Used to identify special service calls on this PSTN for CO route, list must be previously defined in LD 18.	opcb-14

# LD 16

Prompt	Response	Comment	Pack/Rel
SST	xx y	Seizure Supervision Timer Timer for trunks with delay dial or DDL, wink or WNK and ground or GRD start arrangements. Where: xx = minimum value. Therefore: xx = 1-(3)-15 seconds for GRD start xx = 5 seconds for DDL and WNK y = increment value of 0-7 seconds	basic-18
STEP	0-511	Alternate trunk route for outgoing trunks STEP cannot be defined for an ISA route. Route 31 is no longer an exclusively private route, unless configured as one in LD 16. For dataport, it is only possible to step to a similar ADM data route. Precede with X to delete.	basic-1
STND	(YES) NO	Standard T100 test line (STND is 5.5 seconds and is followed by silent termination at the far end)	atm-7
STRK	(NO) YES	Super Trunk group feature	cam-1
STRT	IMM DDL	Start arrangement Immediately connect call to recording Delay call connection until start of recording	ran-1
STYP	(SDAT) STDN	Standard Signaling Type Standard Data signaling for voice and data (DM-DM, non-tandem PSDS). Standard Transparent Data Networking for voice and data and TDN calls. STDN is applicable to calls on DTI trunks only. This prompt appears when SIGO = STD.	tdn-19

Prompt	Response	Comment	Pack/Rel
SVFL	ic dc	Supervision Failure. Where: ic = increment count = 1-(2)-31 dc = decrement count = 1-(2)-31  SVFL specifies the percentage threshold for trunks which fail to obtain supervision. See prompt ILLR for a description of ic and dc values.  Prompted for only AID, CAM, CSA, RLM, RLR and TIE trunks. The default for AID trunks is 2 1.	basic-1
SWP	(NORM) ATT	Subscriber With Priority calls receives normal treatment for busy and intercept situations. Subscriber with priority calls routed to attendant for busy or intercept situations	mfc-15
T100	n...n	T100 test line Directory Number, 2 to 10 digits	basic-1
TABL	0-31	Flexible dial tone detection Table number	dtd-14
TARG	0-(1)-31	Trunk Access Restriction Group range  Enter the list of all TGAR in LD 10, LD 11 and LD 14 which have restricted access to this route.  Multiple groups may be defined or deleted. To delete entries, enter Xnn. List all entries to be deleted (Xnn, Xnn, ...). Entries must be separated by a space.	basic-1
TBL	(0)-15	Prefix table number to be associated with this route	isdn-24
TCPP	(NO) YES	CPP flag for an incoming non-ISDN trunk call tandemed to this trunk route. An incoming non-ISDN trunk call tandemed to this trunk route will carry the Privacy Override indicator. The call will be marked as a CPPO call. An incoming non-ISDN trunk call tandemed to this trunk route will carry the Privacy indicator The call will be marked as a CPP call.	cpp-24
TCRS	(YES) NO	The Toll Category Request Supported option is defined for the incoming TOLL CDTI2-MFS routes. Setting the TCRS to NO means that the CIS TOLL exchange does not support the TOLL Call Category Request MFS signal (B11). The TCRS is prompted only if the MFC is set to the CMFS only for the incoming routes.	cismfs- 23

# LD 16

Prompt	Response	Comment	Pack/Rel
TDET	(NO) YES	Tone Detector required	basic-1
TDG	x... x	Toll Digits. Where: x = 0-9  Actual digits after the trunk access code which indicate toll calls. Precede with X to remove. If all digits are removed, the digits revert to the North American toll scheme.  Prompted when NATL = NO.	cdr-13
TFD	(0) - 3600	Timed forced disconnect for paging trunks (30 second increments). TFD must be defined individually for each route.	basic-15
TGAR	0-(1)-31	Trunk Group Access Restrictions Prompted if TKTP = TIE, ISAR = YES, and ISDN = YES.	basic-12
TIDY	xxxx yyyy	Trunk Identity. Where:  xxxx = PBX Reference Number The xxxx default is LSC as defined in LD 15, combined with route access code truncated to four digits.  yyyy = Trunk Group Reference Number The yyyy default is route number truncated to four digits.  Each of the two numbers can be one to four digits. Prompted if Digital Private Network Signaling System 1 (DPNSS) package 123 equipped and SIGL not DPN.	dass2-16
TIER	0-511	Tie Reference route number  Determines how incoming TIE or private call types are handled for the associated Integrated Service Access route or ISA. Precede with X to delete. Prompted when TKTP = ISA, IFC = D100 or SL-1 and NSF = YES.	pra-12
TIMR	aaa xxx	Trunk Timers. Where:  aaa = timer mnemonic xxx = timer value in milliseconds unless stated otherwise	basic-1

Prompt	Response	Comment	Pack/Rel
	AAD (384)-2048	Address Acknowledge Delay timer	jpn-9
		AAD is the minimum time for the system to delay before sending the address acknowledge signal to the central office. Inputs are in increments of 128 ms. Allowed only if Japan trunks and Meridian 1 packages are equipped.	
	ARD 512-(1024)-2048	ANI Request Duration Timer in 256ms increments	
	ARP 1-(3)-255	Autoguard Repeat Prevention timer	xpe-18
		Only valid for Loop start COT. Inputs are in one second increments. International Supplementary Features (SUPP) package 131 and Meridian 1 XPE (XPE) package 203 required. Recommended value for Australia is 200.	
	ATO 128-(4992)-6528	ANI Time-out timer in milliseconds.	ani-1
		For CIS outgoing trunk routes, the ATO value defines the time delay which follows toll access code outputting. During this time delay, further outputting is halted until a special card firmware message confirms that the ANI response/request interaction has been successful.	
	CRD 0-(512)-639	CO Release Delay timer.	basic-18
	DDL 0-(70)-511	Dial Delay timer	basic-1
	DSI 128-(34944)-499200	Disconnect Supervision timer	basic-1
	EESD 0-(1024)-4992	End to End Signalling Delay timer.	arcl-22
		The outputting DTMF tone using EES (or IEES) is delayed "EESD" ms after the sending of the first recall signal to the Norstar. If EESD = 0, the timer is not started and the buffered digits will not be outputted.	
		The EESD timer is accepted if ACRL package 236 is equipped and if the route is analog TIE.	

# LD 16

Prompt	Response	Comment	Pack/Rel
EOD 128-(13952)-32640	End-of-Dial timer, non-digitone trunks	For DID incoming calls in the U.S., to comply with FCC regulations, the EOD timer expires at 19,968 ms, even if configured otherwise. All other call types utilize the configured timer parameters.  Refer to <i>Features and Services</i> (553-3001-306) for complete details concerning the FCC Compliance feature.	basic-1
FLH 0-(510)-32640	Hook Flash timer (in msec.)	The range for Centrex Switchhook flash timer is 256-(512)-1536. For CAS, it is recommended that the timer be set at 768 or greater.  This timer must be at least 256 ms shorter than the remote OGF timer and 256 ms shorter than the ICF timer.  60-89 ms = Digit 1 is sent 90 ms = Hard coded for XFCOT hook flash 91-255 ms = Digit 1 is sent 256-1536 ms = Existing software controlled hook switch flash  Range for Centrex Switchhook flash timer is 60-(510)-1536 msec (the value is rounded to the nearest 10 msec).  Software controlled Centrex/Trunk Switch Flash timer range of 60- 127 msec is done by sending digit 1.  The range of 128-1536 msec is already controlled by Centrex Switchhook Flash feature.  Firmware flash user can enter any value from 60 to 1536.  FWTM must be YES in LD 14 for the trunk associated with this route, if firmware timing is to be used.	thf-20
GRD 0-(896)-32640	Guard timer (response disallowed)		basic-1

Prompt	Response	Comment	Pack/Rel
	GTI 0-(896)-32640	Incoming Guard timer (ms) For DT12 trunk routes, guard timer of 0 may be defined (meaning that timing is not necessary). An Incoming Guard Timer on the ISPC SLAVE side (when SMAS = NO) must be set to 0.	xct1-16
	GTO 128-(896)-32640	Outgoing Guard timer	xct1-16
	ICF 0-(512)-32640	Incoming Flash timer	basic-1
	IENB 2-(5)-10	Idle Extension Notification Block timer (in minutes) Semi-Automatic Camp-On (SACP) package 181 and Network Attendant Services (NAS) package 159 must be equipped.	nas-18
	LCT 0-128-32640	Loop Calling detection timer Default for COT trunks = 128 Default for all others trunks = 256	basic-1
	LEXT 50-(100)-350	Loop Extender timer (timer is in milliseconds)  The minimum amount of time the Meridian 1 waits to determine whether the tip is ground. When the time is expired, the loop is closed to outpulsing.	tip-19
	MAD 0-(500)-1000	Minimum Answer Delay timer  The minimum amount of time the Meridian 1 remains On-Hook after the called party is first alerted. Inputs are in steps of 100 ms, numbers are rounded up to next valid entry. Allowed only if Japan trunks and Meridian 1 packages are equipped.	xujt-16
	MFC 128-(12032)-65408	Multifrequency Compelled Signaling (MFC) timer	mfc-9
	MFE 128-(14976)-65408	MFC Interdigit timer	mfe-10

# LD 16

Prompt	Response	Comment	Pack/Rel
	MFID (0) - 25088	R2MFC Interworking timer. This timer will be in the range of 0 - 25 seconds, in 128ms increments. A value of 0 will indicate that the timer is disabled and existing timing functionality will be used.	basic-23
	MFK 128-(4992)-32640	First backward signal awaiting timer	kd3-20
	MFKM 45- (90)-180	Timer value in seconds representing the total amount of time the signal exchange equipment can be occupied in a call expressed in seconds.	kd3-20
	MFO (0)-16256	MFC Transmit timer If 0, then use current value of MFC Timer.	
	MFR128-(2048)-16256	MFC Reception timer	kd3-20
	MFY128-(4096)-16256	MFC Transmission timer	kd3-20
	NBL 128-(4096)-32640	Enblock Long dialing timer Long timeout period set to check if all digits have been entered.	basic-12
	NBS 128-(2048)-32640	Enblock Short dialing timer Short timeout period set to check if all digits have been entered.	basic-12
	NRAG (30)-240	Network Ring Again timer or DPNSS duration for T6 and T7 timers, in minutes. Currently, only 30 minutes is supported.	pra-13
	NRD 128-(10112)-32640	No Ringing Detector change	basic-1

Prompt	Response	Comment	Pack/Rel
	OBA 2-(120)-510	Outgoing B-Answer timer Time in seconds to wait for B-answer on outgoing ATL trunks for Sweden.	supp-15
	ODT 256-(4096)-16128	End-of-dial timer for DIGITONE trunks	basic-1
	OGF 0-(512)-32640	Outgoing Flash timer	basic-1
	OOD 1-(3)-3	Optional Outpulsing Delay timer Allowed for CO, FEX, WATT trunks.	ood-79
	RAS 128-(13952)-32640	Receipt of Answer Signal timer	
	RGV 128-(640)-1920	Ring Validation timer Ring Validation timer for Japan Information Notification Service set as 256.	basic-1
	RMA 1024-32640	Receipt of Message Acknowledgment Default = 5120 for SIGL = DPN. Default = 20480 for SIGL = DAS	
	RTD 0-(12)-60	Tone Detector Response Timer in seconds. An odd numbered entry is rounded up to the next even number.	ardl-22
	SFB 3-(3)-255	Seize Fail Busy timer  This timer controls the time that a trunk is held busy following a seize acknowledge failure or call collision. The recommended value for trunks with seizure supervision is 25 seconds. The recommended value for trunks with no seizure supervision is 3 seconds. This value applies to all analog trunks except those which use the ARP timer.	
	SRM 1024-(32640)	Service Request Message timer	

# LD 16

Prompt	Response	Comment	Pack/Rel
	TFD (0)-3600	Timed Forced Disconnect, in 30 second increments. TFD applies to CO, DIC, FEX, PAG, TIE and WATS routes.	basic-15
	TTO (128)-7040	Taiwan Time Out value	twr1-24
	VGD 0-(6)-31	VNS Guard timer The time allowed for the trunk call to disconnect in seconds. This is the guard timer on the associated VNS DN.	vnv-20
	VSS (0)-1-2-1023	VNS Set Speechpath Timer. Where: 0 = Do not answer the bearer channel until the terminating party answers 1 = Answer the bearer channel immediately on arrival 2-1023 = Answer the bearer channel after the specified seconds (rounded down to 2-second multiple) if the terminating party has not already answered.	vnv-20
TITH	(0) - 300	Waiting Time Threshold (seconds). Prompted only if BDCT = YES and for Start/Stop RAN machine with STRT = DDL.  Default value zero means no threshold applies.	ranbrd- 23 ran- 23
TKTP		Trunk Type  You must respond to this prompt when REQ = NEW.	
ADM		Add-on Data Module associated with a Data Interface Card i.e., DLC, 4PDLC, AILC Not supported on Small System.	basic-5
AID		Automatic Incoming Outgoing Dial trunk. Not supported on Small System.	aiod-5
AWR		Automatic Wake Up trunk block for RAN/Music Requires Automatic Wake Up (AWU) package 102.	awu-10

Prompt	Response	Comment	Pack/Rel
CAA	Common Control Switching Arrangement Automatic Number Identification data block	Requires Automatic Number Identification (ANI) package 12.	basic-1
CAM	Central Automatic Message Accounting trunk data block		basic-1
CBCT	Call by call master route		cbc_pkg-23
COT	Central Office Trunk data block	Supported for ISDN BRI Trunk Access feature.	basic-1
CSA	Common Control Switching Arrangement access line data block		basic-1
DIC	Dictation trunk data block		basic-1
DID	Direct Inward Dialing trunk data block	Supported for ISDN BRI Trunk Access feature.	basic-1
FEX	Foreign Exchange trunk data block		basic-1
FGDT	Feature Group D trunk		fgd-17
IDA	Integrated Digital Access	Requires Integrated Digital Access (IDA) package 122.	ida-16
ISA	Integrated Service Access route or Call-by-Call route type	For ISDN applications, only TIE or ISA Trunks can connect a SL-1 directly to another SL-1. Requires Call-by-Call service (CBC) package 117. Must have ISDN configured in LD 15 and LD 17.	isl-12
MCU	Meridian Communications Unit port		basic-18
MDM	Modem trunk data block for data port interfacing with QPC60 500/2500 type card		amp-5
MUS	Music trunk data block	Requires Music (MUS) package 44.	mus-1
PAG	Paging trunk data block		basic-1
R232	DAC for NT7D16 on RS-232 port		basic-18

# LD 16

Prompt	Response	Comment	Pack/Rel
	R422	DAC for NT7D16 on RS-422 port	basic-18
	RAN	Recorded Announcement trunk data block Requires Recorded Announcement (RAN) package 7.	ran-1
	RCD	Emergency Recorder trunk data block Requires Basic Automatic Call Distribution (BACD) package 40.	bacd-1
	RLM	Release Link Main trunk data block Requires Centralized Attendant Services (Main) (CASM) package 26.	casm-1
	RLR	Release Link Remote trunk data block Requires Centralized Attendant Services (Remote) (CASR) package 27.	casr-1
	TIE	TIE trunk data block Supported for ISDN BRI Trunk Access feature.	basic-1
	TIE ATL	TIE ATL data block for Sweden	supp-15
	TIE SEMI	Semi-automatic TIE trunk data block	opcb-14
	TIE AUTO	Automatic TIE trunk data block	opcb-14
	TIE TONE	Tone TIE trunk data block	opcb-14
	WAT	Wide Area Telephone Service trunk data block	basic-18
TOBO		Toll Operator Break-Out. TOBO is prompted if DTRK = YES, DGTP = DTI2, MFC = YES and OPCB = YES.	pedm-18
	(NO)	OPCA signals received after a toll operator break in operation will be ignored.	
	YES	An OPCA signal received after a toll operator break-in operation has been completed, will result in the toll operator being removed from the call.	

Prompt	Response	Comment	Pack/Rel
TOV	(0) 1 2 3	Data Timeout Value No timeout 15 minutes 30 minutes 60 minutes Prompted if TKTP = R232, R422 or MCU.	basic-18
TRAN	(ASYN) SYN	Asynchronous Transmission mode Synchronous Transmission mode  If PSDS = YES, then TRAN must be SYN. Prompted if TKTP = MCU.	basic-18
TRMB	(YES)  NO	Tromboning allowed. Incoming call on route may be routed directly back out on the same route.  Tromboning denied. Incoming trunk call on route may not be routed directly back out on the same route.  Only applies to calls routed using NARS/BARS or CDP. Does not apply to calls redirected by HUNT, Forward All Calls, or Forward No Answer.	tat-21
TRMT	(NONE), FAIL, TEST, NPA	Numbering Plan Digit or Information Digit treatment FAIL = Interrupts the NPD/ID as an ANI failure TEST = Interrupts the call as a 911 test call (for 922T calls only) This prompt appears when the Meridian 911 (M911) package 224 is equipped.	m911-19
TRO	(NO) YES	Trunk Route Optimization Prompted if NCRD = YES and IFC = SL-1.	tro-16
TRRL	(NO)  YES	Recall signal may be received and transmitted on this route.  Recall signal can be neither received nor transmitted on this route. TRRL appears if ACRL package 236 is equipped and the route is analog TIE.	arcl-22
TST	n...n	Test loop around DN, range is 2 to 10 digits	basic-1
TTA	(NO) YES	Time To Answer output in CDR	fcdr-18

# LD 16

Prompt	Response	Comment	Pack/Rel
TTBL	(0)-31	Tone Table number Table (0), North American default values, is created when the first customer is created. Refer to LD 56 for other tables.	ftc-13
TW_INC_CLID	(NO) YES	CLID Option on an incoming TWR1 route	twr1-24
TW_ROUTE	(NO) YES	Taiwan R1 route	twr1-24
TYPE	ATM	Route type Automatic Trunk Maintenance data block. Requires Automatic Trunk Maintenance (ATM) package 84.	atm-19
	NPID	Numbering Plan or Information Digit table. Requires Meridian 911 (M911) package 224.	
	RDB	Route Data Block.	
	SCH	ATM Schedule block. Requires Automatic Trunk Maintenance (ATM) package 84.	
V25	(NO) YES	V.25 bis option for synchronous operation Prompted if TKTP = MCU and TRAN = SYN.	basic-18
VRAT	(NO) YES	Answer an attendant extended call over VNS immediately on the incoming bearer trunk	vns-20
VTRK	(NO) YES	Virtual Trunk route For Succession 1000 system	basic-2
WAIT	(RGB)	Provide ringback for calls queueing for RAN trunk.	ranbrd- 23 ran- 23
	MUS	Provide music for calls queueing for RAN trunk. Prompted only for RAN route when RAN broadcast package is equipped.	mus- 23
WATR	0-511	Wide Area Telephone Service or WATS Reference route number  Determines how incoming WATS call types are handled for the associated Integrated Service Access route or ISA. Precede with X to delete.  Prompted when TKTP = ISA, IFC = D250 or SL-1 and NSF = YES.	pra-14

Prompt	Response	Comment	Pack/Rel
WDGT	(L) F	<p>First or last 4 DNIS digits to be sent on APL and HSL link.</p> <p>WDGT has no effect on AML links. All DNIS digits will be sent for AML.</p> <p>Prompted if NDGT is greater than 4. Also used for CDR when the New Format CDR (FCDR) package 234 is disabled.</p>	dnis-20
XTDT	0-7	<p>Extended Tone Detector Table number</p> <p>If a table other than 0 is entered, it must have already been configured in LD 97. Must be the same value as defined in LD 13. Prompted with Meridian 1 Superloop Administration (XCT1) package 205.</p>	xct1-16
ZONE	0-255	<p>Zone for codec selection and bandwidth management</p> <p>For Succession 1000 system</p>	basic-2

# LD 16

---

## LD 17: Configuration Record 1

---

System configuration defines system hardware and software parameters. Overlay program 17 is used to modify the following:

- password options
- interface and transmission mode
- common equipment
- overlay automatic maintenance routines
- value added server configuration
- transmission parameters of Meridian Modular / Aries Telephone
- alarm filter

When the Overlay is loaded the available system memory and disk records are output in a header as follows:

```
CFN000
MEM AVAIL: (U/P): xxxxxx USED: xxxxx TOT: xxxxxxxx
DISK RECS AVAIL: xxx
DCH AVAIL: XX USED: XX TOT: 64
AML AVAIL: XX USED: XX TOT: 16
```

## Notes on ISDN configuration

ISDN configuration may be changed by adding the primary D-channel followed by the optional backup D-channel. Be sure to observe the following:

- Primary and back-up D-channels must be on the same card type (DCHI or MSDL)
- Primary D-channel parameters are automatically copied to the back-up D-channel.
- Disable both ends of a D-channel before making any changes to the D-channel.
- Changes to the D-channel pair should be made to the primary D-channel first (except for BCHL and RCVP).
- The backup D-channel must be removed prior to removing the primary D-channel.
- When a backup D-channel is configured for a primary D-channel, the USR of the primary can be changed from SHA to ISLD or PRI, but not from ISLD to PRI or SHA.
- The ADAN DCH MOVE command allows the primary D-channels to move to a new logical number (NDCH), card type (CTYP), device number (DNUM), and port designation (PORT) when adding MSDL cards. You do not need to remove any D-channels or B-channels when using this command with MSDL cards.

## D-Channel Expansion

The D-channel Expansion feature increases the total number of possible D-channels in a multiple group Meridian 1 system. The number of physical I/O addresses permitted for D-channel application to 16 for each network group. For each MSDL physical I/O address, up to four ports are available for D-channel use. With the D-channel Expansion feature, the software supports up to 255 D-channels.

For more information on the D-channel Expansion feature, please refer to the *Networking Features and Services* (553-2901-301).

---

# Prompts and responses

## Configuration record 1

---

Prompt	Response	Comment
REQ:	CHG	Change
TYPE:	CFN	Configuration Record
ADAN	aaa bbb x	Action Device And Number (aaa = NEW, CHG, MOV or OUT ; bbb = I/O device type ; x = port number) (see page 478)
PWD	(NO) YES	Change Password options (see page 490)
PARM	(NO) YES	Parameters for Interface and transmission mode (see page 486)
CEQU	(NO) YES	Change to Common Equipment (see page 484)
OVLV	(NO) YES	Overlay (see page 485)
VAS	(NO) YES	Value added server configuration (see page 491)
ATRN	(NO) YES	Change Transmission Parameters of MeridianModular / Aries Telephone (see page 483)
ALARM	(NO) YES	Change Alarm Filter (see page 493)

---

# LD 17

## Gate Opener: ADAN (Action Device and Number)

---

Prompt	Response	Comment
REQ	CHG	Request
TYPE	ADAN	Action Device And Number
- ADAN	aaa bbb x	Action Device And Number. Where: <ul style="list-style-type: none"><li>• aaa = NEW, CHG, MOV or OUT</li><li>• bbb = I/O device type</li><li>• x = port number)</li></ul>
TTY_TYPE	a...a	TTY logical type for Small System or Media Gateway. Where a...a is: <ul style="list-style-type: none"><li>• (SDI), LSL, or PTY</li></ul>
CAB	x	Cabinet number for Small System or Media Gateway. Where x is: <ul style="list-style-type: none"><li>• (0), 1, 2,3 or 4</li></ul>
CAB_TYPE	a...a	Cabinet Type. Where a...a is: <ul style="list-style-type: none"><li>• IP = IP Expansion Cabinet or Media Gateway</li><li>• FIBR = Fiber Expansion Cabinet</li></ul>
- NUMD	1-(2)	Number of floppy disk drives
- FTYP	aa	Floppy Type (aa = (3), 3S, or 5)
- SIZE	(0)-65534	Size of History File buffer in characters
- PDCH	0-63	Primary D-channel associated with a backup D-channel
- TTY	0-15	Pre-defined MSDL-SDI terminal number
- CTYP	a...a	Card Type (CTYP responses can be found on page 507)
- GRP	x	Network group number
- CDNO	xx	Card number (Small System or Media Gateway)
- DNUM	0-15	Device number for I/O ports
- ADMIN_PORT	0	Administration Terminal Port number
- LANGUAGE	ENGLISH	English Language supported on STA
- ADDITIONAL_PORT	aa	Additional Port for the Single Terminal Access (aa = P1, P2, or P3)

---

- PORT	0-15	Port number (range varies according to system option and card/port type)
- DES	d...d	Designator
- BPS	xxxxx	Bits Per Second
- PARY	aaaa	Parity type (aaaa = (NONE) ODD, or EVEN)
- STOP	(1)-1x5-2	Number of Stop bits (To configure value of 1.5, enter 1x5)
- BITL	x	Data Bit Length (aaa = (5), 6, 7, or 8)
- FLOW	(NO) YES	Flow Control
- FLOW_TYPE	a...a	Flow control type for Small System or Succession 1000. Where a...a is: <ul style="list-style-type: none"> <li>• NONE, XON, MAIL, or HWR)</li> </ul>
- BCST	(NO) YES	Broadcast ports affected by Flow Control
- PARM	aaaa bbb	Parameters for Interface and transmission mode (aaaa = R232 or R422 ; bbb = DCE or DTE)
- FUNC	aaa	MSDL card function (aaa = ABC, FCL, MOD, LME, or SCN)
- USER	a...a	Output message types (USER responses begin on page 555)
- XSM	(NO) YES	Extended System Monitor
- TTYLOG	0-65534	Log buffer size
BANR	(YES) NO	Optional Security Banner option
- CUST	xx	Customer number associated with this function
- SSUP	(NO) YES	Senior Supervisor
- - APRT	(NO) YES	ACD Printer
- STOP	(1)-1x5-2	Number of Stop bits (to configure value of 1.5, enter 1x5)
- DPNS	(NO) YES	Digital Private Network Signaling
- MWIF	aaaa	Message Waiting Interface (aaaa = (STD) or ISDM)
- USR	aaaa	User (aaaa = ISLD, PRI, SHA, SHAV, or VNS)
- IFC	a...a	Interface type for D-channel (IFC responses can be found on page 520)
- - BSRV	(NO) YES	B channel Service messaging.
- - BSRC	1- (2) - 4	B channel Service Re-transmission Counter.
- - PINX_CUST	0-99	This customer number will be used for the DN address translation associated with call independent connection messages received on this D-channel.
- - ISDN_MCNT	60-(300)-350	Layer 3 call control message count per 5 second time interval.
- -CNTY	aaaa	Country (CNTY responses can be found on page 505)
CLID	OPTx	Calling Line Identification (x= 0, 1, 2, 3, 4, or 5)
PROG	a..a	Progress signal (a..a = NCHG, MALE, or MCON)

---

# LD 17

CO_TYPE	aaa	Central Office switch type (aaa = (STD) or ATT)
- RCPV	(NO) YES	Recovery to Primary
-- ISLM	1-382	Integrated Services Signaling Link Maximum
-- VNSM	0-300	Virtual Network Services Maximum
-- VNSC	(0)-xx	Virtual Network Services Customer number associated with the D-channel
-- VNSP	0-32700	Virtual Network Services Private Network Identifier
-- VCNA	(NO) YES	Virtual Network Services Network Call Party Name Display available over this D-channel
-- VCRD	(NO) YES	Virtual Network Services Network Call Redirection available over this D-channel
-- VTRO	(NO) YES	Trunk Route Optimization before answer available over this D-channel for VNS
-- VSIG	(NO) YES	Virtual Network Services Network Signalling option
-- DCHL	0-255	D-Channel PRI loop number
- BCHL	0-254	PRI loop number for Backup D-channel
- PRI	loop x	Primary Rate Interface
- PRI2	0-255 2-15	Secondary PRI2 loops for nB + D, plus sequence
- OTBF	1-(32)-127	Output request Buffers
- DRAT	aaa	D-channel transmission Rate (aaa = (56K), 64KC, or 64KI)
- BPS	xxxxx	Bits Per Second
- PARM	aaaa bbb	Parameters for Interface and transmission mode (aaaa = R232 or R422 ; bbb = DCE or DTE)
- CLOK	aaa	Clock (aaa = EXT or INT)
- SIDE	aaa	Meridian 1 node type (aaa = (USR) or NET)
- SEMT	(1)-5	Number of Status Enquiry Messages sent within 128 ms from the network side
- CNEG	x	Channel Negotiation option (x = (1) or 2)
- RLS	xx	Release ID of the switch at the far end of the D-channel
- QCHID	(YES) NO	Map channel number to timeslots on a PRI2 loop
- RCAP	a...a	Remote Capabilities (RCAP options begin on page 542)
- - MWTO	(15) - 30	This prompt is only printed if the RCAP is set to either QMWI or QMWO. The value entered (in seconds) is the duration of a timer started when a SETUP message is sent to set up a connection-oriented, call-independent connection for MWI transport. The timer is stopped on receipt of a CALL PROCEEDING message.

---

-- MWRT	0 - (2) - 15	This prompt is only printed if the RCAP is set to either QMWI or QMWO. The value entered is the number of re-tries to be effected after a SETUP timeout.
-- MQC_FEAT	aaaa	MCDN QSIG Feature type
-- PR_RTN	(NO) YES	Retain option supported by the far end PINX
-- PR_TRIGS	aaa xx	Path Replacement Triggers
- OVLR	(NO) YES	Overlap Receiving
-- DIDD	(0)-15	DID Delete
- OVLS	(NO) YES	Overlap Sending
-- OVLT	(0)-8	Overlap Timer, in seconds
- MBGA	(NO) YES	Multilocation Business Group Allowed
- NASA	(NO) YES	Network Attendant Service Allowed
- TIMR	(NO) YES	Change protocol timer value
-- T310	10-(30)-60	Timer used to determine how long SL-1 can wait for the response message when the QSIG outgoing call is in the U3 (outgoing call processing) state
	110-(120)	Timer range for PRI, PRI2, and BRI trunks
-- INC_T306	0-(2)-240	Variable timer for received disconnect message on incoming calls, allowing in-band tone to be heard when sent by the network
-- OUT_T306	0-(30)-240	Variable timer for received disconnect message on outgoing calls, allowing in-band tone to be heard when sent by the network (entered in 2 second increments)
- LAPD	(NO) YES	Link Access Protocol for D-channel Change LAPD parameters
-- T23	1-(20)-31	Interface guard Timer or DCHI only
-- T200	2-(3)-40	Retransmission Timer
-- N200	1-(3)-8	Maximum Number of retransmissions
-- N201	4-(260)	Maximum Number of octets in information element
-- T203	2-(10)-40	Maximum Time allowed without frames being exchanged
-- K	1-(7)-32	Maximum number of outstanding unacknowledged frames
-- N2X4	0-(10)-20	Maximum Number of status inquires when remote is busy only applies to 1TR6
- IADR	0-(3)-255	Individual Address for the data link level HDLC protocol
- RADR	0-(1)-255	Remote Address for the data link level HDLC protocol
- LCTL	(NO) YES	Change Link Control system parameters
-- T1	2-(4)-20	Retransmission Timer. Range in units of 0.5 seconds, (4) = two seconds
-- T2	0-(10)-255	Maximum Time allowed without a frame being exchanged

---

# LD 17

-- T3	2-(5)-255	Timer for initial link setup in units of 0.5 seconds for ESDI only
-- N1	xxx	Maximum Number of octets per HDLC information frame (xxx = 32, 64, 128, or (512))
-- N2	4-(8)-16	Maximum Number of retransmissions in steps of 1
-- K	1-(7)	Maximum number of outstanding frames
- LTHR	(NO) YES	Link Threshold. Change link performance thresholds for ESDI only
-- RXMT	1-(5)-20	Retransmission Threshold
-- CRC	1-(10)-20	CRC threshold
-- ORUR	1-(5)-255	Overrun/Underruns out-of-service threshold
-- ABOR	1-(5)-255	Number of Aborts before an out-of-service
- ENL	(YES) NO	Enl / Dis error messages (Small System or Media Gateway)
- DPNS	(NO) YES	Digital Private Network Signaling
- DCHI	0-15	D-channel Interface port number
- CDNO	1-9	Card Number where DCHI resides (Small System or Media Gateway)
- PORT	xx	Port number (range varies according to system option and card/port type)

---

## Gate Opener: ALARM (Alarm filters)

Prompt	Response	Comment
REQ	CHG	Request
TYPE	ALARM	Change Alarm Filters
- FMT_OUTPUT	(OFF) ON	Enable/(disable) formatting for the alarm/exception output
- AF_STATUS	(OFF) ON	Alarm and Exception filtering
- A_FILTER	aaa	Alarm Filter entry (aaa = NEW, CHG, or OUT)
- TRIGGER	a...a	Trigger string for alarm tables
- SEVERITY	aaaa	Alarm Severity (aaaa = (NONE), CRITICAL, MAJOR, or MINOR)
- SUPPRESS	0-(5)-127	Alarm occurrence threshold (prior to suppressing)
- ESCALATE	0-(2)-127	Alarm occurrence threshold (prior to escalating)
- A_FILTER	<cr>	Enter carriage return at this prompt to see E_FILTER prompt)
- E_FILTER	aaa	Exception Filter entry (aaa = NEW, CHG, or OUT)
- TRIGGER	a...a	Trigger string for exception tables
- ADAN	aaa bbb x	Action Device And Number (aaa = NEW, CHG, MOV or OUT ; bbb = I/O device type ; x = port number)
- USER	FIL	Alarm filtering message output

## Gate Opener: ATRN (Aries Transmission)

Prompt	Response	Comment
REQ	CHG	Request
TYPE	ATRN	Aries Transmission
- CODE	(0)-2	CODEC Coding Law
- SOLR	0-(1)-4	Sidetone Objective Loudness Rating
- ROLR	(0)-63	Receive Objective Loudness Rating
- AOLR	(0)-12 32-50	2216 ACD set Objective Loudness Rating
- TOLR	(0)-63	Transmit Objective Loudness Rating
- AGCD	(NO) YES	Automatic Gain Control Disabled
- VOLR	(NO) YES	Volume Reset
- HRLR	(0)-8, 32-40	Handsfree Receive Objective Loudness Rating
- HTLR	(0)-11, 32-54	Handsfree Transmit Objective Loudness Rating

# LD 17

## Gate Opener: CEQU (Common Equipment)

Prompt	Response	Comment
REQ:	CHG	Request
TYPE:	CEQU	Change to Common Equipment parameters
- MPED	aa	Maximum Peripheral Equipment Density (aa = (SD), DD, 4D, or 8D)
- TERM	a...a	Single Density Terminal equipment loop or loops
- REMO	a...a	Single Density Remote Peripheral Equipment loop or loops
- TERD	a...a	Double Density Terminal equipment loop or loops
- REMD	a...a	Double Density Remote Peripheral Equipment loop or loops
- TERQ	a...a	Quadruple Density Terminal equipment loop or loops
- REMQ	a...a	Quadruple density Remote Peripheral Equipment loop or loops
- DDCS	0-159	Loop number for DPNSS/DASS hardware
- DTCS	1-159	Digital Trunk Channel Switches
- XCT	a...a	Extended Conference/TDS/MFS
- TDS	a...a	Tone and Digit Switch
- CONF	a...a	Conference loop
- MFSD	0, 2, 4...255	Multifrequency Sender loop
- DTD	aaa	Dial Tone Detector Test (aaa = NO, TDS, or EXT)
-- CODE	x xx xx xx	Code (CODE response is defined on page 505)
-- TN	l s c u	Valid Terminal Number that when accessed returns a test tone
- DLOP	lll dd ff ...	Digital Trunk Interface Loop or Loops (lll = loop number, dd = number of voice or data calls, ff = frame format)
- MODE	aaaa	Mode of operation (aaaa = LINK, PRI, or TRK)
-- TMDI	(YES) NO	TMDI Card (Mode set to PRI OR TRK)
-- LCMT	aaa	Line Coding Method (aaa = (B8S) or AMI)
-- YALM	aaa	Yellow Alarm Method (aaa = (FDL) or DG2)
-- TITE	(0) 2	T1 transmit Equalization
-- TRSH	0-15	Threshold
-- DTIC	0, 4, 8,...254	Starting network loop slot for PRI/DTI card
- PRI2	0-255	2.0 Mb/s Primary Rate Interface or PRI loop number
- APVL	0-159	Analog Private Virtual Loop for virtual TN or channel ID
- DTI2	0-255	2.0 Mb/s Digital Trunk Interface or DTI loop number
- JDMI	0-255	Japan Digital Multiplexer Interface loop number

---

- EXT0	x aaa bbb	Extenders for CPU 0 to Network (EXT0 ranges are defined on page 514)
-- CNI	s p g	Core to Network Interface card location To delete use: s p xg
- EXT1	x aaa bbb	Extenders for CPU 1 to Network (EXT1 ranges are defined on page 515)
-- CNI	s p g	Core to Network Interface card location To delete use: s p xg
- SYMN	x	Synchronization mode
- MEM	0-6	Memory modules
- SMEM	(NO) YES	Short Memory test
- PFTR	YES NO	Prioritize Fast Transfer feature enabled or disabled

---

### Gate Opener: OVLY (Overlay)

---

Prompt	Response	Comment
REQ	CHG	Request
TYPE	OVLY	Change Overlay area options
- SID	xxxx	System ID number
- BKGD	xx xx	Background Overlay task
- PBXH	00-23	Hour to perform Message Waiting lamp maintenance
- TODR	0-23	Time of Daily Routines
- DROL	xx xx	Daily Routine Overlays
- MID_SCPU	(NO) YES	Midnight Switch Cores Allow or deny Midnight Switch Cores, where: Deny causes the system to perform the 3PE test during the Midnight routine instead of switching CPUs. Allow causes the system to switch CPUs during the Midnight routine instead of performing the 3PE test.
		<b>Note:</b> Applicable to CPP systems only.
- TRLL	1-31 1-31	Test RPE Local Loop back
- CY45	(0)-31	Cycles LD 45 can be run whenever a fault is detected
- MULTI_USER	(OFF) ON	Multi-User Log In

---

## Gate Opener: PARM (System Parameters)

The following values should be set at the factory. However, it is recommended that these values be reviewed during initial system installation.

---

Prompt	Response	Comment
REQ:	CHG	Request
TYPE:	PARM	Change system parameters
- LPIB	96-7500	Low-Priority Input Buffers (range depends on system type)
- RCAP	a...a	Remote Capabilities (RCAP options begin on page 542)
- HPIB	96-7500	High-Priority Input Buffers (range depends on system type)
- 500B	16-5000	Output buffers for single line and digital telephones, and trunks (range depends on system type)
- SL1B	16-2048	SL-1 Buffers
- RPEB	16-1000	Remote Peripheral Equipment Buffers, 2.0 Mb/s RPE
- DTIB	(35)-1000	Digital Trunk Input Buffers
- DTOB	(4)-100	Digital Trunk Output Buffers per Digital Trunk Signaling Link
- NCR	x...x	Number of Call Registers, range depends on system type
- MGCR	0-NCR	Maximum number of Call Registers used by AUX messaging
- CSQI	(20)-255	Maximum number of Call Registers for CSL input queues
- CSQO	(20)-255	Maximum number of Call Registers for CSL/AML output queues
- TUBO	(NO) YES	Double message processing speed on AML
- AXQI	(20)-255	Size of Auxiliary Input Queue
- AXQO	(20)-255	Size of Auxiliary Output Queue
- TRNS	aaaa	Selects which messages are going to be translated (aaaa = (NONE), HELP, or BOTH)
- NCPU	x	Number of CPUs (x = 1 or (2))
- CFWS	(NO) YES	Call Forward Saved on SYSLOAD
- PCML	aa	Pulse Code Modulation Companding Law (aa = (MU) or A)
- ALRM	(NO) YES	Minor Alarm displayed on attendant consoles
- ERRM	aaa	Error Messages (aaa = ERR, BUG, or AUD)

---

---

- DTRB	xxx	Digitone Burst time in ms (xxx = 50, 60, 70, or (100))
- ABCD	(NO) YES	16-tone DTMF operation enabled
- TMRK	xxx	Length of cadence increments in ms (xxx = 96 or (128))
- FCDR	aaa	Format for Call Detail Recording (aaa = (OLD) or NEW)
- PCDR	(NO) YES	Priority to CDR
- TPO	(NO) YES	Traffic Period Option
- TSO	(NO) YES	Trunk Seizure Option
- CLID	(NO) YES	Calling Line ID in the CDR
- DUR5	(NO) YES	Duration 0.5
- MLDN	(NO) YES	Multiple Loop DN
- NDRG	(NO) YES	New Distinctive Ringing
- MARP	(YES) NO	Multiple Appearance Redirection Prime feature allowed
- FRPT	aaaa	(Deny) or allow Access to incoming calls by FRE station (aaaa = (NEFR) or OLFR)
- DCUS	0-5	Maximum number of ACD-ADS customers
- MSCL	0-8190	Maximum Speed Call Lists
- PMSI	(NO) YES	Modify Property Management Systems parameters
- - MANU	aaaa	PMS interface (aaaa = (PMS1), PMS2, or PMS3)
- - PMCR	a	Number of Call Registers used for PMSI (a = (x), y or 5)
- - PORT	0-15	Port number (range varies according to system option and card/port type)
- - XTMR	(0)-6	PMS acknowledgment time
- - XNUM	(1)-4	Number of retransmissions per message for PMSI
- - PMIN	(NO) YES	Minor alarm when the PMSI link is not responding
- - PTMR	(0)-31	Polling timer for PMSI
- SYNМ	(0)-5	Synchronization Mode
- - MSDT	0-159	Main Synchronization DTSL
- - SSDT	0-159	Standby Synchronization DTSL
- NDIS	(20)-255	Number of Display messages for Background Terminal
- OCAC	(NO) YES	Support the Original Carrier Access Code format
- MTRO	aaa	Message Registration or Periodic Pulse Metering (aaa = (MR) or PPM)

---

# LD 17

- SBA_ADM_INS	0-(2)-63	Maximum Administrator and/or Installer Log Ins allowed at one time
- SBA_USER	0-(100)-500	Maximum User Log Ins allowed at one time
- BCAP	a...a	Bearer Capability (a...a = SPEE or 31KH)
- NORTEL_BRAND	YES NO	"NORTEL" Electronic Brandling is displayed.
IDLE_SET_DISPLAY	aaaa	Current customized text string "aaaa" is shown. This is for information only
- MODIFY	(NO) YES	Change Electronic Brandling Terminal Text Broadcast Configuration
- PWD2	x...x	Password 2
- MODIFY	(NO) YES	Change Electronic Brandling Terminal Text Broadcast Configuration
- MODIFY	(NO) YES	Change Electronic Brandling Terminal Text Broadcast Configuration
- PWD2	x...x	Password 2
- MODIFY	(NO) YES	Change Electronic Brandling Terminal Text Broadcast Configuration
- PWD2	x...x	Password 2
- SUPPORTED_TEXT_ONLY	(YES) NO	Change customized text string by text string input
- - IDLE_DISP_STRING	aaaa	Enter customized text string by text string input
IDLE_SET_DISPLAY	aaaa	This is information only. Displayed for confirmation with the following OK prompt
- OK	(YES) NO	Confirm customized text string
- -IDLE_DISP_CHAR	xx c/hh	Change customized text string character by character, where: xx = (01 to 24) c = one supported character hh = 2 hexadecimal digits representing a supported character
IDLE_SET_DISPLAY	aaaa	DLE_DISP_CHAR customized text string "aaaa" is shown. This is information only. Displayed for confirmation with the following OK prompt

---

- OK	(YES) NO	Confirm customized text string
IDLE_SET_DISPLAY	aaaa	Current customized text string "aaaa" is shown. This is for information only
- MODIFY	(NO) YES	Change Electronic Brandling Terminal Text Broadcast Configuration
- PWD2	x...x	Password 2
- SUPPORTED_TEXT_ONLY	(YES) NO	Change customized text string by text string input
- - IDLE_DISP_STRING	aaaa	Enter customized text string by text string input
IDLE_SET_DISPLAY	aaaa	This is information only. Displayed for confirmation with the following OK prompt
- OK	(YES) NO	Confirm customized text string
- - IDLE_DISP_CHAR	xx c/hh	Change customized text string character by character, where: xx = (01 to 24) c = one supported character hh = 2 hexadecimal digits representing a supported character
IDLE_SET_DISPLAY	aaaa	IDLE_DISP_CHAR customized text string "aaaa" is shown. This is information only. Displayed for confirmation with the following OK prompt
- OK	(YES) NO	Confirm customized text string

---

## Gate Opener: PWD (Password)

The PWD2 prompt appears immediately following the TYPE = PWD entry, unless the LAPW password Multi User Login are enabled. To view LAPW prompts, LAPW package 149 must be equipped. LAPW users can change their passwords by entering the current password at prompt LPWD and entering the new password at the NLPW prompt.

Prompt	Response	Comment
REQ:	CHG	Request
TYPE:	PWD	Change Password options
- PWD2	x...x	Password 2
- LNAME_OPTION	(NO) YES	Require Log In Name for password access
- NPW1	x...x	New Password 1 (PWD1 Log In password)
- - LOGIN_NAME	aaa	Log In Name for password access
- NPW2	x...x	New Password 2 (PWD2)
- - LOGIN_NAME	aaa	Log In Name for password access
- LOUT	1-(20)	Logout
- LAPW	0-99	Limited Access to Overlays Password number
- PWTP	aaaa	Password Access Type (aaaa = (OVLY) or SBA)
- - PWnn	x...x	Password (you may enter new password for SBA)
- LOGIN_NAME	aaa	Log In Name for password access
- LEVL	aaaa	Access Level for Set Based Administration password (aaaa = (INST) or ADMN)
- - OVLA	xx xx ... xx	Overlays Allowed
- - CUST	aaa	Customer to be accessible by way of PWnn
- - TEN	aaa	Tenant to be accessible by way of PWnn
- - HOST	(NO) YES	Enable HOST mode Log In for password PWnn
- - MAT	(NO) YES	Enable MAT Log In for password PWnn
- - - MAT_READ_ONLY	(NO) YES	Restrict MAT write access for password PWnn
- - OPT	a...a	Options for password PWnn (OPT responses can be found on page 531)

---

- LPWD	x...x	Limited Access to Overlays log on password to be changed
-- NLPW	x...x	New Limited Access to Overlay Log On Password for the user
- FLTH	0-(3)-7	Failed Log In Threshold
- LOCK	0-(60)-270	Lockout time
- FLTA	(NO) YES	Failed Log In Threshold Alarm
- AUDT	(NO) YES	Audit Trail for password usage
-- SIZE	(50)-1500	Word Size of Audit Trail buffer
- LLID	(NO) YES	Last Log In Identification
- INIT	(YES) NO	Initialize to reset locked-out ports

---

### Gate Opener: VAS (Value Added Server)

---

Prompt	Response	Comment
REQ:	CHG	Request
TYPE:	VAS	Value Added Server configuration
VAS	aaa	Value Added Server data block (aaa = NEW, CHG or OUT)
- VSID	0-15	VAS Identifier
- DLOP	ll dd ff ...	Digital Trunk Interface Loop or Loops (ll = loop number, dd = number of voice or data calls, ff = frame format)
- ELAN	x	Associate Value Added Server ID (VSID) x with Application Module Link over Ethernet (ELAN) x
- AML	0-15	Application Module Link
-- SECU	(NO) YES	Security for Meridian Link applications
-- INTL	1-12	Interval for checking Meridian Link for overload in five second increments
-- MCNT	5-100000	Threshold for number of Meridian Link messages per time interval
-- CONF	aaa	CSL Configuration (aaa = DIR or IND)
- APPL	aaa VMBA	Application (aaa = NEW, CHG, or OUT; VMBA = Voice Mailbox administration)
- -CUST	xx	Customer number

---

# LD 17

-- DATA_CORRECT	(OFF) ON	Enable Voice Mailbox Database correction
-- AUTO_AUDIT	(ON) OFF	Enable the Automatic Voice Mailbox database audit
-- SATN	l s c u	SADM/Data Line Card TN
-- IDLP	0-254	DTI loop number used for IND CSL loop
- DLOP	lll dd ff ...	Digital Trunk Interface Loop or Loops (lll= loop number, dd = number of voice or data calls, ff = frame format)
- CMS	0-15	ESDI port number used for the CSL
-- SECU	(NO) YES	Security for Meridian Link applications
-- INTL	1-12	Interval
-- MCNT	5-100000	Message Count Threshold
-- CONF	aaa	CSL Configuration (aaa = DIR or IND)
-- SATN	l s c u	SADM/Data Line Card TN
-- IDLP	0-254	IND DTI Loop

---

## ROLR / TOLR/ AOLR Offsets and Values

Offset	ROLR/ AOLR	TOLR	Offset	ROLR/ AOLR	TOLR
0	+45.00	-45.00	32	+45.00	-45.00
1	+45.85	-44.50	33	+44.15	-45.50
2	+46.70	-44.50	34	+43.30	-46.00
3	+47.55	-44.00	35	+42.45	-46.00
4	+48.40	-43.50	36	+41.60	-46.50
5	+49.25	-43.00	37	+40.75	-47.00
6	+50.10	-43.00	38	+39.90	-47.50
7	+50.95	-42.50	39	+39.05	-47.50
8	+51.80	-42.00	40	+38.20	-48.00
9	+52.65	-41.50	41	+37.35	-48.50
10	+53.50	-41.50	42	+36.50	-49.00
11	+54.35	-41.00	43	+35.65	-49.00
12	+55.20	-40.50	44	+34.80	-49.50
13	N.A.	-40.00	45	+33.95	-50.00
14	N.A.	-40.00	46	+33.10	-50.50
15	N.A.	-39.50	47	+32.25	-50.50
16	N.A.	-39.50	48	+31.40	-51.00
17	N.A.	-38.50	49	+30.55	-51.50
18	N.A.	-38.50	50	+29.70	-52.00
19	N.A.	-38.00	51	N.A.	-52.00
20	N.A.	-38.00	52	N.A.	-52.50
21	N.A.	-37.00	53	N.A.	-53.00
22	N.A.	-37.00	54	N.A.	-53.50
23	N.A.	-36.50	55	N.A.	-54.00
24	N.A.	-36.00	56	N.A.	-54.00
25	N.A.	-35.50	57	N.A.	-54.50
26	N.A.	-35.50	58	N.A.	-55.00
27	N.A.	-35.00	59	N.A.	-55.00
28	N.A.	-34.50	60	N.A.	-55.50
29	N.A.	-34.00	61	N.A.	-56.00
30	N.A.	-34.00	62	N.A.	-56.50
31	N.A.	-33.50	63	N.A.	-56.50

*Note:* ROLR values are for reset volume.

## HRLR / HTLR Offsets and Values

Offset	HRLR	HTLR	Offset	HRLR	HTLR
0	+42.00	-44.00	32	+42.00	-44.00
1	+42.85	-43.50	33	+41.15	-44.50
2	+43.70	-43.50	34	+40.30	-45.00
3	+44.55	-43.00	35	+39.45	-45.00
4	+45.40	-42.50	36	+38.60	-45.50
5	+46.25	-42.00	37	+37.75	-46.00
6	+47.10	-42.00	38	+36.90	-46.50
7	+47.95	-41.50	39	+36.05	-46.50
8	+48.80	-41.00	40	+35.20	-47.00
9	N.A.	-40.50	41	N.A.	-47.50
10	N.A.	-40.50	42	N.A.	-48.00
11	N.A.	-40.00	43	N.A.	-48.00
12	N.A.	N.A.	44	N.A.	-48.50
13	N.A.	N.A.	45	N.A.	-49.00
14	N.A.	N.A.	46	N.A.	-49.50
15	N.A.	N.A.	47	N.A.	-49.50
16	N.A.	N.A.	48	N.A.	-50.00
17	N.A.	N.A.	49	N.A.	-50.50
18	N.A.	N.A.	50	N.A.	-51.00
19	N.A.	N.A.	51	N.A.	-51.00
20	N.A.	N.A.	52	N.A.	-51.50
21	N.A.	N.A.	53	N.A.	-52.00
22	N.A.	N.A.	54	N.A.	-52.50
23	N.A.	N.A.	55	N.A.	N.A.
24	N.A.	N.A.	56	N.A.	N.A.
25	N.A.	N.A.	57	N.A.	N.A.
26	N.A.	N.A.	58	N.A.	N.A.
27	N.A.	N.A.	59	N.A.	N.A.
28	N.A.	N.A.	60	N.A.	N.A.
29	N.A.	N.A.	61	N.A.	N.A.
30	N.A.	N.A.	62	N.A.	N.A.
31	N.A.	N.A.	63	N.A.	N.A.

**Note:** All values are OLR ratings measured without inserted loss/gain for trunk card interfaces and computed per IEEE methods. Receive ratings are at a maximum volume. Transmit ratings are measured in an anechoic environment with less than 25 dBA room noise.

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
500B	16-2048	Output buffers for single line and digital telephones, and trunks Buffers for single line telephones, trunks and Digital telephones  Small System has a value of 500 allocated by the system and cannot be changed. These can be set higher but have no affect on the system operation other than consuming memory.  Refer to the <i>Memory Calculations Appendix</i> in the <i>Planning and engineering NTPs</i> .	basic-19
ABCD	(NO) YES <cr>	16-tone DTMF operation enabled Original value is left unchanged	abcd-14
ABOR	1-(5)-255	Number of aborts before an out-of-service. Enter in units of 1, the number of aborts in 15 minutes before an out-of-service is enforced.	csi-7
ADAN	NEW aaa x CHG aaa x MOV aaa x OUT aaa x	Action Device And Number Add I/O device. Where: aaa = type, x = port Change I/O device. Where: aaa = type, x = port Move I/O device. Where: aaa = type, x = port Remove I/O device. Where: aaa = type, x = port  Where, aaa and x can be any of the following: AML 0-15 = Application Module Link BDCH 0-63 = Backup primary D-channel DCH 0-79 = primary D-channel FDK 0 = Floppy Disk unit, only ADAN CHG HDK allowed (not applicable for Small System, Option 81C or Succession 1000) ELAN 16-31 = Application Module Link over Ethernet	basic-19

# LD 17

Prompt	Response	Comment	Pack/Rel
		HDK 0 = Hard Disk unit, only ADAN CHG HDK allowed (not applicable for Options 11C or 81C) HST = History file PRT 0-15 = Printer port number STA 0-15 = Single Terminal Access port number TRF = Traffic Log file TTY 0-15 = Teletype port number  <b>Note:</b> You cannot configure more than 16 TTY and HST files. If a HST file is one of 16 TTY files configured and a new TTY is defined, the HST file will be deleted since the TTY has higher priority than HST.  The MOV command is not supported for AML, BDCH, HST, PRT, or TTY.  MOV command not supported for moving MSDL D-channels and PRI D-channels due to complexity of restrictions and the risk of data corruption if restrictions not adhered to. Limited usefulness.	basic-25.4
		Changes to I/O devices are saved before ADAN is reprompted. To indicate the data has been saved, one of the following is output:  ADAN DATA SAVED ADAN DATA CHGED ADAN DATA REMOVED ADAN DATA MOVED  Entering 4 asterisks (****) after the ADAN prompt saves the changes and exits the overlay.	
		Where aaa is the primary D-channel and  x = 0-254 for multi-group systems x = 0-63 for single-group systems x = 0-79 for Small System and Succession 1000	basic-25
ADDITIONAL_PORT P1 P2 P3		Additional port number for STA terminal This is the port for the Single Terminal Access regular terminal, or the STA system monitor connection. This prompt repeats until <CR> is entered. There can be up to 3 ports for each STA application. Precede with X to delete the port.	sta-19

Prompt	Response	Comment	Pack/Rel
ADMIN_PORT	0	This is the port used to connect the Single Terminal Access Administration Port. This must be 0 (zero). Prompted if ADAN = STA	sta-19
A_FILTER	NEW CHG OUT	Add New Alarm Filter entry Change an Alarm Filter entry Remove an Alarm Filter entry  This is reprompted for subsequent Alarm Filters. Up to 50 Alarm Filters may be configured. Entering <CR> moves on to the E_FILTER prompt. Precede with X to remove.	alarm-19
AF_STATUS	(OFF) ON	This prompt enables (disables) the alarm and exception filtering. <CR> retains the current filtering status	alarm-19
AGCD	(NO) YES	Automatic Gain Control Disabled	
ALARM	(NO) YES	Change Alarm filters Must have Alarm Filtering (ALRM_FILTER) package 243.	alarm-19
ALRM	(NO) YES	Minor Alarm displayed on attendant consoles. (NO) disables the minor alarm on consoles.	alarm-12
AML	0-15	Application Module Link	msdl-18
AOLR	(0)-12 32-50	2216 ACD set Objective Loudness Rating  The default value for the AOLR prompt will be the same default value as for ROLR prompt.  See "ROLR / TOLR/ AOLR Offsets and Values" on page 493 to determine the decibel level which corresponds to your response to AOLR.	basic-22

# LD 17

Prompt	Response	Comment	Pack/Rel
APPL	NEW VMBA CHG VMBA OUT VMBA	Application Add Voice Mailbox Change Voice Mailbox Remove Voice Mailbox  This prompt allows the user to add, change, or remove an application associated with the VAS ID. The APPL prompt appears when VAS = NEW or CHG.	vmba-19
	ISAP	User application type: Meridian Link ISDN/AP	iap3p-13
APRT	(NO) YES	ACD printer APRT cannot be YES if prompt SSUP = YES.	acdc-1
APVL	I	Analog Private Virtual Loop for virtual TN or channel ID  For Large System I = 0-159	dpnss-16
	c	For Option 11C c = 1-9 11-19 21-29 31-39 41-49 For Option 11C Chassis c = 0-4, 7-14, 17-24, 27-34, 37- 44, 47-50 For Succession 1000 system c = 11-14, 17-24, 27-34, 37- 44, 47-50	lse-24
		Precede with X to remove.	basic-1

Prompt	Response	Comment	Pack/Rel
ATRN	(NO) YES	<p>Aries Transmission</p> <p>Change Transmission parameters for Meridian Modular or Aries telephones</p> <p>These transmission parameters are downloaded to Meridian Modular telephones:</p> <p style="padding-left: 40px;">after sysload (except during parallel reload) when enabling the loop, shelf or card when the telephone is plugged in.</p> <p>These values determine the loudness of the receiver and transmitter.</p> <p><b>Note:</b> Before changing these values, refer to the <i>Summary of Transmission Parameters</i> NTP and the <i>International Loss and Level Plan</i> planning and engineering NTP.</p>	arie-14
AUDT	(NO) YES	Audit Trail for password usage Prompted for PWD1 and PWD2.	lapw-16
AUTO_AUDIT		Automatic Voice Mailbox database correction	vmba-19
	(ON) OFF	When enabled, the Voice Mailbox data is audited every 5 days to ensure consistency between the Meridian Mail and Meridian 1 databases. The audit takes place during the daily routines every 5 days.	
AXQI	(20)-255	Size of Auxiliary Input Queue Maximum lesser of 25% of the maximum number of call registers defined for the system, or 255.	basic-1
AXQO	(20)-255	Size of Auxiliary Output Queue Maximum lesser of 25% of the maximum number of call registers defined for the system, or 255.	basic-1

# LD 17

Prompt	Response	Comment	Pack/Rel
BANR		Optional Security Banner option. BANR is prompted when USER = SCH and/or MTC.	basic-22
	(YES) NO	Enable security banner printing option Disable security banner printing option  If BANR = YES, the following Security Banner will be printed at the time a login is attempted, whether or not the login is successful:  <i>"Warning: The programs and data stored on this system are licensed to or are the property of NT/BNR and are lawfully available only to authorized users for approved purposes. Unauthorized access to any program or data on this system is not permitted. This system may be monitored at any time for operational reasons. Therefore, if you are not an authorized user, DO NOT ATTEMPT TO LOG IN."</i>  The programmer will not modify an existing I/O block by hitting carriage return (<cr>) in response to BANR.	
BATT	(NO) YES	Battery backup for memory installed on Option 21E and STE only	basic-18
BCAP	(SPEE) 31KH	Bearer Capability Speech 3.1 KHZ	euroisdn-22
BCHI	1-15	Backup D-channel port number. Precede with "X" to remove.	pri-12
BCHL		PRI loop number for Backup D-channel. Prompted when ADAN = BDCH.	pri-12
	l	For Large System l = 0-159	lse-24
	c	For Option 11C c = 1-9 11-19 21-29 31-39 41-49 For Option 11C Chassis c = 0-4, 7-14, 17-24, 27-34, 37- 44, 47-50 For Succession 1000 system c = 11-14, 17-24, 27-34, 37- 44, 47-50	basic-1

Prompt	Response	Comment	Pack/Rel
	0-255	PRI loop number for Backup D-channel on Systems with Fibre Network Fabric  Precede with X to remove.	fnf-25
BCST	(NO) YES	Only this broadcast port is affected by flow control All broadcast ports of the same user type are affected by flow control.  Use this prompt with caution. For example, if BSCT = YES, and a maintenance port receives an X-off command, system output to all maintenance ports will eventually be blocked.  This prompt appears only if FLOW = YES. BSCT is not prompted for TTY_TYPE = LSL.	basic-18
BITL	(5), 6, 7, 8	Bit length. Prompted for asynchronous ESDI ports.  For Small System, BITL is not prompted for CARD 0 PORT 0 or when TTY_TYPE = PTY.	cls-7
BKGD	30, 33, 34, 35, 36, 37, 38, 40, 41, 43, 44, 45, 46, 53	Background overlay task  Enter the diagnostic program number 30, 33 and so on, to run sequentially in background when the overlay area is idle.  The data dump routine LD 43 should be reserved for the DROL to preserve data integrity. Programs 33, 45, 46 and 53 are not applicable to Small System.	basic-1
BPS	1200 2400 4800 9600  19200 48000 56000 64000	Asynchronous baud rates (bits per second): 1200 Bits Per Second 2400 Bits Per Second 4800 Bits Per Second. Default for AML ports. 9600 Bits Per Second. Default for Multi Group systems CP card. 19200 Bits Per Second 48000 Bits Per Second 56000 Bits Per Second 64000 Bits Per Second. Default for ISL D-channels.	cls-7

# LD 17

Prompt	Response	Comment	Pack/Rel
		<p>If the baud rate is set differently (e.g., 4800) the system will return to the default TEMPORARILY if it is manually initialized. The entered baud rate will return when the initialization is complete.</p> <p>For Small System, BPS is not prompted for CARD 0 PORT 0 or when TTY_TYPE = PTY.</p>	
BSRV	(NO) YES	B channel Service messaging.	basic 25.4
BSRC	1- (2) - 4	B channel Service Re-transmission Counter.	basic 25.4
CAB		Cabinet number for Small System	basic-22
		For Succession 1000 where Main Cabinet is Call Server and Expansion Cabinet is Media Gateway	basic-1
	(0)	Main cabinet	
	1	Expansion cabinet 1	
	2	Expansion cabinet 2	
	3	Expansion cabinet 3	lse-24
	4	Expansion cabinet 4	lse-24
		Note the following:	
		<ol style="list-style-type: none"><li>1. LSL is only supported on the main cabinet. When TTY_TYPE = LSL, CAB is not prompted. Instead, CAB 0 is printed automatically.</li><li>2. Pseudo TTY does not belong to any cabinet. Hence, for TTY_TYPE = PTY, CAB is not prompted.</li></ol>	
CAB_TYPE	a...a	Cabinet Type.	sipe-25
		Where a...a is:	
		<ul style="list-style-type: none"><li>• IP = IP Expansion Cabinet or Media Gateway</li><li>• FIBR = Fiber Expansion Cabinet</li></ul>	
CDNO	0-15	Serial Data Interface (SDI) Card number	xpe-15
		Number the SDI cards logically with the system. Keep a paper record of the number and physical location of each SDI card. Enter 0 if you are not using CDNO to keep track of SDI ports and cards.	
	1-50	DCHI Small System Card number	
	1-9 11-19 21-29 31-39 41-49	MSDL application Small System Card number	lse-24

Prompt	Response	Comment	Pack/Rel
	0-10	SDI, LSL or PTY Small System Card number Expansion cabinets only support one TTY port which is on the Fiber Receiver Card. When CAB = 1 or 2, CDNO is not prompted. Pseudo TTY does not belong to any card. When TTY_TYPE = PTY, CDNO is not prompted.	basic-20
	0-50	SDI, LSL or PTY Small System Card number	lse-24
	1-50	AML application Small System Card number	lse-24
CEQU	(NO) YES	Change to Common Equipment parameters	basic-1
CFWS	(NO) YES	Call Forward Saved on SYSLOAD and reactivate on completion. To save information, set CFWS = YES.	basic-20
CLID	(NO) YES	Calling Line ID in the CDR  If CLID = NO, "XXXXXXXXXXXX" will be printed in CLID field of CDR record. Prompted when CDR = YES and the Integrated Services Digital Network (ISDN) package 145 is equipped.	pri-12
	OPT0	Prefix = 0 for North American dialing plan. OPT0 is the default for ESIG and ISIG interfaces.	euroisdn-22
	OPT1	Prefix = 1 for international PFXs in CLID. Any numbering type is supported. OPT1 is the default for all EuroISDN interfaces.	
	OPT2	Prefix = 2, for international PFXs in CLID. CCITT numbering types supported are: UKWN, INTL, NPA, and NXX. OP2 is the default for CO/DID routes for the Telecom New Zealand interface.	
	OPT3	Prefix = 3 for international PFXs in CLID. Only the NXX number type is supported. OPT3 is the default for TIE routes for the Telecom New Zealand interface.	
	OPT4	For international COs, if the call originates from a CO trunk type, add nothing. Otherwise, add PFX1 and PFX2. OPT4 is the default for all Asia Pacific interfaces.	

# LD 17

Prompt	Response	Comment	Pack/Rel
	OPT5	This is the same as OPT4, except it supports a maximum of 10 digits in the CLID. OPT5 is the default for the Austrian interface.	
CLOK		Source of primary clock is either internal or external. Prompted for ISL D-channels and ESDI synchronous ports. Other D-channels are automatically set to EXT.	pri-12
	EXT	External Clocking. When USR = ISLD, CLOK should be set to External. Default for ISL D-channels is EXT.	
	INT	Internal Clocking. INT is used only during D-channel loopback tests, where one side is set to INT, the other is set to EXT. Default for ESDI AML ports is INT.	
CMS	0-15	ESDI port number used for the CSL  Synchronous ESDI port number used for the CSL. This must be the same value as the port number defined at the ADAN prompt. Precede with X to remove. Prompted when SYNC and USER = CMS.	cls-7
CNEG	(1)  2	Channel Negotiation option Channel is indicated and no alternative acceptable, exclusive. Default value for all EuroISDN interfaces except FRA interface.  Channel is indicated and any alternative acceptable, preferred. Default value for all EuroISDN interfaces except FRA interface. CNEG is prompted when IFC = APAC, AXEA, AXES, D70, NUME, SS12, ESIG, ISEG or TCNZ.	ipra-15
CNI	s p g	Core to Network Interface card location. To OUT a CNI card, it must be hardware disabled and located in the inactive CPU.  For systems with Fibre Network Fabric: s = slot 9-12; p = port 0-1; g = group 0-7  Both ports (0 and 1) can be used to configure network switching groups for card slot 9. No CNI cables are required for port 0 of card slot 9.	basic-21

Prompt	Response	Comment	Pack/Rel
CNTY		Country	supp-10
	(ETSI)	ETS 300 =102 basic protocol	
	AUS	Austria	
	AUST	Australia	
	CHNA	China	basic-23
	CIS	Commonwealth of Independent States	euro- 23
	DEN	Denmark	
	DUT	Holland	
	EAUS	Australia	euro-24
	EIR	Ireland	
	ESP	Spain	
	FIN	Finland	
	FRA	France	euro- 23
	GER	Germany	
	HKNG	Hong Kong	
	INDI	India	isdn-24
	INDO	Indonesia	basic-23
	ITA	Italy	
	JAPN	Japan UIPE based interface	basic-23
	MSIA	Malaysia	basic-23
	NET	ETSI network side protocol	
	NOR	Norway	
	PHLP	Philippines	isdn-24
	POR	Portugal	
	SING	Singapore	
	SWE	Sweden	
	TAIW	Taiwan	isdn-24
	TCNZ	New Zealand, defined as APISDN	
	THAI	Thailand	
CODE	x xx xx xx	Code, prompted when DTD = TDS.	basic-14
		A valid Hex Code for access to a flexible TDS table for a test tone, used to check a Dial Tone Detector or DTD.	
		This code only applies when the tone generator is a TDS. If an XCT is used to generate the test tone the value in CODE will be ignored and the XCT will generate the dialtone specified in the FCT Table number 0 in LD 56.	
		CODEC Coding Law	basic-14
	(0)	Mu or $\mu$ -Law for North America. This parameter is only used by the Meridian digital sets as part of the transmission parameters.	
	1	A Law, inverted for Sweden only	

# LD 17

Prompt	Response	Comment	Pack/Rel
	2	A Law, even-bit interleaved	
CONF	DIR IND 0-158	Direct link CSL Configuration Indirect link CSL Configuration Conference loop Use even-numbered loops for Conference. You may configure more than 16 Conference loops; however, enabling more than 16 Conference loops may cause the system to lock-up. Precede with X to remove.	basic-1
	0-255 29-31	Conference loop, systems with Fibre Network Fabric Small System, 31 is for Expansion Module	fnf-25
	D0-D158 S0-S158	Dealer Conference loop Spare dealer Conference loop Should be in the same group as the units planned to use this loop.	ohol-20 ohol-20
	29 30	Small System base conference capability For Succession 1000 IP daughterboards	basic-1
	31	Small System Provided on the first single port expansion daughterboard or Succession 1000 IP daughterboard	
	62	Small System Provided on the second single port expansion daughterboard or Succession 1000 IP daughterboard	
	31 94	Small System Line Size Expansion Provided on the first dual port fiber expansion daughterboard or Succession 1000 IP daughterboard	lse-24
	62 95	Provided on the second dual port fiber expansion daughterboard or Succession 1000 IP daughterboard	
CO_TYPE	(STD) ATT	Central Office switch type. Prompted if IFC = NI2. 100% compatible with Bellcore standard AT&T 5ESS	ni2-21
CRC	1-(10)-20	CRC threshold. Enter in units of 5 per cent.  CRC establishes the % of Cyclic Redundancy Code (CRC) errors detected in 15 minutes before an out-of- service threshold is enforced.  CRC = (# of packets retransmitted) ÷ (total # packets sent).	cls-7

Prompt	Response	Comment	Pack/Rel
CSQI	(20) - x	<p>Maximum number of call registers for CSL input queues. Where:</p> <p>x = 25% of NCR</p> <p>If AST is enabled, set CSQI equal to the larger value of the following:</p> <ol style="list-style-type: none"> <li>1. Number of ACD agents or AST sets to be controlled by the host computer, or</li> <li>2. 50.</li> </ol> <p><b>Note:</b> These call registers are used for Command and Status Link applications such as Meridian Link.</p>	cls-7
CSQO	(20) - x	<p>Maximum number of call registers for CSL/AML output queues. Where:</p> <p>x = 25% of NCR</p> <p>If AST is enabled, set CSQO equal to the larger value of the following:</p> <ol style="list-style-type: none"> <li>1. Number of ACD agents or AST sets to be controlled by the host computer , or</li> <li>2. 50.</li> </ol> <p><b>Note:</b> These call registers are used for Command and Status Link applications such as Meridian Link.</p>	cls-7
CTYP		Card Type (Input/output port card type)	msdl-18
	CPSI	Call Processor card (Option 81C)	
	DCHI	D-channel Interface card	
	ESDI	Enhanced Serial Data Interface	
	ELAN	AML over Ethernet card	
	MSDL	Multi-purpose Serial Data Link (for Downloadable D-channel on Small System)	
	MSPS	Misc./SDI/Peripheral Signaling card	
	PTY	Pseudo TTY (Option 81C)	
	SDI	Single port SDI card	
	SDI2	Dual-port SDI card	
	SDI4	Four-Port SDI card	
	SPDC	Single Port DCH card	
	SDI4	Four port SDI card	
	TMDI	D-channel configuration on TMDI (NTRB21) card	basic-24

# LD 17

Prompt	Response	Comment	Pack/Rel
	XSDI	SDI paddle board <b>Note:</b> CTYP may printout as being set as QSDI from previous software, but CTYP must be set to SDI4 when configuring data.	
CUST	xx	Customer number associated with this function (as defined in LD15)	lapw-16
	xxx	Customer to be accessible by way of PWnn. Enter the customer (0-99) and the associated Tenant numbers (entered at the TEN prompt) to have access with PWnn to overlays specified at prompt OVLA.	
	ALL	All customers and associated tenants have access with this password.	
	<cr>	No change to previous definitions. Precede with X to remove.	
CY45	(0)-31	Cycles LD 45 can be run whenever a fault is detected If any number from 1 to 31 is entered, that is the number of times LD 45 will run under fault conditions. If 0 is entered the system will perform as before without limiting the number of LD 45 runs.	supp-16
DATA_CORRECT	(OFF) ON	Voice Mailbox Database Correction In enabled state, the Meridian Mail database is updated to match the Meridian 1 database when the database audit discovers a discrepancy.	vmba-19
DCHI	0-15	D-channel Interface port number When adding a D-channel the MEM AVAIL data is output after this prompt indicating the channel has been added. You can therefore abort the program and save the changes without going to the REQ prompt. Precede with X to remove.	pri-12

Prompt	Response	Comment	Pack/Rel
DCHL	0-159	PRI loop number	pri-12
	0-159 1-126	PRI loop number and interface identifier for the DCH when IFC = D70 or CNTY = JAPN.	
	0- 159 (0)-3	PRI loop number and interface identifier for the DCH when IFC = TCNZ or CNTY = MSIA.	
	0-159 2-15	PRI loop number and interface identifier for all other interfaces	
	0 - 255	PRI loop number, systems with Fibre Network Fabric	fnf-25
	xx yyy	<p>PRI card number.</p> <p>For Small System. Where:</p> <p>xx = 1-9 11-19 21-29 31-39 41-49</p> <p>For Succession 1000. Where:</p> <p>xx = 11-14, 21-24, 31-34, 41-44</p> <p>For Small System and Succession 1000. Where:</p> <p>yyy = (0)-3, Small System PRI card number (D channel loop) and interface identifier for the DCH when IFC = TCNZ or CNTY = MSIA.</p> <p>yyy = 1-126, Small System PRI loop number and interface identifier for the DCH when IFC = D70 or CNTY = JAPN.</p> <p>yyy = 2-15, Small System PRI loop number and interface identifier for all other interfaces.</p> <p>One DCH can support up to 16 PRIs, except for D70 and JAPN (9 PRIs) and TCNZ and MSIA (4 PRIs).</p> <p>Precede with X to remove.</p>	basic-1
DCUS	0-5	Maximum number of ACD-ADS customers	acdd-1
DDCS	0-159 xx	<p>Loop number for NT DPNSS/DASS hardware</p> <p>For Small System DPNSS PRI card number.</p> <p>Where xx is:</p> <ul style="list-style-type: none"> <li>1-9 11-19 21-29 31-39 41-49</li> </ul>	dpnss-16 lse-25

# LD 17

Prompt	Response	Comment	Pack/Rel
		For Succession 1000 DPNSS PRI card number Where xx is: <ul style="list-style-type: none"><li>• 11-14, 21-24, 31-34, 41-44</li></ul> Precede with X to remove.	basic-1
DENS	SDEN DDEN 4DEN	Single ports on SDI card Double ports on SDI card Quad ports on SDI card	basic-15
DES	d...d	Designator (AML port designation)  DES is used to identify the link and can be up to 16 alphanumeric characters: 0-9, and upper case (A-Z). Characters * and # are not allowed.  Spaces are removed by the system. For example "MERIDIAN MAIL" becomes "MERIDIANMAIL". Use the underscore character instead, such as MERIDIAN_MAIL  DES can be left blank or changed as required. If DES is already defined for a link, the system outputs the current name and reprompts DES.  Precede the existing DES with X to remove. Example: "XMERIDIAN_MAIL".	msdl-18
DIDD	(0)-15	DID Delete Number of leading digits to delete when receiving digits from DID trunk.	isdn-16
DLOP	ll dd ff	Digital Trunk Interface Loop or Loops. Where: <ul style="list-style-type: none"><li>ll = 0-159</li><li>ll = 1-9 11-19 21-29 31-39 41-49 Small System</li><li>ll = 0-255 systems with Fibre Network Fabric</li><li>ll = 11-14, 21-24, 31-34, 41-44 for Succession 1000</li><li>dd = maximum number of simultaneous voice or data calls 0-(24)</li><li>ff = frame format D2, D3, D4, or ESF</li></ul> The default for frame format ff is ESF if prompt MODE is set to PRI; D3 if MODE is set to DTI or LINK. Loop must be removed before a change to ff can be made.	dti-5 lse-25 fnf-25 basic-1

Prompt	Response	Comment	Pack/Rel
	L1 L2 Ln	Digital Trunk Interface Loop or Loops Loop numbers of the DTI Loops associated with this VAS. Loops must have previously been defined as MODE = LINK. Precede with X to remove.	
DNUM	0-15	Device number for I/O ports. All ports on the MSDL card share the same DNUM. The MSDL card address settings must match the DNUM value. For all other ports such as SDI, DCHI, etc., the device number should match the port address switch settings. To configure a D-channel on an even number port the card type must be SPDC or MSDL.	msdl-18
DPNS	(NO) YES	Digital Private Network Signaling	dpnss-16
DRAT	(56K) 64KC 64KI	D-channel transmission Rate 56 kb/s when LCMT is AMI 64 kb/s clear. Allowed if LCMT = B8S for SL-1 to SL-1 only. Default for PRI2. 64 kb/s inverted HDLC, 64 kb/s restricted DRAT must match the far end. DRAT is not prompted when configuring the ISLD-channel because speed is controlled by the modem baud rate.	pri-12
DROL	30, 32, 33, 34, 35, 36, 37, 38, 40, 41, 43, 44, 45, 46, 51, 53, 60, 61	Daily Routine Overlays. Daily or midnight routine programs are run once a day at the time specified by prompt TODR. Programs 33, 45, 46 and 53 are not applicable to Small System.	basic-1
DTCS	1-159	Digital Trunk Channel Switches (Loop numbers for GPT hardware) Precede with X to remove. Not required for NT5K75AA. Prompted with Integrated Digital Access (IDA) package 122. DTCS does not apply to Small System.	supp-16

# LD 17

Prompt	Response	Comment	Pack/Rel
DTDT	NO TDS EXT	Dial Tone Detector Test No DTD tests are required The DTD is to be tested against a tone from the TDS The DTD is to be tested against an external source	dtd-10
DTI2	0-159 N0-N159	2.0 Mb/s Digital Trunk Interface loop number 2.0 Mb/s Digital Trunk Interface phantom loop number. Precede loop number with an "N" to configure this loop as a phantom loop for trunks.	ipra-14
	0-255	DTI2 loop number, systems with Fibre Network Fabric	fnf-25
	1-9 11-19 21-29 31-39 41-49	Small System format for DTI2 loop number Small System format for DTI2 phantom loop number. Precede loop number with an "N" to configure this loop as a phantom loop for trunks. On an Option 11C, a Phantom loop can be included between 1-9.	lse-24
	11-14, 21-24, 31-34, 41-44	For Succession 1000 Precede any DTI2 entry with X to remove.	basic-1
DTIB	(35)-1000	Digital Trunk Input Buffers Required for IDA trunks. Prompted with Integrated Digital Access (IDA) package 122. Used with NT5K75AA DCHI operating in mode 0 or 1.	dass2-1 6
DTIC	0, 4, 8,...156 0, 4, 8,... 254	Starting network loop slot for PRI/DTI card systems with Fibre Network Fabric On non-Network loops, enter return <cr> and ignore the SCH2035 message. Do not input loop numbers that take the system out of its bounds. Number must be even for all systems. Not prompted for Small System.	di-5 fnf-25
DTOB	(4)-100	Digital Trunk Output Buffers per Digital Trunk Signaling Link Required for IDA trunks. Prompted with Integrated Digital Access (IDA) package 122. Used with NT5K75AA DCHI operating in mode 0 or 1.	dass2-16

Prompt	Response	Comment	Pack/Rel
DTRB	(100) 50 60 70	Digitone Burst time in ms 100 ms bursts of DTMF with 100 ms interdigit pause 50 ms bursts of DTMF with 50 ms interdigit pause 60 ms bursts of DTMF with 90 ms interdigit pause 70 ms bursts of DTMF with 70 ms interdigit pause  This determines the DTMF burst and interdigit pause for the Tone and Digit Switch or TDS.  Burst time of 50 ms is used for the Fast TDS; 100 ms is used for the standard TDS. Burst time of 60 ms and 70 ms is used for international requirements.	
DUPX	(FULL)  HALF	Full Duplex mode Enter FULL if each end can simultaneously send and receive.  Half Duplex mode	csl-7
DUR5	(NO)  YES	CDR call duration with 0.5 second accuracy. DUR5 does not apply to CDR data link. CDR call record output on TTY with 2.0 second duration accuracy. CDR call record output on TTY with 0.5 second duration accuracy for Japan.  0.5 second duration accuracy is available for outgoing trunks with answer supervision outside Japan.	cdr-8
ELAN	x	Application Module Link (AML) over Ethernet  Associate Value Added Server ID (VSID) x with AML over Ethernet (ELAN) x.  The configured VSID of the ELAN will be used to distinguish the connection between the Meridian 1 and each application in a multiple application Ethernet environment. If the Nortel Symposium Call Center (NGCC) package 311 is not equipped, a maximum of 16 ELANs can be configured and supported in the range of 16 to 31.	nxcc-22
ENL	(YES) NO	ENL error message for Small System DIS error message for Small System	ains-16

# LD 17

Prompt	Response	Comment	Pack/Rel
ERRM	ERR BUG AUD	Error Messages (prompted when USER = MTC) Error monitor-hardware Error monitor-software Software Audit The messages, if enabled here, are output on the maintenance port. Precede with X to remove.	basic-1
ESCALATE	0-(2)-127	Alarm occurrence threshold (prior to escalating)  This determines the number of times a major alarm may occur before it becomes critical. Entering 0 disables the alarm escalation. This applies to major alarms only.	alarm-19
ESDI	YES NO	Enhanced Serial Data Interface  Default is as previous if ADAN = CHG. The default is NO if ADAN = NEW and no ports on the card are configured, or if the other port is configured and is not ESDI. The default is YES if the other port is configured and is ESDI.	
EXT0	x aaa bbb	Extenders for CPU 0  Not prompted for Small System. Identifies the types of extenders that connect the Central Processing Unit or CPU to the various Network shelves. Where:  x = Group number aaa = extender type located on the CPU shelf bbb = extender type located on the Network shelf	basic-19

Prompt	Response	Comment	Pack/Rel
		<p>Valid inputs :</p> <p><b>x</b> = 0-4</p> <p><b>aaa</b> = NIL for ACB cables or passive Bus Extender on CPU shelf 0.</p> <p><b>aaa</b> = SBE for Segmented Bus Extender on CPU shelf 0 cabled to Network shelf 3PE or Network shelf backplane connectors ACB.</p> <p><b>bbb</b> = NIL if Network shelf not equipped.</p> <p><b>bbb</b> = 3PE for 3 Port Extender on a Network shelf cabled to a SBE on CPU shelf 0, or cabled to CPU shelf 0 backplane connectors ACB.</p> <p><b>Note: bbb</b> must be 3PE for core side 0 for Network Capacity Expansion</p>	fnf-25
EXT1	x aaa bbb	<p>Identifiers for CPU 1</p> <p>Identifies the types of extenders that connect the Central Processing Unit or CPU to the various network shelves. Where:</p> <p><b>x</b> = Group number</p> <p><b>aaa</b> = extender type located on the CPU shelf</p> <p><b>bbb</b> = extender type located on the Network shelf</p> <p>Valid inputs:</p> <p><b>x</b> = 0-4</p> <p><b>aaa</b> = NIL for ACB cables or passive Bus Extender on CPU shelf 1</p> <p><b>aaa</b> = SBE for Segmented Bus Extender on CPU shelf 1 cabled to Network shelf 3PE or Network shelf backplane connectors ACB.</p> <p><b>bbb</b> = NIL if Network shelf not equipped.</p> <p><b>bbb</b> = 3PE for 3 Port Extender on a Network shelf cabled to a SBE on CPU shelf 1, or cabled to CPU shelf 1 backplane connectors ACB.</p> <p>EXT1 is not prompted for SmallSystems.</p> <p><b>Note: bbb</b> must be 3PE for core side 1 for Network Capacity Expansion</p>	basic-19
			fnf-25

# LD 17

Prompt	Response	Comment	Pack/Rel
E_FILTER	NEW CHG OUT	Add an Exception Filter entry. Change an Exception Filter entry. Remove an Exception Filter entry.  This is reprompted for subsequent exception filters. Up to 50 Exception Filters can be configured. Entering <CR> completes exception filter entries. Precede with X to remove.	alarm-19
FCDR	(OLD)  NEW	Format for Call Detail Recording OLD format Information field location varies according to which features are equipped. NEW CDR format. Information field locations are fixed. Prompted when New Format CDR (FCDR) package 234 is equipped.	fcdr-20
FLOW	(NO) YES	Flow control capability This prompt appears for Options: 51C, 61C, and 81C.  For Small System, FLOW is not prompted when TTY_TYPE = LSL.	csi-7
FLOW_TYPE	NONE XON MAIL HWR	Flow control type for Small System. FLOW_TYPE is prompted when TTY_TYPE = LSL. No flow control XON/XOFF flow control Mail style flow control protocol Hardware flow control protocol  FLOW_TYPE must be MAIL for the LSL used for Meridian Mail administration / maintenance access. When TTY_TYPE = LSL and CARD = 0, only NONE and XON are valid responses.	basic-22
FLTA	(NO) YES	Failed Log In Threshold Alarm  Activate minor alarm in the event of FLTH being reached. Prompted with International Supplementary Features (SUPP) package 131.	supp-18
FLTH	0-(3)-7	Failed Log In Threshold Prompted for PWD2 users.	lapw-16

Prompt	Response	Comment	Pack/Rel
FMT_OUTPUT	(OFF)	Alarm Filters Formatted printing This prompt disables formatting for the alarm/ exception output.	alarm-19
	ON	This prompt enables formatting for the alarm/ exception output.	
	<CR>	Retains the current formatting status.	
FRPT	(NEFR) OLFR	Access to incoming calls by FRE station denied Access to incoming calls by FRE station allowed If FRPT = OLFR, then a FRE station can do Ringing Number Pickup, Night Answer and receive modified calls.	basic-1
FTYP	(3) 3S 5	3.5 inch high density floppy type 3.5 inch super density floppy type 5.25 inch floppy type  Prompted if ADAN = FDK or HDK. Not prompted for Small System.	basic-20
FUNC	ABD FCL MOD LME SCN	MSDL card Function. This prompt is used when applying the MSDL card to the SDI application.  Autobaud Flow Control (XON/XOFF handling) Modem support Line Mode Editing Character Screening  Precede with X to delete.	msdl-19
GRP	0-4	Network Group number (Option 81C)  Group numbers cannot be changed until the I/O devices associated with that group are disabled.  The option 61C supports 1 network group (0). Option 81C supports up to 8 network groups (0-7).  For Option 81C:  Port 0 of the CNI card in slot 8 in the NT6D60 Core Module must be configured as "group 5." This configuration is not equivalent to a network switching group (groups 0-4). "Group 5" extends the inter- processor section to the interface bus, within the Core Module, through the CNI card in slot 8 and the 3PE card in slot 7.	81-19

# LD 17

Prompt	Response	Comment	Pack/Rel
	0-7	systems with Fibre Network Fabric	fnf-25
HOST	(NO) YES	<p>Enable HOST mode Log In for password PWnn.</p> <p>When a HOST user logs in, the outputs defined for the port are only output to that port. For example, two ports are defined by prompt USER to output BUG and SCH messages. When a HOST user logs in to one of these ports, the other port does not output BUG and SCH messages until the HOST user logs out.</p> <p>This removes the restriction that ports with the same output must operate at the speed of the slowest port. This feature is primarily used by applications such as Meridian Manager.</p>	lapw-17
HPIB	16-1000 96-7500	<p>High-Priority Input Buffers</p> <p>High-Priority Input Buffers for System Options 51C, 61C, and 81C.</p> <p>Recommended for attendant consoles and DID/TIE trunks. High priority line or trunk cards are placed in slot 1 and assigned have CLS = HPR in LD 10, 11, 12 or 14. Superloops do not require any line or trunk cards assigned as high priority.</p> <p>Refer to Appendix 553-2201-151.</p>	basic-19
HRLR	(0)-8, 32-40	<p>Handsfree Receive objective Loudness Rating</p> <p>The HRLR value is downloaded to Meridian Modular telephones after sysload, except when performing a parallel reload. Refer to the Transmission parameter and International loss and level plan NTP's before adjusting this value.</p> <p>The default is 0. The number entered in this field corresponds to an offset value. The offsets and their corresponding values are provided on page 494.</p>	hfdl-20

Prompt	Response	Comment	Pack/Rel
HTLR	(0)-11, 32-54	<p>Handsfree Transmit Objective Loudness Rating</p> <p>The HTLR value is downloaded to Meridian Modular telephones after sysload, except when performing a parallel reload. Refer to the Transmission parameter and International loss and level plan NTP's before adjusting this value.</p> <p>The default is 0. The number entered in this field corresponds to an offset value. The offsets and their corresponding values are provided on page 494.</p>	hfdl-20
IADR	0-(3)-255	<p>Individual Address for the data-link level HDLC protocol.</p> <p>The IADR and RADR prompts must be coordinated with the far end. If IADR is defined as 3, then RADR must be 1.</p>	cls-7
ICON	(NO) YES	<p>M3900 Full Icon Support</p> <p>Where: (NO) = feature disabled YES = feature enabled</p>	ICON-PACKAGE 3.0
IDLE_DISP_CHAR	xx c/hh	<p>Change customized text string character by character, where xx (01 to 24) is the position of the character in the customized text string. Prompted if the Electronic Brandlining ISM parameter is set to Terminal Text Broadcast (EBLN ISM value of 2).</p> <p>The IDLE_DISP_CHAR prompt is only prompted if SUPPORTED_TEXT_ONLY = NO and is re-prompted until a &lt;CR&gt; is entered or xx = 24th character has been entered, thus allowing additional characters to be entered. Where:</p> <p>c = one supported character. hh = 2 hexadecimal digits (0-9, A-F, a-f) representing a supported character.</p>	basic-23

# LD 17

Prompt	Response	Comment	Pack/Rel
IDLE_DISP_STRING	aaaa	Enter customized text string by text string input. A maximum of 24 characters are accepted and validated. Enter <CR> for a blank Electronic Brandlining display. Prompted if the Electronic Brandlining ISM parameter is set to Terminal Text Broadcast (EBLN ISM value of 2).	basic-23
IDLE_SET_DISPLAY	aaaa	<p>IDLE_DISP_STRING entered customized text string "aaaa" is shown. This is information only. This information is shown under three scenarios:</p> <ol style="list-style-type: none"><li>1. to show the current EBLN Terminal Text Broadcast customized text string before the MODIFY prompt to let the user decide if a change is required.</li><li>2. To show the customized text string entered in response to the IDLE_DISP_STRING prompt for confirmation with the following OK prompt.</li><li>3. To show the customized text string entered in response to the IDLE_DISP_CHAR prompt (s) for confirmation with the following OK prompt.</li></ol> <p>Prompted if the Electronic Brandlining ISM parameter is set to Terminal Text Broadcast (EBLN ISM value of 2).</p>	basic-23
IDL P	0-158	IND DTI Loop DTI loop number used for IND CSL loop. See DLOP prompt.	csi-7
	xx	Defines DTI card number used for IND CSL, Small System	
	0-255	DTI loop number used for IND CSL loop, systems with Fibre Network Fabric	fnf-25
IFC		Interface type for D-channel. Note that when USR = ISLD or SHA, the interface is automatically entered as SL1.	pri-17
	(D100)	Meridian DMS-100	
	1TR6	1 TR 6 for Germany	
	APAC	Asia-Pacific ISDN interface for Australian BRI UIPE PRI, China, Hong Kong, Indonesia, Japan BRI UIPE PRI, Malaysia, Singapore & Thailand	
	AXEA	Ericsson AXE-10 for Australia	

Prompt	Response	Comment	Pack/Rel
	AXES D250 D70	Ericsson AXE-10 for Sweden Interface to Meridian DMS-250 Interface to Japan D70	
	EGF4	Q Reference Signalling Point interface	qsig gf-24
	E403 ESGF	EuroISDN interface for ETS 300 403 ESIG interface with GF platform (allowed if QSIG and QSIGGF packages are both equipped)	euro-24
	ESIG	ETSI Q reference signalling point (QSIG) Interface ID. Allowed only if the new D-channel is configured on the MSDL card.	
	ESS4 ESS5 EURO	Interface to AT&T ESS#4 AT&T ESS#5 EuroISDN interface  If IFC = EURO, the MOV command (REQ = MOV) may only be used to move an MSDL card to another MSDL card. For example, when IFC = EURO, an MSDL card cannot be moved to a DCHI card.	
	ISGF	ISIG interface with GF platform (allowed if QSIG and QSIGGF packages are both equipped)	
	ISIG	ISO Q reference signalling point (QSIG) Interface ID. Allowed only if the new D channel is configured on the MSDL card.	
	JTTC	Interface ID for JAPAN TTC; This input is only valid if the new D-channel is configured on the MSDL card	jttc- 23
	NI2 NUME S100 SL1 SS12 SWIS TCNZ	NI-2 TR-1268 interface type Numeris for France Meridian SL-100 Meridian SL-1 SYS-12 for Norway SwissNet Telecom New Zealand (NEAX-61)	

# LD 17

Prompt	Response	Comment	Pack/Rel
INC_T306	0-(2)-240	Variable timer for received disconnect message on incoming calls, allowing in-band tone to be heard when sent by the network (entered in 2 second increments).  The network will stop sending tone after this timer expires. Default values for this timer include:  30 for China, Indonesia, Japan, Malaysia, Hong Kong, Singapore, New Zealand, and Thailand.  60 seconds for Australia PRI.	ddsp-20
INIT	(YES) NO	Manual initialization to reset ports which were locked-out due to failed LOGI attempts.	lapw-16
INTL	1-12	CAUTION: While established calls in progress are unaffected, calls in the signaling state will be aborted. Interval Time interval for checking Meridian Link for overload in five second increments This is the interval for counting the number of messages on a Meridian Link. See prompt MCNT.	iap3p-12
ISDN_MCNT	60-(300)-350	Layer 3 call control message count per 5 second time interval.	qsig-22
ISLM	1-382	Integrated Services Signaling Link Maximum. Maximum number of ISL trunks controlled by the D-channel. There is no default value.	isl-12
JDMI	0-159 0-255	Japan Digital Multiplexer Interface loop number JDMI loop number, systems with Fibre Network Fabric Precede with X to remove. Not for Small System.	jdtn-14 fnf-25
K	1-(7)-32	Maximum number of outstanding frames This value should be the same for the Meridian 1 (near-end) and the host processor (far-end). Where:  7 = recommended value for AUX applications 2 = recommended value for CCITT	cls-7
LANGUAGE	ENGLISH	Language supported on STA	sta-19

Prompt	Response	Comment	Pack/Rel
LAPD	(NO) YES	Link Access Protocol for D-channel Change LAPD parameters.	pri-12
LAPW	0-99 <cr>	Enter Limited Access to Overlays Password number to be created, modified or deleted. No more password changes Precede with X to remove.  LAPW is reprompted after the OPT prompt, thus allowing multiple Limited Access to Overlays Password users to be created.  If the overlay is exited after the OPT prompt the LAPW information is saved. If the overlay is exited before the OPT prompt, the information is not saved.	lapw-16
LCMT	(B8S) AMI	B8ZS Line Coding Method Alternate Mark Inversion, B7 Line Coding Method The default is B8ZS when the frame format is ESF. When the frame format is D2, D3, or D4, the default is AMI.	pri-19
LCTL	(NO) YES	Change Link Control system parameters	cls-7
LEVL	(INST) ADMN	Access Level for Set Based Administration password Installer. Access Level for Set Based Administration password Administrator.	adminset-21
LLID	(NO) YES	Last Log In Identification Identification display of last Log In and failed Log In attempts message allowed. Prompted with International Supplementary Features (SUPP) package 131.	supp-18

# LD 17

Prompt	Response	Comment	Pack/Rel
LNAME_OPTION	(NO) YES	<p>Require Log In name for password access</p> <p>If the option is changed to YES, each password currently in the system is given a default name which is used until new names are assigned.</p> <p>The default names applied to the passwords are:</p> <ul style="list-style-type: none"><li>ADMIN1 is applied to the current PWD1</li><li>ADMIN2 is applied to the current PWD2</li><li>USER0 is applied to the current Password 00</li><li>USER1 is applied to the current Password 01</li></ul> <p>(and so on to USER 99)</p> <p>The following message is output before reprompting REQ: DEFAULT LOGIN NAMES SAVED.</p> <p>To login to the system with the LNAME_OPTION enabled, use: LOGIN ADMIN2 &lt;cr&gt; PASS (prompted by the system) Enter the current second level administration password.</p> <p>If the option is changed from YES to NO, random passwords are assigned by the system to ensure no password duplication. The default password for PWD2 is output to the terminal when this option is disabled. The following message is output:</p> <p>WARNING: PASSWORDS WILL BE CHANGED TO DEFAULT VALUES.</p> <p>OK? (Y/N)</p> <p>If Y is entered, the following appears:</p> <p>DEFAULT PASSWORDS SAVED</p> <p>PWD2 = &lt;pwd2 password&gt;</p> <p>Note that entering YES forces the user to define passwords. If NO is entered, Log In name may still be entered, but is not required.</p>	lapw-19

Prompt	Response	Comment	Pack/Rel
		<p>To find the other default passwords assigned by the system, Load Overlay 22 and print PWD.</p> <p>With Multi-user Log In enabled, it is possible for more than one user to be logged in with the same name/ password combination. However, no two Log In names can have the same password associated with them.</p>	
LOCK	0 -(60)-270	<p>Lockout time, prompted for PWD1 and PWD2 users.</p> <p>The time, in minutes, that a port is locked out once the Failed Log In Threshold or FLTH has been exceeded.</p> <p>Messages of the lockout are displayed on maintenance terminals and supervisory stations.</p>	lapw-16
LOGIN_NAME	aaa . . . . aaaa	<p>Log In name for password access</p> <p>When LNAME_OPTION is YES, the names must be associated with each Log In password. This can be up to 11 alphanumeric characters (0-9, A-Z, a-z).</p>	lapw-19
LOUT	1-(20)	<p>Logout</p> <p>The number of minutes after which the system will logout if no information has been exchanged. Prompted with International Supplementary Features (SUPP) package 131.</p>	supp-18
LPIB	96-7000 96-1000	<p>Low-Priority Input Buffers for Large systems.</p> <p>Low-Priority Input Buffers for Small systems.</p> <p>Most stations and trunks are defined as low priority. See prompt HPIB. Refer to the <i>Memory Calculations Appendix</i> in the <i>Planning and Engineering NTPs</i>.</p>	basic-19
LPWD	aaaa <cr>	<p>Enter current LAPW password to change user password.</p> <p>Leave Log In password unchanged</p> <p>This prompt appears only for LAPW users logged in with a LAPW password. This prompt is used by Limited Access to Overlay users to change their password.</p>	lapw-16

# LD 17

Prompt	Response	Comment	Pack/Rel
LTHR	(NO) YES	Link Threshold Change link performance thresholds for ESDI only.	cls-7
MANU	(PMS1) PMS2 PMS3	Standard PMS interface Requires <cr> HOD to recognize input message Updated RMS message is followed by the old RMS when a room DN checks IN or OUT.	pmsi-19
MARP	(YES) NO	Multiple Appearance Redirection Prime feature allowed.	marp-18
MAT	(NO) YES	Enable MAT 5.0 Log In for password PWnn Mat 5.0 users can remote log in from a PC to perform Alarm Management and Maintenance operations through a graphical interface. PWD1 and PWD2 users always have MAT 5.0 access.	mat-22
MAT_READ_ONLY	(NO) YES	Do not restrict MAT 5.0 write access for password PWnn Restrict MAT 5.0 write access for password PWnn Read only provides MAT 5.0 users access to Alarm Management and Equipment View windows. However, read only users cannot clear or acknowledge alarms, and can only perform status commands. PWD1 and PWD2 users always have MAT 5.0 write access.	mat-22
MBGA	(NO) YES	Multilocation Business Group, for tenant, messages are allowed to be sent on this D-channel. Multilocation Business Group, for tenant, messages are allowed to be sent on this D-channel.	isdn-16
MCNT	5-100000	Message Count Threshold Threshold for number of Meridian Link messages per time interval. The recommended setting is 400. With INTL = 4 and MCNT = 400, the maximum flow is 20 messages per second.	iap3p-12

Prompt	Response	Comment	Pack/Rel
MEM	0-6	Memory modules, prompted when MTYP = 0. Add memory modules of 64K words. QPC51 card Precede with X to remove.	basic-1
MFSD	0, 2, 4...158 1-9 0, 2, 4... 254	Multifrequency Sender loop. Use even-numbered loops for Multifrequency Sender. Small System Precede with X to remove. Multifrequency Sender loop, systems with Fibre Network Fabric	basic-1  fnf-25
MGCR	0-NCR	Maximum number of call registers used by AUX messaging.  MGCR is associated with the NCR prompt. It is the maximum number of call registers that can be queued for use by AUX messaging before extra processing time is allocated to handle them.	basic-1
MID_SCPU	(NO) YES	Midnight Switch Cores Allow or deny Midnight Switch Core, where: Deny causes the system to perform the 3PE test during the Midnight routine instead of switching CPUs. Allow causes the system to switch CPUs during the Midnight routine instead of performing the 3PE test.  <b>Note:</b> Applicable to CPP systems only.	CPP_CNI - 26
MLDN	(NO) YES	Multiple Loop DN. MLDN allows multiple appearance DNs to be on different loops.	basic-1
MODE	LINK PRI TRK	Mode of operation Digital Link mode (Not supported for Small System) Primary Rate Interface mode Digital Trunk mode	dti-8
MODIFY	(NO) YES	Change Electronic Brandlining Terminal Text Broadcast configuration. Prompted if the Electronic Brandlining ISM parameter is set to Terminal Text Broadcast (EBLN ISM value of 2).	basic-23

# LD 17

Prompt	Response	Comment	Pack/Rel
MPED	(SD) DD 4D 8D	Single (Maximum Peripheral Equipment Density) Double (Maximum Peripheral Equipment Density) Quadruple (Maximum Peripheral Equipment Density) Octal (Maximum Peripheral Equipment Density)  Set to 8D for superloops. See LD 97. For Small System, MPED = 8D in the default data and must remain at this value for the peripherals to work.	basic-7
MQC_FEAT	NAS NACD NMS	MCDN QSIG Feature type  Prompted if RCAP = MQC Precede MQC Feature type with X to remove MCDN NAS functionalities are supported over QSIG MCDN NACD functionalities are supported over QSIG MCDN NMS - MC functionalities are supported over QSIG	meet-24
MSCL	(0)-8190	Maximum number of Speed Call Lists that can be defined on the system	optf-13
MSDT	0-159	Main Synchronization DTSL. Enter number of DTSL used for main synchronization. Prompted if SYNM = 1, 2 or 4.	supp-16
MTRO	(MR) PPM	Message Registration Periodic Pulse Metering	mr-20
MULTI_USER	(OFF) ON	Multi-User Log In	multi-19
MWIF	(STD) ISDM	Message Waiting Interface Standard Message Waiting Interface Plessey ISDX switch with remote message notification capability	samm-20
MWTO	(15) - 30	Message Waiting Time-out timer in seconds. This prompt is only printed if the RCAP is set to either QMWI or QMWO. The value entered is the duration of a timer started when a SETUP message is sent to set up a connection-oriented, call-independent connection for MWI transport. The timer is stopped on receipt of a CALL PROCEEDING message.	qsig ss-25.4

Prompt	Response	Comment	Pack/Rel
MWRT	0 - (2) - 15	Message Waiting Retry Timer. This prompt is only printed if the RCAP is set to either QMWI or QMWO. The value entered is the number of re-tries to be effected after a SETUP timeout.	qsig ss-25.4
N1	32, 64, 128, (512)	Maximum Number of octets per HDLC information frame. An entry of 128 or 512 is recommended for ELAN.	csi-7
N2	4-(8)-16	Maximum Number of retransmissions in steps of 1.	pri-12
N200	1-(3)-8	Maximum Number of retransmissions	pri-12
N201	4-(260)	Maximum Number of octets in information element	pri-12
N2X4	0-(10)-20	Maximum Number of status inquires when remote is busy (N2X2 only applies to 1TR6)	ovlp-16
NASA	(NO) YES	Network Attendant Service not allowed Network Attendant Service allowed Network Attendant Service signaling messages are sent on this D-channel.	nas-20
NCPU	1-(2)	Number of CPUs  This value is normally programmed at the factory.	basic-18
NCR	xx	Number of Call Registers, range depends on system type. Where:  xx = 26-2047 for System Option 51C xx = 26-20000 for System Option 81C  The maximum number of call registers may be limited by the amount of system memory. In this case the number of call registers is the amount of protected memory available divided by the number of words per call register.  Refer to the <i>Large System: Planning and Engineering</i> (553-3021-120) for memory calculations.	basic-19

# LD 17

Prompt	Response	Comment	Pack/Rel
NDCH	0 - 63	Move the primary D-channel to this logical number. The ADAN MOV command is supported for D-channels.	pri-18
NDIS	(20)-255	Number of Display messages for the Background Terminal (BGD). The NDIS entry determines the queue length for display messages for the BGD application.	bgd-10
NDRG	(NO) YES	New Distinctive Ringing Prompted if Distinctive Ringing (DRNG) package 74 equipped, and if packages ATVN 68, FTC 125 and JTDS 171 are turned off.	drng-10
NLPW	x...x <cr>	New Limited Access to Overlay log on password for the user Leave Log In password unchanged Length is 4-16 characters with Limited Access to Overlays (LAPW) package 164. Valid characters are 0-9, A-Z and a-z.	lapw-16
NORTEL_BRAND	(YES) NO	“NORTEL” Electronic Brandlining display option. Prompted only if the EBLN ISM parameter value is set to “0” or “1”. Show the “NORTEL” Electronic brandline. Show a blank brandline along with the Time and Date on an idle MDT set.	basic-23
NPW1	x...x <cr>	New Password 1(PWD1 Log In password) No change Valid characters are 0-9, A-Z and a-z. Length is 4-16 characters with Limited Access to Overlays (LAPW) package 164. Without the LAPW package, the password requires 4 hexadecimal digits (0-9, A-F).	basic-1

Prompt	Response	Comment	Pack/Rel
NPW2	x...x <cr>	New Password 2 (PWD2) No change Valid characters are 0-9, A-Z and a-z. Length is 4-16 characters with Limited Access to Overlays (LAPW) package 164.  Without the LAPW package, the password requires 4 hexadecimal digits (0-9, A-F).	basic-1
NPWC	aaaa	Enter New Mini-CDR password. This password requires 4 hexadecimal digits (0-9, A-F).	mcdr-1
NUMD	1- (2)	Number of floppy disk drives Prompted if ADAN = FDK or HDK. Not prompted for Small System.	basic-15
OCAC	(NO) YES	Support the Original Carrier Access Code format The expanded CAC format is automatically supported.  OCAC should be set to YES before and during the interim period. If OCAC is not set properly, Equal Access screening will not function.	fcc-20
OK	(YES) NO	Confirm validated Terminal Text Broadcast customized text string "aaaa" entered at the IDLE_DISP_STRING or at the IDLE_DISP_CHAR prompts. Prompted if the Electronic Brandlining ISM parameter is set to Terminal Text Broadcast (EBLN ISM value of 2).  Keep the new text sting. Re-enter a new text string.	basic-23
OPT	(CFPA) CFPD	Options for password PWnn. Multiple entries must be separated by a space.  Configuration Prompts Allowed Configuration Prompts Denied CFPD allows access to prompts LPWD and NLPW to change one's own password.	lapw-16
	(DTD) DTA	Deny DN-TN correspondence (administrator access only) Allow DN-TN correspondence (administrator access only)	adminset-21

# LD 17

Prompt	Response	Comment	Pack/Rel
	(FEAD)	Deny Change Set Features (administrator & installer access)	adminset-21
	FEAA	Allow Change Set Features (administrator & installer access)	
	(FORCD)	Deny the Force command	multi-19
	FORCA	Allow the Force command	
	(LLCD)	Line Load Control Denied	lapw-16
	LLCA	Line Load Control Allowed Access to Line Load Control commands in LD 2.	
	(LOSD)	Loss Plan Customization Denied	xpe-20
	LOSA	Loss Plan Customization Allowed	
	(MOND)	Deny the Monitor command	multi-19
	MONA	Allow the Monitor command	
	(NAMD)	Deny Change CPND Names (administrator and installer access)	adminset-21
	NAMA	Allow Change CPND Names (administrator and installer access)	
	(PROD)	Print Only Denied	lapw-16
	PROA	Print Only Allowed	
	(PSCA)	Restricts overlay access to printing functions only. Printing of Speed Call lists Allowed	lapw-16
	PSCD	Printing of Speed Call lists Denied Printing Speed Call lists can be allowed even though the overlay is restricted for all other functions.	
	(RDBD)	Access to Resident Debug Denied	lapw-15
	RDBA	Access to Resident Debug Allowed Access to Resident Debug (denied) allowed Must have International Supplementary Features (SUPP) package 131.	
	(TADD)	Deny Set Time and Date (administrator and installer access)	adminset-21
	TADA	Allow Set Time and Date (administrator and installer access)	
	(TOLD)	Deny Change Toll Restrictions (administrator and installer access)	adminset-21

Prompt	Response	Comment	Pack/Rel
	TOLA	Allow Change Toll Restrictions (administrator and installer access)	
	(TRKD)	Deny Change Trunks (Opt 11E administrator access only)	adminset-21
	TRKA	Allow Change Trunks (Opt 11E administrator access only)	
ORUR	1-(5)-255	Overrun/Underruns out-of-service threshold Enter in units of 1, the number of overrun/underrun in 15 minutes before an out-of-service is enforced.	basic-1
OTBF	1-(32)-127	Output request buffers	pri-12
OUT_T306	0-(30)-240	Variable timer for received disconnect message on outgoing calls, allowing in-band tone to be heard when sent by the network.  The network will stop sending tone after this timer expires. Default values for this timer include:  30 for China, Indonesia, Japan, Malaysia, Hong Kong, Singapore, New Zealand, and Thailand.  60 seconds for Australia PRI.	ddsp-20
ORVLA	1-99 ALL XALL <cr>	List of Overlay programs from 1 to 99 to be accessible by way of password PWnn Overlay number To allow access to all overlays To deny access to all overlays No change to previous definitions  Multiple entries must be separated by a space and the last entry must be followed by a carriage return. Precede with X to remove.	lapw-16
OVLR	(NO) YES	Overlap Receiving	ovlp-15
OVLS	(NO) YES	Overlap Sending	ovlp-15
OVLT	(0)-8	Overlap Timer (in seconds) This timer controls the interval between the sending of INFORMATION messages.	ovlp-15
OVLY	(NO) YES	Overlay	basic-1

# LD 17

Prompt	Response	Comment	Pack/Rel
PARM	(NO) YES	Gate opener for System Parameters.	
	R232/R422 DCE/DTE	Parameters for Interface and transmission mode, prompted for MSDL ports.  The RS-422 parameters are established with switch settings on the MSDL card. This prompt is used to verify those settings prior to enabling the card.  RS-232 parameters are set both on the card and at this prompt. Both values must be entered even if only one of them is being changed. For example "R232 DCE."  Default for AML is R232 DCE. Default for D-channels is R422 DTE.	msdl-18
PARY	(NONE) ODD EVEN	Parity type. Prompted for asynchronous ESDI ports.  For Small System, PARY is not prompted for CARD 0 PORT 0 or when TTY_TYPE = PTY.  No parity bit Odd parity bit Even parity bit	basic-19
PBXH	0-23 X	Hour to perform Message Waiting lamp maintenance X = No test to be performed.	mwc-15
PCDR	(NO) YES	Priority to CDR YES gives CDR priority over call processing.	cdr-1
PCML	(MU) A	Pulse Code Modulation companding Law for the system $\mu$ -Law (use $\mu$ -Law for North America) A-Law  This takes precedence over the response to the INTN prompt in Overlay 97 for Small System DTI/PRI.	basic-1
PDCH	0-63	Primary D-channel associated with a backup D-channel  Both D-channels must be on the same card type that is DCHI or MSDL. Prompted if ADAN = BDCH	msdl-18

Prompt	Response	Comment	Pack/Rel
PINX_CUST	0-99	This customer number will be used for the DN address translation associated with call independent connection messages received on this D-channel. Prompted when IFC = ISGF or ESGF.	qsig-22
PMCR	5 (x) y	Number of call registers used for PMSI. Minimum number of call registers to be configured is 5 The lesser of either 60 or 25 percent of the total system call registers The lesser of either 250 or 25 percent of the total system call registers  For example, if you enter 65, but 25 percent of the system total is 45, the number entered by the system will be 45.	pms-19
PMIN	(NO) YES	Minor alarm when the PMSI link is not responding.  This is not prompted if XTMR = 0. When this prompt is Yes, the attendants minor alarm is activated when the PMSI link does not respond. Note that when the link responds again, the alarm is not cleared.	pms-19
PMSI	(NO) YES	Modify Property Management Systems parameters This is prompted if Property Management Systems Interface (PMSI) is enabled.	pms-19
PORT	0-1 0-3 0-7 0-15	<i>Port number for MSDL cards, Option 81C I/O devices, or PMSI ports:</i>  Port number for the CP card Port number for the MSDL card Port number for Pseudo TTYs This prompt appears for Property Management Systems Interface (PMSI) port configuration.  Prompted only when CTYP = MSDL (Multi-purpose Serial Data Link), CPSI (Option 81C CP card), or PTY (Option 81C Pseudo TTY).  <i>Port number for Option11 systems:</i>	basic-19
	0-1 0-2	Small System TDS/DTR Port number Small System System Core port number. Port 0 is configured on System Core but cannot be modified.	

# LD 17

Prompt	Response	Comment	Pack/Rel
	0-2	Small System, prompted for CAB 1-4 if CAB_TYPE = sipe-25 IP	
	0-3	Small System DCHI/SDI Port number or Small System pseudo TTY port number <i>For Small System:</i> <ol style="list-style-type: none"><li>1. Expansion cabinets only support one TTY port which is on the Fiber Receiver Card. When CAB = 1 or 2, PORT is not prompted.</li><li>2. The maximum number of pseudo TTY supported is 4.</li><li>3. For TTY_TYPE = LSL, Card 0 Port 0 is not allowed.</li></ol>	
	1, 3	DCHI Port number If D-channel is on PRI/PRI2 card, the valid Port number is 1. If D-channel is on NTAK02 card, Ports 1 and 3 are valid.	
PRI		Primary Rate Interface ISDN PRI architecture is composed of three protocol layers providing different services: layer 1: physical layer layer 2: link layer layer 3: network layer  These layers provide a standard interface for voice and data communication. Each layer uses the services provided by the layer below, and builds on these services to perform functions for the layer above. Each layer or block can be modified without affecting the protocols in another layer.	pri-12

Prompt	Response	Comment	Pack/Rel
	loop x	<p>Enter loop number for additional PRI loops using the same D-channel and the interface ID for the additional loop numbers. Where:</p> <p>loop = 0-159 for PRI loop number  loop = 0-255, systems with Fibre Network Fabric  x = 2-15 for Interface ID or 1-126 if IFC= D70 or CNTY = JAPN</p> <p>The PRI prompt is used to assign the PRI loops controlled by the D-channel. Each loop is given an Interface ID.</p> <p>The PRI loop carrying primary D-channel (DCHI) and backup D-channel (BCHI) are assigned an Interface ID 0 and 1, respectively. The 14 remaining PRI loops that can be assigned to the D-channel are defined here and given an Interface ID of 2-15.</p>	fnf-25
	card x	<p>For Small System Where:</p> <p>card = 1-9 for PRI card number  card = 1-9 11-19 21-29 31-39 41-49 with Survivable IP  card = 11-14, 21-24, 31-34, 41-44 for Succession 1000  x = 2-15 for Interface ID or 1-126 if IFC= D70 or CNTY = JAPN</p> <p>Precede with X to remove. This prompt is repeated until &lt;cr&gt; is entered.</p>	sipe-25 basic-1
PRI2	0-159 2-15	Secondary PRI2 loops for nB + D, plus sequence, when IFC = SL-1 and DCHL is a PRI2 loop.	ipra-14
	card 2-15	<p>Small System Secondary PRI2 loops for nB + D, plus sequence, when IFC = SL-1 and DCHL is a PRI2 loop. Where card is:</p> <ul style="list-style-type: none"> <li>1-9 11-19 21-29 31-39 41-49 PRI card number</li> </ul>	
	0-159 0-3	Secondary PRI2 loops for nB + D, plus sequence, when IFC = TCNZ or CNTY = MSIA. The D-channel is not necessarily on IFC ID 0. This is set by service change.	

# LD 17

Prompt	Response	Comment	Pack/Rel
	xx 0-3	Small System when IFC=TCNZ and or CNTY=MSIA. Where xx is: <ul style="list-style-type: none"><li>• 1-9 11-19 21-29 31-39 41-49 PRI card number</li><li>• 11-14, 21-24, 31-34, 41-44 for CSE 1000</li></ul>	basic-1
	0-159 xx	2.0 Mb/s Primary Rate Interface or PRI loop number Small System Where xx is: <ul style="list-style-type: none"><li>• 1-9 11-19 21-29 31-39 41-49 PRI card number</li><li>• 11-14, 21-24, 31-34, 41-44 for Succession 1000</li></ul>	basic-1
	0-255	PRI2 loop number, systems with Fibre Network Fabric  Precede with X to remove. This prompt is repeated until <cr> is entered.	fnf-25
PRIM	0-15	Primary PMS port. To remove port, enter X.	pms-19

Prompt	Response	Comment	Pack/Rel
PROG		Progress	euroisdn-22
	NCHG	Send a PROGRESS signal when a CALL PROCEEDING message which contains a progress Indicator Information Element is received at the Meridian 1 EuroISDN gateway.  NCHG is the default for all interfaces except Australian, Austrian and Japan interface.	
	MALE	Send an ALERT signal when a CALL PROCEEDING message which contains a progress Indicator Information Element is received at the Meridian 1 EuroISDN gateway.  MALE is the default for Japan interface.	
	MCON	Send a CONNECT signal when a CALL PROCEEDING message which contains a progress Indicator Information Element is received at the Meridian 1 EuroISDN gateway.  MCON the default for Australian and Austrian interface.	
PR_RTN	(NO) YES	The prompt PR_RTN is printed only if the RCAP is set to PRI or PRO.  Retain option is (is not) supported by the far end PINX.	qsig ss- 23
PR_TRIGS	<CR>	Path Replacement Triggers are set to their default values: DIV 2 3 CNG 2 3 XCON 2 3 CTR2 2 3 2 Path Replacement attempts with a delay of 3 minutes for Diversion and Congestion and Call Transfer (triggered from secondary end) but Connected number is not a trigger.	qsig ss-23

# LD 17

Prompt	Response	Comment	Pack/Rel
	DIV xx y CNG xx y CON xx y	Diversion is used to trigger Path Replacement. Congestion is used to trigger Path Replacement. A Connected number different from a called number is used to trigger Path Replacement.	
	CTR1 xx y	Call Transfer is used to trigger Path Replacement. The Path Replacement Propose will be triggered from the Primary End of transfer.	qsig ss-25
	CTR2 xx y	Call Transfer is used to trigger Path Replacement. The Path Replacement Propose will be triggered from the Secondary End of transfer.  Precede with X to remove. CTR1 and CTR2 are mutually exclusive. xx = 0 - 15, the number of Path Replacement attempts. y = 1 - 7, the delay between two Path Replacement attempts in minutes.	qsig ss-25
PRTY	xx xx xx	Priority overlay programs to be stored in cache memory  Priority overlays stay in cache memory when a new overlay is loaded. Enter one or more commonly used overlay program numbers. Priority can be set only for the number of overlays specified in the CACH. xx = the overlay number.  Precede with X to remove an overlay program number.	basic-18
PTMR	(0)-31	Polling Timer for PMSI This is the polling timer, in minutes. When PTMR = 0, polling does not occur.	pms-19
PWD	(NO) YES	Change Password options	basic -19

Prompt	Response	Comment	Pack/Rel
PWD2	x...x	<p>Password 2</p> <p>Enter current second level administration password. This password is required to change existing passwords PWD1, PWD2, LAPW passwords and to change the Electronic Brandlining Terminal Text Broadcast customized text string.</p> <p>Valid characters are 0-9, A-Z and a-z. Length is 4-16 characters with Limited Access to Overlays (LAPW) package 164.</p> <p>Without the LAPW package, the password requires 4 hexadecimal digits (0-9, A-F).</p>	basic-1
PWnn	x...x	<p>Password</p> <p>Length is 4-16 characters with Limited Access to Overlays (LAPW) package 164. Valid characters are 0-9, A-Z and a-z.</p> <p>Where: nn = number entered in response to LAPW prompt.</p> <p>Enter the LAPW password to be used for PWnn.</p> <p><b>Note:</b> If the LAPW password is a Set Based Administration (SBA) password (PWTP=SBA), the PWnn response length is 4-16 numeric characters, where the valid characters are digits 0-9 only.</p>	lapw-16
PWTP	(OVLY) SBA	<p>OVLY Password Access Type</p> <p>SBA Password Access Type</p>	adminset-21
QCHID	(YES)  NO	<p>This rule is applicable for both encoding and decoding of Channel Identification IE</p> <p>Timeslot values 17 to 31 of the PR12 loop associated to channel number 17 to 31 of the Channel Identification IE (previous behavior)</p> <p>Timeslot values 17 to 31 of the PR12 loop associated to channel number 16 to 30 of the Channel Identification IE</p>	qsig gf-24
RADR	0-(1)-255	<p>Remote Address for the data-link level HDLC protocol</p> <p>The IADR and RADR prompts must be coordinated with the far-end. If IADR is defined as 3, then RADR must be 1.</p>	cls-7

# LD 17

Prompt	Response	Comment	Pack/Rel
RCAP		Remote Capabilities. Enter one or more values to define the capabilities of the far-end.	pri-19
	BRI	Basic Rate Interface (when IFC = APAC, SL1, D70, ESS4, or ESS5)	
	CCBI	Call Completion to busy subscriber using integer value for operation coding CCBO/CCBI are mutually exclusive.	qsig ss-24
	CCBO	Call Completion to busy subscriber using object identifier for operation coding CCBO/CCBI are mutually exclusive	qsig ss-24
	XCCB	To remove remote capability.	
	CCBS	Call Completion to Busy Subscriber for QSIG and EuroISDN BRI interfaces. CCBS is allowed if QSIG supplementary services package 316 is equipped.	
	CCNI	Call Completion on no response using integer value for operation coding CCNO/CCNI are mutually exclusive.	qsig ss-24
	XCCN	To remove remote capability.	
	CCNO	Call Completion on no response using object identifier for operation coding CCNO/CCNI are mutually exclusive.	qsig ss-24
	XCCN	To remove remote capability.	
	CCNR	Call Completion to No Reply for QSIG and EuroISDN BRI interfaces. CCNR is allowed if QSIG supplementary services package 316 is equipped.	
	CPK	Network Call Park. CPK is allowed if: IFC = SL1 CPRKNET package 306 is equipped	
	COLP	Connected Line Identification Presentation Connected Number IE Presentation is supported on Indonesian interfaces.  Default value for ESIG, ISIG, NI2, EUROISDN and Indonesian interfaces except AUS, EIR, DUT, BEL, FRA interfaces.	basic- 23

Prompt	Response	Comment	Pack/Rel
	XCOL	to remove Connected Number IE Presentation Default value for all APAC, AUS, EIR, DUT, BEL and FRA interfaces.	
	CTI	Call Transfer Integer CTI and CTO are mutually exclusive.	qsig ss-24
	CTO	Call Transfer Object CTI and CTO are mutually exclusive. QSIG SS Call Diversion Notification remote capability. Configure sending of QSIG Diversion Notification Information, treatment of Rerouting request and coding of operations. If coded as Object Identifier, the remote capability ends with 'O', whereas for Integer Value, the remote capability ends with 'I'. Only one remote capability is allowed. Add "call transfer notification" remote capability to the EuroISDN interface.	qsig ss-24 qsig ss- 23 bne-25
		Precede with 'X' to remove capability.	
	DV11	Diversion information is sent to remote switch.	
	DV10	Diversion information is sent to remote switch.	
	DV21	Rerouting requests from remote switch are processed.	
	DV20	Rerouting requests from remote switch are processed.	
	DV31	Diversion information is sent to remote switch. Rerouting requests from remote switch are processed.	
	DV30	EuroI ISDN Call Diversion Diversion information is sent to remote switch. Rerouting requests from remote switch are processed.	bne-25
		Precede with 'X' to remove capability.	
	ECTO	Add call transfer notification and invocation remote capability to the EuroISDN	bne-25
	XCTO	Use "XCTO" to remove capability.	
	MCID	MCID = Add MCID as a new remote capability.	etsi-ss- 23
	XMCI	To remove remote capability.	
	MQC	MCDN QSIG Conversion as a Remote capability	meet-24
	MSL	Remote D-channel is on a MSDL card	

# LD 17

Prompt	Response	Comment	Pack/Rel
	MWI	Message Waiting Interworking with DMS-100	
	NAC	Network Access data. Enter XNAC to remove NAC as a remote capability. NAC is allowed if: the D-channel is defined on an MSDL card (i.e. CTYP=MSDL) the D-channel interface type is SL1 (IFC=SL1)	
	NCT	Network Call Trace supported	
	ND1	Network Name Display method 1	
	ND2	Network Name Display method 2	
	ND3	Network Name Display method 3. ND3 ensures the same level of service between the MCDN and QSIG name display services.	
	NDI	Name Display - Integer ID Coding	qsig-24
	NDO	Name Display - Object ID Coding	qsig-24
	NDS	NI-2 Name Display Option.	qsig ss-25.4
	XNDS	Remove NDS Option.	
		Add Path Replacement as a remote capability. Only one capability can be configured per link.	qsig ss-23
	PRI	The encoding method uses Integer Values.	
	PRO	The encoding method uses Object Identifier. Precede with 'x' to remove capability.	
	QMWI	Add Message Waiting Indication as a remote capability. The encoding method uses Integer Values.	qsig ss-25.4
	QMWO	Add Message Waiting Indication as a remote capability. The encoding method uses Object Identifier.	qsig ss-25.4
	XQMW	Remove Message Waiting Indication (using the Integer Values encoding method) as a remote capability.	qsig ss-25.4

Prompt	Response	Comment	Pack/Rel
	RVQ	Remote Virtual Queuing RCAP is prompted until only <cr> is entered in response. Precede a value with X to remove. ND1 and ND2 are used with Network Call Party Name Display or NCPND. Both ends must have NCPND. ND2 requires SL-100, DMS with BCS32 and later. Prompted with Remote Virtual Queuing (ORC_RVQ) package 192.	
	TAT	Invoke Trunk Anti-Tromboning operation if the far-end switch also supports this feature. TAT may be input if: TAT package is equipped, CTYP = MSDL, IFC = D100, SL1, S100 or D250.	
	UUI	Remote capability where Use- to-User Information is supported.	uui-3.0
	XUUI	Remove UUI capability.	
	UUS1	User-to-User Service 1 Decode UUS IE sent by Central Office	bne-25
	XUSS	Send UUS IE to Central Office Remove User-to-User Service 1	
RCVP	(NO) YES	Auto-recovery to primary D-channel option. RCVP is supported on SL-1 to SL-1 connections only. When RCVP = YES, the primary D-channel is automatically forced to be the active channel after it is brought up from a released state. This option must be coordinated with the far end. Both sides must be either YES or NO. If the two sides do not match, both sides default to NO. When IFC = SL-1, RCVP changes to NO. For Backup DCH only.	pri-13
REMD	0, 1, 2, ...159 G0,G1...G159 T0,T1...T159	Double Density Remote Peripheral Equipment loop(s) Meridian 1 loop or loops GEC loop or loops TVT loop or loops	rpe-1

# LD 17

Prompt	Response	Comment	Pack/Rel																		
	0-255	Precede loop number with X to remove. If entry is for an odd-numbered loop, the preceding even numbered loop cannot be TDS, CONF or MFSD. Systems with Fibre Network Fabric	fnf-25																		
REMO	0, 1, 2, ...159 G0,G1...G159 T0,T1...T159	Single Density Remote Peripheral Equipment loop(s) Meridian 1 loop or loops GEC loop or loops TVT loop or loops Precede loop number with X to remove. If entry is for an odd-numbered loop, the preceding even numbered loop cannot be TDS, CONF or MFSD	basic-1																		
	0-255	Systems with Fibre Network Fabric	fnf-25																		
REMQ	0, 1, 2, ...159 G0, 1...G159 T0,T1...T159	Quadruple density Remote Peripheral Equipment loop(s) Meridian 1 loop or loops GEC loop or loops TVT loop or loops Precede loop number with X to remove.	rpe-7																		
REQ	CHG END	Request: Change existing data block Request: Exit overlay program	basic-1																		
RLS	xx	Release ID of the switch at the far-end of the D-channel.  This is the software release at the far-end. If the far-end has an incompatible release, it prevents the sending of application messages.  Shown below is the relationship between the ISDN application, equipment and the software release ID or BCS at the far-end.	pri-19																		
		<table><thead><tr><th><u>Application</u></th><th><u>Far-End</u></th><th><u>Minimum RLS</u></th></tr></thead><tbody><tr><td rowspan="3">Network Ring Again</td><td>SL-1</td><td>12</td></tr><tr><td>SL-100</td><td>26</td></tr><tr><td>DMS-100/250</td><td>26</td></tr><tr><td rowspan="2">Network ACD</td><td>SL-1</td><td>15</td></tr><tr><td>SL-100</td><td>29</td></tr><tr><td>Network Breakin and Force Disconnect</td><td></td><td>25</td></tr></tbody></table>	<u>Application</u>	<u>Far-End</u>	<u>Minimum RLS</u>	Network Ring Again	SL-1	12	SL-100	26	DMS-100/250	26	Network ACD	SL-1	15	SL-100	29	Network Breakin and Force Disconnect		25	pomw-25.4
<u>Application</u>	<u>Far-End</u>	<u>Minimum RLS</u>																			
Network Ring Again	SL-1	12																			
	SL-100	26																			
	DMS-100/250	26																			
Network ACD	SL-1	15																			
	SL-100	29																			
Network Breakin and Force Disconnect		25																			

Prompt	Response	Comment	Pack/Rel
		Network Message Service - Message Center SL-1 15	
		Network Message Service - Meridian Mail SL-1 16	
		Message Waiting Indication Interworking with DMS-100 SL-1 19 DMS-100 36	
		The Release ID information is required and supported for connection to Nortel Networks equipment only. For connections to AT&T ESS#4 and ESS#5, set RLS = 1.	
ROLR	(0)-63	Receive Objective Loudness Rating  The default is 0, indicating no change to the default +45 dB. The number entered in this field corresponds to an offset value. The offsets and their corresponding values are provided on page 493.  The ROLR value is downloaded to Meridian Modular telephones after sysload except when performing parallel reload. Refer to the Summary of Transmission Parameters NTP and the International Loss and Level Plan planning and engineering NTP before changing these values. Not prompted when United Kingdom (UK) package 190 is equipped.	arie-14
RPEB	16-1000	Remote Peripheral Equipment Buffers, 2.0 Mb/s RPE	rpe-15
RXMT	1-(5)-20	Retransmission Threshold  Enter in units of 5 per cent. RXMT is the % of retransmissions allowed in 15 minutes before out of service is enforced, or:  $RXMT = (\# \text{ of packets retransmitted}) \div (\text{total} \# \text{ packets sent})$ .	basic-1
SATN	I s c u	TN of SADM/Data Line Card associated with IND CSL. For SL-1 telephone with CLS = CMSA. I = 0-255, Systems with Fibre Network Fabric	cls-7 fnf-25

# LD 17

Prompt	Response	Comment	Pack/Rel
SBA_ADM_INS	0-(2)-64	Maximum Administrator and/or Installer Log Ins allowed at one time.	adminset-21
SBA_USER	0-(100)-500	Maximum User Log Ins allowed at one time.	adminset-21
SECU	(NO) YES	Security for Meridian Link applications When set to NO, the host computer must specify both the TN and DN of the associate set in connect, answer and release messages. Prompted when the Integrated Services Digital Network Application Module Link for Third Party Vendors (IAP3P) package 153 is equipped for ISDN/AP Third Party.	iap3p-12
SEMT	(1)-5	Number of Status Enquiry Messages sent within 128 ms from the network side	msdl-24
SEVERITY	(NONE) CRITICAL MAJOR MINOR  <CR>	Alarm Severity of a particular alarm entry No rating (default status) System operation is in jeopardy Serious condition, the system is operational Error condition detected, system operation not affected Retains current value	alarm-19
SID	xxxx	System ID number The SID is used for polling an SL-1 for ACD, CDR and traffic reports. It can also be printed and changed using LD 2.	basic-1
SIDE	(USR) NET	Meridian 1 node type Slave to the controller Network, the controlling switch  Prompted only if IFC = SL-1, ESIG or ISIG. Opposite sides of the PBX-to-PBX interface must be set as NET or USR. The call processing software uses these labels to handle call collision.	pri-12

Prompt	Response	Comment	Pack/Rel
SIZE	(0)- 65534	Size of History File buffer in characters  The History File stores system messages in Protected Data or P data and uses an SDI port address. The History File survives initialization, but is lost when SYSLOAD occurs or the length of the file is changed.  The History File cannot be created if all 16 I/O ports are defined. Prompted if ADAN = HIST or TRF	hist-18
	(50)-1500	Word Size of Audit Trail buffer The Size entered here must be a multiple of 50 for correct memory storage.	lapw-16
SL1B	16-2048	SL-1 Buffers Small System does not require SL-1B buffers. If set higher than default they only consume memory. Refer to the <i>Memory Calculations Appendix</i> in the <i>Planning and Engineering NTPs</i> .	basic-1
SMEM	(NO) YES	Short Memory test On a manual SYS load the memory is tested on one pass, if (NO), memory is tested with normal six pass test. Not prompted on Option 81C.	smem-19
SOLR	0-(1)-4	Sidetone Objective Loudness Rating  The SOLR value is downloaded to Meridian Modular telephones after sysload except when performing parallel reload.  Before changing these values, refer to the <i>Summary of Transmission Parameters NTP</i> and the <i>International Loss and Level Plan Planning and Engineering NTP</i> .	arie-14
	(1)	12 dB	
	0	7 dB	
	2	17 dB	
	3	22 dB	
	4	sidetone disabled	

# LD 17

Prompt	Response	Comment	Pack/Rel
		<p>The default is 0, indicating no change to the default +45 dB. The number entered in this field corresponds to an offset value.</p> <p>The default value is 1 (12 dB). The recommended North American value for all releases is 1 (12 dB). Does not apply to M2216.</p>	
SSDT	0-159	Standby Synchronization DTSL Enter the number of the DTSL used for Standby Synchronization. Prompted if SYNM = 2 or 5.	basic-16
SSUP	(NO) YES	Senior Supervisor Device assigned used by senior supervisor/load manager. Cannot be YES if prompt APRT is YES.	acdc-1
STOP	(1)-2	Number of stop bits Large Systems. Prompted for asynchronous ESDI ports.	cls-19
	(1)-1.5-2	Small Systems. To enter 1.5, use 1X5. STOP is not prompted for CARD 0 PORT 0 or when TTY_TYPE = PTY.	
SUPPORTED_TEXT_ONLY			basic-23
	(YES)	Change customized text string by text string input. Prompted if the Electronic Brandlining ISM parameter is set to Terminal Text Broadcast (EBLN ISM value of 2). Input by text string and IDLE_DISP_STRING is prompted.	
	NO	Input character by character and IDLE_DISP_CHAR nn is prompted.	
SUPPRESS	0-(5)-127	Alarm occurrence threshold (prior to suppressing)  This determines the number of times an alarm may occur before it is no longer output. Entering 0 indicates that all alarm occurrences are output (no suppression)	alarm-19
SYNC	(NO) YES	Asynchronous mode of operation for ESDI port Synchronous mode of operation for ESDI port	csi-7

Prompt	Response	Comment	Pack/Rel
SYNM	(0) 1 2 3 4 5	Synchronization Mode No synchronization Main input from Digital Trunk Signaling Link or DTSL Main input and standby input from DTSL Main input from external clock Main input from DTSL; standby input from external clock Main input from external clock; standby input from DTSL	ida-16
		SYNM is prompted with Integrated Digital Access (IDA) package 122.	
T1	2-(4)-20	Retransmission Timer Range in units of 0.5 seconds, (4) = two seconds	cls-7
T2	0-(10)-255	Maximum Time allowed without a frame being exchanged.	cls-7
T200	2-(3)-40	Retransmission Timer Entry is in units of 0.5 seconds.	pri-12
T203	2-(10)-40	Maximum Time allowed without frames being exchanged	pri-15
T23	1-(20)-31	Interface guard Timer or DCHI only This timer checks how long the interface takes to respond. Entry is in units of 0.5 seconds.	pri-12
T3	2-(5)-255	Timer for initial link setup in units of 0.5 seconds for ESDI only.	cls-7
T310	110-(120)	Timer used to determine how long SL-1 can wait for the response message when the QSIG outgoing call is in the U3 (outgoing call processing) state. This range applies to PRI, PRI2, and BRI trunks	qsig-20

# LD 17

Prompt	Response	Comment	Pack/Rel
TDS	0, 2, 4...158	Tone and Digit Switch (TDS or Fast TDS service loop) Use even-numbered loops for Tone and Digit Switch (TDS). Precede with X to remove.	basic-1
	1-9 11-19 21-29 31-39 41-49	Small System <b>Note:</b> For Small System, all XTD/DTR units must be removed from the SSC card (card 0) before TDS 0 can be removed.	lse-24
	0-255	Tone and Digit Switch loop, Systems with Fibre Network Fabric	fnf-25
TEN	xxx ALL <cr>	Tenant to be accessible by way of PWnn All Tenants allowed No change to previous definitions. Precede with X to remove.	lapw-16
TERD	0, 1, 2, ...159 G0,G1...G159 N0,N1,...N159	Double Density Terminal equipment loop or loops Meridian 1 loop or loops GEC loop or loops Precede loop number with N to create a phantom loop for third party applications	phtn-20
	T0, T1...T159 X0,X1,...X159	TVT loop or loops - Swedish Televerket Precede loop number with X to remove. If entry is for an odd numbered loop, the preceding even numbered loop cannot be TDS, CONF or MFSD.	
	0-255	Systems with Fibre Network Fabric	fnf-25
TERM	0, 1, 2, ...159 G0,G1...G159 N0,N1,...N159	Single Density Terminal equipment loop or loops Meridian 1 loop or loops GEC loop or loops Precede loop number with N to create a phantom loop for third party applications	phtn-20
	T0, T1...T159 X0,X1,...X159	TVT loop or loops - Swedish Televerket Precede loop number with X to remove. If entry is for an odd-numbered loop, the preceding even numbered loop cannot be TDS, CONF or MFSD	
	0-255	Systems with Fibre Network Fabric	fnf-25

Prompt	Response	Comment	Pack/Rel
TERQ	0, 1, 2, ...159 G0,G1...G159 N0,N1,...N159  T0, T1...T159 X0,X1,...X159	Quadruple Density Terminal equipment loop or loops Meridian 1 loop or loops GEC loop or loops Precede loop number with N to create a phantom loop for third party applications TVT loop or loops - Swedish Televerket Precede loop number with X to remove.	phtn-20
TIMR	(NO) YES	Change protocol timer value	basic-1
TMDI	(YES)  NO	TMDI Card (Mode set to PRI OR TRK) Small System Other Card	basic-24
TITE	  (0) 2	T1 transmit Equalization  0 - 200 feet 200 - 400 feet	basic-24
TMRK	96, (128)	Length of cadence increments in ms Refer to the Flexible Tone and Digit Switch cards in the <i>Features and Services</i> (553-3001-306). See CLN prompt in LD 56.	basic-13
TN	l s c u  c u	Valid Terminal Number that when accessed returns a test tone Valid Terminal Number, Small System Prompted when DTD = EXT.	basic-1
TODR	0-23	Time Of Daily Routines	basic-1
TOLR	(0)-63	Transmit Objective Loudness Rating  The default is 0, indicating no change to the default +45 dB. The number entered in this field corresponds to an offset value. The offsets and their corresponding values are provided on page 493.  The TOLR value is downloaded to Meridian Modular telephones after sysload except when performing parallel reload. Refer to the Summary of Transmission Parameters NTP and the International Loss and Level Plan planning and engineering NTP before changing these values. Not prompted when UK package is equipped	arie-14

# LD 17

Prompt	Response	Comment	Pack/Rel
TPO	(NO) YES	Do not enable Traffic Period option Enable Traffic Period option	basic-21
TRIGGER	a...a	Trigger string for alarm tables  The trigger string can be up to 10 alphanumeric characters. At least one character must be alphabetic (a-z). Plus sign (+) can be used to indicate the "wild card" entry.  For example, BUG++++ includes all BUG system messages. The mnemonics supported for this prompt are lists at the beginning of this overlay. A value must be entered; <CR> is not accepted	alarm-19
TRLL	1-31 1-31	Test RPE Local Loop back  Perform complete 2.0 Mb/s RPE loop testing, including local loop back, in the RPE groups as part of daily routine. Not supported for Small System. Precede with X to delete.	rpe2-15
TRNS	(NONE) HELP BOTH	Selects which messages are going to be translated Help and Option 81C specific system messages are printed in English version Help is printed in translated version and Option 81C specific system messages in English Help and Option 81C specific system messages are printed in translated version	mlms-20
TRSH	0-15	Threshold Digital Trunk Interface Threshold set defined in LD 73.	pri-19
TSO	(NO) YES	Do not enable Trunk Seizure option Enable Trunk Seizure option	basic-21
TTY	0-15	Pre-defined MSDL-SDI terminal number Prompted if ADAN = STA	sta-19
TTY_TYPE	(SDI) LSL PTY	TTY logical type for Small System. TTY_TYPE is only prompted when adding or changing TTY devices. For a PRT device, TTY_TYPE is fixed as SDI. Standard TTY type (default) Low speed Link type Pseudo TTY type	basic-22

Prompt	Response	Comment	Pack/Rel
TTYLOG	0-65534	Log buffer size When 0 is entered, there is no log file	multi-19
TUBO	(NO) YES	Regular message processing speed on AML Double message processing speed on AML	basic-25
TYPE	ADAN ALARM	Type of data block All input/output devices (includes D-channels) Alarm filter configuration data When TYPE = ALARM, the system automatically prints out the current alarm and exception filters Must have Alarm Filtering (ALRM_FILTER) package 243.	basic-19 alarm-19
	ATRAN	Aries Transmission	basic-19
	CEQU	Common Equipment parameters	basic-19
	CFN	Configuration data block	basic-1
	OVLY	Overlay area options	basic-19
	PARM	System Parameters	basic-19
	PWD	System Password and Limited Access to Overlay Password When entering yes, the PWD2 is prompted unless LAPW is used and Multi-User Log In is enabled.	basic-19
	VAS	Value Added Server	basic-19
USER		Output message types When ADAN = HST, users may be BUG, MCT, MTC, SCH and TRF. Prompted when ADAN is PRT, TTY or, HST. For Small System: 1. LSL is not a valid response for the USER prompt 2. USER is not prompted if TTY_TYPE = LSL. When TTY_TYPE = PTY, the response to USER must be one of the following: MTC, BUG, SCH, FIL, TRF, MCT	basic-20
	ACD	Automatic Call Distribution printer for reports	
	ADM	Administrator SBA access level to be stored in the history file. Precede with X to remove.	adminset-21
	APL	Auxiliary Processor Link for IVMS	

# LD 17

Prompt	Response	Comment	Pack/Rel
	BGD	Background Terminal Mutually exclusive with ACD, APL, CDL, CMC, CMS, HSL, and LSL.	
	BUG	Software error	
	CDL	CDR Data Link	
	CMC	Communications Management Center	
	CMS	Command and Status Link Port must be defined as a synchronous ESDI	
	CSC	Customer Service Changes: Automatic Set Relocation and Attendant Administration	
	CTY	CDR TTY port to output CDR records	
	FIL	This is a special response which applies to Alarm Filtering message output.  When a port is assigned this User type, only Alarm Filtered messages will be output. The messages listed at the TRIGGER prompt are the messages that appear for this user type.  When AF_STATUS = OFF, no system messages are output to the port with FIL type.  The output appears as shown below. The field definitions follow.  <severity> <report id> <time> <date> <sequence number> <event> <tab> Operator data: <data> <tab> Expert data: <data>	alarm-19

Prompt	Response	Comment	Pack/Rel
		<p>Where:</p> <p><u>severity</u>:</p> <p>**** = Critical</p> <p>*** = Major</p> <p>** = Minor</p> <p>blank = None</p> <p><u>report id</u>: The system message character string (BUG1234, ERR5683, etc.)</p> <p><u>time</u>: hh:mm:ss</p> <p><u>date</u>: dd/mm/yy</p> <p><u>sequence number</u>: The sequence the message appears. The range is 0-65535, and the numbers are right justified. Meridian 1 and auxiliary processor messages have separate sequence numbers.</p> <p><u>event</u>: This indicates the type of event that is being output: MSG (message), SET (set alarm), CLR (clear alarm).</p> <p><u>tab</u>: 6 character indent</p> <p><u>Operator data</u>: This contains additional information to help clear the fault. This field contains the additional message information (TN, loop number, etc.) that the message contains. Up to 30 characters will appear.</p> <p><u>Expert data</u>: This field may not always appear. It contains system expert information.</p>	
	HSL	ACD/D High-Speed AUX link	
	ICP	Intercept Computer Link	
	INS	Installer SBA access level to be stored in the history file. Precede with X to remove.	adminset-21
	LSL	ACD/D Low-Speed AUX link Small System uses LSL for Meridian Mail administration/maintenance access	
	MCT	Malicious Call Trace TTY port along with other users	mct-20

# LD 17

Prompt	Response	Comment	Pack/Rel
	MTC	Maintenance includes AUD, BUG and ERR if enabled by prompt ERRM in PARM. Use MTC for the system monitor or XSM.	
	NOO	No Overlay allowed	
	PMS	Property Management System interface	
	SCH	Service Change or any data base change	
	TRF	Traffic	
	USR	User SBA access level to be stored in the history file. Precede with X to remove.	adminset-21
USR		User. Precede any of the following with X to remove.	pri-12
	ISLD	Integrated Services Signaling Link Dedicated. D-channel for ISL only, in dedicated mode, without using the PRI channel.	
	PRI	Primary Rate Interface. D-channel for ISDN PRA only.	
	SHA	Shared mode. D-channel used for both ISDN PRA and ISL. D-channel must be using a PRI channel.	
	SHAV	Shared Virtual Network Services. D-channel shared between PRA, VNS and ISLD.	
	VNS	Virtual Network Services. D-channel used for Virtual Network Services or for ISLD.	
VAS	NEW CHG OUT <cr>	New Value Added Server Change Value Added Server Remove Value Added Server End VAS prompting sequence	cls-7
VCNA	(NO) YES	Virtual Network Services Network Call Party Name Display available over this D-channel	vns-16
VCRD	(NO) YES	Virtual Network Services Network Call Redirection available over this D-channel	vns-16

Prompt	Response	Comment	Pack/Rel
VNSC	(0)-xx	Virtual Network Services Customer number associated with the D-channel.  Customer number is defined in LD 15. Customer 0 is the default for the D-channel. Ensure customer 0 is not actually a user of the D-channel before changing.	vns-16
VNSM	1-300	Virtual Network Services Maximum controlled by the D-channel	vns-16
VNSP	0-32700	Virtual Network Services Private Network Identifier (PNI) for the far-end customer	vns-16
VOLR	(NO) YES	Handset Volume Reset  To have handset volume reset whenever the user hangs up or uses handsfree, set VOLR = YES.	agcr-20
VSID	0-15	VAS Identifier  Identifier for the VAS providing the services, this includes IS, Data Services, Voice Messaging, Alpha terminals.  The value entered here is associated with the value which may be entered at the ELAN prompt. By responding to VSID, you are preparing to associate a link with a Value Added Server ID to allow message transmission.	cls-7
VSIG	(NO) YES	Virtual Network Services Network Signalling denied/ allowed. VSIG=YES equal Signalling arrangement =ESN5 VSIG=NO equal Signalling arrangement =STD	basic-23
VTRO	(NO) YES	Trunk Route Optimization before answer available over this D-channel for VNS.  VTRO will be prompted if: <ul style="list-style-type: none"> <li>1. Advanced Network Services (NTWK) package 148 is equipped</li> <li>2. Trunk Anti-Tromboning (TAT) package 293 is <i>not</i> equipped</li> <li>3. VCRD = YES</li> </ul>	vns-21

# LD 17

Prompt	Response	Comment	Pack/Rel
XCT	0, 2, 4,...158	<p>Extended Conference/TDS/MFS</p> <p>Loop number for NT8D17 Conference/TDS/MFS card. Enter an even network loop number for TDS/MFS functions. The Conference function is automatically assigned the next higher or odd loop number.</p> <p>System prints: TDS n MFS n CNF n+1</p> <p>This indicates that TDS and MFS functions are configured on the even loop "n" and conference function is configured on the next higher odd loop.</p> <p>Precede with X to remove. Both loops must be disabled first. Since TN 0 0 0 0 cannot be used in non-multigroup systems, it is recommended that Conference/TDS/MFS card be placed in loop 0.</p> <p>You may configure more than 16 conference loops; however, enabling more than 16 conference loops may cause the system to lock-up.</p>	xct-15
	D0-D158	Dealer conference loop	ohol-20
	S0-S158	Spare dealer conference loop Should be in the same group as the units planned to use this loop.	ohol-20
	0-254	XCT loop number for NT8D17 Conference/TDS Card, Systems with Fibre Network Fabric	fnf-25
XNUM	(1)-4	Number of retransmissions per message for PMSI. If XTMR = 0, this prompt does not appear.	pms-19
XSM	(NO) YES	<p>Extended System Monitor</p> <p>This is the SDI port for the Extended System Monitor. Prompt USER must be set to MTC (maintenance messages) for the system monitor port. Only one port can be XSM = YES.</p>	xpe-15
XTMR	(0)- 6	<p>PMS acknowledgment time (the time measured in seconds to wait for the acknowledgment message from the PMS)</p> <p>Where: 0 = no retransmission.</p>	pms-19

---

Prompt	Response	Comment	Pack/Rel
YALM	(FDL) DG2	Yellow Alarm Method  Prompted only if the frame format is ESF. If YALM is not prompted, DG2 was set automatically. If YALM is prompted the response varies between countries.  The default is FDL when the frame format is ESF. When the frame format is D2, D3, or D4, the default is DG2.	pri-19

---

# LD 17

---

## LD 18: Speed/Group Call, Pretranslation, Special Service, 16-Button DTMF and Hotline

---

This overlay allows data for Speed Call, System Speed Call, Group Call, Pretranslation, Special Service, and Enhanced Hotline and 16-Button DTMF to be created or modified. The data may be printed using Overlay 20.

The overlay allows the ability to add and copy multiple Speed Call lists and System Speed Call lists. The number of lists allowed by each system is subject to the system type and memory available. Refer to *Features and Services* (553-3001-306) for details concerning speed call requirements.

The Pretranslation List configuration takes place in this program. To enable the Pretranslation feature in LD 15, the list must be configured here using the XLAT prompt.

## Prompts and responses

### Contents

Section	Page
<i>Prompts and responses by task:</i>	
Compute Speed Call list memory size and disk records	565
Configure Group Call lists	565
Configure Speed Call lists	566
Assign a Pretranslation group to Speed Call list	566
Configure Enhanced Hot Line lists	567
Configure Special Service List	567
Move from one group or list to another	568
Configure Group Hunt	568
Configure ABCD data block	569
<i>Other Information:</i>	
Flexible feature code information	570

## Compute Speed Call list memory size and disk records

Use this prompt sequence to determine if there are enough memory and disk records for new Speed Call and Hot Line lists. Compare the output with the “MEM AVAIL” and “DISK RECS AVAIL” values output before the REQ prompt. See also “System memory and disk space” at the beginning of this document.

Prompt	Response	Comment
REQ:	COMP	Request = COMP (Compute disk and memory required for new lists)
TYPE:	aaa	Type of data block, where: aaa = SCL, SSC or HTL (Speed Call, System Speed Call or Hot Line estimation)
NOLS	1-8191	Number of lists to be added
DNSZ	4-(16)-31	Maximum length of digits allowed for new lists
SIZE	1-1000	Maximum number of DNs allowed in new lists

## Configure Group Call lists

Prompt	Response	Comment
REQ:	aaa	Request (REQ responses begin on page 576)
TYPE:	GRP	Type of data block = GRP (Group Call list)
CUST	xx	Customer number associated with this data block
GRNO	0-63	Group number for group call
GRPC	(YES) NO	Allow or deny group call control to the originator
STOR	xxx yyy...y	Entry number (0-19) and the digits stored with it Entry number (0- 5) and digits stored with it for Small System

# LD 18

## Configure Speed Call lists

---

Prompt	Response	Comment
REQ:	aaa	Request (REQ responses begin on page 576)
TYPE:	aaa	Type of data block, where aaa = SCL or SSC (Speed Call list or System Speed Call list)
LSNO	0-8190	List Number for Speed Call (SCL)
	0-4095	List Number for System Speed Call (SSC)
TOLS	0-8190	To List (New speed call list number)
NCOS	(0)-99	Network Class of Service for SSC
DNSZ	4-(16)-31	Maximum number of DNs allowed for Speed Call lists
SIZE	1-1000	Maximum number of DNs in Speed Call list
WRT	(YES) NO	Data is correct and can be updated in the data store
STOR	xxx yyy...y	Entry number (0-999) and the digits stored with it
WRT	(YES) NO	Data is correct and can be updated in the data store

---

## Assign a Pretranslation group to Speed Call list

---

Prompt	Response	Comment
REQ:	aaa	Request (REQ responses begin on page 576)
TYPE:	PRE	Type of data block = Pretranslation calling group assignment
CUST	xx	Customer number
XLAT	0-254 0-8191	Pretranslation list (Calling group to Speed Call list correlation)
	0-254 8191	If list number 8191 is assigned to a group then pretranslation is removed for that group
- PRE	0-8190	Pretranslation Speed Call List number
- PST	0-8190	Post-translation Speed Call List number
- SDA	0-8190	Single-Digit Access Speed Call List number

---

## Configure Enhanced Hot Line lists

Prompt	Response	Comment
REQ:	aaa	Request (REQ responses begin on page 576)
TYPE:	HTL	Type of data block = Hot Line list
CUST	xx	Customer number
LSNO	0-8190	List Number for Hotline (one for customer)
NCOS	0-4095	Network Class of Service for HTL
DNSZ	4-(16)-31	Maximum number of DNs allowed for Hot Line list
SIZE	1-1000	Maximum number of DNs in Hot Line list
WRT	(YES) NO	Data is correct and can be updated in the data store
STOR	xxx yyy...y	Entry number (0-999) and the digits stored with it
WRT	(YES) NO	Data is correct and can be updated in the data store

## Configure Special Service List

Prompt	Response	Comment
REQ:	aaa	Request (REQ responses begin on page 576)
TYPE:	SSL	Type of data block = Special Service list
SSL	1-15	Special Service List number
SSDG	xxxx	Special Service Digit or Digits
- CDPC	(NO) YES	Called Party Control is enabled
- TOLL	(NO) YES	Toll number
- ALRM	(NO) YES	Alarm is enabled
- TNDM	(NO) YES	Tandem
- SSUC	(NO) YES	Special Service Unanswered Call Mark
- NDGT	(0) - 15	Number of digits collected before the seizure of the outgoing CIS MFS trunk
- SSDG	<cr>	Special Service Digit or Digits

# LD 18

## Move from one group or list to another

---

Prompt	Response	Comment
REQ:	MOV	Request = MOV
TYPE:	aaa	Group or List Type (aaa = GHT, GRP, SCL, SSC, or SSL)
CUST	xx	Customer number
LSNO	xxxx	List Number
TOLS	0-254	To List
GRNO	xx	Group Number
TOGR	0-63	To Group

---

## Configure Group Hunt

---

Prompt	Response	Comment
REQ:	aaa	Request (REQ responses begin on page 576)
TYPE:	GHT	Type of data block = Group Hunt
LSNO	0-254	List Number
CUST	xx	Customer Number
PLDN	xxxx	Pilot DN
PLAT	1-254 0-8191	Post-translation calling group and list number
GRNO	0-63	Group Number for group call
GRPC	(YES) NO	Group Call originator (does) does not have control
DNSZ	4-(16)-31	Directory Number Size
SIZE	1-1000	Size of list
STOR	xxx yyy...y	Entry number (0-999) and the digits stored with it
WRT	(YES) NO	Data is correct and can be updated in the data store

---

## Configure ABCD data block

Prompt	Response	Comment
REQ:	aaa	Request (REQ responses begin on page 576)
TYPE:	ABCD	Type of data block = ABCD (16 Button DTMF)
TBNO	1-254	Table Number
DFLT	1-254	Default function table number
PRED	(NO) YES	Pre-Dial
- A	aaaa	A key assignment
- B	aaaa	B key assignment
- C	aaaa	C key assignment
- D	aaaa	D key assignment
- *	aaaa	asterisk key assignment
- #	aaaa	# key assignment
- RCAL	ADL x...x	Recall button assignment
POST	(NO) YES	Post-dial
- A	aaaa	A key assignment
- B	aaaa	B key assignment
- C	aaaa	C key assignment
- D	aaaa	D key assignment
- *	aaaa	asterisk key assignment
- #	aaaa	# key assignment
CONT	(NO) YES	Control
- A	aaaa	A key assignment
- B	aaaa	B key assignment
- C	aaaa	C key assignment
- D	aaaa	D key assignment
- *	aaaa	asterisk key assignment
- #	aaaa	# key assignment

## Flexible feature code information

**Table 2**  
Default 16-button DTMF Flexible Feature Code functions

Button	Pred	Post	Control
A	RGAD	RGAA	CNFD
B	SNR	SNS	TGLD
C	CFWA	NUL	DISD
D	SPCU	NUL	NUL
*	NUL	NUL	NUL
#	NUL	NUL	NUL
RCAL	NUL		

**Table 3**  
Flexible Feature Code mnemonics

Function	Pre-dial mode mnemonic	Post-dial mode mnemonic	Control mode mnemonic
ADL x...x (maximum 31 digits)	ADL x...x	ADL x...x	
Authorization Code	AUTH		
Automatic Set Relocation	ASRC		
Automatic Wake Up Activate	AWUA		
Automatic Wake Up Deactivate	AWUD		
Automatic Wake Up Verify	AWUV		
Busy Number Redial Activate		BNRA	
Busy Number Redial Deactivate	BNRD		
Busy Number Redial Toggle	BNRK	BNRK	
Call Detail Recording Charge Account	CDRC	CDRC	

(Part 1 of 3)

Function	Pre-dial mode mnemonic	Post-dial mode mnemonic	Control mode mnemonic
Call Forward All Calls Activate	CFWA		
Call Forward All Calls Deactivate	CFWD		
Call Forward All Calls Verify	CFWV		
Call Forward Destination Deactivation	CFDD		
Call Forward Hunt Override	CFHO		
Call Park		CPRK	
Call Park Access	CPAC		
Carriage return (use default from Table 7)	<cr>	<cr>	<cr>
Conference Diagnostics	COND		
Conference Digit 1			CNFD
Conference 6 Trunk Disconnect		C6DS	
Customer Call Forward Activate	CCFA		
Customer Call Forward Deactivate	CCFD		
Customer Call Forward Toggle	CCFK		
Deactivate RGA/LND/SNR/CFW	DEAF		
Disconnect Digit 3			DISD
Electronic Lock Activate	ELKA		
Electronic Lock Deactivate	ELKD		
Group Hunt Pilot DN	GRHP		
Incoming Call Indicator Activate	ACAI		
Incoming Call Indicator Deactivate	ICID		
Incoming Call Indicator Override		ICPO	
Incoming Call Indicator Print	ICIP		
Integrated Message System Access	IMSA		
Last Number Redial	RDLN	RDLN	
Maintenance Access	MNTC		
Malicious Call Trace		MTRC	
(Part 2 of 3)			

# LD 18

Function	Pre-dial mode mnemonic	Post-dial mode mnemonic	Control mode mnemonic
NUL (leave key without an assigned function)	NUL	NUL	NUL
Override		OVRD	
Paging and Radio paging code	PAG x...x	PAG x...x	
Permanent Hold		HOLD	
Pickup DN	PUDN		
Pickup Group		PUGR	
Pickup Ringing Number		PURN	
Ring Again Activate		RGAA	
Ring Again Deactivate	RGAD		
Ring Again Verify	RGAV		
Room Status	RMST		
Speed Call Controller	SPCC		
Speed Call Erase	SPCE		
Speed Call User	SPCU	SPCU	
Store Number (Erase)	RDNE		
Store Number (Redial)	RDSN	RDSN	
Store Number (Save)	RDST	RDST	
System Speed Call User	SSPU	SSPU	
Terminal Diagnostics	TRMD		
Toggle Digit 2			TGLD
Trunk Answer From Any Station	TFAS		
Trunk Verification	TRVS		
User Status	USTA		
User for set based administrator	USER		

(Part 3 of 3)

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
#	aaaa	# key assignment (see Table 2 and Table 3 starting on page 570)	abcd-14
*	aaaa	asterisk key assignment (see Table 2 and Table 3 starting on page 570)	abcd-14
A	aaaa	A key assignment (see Table 2 and Table 3 starting on page 570)	
ALRM	(NO) YES	Alarm is enabled	basic-1
B	aaaa	B key assignment (see Table 2 and Table 3 starting on page 570)	abcd-14
C	aaaa	C key assignment (see Table 2 and Table 3 starting on page 570)	abcd-14
CDPC	(NO) YES	Called Party Control is enabled	basic-1
CONT	(NO) YES	Control; default mnemonics are used; see Table 2. Modify control mode table; see Table 3.	basic-1
CUST	xx	Customer number associated with this function as defined in LD 15 Prompted when REQ = NEW or CHG and LSNO = <cr>	basic-1
D	aaa	D key assignment (see Table 2 and Table 3 starting on page 570)	abcd-14
DFLT	1-254 <cr>	Default function table number Prompted if a table has been defined for the customer. No table is to be used as the default.	basic-1

# LD 18

Prompt	Response	Comment	Pack/Rel
DNSZ	4-(16)-31	Directory Number Size  Maximum length of DN allowed for Speed Call list or Group Hunt list. Range is 4, 8, 12, 16, 20, 24, 28, 31. For Speed Calling the default = 16. Numbers between 1 and 30 are rounded up to the next valid number.  Once defined DNSZ should not be changed. Instead, print out the list, remove it with REQ = OUT and rebuild the list with the new DNSZ. Prompted when REQ = NEW and TYPE = GHT.	optf-1
GRNO	0-63	Group Number for group call	grp-20
GRP	0 - 4095  <CR> X	Ringling Number Pickup Group (RNPG) using this speed call list. Repeat for all groups sharing the same list. To reprompt "LSNO" To remove	grp-1
GRPC	(YES) NO	Group Call originator does have control Group Call originator does not have control  If GRPC = YES in the Group Call List, the originator has control: when the originator goes on hook, the call is terminated. If GRPC = NO and the originator goes on hook, the Group Call acts like a conference call: the call remains active until all members go on hook.	grp-20
LSNO	0-4095 0-8190  <cr>	List Number for Speed Call, System Speed Call, Group Hunting and Hotline System Speed Call and Hot Line lists A Speed Call list associated with Call Pickup network wide groups. to end Use only when REQ = CHG and TYPE = GHT.  List numbers exceeding four digits will have the left most digits truncated, and only the right most digits will be accepted. A Hot Line list uses a System Speed Call list entry, only one Hot Line list is allowed per customer.  MSCL must be defined in LD 17.	optf-1
NCOS	(0)-99	Network Class of Service Prompted when TYPE = SSC or HTL.	basic-17

Prompt	Response	Comment	Pack/Rel
NDGT	(0) - 15	Number of digits which should be collected before the seizure of the outgoing CIS MFS trunk. Number of digits to be accepted from the incoming MFS trunk. If the outgoing call is recognized as MFS call then the trunk should not be seized until the number of the user dialed digits equals to the NDGT or EOD timer expires or the OCTO ('#') is dialed. If the incoming MFS call is recognized then the trunk should be requested to issue the BX MFS signal to the CIS CO party until the number of the accepted from the trunk digits equals to NDGT.	cismfs- 23
NOLS	1-8191	Number of lists to be added. Prompted if REQ = COMP	
PLAT	1-254 0-8191	Post-translation calling group and list number List number 8191 is used to remove the group from being post-translated.	pldn-15
PLDN	xxxx	Pilot DN. Prompted when LSNO = <cr>.	pldn-15
POST	(NO) YES	Do not modify Post-dial table Default mnemonics are used; see Table 7. Modify Post-dial table	abcd-14
PRE	0-8190	Pre-translation Speed Call List number Precede with X to remove.	pxlt-15
PRED	(NO) YES	Do not modify Pre-dial pre-dial function table Default mnemonics are used; see Table 2. Modify the pre-dial function table, see Table 3.	abcd-14
PST	0-8190	Post-translation Speed Call List number Precede with X to remove.	pxlt-15
RCAL	ADL x...x NUL	Recall button assignment Autodial, where x...x is the autodial number to a maximum of 31 digits. To leave the RCAL button without an assigned autodial number	abcd-14

# LD 18

Prompt	Response	Comment	Pack/Rel
REQ		Request	basic-19
	CHG	Change existing data block	
	COMP	Compute memory and disk requirements for new Speed Call, System Speed Call or Hot Line lists	
	CPY xxx	Copy speed call data. Where: xxx = 1-100. The ability to copy multiple Speed Call and System Speed Call lists is supported.	
	END	Exit overlay program	
	MOV	Move data block from one group or list to another. MOV command can be used to renumber one group call or speed call list to another.	basic-25.4
	NEW xxx	Add new data block. Where: xxx = 1-100. The ability to create multiple speed Call and System Speed Call lists is supported.	
	OUT	Remove data block.	
SDA	0-8190	Single-digit Access Speed Call List number Precede with X to remove.	pxlt-15
SIZE	1-1000 1-96	Maximum number of DNs in Speed Call or Hot Line lists Maximum number of DNs in Group Hunt list Once defined, SIZE should not be changed. Instead, print out the list in LD 20, remove it with REQ = OUT and rebuild the list with the new SIZE. SIZE is not prompted for TYPE = GRP or PRE.	optf-1
SSDG	xxxx <cr> X	Special Service Digitone Digit or Digits (1-4 digits) To proceed past SSDG prompt. Precede SSDG entry with X to remove it.  The SSDG prompt, followed by the CDPC, TOLL and ALRM prompts, reappears after each ALRM prompt until the list contains 100 entries or a <cr> is entered for SSDG. Precede with X to remove.	opcb-14
SSL	1-15 X	Special Service List number Precede with X to remove.	supp-14

Prompt	Response	Comment	Pack/Rel
SSUC	(NO) YES	Special Service Unanswered Call mark If the outgoing call is recognized as SSUC (that is, if the first 1 - 4 digits outpulsed to the trunk = SSDG with SSUC = YES), then such a call requires some specific disconnect treatment.	cist-21
STOR	xxx yyy ... y	Store For TYPE = SCL, SSC, or HTL the input format is entry number and digits stored against it. Where: xxx = list entry number from 000 to 999 yyy ... y = digits stored with each list entry number xxx	optf-1
	xx yyyy	For TYPE = GRP the input format is member number and member DN. Where: xx = member number (00-19 for 51C, 61C, and 81C or 0-5 for Small System) yyyy = member DN  If the Directory Number Expansion (DNXP) package is equipped, up to seven digits are allowed; otherwise, only four digits can be entered.	
	xx yy	For TYPE = GHT the input format is Group Hunt entry and digits stored against it. Where: xx = GHT entry number from 00 to 95 yyyy = digits stored	
	<cr>	Stop STOR prompt  For Speed Call, System Speed Call or Hot Line the member number must conform with SIZE and the number of digits must conform to prompt DNSZ.  Digits may include "*" and "#" if the Outpulsing, asterisk and octothorpe (OPAO) package 104 is equipped.	
	xxx <space> <cr>	Remove entry	
TBNO	1-254	Table Number The number of the ABCD table to be added, changed or removed	abcd-14

# LD 18

Prompt	Response	Comment	Pack/Rel
TNDM	(NO) YES	Send MFC H tandem signal Prompted when the International Supplementary Features (SUPP) package 131 and Multifrequency Compelled Signaling (MFC) package 128 are equipped.	supp-14
TOGR	0-63	To Group New group call group number.	grp-1
TOLL	(NO) YES	Toll number The SSDG entry is a toll number	opcb-14
TOLS	0-8190	To List New speed call list number.	optf-1
TYPE		Type of data block	basic-1
	ABCD	16-Button DTMF data block	
	CPNW	Call Pickup Network Wide data	
	GHT	Group Hunt data block	
	GRP	Group call data block	
	HTL	Hot Line data block	
	PRE	Pretranslation data block	
	SCL	Speed Call List or pretranslation data block	
	SSC	System Speed Call data block	
WRT	(YES) NO	Write Data is correct and can be updated in data store.  The Prompt WRT follows prompts SIZE and STOR asking you to confirm the correctness of the data just entered. If data is correct, enter "YES" or <cr>.  A response of "NO" causes the data just entered to be ignored and SCH3213 is output.  A response of "*****" aborts the program. Only the last STOR value is lost. All previous values to which WRT was "YES" or <cr> are saved. The following information is output with the WRT prompt:  ADDS: MEM: xxxxx DISK: yy.y	optf-1

Prompt	Response	Comment	Pack/Rel
		<p>Where:</p> <p>xxxx = the amount of protected memory yy.y = the number of disks records required for the new Speed Call list</p> <p>Check the "MEM AVAIL" and "DISK RECS AVAIL" output values before the REQ prompt. See also "System memory and disk space" at the beginning of this document.</p>	
XLAT	xxx yyyy	<p>Calling group number to translation Speed Call list number correlation. <b>Format if International Supplementary Features (SUPP) package 131 is not equipped</b>, where:</p> <p>xxx = Pretranslation group number, 0-254 xxx = Group 0 is used for trunks. xxx = Group 1 is used for attendant consoles. xxx = Groups 2-254 can be used for other calling groups.</p> <p>yyyy = List number to be used for Pretranslation, 0-8191. 8191 is used to remove the group from pretranslation.</p>	pxlt-8
	xxx	<p>Pretranslation group number. <b>Format if International Supplementary Features (SUPP) package 131 is equipped, where:</b></p> <p>xxx = Group 0 is used for trunks. xxx = Group 1 is used for attendant consoles. xxx = Group 2-254 can be used for other calling groups.</p>	
	<cr>	End the prompt group.	

# LD 18

---

## LD 19: Code Restriction

---

Overlay program 19 allows data for code restrictions to be created or modified.

Code Restriction is used to control the digits that can be dialed on a COT or FEX trunk route by a Toll Denied (TLD), Conditionally Toll Denied (CTD) or Conditionally Unrestricted (CUN) Class of Service telephone. See also New Flexible Code Restriction in LD 49.

Route 31 is not an exclusively private route. It can be configured as a private route in LD 16.

For small systems Overlay program 19 is replaced by Overlay 49.

## Prompts and responses

### Contents

Section	Page
<i>Prompts and responses by data block:</i>	
ANI: Automatic Number Identification data block	582
CRB: Code Restriction data block	583
FGDB: Feature Group D data block	583

### ANI: Automatic Number Identification data block

Prompt	Response	Comment
REQ:	aaa	Request
TYPE:	ANI	Type of data block = ANI (Automatic Number Identification)
ANII	0-31	ANI Data Block Index
ANIT	xxx	Invalid ANI treatment
NPA	200- 999	First 3 ANI digits in NPA format
3ANI	xxx	3 Digit ANI (denied) allowed
SLV3	NXX	Number of digits for screening
NXX	xxx yy	Range of end-office numbers
SLV6	xxx	Number of digits for screening
- SUB	xxxx yyyy	Range of subscriber numbers

## CRB: Code Restriction data block

Prompt	Response	Comment
REQ:	aaa	Request
TYPE:	CRB	Type of data block = CRB (Code Restriction)
NCOS	0-99	NCOS value for subscribers
CUST	xx	Customer number associated with this data block
ROUT	0-511	Route number
TORT	0-511	To Route
CLR	aaaa	Codes (aaaa = DENY or ALLOW)
ALLOW	200-999 ... 200-999	NXX, NPA codes allowed
DENY	200-999 ... 200-999	NXX, NPA codes denied

## FGDB: Feature Group D data block

Prompt	Response	Comment
REQ:	aaa	Request
TYPE:	FGDB	Type of data block = Feature Group D
FGNO	0-127	Feature Group D block number
CIC	0000-9999	Carrier ID
CCLS	a...a	Carrier Class (a...a = IC, INC, or CONS)
PRES	(YES) NO	Presubscription
OVLP	(YES) NO	Overlapped outpulsing by Local Exchange Carrier (LEC)
CCAN	aaa bbb	Call Categories on calls to Carrier, and ANI screening (aaa = NAM, NA0, INT, IN0, OPR, SAM, SAX, SA0, CUT, or (ALL); bbb = (YES) or NO)
SAC	xxx xxx xxx	Service Access Codes
ANII	0-31	ANI Data Block Index
CDAN	(NO) YES	ANI Digits in CDR Records
SHAN	(NO) YES	Show ANI Digits on Terminal Displays
PRTD	(NO) ALL	Printout Control for Invalid II or ANI Digits
LDAC	aaa	Long Distance Access Code (aaa = AC1 or AC2)
LAAC	aaa	Local Area Access Code (aaa = AC1 or AC2)

# LD 19

OPER	DN nnn ... nnn RAN nnn	Treatment for 0+, 0- calls
INTR	(NO) YES	Intercept Treatment
ADFT	(OVF) RAN nnn DN nnn ... nnn	Intercept Treatment for Invalid Address Format
IIT	(OVF) RAN nnn DN nnn ... nnn	Intercept Treatment for Invalid IIs
IITP	xx yyyy zz	Valid II, II Type, and NCOS for ANI screening bypass
CPAR	(NO) YES	Call Processing parameters
INIT	(NO) YES	Length of Initial String of dialed digits on outgoing calls
ENBL	1-(12)-30	Long Enbloc dialing timeout
ENBS	1-(5)-30	Short Enbloc dialing timeout
IFTO	2-(120)-254	Inter-field FGD timeout in increments of 2 seconds
DGTO	128-(640)-5000	Interdigits timeout
MONT	0-(256)-2048	Minimum On-Hook Time

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
3ANI	(DENY) NCOS xx	3 Digit ANI denied Apply invalid ANI treatment 3 Digit ANI allowed Use this NCOS value (0-99)	fdg-17
ADFT	(OVF) RAN nnn DN nnn . . . nnn	Intercept Treatment for Invalid Address format	fgd-17
ALLOW	200-999 ... 200-999 <cr>	NXX, NPA codes Allowed Proceed to next prompt Prompted when CLR = DENY or <cr>.	basic-1
ANII	0-31	ANI Data Block Index When ANII = 0, there is no ANI screening; 1-31 is the ANI block index number.	fgd-17
ANIT	(OVF) RAN xxx DN xxxx NCOS xx	Invalid ANI treatment Overflow tone RAN route (0-511) Internal or external DN (1-16 digits) Network Class of Service value (0-99)	fgd-17
CCAN	aaa (YES) aaa NO	Call Categories on calls to Carrier, and ANI screening provided. Call Categories on calls to Carrier, and ANI screening not provided. aaa can be any of the following:	fgd-17
	NAM NAO	1 + (inside World Zone 1) 0 + (inside World Zone 1)* (see note below)	
	INT INO	1 + (outside World Zone 1) 0 + (outside World Zone 1)* (see note below)	
	OPR	0 - calls	
	SAM SAX SAO	1 + (Embodied SAC) 1 + (External SAC) 0 + (External SAC)* (see note below)	
	CUT	Cut-Through	

# LD 19

Prompt	Response	Comment	Pack/Rel
	(ALL)	All call types (Default when REQ = NEW)  <b>Note:</b> aaa entries marked with the symbol * use zero; not the letter O. If the letter is entered in place of the number zero, no error appears. However, NAM and SAM will be overridden.	
CCLS	IC INC CONS	Inter-Exchange Carrier Class International Carrier Class Consolidated Carrier Class	fgd-17
CDAN	(NO) YES	ANI Digits in CDR Records	fgd-17
CIC	0000-9999	Carrier ID. Response must be three or four digits.	fgd-17
CLR	DENY	Denied codes.  If CLR = DENY all NPA/NXX codes are denied except those entered in response to prompt ALOW (only ALOW is prompted).	basic-1
	ALLOW	Allowed codes.  If CLR = ALLOW all NPA/NXX codes are allowed except those entered in response to prompt DENY (only DENY is prompted).	
	<cr>	Proceed to next prompt when REQ = CHG When changing a CRB, if CLR = <cr> then both ALOW and DENY are prompted. For a new CRB, CLR must = ALLOW or DENY.	
CPAR	(NO) YES	Call Processing Parameters	fgd-17
CUST	xx	Customer number associated with this data block as defined in LD 15	basic-1
DENY	200-999 ... 200-999	NXX, NPA codes Denied	basic-1
	<cr>	Proceed to next prompt Prompted when CLR = ALLOW or <cr>.	

Prompt	Response	Comment	Pack/Rel
DGTO	128-(640)-5000	Interdigits timeout  The maximum time between two digits within the same field, in multiples of 128 milliseconds. 5000 rounds down to 4992.	fgd-17
ENBL	1-(12)-30	Long Enbloc dialing timeout Before initial string is complete on outgoing calls.	fgd-17
ENBS	1-(5)-30	Short Enbloc dialing timeout After initial string is complete on outgoing calls.	fgd-17
FGNO	0-127	Feature Group D block number The system automatically assigns FGNO numbers in sequential order when REQ = NEW.	fgd-17
IFTO	2-(120)-254	Inter-field FGD Timeout in increments of 2 seconds The maximum time between two fields on incoming calls (in seconds).	fgd-17
IIT	(OVF) RAN nnn DN nnn . . . nnn	Intercept Treatment for Invalid IIs.  Where:  OVF = Overflow tone RAN nnn = RAN route DN nnn . . . nnn = Network or local DN	fgd-17

# LD 19

Prompt	Response	Comment	Pack/Rel
IITP	xx yyyy zz	<p>Valid II, II Type, and NCOS for ANI screening bypass. Where: xx = II in range 00-99 yyyy = one of the following II types: REGU = Regular 4A8P = 4 or 8 party HOTL = Hotel/Motel CLES = Coinless TST3 = Test 3 AIOD = Automatic Identification of Outward Dialing COIN = Coin TST7 = Test 7</p> <p>zz = optional NCOS number defining ANI screening bypass (00-99)</p> <p>When IITP = &lt;CR&gt; and REQ = NEW, the following shows the default arrangement. International codes (12-19) are left undefined.</p> <p><u>XXVVVZZ</u> 00REGUno 014A8Pno 06HOTLno 07CLESno 10TST3no 20AIODno 27COINno 95ST7no</p>	fgd-17
INIT	(NO) YES	Length of Initial String	fgd-17
INTR	(NO) YES	Intercept Treatment	fgd-17
LAAC	AC1, AC2	Local Area Access Code Prompted with Network Alternate Route Selection (NARS) package 58.	fgd-17

Prompt	Response	Comment	Pack/Rel
LDAC	AC1, AC2	Long Distance Access Code Prompted with Network Alternate Route Selection (NARS) package 58.	fgd-17
MONT	0-(256)-2048	Minimum On-hook Time The minimum amount of time between acknowledgment wink and answer off-hook signal, in multiples of 128 milliseconds.	fgd-17
NCOS	0-99	NCOS value for subscribers Reprompts current level NPA, NXX, or SUB.	fgd-17
NPA	200-999	First 3 ANI digits in NPA format. Only 3 digits are allowed, even when using 1+ dialing.	nanp/ fgd-17
	<cr>	Return to REQ	
NXX	xxx yyy	Range of end office numbers Prompted if SLV3 = NXX. Where: xxx = starting or only NXX yyy = ending NXX (optional)	fgd-17
	<cr>	Reprompts NPA	
OPER	DN nnn . . . nnn RAN nnn	Treatment for 0+, 0- calls. Where: DN nnn . . . nnn = 1-16 digit network or local DN RAN nnn = RAN route (0-511)	fgd-17
OVLP	(YES) NO	Overlapped outpulsing by Local Exchange Carrier (LEC)	fgd-17
PRES	(YES) NO	Presubscription	fgd-17
PRTD	(NO) ALL REJ	Printout Control for Invalid II or ANI Digits No printout Printout for all invalid ANI and II digits Printout all invalid II digits. Printout invalid ANI when not mapped to NCOS.	fgd-17
REQ		Request	basic-1
	CHG END	Change the existing data block Exit overlay program	

# LD 19

Prompt	Response	Comment	Pack/Rel
	MOV	Move data block to a new route MOV command can be used to move code restriction data blocks to a new route.	basic-25.4
	NEW	Add new data block to the system	
	OUT	Remove the data block	
	PRT	Print FGD or ANI data block	
ROUT	0-511	Route number	basic-1
SAC	xxx xxx xxx . . . xxx	Service Access Codes. Default codes: 700, 800, 900, 601.	fgd-17
SHAN	(NO) YES	Show ANI Digits on Terminal Displays	fgd-17
SLV3	NXX NCOS xx	Number of digits for screening 6 or 10 digit screening. NXX prompt follows. NCOS xx = 3 digit screening (0-99), all NPA map to NCOS value, NPA is reprompted.	fgd-17
SLV6	SUB NCOS xx	10 digit screening level, SUB prompt appears next. Not allowed if an ending NXX level (yyy) was entered at NXX prompt. 6 digit screening level, reprompts NXX. All XXXX numbers under the NPA map to NCOS value (0-99)	fgd-17
SUB	xxxx yyyy	Range of subscriber numbers. Where: xxxx = starting or only subscriber number yyyy = ending subscriber number (optional)	fgd-17
TORT	0-511	To Route New route number TORT is prompted when REQ = MOV.	basic-1
TYPE	ANI CRB FDGB	Type of data block ANI screening data block (for Feature Group D) Code Restriction data Block Feature Group D data Block	basic-1

---

## LD 20-22: Print Reports Guide

---

This module documents only those print reports which can be obtained in LDs 20, 21, and 22. In the Alphabetical list of many other Administration Overlays, you can find print options at the REQ and TYPE prompts.

To obtain a list of telephones which have particular features, refer to LD 81. Consult LD 93 to print data for Attendant Console groups. Consult LD 95 to print information for the Call Party Name Display (CPND) data block.

**Table 4**  
**Print Reports in LDs 20, 21, and 22 (Part 1 of 5)**

Print Report	LD	Page
2.0 Mb/s Digital Trunk Interface (DT2) data	20	600
Alarm and Exception Filter (ALARM) data	22	650
Analog set (500 and PBX) data	20	601
Application Module Link (AML) data	21	635
Attendant Console (ATT) data from LD 15	21	635
Attendant console (ATT, 1250, and 2250) data from LD 12	20	602
Audit trail (AUDT) data	22	651
Automatic Call Distribution Priority Agent (PRI2) data	20	601
Automatic Number Identification (ANI) data	21	635
Automatic Trunk Maintenance (ATM) route data	21	636
Automatic Trunk Maintenance (ATM) schedule data	21	636

# LD 20-22

**Table 4**  
**Print Reports in LDs 20, 21, and 22 (Part 2 of 5)**

<b>Print Report</b>	<b>LD</b>	<b>Page</b>
Automatic Wake Up (AWU) data	21	636
Business Communication Set (BCS) data	20	602
Call Detail Recording (CDR) data	21	636
Call Redirection (RDR) data	21	637
Centralized Attendant Service (CAS) data	21	637
Centralized Attendant Service (CASK) Key	21	637
Call Pickup Network Wide (CPNW) data	20	603
Channel data: Real Analog, Virtual Analog and Virtual Digital	20	603
Code Restriction (CRB) data	21	637
Common Equipment (CEQU) data	22	651
Configuration Record (CFN) data	22	651
Controlled Class of Service (CCS) data	21	638
Core Inventory (CINV) data for all systems	22	651
Customer data block (CDB)	21	637
Data access card (DAC) data	20	604
Dial Intercom Group (DIG) data	20	605
Dial Tone Detector (DTD and XTD) data	20	605
Digital Communications Set data	20	605
Digital set (2000 series, 3000, and Aries) data	20	606
Digitone Receiver (DTR) data	20	606
Directory number (DNB) data	20	607
Directory number (DNB) range data	20	607

**Table 4**  
**Print Reports in LDs 20, 21, and 22 (Part 3 of 5)**

<b>Print Report</b>	<b>LD</b>	<b>Page</b>
Directory number (DNB) selection Group Call (GRP) data	20	608
Flexible Code Restriction (FCR) data	21	638
Flexible Feature Codes (FFC) data	21	639
Generic version and issue of software	22	657
Hospitality Management (HSP) data	21	639
Hot Line List (HTL) data	20	609
Hunting (HNT, GHT, and EHT) data	20	609
Input/output device (ADAN) data	22	652
Integrated Message Service (IMA) data Issue and Release (ISS) Meridian Modular Telephone (ATRN) data	22	653
Integrated Message Service (IMS) data	21	639
Intercept Computer Update (ICP) data	21	639
Intercept Treatments (INT) data	21	640
ISDN Signaling Link (ISLL) data	21	640
Listed Directory Numbers (LDN) data	21	640
Multifrequency (MFC, MFE, MFR, MFK5, MFK6, MFVE) data	20	610
Networking (NET) data	21	641
Out of Service unit (OOSSLT and OOSMLT) data	20	610
Overlay area (OVLY) data	22	653
Package (PKG) information	22	654
Password (PWD) data	22	654
Peripheral Software Version (PSWV) data	22	654
Power (PWR) data	20	611

# LD 20-22

**Table 4**  
**Print Reports in LDs 20, 21, and 22 (Part 4 of 5)**

<b>Print Report</b>	<b>LD</b>	<b>Page</b>
Pretranslation (PRE) data	20	611
Set Relocation (SRDT) data	21	642
SL1 set data	20	611
Special Service List (SSL) data	20	612
Speed call lists (SCL) data	20	612
System Limits (SLT) data	22	654
System Loop Limits	22	655
System Patch (ISSP) data	22	655
Tandem Connection (TCON) data	20	612
Tape ID (TID) data	22	655
Template (TEM) data	20	613
Terminal Number Block (TNB) data for telephones and trunks	20	614
Terminal Number Block (TNB) range data	20	615
Test lines (TST) data	21	643
Timers (TIM) data	21	643
Tone Detector (TDET) data	20	615
Trunk data: All Trunks	20	615
Trunk Members (LTM) data	21	643
Trunk data: Specific Trunk types	20	616
Unused Card (LUC) data	20	617
Unused Directory Number (LUDN) data	20	617
Unused Units (LUU) data	20	617

**Table 4**  
**Print Reports in LDs 20, 21, and 22 (Part 5 of 5)**

<b>Print Report</b>	<b>LD</b>	<b>Page</b>
Unused Voice or Data unit (LUVU or LUDU) data	20	618
Value Added Server (VAS) data	22	655
Voice Mailbox (VMB) data	20	618

# LD 20-22

---

## LD 20: Print Routine 1

---

Overlay program 20 allows data to be printed for the following blocks:

- all hunting
- group calls
- speed calls
- template data blocks
- terminal numbers
- pre-translation

### Data Access Card (NT7D16)

By responding R232, R422, or DAC to the TYPE prompt in LD 20, you can print out the configured parameters for each port, or the entire DAC.

If a specific TN is entered, the current settings are uploaded from the unit and printed with the database settings. This is useful if parameters have been altered during keyboard or Hayes dialing modify procedures.

### Templates

Templates store telephone information in system memory. Telephones with the same configuration of keys and Class of Service share the same template. This makes efficient use of Protected Data Store. Template Audit (LD 1) is used to remove unused templates.

## Multiple Appearance Redirection Prime (MARP)

When printing the TN block, "MARP" is output next to a DN appearance if it is the MARP TN for that DN. When printing the DN block, "MARP" is output prior to the DES if it is the MARP TN. Refer to *Features and Services* (553-3001-306) for an explanation of the MARP feature.

The security password may be required to print telephone and TN information. The password (SPWD) is required if the Station Security Authcode package (229) is equipped and the password is defined.

## Linked Overlay programs

Overlay programs 10, 11, 20 and 32 are linked thus eliminating the need to exit one Overlay and enter another. Once one of the above Overlays has been loaded it is possible to add, print and get the status of a set without having to exit one Overlay and load another.

The input processing has also been enhanced. Prompts ending with a colon (:) allow the user to enter either:

- 1 a question mark (?) followed by a carriage return (<cr>) to get a list of valid responses to that prompt or
- 2 an abbreviated response. The system then responds with the nearest match. If there is more than one possible match the system responds with SCH0099 and the input followed by a question mark and a list of possible responses. The user can then enter the valid response.

## Prompts and responses

Prompt	Response	Comment
REQ:	a...a	Request (REQ responses begin on page 623)
TYPE:	a...a	Type of data block (Type responses begin on page 626)
MODL	xxx	Model number for Small System and Succession 1000 (1-3 digits)
TBNO	1-254	Table Number for 16-Button DTMF
TN	l s c u	Terminal Number (l s c u ranges are defined on page 625)
CDEN	aa	Card Density (aa = SD, DD, 4D, or 8D)
CUST	xx xx	Customer number
BUID	x...x	Branch Office User ID
MOTN	l s c u	Main Office TN
GRP	1-4095	Group number to be printed
MPHI	YES NO	Meridian Packet Handler Interface
SPWD	xxxx	Security Password
TEN	x...x	Tenant (0 or 1-511)
DN	x...x	Directory Number
DATE	dd mmm yyyy	Date
PAGE	(NO) YES	Data printed on a per-page basis
- ADJUST PAPER THEN <cr>		Adjust Paper so that printing starts at top of sheet
DES	d...d	Designator
CTYP	(XDLC) EDLC	Card type is 16 port DLC Card type is 24 port DLC
NACT	(NO) YES	Next Activity
AACS	NO YES	Application acquired set
SCNO	0-8190	Speed Call list Number
LSNO	0-8190	Speed Call or System Speed Call List Number
RNGE	xxxx yyyy	Range of list entries to be printed, inclusive from first entry number to last entry number.
HTNO	xxxx	Hunt Number
DGRP	0-2045	Dial Intercom Group
DMEM	0-99	Dial Intercom Group (DIG) Member number
FOR	a...a	For telephone type (a...a = 500, 2xxx, SL1, or 3xxx)
KEY	(NO) YES	Print data for multi-line telephones
GRNO	0-63	Group Call Group Number

# LD 20

INFO	aaa	Information for templates (aaa = FRM, USE, USS, or DEF) <b>Note:</b> The USE and DEF responses are valid with the INFO prompt only when "500", "BCS" or "SL1" is entered in response to the FOR prompt.
TEM	x...x	Template
EHNO	x...x	External Hunt DN

---

## Alphabetical list of print reports

### 2.0 Mb/s Digital Trunk Interface (DT2) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	DT2	2.0 Mb/s DTI output
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CUST	xx	Customer number
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Analog set (500 and PBX) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	500	500/2500 type analog sets
	PBX	Private branch exchange sets
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CDEN	SD, DD, 4D, 8D	Single, Double, Quad or Octal Density
CUST	xx	Customer number
TEN	0-511	Tenant
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis
DES	d...d	Print all units with DES "d...d"
	d+	Print all units starting with "d"
	<cr>	Disregard DES

## Automatic Call Distribution Priority Agent (PRI2) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	PRI2	ACD Priority Agents
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CUST	xx	Customer number
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

# LD 20

## Attendant console (ATT, 1250, and 2250) data from LD 12

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	ATT	QCW3 or QCW4 Attendant Console
	1250	M1250 Console
	2250	M2250 Console
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CDEN	SD, DD, 4D, 8D	Single, Double, Quad or Octal Density
CUST	xx	Customer number
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Business Communication Set (BCS) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	BCS	Business Communication Sets
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CDEN	SD, DD, 4D, 8D	Single, Double, Quad or Octal Density
CUST	xx	Customer number
TEN	0-511	Tenant
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis
DES	d...d	Print all units with DES "d...d"
	d+	Print all units starting with "d"
	<cr>	Disregard DES

## Call Pickup Network Wide (CPNW) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	CPNW	Call Pickup Network Wide data
CUST	xx	Customer number

## Channel data: Real Analog, Virtual Analog and Virtual Digital

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	RAC	Real Analog Channels
	VAC	Virtual Analog Channels
	VDC	Virtual Digital Channels
TN	l s c u	Terminal Number (loop, shelf, card, unit)
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Class Modem unit data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	CMOD	CLASS modem unit
TN	l s c u	Terminal Number (loop, shelf, card, unit)
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Data access card (DAC) data

By responding R232, R422 or DAC to the TYPE prompt in LD 20, the configured parameters for each port or the entire DAC may be printed.

If a specific TN is entered, the current settings are uploaded from the unit and printed with database settings. This is useful if parameters have been altered during keyboard or Hayes dialing modifying procedures.

Prompt	Response	Comment
REQ:	PRT, LTN, LUU	Print data, TN, or unit for the TN specified
TYPE:	DAC	Print data for whole DAC
	R232	Print data for the RS-232-C ports
	R422	Print data for the RS-422 ports
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CUST	xx	Customer number
TEN	0-511	Tenant
DATE	dd mmm yyyy	Print data from the date specified
	ACT	Print data from the last Activity
PAGE	(NO) YES	Data printed on a per-page basis
DES	d...d	Print all units with DES "d...d"
	d+	Print all units starting with "d"
	<cr>	Disregard DES

## Dial Intercom Group (DIG) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	DIG	Dial Intercom Group
CUST	xx	Customer number
DGRP	0-2045	Dial Intercom Group
DMEM	0-99	Dial Intercom Group Member number

## Dial Tone Detector (DTD and XTD) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	DTD	Dial Tone Detector data
	XTD	Extended Dial Tone Detector
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CUST	xx	Customer number
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Digital Communications Set data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	DCS	Digital Communications Set
CUST	xx	Customer Number associated with this data block
DMC	l s c	Digital Enhanced Cordless Telecommunications (DECT) Mobility Controller Location

# LD 20

## Digital set (2000 series, 3000, and Aries) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	a...a	Type of data block (Type responses begin on page page 619)
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CDEN	SD, DD, 4D, 8D	Single, Double, Quad or Octal Density
CUST	xx	Customer number
TEN	0-511	Tenant
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Digitone Receiver (DTR) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	DTR	Digitone Receiver data
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CDEN	SD, DD, 4D, 8D	Single, Double, Quad or Octal Density
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Directory number (DNB) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	DNB	Directory number data block
CUST	xx	Customer number
DN	x...x	Print for Directory Number
DATE	dd mmm yyyy	Print data from the date specified
	ACT	Print data from the last Activity
PAGE	(NO) YES	Data printed on a per-page basis
DES	d...d	Print all units with DES "d...d"
	d+	Print all units starting with "d"
	+	Print units with no DES assignment
	<cr>	Disregard DES
ADJUST PAPER THEN <cr>	<cr>	Adjust paper so that printing starts at top of sheet

## Directory number (DNB) range data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	DNB	Directory Number block
CUST	xx	Customer number
DN	xxxx-xxxx	Directory Number range

## Directory number (DNB) selection

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	DNB	Directory Number block
CUST	xx	Customer number
DN	xxxx,xxxx,..	Up to 8 DNs can be entered (separated by a comma)
DATE	dd mmm yyyy	Print data from the date specified
	ACT	Print data from the last Activity
PAGE	(NO) YES	Data printed on a per-page basis
DES	d...d	Print all units with DES "d...d"
	d+	Print all units starting with "d"
	+	Print units with no DES assignment
	<cr>	Disregard DES
ADJUST PAPER THEN <cr>	<cr>	Adjust paper so that printing starts at top of sheet

## Group Call (GRP) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	GRP	Group Call
GRNO	0-63	Group Call Group Number

## Hot Line List (HTL) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	HTL	Hot Line List
CUST	xx	Customer number
RNGE	xxxx...xxxx	Range of Hot Line list entries (0-1000) to be printed for this customer
	<cr>	Print all entries in the Hot Line list

## Hunting (HNT, GHT, and EHT) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	HNT	Hunting
	EHT	External Hunting
	GHT	Group Hunting
CUST	xx	Customer number
HTNO	x...x	Hunt Directory Number
EHNO	x...x	External Hunt Directory Number

# LD 20

## Multifrequency (MFC, MFE, MFR, MFK5, MFK6, MFVE) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	MFC	Multifrequency compelled sender/receiver
	MFE	Multifrequency signaling for Socotel sender/receiver
	MFR	Multifrequency receiver (for Feature group D)
	MFVE	Multifrequency versatile units
	MFK5	2/5 Spanish KD3 MF signaling
	MFK6	2/6 Spanish KD3 MF signaling
TN	l s c u	Terminal Number (loop, shelf, card, unit)
	l ch	DTI/PRI loop and channel
	s ch	DTI/PRI shelf and channel
CDEN	SD, DD, 4D, 8D	Single, Double, Quad or Octal Density
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Out of Service unit (OOSLT and OOSMLT) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	OOSLT	Single line TNs that are Out-of-Service
	OOSMLT	Multi-line TNs that are Out-of-Service
TN	l s c u	Terminal Number associated with the unit

## Power (PWR) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	PWR	Power data block
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CDEN	SD, DD, 4D, 8D	Single, Double, Quad or Octal Density
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Pretranslation (PRE) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	PRE	Pretranslation
CUST	xx	Customer number

## SL1 set data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	SL1	SL1 and M1109 sets, QCW and M1250 console
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CDEN	SD, DD, 4D, 8D	Single, Double, Quad or Octal Density
CUST	xx	Customer number
TEN	0-511	Tenant
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis
DES	d...d	Designator

# LD 20

## Special Service List (SSL) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	SSL	Special Service List
SSL	1-15	Special Service List number

## Speed call lists (SCL) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	SCL	Regular and System Speed Call Lists
LSNO	0-8190	List Number for Speed Call or System Speed Call
	<cr>	Print for all lists
RNGE	xxxx xxxx	Range of Speed Call entries (0-1000) to be printed
	<cr>	Print all entries

## Tandem Connection (TCON) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	TCON	Tandem Connection for Meridian Packet Handler and PRI connections

## Template (TEM) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	TEM	Templates
FOR	aaa	Print template information for telephone type
INFO	FRM	Print key/feature assignment template
	USE	Print number of users of the template <b>Note:</b> The USE response is valid with the INFO prompt only when "500", "BCS" or "SL1" is entered in response to the FOR prompt.
	USS	Print TN using the template
	DEF	Print number of templates defined and the number of templates allowed <b>Note:</b> The DEF response is valid with the INFO prompt only when "500", "BCS" or "SL1" is entered in response to the FOR prompt.
TEMP	xxxx	Telephone template number
	<cr>	Print all templates

## Terminal Number Block (TNB) data for telephones and trunks

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	TNB	Terminal Number Block
TN	l s c u,...	Terminal Number (Up to 6 TNs can be entered)
CDEN	SD, DD, 4D, 8D	Card Density
CUST	xx xx	Customer number
MPHI	YES, NO	Meridian Packet Handler Interface
SPWD	xxxx	Security Password
TEN	0, 1-511	Tenant
DATE	dd mmm yyyy	Print data from date specified
PAGE	(NO) YES	Date printed on a per page basis
DES	d...d, d+, +	Designator
NACT	(NO) YES, END	Next Activity
AACS	a...a	Application acquired set (a...a = (NO), AGTH, or AGT)
ASID	x...x	Application Service ID
SFNB	1 2 ...	Set Feature Notification Bitmap
SFRB	1 2 ...	Set Feature Route Bitmap
USFB	1 2 ...	Unsolicited Status Message (USM) Filter Bitmap
CALB	1 2 ...	Call Filter Bitmap
SMCB	1-17	Print set message control bitmap
SMOO	(NO) YES	(Do not set) Set message optimize option

## Terminal Number Block (TNB) range data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	TNB	Terminal Number Block
TN	l s c u-l s c u	Terminal Number Range

## Tone Detector (TDET) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	TDET	Tone Detector data
TN	l s c u	Terminal Number (loop, shelf, card, unit)
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Trunk data: All Trunks

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	TRK	Trunk data block
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CDEN	SD, DD, 4D, 8D	Single, Double, Quad or Octal Density
CUST	xx	Customer number
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Trunk data: Specific Trunk types

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	ADM	Add-on Data Module
	AWR	Automatic Wake-Up RAN/Music trunks
	CAA	Common Control Switching Arrangement
	CAM	CAMA trunks
	COT	Central Office trunks
	CSA	Common control switching arrangement access line
	DIC	Dictation trunks
	DID	Direct inward dial trunks
	FEX	Foreign Exchange trunks
	FGDT	Feature Group D trunks
	IDA	Integrated digital access trunks
	ISA	Integrated services access trunks (ISDN)
	MCU	Meridian Communications Unit
	MDM	Modem/Data Module
	MUS	Music trunks
	CBCT	NI-2 CBC trunk
	PAG	Paging trunks
	R232	RS-232 mode data
	R422	RS-422 mode data
	RAN	Recorded announcement trunks
	RCD	Recorder trunks
	RDC	Real digital channel
	RLM	Release Link Main trunks
	RLR	Release Link Remote trunks
	TIE	TIE trunks
	WAT	Wide Area Telephone service trunks
TN	l s c u	Terminal Number (loop, shelf, card, unit)
CDEN	SD, DD, 4D, 8D	Single, Double, Quad or Octal Density
CUST	xx	Customer number
DATE	dd mmm yyyy	Print data from date specified
	ACT	Print data from last activity
PAGE	(NO) YES	Data printed on a per page basis

## Unused Card (LUC) data

Prompt	Response	Comment
REQ:	LUC	List Unused Card slots
TN	l s c	Terminal Number (loop, shelf, card)
	s ch	DTI/PRI shelf and channel
	l ch	DTI/PRI loop and channel

## Unused Directory Number (LUDN) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	LUDN	List Unused Directory Numbers
CUST	xx	Customer number
DN	xxxx-xxxx	DN range

## Unused Units (LUU) data

Prompt	Response	Comment
REQ:	LUU	List Unused Units
TYPE:		Peripheral equipment requiring TNs:
	500	Single line or analog sets
	SL1	SL-1 sets, QCW and M1250 consoles
	2000	Digital sets and M2250 consoles
	DTR	Digitone Receiver
	DSL	Digital Subscriber Loop
	MCU	Meridian Communications Unit
	TRK	All trunks
	a...a	Any specific trunk type (e.g., COT, DID, FEX, WAT, etc.)
TN	l s c u	Terminal Number

# LD 20

## Unused Voice or Data unit (LUVU or LUDU) data

Prompt	Response	Comment
REQ:	LUVU	List Unused Voice Units
	LUDU	List Unused Data Units
TYPE:		Peripheral equipment requiring TNs:
	500	Single line or analog sets
	SL1	SL-1 sets, QCW and M1250 consoles
	2000	Digital sets and M2250 consoles
	DTR	Digitone Receiver
	DSL	Digital Subscriber Loop
	MCU	Meridian Communications Unit
	TRK	All trunks
	a...a	Any specific trunk type (e.g., COT, DID, FEX, WAT, etc.)
TN	xx...xxxx	Terminal Number

## Voice Mailbox (VMB) data

Prompt	Response	Comment
REQ:	PRT	Print
TYPE:	VMB	Voice Mailbox information
CUST	<cr>	Customer number automatically appears. No entry is needed.
DN	xxxx	Print for Directory Number
VMB_STATE	nnnn	Print based on Voice Mailbox State

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
AACS	NO YES	Application acquired set The TN is not acquired by an application The TN is acquired by an application	ngcc-22
ADJUST PAPER THEN <cr>	<cr>	Adjust paper then <cr> to start printing Start printing	basic-1
ASID	x...x	Application Service ID from which the acquired request originated  The ASID is used for sending the monitor/control messages to the application. The ASID value is updated based on the applications's Acquire message for the TN. Since the AML over Ethernet (ELAN) is used to communicate between the Meridian 1 and the application(s), the value of the existing VSID might be used to uniquely identify the application that has acquired this device.  ASID is printed if AACS = YES.	ngcc-22
BUID	x...x	Branch Office User ID  For Succession 1000 system	sbo-2
CALB	1 2 ...	Call Filter Bitmap  CALB applies to messages such as PCI, DN update, etc.  This bitmap is downloaded by the application which is used to control the sending of messages on behalf of the acquired TN. A numeric value would only be printed if the corresponding set message is enabled.  CALB is printed if AACS = YES.	ngcc-22
CDEN	SD DD 4D 8D <cr>	Single Card Density Double Card Density Quadruple Card Density Octal Card Density For all card densities	basic-7

# LD 20

Prompt	Response	Comment	Pack/Rel
CTYP	(XDLC) EDLC	Card type is 16 port DLC Card type is 24 port DLC  <b>Note:</b> EDLC not supported on Small System and Succession 1000	basic-25
CUST	xx xx  <cr>	Customer number as defined in LD 15 Print data range from first to last customer. Not prompted when: <ol style="list-style-type: none"><li>1. REQ = LUU or LUC</li><li>2. TYPE = SCL, DIG or TEM</li><li>3. a complete TN is entered</li></ol> Print data blocks for all customers	basic-1
DATE	dd mmm yyyy  <cr> ACT	Print data from date specified. Where:  dd = 1-31 mmm = JAN-DEC yyy = year (e.g. 1993)  DATE is prompted for TN related data. Print data and show last activity date. Print data from last activity date.	basic-1
DES	d...d  d+ + <cr>	ODAS Station Designator Print all units with ODAS designator. Enter a 1-6 alphanumeric character representing an Office Data Administration System (ODAS) Station Designator. Print units starting with ODAS designator d Print units with no ODAS designator assigned Disregard ODAS designator DES is prompted on TN related data The printing of data is subject to restrictions imposed by responses to TN and DATE.	odas-1
DGRP	0-2045 <cr>	Dial Intercom Group DIG numbers per customer Print all Dial Intercom Groups for customer DGRP is prompted when TYPE = DIG	basic-1
DMC	l s c  c	Digital Enhanced Cordless Telecommunications (DECT) Mobility Controller Location  Small System and Succession 1000 format	mc32-25

Prompt	Response	Comment	Pack/Rel
DMEM	0-99 <cr>	Dial Intercom Group (DIG) Member number Print all DIG member numbers	basic-1
DN		Directory Number	basic-19
	xxxx <cr> xxxx <space>	Print data block for DN Print data blocks for all DN  If a space is entered after the Directory Number the system will reprompt for DN. A maximum of six DNs can be stacked and printed at one time.	
	x<cr> xx<cr> xxx<cr>	All DNs starting with first digit x (X000-X999) All DNs starting with first two digits xx (XX00-XX99) All DNs starting with first three digits xxx (XXX0-XXX9)	
	x-<cr> x-y<cr> xx-yyy<cr>	All DNs between X000-9999 All DNs between DN X000 through Y999 All DNs between DN XX00 through YYYY	
	xxxx xxxx xxxx-yyyy	Two specific DNs. Up to a maximum of 8 DNs. All DNs between XXXX and YYYY	
EHNO	xxxx	External HUNT DN Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. EHNO is prompted when TYPE = EHT	eht-10
FOR		Print template information for telephone type	basic-1
	500	Print data for 500/2500 telephones.	
	2xxx	Print data for 2000 type telephones (specify type).	
	3xxx	Print data for 3000 type telephones (specify type)	basic-24
	SL1	Print data for SL-1 telephones.	
	i2002	Print data for i2002 Internet Telephones, Succession 1000	basic-2
	i2004	Print data for i2004 Internet Telephones	basic-25
	i2050	Print data for i2050 Internet Telephones, Succession 1000	basic-2
GRNO	0-63  <cr>	Group Call Group Number. Prompted when TYPE = GRP.  Print all group call groups.	grp-1

# LD 20

Prompt	Response	Comment	Pack/Rel
GRP	1 - 4095 <CR>	Group number to be printed All groups assigned to a speed call list are printed.	grp-21
HTNO	x...x	Hunt Directory Number  Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Prompted when TYPE = HNT.	basic-1
INFO	FRM USE  USS DEF	Information for Templates Print key/feature assignment template Print number of users of template  <b>Note:</b> Valid with the INFO prompt only when "500", "BCS" or "SL1" is entered in response to the FOR prompt. Print TN using the template Print number of templates defined and number allowed  <b>Note:</b> Valid with the INFO prompt only when "500", "BCS" or "SL1" is entered in response to the FOR prompt. Prompted when TYPE = TEM	basic-1
LSNO	0-8190	Speed Call Lists  When inputting list number for printout, non-DN input exceeding 4 digits may be truncated. Only the 4 right-most digits will be accepted and printed	basic-1
MODL	xxx	Model number for Small System (1-3 digits) Model number for Succession 1000 (1-3 digits)	basic-15 basic-1
MOTN	<cr> l s c u	Main Office TN  Accept default when Succession 1000 is the Main Office When Main Office is a Large System. For Succession 1000	sbo-2
MPHI	YES NO	Meridian Packet Handler Interface. Prompted when TYPE = MCU. Respond Yes if using the MCU for MPH interfaces.	mph-19
NACT	(NO) YES END	Next Activity Return to REQ prompt Print current system data and end overlay End overlay activity	odas-1

Prompt	Response	Comment	Pack/Rel
PAGE	(NO) YES	Data printed on a per-page basis Prompted only on TN related data	basic-1
REQ:	END LTN LUC LUDU LUU LUVU PRT	Request Exit overlay program List TN of TYPE specified Print Unused Card data blocks of TYPE specified List Unused Data Units Print Unused Unit data blocks of TYPE specified List Unused Voice Units Print data block for the TYPE specified.  The following is a list of valid responses. For further information, consult the appropriate Overlay program.  <b>LD 32:</b> CDSP CMIN CONV CPWD DISC DISI DISL DISN DISS DISU DSCT DSPS DSXP ENCT ENLC ENLG ENLL ENLN ENLS ENLU ENPS ENXP IDC IDCS IDU LBSY LDIS LIDL LMNT PBXT SDLC STAT SUPL TRK XNTT XPCT XPEC  <b>LD 10 or 11:</b> CHG CPY MOV NEW OUT	basic-1
RNGE	xxxx yyyy <cr>	Range of list entries to be printed, inclusive from first entry number to last entry number. Print All members of a specified SCL or SSC list.	optf-1
SCNO	0-253 0-8190 <cr>	Speed Call list Number Speed Call list Number Print all lists. Prompted when TYPE = SCL	optf-1
SFNB	1 2 ...	Set Feature Notification Bitmap  SFNB is used for messages such as: SFN (login), SFN (logout), ...  This bitmap is downloaded by the application which is used to control the sending of SFN messages on behalf of the acquired TN. A numeric value is printed only if the corresponding message is enabled.  SFNB is printed if AACS = YES.	ngcc-22

# LD 20

Prompt	Response	Comment	Pack/Rel
SFRB	1 2 ...	<p>Set Feature Route Bitmap</p> <p>SFRB is used for messages such as: SFR (login), SFR (logout), ...</p> <p>This bitmap is downloaded by the application which is used to control the sending of SFR messages on behalf of the acquired TN. A numeric value is printed only if the corresponding message is enabled.</p> <p>SFRB is printed if AACS = YES.</p>	ngcc-22
SPWD	xxxx	<p>Security Password. This prompt appears when:</p> <ol style="list-style-type: none"><li>1. the Station Specific Authcode package (229) is equipped.</li><li>2. the security password is defined in LDs 10 and 11.</li></ol>	ssau-19
TBNO	1-254	<p>Table Number for 16-Button DTMF</p> <p>Prompted when TYPE = ABCD</p>	supp-10
TEM	xxxxxxx <cr>	<p>Template number</p> <p>Print data for all templates.</p> <p>Prompted when TYPE = TEM</p>	basic-1
TEMP	xxxx	<p>Telephone template number. Enter &lt;cr&gt; to print all templates.</p>	basic-1
TEN	0 1-511 <cr>	<p>Tenant</p> <p>Shared customer resource stations</p> <p>Tenant Service stations</p> <p>Print data blocks for all tenants.</p>	tens-7

Prompt	Response	Comment	Pack/Rel
TN		Terminal Number	basic-1
	loop	Print data of the specified TYPE for this loop.	
	l s	Print data of the specified TYPE for this loop and shelf	
	l s c	Print data of the specified TYPE for this loop, shelf and card	
	l s c u	Print data of the specified TYPE for this loop, shelf, card and unit.	
	sl ch	Print data of the specified TYPE for this shelfloop and channel (format for Digital Trunk and Primary Rate Interfaces).	
	card	Print data of the specified TYPE for this card (Small System and Succession 1000).	
	c 0 0 u	For Small System and Succession 1000	
	c u	Print data of the specified TYPE for this card and unit (Small System and Succession 1000).	
	c ch	Print data of the specified TYPE for this card and channel (digital trunks only) (Small System and Succession 1000).	
	n . . . n<space>	System will prompt for TN. A maximum of six TNs can be stacked and printed at one time.	
	<cr>	Print data for all TNs of the specified TYPE.	
	l s c u, l s c u	List of TNs (up to 6)	
	l s c u, sl ch	A TN and a trunk shelfloop/channel can be entered on the same line	
	l s c, l s c	All units within the specified starting and ending cards	
	l s, l s c u	All units, including the specified starting shelf and ending TN	

# LD 20

Prompt	Response	Comment	Pack/Rel
	I s c u	All TNs starting with the specified TN and ending with the last TN  Not prompted when TYPE = SCL, HNT, DIG, TEM, or GRP	
	loop, I s, I c u, I s c u, I ch	I = (0-255) systems with Fibre Network Fabric	fnf-25
TYPE:		Type of data block	basic-1
	500 500 M	500/2500 telephone Small System and Succession 1000 Model	
	1250	M1250 Console	
	2000 2002 2004 2003 2050	M2000 type digital telephones i2002 Internet telephone i2004 Internet telephone 2003 Digital telephone i2050 Internet telephone	
	2006 2006 M	M2006 Digital telephone Small System and Succession 1000 Model	
	2008 2008 M	M2008 Digital telephone Small System and Succession 1000 Model	
	2009 2009 M	M2009 Digital telephone Small System and Succession 1000 Model	
	2016	M2016 Digital telephone	
	2018 2018 M	M2018 Digital telephone Small System and Succession 1000 Model	
	2112 2112 M	M2112 Digital telephone Small System and Succession 1000 Model	
	2216	M2216 Digital telephone (ACD terminal)	
	2216 M	Small System and Succession 1000 Model	

Prompt	Response	Comment	Pack/Rel
	2250	M2250 Console	
	2317	M2317 Digital telephone	
	2317 M	Small System and Succession 1000 Model	
	2616	M2616 Digital telephone	
	2616 M	Small System and Succession 1000 Model	
	3000	M3000 Digital Touchphone	
	3000 M	Small System and Succession 1000 Model	
	4020	M4020 Model	
	ABCD	16-Button DTMF	
	ADM	Add-on Data Module	
	ADM M	Data port interfacing with a data line card Small System and Succession 1000 Model	
	ARIE	Aries (M2006, M2008, M2016S, M2216 and M2616) sets and Meridian Communications Unit (MCU) data blocks	
	ATT	QCW3 or QCW4 Attendant Console	
	ATVN	Autovon trunks	
	AWR	Automatic Wake Up RAN/Music trunk	
	AWR M	Small System and Succession 1000 Model	
	BCS	Business Communication Set	
	CAA	Common Control Switching Arrangement (CCSA) Automatic Number Identification (ANI) trunk data block	
	CAA M	Small System and Succession 1000 Model	
	CAM	CAMA trunk data block	
	CAM M	Small System and Succession 1000 Model	
	COT	Central Office Trunk (PSTN) data block	
	COT M	Small System and Succession 1000 Model	
	CPNW	Call Pickup Network Wide data	

# LD 20

Prompt	Response	Comment	Pack/Rel
	CSA	Common Control Switching Arrangement access line	
	CSA M	Small System and Succession 1000 Model	
	DAC	Data Access Card	
	DCS	Digital Communications Set	mc32-25
	DIC	Dictation trunk data block	
	DIC M	Small System and Succession 1000 Model	
	DID	Direct Inward Dialing trunk data block	
	DID M	Small System and Succession 1000 Model	
	DIG	Dial Intercom Group	
	DNB	Directory Number Block	
	DSL	Digital Subscriber Loop (S/T or U I/F for ISDN BRI)	
	DT2	2.0 Mb/s DTI output only	
	DTD	Dial Tone Detector	
	DTR	Digitone Receiver	
	EHT	External Hunting	
	FEX	Foreign Exchange trunk	
	FEX M	Small System and Succession 1000 Model	
	FGDT	Feature Group D Trunk	
	GHT	Group Hunt	
	GRP	Group call	
	HNT	Hunting	
	HTL	Hot Line	
	i2004	i2004 Internet Telephone	basic-25
	IDA	Integrated Digital Access	

Prompt	Response	Comment	Pack/Rel
	ISA	Integrated Services Access trunk (ISDN)	
	LUDN	List Unused Directory Numbers.	
	MCU	Meridian Communications Unit	
	MDM	Modem/Data Module. Data port interfacing with QPC60 500/2500 type card	
	MDM M	Small System and Succession 1000 Model	
	MFC	Multifrequency Compelled sender/receiver data block	
	MFE	Multifrequency Signaling for Socotel sender/receiver	
	MFK5	2/5 Spanish KD3 MF Signaling	kd3-20
	MFK6	2/6 Spanish KD3 MF Signaling	kd3-20
	MFR	Multifrequency Receiver (for Feature Group D)	
	MFVE	Print Multifrequency Versatile units	
	MUS	Music trunk	
	MUS M	Small System and Succession 1000 Model	
	OOSMLT	Out-of-Service Multi-Line Terminal	xpe-20
	OOSLT	Out-of-Service Single Line Terminal	xpe-20
	PAG	Paging trunk	
	PAG M	Small System and Succession 1000 Model	
	PBX	PBX sets	
	PRE	Pretranslation	
	PRI2	ACD Priority Agents	
	PWR	Power data block	
	R232	NT7D16 Data Access Card	
	R232 M	(DAC) port in RS-232 Data mode data block Small System and Succession 1000 Model	

# LD 20

Prompt	Response	Comment	Pack/Rel
	R422	NT7D16 Data Access Card (DAC) port in RS-422 mode data block	
	R422 M	Small System and Succession 1000 Model	
	RAC	Real Analog Channel	
	RAN	Recorded Announcement trunk	
	RAN M	Small System and Succession 1000 Model	
	RCD	Recorder trunk	
	RDC	Real Digital Channel	
	RLM	Release Link Main trunk	
	RLM M	Small System and Succession 1000 Model	
	RLR	Release Link Remote trunk	
	RLR M	Small System and Succession 1000 Model	
	SCL	Regular and System Speed Call Lists	
	SL1	SL-1 and M1109 sets, QCW and M1250 console (Not supported on Small System and Succession 1000)	
	SSL	Special Service List	
	TCON	Tandem Connection for MPH and PRI connections	
	TDET	Tone Detector	
	TEM	Template	
	TIE	TIE trunk	
	TIE M	Small System and Succession 1000 Model	
	TNB	Terminal Number	
	TRK	Trunk data block	
	VAC	Virtual Analog Channel	
	VDC	Virtual Digital Channel	
	VMB	Voice Mailbox information	

Prompt	Response	Comment	Pack/Rel
	WAT WAT M	Wide Area Telephone Service trunk Small System and Succession 1000 Model	
	XTD	Extended Dial Tone Detector and Digitone Receiver	
	<cr>	Print all	
USFB	1 2 ...	<p>Unsolicited Status Message (USM) Filter Bitmap</p> <p>USFB applies to messages such as:</p> <p style="padding-left: 40px;">Onhook, Offhook, Ringing, Active, Disconnect, Unringing, Hold, Restore, Ready, Not Ready, Walkaway, Walkaway Return, Reserved, Unreserved, ...</p> <p>This bitmap is downloaded by the application which is used to control the sending of USM messages on behalf of the acquired TN. A numeric value would only be printed if the corresponding message set is enabled.</p> <p>USFB is printed if AACS = YES.</p>	ngcc-22
VMB_STATE	nnnn	Print based on Voice Mailbox State	vmba-19

# LD 20

---

## LD 21: Print Routine 2

---

Overlay program 21 allows data to be printed for the following:

- customer data blocks
- code restriction data blocks
- route data blocks
- trunks within a route
- ATM routes
- ATM schedules
- CAS keys
- associated TN

### Set Relocation data

This prints the sets which have “relocated out”, but have not “relocated back in”. With Automatic Set Relocation the set's serial number, NT code, color code, and release are also printed.

### Input Processing

Prompts ending with a colon (:) allow the user to enter either:

- a question mark (?) followed by a carriage return (<cr>) to get a list of valid responses to that prompt, or
- an abbreviated response, the system then responds with the nearest match. If there is more than one possible match the system responds with SCH0099 and the input followed by a question mark and a list of possible responses. The user can then enter the valid response.

# LD 21

## Prompts and responses

---

Prompt	Response	Comment
REQ	aaa	Request (aaa = END, LCS, LRT, LTM, or PRT)
TYPE	a...a	Type of data block (TYPE responses begin on page 643)
CUST	xx	Customer number associated with this data block
SIZE	0-4000	CLID table entry size
RNGE	aa ... aa	CLID entry or entries to be printed
HOUR	0-23	All routes tested by ATM for this hour
OPR	(NO) YES	Outpulsing Route
ROUT	0-511	Route number
ACOD	x...x	Access Code for route
AACR	(NO) YES	The route (is not)/is acquired by the application
ASID	x...x	Application Service ID from which the acquired request originated
SFNB	1 2 ...	Set Feature Notification Bitmap
USFB	1 2 ...	Unsolicited Status Message (USM) Filter Bitmap
CALB	1 2 ...	Call Filter Bitmap

---

## Alphabetical list of print reports

### Application Module Link (AML) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	AML	Application Module Link
CUST	xx	Customer number

### Attendant Console (ATT) data from LD 15

Prompt	Response	Comment
REQ	PRT	Print
TYPE	ATT	Attendant consoles
CUST	xx	Customer number

### Automatic Number Identification (ANI) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	ANI	Automatic Number Identification
CUST	xx	Customer number
CIS_ANI	(NO) YES	Print (do not print) CIS ANI
R_RANGE	xx yy	ANI entries for set to be printed
CACC	(NO) YES	CAC Conversion Table Option
- MFC_ENT_R 0		
	(0)-31	CAC Conversion Table (MFC CAC into CIS CAC)
- CIS_ENT_R 0		
	(0)-31	CAC Conversion Table (CIS CAC into MFC CAC)

# LD 21

## Automatic Trunk Maintenance (ATM) route data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	ATM	ATM routes
CUST	xx	Customer number
ROUT	0-511	Route number to be printed

## Automatic Trunk Maintenance (ATM) schedule data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	SCH	ATM schedules
CUST	xx	Customer number
HOUR	0-23	Print all routes tested by ATM for this hour
	<cr>	Print routes tested for all hours

## Automatic Wake Up (AWU) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	AWU	Automatic Wake Up
CUST	xx	Customer number

## Call Detail Recording (CDR) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	CDR	CDR and Charge Account
CUST	xx	Customer number

### Call Redirection (RDR) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	RDR	Call Redirection options
CUST	xx	Customer number

### Centralized Attendant Service (CAS) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	CAS	Centralized Attendant Service
CUST	xx	Customer number

### Centralized Attendant Service (CASK) Key

Prompt	Response	Comment
REQ	PRT	Print
TYPE	CASK	Centralized Attendant Service key
CUST	xx	Customer number

### Code Restriction (CRB) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	CRB	Code Restriction data
CUST	xx	Customer number
ROUT	0-511	Route number to be printed
ACOD	xxxx	Access Code

# LD 21

## Controlled Class of Service (CCS) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	CCS	Controlled Class of Service
CUST	xx	Customer number

## Customer data block (CDB)

Prompt	Response	Comment
REQ	PRT	Print
TYPE	CDB	Customer data block  <b>Note:</b> If you need information regarding System Passwords, print PWD_DATA field by itself. PWD_data will not be provided by printing CDB.
CUST	xx	Customer number

## Features and options (FTR) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	FTR	Features and Options
CUST	xx	Customer number
TBL	(0)-31	Tone Table Number

## Flexible Code Restriction (FCR) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	FCR	New Flexible Code restrictions
CUST	xx	Customer number

### Flexible Feature Codes (FFC) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	FFC	Flexible Feature Code
CUST	xx	Customer number

### Hospitality Management (HSP) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	HSP	Hospitality Management options
CUST	xx	Customer number

### Integrated Message Service (IMS) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	IMS	Integrated Message Service
CUST	xx	Customer number

### Intercept Computer Update (ICP) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	ICP	Intercept computer options
CUST	xx	Customer number

# LD 21

## Intercept Treatments (INT) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	INT	Intercept treatment options
CUST	xx	Customer number

## ISDN Signaling Link (ISLL) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	ISLL	ISDN Signaling Link trunk TN

## Listed Directory Numbers (LDN) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	LDN	Departmental Listed Directory Numbers
CUST	xx	Customer number

## Multi-Party Operations (MPO) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	MPO	Multi-party options
CUST	xx	Customer number

## Networking (NET) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	NET	ISDN and ESN networking options
CUST	xx	Customer number

## Night Service (NIT) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	NIT	Night Service
CUST	xx	Customer number

## Off Hook Alarm Security (OAS) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	OAS	Off-Hook Alarm Security
CUST	xx	Customer number

## Password (PWD) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	PWD	Customer Related Passwords
CUST	xx	Customer number
PWD2	xxxx	Level 2 Password

# LD 21

## Periodic Pulse Metering (PPM) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	PPM	Periodic Pulse Metering
CUST	xx	Customer number

## Recorded Overflow Announcement (ROA) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	ROA	Recorded Overflow Announcement options
CUST	xx	Customer number

## Route Data Block (RDB)

Prompt	Response	Comment
REQ	PRT	Print
TYPE	RDB	Route Data Block
CUST	xx	Customer number
ROUT	0-511	Route number to be printed
	<cr>	Print data for all routes
ACOD	xxxx	Route access code

## Set Relocation (SRDT) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	SRDT	Recent Set Relocation activity

---

## Test lines (TST) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	TST	Test lines
CUST	xx	Customer number

## Timers (TIM) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	TIM	Timer options
CUST	xx	Customer number

## Trunk Members (LTM) data

Prompt	Response	Comment
REQ	LTM	List Trunk members
CUST	xx	Customer number
ROUT	0-511	Route number to be printed
ACOD	xxxx	Route Access Code

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
AACR	(NO) YES	The route is not acquired by the application The route is acquired by the application	ngcc-22
ACOD	x...x  <cr>	Access Code for route Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Print data for all route access codes This prompt appears when ROUT = <cr>	basic-1
ASID	x...x	Application Service ID from which the acquired request originated  ASID is used for sending route status messages. The ASID value is updated based on the application's Acquire message for the route. Since the AML over Ethernet (ELAN) is used to communicate between the Meridian 1 and other applications, the VSID value might be used to uniquely identify the application which has acquired that device.	ngcc-22
CALB	1 2 ...	Call Filter Bitmap  CALB applies to messages such as PCI, DN update, etc.  This bitmap is downloaded by the application which is used to control the sending of messages on behalf of the acquired TN. A numeric value would only be printed if the corresponding set message is enabled.  CALB is printed if AACR = YES.	ngcc-22
CUST	xx xx          <cr>	Customer number Print data range from first to last customer  Not prompted when: REQ = LUU or LUC TYPE = SCL, DIG or TEM a complete TN is entered  Print data blocks for all customers	basic-1

Prompt	Response	Comment	Pack/Rel
DAPC	(DAPA) DAPD	Dial Access Prefix on Console Display Access Prefix Allowed Display Access Prefix Denied	isdn-24
FTR_DATA	(NO) YES	Change Features and options	
HOUR	0-23 <cr>	All routes tested by ATM for this hour Print routes tested by ATM for all hours	
PCA	(NO) YES	Personal Call Assistant, where:  OFF = Turns PCA off at the customer level ON = Turns PCA on at the customer level  <b>Note:</b> Configuration of the PCA is preserved and enabled regardless of whether or not the feature is enabled.	pca-3.0
OPR	(NO) YES	Outpulsing Route This prompt appears when OPOA is equipped. Prompted on TN related data	
REQ	END LCS	Request Exit overlay program List Configured Customers	basic-1
	LRT	For Succession 1000 List configured Routes associated with a customer	basic-2
	LTM PRT	For Succession 1000 Print trunk route by TN and member number Print data block for the TYPE specified.	basic-2
RNGE	aa ... aa	CLID entry to be printed  You may print one CLID entry or several CLID entries. If you want to print several CLID entries, separate each entry with a comma. Each CLID entry must be between 0 and the number entered for the prompt SIZE in LD 15.	isdn-22
ROUT	0-511 <cr>	Route number Print data for all routes This prompt appears when TYPE = CRB or RDB	basic-1

# LD 21

Prompt	Response	Comment	Pack/Rel
SFNB	1 2 ...	<p>Set Feature Notification Bitmap</p> <p>SFNB is used for messages such as: SFN (login), SFN (logout), ...</p> <p>This bitmap is downloaded by the application which is used to control the sending of SFN messages on behalf of the acquired TN. A numeric value is printed only if the corresponding message is enabled.</p> <p>SFNB is printed if AACR = YES.</p>	ngcc-22
SIZE	- - -	<p>CLID table entry size.</p> <p>The SIZE prompt and the SIZE value print out automatically after the CUST prompt.</p>	isdn-22
TPDN	yyyy	<p>Target PCA DN, where:</p> <p>yyyy = the primary DN</p> <p>TPDN is prompted only if PCA is set to ON.</p> <p>If there is no DN configured against the HOT P key in LD 11, this value is used to extend the call using the PCA feature.</p> <p>Enter X to remove. However, if there is at least one PCA with no target DN configured in LD 11, then this operation does not succeed.</p>	pca-3.0
TYPE		<p>Type of data block</p> <p>AML_DATA Application Module Link</p> <p>ANI_DATA Automatic Number Identification numbers</p> <p>ATM Automatic Trunk Maintenance (ATM) data block</p> <p>ATT_DATA QCW3 or QCW4 Attendant Console</p> <p>AWU_DATA Enable Automatic Wake-up</p> <p>CASK Centralized Attendant Service (CAS) key data block</p> <p>CAS_DATA Centralized Attendant Service</p> <p>CCS_DATA Controlled Class of Service options</p>	basic-1

Prompt	Response	Comment	Pack/Rel
	CDB	Customer Data Block <b>Note:</b> If you need information regarding System Passwords, print PWD_DATA field by itself. PWD_data will not be provided by printing CDB.	
	CDR_DATA	Call Detail Recording	
	CLID	Calling Line Identification entry data	
	CRB	Code Restriction data block	
	FCR_DATA	New Flexible Feature code options	
	FFC_DATA	Flexible Feature Codes	
	FTR_DATA	Feature	
	HSP_DATA	Hospitality	
	ICP_DATA	Intercept Positions and interrogation sets. Prompted when REQ = PRT	
	IMS_DATA	Integrated Messaging System	
	INT_DATA	Alarm ring for Internal calls	
	ISLL	IASL ISDN Signaling Link data block. This prompt appears when REQ = PRT.	
	LDN_DATA	Listed Directory Number	
	MON_DATA	Print Monitor data	
	MPO_DATA	Multi-party options	
	NET_DATA	ISDN and ESN networking options	
	NIT_DATA	Night Service options	
	NPID	Numbering Plan Digit or Information Digit table	
	OAS_DATA	Off-Hook Alarm Security options	
	PPM_DATA	Periodic Pulse Metering options	

# LD 21

Prompt	Response	Comment	Pack/Rel
	PWD_DATA	Print the system Passwords	
	RDB	Route Data Block A printout of a route with the Night Key for DID Digit Manipulation (NKDM) active will show * opposite the value for DCNO or NDNO.	
	RDR_DATA	Call Redirection	
	ROA_DATA	Recorded Overflow Announcement	
	SCH	Schedule data block for ATM	
	SDP	Secure data password	
	SRDT	Set Relocation Data block	
	TIM	Timer options	
	TIM_DATA	System Speed Call	
	TST_DATA	Loop Test trunk data	
USFB	1 2 ...	Unsolicited Status Message (USM) Filter Bitmap USFB applies to messages such as: Onhook, Offhook, Ringing, Active, Disconnect, Unringing, Hold, Restore, Ready, Not Ready, Walkaway, Walkaway Return, Reserved, Unreserved, ... This bitmap is downloaded by the application which is used to control the sending of USM messages on behalf of the acquired TN. A numeric value would only be printed if the corresponding message set is enabled. USFB is printed if AACR = YES.	ngcc-22

---

---

## LD 22: Print Routine 3

---

Overlay program 22 allows data to be printed for the following:

- Configuration Record
- DN to TN Matrix
- System Password number
- System Loop Limits
- software version
- tape ID
- issue number
- equipped feature packages
- System Incremental Software Management (ISM) parameters

When printing the DN block, “MARP” is output prior to the DES if it is the MARP TN. Refer to *Features and Services* (553-3001-306) for an explanation of the MARP feature.

### **Audit trail for Limited Access to Overlays (LAPW)**

You must be logged in with the PWD1 or PWD2 password in order to print the Audit Trail. Printing of the Audit Trail deletes the Audit Trail information and resets the buffer.

### **Packages equipped**

This prompt sequence prints the equipped software packages. The packages are printed in numerical order by package number, accompanied by the mnemonic. In addition, you can get the status of an individual package.

## Issue and release

If the system has a “patch”, then a “+” is printed next to the issue number.

## Prompts and responses

Prompt	Response	Comment
REQ:	a...a	Request (a..a = END, ISS, ISSP, PRT, PWD, ROM, SLL, SLT, or TLD)
TYPE:	a...a	Type of data block (TYPE responses begin on page 659)
PWD2	xxxx	Password 2
CUST	xx	Customer number associated with this data block
DN	xxxx	Print for Directory Number
CUST	xx	Customer number associated with this data block
DN	xxxx	Print for Directory Number
DATE	dd mmm yyy	ACT Date
PAGE	(NO) YES	Data printed on a per-page basis
- ADJUST PAPER THEN	<cr>	
	<cr>	Adjust paper so that printing starts at top of sheet.
DES	d...d	Designator
NACT	(NO) YES	Next Activity
- VHST	aaa	View History File (aaa = (%ON) or %OFF)

## Alarm and Exception Filter (ALARM) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	ALARM	Print Filter and Exception tables. Must have Alarm Filtering (AFTR) package 243.

### Audit trail (AUDT) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	AUDT	Audit trail. Must be logged in with the PWD1 or PWD2 password. Printing of the Audit trail deletes the Audit trail information and resets the buffer.

### Common Equipment (CEQU) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	CEQU	Common Equipment data

### Configuration Record (CFN) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	CFN	Configuration record

### Core Inventory (CINV) data for all systems

Prompt	Response	Comment
REQ	PRT	Print
TYPE	CINV	Core Inventory list

## History File (VHST) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	VHST	View the History File
VHST	(%ON)	Turn ON display features
	%OFF	Turn OFF display features
	BFIND aaa	Search backward in the History File
	BFIND	Repeats the previous backward search
	DOWN BOT	Moves to the top of the file
	DOWN	Move forward 6 lines in the History File
	FIND aaaa	Search Forward in the history file
	FIND	Repeats the previous forward search
	HELP	List valid responses
	HST	View the system history file
	NEXT BOT	Moves to the end of the file
	NEXT x	Move forward x lines in the History File, display all lines in between
	PREV TOP	Moves to the top of the file
	PREV x	Move backward x lines in the History File, display all lines in between
	TRF	View the system traffic log file
	TTYLOG n	View the log file for TTY port n
	UP TOP	Moves to the top of the file
	UP	Move backward 6 lines in the history file

## Input/output device (ADAN) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	ADAN	All I/O devices

### Integrated Message Service (IMA) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	IMA	IMS Message Attendant
CUST	xx	Customer number

### Issue and Release (ISS)

Prompt	Response	Comment
REQ	ISS	Print Issue and Release

### Meridian Modular Telephone (ATRN) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	ATRN	Meridian Modular Telephone transmission parameters

### Overlay area (OVLY) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	OVLY	Overlay area information

## Package (PKG) information

Prompt	Response	Comment
REQ	PRT	Print
TYPE	PKG	Software Packages
	PKG xxx	Check equipped/restricted status of package number xxx

## Password (PWD) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	PWD	Print System Passwords
PWD2	xxxx	Level 2 Password

## Peripheral Software Version (PSWV) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	PSWV	Peripheral Software Versions downloaded to: NT8D01 Controller cards, NT8D04 Network cards and NT8D018 Network/Digitone Receiver cards.

## System Limits (SLT) data

Prompt	Response	Comment
REQ	SLT	Print System Limits

---

## System Loop Limit (SLL) data

Prompt	Response	Comment
REQ	SLL	Print System Loop Limits

## System Parameters (PARM) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	PARM	System Parameters

## System Patch (ISSP) data

Prompt	Response	Comment
REQ	ISSP	Print System, Patch, and Plug-in information.

## Tape ID (TID) data

Prompt	Response	Comment
REQ	TID	Print Tape ID

## Value Added Server (VAS) data

Prompt	Response	Comment
REQ	PRT	Print
TYPE	VAS	Print Value Added Server data

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ADJUST PAPER THEN	<cr>	Adjust paper then <cr> to start printing Start printing	basic-1
CUST	xx xx	Customer number Print data range from first to last customer. Not prompted when: <ol style="list-style-type: none"> <li>1. REQ = LUU or LUC</li> <li>2. TYPE = SCL, DIG or TEM</li> <li>3. a complete TN is entered</li> </ol>	basic-1
	<cr>	Print data blocks for all customers	
DATE	dd mmm yyyy	Print data from date specified. Where: dd = 1-31 mmm = JAN-DEC yyy = year e.g. 1993 DATE is prompted for TN related data	basic-1
	<cr> ACT	Print data and show last activity date Print data from last activity date	
DES		Designator DES is prompted on TN related data The printing of data is subject to restrictions imposed by responses to TN and DATE.	odas-1
	d...d d+ + <cr>	Print all units with ODAS designator ddddd Print units starting with ODAS designator d Print units with no ODAS designator assigned Disregard ODAS designator	
DN	xxxx <cr> xxxx <space>	Directory Number Print data block for DN Print data blocks for all DN If a space is entered after the Directory Number the system will reprompt for DN. A maximum of six DNs can be stacked and printed at one time.	basic-19

Prompt	Response	Comment	Pack/Rel
	x<cr> xx<cr> xxx<cr>	All DNs starting with first digit x (X000-X999) All DNs starting with first two digits xx (XX00-XX99) All DNs starting with first three digits xxx (XXX0-XXX9)	
	x-<cr> x-y<cr> xx-yyy<cr>	All DNs between X000-9999 All DNs between DN X000 through Y999 All DNs between DN XX00 through YYY9	
	xxxx xxxx xxxx-yyyy	Two specific DNs. Up to a maximum of 8 DNs. All DNs between XXXX and YYYY	
NACT	(NO) YES END	Next Activity Return to REQ prompt Print current system data and end overlay End overlay activity	odas-1
PAGE	(NO) YES	Data printed on a per-page basis Prompted only on TN related data	basic-1
PWD2	x...x  <cr>	Enter second level administration password (Password 2) to print information relating to all passwords.  Valid characters are 0-9, A-Z, a-z. Length is 4-16 characters. To print only the information regarding the Limited Access to Overlay password used to login. PWD2 is prompted when REQ = PWD or TYPE = PWD.	basic-1
REQ	END ISS ISSP PRT PWD SLL SLT	Request Exit overlay program Print generic version and Issue Print System, Patch, and Plug-in information Print data block for TYPE specified Print the system Passwords Print System Loop Limits Print System Limits : Incremental Software Management (ISM parameters and keywords)  <b>Note:</b> If an Incremental Software Management (ISM) limit is set to the maximum value 32767, then the information for that ISM will not be printed. This does not apply for the TNs ISM	basic-1

# LD 22

Prompt	Response	Comment	Pack/Rel
	TID	Print the Tape ID. (S/W Cart ID and Site ID for Small System).	
TN		Terminal Number TN is not prompted when TYPE = SCL, HNT, DIG, TEM, or GRP.	basic-1
	loop	Print data of the specified TYPE for this loop.	
	l s	Print data of the specified TYPE for this loop and shelf	
	l s c	Print data of the specified TYPE for this loop, shelf and card	
	l s c u	Print data of the specified TYPE for this loop, shelf, card and unit.	
	l s c u, l s c u	List of TNs (up to 6)	
	l s c u, sl ch	A TN and a trunk shelfloop/channel can be entered on the same line	
	l s c, l s c	All units within the specified starting and ending cards	
	l s, l s c u	All units, including the specified starting shelf and ending TN	
	l s c u	All TNs starting with the specified TN and ending with the last TN	
	sl ch	Print data of the specified TYPE for this shelfloop and channel (format for Digital Trunk and Primary Rate Interfaces).	
	<cr>	Print data for all TNs of the specified TYPE.	
	card	Print data of the specified TYPE for this card (Small System).	
	c 0 0 u	For Small System	
	c u	Print data of the specified TYPE for this card and unit (Small System).	
	c ch	Print data of the specified TYPE for this card and channel (digital trunks only) (Small System).	
	n. . . n<space>	System will prompt for TN. A maximum of six TNs can be stacked and printed at one time.	

Prompt	Response	Comment	Pack/Rel
TYPE		Type of data block	basic-1
	ADAN	All I/O devices	
	ADAN AML	Application Modules	
	ADAN DCH	D-channel and backup D-channels	
	ADAN FDK	Floppy Disk units	
	ADAN HST	History Files	
	ADAN PRT	System Ports	
	ADAN TTY	System Terminals	
	ADM	Add-on Data Module	
	ADM M	Data port interfacing with a data line card Small System and Succession 1000 Model	
	AHST	All History File	
	ALARM	Print Filter and exception tables	
	APL	Auxiliary Processor Links	
	ATRN	Print Meridian Modular Telephone Transmission parameters	
	AUDT	Audit Trail buffer Only system Administrators are allowed to print the Audit Trail. They must first respond to PWD2 in LD 17 to define the password.	
	CARD	Card data block (used for Automatic Set Relocation)	
	CEQU	Common Equipment	
	CFN	Configuration record data block	
	CHID	Channel ID for ISDN Signaling Link (ISL)	
	CINV	Core Inventory list (Option 81C)	
	DCP	Directed Call Pickup	

# LD 22

Prompt	Response	Comment	Pack/Rel
	DSDN	Data Services Directory Number or PTE IS	
	GHT	Group Hunt	
	GRP	Group call	
	IMA	IMS Message Attendant	
	IADN	Individual Attendant Directory Number	
	ISS	Generic version and Issue	
	ISSP	Print System, Patch, and Plug-in information	
	OVLY	Print Overlay area information	
	PARM	System Parameters	
	PHST	Previous History File All History File records since last request	
	PKG	Packages equipped. For a list of packages, refer to pages page 35 or page 47.	
	PKG xxx	Check equipped/restricted status of package number xxx	
	PSWV	Peripheral Software Version(s) downloaded to: NT8D01 Controller cards NT8D04 Network cards NT8D018 Network/Digitone Receiver cards <b>Note:</b> The version of peripheral software i.e. PSWV VERSION is not printed here for option 11C. It is printed along with other Small System specific data in LD 143.	
	PWD	Print the system Passwords	
	REF	Loop Reference trunk data	
	RLM RLM M	Release Link Main trunk Small System and Succession 1000 Model	
	RLR RLR M	Release Link Remote trunk Small System and Succession 1000 Model	
	SCI	Station Category Indication data block	

Prompt	Response	Comment	Pack/Rel
	SFA	Second level Forwarding Allowed	
	SFD SLL	Second level Forwarding Denied System Loop Limits	
	VAS	Value Added Server data	vns-21
	VHST	View History File	
VHST		View the History File	hist-19
	(%ON) % OFF	<p>Turn ON display features Turn OFF display features</p> <p>This command is used to enable or disable the following three display features:</p> <ul style="list-style-type: none"> <li>brackets to surround the current index ([])</li> <li>percent symbol (%) preceding each History File line</li> <li>relative location within the History File (in percentage)</li> </ul> <p>VHST accepts abbreviated responses.</p>	
	BFIND aaaa	<p>Search backward in the History File</p> <p>This command can be used to search backward, starting at the current index location, for the string "aaaa." If necessary, the file will wrap until it returns to the same location.</p> <p>The text string can be up to 12 characters. Special characters like space, slash (/), and colon (:) are accepted. Leading or trailing spaces are ignored unless enclosed in double quotes. For example, the spaces denoted here are ignored: &lt;SP&gt;&lt;SP&gt;INI&lt;SP&gt;. The spaces in this string, however, are included in the search: "&lt;SP&gt;&lt;SP&gt;INI&lt;SP&gt;".</p> <p>When the string is found, the system displays the current index location. Five text lines are shown, with the middle line containing the sought string. The VHST prompt is re-displayed to allow more command use. If the string is not found, VHST is reprompted to allow more command use.</p>	

# LD 22

Prompt	Response	Comment	Pack/Rel
	BFIND	Repeats the previous backward search	
	DOWN BOT	Moves to the top of the file	
	DOWN	<p>Move forward 6 lines in the History File</p> <p>This command can be used to move forward in the History File, toward the end. If x exceeds the end of the file, the end will be shown.</p> <p>When the move is complete, VHST is reprompted to allow more command use.</p>	
	FIND aaaa	<p>Search Forward in the History File</p> <p>This command can be used to search forward, starting at the current index location, for the string "aaaa." If necessary, the file will wrap until it returns to the same location.</p> <p>The text string can be up to 12 characters. Special characters like space, slash (/), and colon (:) are accepted. Leading or trailing spaces are ignored unless enclosed in double quotes.</p> <p>For example, the spaces denoted here are ignored: &lt;SP&gt;&lt;SP&gt;INI&lt;SP&gt;. The spaces in this string, however, are included in the search: "&lt;SP&gt;&lt;SP&gt;INI&lt;SP&gt;".</p> <p>When the string is found, the system displays the current index location. Five text line are shown, with the middle line containing the sought string. The VHST prompt is re-displayed to allow more command use. If the string is not found, VHST is reprompted to allow more command use.</p>	
	FIND	Repeats the previous forward search	
	HELP	List valid responses	
	NEXT BOT	Moves to the end of the file	

Prompt	Response	Comment	Pack/Rel
	NEXT x	<p>Move forward x lines in the History File, display all lines in between.</p> <p>This command can be used to view lines forward, toward the end of the file. The lines between the current index location, and the new one (x lines down) are displayed.</p> <p>If you enter only NEXT, the default of 20 lines is used for the move. When the move is complete, VHST is reprompted to allow more command use.</p>	
	PREV TOP	Moves to the top of the file	
	PREV x	<p>Move backward x lines in the History File, display all lines in between</p> <p>This command can be used to view lines backward, toward the top of the file. The lines between the current index location, and the new one (x lines up) are displayed.</p> <p>If you enter only PREV, the default of 20 lines is used for the move. When the move is complete, VHST is reprompted to allow more command use.</p>	
	TRF	View the system traffic log file	
	TTYLOG n	View the log file for TTY port n	
	UP TOP	Moves to the top of the file	
	UP	<p>Move backward 6 lines in the History File</p> <p>This command can be used to move backward in the History File, toward the top. If x exceeds the top of the file, the top will be shown. When the move is complete, VHST is reprompted to allow more command use.</p>	

# LD 22

---

## LD 23: Automatic Call Distribution, Management Reports, Message Center

---

Overlay program 23 allows Automatic Call Distribution (ACD) data, schedules for management reports and Message Center data to be created, modified, or printed.

ACD groups are also used for Meridian Mail and various server applications. When this overlay is loaded the available system memory and disk records are output in a header. Refer to the introduction of this document for details.

Incremental Software Management (ISM) also provides a header to indicate system configuration limits. For LD 23, the header appears as follows:

```
ACD DNS AVAIL: xxxxx USED: xxxxx TOT: xxxxx
```

To prevent Virtual Agent information from appearing on ACD-D reports, do not make changes to Virtual Agents. If a change to a Virtual Agent is required, out the agent and rebuild it with REQ = NEW.

# Prompts and responses

## Contents

Section	Page
<i>Prompts and responses by data block:</i>	
ACD or SCB: Automatic Call Distribution (ACD-D) or Schedule data block	670
ADS: Auxiliary data system data block (includes Multiple Queue Assignment prompts)	671
CDN: Control DN data block (covers prompts for Customer Controlled Routing)	671
NACD: Network ACD data block	673
OBVP: Configure the Observe Password Table	673

Prompt	Response	Comment
REQ:	aaa	Request
TYPE:	a...a	Type of data block (a...a = ACD, ADS, CDN, NACD, or SCB)
CUST	xx	Customer number associated with this data block
ACDN	x...x	ACD Directory Number
MWC	(NO) YES	Message Waiting Center
- IMS	(NO) YES	Integrated Messaging Service
-- CMS	(NO) YES	Command and Status link
-- IMA	(NO) YES	Integrated Messaging Allowed
-- IVMS	(NO) YES	Integrated Voice Messaging System
-- PCMM	(NO) YES	Periodic Clearing with Meridian Mail
-- DNIS	(NO) YES	Dialed Number Identification Service
-- VSID	0-15	Value Added Server ID

---

- - EES	(NO) YES	End-to-End Signaling
- - APL	0-15	Auxiliary Processor Link number
- - UST	(NO) YES	User Status update
- - VSID	0-15	VAS ID of VAS providing VMS
- - APL	0-15	Auxiliary Processor Link number
- - UMG	(NO) YES	User-to-User Messaging
- - RAN	0-511	RAN route number
- - UMT	2-(6)-15	Update Message Time
AST	(NO) YES	Associated set
DSAC	(NO) YES	Data Services Access Code
- PRIM	(NO) YES	Primary DSAC
- VSID	0-15	Value Added Server ID
ICP	(NO) YES	Intercept Computer Printer
- ICPS	aaa	Intercept Computer Printer Search (aaa = (CIR) or COM)
- ICPR	0-<NIPN>	Intercept Computer Printer
MAXP	xxx	Maximum Positions
SDNB	(NO) YES	Secondary DN Blocking
BSCW	(NO) YES	Block Secondary DN Calls on Walkaway
ISAP	(NO) YES	Integrated Services Application Protocol
ASID	16-31 or (00)	Application service identity from which the acquired message originated
AACQ	(NO) YES	Application Acquired Queue
- VSID	0-15	Value Added Server ID
ALOG	(NO) YES	Automatic Log In
RGAI	(NO) YES	Ring Again for Internal calls
ACAA	(NO) YES	ACD Agent while IDN on-hold Allowed
FRRT	0-511	First RAN route number for ACD
- FRT	0-2044	First RAN Time
SRRT	0-511	Second RAN route number for ACD
- SRT	0-2044	Second RAN Time
NRRT	0-127	Night RAN Route
- NRT	(0)-2044	Night RAN Time
FROA	(NO) YES	First RAN On Arrival
NCFW	x...x	Night Call Forward

---

# LD 23

FNCF	(NO) YES	Force Night Call Forward to busy ACD DN
CWTT	(0)-40-63	Call Waiting Threshold Time
HMSB	(YES) NO	Hold Make Set Busy (allowed) denied
ACPQ	(NO) YES	Answer Call Priority Queue
FORC	(NO) YES	Force
- FCFT	0-(2)-30	Flexible Call Force Timer
- FADT	(0)-15	Force Answer Delay Time
- FADR	(0)-15	Force Answer Delay timer for Ringback
RTQT	(0)-50	Return to Queue Timer after no answer in number of ringing cycles
RTQO	(NRD) MSB	Return to Queue Option
SPCP	(NO) YES	Separate Post Call Processing
OBTN	aaa	Observation Tone (aaa = (NO), AGT, or ALL)
RAO	aaa	Restricted Agent Observe (aaa = (NO), YES, or FULL)
HSID	0-15	Host ID
CWTH	0-(1)-2047	Calls Waiting Threshold
NCWL	(NO) YES	New Call Waiting Lamp options
- CWLF	(0)-2047	Call Waiting Lamp Flash threshold
- CWLW	(0)-2047	Call Waiting Lamp Wink (fast flash) threshold
BYTH	(0)-204	Busy Threshold
OVTH	0-(2047)	Overflow Threshold
TOFT	2-1800	Timed Overflow Threshold in seconds
HPQ	(NO) YES	High Priority Queue
- OCN	(NO) YES	Oldest Call in Network
OVDN	x...x x...x x...x	Overflow Directory Number(s)
IFDN	x...x	Interflow Directory Number
- BUSY	aaa bbb ccc ddd	Busy treatment
- AENI	(NO) YES	Automatically Enable Interflow
OVBU	aaa bbb ccc ddd	Overflow Busy
EMRT	0-511	Emergency Route
MURT	0-511	Music Route
RTPC	(NO) YES	Real Time Processing
STIO	0, 1, 2, ...15	Status Input/Output devices
TSFT	0-(20)-510	Telephone Service Factor Threshold in seconds

---

HOML	(YES) NO	Headset Or MSB key Log Out
RDNA	(NO) YES	Restricted DN Access
ACNT	xxxx	Account
NRAC	(NO) YES	Enable Not Ready Activity Codes
- NDFL	xxxx	Not Ready Default code Must be equipped with ACD-D or NGCC package
DAL	(NO) YES	Data Agent Log In with the MSB key allowed
RPRT	(YES) NO	Management reporting and status display
RAGT	2-(4)-30	Reserve Agent
DURT	15-(30)-45	Duration Timer in minutes
RSND	(4)-16	Resend timer
FCTH	10-(20)-100	Flow Control Threshold
CRQS	0-(100)-255	Call Request Queue Size
DNRT	(NO) YES	Delay Night RAN Treatment
CCBA	(NO) YES	Allow Collect Call Blocking Answer signal to be sent
IVR	(NO) YES	Interactive Voice Response queue
- ALOG	(NO) YES	Provide Automatic Login for agents
- TRDN	xxxx	Treatment DN for IVR queue
CWNT	I s c u	Call Waiting Notification TN
CWNC	NO YES	Call Waiting Notification TN control

---

## Prompts and responses by data block

### ACD or SCB: Automatic Call Distribution (ACD-D) or Schedule data block

---

Prompt	Response	Comment
REQ:	aaa	Request
TYPE:	aaa	Type of data block = ACD or SCB (Automatic Call Distribution or Schedule data block for ACD management reports)
CUST	xx	Customer number associated with this data block
CPRD	dd mm dd mm	Collection Period
SHR	0-23	Start Hour
EHR	0-23	Hour of day that data reporting ends
DOW	1-7	Days of Week for data collection
RFRQ	0-7	Frequency that Reports are to be generated
SFRQ	x	Status display update Frequency (1 or 2)
ROPT	1-4	Report Options
PRIO	0-15	Printer(s) for Output
PAGE	(NO) YES	Start at the top of a new page for each report
AID	(NO) YES	Agent ID mode
- IDLB	(1)-9999	Agent ID Lower Boundary
- IDUB	<i>IDLB</i> -(9999)	Agent ID Upper Boundary
- LOG	(0)-999	Maximum number of agents that can be logged in at any one time
SRPT	(NO) YES	Short Report option for report 4 (Agent position)
TOT4	(NO) YES	Totals on report 4

---

## ADS: Auxiliary data system data block (includes Multiple Queue Assignment prompts)

Prompt	Response	Comment
REQ:	aaa	Request
TYPE:	ADS	Type of data block = ADS (Auxiliary Data System)
CUST	xx	Customer number associated with this data block
AID	(NO) YES	Agent ID mode
- IDLB	(1)-9999	Agent ID Lower Boundary
- IDUB	<i>IDLB</i> -(9999)	Agent ID Upper Boundary
- MQA	(NO) YES	Multiple Queue Assignment
-- MQAS	(NO) YES	Select a Supervisor ID during login
-- MQAP	(NO) YES	Select Priorities during login
-- MQCF	(NO) YES	Automatic Call Forwarding of Phantom TNs to agent sets at login
--- MCFD	(0)-3	The MQA Call Forwarding Digits attached to the Agent IDs

## CDN: Control DN data block (covers prompts for Customer Controlled Routing)

**Caution:** Corruption results if a CDN is not configured in this overlay *before* that CDN is associated with or represented in an association table script in the CCR module.

Prompt	Response	Comment
REQ:	aaa	Request
TYPE:	CDN	Type of data block = CDN (Control DN)
CUST	xx	Customer number associated with this data block
CDN	xxxx	Control DN
FRRT	0-511	First RAN route number for ACD
- FRT	0-2044	First RAN Time
SRRT	0-511	Second RAN Route number for ACD

# LD 23

- SRT	0-2044	Second RAN Time
FROA	(NO) YES	First RAN On Arrival
MURT	0-511	Music Route number
DFDN	x...x	Local Default ACD DN
CEIL	0-(2047)	CDN Ceiling value
OVFL	(NO) YES	Force Overflow Tone to the call when the ceiling threshold has been exceeded
TDNS	(NO) YES	Is DNIS number an original Called Party
RPRT	(YES) NO	Management reporting and status display
CNTL	(NO) YES	Control DN is in control
VSID	0-15	Value Added Server ID
HSID	0-15	Host ID
CWTH	0-(1)-2047	Calls Waiting Threshold
BYTH	(0)-2047	Busy Threshold
OVTH	0-(2047)	Overflow Threshold
STIO	0, 1, 2, ... 15	Status Input/Output devices
TSFT	0-(20)-510	Telephone Service Factor Threshold in seconds
ACNT	xxxx	Account
UUI	(NO) YES	Use- to-User Information

---

## NACD: Network ACD data block

Network ACD provides ACD capabilities over an Integrated Service Digital Network (ISDN). An NACD system distributes ACD activities between several sites. Connected by ISDN voice and data services, different sites can be physically or geographically separated within the network.

Prompt	Response	Comment
REQ:	aaa	Request
TYPE:	NACD	Type of data block = NACD (Network ACD)
CUST	xx	Customer number associated with this data block
ACDN	xxxx	ACD Directory Number
TABL	(a) s	Day, Night or Source Table (a = Day or Night, s = Source Table)
- OUTS	xxxx xxxx	Routing Table entries to be removed
- TRGT	xxxx tttt	Target ACD DN and the timer in seconds

## OBVP: Configure the Observe Password Table

Prompt	Response	Comment
REQ:	aaa	Request
TYPE:	OBVP	Observe Password table
CUST	xx	Customer number associated with this data block
ADPD	xx..xx yy..yy	Supervisor login ID followed by supervisor Observe password (separated by a space)

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
AACQ	(NO) YES	Application Acquired Queue The ACD DN is not acquired by the application The ACD DN is acquired by the application	nxcc-22
ACAA	(NO) YES	Allow ACD calls to an agent on an Individual DN (IDN) Call On Hold The agent cannot place an IDN Call On Hold, and return to the idle queue. The agent can put an active IDN Call On Hold and press the in-calls to return to the idle agent queue.	bacd-18
ACDN	x...x	ACD Directory Number Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150	acda-1
ACNT	x...x	Account (Default activity code) Maximum 4 digits (0 through 9). The # and * are not allowed. Prompted if the ADS data block is built, and CNTL = YES.	acdc-13
ACPQ	(NO) YES	Answer Call Priority Queue International Supplementary Features (SUPP) package 131 must be equipped.	supp-15
ADPD	xx..xx yy..yy	Supervisor login ID followed by supervisor Observe password (separated by a space).	oas-3.0
AENI	(NO) YES	Automatically Enable Interflow Prompted when IFDN is defined.	acdb-12
AID	(NO) YES	Customer will operate in Position ID mode. Customer will operate in Agent ID mode.	acdc-2
ALOG	(NO) YES	Provide Automatic Log In for agents on this DN. Set to YES for Meridian Mail applications. ALOG applies only to Command and Status Link (CMS) and Data Service Access Codes (DSAC). Prompted if IMS or ISAP = YES.	csl-8
APL	0-15	Auxiliary Processor Link number Prompted if IMA = YES. The APL is defined in LD 17.	lnk-2

Prompt	Response	Comment	Pack/Rel
ASID	16-31 or (00)	Application service identity from which the acquired message originated	nxcc-22
AST	(NO) YES	Associated set The Associate Set assignments are performed in LD 10 and LD 11 for each ACD telephone.	iap3p-13
BSCW	(NO) YES	Block Calls to the Secondary DN on Walkaway The caller to the source DN hears busy tone.	bacd-13
BUSY	aaa bbb ccc ddd	Interflow Busy Treatment for different originators Prompted if IFDN is defined. The possible options are: BSY = caller hears busy tone SRC = caller is re-linked to source queue Enter BSY or SRC for each of the four different originators: aaa = Stations bbb = Attendants ccc = CO, FEX and WATS trunks ddd = all other trunk types Defaults if the IFDN is an ACD DN, internal or external DN are: BSY BSY SRC BSY (3rd entry cannot be changed) Default if the IFDN is an attendant console: BSY SRC SRC BSY (only the 4th entry can be changed)	acdb-12
BYTH	(0)-2047	Busy Threshold at which the Calls Waiting lamp flashes and this queue ceases to accept overflowed calls. When BYTH = 0, overflow calls are not accepted by this target queue unless an agent is available. To delete existing entry, precede entry with X.	acdb-1

# LD 23

Prompt	Response	Comment	Pack/Rel
CALB	1 2 ...	Call Filter Bitmap CALB applies to messages such as PCI, DN update, etc. This bitmap is downloaded by the application which is used to control the sending of messages on behalf of the acquired TN. A numeric value would only be printed if the corresponding set message is enabled. CALB is printed if AACR = YES.	nxcc-22
CCBA	(NO) YES	Collect Call Blocking Denied Collect Call Blocking Allowed Collect Call Blocking (CCB) package 290 is required.	ccb-21
CDN	x...x	Control DN Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	ear-17
CEIL	0-(2047)	CDN Ceiling value CEIL limits the number of unanswered calls a CDN can have at its default ACD DN at a time. New calls receive a busy signal once the ceiling is reached (CO trunks do not receive busy).	ear-17
CMS	(NO) YES	Command and Status link If this ACD DN is to use the CSL, enter YES. Set to YES for Meridian Mail applications.	csi-8
CNTL	(NO) YES	Control DN is in control. When CNTL = NO, CDN calls are sent to the Default ACD DN (DFDN).	ear-17
CPRD	sm sd em ed	Collection Period: Month and day data collection is to start and end. Where: sm = start month (1-12) sd = start day of month(1-31) em = end month (1-12) ed = end day of month(1-31)	acdc-2

Prompt	Response	Comment	Pack/Rel
CRQS	0-(100)-255	<p>Call Request Queue Size</p> <p>It is recommended that CRQS be approximately 20% higher than the number of trunks available for networking. If the customer selects the OCN option, set this value at 5% over trunking capacity. This avoids reserving agents for calls on the network when trunking facilities are unavailable. Flow Control (FCTH) is typically set at 25% of the call request queue size.</p> <p>The CRQS must be defined for each ACD DN in the network. CRQS must be greater than FCTH. CRQS = 0 closes the queue.</p>	nacd-15
CUST	xx	Customer number associated with this data block as defined in LD 15.	bacd-1
CWLF	(0)-2047	Call Waiting Lamp Flash threshold Prompted if NCWL = YES. CWLF must be greater than or equal to CWTH	acdb-15
CWLW	(0)-2047	Call Waiting Lamp Wink (fast flash) threshold Prompted if NCWL = YES. CWLW must be greater than or equal to CWLF	acdb-15
CWNC	NO YES	Alert rings for all calls Alert rings for only priority calls CWNC appears when a TN has been entered for CWNT. There is no default.	m911-19
CWNT	I s c u	<p>Call Waiting Notification TN</p> <p>I = (0-255) Systems with Fibre Network Fabric</p>	m911-19 fnf-25
CWTH	0-(1)-2047 0 X	<p>Calls Waiting Threshold: The number of Calls Waiting in queue that triggers the "calls waiting" indication.</p> <p>To disable</p> <p>To delete existing entry.</p>	acdb-1
CWTT	(0)-40-63	ACD Call Waiting Threshold Time (in 1 second intervals)	acnt-15
DAL	(NO) YES	<p>Data Agent Log In with the MSB key allowed</p> <p>The data agent must be defined with a DTA Class of Service in LD 11. DAL is not prompted when IVMS or DSAC are set to "YES".</p> <p>Prompted if TYPE = SCB or ADS.</p>	acdc-14

# LD 23

Prompt	Response	Comment	Pack/Rel
DFDN	x...x	Local default ACD DN Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Calls to the CDN are directed to this ACD DN. RAN and Music, if provided, are as defined for the CDN. Any other ACD treatment, such as Night, is applied as if the caller directly dialed the ACD DN.	ear-17
DNIS	(NO) YES	Dialed Number Identification Service Send (do not send) ACD/DNIS information across the link. Not prompted for Virtual Agents.	dnis-12
DNRT	(NO) YES	Delay Night RAN Treatment When DNRT = YES for an ACD DN there is a delay in routing calls to the night RAN. The call is delayed until the call has reached the end of the Night table and there are no outstanding call requests for the call. Prompted if a NACD Night table and a RAN route have been defined.	nacd-15
DOW	1-7	Days of Week for data collection Where: 1 = Sunday and 7 = Saturday	acdc-2
DSAC	(NO) YES	ACD DN is not an IS/Data Service Access Code ACD DN is an IS/Data Service Access Code Prompted when MWC = NO	csl-8
DURT	15-(30)-45	Duration Timer (in minutes) DURT indicates how long a Target node honors a call request from the Source node. If the timer expires, the call is removed from the call request queue. If this timer is too large, the network call request queues may become overcrowded. If the timer is too small, waiting customers may be cut off from receiving services. This timer must be defined only for Target queues.	nacd-15
EES	YES (NO)	IVMS uses End-to-End Signaling to send tone. IVMS (does not use) End-to-End Signaling to send tone. Prompted when IMA = YES.	ims-2
EHR	0-23	Hour of day that data reporting ends	acdc-2

Prompt	Response	Comment	Pack/Rel
EMRT	0-511	Emergency Recorder Trunk Route. The route and at least one trunk must exist before defining EMRT. Enter X to remove.	acdb-1
FADR	(0)-15	Force Answer Delay timer for Ringback Cadence  Enter delay time, in increments of one second, before call is connected to an agent. This delay timer ensures that a caller, during forced answer, receives at least one ringback cadence before being connected to an agent.	supp-14
FADT	(0)-15	Force Answer Delay Time  Enter Delay time, in increments of one second, between calls when Call Forcing is enabled. This delay timer offers an agent a few seconds break before having to answer the next call.	supp-14
FCFT	0-(2)-30	Flexible Call Force Timer (the time in seconds before Flexible Call Force is enforced)	acdb-16
FCTH	10-(20)-100	Flow Control Threshold to allow additional calls into the call request queue  The Flow Control option opens and closes the ACD DN for network calls. Once the number of Call Requests received over the network meets the call request queue size defined in LD 23, the queue is shut down (INACTIVE) for network calls. For the queue to open for network calls, the pending queue request size must drop to a value equal to the flow calls control.  For example, a call request queue size of 50 with a flow control of 10 allows the queue to become inactive after 50 call requests are pending. After 10 calls or 10 Call Requests have been answered or removed, leaving 40 remaining in queue, the queue will reopen.	nacd-15
FNCF	(NO) YES	Force Night Call Forward to busy ACD DN	bacd-15
FORC	(NO) YES	Force  Calls are forced to arrive in answered state. When FORC = Yes, the call arrives on Key 0 (in-calls key) in an answered state. Headsets are recommended for this option.	acdb-1

# LD 23

Prompt	Response	Comment	Pack/Rel
FROA	(NO) YES	First RAN On Arrival (the 1st RAN to be given to incoming calls immediately; FRT time ignored)  If FROA = NO, the call is forced to wait FRT time. Recorded Announcement is only given if an idle agent is not found.	acda-1
FRRT	0-511	First RAN Route number for ACD The route and at least one trunk must exist before defining FRRT. Enter X to remove.	acda-1
FRT	0-2044	First RAN Time (the time in seconds allowed before unanswered incoming ACD calls are connected to the first RAN)  Prompted if FRRT is defined. If a value is not entered FRT defaults to blank and there is no connection to the RAN.	acda-1
HMSB	(NO) YES	Agent cannot activate Make Set Busy if an ACD call is on-hold Agent can activate Make Set Busy if ACD call is on-hold	basic-9
HOML	(NO) YES	Handset Removal or Make Set Busy key (MSB key) log out.  The HOML option allows an agent to log out by removing the headset or going on hook without using the Make Set Busy (MSB) key. Logout while on Agent Reserve causes a cancellation message.  Log out with only the Make Set Busy key Log out with either handset removal or Make Set Busy key activation  HOML is prompted if an Auxiliary Data System (ADS) or Schedule Block (SCB) exists.	bacd-1

Prompt	Response	Comment	Pack/Rel
HPQ		High Priority Queue (preference given to High Priority trunk calls)	tof-10
	(NO)	Calls from the source queue's high priority trunks are presented after another queue's Timed Overflow queue (TOFQ) calls.	
	YES	Calls from the source queue's high priority trunks are presented before another queue's Timed Overflow queue (TOFQ) calls.	
		In an NACD environment, HPQ must be denied to receive the OCN prompt. (HPQ = No)	
HSID	0-15	VAS ID for the Host Application Module Link.  When the CCR and ML applications are both running, this HSID is the VSID assigned to the AML for Meridian Link in LD 17. The VSID prompt in this CDN configuration will match the VSID for the CCR AML port configured in LD 17.	ccr-17
ICP	(NO) YES	Intercept Computer Printer (ACD MC used for Intercept Printer)	icp-14
ICPR	0-<NIPN>	Intercept Computer Printer Printer number (for ICPS = COM); NIPN is defined in LD 15	icp-14
ICPS	(CIR) COM	Intercept Computer Printer Search (when more than one console is used) Circular search One Common printer for ACD group	icp-14
IDLB	(1)-9999	Agent ID Lower Boundary  This prompt is used with the IDUB prompt to determine the maximum number of agents allowed by the system. The number must be within the parameters set by the IDLB and IDUB prompts.  Prompted if TYPE = ADS or SCB and AID = YES	acdc-19

# LD 23

Prompt	Response	Comment	Pack/Rel
IDUB	IDLB-(9999)	Agent ID Upper Boundary  This prompt is used with the IDLB prompt to determine the maximum number of agents allowed by the system. The number must be within the parameters set by the IDLB and IDUB prompts.  Prompted if TYPE = ADS or SCB and AID = YES	acdc-19
IFDN	x...x	Interflow Directory Number  The Interflow Directory Number serves as the DN to which calls interflow. IFDN can be up to 31 digits.  Calls diverted to the IFDN are not routed by NACD. Network calls diverted to an IFDN lose all the network information, so that information cannot be displayed on the terminating telephone.  A group hunt pilot DN can be entered. If the OPAO package is equipped, then # can be used in this DN.	acdb-1
	X	To delete existing entry.  IFDN and NFCR are affected by the Outpulsing feature for Japan. Refer to the Feature Description in <i>Features and Services</i> (553-3001-306) for details.  Typing four asterisks (****) at the IFDN prompt will not let the user exit Overlay 23.	
IMA	(NO) YES	Integrated Messaging Allowed (ACD DN assigned to IMS) Set to YES for Meridian Mail applications.	ims-2
IMS	(NO) YES	Integrated Messaging Service Set to YES for Meridian Mail applications. IMA must be set to Yes in LD 15.	ims-2
ISAP	(NO) YES	Integrated Services Application Protocol (ACD messages sent across the ISDN/AP link) Set to YES for Meridian Mail applications.	ani-15
IVMS	(NO) YES	Integrated Voice Messaging System Set to YES for Meridian Mail applications.	ivms-2

Prompt	Response	Comment	Pack/Rel
IVR	(NO) YES	Interactive Voice Response queue  An ACD queue must be defined as an IVR queue before the Treatment Request for IVR command can be used in Customer Controlled Routing (CCR) applications.	ivr-18
	(0)-999	Login maximum (the maximum number of agents that can be logged in at any one time)	acdc-18
LOG	(0)-999	Login maximum (the maximum number of agents that can be logged in at any one time)	acdc-18
MAXP	1-120	Maximum Number of Agent Positions. The value of the MAXP can be increased to the allowed maximum or decreased to the current number agents.	acda-1
MCFD		Multiple Queue Assignment (MQA) Call Forwarding Digits attached to Agent IDs. The digits are used to determine which Phantom TNs are Call Forwarded.  MCFD is prompted if MQCF = YES.	mqa-21
	(0)	No digits attached to Agent IDs	
	1-3	Limit of digits attached to Agent IDs. Maximum is 3.	
	X	No digits attached to Agent IDs	
MQA	(NO) YES	Multiple Queue Assignment No Multiple Queue Assignment functionality Multiple Queue Assignment functionality MQA is prompted if AID = YES and MQA package 297 is equipped. Warning: The HSL link must be disabled before you configure or change MQA.	mqa-21
MQAP	(NO) YES	MQA Priority option No Priorities selected during login Select Priorities during login Prompted if MQA = YES and Priority Agent package 116 is equipped.	mqa-21
MQAS	(NO) YES	Multiple Queue Assignment Supervisor ID option No Supervisor ID during login Select a Supervisor ID during login Prompted if MQA = YES.	mqa-21

# LD 23

Prompt	Response	Comment	Pack/Rel
MQCF	(NO) YES	Multiple Queue Assignment Call Forward option No automatic Call Forwarding of Phantom TNs to agent sets at login Automatic Call Forwarding of Phantom TNs to agent sets at login Prompted if MQA = YES and Phantom TN package 254 is equipped.	mqa-21
MURT	0-511	Music Route number The route and at least one trunk must exist before defining MURT. Enter X to remove.	acdb-1
MWC	(NO) YES	Message Waiting Center (ACD DN is a message center DN) MWC is set to YES for Meridian Mail applications. Prompted if Message Waiting Center (MWC) package 46 is equipped.	mwc-1
NCFW	x...x	Night Call Forward DN for ACD calls (up to 23 digits) and Operator Revert DN for Meridian Mail (IMS, IVMS). NCFW is tracked on reports as interflow.  NCFW can be up to 31 digits. Precede NCFW entry with X to delete.  Typing four asterisks (****) at the NCFW prompt will not let the user exit Overlay 23.	acda-1
NCWL	(NO) YES	New Call Waiting Lamp options  When NCWL = YES, the Busy Threshold and Overflow Threshold apply only to Overflow by Number and Interflow conditions, but do not change the lamp states. Calls in the Call Request and Local Flow-in queues are included when adding up the calls in queue for lamp state updates.	acdb-15
NDFL	xxxx	Not Ready Default code  Must be equipped with ACD-D or NGCC package	acdd-24
NRAC	(NO) YES	Enable Not Ready Activity Codes	acdd-24

Prompt	Response	Comment	Pack/Rel
NRRT	0-511	Night RAN Route number assigned as night announcement for ACD calls.  If NRRT and NCFW are both defined, then NRRT course first. The route and at least one trunk must exist before defining NRRT. Enter X to remove.	acda-1
NRT	(0)-2044	Night RAN Time  This is the time in seconds - in increments of 1 - before RAN is connected to ACD calls. NRT is prompted if NRRT is defined and International Supplementary Features (SUPP) package 131 is equipped.	supp-9
OBSC	(NO) YES	Login/Logout control.	oas-3.0
OBPT	xx	Supervisor Inactivity Timer, in minutes  (Default = 5, Minimum = 2, Maximum = 99)	oas-3.0
OBTN	(NO) AGT ALL	No Observation Tone given Audible Observe Tone to Agent only Audible Observe Tone to all parties	acdb-1
OCN	(NO) YES	Accept Oldest Call in Network  This feature determines if the oldest call in the network is answered ahead of calls to the Source location. Use caution with this feature. Because agents are reserved for network calls, agents may remain idle while calls wait in the local queue.  To avoid reserving all the agents for network calls, split the ACD group into two areas: one area for all calls and the second area for a group of agents equal to the number of tie lines between the network locations. This solution allows local calls to overflow by time into the area for all calls.  The OCN option must be defined only for Target queues.	nacd-15

# LD 23

Prompt	Response	Comment	Pack/Rel
		<p>When OCN = YES and HPQ = NO, the system compares calls from queues for that target ACD DN. The highest priority call that has waited the longest is the call presented to the next available agent.</p> <p>When OCN = NO and HPQ = NO, the system selects the oldest call from the ACD DN's own Timed Overflow (TOF) queue. If there are no calls in the Source Timed Overflow queue, the system looks at calls in the Call Request queue and Source Timed Local Flow-in queue.</p> <p>When OCN = NO and HPQ = YES, the system presents calls from the agent's own TOF queue and High-Priority queues before presenting calls from Source TOF queues and Call Request queues.</p> <p>OCN is prompted if Network Automatic Call Distribution (NACD) package 207 equipped.</p>	
OUTS	xxxx xxxx	<p>Routing Table entries to be removed</p> <p>Up to 20 entries at a time can be removed from the Enhanced Overflow (EOVF) or Network ACD (NACD) routing tables. Only 5 entries can be entered at OUTS at a time. OUTS is prompted until just &lt;cr&gt; is entered.</p> <p>Prompted if REQ = CHG. Remove routing tables by list entry number, not by ACD DN. Print the NACD data to see the ACD DN associated with each entry number.</p>	nacd-15
OVBU	aaa bbb ccc ddd	<p>Overflow Busy treatment for specific call originator types when IFDN not defined.</p> <p>Enter the required treatment for Overflow calls:</p> <ul style="list-style-type: none"><li>LNK = caller is re-linked to source queue (the default value)</li><li>BSY = caller hears busy tone</li></ul> <p>Enter all four entries at the same appearance. Enter LNK or BSY for each of the four different originators:</p> <ul style="list-style-type: none"><li>aaa = Internal calls</li><li>bbb = Attendant calls</li><li>ccc = LNK</li><li>ddd = DID and TIE trunks</li></ul>	acdb-16

Prompt	Response	Comment	Pack/Rel
		<p>If busy tone is configured for CO trunk calls, the calling or called party will be billed for the duration of the call, which is from the time the PBX returns answer supervision until the time the calling party disconnects.</p> <p>BSY is not allowed for CO trunks. Prompted if there is no entry for IFDN.</p>	
OVDN	x...x x...x x...x  X Xxxxx	<p>Overflow ACD Directory Number(s) (maximum of three responses) Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. To remove ALL OVDNs for the ACD DN To delete a specific DN. Any new entry replaces the old data. The Overflow DN cannot be a CDN.</p>	acdb-1
OVFL	(NO) YES	<p>Overflow Tone Busy tone will be given to call Force overflow tone will be given to call by Mobility switch</p> <p>OVFL is prompted when a call arrives at a Controlled DN in default mode and when that call has exceeded the CDN-to-a-default-ACD-DN ceiling threshold.</p>	basic-20
OVTH	0-(2047)	<p>Overflow Threshold</p> <p>OVTH represents the value at which the Calls Waiting lamp winks (Fast flashes), causing calls which are entering the queue to overflow.</p> <p>When OVTH = 0 overflow is attempted when all agents are busy. Enter X to delete existing entry.</p>	acdb-1
PAGE	(NO) YES	Start at the top of a new page for each report	acdc-2
PCMM	(NO) YES	Periodic Clearing with Meridian Mail Prompted if OPT = PCMA in LD 15	nas-14
PRIM	(NO) YES	Primary DSAC	csi-8
PRIO	0-15	<p>Printer(s) for Output (establish the number(s) of devices used for output of reports) These output devices must have been defined in LD 17 as ACD printers. Precede with X to remove a device number.</p>	acdc-2

# LD 23

Prompt	Response	Comment	Pack/Rel
RAGT	2-(4)-30	<p>Number of seconds an agent in a remote target is reserved for an overflow call.</p> <p>The Reserve Agent Timer keeps the agent reserved until call presentation or timeout. The timer also prevents a situation where an agent may be reserved indefinitely.</p> <p>When an agent is reserved with Countdown Allowed (CNTA) CLS as defined in LD 11, the RAGT countdown is shown on the agent's Digit Display.</p> <p>The agent being reserved has a Reserve Agent Timer with countdown display. The countdown display starts when the Reserve Agent Timer (RAGT) starts, and counts down by increments of 2 seconds, to zero. If the call is not presented to the Target agent before the Reserve Agent Timer (RAGT) expires, that call remains at the originating Source queue. The Target agent is returned to the idle agent queue.</p> <p>If the Reserve Agent Timer is set too high, the agent is reserved waiting for calls. If the Reserve Agent Timer is set too low, the agent may be freed before the network facility can set up the call. Different timer settings can be tried through Load Management. Subsequent calls are presented to agents only after the Reserve Agent Timer has expired.</p> <p>The RAGT must be defined only for Target queues.</p>	nacd-15
RAN	0-511	Recorded Announcement Trunk Route Number for calls entering message queue (default NO RAN)	acda-1
RAO	(NO) YES FULL	Restricted Agent Observe Restricted Agent Observe on logout disabled Restricted Agent Observe on logout enabled Restrict the supervisor from observing any of agents IDN calls even when logged in	
RDNA	(NO) YES	Restricted DN Access Enter NO if use of DN keys is to be allowed without logging in. Enter YES to restrict agents from making outgoing calls when not logged in. Prompted if an Auxiliary Data System (ADS) or Schedule Block (SCB) exists.	acdc-1

Prompt	Response	Comment	Pack/Rel
REQ		Request	bacd-18
	CHG	Change existing data Select OUT followed by NEW, instead of CHG when switching resources between virtual and actual ACD DN's to avoid unwanted information on ACD-D reports.	
	DACR END	De-acquire ACD Queue and CDN resources Exit Overlay program	
	LST	List ACD DN's (This includes ACD DN's, CDN's and NACD DN's)	
	NEW	Add new data to the system	
	OUT	Remove data block When removing an ACD DN from the Meridian 1 which is monitored by ACD-MAX, the DN is not automatically deleted from the ACD-MAX configuration.	
	PRT	Print the specified data	
RFRQ		Report Frequency. See also ROPT prompt for Report Options.	acdc-2
	0	No reports	
	1	All reports hourly on the hour	
	2	All reports hourly on the half-hour	
	3	All reports half-hourly	
	4	Report 3 every quarter-hour, no other reports.	
	5	Report 3 every quarter-hour, other reports hourly on the hour.	
	6	Report 3 every quarter-hour, other reports hourly on the half-hour.	
	7	Report 3 every quarter-hour, other reports every half-hour	

# LD 23

Prompt	Response	Comment	Pack/Rel
RGAI	(NO) YES	Ring Again for Internal calls  When internal caller dials a queue with no available agents, fast ringback is provided. If RGAI = YES, the caller can activate Ring Again to be presented to the next available agent.  Enter YES for Data Service Access Code. (DSAC). RGAI must = YES for DSAC.	acda-8
ROPT	1 2 3 4	Report Options Agent group Queue Trunk routes Agent position Precede with X to disable a report. More than one option allowed. Any new entry replaces the old data.	acdc-2
RPRT	(YES)  NO	Information about this ACD-DN (or CDN) will be included in management reports and status displays  Information about this ACD-DN (or CDN) will be excluded in management reports and status displays.  RPRT is prompted only if a SCB or an ADS block exists for this customer.	acdc-17
RSND	(4)-16	Message Resend timer (in seconds)  This is the length of time the Source node waits for a response from the Target node after sending a Call Request message.  When the Resend Timer expires, another message is sent. If the second Call Request message expires without a response, the Call Request is removed from the network queue. The Resend Timer should be changed only if the network uses multiple hops and ISL with lower baud rates.  A single hop typically requires 100 ms of real time to set up the call. When the Resend Timer is too large, the control function of the timer to limit traffic to busy nodes is lost. If the Resend Timer is too small, the access of calls to nodes may be limited unnecessarily.  The Resend Timer must be defined for the Source node and the Target nodes.	nacd-15

Prompt	Response	Comment	Pack/Rel
RTPC	(NO)	Real Time Processing The SAGP Load Management command does not take effect in real time.	supp-9
	YES	The SAGP Load Management command takes effect in real time.	
RTQO	(NRD)	Return to Queue Option Not Ready	acd-23
	MSB	Make Set Busy	
RTQT	(0)-50	Return to Queue Timer after no answer in number of ringing cycles	acd-23
SDNB	(NO) YES	Secondary DN Blocking Block calls to the Secondary DN while busy on ACD call.	acdb-12
SFNB	1 2 ...	Set Feature Notification Bitmap  SFNB is used for messages such as: SFN (login), SFN (logout), ...	nxcc-22
		This bitmap is downloaded by the application which is used to control the sending of SFN messages on behalf of the acquired TN. A numeric value is printed only if the corresponding message is enabled.	
		SFNB is printed if AACR = YES.	
SFRQ	1	Frequency of Status Display updates 30 seconds	acdc-2
	2	60 seconds	
SHR		Start Hour	acdc-2
	0-23	Hour of day that data reporting starts	
SPCP	(NO) YES	Separate Post Call Processing (to enable separate DCP/PCP indication)	acdb-1
		When SPCP = YES, agents in Post Call Processing (PCP) are separated from agents in Direct Call Processing (DCP). Changing the SPCP option for an ACD DN changes all ACD DNs in the same customer group.	

# LD 23

Prompt	Response	Comment	Pack/Rel
		<p>Agent (AGT) key lamp states and display (DAG) field on supervisor telephones are affected by SPCP as follows:</p> <p>AGT key lamp steady:</p> <ul style="list-style-type: none"><li>SPCP = YES; agent is on an ACD call</li><li>SPCP = NO; agent is on an ACD call or not ready (NRD)</li></ul> <p>AGT key lamp fast flash:</p> <ul style="list-style-type: none"><li>SPCP = YES; agent is on non-ACD call or NRD</li><li>SPCP = NO; agent is on non-ACD call</li></ul> <p>DAG Display ACD DN:</p> <ul style="list-style-type: none"><li>SPCP = YES; displays # of agents on ACD calls</li><li>SPCP = NO; displays # of agents on ACD calls or NRD</li></ul> <p>DAG Display non-ACD DN:</p> <ul style="list-style-type: none"><li>SPCP = YES; displays # of agents on non-ACD calls or NRD</li><li>SPCP = NO; displays # of agents on non-ACD calls</li></ul> <p>The SPCP option is a customer-wide option. A change to SPCP for any ACD queues affects all ACD queues for that customer.</p>	
SRPT	(NO) YES	<p>Short Report option for report 4 (Agent position) Use the short report when more than one agent, each with a unique agent ID, logs into the same position ID during a report period.</p>	acdc-2
SRRT	0-511	<p>Second RAN Route number for ACD The route and at least one trunk must exist before defining SRRT. Enter X to remove.</p>	acda-1
SRT	0-2044	<p>Second RAN Time Time in seconds before second RAN is connected to ACD calls. Prompted if SRRT is defined. There is no default for SRT.</p>	acda-1

Prompt	Response	Comment	Pack/Rel
STIO	0, 1, 2,...15	Status Input/Output devices  Enter all Input/Output devices assigned for status displays. The device must be first defined in LD 17. Prompted if a Schedule Block (SCB) exits. Enter X to remove.	acdc-2
TABL	x	Table. Where: x =  D = Day Table N = Night Table S = Source Table  The Day Table is mutually exclusive with TOFT. The Night Table is mutually exclusive with NCFW.	nacd-15
TDNS	(NO)  YES	DNIS number is not an original Called Party of a defined CDN queue.  DNIS number is an original Called Party of a defined CDN queue. TDNS = YES is recommended if a CDN is defined for the Mobility Control Point (MCP) application to control a Personal Communication Service (PCS) call.	basic-20
TOFT	2-1800	Timed Overflow Threshold (in seconds)  Before defining the TOFT value, first delete that OVDN from its Source ACD DN. Then, enter the time, in seconds, that you want a call to wait in queue before it overflows to an OVDN.  When REQ = CHG, and the OVDNs are answering TOF calls, an error message is output indicating the affected Target ACD DNs.  Enter X to disable the feature. If no value is entered, NONE is printed.	tof-10
TOT4	(NO) YES	Totals on report 4 Averages are output on report 4 (Agent position) Totals are output on report 4 (Agent position) Prompted if ROPT = 4. If TOT4 = YES, HDCP column is output on report 1 and 4. Must have ACD-C enabled.	acdc-10

# LD 23

Prompt	Response	Comment	Pack/Rel
TRDN	xxxx	Treatment DN for IVR queue  A treatment DN does not have to be a valid DN in the switch. If Meridian Mail is to be used for both Voice Messaging and IVR, a Treatment DN should not be the same as any Meridian Mail voice box. Enter X to remove.	ivr-18
TRGT	xxxx tttt	Target. Where:  xxxx = Target ACD DN tttt = time (0-1800) in seconds  Up to 20 target ACD DN's can be defined. For each target, tttt is the total time from the call entering the ACD queue until a call request is sent to the target. TRGT rounds up to an even number.	nacd-15
TSFT	0-(20)-510	Telephone Service Factor Threshold (in seconds) Prompted if a Schedule Block (SCB) exits.	acdc-1
TYPE		Type of data block	
	ACD	Automatic Call Distribution data block Requires Basic Automatic Call Distribution (BACD) package 40.	bacd-1
	ADS	Auxiliary Data System data block Requires Automatic Call Distribution Package C (ACDC) package 50. Not valid when REQ = PRT.	acdd-2
	CDN	Control Directory Number data block  This is a special DN created to specify a destination ACD DN to which incoming calls are directed. Multiple CDNs can direct calls to the same ACD DN providing different treatments based on the CDN parameters.  Requires Enhanced ACD Routing (EAR) package 214.	ear-17
	NACD	Network ACD data block Requires Network Automatic Call Distribution (NACD) package 207.	nacd-15
	OBVP	Observe Password table	oas-3.0
	SCB	Schedule data Block for ACD Management Reports Requires Automatic Call Distribution, Package C (ACDC) package 42.	acdc-2

Prompt	Response	Comment	Pack/Rel
UMG	(NO) YES	User to User Messaging	ims-2
UMT	2-(6)-15	Update Message Time Silence interval in seconds after message queue alert tone.	ims-2
USFB	1 2 ...	Unsolicited Status Message (USM) Filter Bitmap USFB applies to messages such as: Onhook, Offhook, Ringing, Active, Disconnect, Unringing, Hold, Restore, Ready, Not Ready, Walkaway, Walkaway Return, Reserved, Unreserved, ... This bitmap is downloaded by the application which is used to control the sending of USM messages on behalf of the acquired TN. A numeric value would only be printed if the corresponding message set is enabled. USFB is printed if AACR = YES.	nxcc-22
UST	(NO) YES	User Status update	ims-2
UUI	(NO) YES	Use- to-User Information	uui-3.0
VSID	0-15	Value Added Server ID of VAS providing VMS VASs are external server equipment facilities such as Meridian Mail. Prompted if IMS or ISAP = YES. Must be defined in LD 17.	csl-8

# LD 23

---

## LD 24: Direct Inward System Access

---

Overlay program 24 allows data for the Direct Inward System Access (DISA) and the Emergency Services Access feature to be created, modified, and printed.

## Prompts and responses by gate opener

### DIS: Direct Inward System Access (DISA)

---

Prompt	Response	Comment
REQ:	aaa	Request
TYPE:	DIS	Type of data block = DIS (Direct Inward System)
CUST	xx	Customer number associated with this data block
SPWD	xxxx	Secure data Password
DN	x...x	DISA Directory Number (x...x = 1-7 digit DN)
CCBA	(NO) YES	Allow Collect Call Blocking Answer signal to be sent
SCOD	x...x	Security Code
AUTR	(NO) YES	Authorization Code required
TGAR	0-(1)-15	Trunk Group Access Restriction
NCOS	(0)-31	Network Class of Service
COS	aaa	Class of Service (aaa = (CTD), FR1, FR2, FRE, CUN, SRE, TLD, or UNR)
RANR	0-511, (X)	Route number for DISA RAN (Entering "X" removes the existing route and deactivates DISA RAN)
- RTMR	(0)-10-300	Route timer
DGTS	x...x	Digits for DISA Digit Insertion
- DLNT	(YES) NO	Dial tone needed after digit insertion
CRCS	x	Code Restriction Class of Service

---

---

# Prompts and responses

## ESA: Emergency Services Access Data Block

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	ESA	Type of data block = ESA (Emergency Services Access)
CUST	xx	Customer number associated with this data block
ESDN	xxxx	Emergency services Directory Number
ESRT	0-511	Emergency Services Access route number
DDGT	x..x	Directing digits
DFCL	x..x	Default ESA Calling Number
OSDN	x..x	On-Site Notification station DN

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
AUTR	(NO) YES	Authorization Code required If YES, the user enters the authorization code but not the special prefix access code.	disa-7
CCBA	(NO) YES	Collect Call Blocking Denied Collect Call Blocking Allowed Collect Call Blocking (CCB) package 290 is required.	ccb-21
COS	(CTD) CUN FR1 FR2 FRE SRE TLD UNR	Conditionally Toll Denied Class of Service Conditionally Unrestricted Class of Service Fully Restricted class 1 Fully Restricted class 2 Fully Restricted Class of Service Semi-Restricted Class of Service Toll Denied Class of Service Unrestricted Class of Service	disa-1
CRCS	x	Code Restriction Class of Service New Flexible Code Restriction (NFCR) must be activated at least once.	
CUST	xx	Customer number associated with this data block as defined in LD 15.	disa-1
DDGT	x..x	Directing digits (e.g. 1, 11, 911, etc.). Up to 4 digits are accepted.  The configured digits are outputted as the called number if the outgoing trunk for the ESA call is a CAMA trunk.	esa- 23

Prompt	Response	Comment	Pack/Rel
DFCL	x..x	<p>Default ESA Calling Number. The input must be the following lengths:</p> <p>* On a system that is not FNP packaged, 8 or 11 digits are accepted if the first digit of the input is '1'; otherwise the input must be 7 or 10 digit.</p> <p>* On a system that is FNP packaged, up to 16 digits are allowed to be entered.</p> <p>'X' deletes the data.</p> <p>Note that the prompt does not expect a CLID entry number.</p>	esa- 23
DGTS	x...x	<p>Digits for DISA Digit Insertion.</p> <p>A maximum of 31 digits can be defined.</p>	dpna-21
	X	<p>Removes existing digits and deactivates DISA Digits Insertion.</p> <p>Direct Private Network Access (DPNA) package 250 is required.</p>	
DLNT	(YES) NO	<p>Dial tone needed after digit insertion</p> <p>Dial tone not needed after digit insertion</p>	dpna-21
DN	x...x	<p>DISA Directory Number</p> <p>DN (represented in response by "x...x") can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.</p> <p>All trunk routes terminating in DISA must auto-terminate (LD 16 prompt AUTO = YES) and trunks must have ground start signaling (LD 14 prompt SIGL = GRD). The DN must be the same as prompt ATDN in LD 14.</p>	disa-1
ESDN	xxxx	Emergency services DN. Up to 4 digits are accepted.	esa- 23

# LD 24

Prompt	Response	Comment	Pack/Rel
ESRT	0-511	Emergency Services Access route number. Precede with "X" to delete the data.  Route number of the following routes types are accepted as valid input:  CAM COT DID FEX TIE WAT  The route number of an ISA service route (LD16, ISAR = YES) can be entered for ESRT as long as the route type of the ISA service route is one of the above.	esa- 23
NCOS	(0)-99	Network Class of Service	ncos-1
OSDN	x..x	On-Site Notification station DN. The input must be a valid single appearance internal DN.  'X' deletes the data.  The On Site Notification function is dependent on the OSDN to locate and alert the OSN set in the event of an ESA call.	esa- 23
RANR	0 - 511 (X)	Route number for DISA RAN  Removes existing route and deactivates DISA RAN.  This prompt appears with Direct Private Network Access (DPNA) package 250 and Recorded Announcement (RAN) package 7.	dpna-21
REQ	CHG END NEW OUT PRT	Request  Change existing data block  Exit Overlay program  Create a new DISA data block  Remove a DISA data block  Print DISA data block	disa-1

Prompt	Response	Comment	Pack/Rel
RTMR	(0)-10-300	Route Timer  RTMR = the maximum time (in seconds) that a caller can wait for an available RAN trunk before being removed from the RAN queue. A caller that has failed to capture a RAN trunk during the RTMR time limit will proceed with the call as if DISA RAN has completed. Entering "0" clears the timer and deactivates the DISA RAN timer.	dpna-21
SCOD	x...x	Security Code (1-8 digit DISA security access code)  The security code can be changed using REQ = CHG, but is only removed by removing the entire DISA data block. Enter X to remove. Entering <cr> = no code or code not changed.	disa-1
SPWD	xxxx	Secure Data Password  Prompted only if the password is defined in LD 15. If the password is not entered, the security code will not print when PRT is requested.	disa-1
TGAR	0-(1)-15	Trunk Group Access Restriction	disa-1
TYPE		Type of data block	disa-1
	DIS	Direct Inward System data block	
	ESA	Emergency Services Access data block	esa-23

# LD 24

---

## LD 25: Move Data Blocks

---

Overlay program 25 allows data associated with loops, shelves, or cards to be moved to or interchanged with different loops, shelves, or cards.

The program also allows the data associated with different customers to be moved at the same time as long as all source and destination loops, shelves, and cards are identical for all customers specified.

### Move and swap rules

- 1 Before using MOV or SWP the following hardware should be removed from the system and reconstructed after the MOV is completed:
  - Consoles
  - Digitone Receivers
  - Dial Tone Detectors
  - Multifrequency Compelled Signaling (MFC/MFE)
  - PRA loops
  - ACD telephones
  - All lines associated with the loop or card on the destination side
- 2 Loops must be configured in LD 17.
- 3 NT8D17 Conference/TDS loop cannot be moved or swapped with LD 25.
- 4 When moving a card, the units on the source card must match with the card type on the destination side.

# LD 25

## Prompts and responses

---

Prompt	Response	Comment
REQ:	aaa	Request (aaa = END, SWP, or MOV)
CUST	xx xx ... xx	Customer number
SRCL	xxx	Source Loop number from which data is to be moved
SRC	1-50	Source Card for Small System
DSTL	xxx	Loop number Destination to which data is to be moved
DEST	1-50	Destination Card for Small System
SHCD	a...a	Shelf Card (a...a format = ss TO ds or ss c TO ds c)
STUN	xx	Starting destination Unit Number
MVSG	(NO) YES	Move Segment
- SHSG	a...a	Shelf Segment (a...a format = ss sseg TO ds dseg)
STSG	0-3	Starting destination Segment

---

## Move and swap rules

Scenario: Move or swap a shelf or card from source loop to destination loop		DESTINATION		
		Single density loop (SD)	Double density loop (DD)	Quadruple density loop (4D)
SOURCE	Single density loop (SD)	all cards are SD	all cards are SD	all cards are SD
	Double density loop (DD)	all cards must be SD	cards can be DD or SD	cards can be DD or SD
	Quadruple density loop (4D)	all cards must be SD	cards can be DD or SD	cards can be 4D, DD or SD

Scenario: Move or swap a whole loop from source loop to destination loop		DESTINATION		
		Single density loop (SD)	Double density loop (DD)	Quadruple density loop (4D)
SOURCE	Single density loop (SD)	shelf 0-3	if only shelf 0 and/or 1 is configured on loop	if only shelf 0 is configured on loop
	Double density loop (DD)	all cards on shelf must be SD	shelf 0-1	if only shelf 0 is configured on loop
	Quadruple density loop (4D)	all cards on loop must be SD	cards can be DD or SD	shelf 0

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
CUST	xx xx ... xx	Customer number Enter the customers affected by the move or swap operation. Customer 0 must be specified to move digitone receivers on the source loop.	basic-1
	<cr>	All customers affected  The move/swap superloop data on a customer basis is not supported. Enter a return, (<cr>) when moving or swapping superloop data.	
DEST	1-50	Card number Destination to which data is to be moved (not supported for digital cards). If the loop has D-channel as a backup, REQ = MOV is not supported. For Small System, card 0 is not supported.	basic-1
DSTL	xxx	Loop number Destination to which data is to be moved Where xxx is: <ul style="list-style-type: none"> <li>• 0-159</li> <li>• 0-255 Systems with Fibre Network Fabric</li> <li>• 0-9 Small System</li> <li>• 1-9 11-19 21-29 31-39 41-49, Small System for DTI, DTI2, PRI, PRI2</li> <li>• 11-14, 21-24, 31-34, 41-44 for Succession 1000</li> </ul> If the loop has D-channel as a backup, REQ = MOV is not supported.	basic-20  fnf-25  lse-25  basic-1
MVSG	(NO) YES	Move or swap Superloop Segments	basic-15
REQ		Request	
	END	Exit Overlay program.	basic-1
	MOV	Move data associated with an existing loop to a vacant loop (see Table ).  CAUTION: Before using MOV, consoles and digitone receivers should be removed from the database and reconstructed after the move is completed.	

Prompt	Response	Comment	Pack/Rel
		<p>MOV command can be used to move data blocks at a card, shelf or loop level within the following guidelines:</p> <ol style="list-style-type: none"> <li>Before using the MOV command, the following hardware should be removed from the source and destination loop, shelf or cards and reconstructed after the move is completed. <ul style="list-style-type: none"> <li>Consoles</li> <li>Digitone Receivers</li> <li>Dial Tone Detectors</li> <li>Multifrequency Compelled Signalling cards (MFC/MFE)</li> <li>PRA loops</li> <li>ACD telephones</li> <li>All lines associated with the loop or card on the destination side of the move command.</li> </ul> </li> <li>Loops must be configured in LD 17</li> <li>NT8D17 Conference/TDS card cannot be moved with LD 25</li> <li>Type of source card must match with the card type on the destination side.</li> <li>Cannot move Superloop data on a customer basis (SCH5235)</li> </ol>	basic-25.4
	SWP	Swap (interchange) data associated with existing loops (See "Move and swap rules" on page 707.)	
SHCD	ss TO ds ss c TO ds c	<p>Shelf Card</p> <p>Move or interchange data to or between shelves.</p> <p>Move or interchange data to or between cards.</p> <p>Where:</p> <p>c = card number (0-15)            ss = source shelf            ds = destination shelf</p> <p>Shelf range:</p> <p>SD = 0-3            DD = 0-1            4D = 0            8D = 0-1 (superloops only)</p>	basic-1

# LD 25

Prompt	Response	Comment	Pack/Rel
SHSG	ss sseg TO ds dseg	Move/Swap source Shelf Segment to destination Shelf Segment, where:  ss = source shelf ds = destination shelf sseg = source segment dseg = destination segment.  The SHSG command is used to move or swap superloop segments.	basic-15
SRC	1-50	Source Card number from which data is to be moved (not supported for digital cards). If the loop has D-channel as a backup, REQ = MOV is not supported. For Small System, card 0 is not supported.	basic-1
SRCL	xxx	Source Loop number from which data is to be moved Where: <ul style="list-style-type: none"><li>• xxx = 0-159</li><li>• xxx = 0-255 Systems with Fibre Network Fabric</li><li>• xxx = 0-9 Small System</li><li>• xxx = 1-9 11-19 21-29 31-39 41-49 Small System for DT1, DTI2, PRI, PRI2</li><li>• 11-14, 21-24, 31-34, 41-44 for Succession 1000</li></ul> If the loop has D-channel as a backup, REQ = MOV is not supported.	basic-20 fnf-25 lse-25 basic-1
STSG	0-3	Starting destination Segment For superloops only, if REQ = MOV, enter the starting destination segment to which the shelf is to be moved.	basic-15
STUN	xx	Starting destination Unit Number  Enter the starting destination unit number to which the first source unit is to be moved. The source card must not be on a superloop; the destination card must be on a superloop.  The value of xx depends on source loop density.	basic-15

---

Prompt	Response	Comment	Pack/Rel
--------	----------	---------	----------

---

For 500/2500 and digital line cards:

SD, xx = 0, 4, 8, 12

DD, xx = 0, 8

QD, xx = 0, 8 (8 for digital line cards only)

For a Digitone Receiver card the destination density is 8D and the source density is:

SD, xx = 0, 1, 2, 3, 4, 5, 6, 7

DD, xx = 0, 2, 4, 6

QD, xx = 0, 4

SD, DD trunk cards cannot be moved to Universal or E&M/Dictation Trunk cards.

Different source cards cannot be mixed into Superloop cards with one destination. Only ALC, DLC and DTR can be moved to superloops.

---

# LD 25

---

## LD 26: Group Do Not Disturb

---

Overlay program 26 allows Do Not Disturb groups to be created, modified, and printed.

# LD 26

## Prompts and responses

---

Prompt	Response	Comment
REQ:	aaa	Request
TYPE:	DND	Type of data block = DND (Do Not Disturb Group)
CUST	xx	Customer number associated with this data block
GPNO	0-99	Group Number or new Group Number to be formed
TOGP	0-99	Move to Group number
GRPx	0-99	Number of next Group to be moved
STOR	x...x	DN to be Stored
RMOV	x...x	Remove DN

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
CUST	xx	Customer number associated with this data block as defined in LD 15.	dndg-1
GPNO	0-99 <cr>	Group Number or new Group Number to be formed Print all Group Numbers. Prompted when REQ = PRT.	dndg-1
GRPx	0-99 <cr>	Number of next Group to be moved Proceed to next prompt.	dndg-1
REQ	CHG END MOV MRG NEW OUT PRT REM	Action Request Change existing data block. Exit Overlay program. Move a DN from one DND Group data block to another Group data block. Merge existing Group data blocks into a new Group (the old groups will still exist) data block. Create a New data block. Remove data block. Print DND Group data block. Remove an entry from a Group data block.	dndg-1
RMOV	x...x  G0-G99	Remove DN Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.  Remove Group number	dndg-1
STOR	x...x  G0-G99	DN to be stored Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.  Group number to be stored. Numbers may be added when REQ is CHG.	dndg-1
TOGP	0-99	Move To Group number	dndg-1
TYPE	DND	DND Group data block type	dndg-1

# LD 26

---

## LD 27: ISDN Basic Rate Interface (BRI) Administration

---

Overlay program 27 was introduced to configure ISDN Basic Rate Interface hardware.

If ISDN BRI is being configured for the first time the following sequence must be used:

- 1 Configure Protocol group (PROT) data block, Link Access Protocol on D-channel (LAPD) data block.
- 2 Configure PRI loop, route, and channel data blocks for packet data transmission.
- 3 Configure Multi-purpose ISDN Signaling Processor (MISP) data block.
- 4 Configure Basic Rate Signaling Concentrator.
- 5 Configure S/T Interface Line Card (SILC) or U Interface Line Card (UILC) data block.
- 6 Configure Digital Subscriber Loop (DSL) data block.
- 7 Configure Terminal Service Profile on DSL (TSP) data block.

If changing the existing ISDN BRI service this sequence does not have to be followed, but the relationship of one data block to another must be observed. Due to interactions the changing of one data block may require the changing of other data blocks.

Refer to the *ISDN BRI Administration* NTP for complete details.

# Prompts and responses

## Contents

Section	Page
<i>Prompts and responses by data block:</i>	
BRSC: Basic Rate Signaling Concentrator data block	718
DNAT: Data Network Address Tables data block	719
DSL: Digital Subscriber Loop data block (APPL = BRIT or BRIE)	722
LAPB: Link Access Procedure - Balanced data block	723
MISP: Multipurpose ISDN Signaling Processor data block	724
PVC: Permanent virtual circuit connections data block	725
PROT or LAPD: Protocol or Link Access Protocol data block	726
TSP: Terminal Service Profile data block	727
X25P: X25P packet protocol parameters data block	728

## BRSC: Basic Rate Signaling Concentrator data block

Prompt	Response	Comment
REQ	aaa	Request
TYPE	BRSC	Type of data block = BRSC (Basic Rate Signaling Concentrator)
BRSC	l s c	Basic Rate Signaling Concentrator card
MISP	x...x	MISP loop number for large systems; SISP card slot for small systems
DPSD	(NO) YES	D-channel Packet Switched Data
- MPHc	(YES) NO	Switch Route D-channel packet data to (Meridian Packet Handler) or public switched packet data network
- MPH	l	Meridian Packet Handler loop
- PRI_CH	l ch	PRI for Packet Handler and BRSC connections

## CARD: SILC/UILC card data block

The S/T Interface Line Card (SILC) or U Interface Line Card (UILC) configuration procedures identify the location, the card type, and the MISP network loop for each SILC or UILC installed.

- in the Large System Intelligent Peripheral Equipment (IPE) and Common Equipment (CE) Modules
- in a card slot for each SILC or UILC installed in the Base or Expansion cabinet of a Small System
- in a card slot for each SILC or UILC installed in a Media Gateway of a Succession 1000 system.

After the card configuration block is created, the dedicated D-channels are automatically assigned if the MISP is enabled. When REQ = PRT, entering <CR> at the TN prompt prints out information for all the cards in the system.

Prompt	Response	Comment
REQ	aaa	Request
TYPE	CARD	Type of data block = CARD (SILC/UILC)
TN	l s c u	Terminal Number of SILC or UILC
MISP	x...x	MISP loop number for large systems; SISP card slot for small systems (Option 11C)
CTYP	aaaa	Card Type (aaaa = SILC or UILC)

## DNAT: Data Network Address Tables data block

Prompt	Response	Comment
REQ	aaa	Request
TYPE	DNAT	Type of data block = DNAT (Data Network Address Table)
DNAT	1-32	DNA Table to print
DNIC	xxxx	Data Network Identification Code
NTN	x...x	Network Terminal Number

## DSL: Digital Subscriber Loop data block (APPL = BRI)

The Digital Subscriber Loop (DSL) configuration determines the characteristics for each DSL connected to an SILC or UILC. Up to eight DSLs can be assigned to each SILC or UILC. When REQ = PRT, entering <CR> at the DSL prompt prints out all DSLs in the system.

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	DSL	Type of data block = DSL (Digital Subscriber Loop)
DSL	l s c dsl	Digital Subscriber Loop address
DES	d...d	DSL Designator
CUST	xx	Customer number associated with this function
CTYP	aaaa	Card Type (aaaa = SILC or UILC)
OPT	(BRIL)	BRI Line application
APPL	BRI	Basic Rate Interface
MISP	x...x	MISP loop number for large systems; SISP card slot for small systems and Succession 1000
MODE	aaaa	Network Terminal line sampling mode for SILC only (aaaa = NTAS or NTFS)
B1CT	aaa	B-channel 1 Call Type (aaa = (VCE DTA), PMD, or IPD)
- TN	l ch	PRI loop number and B-channel number when B1CT = PMD
- MPH	l	Meridian Packet Handler loop number when B1CT = IPD
- PRI	0-158	Primary Rate Interface loop
- CH	xx	Channel number
B2CT	aaa	B-channel 2 Call Type (aaa = (VCE DTA), PMD, or IPD)
- TN	l s c	PRI loop number and B-channel number when B2CT = PMD
- MPH	l	Meridian Packet Handler loop number
- PRI	0, 2, 4, ...158	Primary Rate Interface loop
- CH	xx	Channel number
LDN	aa	Listed Directory Number (aa = (NO) or 0-5)
XLST	(0)-254	Pretranslation group
MTEI	1-(8)-20	Maximum Terminal Endpoint Identifiers
LTEI	n1 n2, m	Logical Terminal and Terminal Endpoint Identifiers

---

MCAL	2-(16)-32	Maximum number of Calls on a DSL at one time
MTSP	1-(8)-16	Maximum Terminal Service Profiles
PGPN	0-15	Protocol Group Number
LAPD	0-15	Link Access Protocol on D-channel
PRID	1-4	Protocol ID
- PDCA	1-16	Pad Category table defined in LD 73
FDN	x...x	Flexible Call Forward No Answer Directory Number
EFD	x...x	External Flexible Call Forward No Answer Directory Number
HUNT	x...x	Hunt directory number
EHT	x...x	External Hunt directory number
TGAR	0-(1)-31	Trunk Group Access Restriction number
NCOS	(0)-99	Network Class of Service
SGRP	(0)-999	Scheduled Access Restriction Group number
CAC	(0)-10	Category Code for R2/MFC
CAC_CIS	0-(3)-9	CIS ANI category code
CAC_MFC	(0)-10	MFC CNI Category Code
CLS	a...a	Class of Service (CLS responses begin on page 732)

---

# LD 27

## DSL: Digital Subscriber Loop data block (APPL = BRIT or BRIE)

Prompt	Response	Comment
REQ	aaa	Request
TYPE	DSL	Type of data block = DSL (Digital Subscriber Loop)
DSL	l s c dsl	Digital Subscriber Loop address
DES	d...d	DSL Designator (1 to 6 alphanumeric characters)
APPL	aaaa	Basic Rate Interface (aaa = BRIT or BRIE)
- ISDN_MCNT		
	60-(300)-350	Layer 3 call control message count per 5 second time interval.
CUST	xx	Customer number associated with this function
CTYP	aaaa	Card Type (aaaa = SILC or UILC)
MISP	x...x	MISP loop number for large systems; SISP card slot for Small System and Succession 1000
MODE	aa	Mode for DSL (aa = (TE) or NT)
- MTFM	(NO) YES	Multi-Frame Mode
TKTP	aaa	Trunk Type (aaa = TIE, COT, and DID)
CLOK	(NO) YES	Clock source
- TSET	0-15	Threshold Set for clock errors
PDCA	1-16	Pad Category table (defined in LD 73)
ROUT	0-511	Route number for the Trunk DSL
TIMR	(NO) YES	Change Timer values
- T310	10-(30)-60	T310 Timer value in seconds
	110-(120)	T310 Timer range for PRI, PRI2, and BRI trunks
B1	(NO) YES	Change B-channel 1 configuration
- MEMB	1-510	Member number of BRI route
- TGAR	0-(1)-31	Trunk Group Access Restriction number
- NCOS	(0)-99	Network Class of Service
- CLS	aaa	Class of Service (CLS responses begin on page 732)
B2	(NO) YES	B-channel 2
- MEMB	1-510	Member number of BRI route
- TGAR	0-(1)-31	Trunk Group Access Restriction number
- NCOS	(0)-99	Network Class of Service
- CLS	aaa	Class of Service (CLS responses begin on page 732)

## LAPB: Link Access Procedure - Balanced data block

The Link Access Protocol for B-channels defines the B-channel packet data configuration. Meridian 1 Packet Handler (MPH) package 248 must be equipped.

Prompt	Response	Comment
REQ	aaa	Request
TYPE	LAPB	Type of data block = LAPB (Link Access Procedure - Balance)
PGPN	0-15	Protocol Group Number
USER	(NO) YES	Print groups selected at PGPN prompt
LAPB	(NO) YES	Change Link Access Protocol for B-channels
- T1	2-(6)-130	Response Timer in units of 0.5 seconds
- T2	1-(4)-129	Maximum frame delay in units of 0.5 seconds
- T3	xxx	Idle Timer in units of 0.5 seconds (xxx = 0 or 3-(12)-131)
- N1	23-(135)-263	Maximum I-frame size in octets
- N2	1-(10)-15	Maximum number of retries
- K	(1)-7	Window size

## MISP: Multipurpose ISDN Signaling Processor data block

The Multi-purpose ISDN Signaling Processor (MISP) configuration procedures identify each MISP in the system and its packet handling capabilities. After the MISP is configured it can be enabled using LD 32. An MISP can support any combination of SILCs and UILCs up to a total of four, which are assigned to the MISP using the SILC/UILC configuration procedure.

When REQ = PRT, entering <CR> at the LOOP prompt prints out all MISPs in the system. When REQ = CHG, the following applies:

- MISP must be disabled when adding/removing D-channel packet capability
- remove Packet Mode Data call type B-channels before removing the B-channel packet capability
- remove Logical Terminal Identifiers (LTIDs) before removing the D-channel packet capability

Prompt	Response	Comment
REQ	aaa	Request
TYPE	MISP	Type of data block = MISP
LOOP	0, 2, 4...158	MISP/SISP loop number
CARD	1-9	SISP card slot number (valid only for Small System)
APPL	a...a	Application (a...a = BRI, BRIE, BRIL, or MPH)
PH	a...a	Packet Handler (a...a = DCH, BCH, or BDCH)
- PRI	0, 2, 4...158	Primary Rate Interface
- CH	xx	Channel number
DPSD	(NO) YES	D-channel Packet Switched Data
- MPH	(YES) NO	Route D-channel packet switched data to the Meridian Packet Handler.
- TN	l s c u	Terminal Number
PRFX	0-9	DNA table Prefix
NTNO	(YES) NO	Public Switched Packet Data Network presentation
DNIC	xxxx	Data Network Identification Code
NWIF	1-3	MPH Network Interface identifier

---

- TN	l s c u	Terminal Number
- RATE	(64) 56	PSDN communication Rate
- LAPB	(NO) YES	Change LAPB parameters
- X25P	(YES) NO	Change X.25 parameters
- PVC	n1 n2	Permanent Virtual Circuit Logical Channel number range
- IC	n1 n2	Incoming Logical Channel number range
- TC	n1 n2	Two-way Logical Channel number range
- OC	n1 n2	Outgoing Logical Channel number range
- DNAT	1-32	DNA Table to print

---

### **PVC: Permanent virtual circuit connections data block**

---

<b>Prompt</b>	<b>Response</b>	<b>Comment</b>
REQ	aaa	Request
TYPE	PVC	Type of data block = PVC (Permanent virtual circuit connections)
MPH	loop	Meridian Packet Handler loop
PVCN	1-4	Permanent Virtual Circuit Number
XPVC	(YES) NO	External or internal PVC connection
- NWIF	1-3	MPH Network Interface identifier
NTN1	x...x	First Permanent Virtual Circuit connection to the NTN
LCN1	1-4095	Permanent Virtual Circuit Logical Channel number for NT1
NTN2	xx . . . xx	Second Permanent Virtual Circuit connection to the NTN
LCN2	1-4095	Permanent Virtual Circuit Logical Channel number for NT2

---

## PROT or LAPD: Protocol or Link Access Protocol data block

The protocol configuration procedures define the protocols used by ISDN BRI DSLs to communicate over ISDN. These protocol groups support various ISDN communication standards used in North America, Europe, and other continents and countries.

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	PROT	Type of data block = PROT or LAPD (Protocol group or Link Access Protocol on D-channel)
PGPN	0-15	Protocol Group Number
LAPD	(NO) YES	Change Link Access Protocol for D-channels
USER	(NO) YES	Print groups selected at PGPN prompt
- T200	(2)-40	Retransmission Timer in increments of 0.5 seconds
- T203	4-(20)-80	Maximum Time between transmission frames
- N200	1-(3)-8	Maximum Number of retransmissions
- N201	4-(260)	Maximum Number of contiguous octets or bytes in information element
- K	(1)-32	Maximum number of outstanding Negative Acknowledgment (NAKs)
- N2X4	0-(10)-20	Number of Status Inquiries when Remote Station is in peer busy for 1TR6
PGPN	<cr>	This prompt is repeated until <CR> is entered.

---

## TSP: Terminal Service Profile data block

The Terminal Service Profile (TSP) configuration procedures define the service profiles for ISDN BRI terminals connected to a DSL. A service profile specifies the type of transmission, the call restrictions, and the features the terminal can use.

Prompt	Response	Comment
REQ	aaa	Request
TYPE	TSP	Type of data block = TSP (Terminal Service Profile)
DSL	l s c dsl	Digital Subscriber Loop address
OPT	a...a	Options (a...a = DN, DNS, SPID, SUID, or USID)
USID	(0)-15	User Service Identifier
MPHC	(YES) NO	Route D-channel packet switched data to the Meridian Packet Handler
- SPID	a...a	Service Profile Identifier
TRMT	a	Terminating Type (D or B)
TEI	0-63	Static TEI for addressing terminal
BCH	x	Terminal Service Profile association (x = 1 or 2)
- LAPB	(NO) YES	Change LAPB parameters
- X25P	(YES) NO	Change X.25 Parameters
- NTN	x...x	Network Terminal Number
- PVC	n1 n2	Permanent Virtual Circuit Logical Channel number range
- IC	n1 n2	Incoming Logical Channel number range
- TC	n1 n2	Two-way Logical Channel number range
- OC	n1 n2	Outgoing Logical Channel number range
CDR	(NO) YES	Internal CDR
FEATID	aaa mmm nnn	Feature ID association
SSRV_NI	aaa mmm nnn	NI-1 Supplementary Service
SUPL_SVC	aaa	Supplementary Services (aaa = AO3 or AO6)
DN	x..x yyyy	Directory Number (x..x) and CLID table entry (yyyy)
- CT	aaa	Call Types for the DN (aaa = VCE or DTA)
- MCAL	1-(4)-8	Maximum Calls allowed per DN
- CLIP	(YES) NO	Calling Line Identification Presentation for incoming calls
- PRES	(YES) NO	Presentation of CLID to far-end on outgoing calls
- ANIE	(0)-n	ANI Entry
COLP	(NO) YES	Connected Line Identification Presentation

# LD 27

TRANS	(NO) YES	Transparent presentation of COLP, CLID coming from S0 terminal without presentation option
FEAT	a...a	Features (FEAT responses begin on page 736)
SSRV_ETSI	aaa mmm nnn	Supplementary Service
DFDN	x...x	Default Directory Number

---

## X25P: X25P packet protocol parameters data block

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	X25P	Type of data block = X25P (X.25 packet protocol parameters)
PGPN	0-15	LAPB Protocol Group Number
X25P	(YES) NO	Change X.25 Parameters
- T10/T20	15-(180)-930	Request restart Timer in 1 second units
- T11/T21	15-(180)-930	Call request Timer in 1 second units
- T12/T22	15-(180)-930	Reset request Timer in 1 second units
- T13/T23	0-15-(180)-930	Clear request Timer in 1 second units
- PSIZ	xxx	Default Packet Transmission Size in octets (xxx = 16, 32, 64, (128), or 256)
- WSIZ	1-(2)-7	Default Transmit Window Size in octets

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ANIE	(0)-n	<p>ANI Entry</p> <p>Where n=S_SIZE in customer data block.</p> <p>If ANIE=0, no entry is associated with the DN key.</p> <p>If ANIE is from 1-N:</p> <p>If ANIC=YES for the outgoing CIS route where the call takes place, then the components of the ANI message are retrieved from the ANI entry in Customer Data Block, if configured.</p>	cist-24
APPL		Application	bri-19
	(BRI)	Basic Rate Interface if Integrated Service Digital Network BRI Trunk Access (BRIT) package 233 and Basic Rate Interface Line Application (BRIL) package 235 not equipped.	
	BRIE	<p>Basic Rate Interface protocol engine</p> <p>BRIE supports the QSIG and EURO ISDN interfaces and requires BRIT package 233. Any changes in the DSL route has to match the BRIE loadware application.</p> <p>To configure the appropriate application for the DSL, the required application must be entered here. To add or delete an application, the MISP must be in a disabled state. To delete an application, all associated DSLs must be removed first.</p> <p>Precede with an X to remove.</p>	brit-20
	BRIL	<p>Basic Rate Interface Line</p> <p>APPL will default to BRIL if BRIL package 235 is equipped. Otherwise, BRIT will be the default.</p>	
	BRIT	<p>Basic Rate Interface Trunk</p> <p>BRIT supports SL-1, Numeris and 1TR6 interface. APPL will default to BRIL if BRIL package 235 is equipped. Otherwise BRIT will be the default. BRIT package 233 is required.</p>	

# LD 27

Prompt	Response	Comment	Pack/Rel
	MOB MPH	Mobility Routing Application Meridian Packet Handler BRIL and MPH cannot operate on the same MISP.  MPH can only be deleted if there are none of the following:  no D-channel packet data separators no B-channel or D-channel terminals no network interface no PVC connections	
B1	(NO) YES	Change B-channel 1 configuration When REQ = NEW B1 will not be prompted.	bri-18
B1CT	(VCE) (DTA) PMD IPD	B-channel 1 Call Type  Circuit switched Voice Circuit switched Data Packet Mode Data B-channel Packet Data with MPH  For PMD the B-channel packet data must have been specified at the PH prompt during the MISP configuration procedure. PMD cannot be selected simultaneously with VCE and/or DTA.  Precede with X to remove.	bri-19
B2	(NO) YES	Change B-channel 2 configuration.  When REQ = NEW and B2 = NO, all B1 parameters except for MEMB will be used as default.  When REQ = CHG, BS = NO and a change was made to ROUT on B1, all parameters will remain unchanged except for the route member number, which will be an unused member. A message will be output to inform the user of the new member number assigned.	bri-18

Prompt	Response	Comment	Pack/Rel
B2CT		B-channel 2 Call Type	bri-19
	(VCE) (DTA) PMD	Circuit switched Voice Circuit switched Data Packet Mode Data  For PMD, the B-channel packet data must have been specified at the PH prompt during the MISP configuration procedure. PMD cannot be selected simultaneously with VCE and/or DTA.	
	IPD	B-channel Packet Data with MPH  Precede with X to remove.	
BCH	1 2	TSP associated with the B1 DSL Channel TSP associated with the B2 DSL Channel	bri-19
BRSC	l s c	Basic Rate Signaling Concentrator Only 1 BRSC card can be enabled on a single IPE shelf.	bri-19
		loop = (0-254) Systems with Fibre Network Fabric	fnf-25
CAC	0-(3)-9	Commonwealth of Independent States Automatic Number Information category code Allowed with Commonwealth of Independent States-Three Wire Analog Trunk (CIST) package 221.	cist-21
CAC	(0) - 10	Multifrequency Compelled Signaling (MFC) CNI Category Code Allowed with Multifrequency Compelled Signaling (MFC) package 128.	mfc-9
CAC_CIS	0-(3)-9	CIS ANI category code	cist-24
CAC_MFC	(0)-10	MFC CNI Category Code	cist-24
CARD	1-9	Card slot for Small System ISDN Signalling Processor (SISP). CARD applies exclusively to Small System.	qsig-22
CDR	(NO) YES	Turn off Internal Call Detail Recording Turn on Internal Call Detail Recording	bri-19

# LD 27

Prompt	Response	Comment	Pack/Rel
CH	1-23 1-30	Channel number for PRI Channel number for PRI2  This channel carries D-channel packet data between the MISP and the packet handler. The PRI route and channel must have already been defined in LD 16 and LD 14. Prompted if PH = DCH or BDCH.	bri-18
CLIP	(YES) NO	Calling Line Identification Presentation for incoming calls.	bri-18
CLOK	(NO) YES	Clock source. Prompted if the following conditions are met:  CTYP = SILC DSL = 0 or 1 (card dsl number) MODE = TE  For Option 11C, the SILC must reside in slot 1-10 of the base cabinet.  For Succession 1000, the SILC must reside in slot 1-4 of the Media Gateway	bri-18        basic-1
CLS		Class of Service You can enter more than one Class of Service by separating each entry with a space.	
	(ABDD) ABDA	Abandoned call record and time to answer Denied Abandoned call record and time to answer Allowed	fcdr-18
	(APN) APY	ACD Priority not allowed ACD Priority allowed	dpnss-16
	(BRTD) BRTA	Brent Denied Brent Allowed	basic-3.0
	(CDMD) CDMA	CDMD denies external station activity records to be generated for the set CDMA allows external station activity records to be generated for the set	mct-20
	(DNAA) DNAD	DN of the key that makes the call used in ANI messages. Outgoing CDT/CDTI2 ANDN used as DN in ANI messages.	cist-21

Prompt	Response	Comment	Pack/Rel
		Commonwealth of Independent States - Three Wire Analog Trunk (CIST) package 221 is required.	
	(ICDD) ICDA	Internal Call Detail Recording Denied Internal Call Detail Recording Allowed	bri-20
	(MRD) MRA	Message Restriction Denied Message Restriction Allowed	mr-10
	(PGND) PGNA	Deny PAGENET access Allow PAGENET access	pagenet-22
	(PRMD) PRMA	Deny MLPP Alternate Party Preemption Allow MLPP Alternate Party Preemption	atvn-25.47
	(THFD) THFA	Centrex Switchhook Flash (THF) Denied Centrex Switchhook Flash (THF) Allowed	ipra-21
	(UDI) RDI	Unrestricted DID Restricted DID	supp-10
	(CTD) CUN FR1 FR2 FRE SRE TLD UNR	Conditionally Toll Denied (valid for TIE trunks only) Conditionally Unrestricted (valid for TIE trunks only) Fully Restricted Class 1 (valid for TIE trunks only) Fully Restricted Class 2 (valid for TIE trunks only) Fully Restricted (valid for TIE trunks only) Semi-Restricted (valid for TIE trunks only) Toll Denied (valid for TIE trunks only) Unrestricted	
COLP	(NO)  YES	Connected Line Identification Presentation Optional CONNECTED NUMBER IE and optional connected subaddress IE are not passed from M1 to S0 Optional CONNECTED NUMBER IE and optional CONNECTED SUB-ADDRESS IE are passed from M1 to S0	bril-22
CT	VCE DTA	Circuit switched Voice Call Type for the DN Circuit switched Data Call Type for the DN	bri-18
		One or more call types can be entered by separating each entry with a space. The call types entered must have been specified for the B1CT and B2CT prompts during the DSL configuration procedures. Precede with X to remove.	

# LD 27

Prompt	Response	Comment	Pack/Rel
CTYP	SILC UILC	S/T Interface Line Card Type U Interface Line Card Type  This prompt is displayed only if the S/T (SILC) or U(UILC) Interface Line Card has not been previously configured or when configuring another DSL on the same SILC/UILC.	bri-18
CUST	xx	Customer number associated with this function as defined in LD 15.	bri-18
DES	d...d	DSL Designator (1 to 6 alphanumeric characters)	bri-18
DFDN	x...x	Default Directory Number  Enter a 1 to 7-digit directory number. This directory number must have been previously defined at the DN prompt. A directory number can be associated with multiple TSPs.  Only one default DN can be defined for a TSP. This DN is sent in the outgoing setup if the terminal does not send a calling line identification number with the outgoing call.	bri-18
DMPH	(YES) NO	Meridian Packet Handler supports 8 SAPI 16 separators and 19 B-channels. Meridian Packet Handler supports 3 SAPI 16 separators and 1 B-channels.	bri-19
DN	x..x yyyy	Directory Number (x..x = 1 to 7 digits) and CLID table entry (yyyy).  Where yyyy is range for CLID table entry (yyyy) is: [(0) - (value entered for SIZE prompt in LD 15 minus 1)]  The Directory Number cannot be shared by a non-BRI terminal. 1-8 DNs may be assigned to a DSL. The DN can be assigned to multiple TSPs on a DSL but cannot be assigned to any other DSL.  Precede with X to remove.	bri-18
DNAT	1-32 <cr>	DNA Table to print Prints all Data Network Address (DNA) tables	mph-19

Prompt	Response	Comment	Pack/Rel
DNIC	xxxx	Data Network Identification Code Enter a 4-digit DNIC for this item	bri-19
DPSD	(NO)  YES	Route D-channel Packet Switched Data calls to an external packet handler, or Public Switched Packet Data Network (PSPDN). Do not route D-channel Packet Switched Data calls to an external packet handler, or Public Switched Packet Data Network (PSPDN).	mph-19
DSL	l s c dsl	Digital Subscriber Loop address for Large System, where:  l (superloop) = 0-156 (must be 0 or a multiple of 4) s (shelf) = 0-1 c (card) = 0-15 dsl (Digital Subscriber Loop) = 0-7  You can assign 31 DSLs for each MISP if you specified DCH or BDCH at the PH prompt during MISP configuration procedures.  When REQ = PRT, entering <cr> at this prompt prints out all DSLs in the system.	bri-20
		l = (0-255) Systems with Fibre Network Fabric	fnf-25
	c dsl	Digital Subscriber Loop address. For Small System, where:  c (card) = 1-9 c = 1-9 11-19 21-29 31-39 41-49  For Succession 1000, where:  c = 11-14, 21-24, 31-34, 41-44  Where:  dsl (Digital Subscriber Loop) = 0-7	lse-25  basic-1
EFD	x...x	External Flexible Call Forward No Answer Directory Number (1-13 digits allowed)	bri-18
EHT	x...x	External Hunt directory number (1-13 digits allowed)	bri-18
FDN	x...x	Flexible Call Forward No Answer Directory Number (1-13 digits allowed)	bri-18

# LD 27

Prompt	Response	Comment	Pack/Rel
FEAT		Features	bri-18
	(CFTD) CFTA	Call Forward by call Type Denied Call Forward by call Type Allowed	
	(CFXD) CFXA	Call Forward to External DN Denied Call Forward to External DN Allowed. CFXA is valid if PRID = 2 or 6 in DSL.	isdn-20
	(DNDY) DNDN	Diversion Notification with called party's number and name when available. Diversion Notification without called party's number and name.	qsig ss- 23
	(DNO3) DNO1 DNO2	Diversion Notification Option with diverted-to party's number and name when available. Diversion Notification Option without notification. Diversion Notification Option without diverted-to party's number and name.	qsig ss- 23
	(FBD) FBA	Call Forward Busy Denied Call Forward Busy Allowed	
	(FND) FNA	Call Forward No Answer Denied Call Forward No Answer Allowed	
	(HBTD) HBTA	Hunting By call Type Denied Hunting By call Type Allowed	
	(HTD) HTA	Hunting Denied Hunting Allowed Always assign HTA if the terminal does have CWT capability.	
	(MWD) MWA	Message Waiting Denied Message Waiting Allowed	
	(SFD) SFA	Second level Call Forward No Answer Denied Second level Call Forward No Answer Allowed	

Prompt	Response	Comment	Pack/Rel
FEATID	aaa mmm nnn	<p>Feature ID association</p> <p>This is prompted when PRID = 6, to implement the ISDN BRI Conferencing capability. Where:</p> <p>aaa = Feature: AO3 = 3-party conference, AO6 = 6 party conference</p> <p>mmm = Feature activation ID (1-127)</p> <p>nnn = Feature indication ID (1-127)</p> <p>This is optional. If nothing is entered, the same value as mmm is used.</p> <p>Feature activation and Feature indication ID are the feature key assignments on the terminal. The key numbers must also be configured at the terminal level.</p> <p>Recommended assignments are: M5317TDX: AO6 15 and M5209TDcp: AO6 9.</p>	bri-19
HUNT	x...x	Hunt directory number (1-13 digits allowed)	bri-18
IC	n1	Lowest incoming Logical Channel Number range (1-4095)	bri-19
	n2	Highest incoming Logical Channel Number range (1-4095)	
	<cr>	no incoming LCNs	
ISDN_MCNT	60-(300)-350	Layer 3 call control message count per 5 second time interval.	qsig gf-22
K	(1)-7 (1)-32	<p>Window size</p> <p>Maximum number of outstanding negative acknowledgment (NAKs) frames.</p>	bri-19
LAPB	(NO) YES	Change Link Access Protocol for B-channels	mph-19
LAPD	(NO) YES	Change Link Access Protocol for D-channels	bri-18
	0-15	LAPD protocol group number for DSL assignment	bri-19
LCN1	1-4095	Permanent Virtual Circuit Logical Channel Number for NT1	bri-19

# LD 27

Prompt	Response	Comment	Pack/Rel
LCN2	1-4095	Permanent Virtual Circuit Logical Channel Number for NT2	bri-19
LDN	(NO) 0-5	No LDN assigned to the DSL Departmental Listed Directory Number defined in LD 15	bri-20
LOOP	0, 2, 4,...158	MISP loop (must be an even number and the next odd loop number must be unequipped) When REQ = PRT, enter <cr> to print all MISPs in the system.	bri-18
xx		SISP loop For Small System, where: xx = 1-9 xx = 1-9 11-19 21-29 31-39 41-49	lse-25
		For Succession 1000, where: c = 11-14, 21-24, 31-34, 41-44	basic-1
xxx		xxx = (0, 2, 4 ... 254) Systems with Fibre Network Fabric	fnf-25
LTEI		Logical Terminal and Terminal Endpoint Identifiers. The Logical Terminal Identifier (LTID) consists of: Logical Terminal Group (LTG) Logical Terminal Number (LTN) Static Terminal Endpoint Identifier (TEI) pair for D-channel packet data transmission The maximum number of LTID and TEI pairs is defined by MTEI. LTG = 15 and LTN = 1023 is an invalid combination.	bri-18
	n1 n2 m Xm <cr>	Logical Terminal Group (LTG) 1-15 Logical Terminal Number (LTN) 1-1023 TEI (0-63) Deletes LTID and TEI as a pair for the specified TEI Go to the next prompt.	
		LTEI is prompted if D-channel packet data was specified for the associated MISP.	

Prompt	Response	Comment	Pack/Rel
MCAL	2-(16)-32	Maximum number of calls on a DSL at one time when TYPE = TSP. The maximum number of calls includes Active, Waiting, and On-Hold calls. Warning is received if less than 8 is specified.	bri-18
	1-(4)-8	Maximum Calls allowed per DN when TYPE = DSL. The maximum number of calls allowed for a directory number includes sum total of Active calls, Call Waiting, and calls On-Hold.	bri-18
MEMB	1-254 1-510	Member number of BRI route Member number of BRI route The specified route must match the BRI route type as well as the trunk type specified at the TKTP prompt.	bri-18 bri-24
MISP	0, 2, 4...158	MISP loop number for large systems  ISDN BRI applications on the MISP must be disabled when changing the MISP loop or card. The SILC or UILC must be disabled before changing the MISP loop number.  Prompted if the MISP has not been assigned to the specified SILC or UILC. Eight BRSC cards can be configured per MISP	bri-19
	xx	ISDN signalling processor (SISP) card slot number For Small System, where: xx = 1-9 11-19 21-29 31-39 41-49 For Succession 1000, where: xx = 11-14, 21-24, 31-34, 41-44	basic-1

# LD 27

Prompt	Response	Comment	Pack/Rel
MODE		Mode. Prompted when CTYP = SILC. NTAS and NTFS may be input when APPL = BRI, BRIL, or MPH. TE and NE may be input when APPL = BRIT or BRIE.	bri-18
	NTAS	Network Termination Adaptive line Sampling (extended passive bus, branched passive bus Point-to-Point bus, U interface DSL)	
	NTFS	Network Termination Fixed line Sampling (short passive bus)	
	(TE)	Terminal Equipment Mode for DSL	
	NT	Network Termination Mode for DSL. If CTYP = UILC, then MODE = NT.	
MPH	loop	Meridian Packet Handler loop This is the loop with the dedicated connection from the MISP card. Prompted when B2CT = IPD.	mph-19
		loop = (0-254) Systems with Fibre Network Fabric	fnf-25
MPHC	(YES)	Route D-channel packet switched data to the Meridian Packet Handler	mph-19
	NO	Route D-channel packet data calls to an external packet handler, or Public Switched Packet Data Network (PSPDN)	
MTEI	1-(8)-20	Maximum Terminal Endpoint Identifiers MTEI represents the maximum number of both static and dynamic combined assigned to the logical terminals on a DSL.	bri-18
MTFM	(NO) YES	Multi-Frame Mode Prompted if MODE = TE.	bri-18
MTSP	1-(8)-16	Maximum Terminal Service Profiles	bri-18
N1	23-(135)- 263	Maximum I-frame size (in octets)	mph-19
N2	1-(10)-15	Maximum Number of retries	mph-19
N200	1-(3)-8	Maximum Number of retransmissions	bri-18
N201	4-(260)	Maximum Number of contiguous octets or bytes in information element	bri-18

Prompt	Response	Comment	Pack/Rel
N2X4	0-(10)-20	Number of Status Inquiries when Remote Station is in peer busy for 1TR6	ovlp-15
NCOS	(0)-99	Network Class of Service	bri-18
NTN	x...x	Network Terminal Number  Add the NTN to the DNA table. The NTN can be up to 10 digits; up to 32 NTN entries are supported for each table.  Enter a range of NTNs by separating the numbers with a space. Delete entry by preceding the number with X.	bri-19
NTN1	x...x	First Permanent Virtual Circuit connection to the NTN Up to 10 digits can be entered.	bri-19
NTN2	x...x	Second Permanent Virtual Circuit connection to the NTN Up to 10 digits can be entered.	bri-19
NTNO	(YES) NO	Public Switched Packet Data Network presents only the NTN in the Incoming Call packet's called address field. Public Switched Packet Data Network presents NTN and DNIC in the Incoming Call packet's called address field	bri-19
NWIF	1-3 <CR>	MPH Network Interface Identifier Indicates there is no identifier	bri-19
OC	n1 n2 <cr>	Delete an identifier by preceding the entry with an X. Outgoing Logical Channel number range Lowest Incoming Logical Channel Number range (1-4095) Highest Incoming Logical Channel Number range (1-4095) no incoming LCNs	bri-19

# LD 27

Prompt	Response	Comment	Pack/Rel
OPT	(BRIL)	BRI Line application This information is NOT downloaded to the DSL.	bri-19
		Terminal Service Profile (TSP) print options (when REQ = PRT):	bri-18
	DN	Print TSPs with the requested Directory Number.	
	DNS	Print Directory Number for specified dsl.	
	SPID	Print TSPs with the specified Service Profile Identifier.	
	SUID	Print Service Profile ID and User Service Identifier map.	
	USID	Print TSPs with the specified User Service ID.	
	<cr>	Print all TSPs defined for the specified dsl.	
PDCA	1-16	Pad Category table defined in LD 73 Prompted if PRID = 2 or 4	bri-18
PGPN	0-15 ALL	Protocol Group Number To remove all protocol groups. You cannot remove a protocol group if it is assigned to a DSL.	mph/bri-19
	<cr>	To print all protocol groups and the number of DSLs in each group	
PH		Packet Handler	bri-18
	(X) DCH	No packet data transmission BRI terminal communicates with the packet handler using multiplexed D-channels over a dedicated BD- channel	
	BCH	BRI terminal communicates with the packet handler using a dedicated B-channel	
	BDCH	Both D-channel and B-channel communicate with packet handler	
		If you select DCH or BDCH, the MISP can support only 31 DSLs because one serial port is dedicated to the packet handler.	
PRES	(YES) NO	Presentation of CLID to far-end on outgoing calls.	bri-18
PRFX	0-9	DNA table Prefix.	bri-19

Prompt	Response	Comment	Pack/Rel
PRI	0, 2, 4,.....158	<p>Primary Rate Interface</p> <p>Loop numbers.</p> <p>This Primary Rate Interface is connected to the packet handler. The Primary Rate Interface must have already been added in LD 17.</p> <p>Prompted if B1CT or B2CT = PMD.</p>	bri-18
	xx	<p>Card number</p> <p>For Small System, where:</p> <p>xx = 1-9</p> <p>xx = 1-9 11-19 21-29 31-39 41-49</p> <p>For Succession 1000, where:</p> <p>xx = 11-14, 21-24, 31-34, 41-44</p>	lse-25 basic-1
	xxx	xxx = (0, 2, 4 ... 254) Systems with Fibre Network Fabric	fnf-25
PRI_CH	loop channel	<p>PRI for packet handler and BRSC connections. Where:</p> <p>loop (1-159) = the PRI loop number that is connected to the external packet handler</p> <p>channel (1-23) = the PRI channel number where the dedicated BRSC connection terminates</p> <p>This PRI loop must have been previously assigned in LD 17, and must be dedicated to packet handler connection. The PRI channel must be configured for BRI packet data in LD 14 and LD 16.</p> <p>loop = (0-254) Systems with Fibre Network Fabric</p>	bri-19 fnf-25
PRID	1 2 3 4 5 6	<p>Protocol ID. Prompted if REQ = NEW.</p> <p>ANSI</p> <p>ETSI</p> <p>DMS</p> <p>NET64</p> <p>Numeris</p> <p>NI-1</p> <p>PRID = 6 allows the ISDN BRI conference feature to be configured in the TSPs of the DSL</p>	bri-19

# LD 27

Prompt	Response	Comment	Pack/Rel
PSIZ	16 32 64 (128) 256	Default packet transmission Size (in octets)	bri-19
PVC	n1	Lowest Permanent Virtual Circuit logical channel number range	bri-19
	n2	Highest Permanent Virtual Circuit logical channel number range	
PVCN	1-4	Permanent Virtual Circuit Number	bri-19
RATE	(64) 56	PSDN communication Rate This establishes the rate at which the PSDN communicates across the PRI channel network interface.	bri-19
REQ	CHG END NEW OUT PRT	Request Change existing data block Exit Overlay program Create a new data block Remove data block Print data block	bri-18
ROUT	0-511	Route number for the Trunk DSL  The specified route must match the BRI route type as well as the trunk type specified at the TKTP prompt. The specified route must be on the Network (NET) side if MODE = NT for the DSL.	bri-18
SCPW	xxxxx	Station Control Password The SCPW entry must equal the Station Control Password Length (SCPL) defined in LD 15. SCPW is not prompted if SCPL = 0. Precede entry with "X" to delete.	isdn-20
SGRP	(0)-999	Scheduled Access Restriction Group number	bri-18

Prompt	Response	Comment	Pack/Rel
SPID	a ... a	Service Profile Identifier  Where: aaa...a = 9-character alphanumeric service profile ID. A maximum of 8 valid SPIDs per TSP are allowed. Precede with X to remove.  Any combination of 20 characters or less is valid.  Prompted only if the user service identifier is 1-15. It will be repeated until <cr> is entered but only up to 8 SPIDs should be entered. This SPID must be entered in the initializing terminal to associate the terminal with a USID.	bri-18    bri-23
SSRV_ETSI		Supplementary Service	isdn-20
	VCFW	Voice Call Forward. VCFW is valid if CT = VCE or if CT = VCE and DTA.	
	DCFW	Data Call Forward. DCFW is valid if CT =DTA or VCE and DTA. Prompted if PRID = 2 (ETSI) in the DSL.	
	VID7	The ETSI set supports telephony 7 KHz/Videotelephony teleservices Precede with X to remove, the service must not be active.	euro-24
SSRV_N1	aaa mmm nnn	NI-1 Supplementary Service. Where:  aaa = VCFA (Voice Call Forward Activation) if CT = VCE aaa = VCFD (Voice Call Forward Deactivation) if CT = VCE aaa = DCFA (Data Call Forward Activation) if CT = DTA aaa = DCFD (Data Call Forward Deactivation) if CT = DTA  mmm = Feature Activation ID, 1-127  nnn = Feature Indication ID, 1-127 (If not defined, mmm is used).  The same mmm value may be assigned to VCFA and VCFD, or to DCFA and DCFD. Precede with X to remove, not allowed if feature is activated. Prompted if PRID = 6.	isdn-20

# LD 27

Prompt	Response	Comment	Pack/Rel
SUPL_SVC	AO3 AO6	Supplementary Services Three-Party Conference Six-Party Conference Precede with X to remove.	isdn-20
T1	2-(6)-130	Response Timer (in units of 0.5 seconds) Default is 3 seconds.	mph-19
T10/T20	15-(180)-930	Request Restart Timer (in 1 second units)	mph-19
T11/T21	15-(180)-930	Call Request Timer (in 1 second units)	bri-19
T12/T22	15-(180)-930	Reset Request Timer (in 1 second units)	bri-19
T13/T23	0-15-(180)-930	Clear request timer (in 1 second units)	bri-19
T2	1-(4)-129	Maximum frame delay (in units of 0.5 seconds) Default is 2 seconds. T2 must be less than T1.	mph-19
T3	3-(12)- 131 0	Idle Timer (in units of 0.5 seconds) Default is 6 seconds Turns off the timer. If this is not 0, it must be greater than T1.	mph-19
T200	(2)-40	Retransmission Timer  Registered in increments of 0.5 seconds to specify the time delay which occurs before the system retransmits the information.	bri-18
T203	4-(20)-80	Maximum Time between transmission frames (in increments of 0.5 seconds)	bri-18
T310	10-(30)-60 110-(120)	Timer used to determine how long SL-1 can wait for the response message when the QSIG outgoing call is in the U3 (outgoing call processing) state. Default = (10) seconds for TCNZ Default = (30) seconds for QSIG This range applies to PRI, PRI2, and BRI trunks	qsig-20

Prompt	Response	Comment	Pack/Rel
TC	n1 n2 <cr>	Lowest two-way Logical Channel Number range Highest two-way Logical Channel Number range No two-way LCNs	mph-19
TEI	0-63	Static TEI for addressing terminal This is given in units of 1 second.	mph-19
TGAR	0-(1)-31	Trunk Group Access Restriction number	bri-18
TIMR	(NO) YES	Change Timer values. Not prompted for APISDN AUST.	
TKTP	TIE COT DID	TIE Trunk Type COT Trunk Type DID Trunk Type	
TN	l s c	Terminal Number of SILC or UILC. Prompted when B1CT= PMD. Where:  l (loop) = 0-156 (must be 0 or a multiple of 4) s (shelf) = 0-1 c (card) = 1-15	bri-20
		Systems with Fibre Network Fabric  l (loop) = 0-252 (must be 0 or a multiple of 4)	fnf-25
		If REQ = PRT, entering:  l: prints out information for all cards on this loop l s: prints out information for all cards on that loop and shelf <cr>: prints out information for all system cards card: prints information for this card (Small System only)	
	l s c u loop ch 1-20	Terminal Number PRI loop and B-channel number Small System	

# LD 27

Prompt	Response	Comment	Pack/Rel
TRANS	(NO)	Restrict presentation of COLP, CLID coming from S0 terminal without presentation option	bril-22
	YES	If TRANS = NO and if the presentation indicator is set to restricted, the number digits are erased from the information element before it is sent to the S0 terminal. CONNECTED NUMBER IE received from the Meridian 1 is sent transparently to S0 terminal, even if restricted	
TRMT	D B	Terminating Type D-channel terminal type configuration used B-channel terminal configuration type used	bri-20
TSET	0-15	Threshold Set for clock errors	tset-7
TYPE		Type of data block	bri-19
	BRSC	BRI Signaling Concentrator	
	CARD	S/T (SILC) or U (UILC) Interface Line Card data block	
	DNAT	Data Network Address Tables	
	DSL	Digital Subscriber Loop data block	
	LAPB	Link Access Protocol on B-channels	
	LAPD	Link Access Protocol on D-channel	
	MISP PROT	Multi-purpose ISDN Signaling Processor data block Protocol group data block	
	PVC	Permanent Virtual Circuit connections	
	TSP	Terminal Service Profile data block	
	X25P	X.25 Packet Protocol Parameters	

Prompt	Response	Comment	Pack/Rel
USER		Print groups selected at PGPB prompt. USER is prompted when REQ = PRT.	mph-19
	(NO) YES	Do not print LAPB or LAPD group user information Print LAPB or LAPD group user information  (LAPB or LAPD groups selected at the PGPB prompt as well as the TSPs or MPH network interfaces which use them)	
USID	(0)-15	User Service Identifier  The total number of TSPs defined for a DSL cannot exceed the maximum number of TSPs allowed for a DSL as specified by the MTSP prompt during the DSL configuration procedures.	bri-18
	ALL	Removes all TSPs defined for the DSL. Use only when REQ = OUT.  A default TSP should be configured for non-initializing terminals. This is done by assigning USID = 0 to the TSP.	
WSIZ	1-(2)-7	Default Transmit Window Size (in octets)	bri-19
X25P	(YES) NO	Change X.25 Parameters  If these parameters are changed, all active calls associated with the TSPs and network interfaces for the group will be dropped.	bri-19
XLST	(0)-254	Pretranslation group Prompted if PREO = 1 in LD 15	bri-18
XPVC	(YES) NO	External PVC connection Internal PVC connection	bri-19

# LD 27

---

## **LD 28: Route Selection for Automatic Number Identification**

---

Overlay program 28 allows data for Route Selection for Automatic Number Identification (RS-ANI) to be created, modified, and printed.

## Prompts and responses

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	RSA	Type of data block = RSA (Route Selection ANI)
CUST	xx	Customer number associated with this function
RSAC	xxxx	RS-ANI Access Code digits
0-RT	x...x	0- calls, Route access code (calls to Public Network Operator)
0+RT	x...x	0+ calls, Route access code
1RT	x...x	1+ or IDDD (International Direct Distance Dial) calls Route access code
CORT	x...x	Central Office (local calls) Route access code

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
0+RT	x...x	0+ calls Route access code (for toll calls that require Public Network Operator assistance) Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150	ani-1
0-RT	x...x	0- calls, Route access code (calls to Public Network Operator) Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150	ani-1
1RT	x...x	1+ or IDDD (International Direct Distance Dial) calls, Route access code Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150	ani-1
CORT	x...x	Central Office (local calls) Route access code Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150	ani-1
CUST	xx	Customer number associated with this function as defined in LD 15	ani-1
REQ	CHG END NEW OUT PRT	Request Change an existing data block Exit Overlay program Create a New data block Remove data block Print RSA data	ani-1
RSAC	xxxx	RS-ANI Access Code digits	ani-20
TYPE	RSA	Route Selection ANI data block	ani-1

# LD 28

---

## LD 29: Memory Management

---

Overlay program 29 is used to determine the following:

- determine the amount of unused memory
- determine if sufficient memory is available to accommodate substantial amounts of new data to be added
- respond to messages SCH601 and SCH603 on SL-1 XN & XL

## Prompts and responses

---

Prompt	Response	Comment
REQ	aaa	Request
MSG	x...x	SCH Message (x...x = 601 or 603 xx)
NEW DATA PLANNED?	(NO) YES	New data to be added in this program?
TYNM	aaa xx	Type and Number (TYNM responses begin on page 756)
OPT	aaaa	Option (aaaa = FULL or FREE)
MAP	a...a	Active Map or Data Dump (a...a = ACT or DUMP)
DISPLAY NEW MAP?	(NO) YES	Display new map
SAVE NEW MAP?	(NO) YES	Save new map
PWD2	xxxx	Password 2
CHANGE MAP?	(NO) YES	Change Map
CMD	a...a	Command (a...a = ASGN or CHK)
PGMM	xxx yy	Page/Memory Module
PGBY	xxx yyyy	Page/Bytes

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
CHANGE MAP?	(NO) YES	Change map Prompted when SAVE NEW MAP? = NO or automatic map generator fails (message MEM150)	basic-1
CMD	ASGN CHK	Command Assign logical page and memory number Check memory map	basic-1
DISPLAY NEW MAP?	(NO) YES	Display new map Prompted when a new map has been created	basic-1
MAP	ACT DUMP	Map Active map Data dump Prompted when REQ = PRT	basic-1
MSG	601 603 xx	SCH Message. Prompted when REQ = SCH. Enter 601 when SCH message is 601 Enter 603 followed by the parameters printed with the SCH603 message during an attempt to add data.	basic-1
NEW DATA PLANNED?	(NO) YES	New data to be added in this program? Prompted when REQ = SCH	basic-1
OPT	FULL FREE	Option Full map Free space only	basic-1
PGBY	xxx yyyy	Page/Bytes (used to define logical page size). Where: xxx = Logical Page number (0-254, 256-510) yyyy = size (1-65535) Prompted only if CMD = ASGN.	basic-1

# LD 29

Prompt	Response	Comment	Pack/Rel
PGMM	xxx yy	Page/Memory Module (used to determine the Memory Module on which Logical Pages will reside or to which they will be moved). Where: xxx = Logical Page number (0-254, 256-510) yy = Memory Module number (00, 01, 02) Prompted only if CMD = ASGN.	basic-1
PWD2	xxxx	Password 2 (Second level administration password as defined in LD 17)	basic-1
REQ		Request	basic-1
	ADD	Create a new data block	
	CHG	Change existing map (SL-1XN & XL systems only)	
	CLR	Clear map	
	PRT	Print the specified map	
	END	Exit Overlay program	
	GEN	Generate a new map. Do not use this response unless ROMs with memory extensions are in place.	
	SCH	Change map in response to error messages SCH601 and SCH603	
SAVE NEW MAP?	(NO) YES	Save new map Prompted when a new map has been created	basic-1
TYNM		Type and Number	basic-1
	500 1-12800	Number of new 500/2500 telephones	basic-1
	ACD 0-99 1-240 1-240	Customer number, number of ACD DN, maximum number of positions per ACD DN	bacd-1
	AGNT 1-12800	Number of Agent positions	bacd-1
	ANI xxx yyyy zzzz	Feature Group D ANI data blocks. Where: xxx = number of NPAs (1-160) yyyy = number of ranges of NXXs (0-9999) zzzz = number of ranges of XXXXs (0-30,000)	fgd-17

Prompt	Response	Comment	Pack/Rel
	APRT 1-16	Number of ACD Printers	bacd-1
	ATM 1-4096	Number of ATM routes for the system	atm-7
	ATT 1-480	Number of consoles	basic-1
	AUB 1-99 1-5000 1-14	Customer number, number of authcodes, authcode digit length	baut-1
	BGD 1-15 1-99	Number of Background Terminals in the system, and the number of customers in the system	bgd-10
	CDB 1-99	Number of new customers	basic-1
	CDL 1-16	Number of CDR links	clnk-1
	CDP 0-99 1-10000	Customer number, number of steering codes	cdp-1
	CONF xxx	Number of Conference loops	basic-1
	CPG 1-100 1-63	CPG Level services, customers and average size	
	CPND xx yy zz	Calling Party Name Display data xx = number of customers with CPND, 1-99 yy = number of CPND names per customer, 1-1000 zz = average size of name string, 5-27 characters	cpnd-10
	CRB 1-1024	Number of Code Restriction Blocks	basic-1
	DGT 1-99 xx xx	Customer number, number of digit manipulation tables, maximum average number of inserted digits	basic-1
	DIS 0-99 1-240	Customer number, number of DISA DN	disa-1
	DND 1-99 1-100 1-127	Customer number, number of DND groups, average number of numbers per group	dndg-1

# LD 29

Prompt	Response	Comment	Pack/Rel
DTR 1-126	Number of Digitone Receivers		basic-1
EBLF xx yy zz	Enhanced Busy Lamp Field Where: xx = the number of customers (1-99) to receive the feature yy = average number of hundreds groups per customer zz = average DN length (4, 5, 6 or 7 digits)		basic-14
ESN xx	Number of customers with ESN (1-99)		basic-1
FCAS 1-99 xx yy zz	Customer number, number of Free Calling Area tables, maximum average number of FCAS blocks, maximum average number of different first digit of NXX codes		fca-1
FGD xxx yyy	FGD data blocks. Where: xxx = number of FGD blocks (1-128) yyy = average number of II entries		fgd-17
FTC 0-31	Number of Flexible Tone Control tables		ftc10
MFC xx	Number of Multifrequency Compelled Signaling cards		mfc-9
MFE xx	Number of Multifrequency Signaling for Socotel cards		mfe-10
MFR 1-99 0-126 0-126	Automatic Call Distribution routes Number of customers, average number of ACD routes per customer, average largest member number per ACD route		bacd-1
MFRR 1-255	Number of Multifrequency Receivers		fgd-17
MFSD xx	Number of MF Sender loops		basic-1

Prompt	Response	Comment	Pack/Rel
	MFT xx yy zz	Multifrequency Compelled Signaling. Where: xx = number of MFC tables yy = number of levels per table zz = average number of signals per level	mfc-9
	MFET xx yy zz	Multifrequency Signaling for Socotel. Where: xx = number of MFE tables yy = number of levels per table zz = average number of signals per level	mfe-10
	NACD xx yy zz	Network Automatic Call Distribution. Where: xx = the number of NACD customers yy = average number of source DNs zz = average number of target ACD DNs	
	NCTL 1-99	Number of customers with NTCL	basic-1
	NET 1-99 xx yy	Customer number, number of Network Translation codes, number of LOC codes	esn-1
	RDB 1-4064 1-126	Number of Routes, average largest member number	basic-1
	REMO xx	Number of RPE loops	rpe-1
	RLB 1-99 1-256 1-32	Customer number, number of Route Lists, maximum average number of entries	basic-1
	RSA 1-99	Number of customers to get RS-ANI	ani-1
	SCL 4-31 1-1000 1-8191	DN size as defined in LD 18, list size as defined in LD 18, number of new lists	optf-1
	SDR 1-99 xx yy	Customer number, number of Supplemental Digit Restriction blocks, maximum average number of entries	basic-1

# LD 29

Prompt	Response	Comment	Pack/Rel
	SL1 1-12800	Number of new SL-1 telephones	basic-1
	SUP 1-16	Number of ACD Supervisor TTY	bacd-1
	TAP 1-3	Number of new Tape units	basic-1
	TDS 1-80	Number of new TDS loops	basic-1
	TENC 1-99	Number of customers that will have Tenant Service	ten-7
	TENR 0-127	Number of routes that will be shared by Tenants	ten-7
	TENT 0-512	Number of Tenants that will have access to each other	ten-7
	TERM 1-159	Number of new Terminal loops	basic-1
	TRK 1-6400	Number of new Trunks	basic-1
	TTY 1-16	Number of new TTY	basic-1

---

---

## **LD 49: New Flexible Code Restriction and Incoming Digit Conversion**

---

Overlay program 49 allows the building, changing, deleting, moving, and printing of code restriction trees and the cancellation of all New Flexible Code Restriction (NFCR) data.

Overlay program 49 also allows the building, changing, deleting, moving, and printing of Incoming DID Digit Conversion (IDC) data.

# LD 49

## Prompts and responses

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	aaa	Type of data block (aaa = FCR or IDC)
FROM	0-99 0-254	Source customer and tree number
TO	0-99 0-254	Destination customer and tree number
CUST	xx	Customer number
DCNO	0-254	Digit Conversion tree Number
FDID	(NO) YES	Flexible DID IDC tree
HOSP	(NO) YES	Hospitality IDC table
XPDN	(NO) YES	Expand DN length by 1-8 (1-5) digits
SDID	(NO) YES	Send calling party DID
IDGT	0-9999 0-9999	Incoming Digits
AUTH	xxxx	Authcode
CRNO	(0)-254	Code Restriction tree Number
INIT	aaaa	Initial (aaaa = ALLOW or DENY) Allow or deny all codes.
- ALLOW	xxxx	Digit sequence to be allowed.
- - UPDT	(YES) NO	Update Tree
- DENY	xxxx	Digit sequence to be denied.
- - UPDT	(YES) NO	Update Tree
FRCE	(NO) YES	Force
BYPS	xxxx	Digit sequence to be bypassed.
- UPDT	(YES) NO	Update Tree

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ALOW	xxxx xxxx y...y	Allow (Digit sequence to be allowed unconditionally) Prompted when INIT = DENY. Digit sequence to be conditionally allowed and maximum number of digits that can follow  A maximum of 50 digits may be analyzed. when United Kingdom (UK) package 190 is not equipped. If UK package 190 is equipped a maximum of 5 digits may be analyzed. Enter <cr> to end ALOW prompt.	nfc-2
AUTH	xxxx	Authcode associated with the DID directory number printed directly above the AUTH prompt.	ffc-16
BYPS	xxxx	Bypass (Digit sequence to be bypassed)  A maximum of 50 digits may be analyzed. when UK package 190 is not equipped. If UK package 190 is equipped, a maximum of 5 digits may be analyzed. Enter <cr> to end BYPS prompt.	nfc-2
CRNO	(0)-254	Code Restriction tree Number (NFCR tree number) The maximum number of trees allowed for a customer is defined by prompt MAXT in LD 15.	nfc-2
CUST	xx <cr>	Customer number For all customers Prompted when REQ = PRT.	nfc-2
DCNO	0-254	Digit Conversion tree Number (IDC tree number) A HOSP IDC tree number cannot be 0. Its valid range is 1-254.	idc-12
DENY	xxxx	Deny (Digit sequence to be denied)  A maximum of 50 digits may be analyzed. when UK package 190 is not equipped. If UK package 190 is equipped a maximum of 5 digits may be analyzed. Prompted when INIT = ALOW.	nfc-2
FDID	(NO) YES	Flexible DID IDC tree	fdid-24

# LD 49

Prompt	Response	Comment	Pack/Rel
FRCE	(NO) YES	<p>Force the storage or release of data.</p> <p>If an entry for ALLOW, DENY or BYPS conflicts with existing data, FRCE is prompted.</p> <p>For example, ALLOW = 7 and the existing ALLOW = 7000. In this case enter "NO" to ignore the data, or "YES" to accept the change. A modification of this type may result in the loss of portions of the tree.</p> <p>If REQ = RLS and FRCE = YES, then all the customer's NFCR data is deleted. Prompt NFCR in LD 15 must be set to NO first.</p>	nfc-2
FROM	0-99 0-254	Source customer and tree number	nfc-2
HOSP	(NO) YES	Hospitality IDC table	dnis-16
IDGT	0-9999 0-9999	<p>Incoming Digits (DN or range of DNs to be converted)</p> <p>The external DNs to be converted is output and the users enter the internal DN. For example, to convert the external DN 3440 to 510, enter:</p> <p style="padding-left: 40px;">Prompt: Response</p> <p style="padding-left: 40px;">IDGT: 3440</p> <p style="padding-left: 40px;">3440: 510</p> <p>To convert the external DNs in the range 3440 to 3465, enter:</p> <p style="padding-left: 40px;">Prompt: Response</p> <p style="padding-left: 40px;">IDGT: 3440 3465</p> <p style="padding-left: 40px;">3440: 444</p> <p style="padding-left: 40px;">3441: 445</p> <p style="padding-left: 40px;">.</p> <p style="padding-left: 40px;">.</p> <p style="padding-left: 40px;">3465: 469</p> <p>This is not a prompt. This is the DID directory number which delineates the following prompt.</p>	idc-12

Prompt	Response	Comment	Pack/Rel
		To delete a DN or a DN from a range of DNs Prompt: Response IDGT: 3440 3440 x	
INIT	ALLOW DENY	Initial To specify digit strings to be denied To specify digit strings to be allowed Entering DNs may be affected by the Outpulsing feature for Japan.	nfc-2
REQ	CHG END MOV NEW OUT PRT RLS RPL	Request Change an existing data block Exit Overlay program Move existing data block to a new customer and/or NFCR tree data block Create a new data block Remove a specified NFCR tree data block Print NFCR tree data block Release all NFCR data blocks for a specified customer Replace data in the specified NFCR tree data block with new data	nfc-2
SDID	(NO) YES	Send DN of set when calling party number is requested Send DID of set. If no DID for set, then no DN is sent. Prompted when the International Supplementary Features (SUPP) package is equipped and REQ = NEW.	dnis-15
TO	0-99 0-254	Destination customer and tree number	nfc-2
TYPE	FCR IDC	Type of data block NFCR data block Incoming Digit Conversion data block	nfc-2
UPDT	(YES) NO	Update Tree Data is correct and can update the NFCR tree.	nfc-2
XPDN	(NO) YES	Expand DN length by 1-8 (1-5) digits A response of YES requires twice the memory per DN.	basic-14

# LD 49

---

## **LD 50: Call Park and Modular Telephone Relocation**

---

Overlay program 50 allows the implementation and administration of the Call Park and Meridian Modular Telephone Relocation features.

## Prompts and responses

### Call Park data

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	CPK	Type of data block = CPK (Call Park)
CUST	xx	Customer number associated with this function
BLOC	1-5	Call Park block number
CPTM	30-(45)-240	Call Park Timer (in seconds)
RECA	(NO) YES	Recall parked call to attendant
SPDN	(0)-50 xxxx	Number of contiguous system park DN's and first DN
MURT	0-511	Music Route

---

## Meridian Modular Telephone ID change during relocation

The serial number, NT code, color code or release information stored in a Meridian Modular Telephone may be changed during the relocation sequence. This can only be done after the set has “relocated out” and before it is “relocated in” to the new location. An application of this occurs when the terminal is being replaced with one of the same type and requires the same key configuration.

See Set Relocation Data in LD 21, and IDU: Print set ID command in LD 32.

Prompt	Response	Comment
REQ	aaa	Request = CHG or OUT
TYPE	MTRT	Type of data block = MTRT (Meridian Modular Telephone Relocation Table)
TN	l s c u	Terminal Number
SER	xxxxxx	Serial number
NTCD	xxxxxxxx	NT (product) Code
COLR	xx	Color
RLS	xx	Release

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
BLOC	1-5	Call Park block number  Where:1-5 allows the system administrator to define the subsequent prompts. After subsequent prompts have been defined, the administrator is returned to the BLOC prompt until a carriage return (<cr>) is entered.  The Primary Call Data Block (block 1) must be defined before any Secondary Call Park Blocks (2-5) can be added.	cprknet-22
	ALL	Enter ALL when REQ = OUT to remove all Call Park Blocks	
	<cr>	Enter <cr> to return to the REQ prompt. BLOC is prompted if CPRKNET package 306 is equipped.	
COLR	xx	Color of Meridian Modular Telephone. The color codes are:  03 is black 35 is chameleon ash 93 is dolphin	arie-18
CPTM	30-(45)-240 30-(45)-480	Call Park Timer (in seconds) Call Park recall time (in seconds) if CPRK package 33 is equipped The amount of time a call is held in the parked state before recalling the parking set or the attendant.	cprk-20
CUST	xx	Customer number associated with this function as defined in LD 15	cprk-2
MURT	0-511 X	Music Route number for parked calls Remove existing music route.	mus-1
NTCD	xxxxxxx	New NT (product) Code of Meridian Modular Telephone	arie-18
RECA	(NO) YES	Recall Attendant Unanswered parked calls recall the parking set Unanswered parked calls recall the attendant	cpk-20

Prompt	Response	Comment	Pack/Rel
REQ	CHG END NEW  OUT PRT	Request Change existing data block Exit Overlay program. Create a new Call Park data block (not applicable if TYPE = MTRT) Remove data block Print call park data block (not applicable if TYPE = MTRT)	cprk-2
RLS	xx	New Release of Meridian Modular Telephone	asr-18
SER	xxxxxx	New Serial Number of Meridian Modular Telephone	arie-18
SPDN	xx yyyy	System Park DNs  Number of contiguous System Park DNs, and first DN Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Where: xx = # of contiguous System Park DNs. The range is: (0)-50 (0)-100 when CPRK package 33 is equipped yyyy = First Call Park DN	cprk-2
TN	l s c u  c u	Terminal Number Old Terminal Number of set in relocation table Where: l = 0-254 Systems with Fibre Network Fabric Old Terminal Number of set in relocation table (Option 11C format)	arie-18  fnf-25
TYPE	CPK MTRT	Type of data block Call Park data block Meridian Modular Telephone Relocation Table	cprk-2

# LD 50

---

## **LD 52: 2.0 Mb/s Remote Peripheral Equipment**

---

Overlay program 52 defines the 2.0 Mb/s Remote Peripheral Equipment (RPE) group data and system thresholds.

Overlay program 52 is not supported on small systems.

## Prompts and responses

### Contents

Section	Page
2.0 Mb/s RPE data block (TASK = Counter Threshold)	776
2.0 Mb/s RPE data block (TASK = Group Member)	777
2.0 Mb/s RPE data block (TASK = Timer Threshold)	777
2.0 Mb/s RPE data block (TASK = No New Data call timer)	778
Prompts and responses to remove 2.0 Mb/s RPE data block	778

### 2.0 Mb/s RPE data block (TASK = Counter Threshold)

Prompt	Response	Comment
REQ	aaa	Request
TYPE	RPE2	Type of data block = RPE2 (2.0 Mb/s Remote Peripheral Equipment)
GRP	1-31	RPE group number
TASK	CTHS	Counter Threshold
LFAL	0-(5)-255	Loss of Frame Alignment at Local site
FAEL	0-(5)-255	Frame Alignment Error rate at Local site
PCML	0-(5)-255	Pulse Code Modulation (PCM) error rate at Local site
LFAR	0-(5)-255	Loss of Frame Alignment at Remote site
FAER	0-(5)-255	Frame Alignment Error rate at Remote site
PCMR	0-(5)-255	Pulse Code Modulation (PCM) error rate at Remote site
RPF	0-(3)-255	Remote Processor Failure
LINT	0-(2)-255	Local site Initialization of Remote Peripheral Controller
BGTH	0-(3)-7	Background Threshold

## 2.0 Mb/s RPE data block (TASK = Group Member)

Prompt	Response	Comment
REQ	aaa	Request
TYPE	RPE2	Type of data block = RPE2 (2.0 Mb/s Remote Peripheral Equipment)
GRP	1-31	RPE Group number
TASK	GMBR	Group Member
ID	x...x	Identifier
LM0	xxx	Loop number for Member 0 in the group (first primary loop)
LM1	xxx	Loop number for Member 1 in the group (second primary loop)
LM2	xxx	Loop number for Member 2 in the group (third primary loop)
LM3	xxx	Loop number for Member 3 in the group (fourth primary loop or spare loop if SPAR = YES)
- SPAR	(NO) YES	Spare loop option

## 2.0 Mb/s RPE data block (TASK = Timer Threshold)

Prompt	Response	Comment
REQ	aaa	Request
TYPE	RPE2	Type of data block = RPE2 (2.0 Mb/s Remote Peripheral Equipment)
GRP	1-31	RPE group number
TASK	TTHS	Timer Threshold
LFAL	2-(10)-999	Loss of Frame Alignment at Local site in seconds
FAEL	2-(600)-999	Frame Alignment Error rate at Local site in seconds
PCML	2-(600)-999	Pulse Code Modulation (PCM) error rate at Local site in seconds
LFAR	2-(10)-999	Loss of Frame Alignment at Remote site in seconds
FAER	2-(10)-999	Frame Alignment Error rate at Remote site in seconds
PCMR	2-(600)-999	Pulse Code Modulation (PCM) error rate at Remote site in seconds
RPF	128-(1024)-9999	Remote Processor Failure in milliseconds

# LD 52

## 2.0 Mb/s RPE data block (TASK = No New Data call timer)

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	RPE2	Type of data block = RPE2 (2.0 Mb/s Remote Peripheral Equipment)
GRP	1-31	RPE group number
TASK	NND	No New Data call timer
ERR	10-(14)-30	Error threshold in seconds
NND	0-(56)-1800	No New Data call time in seconds

---

## Prompts and responses to remove 2.0 Mb/s RPE data block

---

Prompt	Response	Comment
REQ	OUT	Remove
TYPE	RPE2	Type of data block = RPE2 (2.0 Mb/s Remote Peripheral Equipment)
GRP	1-31	RPE Group number
LOOP	x xx x	Loop numbers for loops to be removed.

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
BGTH	0-(3)-7	Background Threshold (Unsparring attempts allowed by background) A response of 0 will deactivate the background processing of LD 53 for this RPE group.	rpe2-15
ERR	10-(14)-30	Error threshold in seconds Time after which the NND state is entered.	rpe2-15
FAEL	2-(600)-999 0-(5)-255	Frame Alignment Error rate at Local site in seconds Prompted when TYPE = TTHS Frame Alignment Error rate at Local site Prompted when TYPE = CTHS	rpe2-15
FAER	2-(10)-999 0-(5)-255	Frame Alignment Error rate at Remote site in seconds Prompted when TYPE = TTHS Frame Alignment Error rate at Remote site Prompted when TYPE = CTHS	rpe2-15
GRP	1-31 <cr>	RPE group number All RPE group numbers, when REQ = PRT	rpe2-15
ID	x...x	Identifier (1-16 character alphanumeric group identification)	rpe2-15
LFAL	2-(10)-999 0-(5)-255	Loss of Frame Alignment at Local site in seconds Prompted when TYPE = TTHS Loss of Frame Alignment at Local site Prompted when TYPE = CHTS	rpe2-15
LFAR	2-(10)-999 0-(5)-255	Loss of Frame Alignment at Remote site in seconds Prompted when TYPE = TTHS Loss of Frame Alignment at Remote site Prompted when TYPE = CHTS	rpe2-15
LINT	0-(2)-255	Local site Initialization of Remote Peripheral Controller (RPC)	rpe2-15
LM0	0-159	Loop number for group member 0 (1st primary loop) Precede with X to delete a loop number	rpe2-15

# LD 52

Prompt	Response	Comment	Pack/Rel
LM1	0-159	Loop number for group member 1 (2nd primary loop) Precede with X to delete a loop number	rpe2-15
LM2	0-159	Loop number for group member 2 (3rd primary loop) Precede with X to delete a loop number	rpe2-15
LM3	0-159	Loop number for group member 3 (4th primary loop or spare loop if SPAR = YES) Precede with X to delete a loop number.	rpe2-15
LOOP	x xx x ALL	Loop numbers for loops to be removed. All loops in the group are removed If accepted, then the whole group is removed.	rpe2-15
NND	0-(56)-1800	No New Data call time in seconds  The time to stay in the NND state. Time is stored as nearest lower multiple of 8. A response of 0 will deactivate the NND error handling system on this RPE group.	rpe2-15
PCML	2-(600)-999	Pulse Code Modulation (PCM) error rate at Local site in seconds. Prompted when TYPE = TTHS.	rpe2-15
	0-(5)-255	Pulse Code Modulation (PCM) error rate at Local site Prompted when TYPE = CHTS	rpe2-15
PCMR	2-(600)-999	Pulse Code Modulation (PCM) error rate at Remote site in seconds. Prompted when TYPE = TTHS.	rpe2-15
	0-(5)-255	Pulse Code Modulation (PCM) error rate at Remote site Prompted when TYPE = CHTS	
REQ		Request  CHG Change a data block END Exit Overlay program NEW Create a new data block  When an RPE group is created using REQ = NEW, counter and timer thresholds are initialized to their default values.  OUT Remove 2.0 Mb/s RPE data block PRT Print 2.0 Mb/s RPE data block	rpe2-15
RPF	128-(1024)-9999	Remote Processor Failure (milliseconds)	rpe2-15

---

Prompt	Response	Comment	Pack/Rel
RPF	0-(3)-255	Remote Processor Failure	rpe2-15
SPAR	(NO) YES	Spare loop option	rpe2-15
TASK	CTHS GMBR NND THRS TTHS	Counter Threshold Group Member No New Data call timer Threshold data (timer/counter) Timer Threshold When REQ = PRT, TASK can only be GMBR or THRS	rpe2-15
TYPE	RPE2	Type of data block 2.0 Mb/s RPE group data	rpe2-15

---

# LD 52

---

## LD 56: Flexible Tones and Cadences

---

Flexible Tones and Cadences (FTC) is an optional feature which is used to customize the tones provided to telephone users. FTC is primarily intended for international markets where tones which are different from the North American defaults are required.

Overlay program 56 allows the implementation and administration of tone and ringing parameters for one or more customers. If the FTC feature (package 125) is not equipped, North American tones and cadences are used.

An FTC table number can be entered for each trunk route at prompt TTBL in LD 16. Table 0 is the default for all trunk routes and contains the defaults for North America.

### What are tones and cadences?

Tones are used to provide call status to telephone users. A tone is defined by both the frequency and volume of the sound.

Tones are provided in on and off phases. One or more cycles of on/off cycles make up a tone's cadence. For example, the default cadence for normal North American ringing is 2 seconds on, 4 seconds off, 2 seconds on, 4 seconds off, and so on.

## Flexible Tone and Cadence (FTC) tables

FTC tables define the tones and cadences used for various calling features. Up to 31 FTC tables can be created. Each table can be associated with one or more trunk routes by entering the table number in response to prompt TTBL in LD 16.

## Master Cadence (MCAD) table

The Master Cadence Table (MCAD) defines cadences that are controlled by software. These are used for single line sets (500/2500) and digital sets.

The MCAD can have 256 entries (0-255). Each entry can have up to 10 on/off phases each. Entry 0 is reserved for continuous tone and cannot be changed. Entries 1-15 are reserved for ringing cadences.

Most of the software cadences are continuously repetitive unless it is specified that the tone should end after the last phase. There are four exceptions to this rule: prompts ACBT, AOBT, INTU and OVRD cadences repeat the last 8 phases. This allows a special initial tone burst to be defined. To have the first cycle repeat, it must be defined as both the first and last cycle.

A cadence is defined at the CDNC prompt by entering the time for each on and off phase. The time depends on the settings for the TMRK prompt in LD17 which defines the software cadence increments as 96 or 128 ms. For each phase, enter the closest multiple of 5 ms equal to the multiple of 96 or 128 ms which gives the a time  $\geq$  the time required.

The range for the first phase is 1-9999. The range for the second phase is 0-9999. Once an MCAD entry has been created, it can be changed but not removed.

For example, given LD 17 TMRK is set to 128 ms, and a repeating 2 seconds on, 4 seconds off cadence is required.

- 1 Determine the ON phase (2 seconds = 2000 ms)  
 $2000/128 = 15.625 = 16$  (always round up)  
 $128 \times 16 = 2048$  ms  
 multiple of 5 closet to 2048 ms = 2050  
 Entry for prompt CDNC =  $2050/5 = 0410$
- 2 Determine the OFF phase (4 seconds = 4000 ms). By using the same calculation, the entry for prompt CDNC = 0820.
- 3 To define the cadence, respond to the prompts as follows:

```
REQ NEW, CHG
TYPE MCAD
WCAD 1-255
CDNC 0410 0820
```

To define the cadence: 2 s on, 4 s off, 4 s on, 2 s off, repeat cycle 1 and 2, enter:

```
CDNC 0410 0820 0820 0410
```

To define the cadence: 2 s on, then steady off, enter:

```
CDNC 0410, or
CDNC 0410 0000
```

If an odd number of non-zero phases are entered, software ends the tone after the last ON phase. Once a zero phase has been entered, it cannot be followed by non-zero phases. A carriage return at any phase results in zero for the remaining phases.

Once the cadence is defined, it can be entered in response to the CDNC prompt for a given feature. For example, CDNC is output after the Call Waiting tone prompt.

## Firmware Cadence (FCAD) table

The Firmware Cadence Table (FCAD) defines cadences that are controlled by an NT8D17 Conference/TDS/MFS card.

The FCAD can have 256 entries (0-255). Each entry can have up to 10 on/off phases. Entry 0 is reserved for continuous tone and cannot be changed. Entries 1-15 are reserved for ringing cadences. Each phase is in multiples of 5 ms.

FCAD cadences have the following capabilities:

- Each cadence may be defined to end at the “on” phase, the “off” phase, or repeat after a single pass through the defined on/off cycles. Any or all of the five cycles can be repeated.
- Unique tones can be defined for each “on” phase. These tones are permanently held in the Conference/TDS/MFS firmware.

In order to have the same cadences on 500/2500/digital telephones and SL-1 telephones, the MCAD and FCAD entries 0-15 are identical. Changes to MCAD entries 1-15 automatically change FCAD entries 1-15. The FCAD entries 1-15 can only be changed by changing the MCAD entries 1-15.

The Conference/TDS/MFS card must be disabled and then re-enabled to download changed firmware cadences.

Examples of creating firmware cadences:

**1** For a cadence of 2 s on, 4 s off, repeat:

```
REQ NEW, CHG, PRT  
TYPE FCAD  
WCAD 1-255  
CDNC 0410 0820
```

```
END REPT  
CYCS 1 (on/off cycles to be repeated)  
WTON NO (use default tone for this cadence)
```

**2** For a cadence of 2 s on, 4 s off, 3 s on, 5 s off, repeat:

REQ NEW, CHG, PRT  
TYPE FCAD  
WCAD 1-255  
CDNC 0410 0820 0614 0998

END REPT  
CYCS 1 2 (on/off cycles to be repeated)  
WTON NO (use default tone for this cadence)

**3** For a cadence of:

0.1 s on at 950 Hz, 19 dB below overload A-law, 0.1 off  
0.1 s on at 1400 Hz, 20 dB below overload A-law, 0.1 off  
0.1 s on at 1800 Hz, 20 dB below overload A-law, steady off  
REQ NEW, CHG, PRT  
TYPE FCAD  
WCAD 1-255  
CDNC 0020 0020 0020 0020 0020

END OFF  
WTON YES (define tones for this cadence)

TONES 134 135 136 (See NT8D17 Conference/TDS tone table)

## TDS and NT8D17 Conference/TDS/MFS cards

There are two types of cards providing tones and cadences:

- Tone and Digit Switch (TDS) cards
- NT8D17 Conference, TDS and Multi-Frequency (MF) Sender card

There are a variety of TDS cards. Each card provides a different set of tones and cadences. When a TDS card is used for SL-1 sets, each tone and cadence is identified by a hexadecimal code. The decimal equivalents for these hex codes are entered at the TDSH prompt for each calling feature.

Refer to the *Flexible Tones and Cadences* NTP for the appropriate codes.

When the NT8D17 Conference/TDS/MFS cards are used, the tones and cadences are defined by the following prompts:

- XCAD = 0-255 - entry in the Firmware Cadence Table (FCAD)
- XTON = 0-255 - tone stored in the card firmware
- CDNC = 0-255 - entry in Master Cadence Table (MCAD)

The ringing cadences for all telephones use the Master Cadence Table (MCAD). MCAD entries 1-15 are downloaded to the Peripheral Controller to provide ringing.

## Time interval for Call Forward

For Call Forward No Answer (CFNA), the time interval before a call is forwarded is measured by the time interval for one ring cycle (defined at NCAD prompt) times the number of ring cycles (defined at CFNA prompt in LD 15).

All other types of ringing forward a call after this same time interval regardless of cadence. For example, those with a faster cadence will forward after more rings, those with a slower cadence after fewer rings.

## Installing FTC

These steps outline the process to install the FTC feature and change the default tones and cadences for one or more calling features.

To assist in fault clearing, it is recommended that you keep a record of all changes:

- Load Overlay 56
- Define new MCAD cadences
- Define new FCAD tones and cadences
- Create one or more FTC tables (one for each trunk route requiring different tones and cadences)
- Define the non-default tones and cadences for each FTC table
- Enter the FTC table number for each trunk route (LD 16 prompt TTBL)
- If a Conference/TDS/MFS card is equipped, then follow these steps:
  - set options in LD 97
  - initialize the system (INIT)
  - disable and enable each Conf/TDS/MFS card (LD 34)
  - disable and enable each Controller (LD 32)

**Note 1:** The Master Cadence Table (MCAD) defines cadences that are controlled by software. These are used for single line sets (500/2500) and digital sets.

MCAD can have up to 256 entries (0-255). Each entry can have up to 10 on/off phases. Entry 0 is reserved for continuous tone and cannot be changed. Entries are reserved for ringing cadences.

To define an MCAD cadence, enter the time for each on and off phase. Phases are in 5 ms increments. For example, enter 200 to have a phase last 1 second (200 x 5 ms = 1000 ms = 1 second).

The range for the first phase is 1-9999. The range for the second phase is 0-9999. Once an MCAD entry has been created, it can be changed but not removed.

**Note 2:** Prompts with the response *i bb c tt* are only prompted for systems equipped with Tone and Digit cards.

- *i* = internal (0) or external (1) source
- *bb* = burst
- *cc* = cadence
- *tt* = frequency/level

Prompts with the response *i bb c tt* define the Internal/External source, burst, cadence and frequency/level respectively. Enter the decimal equivalent (0-15) of the TDS Hex code (refer to 553-2711-180).

The first field is usually 0. If an external source is used the entry is 1 and the fourth field is 0-7 for the specified channel.

**Note 3:** The Firmware Cadence Table (FCAD) defines cadences that are controlled by the NT8D17 Conference /TDS/MFS card. These are used for SL-1 sets.

The FCAD can have up to 256 entries (0-255). Each entry can have up to 10 on-off phases. Entry 0 is reserved for continuous tone and cannot be changed.

FCAD cadences have the following capabilities:

- each cadence may be defined to end on the ON phase, OFF phase or repeat after a single pass through all defined on-off cycles. Any or all of the five on-off cycles can be repeated.
- a unique tone can be defined for each on phase. These tones are permanently held in the Conference/TDS/MFS firmware.

In order to have the same cadences for 500/2500 Digital and SL-1 sets, the MCAD and FCAD entries 0 through 15 are identical. Changes to MCAD entries 1 through 15 automatically change MCAD entries 1 through 15.

FCAD entries 1 through 15 cannot be changed without changing the MCAD entries.

**Note 4:** The cadences for Software Controlled Cadence Tones AOBT (Agent Observe Tone), INTU (Intrusion tone) and OVRD (Override tone) do not repeat in the same manner as the other tones. All other tones repeat all on-off cycles from the first up to the fifth if all ten on and off times are programmed. However, these tones reserve cycle 1 for special use, providing a tone burst of a different length if desired, to emphasize the initial iteration of the tone cycle.

**Note 5:** A cycle of 200 3200 50 3200 will have a 200 millisecond tone followed by 3.2 seconds of silence. After this initial burst, the tone will repeat in a 50 millisecond on, 3.2 seconds off pattern as long as the time remains valid. However, if the pattern is intended to not have an initial burst, the first two entries must be repeated as the last two entries to obtain the correct sequence.

As an example, if the desired tone is repeating sequence of 50 ms on, 100 ms off, 100 ms on, 50 ms off, 50 ms on, 3500 ms off, the entry must be as follows:

50 100 100 50 50 3500 50 100

## Intrusion Tone Note for Small Systems

The following settings are recommended when programming the Intrusion tone on an Small System.

Prompt	Response
INTU	
XTON	175
XCAD	19
CDNC	19
MCAD 19	14 25 14 2000
FCAD 19	14 25 14 2000
END	REPL
CYCS	2

## Prompts and responses

### Contents

Section	Page
<i>Prompts and responses by data block:</i>	
AANN: PC Attendant Announcement data block	793
DTAD: Special Dial Tone After Dialed Number data block	794
FCAD: Firmware Cadence data block	794
FDTD: Flexible Dial Tone Detection data block	795
FTC: Flexible Tones and Cadences data block	795
MCAD: Master cadence data block	805
RART: Route Access Restriction table data block	806
RCDT: Route Category Default Table data block	806
TBAR: Trunk Barring data block	806
Print a customer defined route's ART course	807
<i>Other Information:</i>	
Default Firmware Cadence (FCAD) tables	809

## AANN: PC Attendant Announcement data block

Prompt	Response	Comment
REQ	aaa	
TYPE	AANN	PC Attendant Announcement block.
CUST	xx	Customer Number
TBL	0-31	Announcement table number.
-NIPR	(NO) YES	Nightstation announcement priority. If NIPR is set to YES, ANNS is given for each call to the nightstation.
-ANQU	(NO) YES	PC Attendant Announcement is given on calls in PC Attendant or night service queue only.
-ANAT	aaa	Announcement when terminating to the PC Attendant. Where: aaa = R000 - R128 RAN announcement
-ANNS	aaa	Announcement when terminating to night station. Where: aaa = R000 - R128 RAN announcement
-ANFA	aaa	Announcement when CFNA to PC Attendant. Where: aaa = R000 - R128 RAN announcement
-ANFB	aaa	Announcement when CFB to PC Attendant. Where: aaa = R000 - R128 RAN announcement
-ANSR	aaa	Announcement when slow answer recall. Where: aaa = R000 - R128 RAN announcement
-ANXC	aaa	Announcement on calls extended by PC Attendant. Where: aaa = R000 - R128 RAN announcement
-ANOF	aaa	Announcement on calls overflowed from the PC Attendant queue. Where: aaa = R000 - R128 RAN announcement

# LD 56

## DTAD: Special Dial Tone After Dialed Number data block

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	DTAD	Type of data block = DTAD (Special Dial Tone After Dialed Number)
DDGT	x...x	Dialed digits (1-5 digits)
- TONE	a...a	Tone to be provided after the dialed digits (a...a = (DIAL), SPDT, or SRC-SRC8)

---

## FCAD: Firmware Cadence data block

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	FCAD	Type of data block = FCAD (Firmware Cadence)
WCAD	0-225	Cadence Number (0 is reserved for continuous tone and cannot be changed)
CDNC	xxxx xxxx ... xxxx	Cadence
END	a...a	End treatment for cadence (a...a = REPT, ON, or OFF)
- CYCS	x x x x	Cycles
- WTON	(NO) YES	Define Tones associated with the cadence
-- TONES	ttt ttt ...	NT8D17 tones (0-255) to be used with each phase of the cadence

---

## FDTD: Flexible Dial Tone Detection data block

Prompt	Response	Comment
REQ	aaa	Request
TYPE	FDTD	Type of data block = FDTD (Flexible Dial Tone Detection)
TABL	0-31	Table number
ACNO	1-4	Access Code Number
- OACn	x...x	Outgoing Access Code (1-4 digits)
- DTPn	(YES) NO	Dial Tone Post-dial
- CNT	(0)-15	Count
DGTS	x...x	Digits

## FTC: Flexible Tones and Cadences data block

An FTC table number can be entered for each trunk route at prompt TTBL in LD16. Table 0 is the default for all trunk routes and contains the defaults for North America.

Prompt	Response	Comment
REQ	aaa	Request
TYPE	FTC	Type of data block = FTC (Flexible Tones and Cadences)
TABL	0-31	FTC Table number
USER	(NO) YES	Print users of this table and tone table values (tone table value only)
DFLT	0-31	Default to existing FTC tone table
RING	(NO) YES	Change the ringing feature definitions
- NCAD	(1)-255	Normal Cadence
- NBCS		Normal BCS (SL-1 set) ringing
-- TDSH	i bb c tt	TDS Hex (Default is 0032)
-- XTON	0-(2)-255	XCT (NT8D17 Conference/TDS) Tone code

# LD 56

- DCAD	0-(2)-255	Distinctive Cadence
- DBCS		Distinctive BCS (SL-1 set) ringing
-- TDSH	i bb c tt	TDS Hex (Default is 0082)
-- XTON	0-(2)-255	XCT (NT8D17 Conference/TDS) Tone code
- ICAD	0-(5)-255	Intercom Cadence
- IBCS		Intercom ringing for BCS (SL-1)sets
-- TDSH	i bb c tt	TDS Hex (Default is 0012)
-- XTON	0-(2)-255	XCT (NT8D17 Conference/TDS) Tone code
- NDR1 PBX	0-255	Network Distinctive Ring 1 cadence for PBX sets
- NDR1 BCS		Network Distinctive Ring 1 for BCS (SL-1) sets
-- TDSH	i bb c tt	TDS Hex (Internal/External, burst, cadence and tone)
-- XTON	0-(2)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(2)-255	XCT (NT8D17 Conference/TDS) Cadence code
- NDR2 PBX	0-255	Network Distinctive Ring 2 cadence for PBX sets
- NDR2 BCS		Network Distinctive Ring 2 for BCS (SL-1) sets
-- TDSH	i bb c tt	TDS Hex (Internal/External, burst, cadence and tone)
-- XTON	0-(2)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(2)-255	XCT (NT8D17 Conference/TDS) Cadence code
- NDR3 PBX	0-255	Network Distinctive Ring 3 cadence for PBX sets
- NDR3 BCS		Network Distinctive Ring 3 for BCS (SL-1) sets
-- TDSH	i bb c tt	TDS Hex (Internal/External, burst, cadence and tone)
-- XTON	0-(2)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(2)-255	XCT (NT8D17 Conference/TDS) Cadence code
- NDR4 PBX	0-255	Network Distinctive Ring 4 cadence for PBX sets
- NDR4 BCS		Network Distinctive Ring 4 for BCS (SL-1) sets
-- TDSH	i bb c tt	TDS Hex (Internal/External, burst, cadence and tone)
-- XTON	0-(2)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(2)-255	XCT (NT8D17 Conference/TDS) Cadence code
- RCAD	0-(1)-255	Recall Cadence
- RBCS		Recall for BCS (SL-1) sets

---

-- TDSH	i bb c tt	TDS Hex (Default is 0032)
-- XTON	0-(2)-255	XCT (NT8D17 Conference/TDS) Tone code
- GCAD	0-(1)-255	Group Call Cadence
- GBCS		Group Call for BCS (SL-1) sets
-- TDSH	i bb c tt	TDS Hex (Default is 0082)
-- XTON	0-(2)-255	XCT (NT8D17 Conference/TDS) Tone code
- HCAD	0-(1)-255	Held call reminder Cadence
- HBCS		Held call reminder ringing for BCS (SL-1) sets
-- TDSH	i bb c tt	TDS Hex (Default is 0082)
-- XTON	0-(2)-255	XCT (NT8D17 Conference/TDS) Tone code
- PCAD	0-255	Recall or Misoperation Cadence
- PBCS		Recall or Misoperation ringing for BCS
-- TDSH	i bb c tt	TDS Hex (Default is 0032)
-- XTON	0-(4)-255	XCT (NT8D17 Conference/TDS) Tone code
HCCT	(NO) YES	Hardware Controlled Cadences and Tones
- DIAL		Dial tone
- EEST		End-to-End Signaling Feedback Tone
-- TDSH	i bb c tt	TDS Hex (Default is 0004)
-- XTON	0-(4)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-55	For EEST, this value is set to 0 no matter what is entered. XCT (NT8D17 Conference/TDS) Cadence number (FCAD cadence number)
- CFWT		Conference Warning Tone
-- XTON	0-(3)-255	Conference Warning Tone number. A tone number provided by the tone circuit.
-- XCAD	0-(19)-255	Conference Warning Tone cadence number. The cadence number should be set up under FCAD.
- SURV		Flexible Survivable Dial Tone
-- XTON	0-(4)-255	Flexible Survivable Dial Tone Code
-- XCAD	0-(253)-255	Flexible Survivable Dial Tone Cadence number

---

# LD 56

- SPCL		Special dial tone
-- TDSH	0 00 0 tt	TDS Hex (Default is 0004)
-- XTON	0-(4)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number (FCAD Cadence number)
- CDT		Control Dial Tone
-- TDSH	i bb c tt	TDS Hex (Default is 0004)
-- XTON	0-(4)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
- CFDT		Call Forward Dial Tone
-- TDSH	i bb c tt	TDS Hex (Default is 0004)
-- XTON	0-(4)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS)
- MWDT		Message Waiting Dial Tone
-- TDSH	i bb c tt	TDS Hex (Default is 0024)
-- XTON	0-(4)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(17)-255	XCT (NT8D17 Conference/TDS) Cadence number
- CFMW		Call Forward Message Waiting tone
-- TDSH	i bb c tt	TDS Hex (Default is 0024)
-- XTON	0-(4)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(17)-255	XCT (NT8D17 Conference/TDS) Cadence number
- ACTN		Active feature Dial Tone
-- TDSH	i bb c tt	TDS Hex (Default is special dial tone)
-- XTON	0-(4)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
- BUSY		Busy tone
-- TDSH	i bb c tt	TDS Hex (Default is 0017)
-- XTON	0-(7)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(16)-255	XCT (NT8D17 Conference/TDS) Cadence number

---

- RGBK		Ringback tone
-- TDSH	i bb c tt	TDS Hex (Default is 0035)
-- XTON	0-(5)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(1)-255	XCT (NT8D17 Conference/TDS) Cadence number
- PREM		Preemption tone
-- TDSH	i bb c tt	TDS Hex (Default is 0006)
-- XTON	0-(6)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
- PRBK		Precedence Ringback tone
-- TDSH	i bb c tt	TDS Hex (Default is 0008D)
-- XTON	0-(11)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(2)-255	XCT (NT8D17 Conference/TDS) Cadence number
- ARBK		ACD RGA (Ring Again) Ringback tone
-- TDSH	i bb c tt	TDS Hex (Default is 0008D)
-- XTON	0-(11)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(2)-255	XCT (NT8D17 Conference/TDS) Cadence number
- FFCT		Flexible Feature Code Confirmation Tone
-- TDSH	i bb c tt	TDS Hex (Default is 0004)
-- XTON	0-(4)-255	XCT (NT8D17 Conference/TDS) tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
- LIMIT		Log In Mode Tone for 500/2500 ACD sets
-- TDSH	i bb c tt	TDS Hex (Internal/External, burst, cadence and tone)
-- XTON	0-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-255	XCT (NT8D17 Conference/TDS) Cadence number
- NRMT		Not Ready (NRDY) Mode Tone for ACD sets
-- TDSH	i bb c tt	TDS Hex (Internal/External, burst, cadence and tone)
-- XTON	0-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-255	XCT (NT8D17 Conference/TDS) Cadence number

---

# LD 56

- AWUT		Automatic Wake Up special error Tone
-- TDSH	i bb c tt	TDS Hex (Default is 0027)
-- XTON	0-(4)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
- OVFL		Overflow tone
-- TDSH	i bb c tt	TDS Hex (Default is 0027)
-- XTON	0-(7)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(17)-255	XCT (NT8D17 Conference/TDS) Cadence number
- TEST		Test tone
-- TDSH	0 0 0 tt	TDS Hex (Default is 0008)
-- XTON	0-(8)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
- HOWL		Howler tone
-- TDSH	i bb c tt	TDS Hex (Default is Overflow tone)
-- XTON	0-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-255	XCT (NT8D17 Conference/TDS) Cadence number
- ERWT		Expensive Route Warning Tone
-- TDSH	0 0 0 tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
- PCWT		Precedence Call Waiting Tone
-- TDSH	0 0 0 tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number (FCAD Cadence number)
- ACFT		ACD Call Force Tone
-- TDSH	0 0 0 tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
- TLP		Tone to Last Party

---

-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	(0)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
- TLPT	(0)-30	Tone to Last Party Timer in seconds. No tone = 0
- PATI		Patience tone Multi-Party Operations
-- TDSH	i bb c tt	TDS Hex (Default is 0000)
-- XTON	(0)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
CAB	(NO) YES	M911 Call Abandon on Answer tone
- TDSH	i bb cc tt	TDS external, burst, cadence and tone
- XTON	0-255	NT8D17 TDS Tone code
- XCAD	0-255	NT8D17 Cadence code for FCAD
CAST	(NO) YES	Centralized Attendant Service Tones
- LDN		Listed Directory Number tone
-- TDSH	i bb c tt	TDS Hex (Default is 0346)
-- XTON	(0)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(24)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(16)-255	MCAD software Cadence number
- DIO		Dial 0 Recall tone
-- TDSH	i bb c tt	TDS Hex (Default is 0283)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(22)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(16)-255	MCAD software Cadence number
- HLDC		Hold Confirmation tone
-- TDSH	i bb c tt	TDS Hex (Default is 0346)
-- XTON	(0)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(24)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(16)-255	MCAD software Cadence number
- CPNC		Camp-On Confirmation tone

---

# LD 56

-- TDSH	i bb c tt	TDS Hex (Default is 0243)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	0-(21)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(17)-255	MCAD software Cadence number
SCCT	(NO) YES	Software Controlled Cadences and Tones
ILIN		NSSC pending agent Login tone
ILOU		NSSC pending agent Logout tone
- CAMP		Camp-On tone
-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(17)-255	MCAD software cadence number
- RPAW	x xx xx xx	Radio Paging Warning tone
-- CLN	1-31	Cadence Length
-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(19)-255	MCAD software cadence number
- AOBT		Agent Observe Tone
-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(18)-255	MCAD software cadence number
- INTU		Intrusion tone (If Small System, see note on page 791.)
-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(19)-255	MCAD software cadence number
- CWT		Call Waiting Tone

---

-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(20)-255	MCAD software cadence number
- OBKT		Observe Blocking Tone
-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(17)-255	MCAD software cadence number
- OVRD		Override tone
-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(18)-255	MCAD software cadence number
- OHQ		Off-Hook Queuing tone
-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(3)-255	MCAD software cadence number
- SRT		Set Relocation Tone
-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(22)-255	MCAD software cadence number
- TMAT		Telephone Messaging Alert Tone
-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(22)-255	MCAD software cadence number
- TMOT		Telephone Messaging OK Tone

---

# LD 56

-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(23)-255	MCAD software cadence number
- TSUT		Telephone Status Update Tone
-- TDSH	i bb c tt	TDS Hex (Default is 0003)
-- XTON	0-(3)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
-- CDNC	0-(23)-255	MCAD software cadence number
ABST		Authorization Code Conditionally Last Enhancement cadence
- XTON	0-(4)-255	NT8D17 TDS Tone code
- XCAD	(0)-255	NT8D17 TDS Cadence code
- CDNC	0-(2)-255	MCAD table entry for this cadence
PNNC		Process Notification for Networked Calls tone
- XTON	(0)-255	NT8D17 TDS Tone code
- XCAD	(0)-255	NT8D17 TDS Cadence code
- CDNC	0-(2)-255	MCAD table entry for this cadence
SRC	(NO) YES	Source
- SRC1		Source tone 1
-- TDSH	i bb c tt	TDS Hex (Default is 0000)
-- XTON	(0)-255	XCT (NT8D17 Conference/TDS) Tone code
-- XCAD	(0)-255	XCT (NT8D17 Conference/TDS) Cadence number
- SRC2		Source tone 2
- SRC3		Source tone 3
- SRC4		Source tone 4
- SRC5		Source tone 5
- SRC6		Source tone 6
- SRC7		Source tone 7
- SRC8		Source tone 8
MINT	(NO) YES	Allow tones or announcements

---

- CFSN	0-255 0-255	Call Forward All Calls active
- - TDSH	i bb c tt	Third parameter
- CPOQ	0-255 0-255	Call is being parked or set is in Off-Hook Queuing state
- - TDSH	i bb c tt	Third parameter
- RGAR	0-255 0-255	Ring Again is applied by another set
- - TDSH	i bb c tt	Third parameter
- RPCT	0-255 0-255	Confirmation Tone replaced by an announcement
- - TDSH	i bb c tt	Third parameter
- RGAB	0-255 0-255	Station Dialed Busy
- - TDSH	i bb c tt	Third parameter
- MWAN	0-255 0-255	Message Waiting
- - TDSH	i bb c tt	Third parameter
- DNDA	0-255 0-255	Do Not Disturb
- - TDSH	i bb c tt	Third parameter
- SSLK	0-255 0-255	Set Status Lockout
- - TDSH	i bb c tt	Third parameter
PULS	(NO) YES	Pulse timers are to be changed
- P10	4 (8)	Codes for make/break ratio for 10 pps
- ID1	256-(768)-1024	Inter-Digit 1
- ID2	256-(512)-1024	Inter-Digit 2
- IDD	256-1024	Inter-Digit DTMF
- IDE	256-(384)	EOS interdigital pause in milliseconds
RVDL	(0) x	Reverse Dial format

---

## MCAD: Master cadence data block

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	MCAD	Type of data block = MCAD (Master cadence)
WACD	0-225	Cadence Number (0 is reserved for continuous tone and cannot be changed)
CDNC	xxxx xxxx ... xxxx	Cadence

---

# LD 56

## RART: Route Access Restriction table data block

---

Prompt	Response	Comment
REQ	CHG	Request. REQ = NEW or OUT is not accepted for RART.
TYPE	RART	Type of data block = RART (Route Access Restriction table)
CUST	xx	Customer number
ROUT	(0)-127	Route
ART	1-63	Access Restriction Table

---

## RCDT: Route Category Default Table data block

---

Prompt	Response	Comment
REQ	CHG	Request. When TYPE = RCDT, you cannot enter NEW or OUT at the REQ prompt.
TYPE	RCDT	Type of data block = RCDT (Route Category Default table)
COT	(0)-63	COT, FEX, WAT. These route types will be assigned the entered ART when the route is created in LD16.
DID	(0)-63	These route types will be assigned the entered ART when the route is created in LD16
TIE	(0)-63	CAA, CAM, CSA, TIE
OTH	(0)-63	Other

---

## TBAR: Trunk Barring data block

---

Prompt	Response	Comment
REQ	NEW CHG	Request
TYPE	TBAR	Type of data block = TBAR (Trunk Barring)
ART	1-63	Access Restriction Table
DENY	yyy yyy ...	Enter ART number denied to Originating Trunk Connection (OTC)

---

---

**Print a customer defined route's ART course**

---

<b>Prompt</b>	<b>Response</b>	<b>Comment</b>
REQ	PRT	Request
TYPE	aaa	Type of data block
CUST	xx	Customer number
ROUT	(0)-127	Route

---

## Default Master Cadence (MCAD) tables

WCAD =	DEFAULT MCAD TABLE (Master Cadence Table)
--------	---

000	CDNC = 0000 0000 0000 0000 0000 0000 0000 0000 0000 0000
001	CDNC = 0410 0800 0000 0000 0000 0000 0000 0000 0000 0000
002	CDNC = 0308 0076 0308 0076 0000 0000 0000 0000 0000 0000
003	CDNC = 0205 0000 0000 0000 0000 0000 0000 0000 0000 0000
004	CDNC = 0102 0102 0205 0819 0000 0000 0000 0000 0000 0000
005	CDNC = 0100 0100 0000 0000 0000 0000 0000 0000 0000 0000
016	CDNC = 0128 0000 0000 0000 0000 0000 0000 0000 0000 0000
017	CDNC = 0051 0000 0000 0000 0000 0000 0000 0000 0000 0000
018	CDNC = 0205 3072 0051 3072 0000 0000 0000 0000 0000 0000
019	CDNC = 0205 1229 0051 1229 0000 0000 0000 0000 0000 0000
020	CDNC = 0051 0026 0051 2048 0000 0000 0000 0000 0000 0000
021	CDNC = 0410 0000 0000 0000 0000 0000 0000 0000 0000 0000
022	CDNC = 0102 0000 0000 0000 0000 0000 0000 0000 0000 0000
023	CDNC = 0512 0000 0000 0000 0000 0000 0000 0000 0000 0000

### Master Cadence (MCAD) table for Japan

001	CDNC = 0050 0050 0050 0450 0000 0000 0000 0000 0000 0000
002	CDNC = 0200 0400 0000 0000 0000 0000 0000 0000 0000 0000

## Default Firmware Cadence (FCAD) tables

WCAD =	DEFAULT FCAD TABLE (Firmware Cadence Table)
000	Cadence number in the Master Cadence table (MCAD) CDNC = 0000 0000 0000 0000 0000 0000 0000 0000 0000 0000 END = OFF SPCL = NO
001	Cadence number in the Master Cadence table (MCAD) CDNC = 0410 0800 0000 0000 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1 SPCL = NO
002	Cadence number in the Master Cadence table (MCAD) CDNC = 0308 0076 0308 0076 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1 2 SPCL = NO
003	Cadence number in the Master Cadence table (MCAD) CDNC = 0205 0000 0000 0000 0000 0000 0000 0000 0000 0000 END = OFF SPCL = NO
004	Cadence number in the Master Cadence table (MCAD) CDNC = 0102 0102 0205 0819 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1 2 SPCL = NO
005	Cadence number in the Master Cadence table (MCAD) CDNC = 0100 0100 0000 0000 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1 SPCL = NO
(Part 1 of 3)	

# LD 56

WCAD =	DEFAULT FCAD TABLE (Firmware Cadence Table)
016	Cadence number in the Master Cadence table (MCAD) CDNC = 0100 0100 0000 0000 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1 SPCL = NO
017	Cadence number in the Master Cadence table (MCAD) CDNC = 0050 0050 0000 0000 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1 SPCL = NO
018	Cadence number in the Master Cadence table (MCAD) CDNC = 0010 0010 0000 0000 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1 SPCL = NO
019	Cadence number in the Master Cadence table (MCAD) CDNC = 0040 0060 0000 0000 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1 SPCL = NO
020	Cadence number in the Master Cadence table (MCAD) CDNC = 0015 0000 0000 0000 0000 0000 0000 0000 0000 0000 END = OFF SPCL = NO
021	Cadence number in the Master Cadence table (MCAD) CDNC = 0020 0000 0000 0000 0000 0000 0000 0000 0000 0000 END = OFF SPCL = NO
022	Cadence number in the Master Cadence table (MCAD) CDNC = 0020 0020 0020 0000 0000 0000 0000 0000 0000 0000 END = OFF SPCL = NO

(Part 2 of 3)

WCAD =	DEFAULT FCAD TABLE (Firmware Cadence Table)
023	Cadence number in the Master Cadence table (MCAD) CDNC = 0060 0000 0000 0000 0000 0000 0000 0000 0000 0000 END = OFF SPCL = NO
024	Cadence number in the Master Cadence table (MCAD) CDNC = 0020 0000 0020 0000 0020 0000 0000 0000 0000 0000 END = OFF SPCL = YES
025	Cadence number in the Master Cadence table (MCAD) CDNC = 0200 0000 0000 0000 0000 0000 0000 0000 0000 0000 END = OFF SPCL = NO
026	Cadence number in the Master Cadence table (MCAD) CDNC = 0050 0000 0000 0000 0000 0000 0000 0000 0000 0000 END = OFF SPCL = NO
027	Cadence number in the Master Cadence table (MCAD) CDNC = 0400 0000 0000 0000 0000 0000 0000 0000 0000 0000 END = OFF SPCL = NO
028	Cadence number in the Master Cadence table (MCAD) CDNC = 0125 0000 0000 0000 0000 0000 0000 0000 0000 0000 END = OFF SPCL = NO
029	Cadence number in the Master Cadence table (MCAD) CDNC = 0030 0070 0000 0000 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1 SPCL = NO
(Part 3 of 3)	

## Firmware Cadence (FCAD) table for Japan

WCAD =	DEFAULT FCAD TABLE (Cadence Table for JAPAN TDS)
001	Cadence number in the Master Cadence table (MCAD) CDNC = 0200 0400 0000 0000 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1 2 SPCL = NO
002	Cadence number in the Master Cadence table (MCAD) CDNC = 0050 0050 0050 0450 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1 SPCL = NO
017	Cadence number in the Master Cadence table (MCAD) CDNC = 0100 0050 0000 0000 0000 0000 0000 0000 0000 0000 END = REPT CYCS = 1

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ABST		Authorization Code Conditionally Last Enhancement cadence	nars-24
ACFT		ACD Call Force Tone  When defining the hex codes for this tone, only the code for the frequency/level is required as the cadence is provided by software. Enter zero for the other values (e.g., TDSH = 0 0 0 xx, XTON = xxx, XCAD = 000).	ftc-13
ACNO	1-4  <cr>	Access Code Number Outgoing Access Code to be used (4 codes per table) Go to DGTS prompt (REQ = CHG)	ftc-12
ACTN		Active feature dial tone	ftc-12
ANAT	aaa	Announcement when terminating to the PC Attendant. Where: <ul style="list-style-type: none"> <li>aaa = R000 - R128 announcement is given via RAN announcement</li> </ul>	atan-25.4
ANFA	aaa	Announcement when CFNA to PC Attendant. Where: <ul style="list-style-type: none"> <li>aaa = R000 - R128 announcement is given via RAN announcement</li> </ul>	atan-25.4
ANFB	aaa	Announcement when CFB to PC Attendant. Where: <ul style="list-style-type: none"> <li>aaa = R000 - R128 announcement is given via RAN announcement</li> </ul>	atan-25.4
ANNS	aaa	Announcement when terminating to night station. Where: <ul style="list-style-type: none"> <li>aaa = R000 - R128 announcement is given via RAN announcement</li> </ul>	atan-25.4

# LD 56

Prompt	Response	Comment	Pack/Rel
ANOF	aaa	Announcement on calls overflowed from the PC Attendant queue. Where: <ul style="list-style-type: none"><li>• aaa = R000 - R128 announcement is given via RAN announcement</li></ul>	atan-25.4
ANQU	(NO) YES	PC Attendant Announcement is given on calls in PC Attendant or night service queue only.	atan-25.4
ANSR	aaa	Announcement when slow answer recall. Where: <ul style="list-style-type: none"><li>• aaa = R000 - R128 announcement is given via RAN announcement</li></ul>	atan-25.4
ANXC	aaa	Announcement on calls extended by PC Attendant. Where: <ul style="list-style-type: none"><li>• aaa = R000 - R128 announcement is given via RAN announcement</li></ul>	atan-25.4
AOBT		Agent Observe Tone  This cadence repeats the last 8 on/off phases to allow for a special tone burst on the first cycle. For example, a cadence is defined as 3 s on, 3 s off, 1 s on, 3 s off.  After the initial burst, the tone repeats in a 1 s on, 3 s off pattern. In order to repeat the initial 3 s burst, it must be entered as the first and last cycle because the first cycle is not repeated. In this case the cadence is defined as: 3 s on, 3 s off, 1 s on, 3 s off, 3 s on 3 s off.	ftc-13
ARBK		ACD RGA (Ring Again) Ringback tone	ftc-13
ART	1-63 <cr>	Access Restriction Table Return to REQ prompt  ART remains unchanged Printing of the route category default table occurs	ftc-10
AWUT		Automatic Wake Up special error Tone	mlwu-16
BUSY		Busy tone	ftc-13
CAB	(NO) YES	M911 Call Abandon on Answer tone	M911-19

Prompt	Response	Comment	Pack/Rel
CAMP		Camp-On tone	ftc-13
CAST	(NO)YES	<p>Centralized Attendant Service Tones</p> <p>Modification to the CAS (Centralized Attendant Service) tone definition.</p> <p>For systems with XCT (NT8D17 Conference/TDS) cards, each feature requires a firmware cadence (XCAD), a software cadence (CNDN) and tone (XTON).</p> <p>Due to the finer resolution of the firmware cadence (5 ms) compared to the software (96/128 ms), you should allow the software cadence to be long enough to cover the full duration of the XCAD.</p> <p>For example, to define a cadence of 0.1 s on, 0.1 s off, 0.1 s on, steady off</p> <pre>CDNC0020 0020 0020 0000 END OFF SPCL</pre> <p>The software cadence is then 0.3 s (600 ms). If the software precision is 128 ms, the software cadence is calculated as follows:</p> $600 \text{ ms}/128 = 4.6 = 5 \text{ (rounded up)}$ $128 \times 5 = 640$ <p>Entry to on phase = <math>640/5 = 0128</math>, and to define the cadence enter 0128 to prompt CDNC.</p>	ftc-13
CDNC	xxxx xxxx ... xxxx	<p>On-off phases for Cadence (ten on-off cycles)</p> <p>Entries 1 through 15 are reserved for ringing cadences. When defining the cadences in MCAD each phase entry is in 5 millisecond increments.</p> <p>The range for the first phase is 1-9999 increments. The range for the second phase is 0-9999 increments. The default is 0 0 0 0 0 0 0 0 0.</p> <p>Table shows the default MCAD Tables.</p>	ftc-14
	0-(16)-255	MCAD software cadence number	ftc-14
	0-(17)-255	MCAD software cadence number	

# LD 56

Prompt	Response	Comment	Pack/Rel
	0-(19)-255	MCAD software cadence number (see <i>Note 5</i> )	
	0-(18)-255	MCAD software cadence number (see <i>Note 5</i> )	
	0-(20)-255	MCAD software cadence number	
	0-(3)-255	MCAD software cadence number	
	0-(22)-255	MCAD software cadence number	
	0-(23)-255	MCAD software cadence number	
CDT		Control Dial Tone	ftc-13
CFDT		Call Forward Dial Tone	ftc-13
CFMW		Call Forward Message Waiting tone	ftc-13
CFWT		Conference Warning Tone (applies only to Small System)	basic-21
CFSN	0-255 0-255	Call Forward All Calls active First parameter is the MCAD table cadence entry number. Second parameter is the XCT tone code.	ftc-15
CLN	1-31	Cadence Length (length of the Camp-On tone burst in 96 or 128 millisecond increments) See TMRK prompt in LD17.	ftc-9
CNT	(0)-15	Count  Number of digits outpulsed before dial tone detector reconnection (0 specifies that digit counting is not to be used).	ftc-12
COT	(0)-63	COT, FEX, WAT. These route types will be assigned the entered ART when the route is created in LD 16.	
CPNC		Camp-On Confirmation tone	ftc-13
CPOQ	0-255 0-255	Call is being Parked or set is in Off-Hook Queuing state.  First parameter is the MCAD table cadence entry number. Second parameter is the XCT tone code.	ftc-15
CUST	xx	Customer number as defined in LD15	cust-15

Prompt	Response	Comment	Pack/Rel
CWT		Call Waiting Tone	ftc-13
CYCS	x x x x	On-off Cycles (1 to 5) to be repeated. Default is no repeats. Prompted when END = REPT	ftc-14
DBCS		Distinctive BCS (SL-1 set) ringing	ftc-13
DCAD	0-(2)-255	Distinctive Cadence  500/2500 and Digital set ringing MCAD cadence number. (See Notes 1 and 3)  It is recommended that the cadence used matches the cadence provided for SL-1 sets (prompt DBCS). DCAD is also used for SL-1 sets in systems with XCT (NT8D17 Conference/TDS) cards.	ftc-13
DDGT	xxxxx X <cr>	Dialed digits (1-5 digits) To remove To end	pnp-15
DENY	yyy yyy ...  ALL xALL  Xyyy Xyyy .. <cr>	Enter ART number denied to Originating Trunk Connection (OTC)  Deny all ARTs to OTC All ART numbers are allowed to OTC  Enter ART numbers allowed to OTC Return to REQ prompt with no table being stored  The ART is removed unless it is used as a default when REQ = OUT. REQ = NEW or OUT is disallowed for RART.	ftc-10
DFLT	0-31 <cr>	Default to existing FTC tone table Create tone table without defaulting Prompted when REQ = NEW	ftc-13
DGTS	xxxx  Xxxxx <cr>	Digits The system will wait for dial tone after these additional (1-4) digits. Remove digit sequence from table Return to REQ prompt DGTS prompt will repeat until <cr> is pressed.	ftc-12

# LD 56

Prompt	Response	Comment	Pack/Rel
DIO		Dial 0 recall tone	ftc-13
DIAL		Dial tone	ftc-13
DID	(0)-63	These route types will be assigned the entered ART when the route is created in LD 16	
DNDA	0-255 0-255	Do Not Disturb First parameter is the MCAD table cadence entry number. Second parameter is the XCT tone code.	ftc-15
DTPn	(YES) NO	Dial Tone Post-dial Dial tone detector is to be reconnected immediately after Outgoing Access (OACn).	ftc-12
EEST		End-to-End Signaling feedback Tone Indicates that the improved EES tone is used. There is actually no cadence. When using the Enhanced Conference/TDS card, the XCAD prompt is not printed, and the cadence is set to 0 no matter what is entered.	ees-19
END	REPT ON OFF	End treatment for cadence Repeating cycles (defined by the CYCS prompt) End cadence on the "on" phase End cadence on the "off" phase	ftc-14
ERWT		Expensive Route Warning Tone When defining the hex codes for this tone, only the code for the frequency/level is required as the cadence is provided by software. Enter zero for the other values (e.g., TDSH = 0 0 0 xx, XTON = xxx, XCAD = 000).	ftc-13

Prompt	Response	Comment	Pack/Rel
FFCT		<p>Flexible Feature Code Confirmation Tone</p> <p>This tone allows users of 500/2500 or multi-line telephone sets to receive a confirmation tone after activating/deactivating the following features:</p> <ul style="list-style-type: none"> <li>Call Forward activate/deactivate</li> <li>Ring Again deactivate</li> <li>Store/erase Stored Number Redial</li> <li>all Automatic Wake Up codes</li> <li>Speed Call store</li> <li>any verification code</li> </ul>	ffc-15
GBCS		Group Call ringing for BCS (SL-1) sets	grp-13
GCAD	0-(1)-255	<p>Group Call Cadence</p> <p>500/2500 and Digital set Group Call Ringing Cadence MCAD cadence number</p> <p>It is recommended that the cadence used matches the cadence provided for SL-1 sets (prompt GBCS). GCAD is also used for SL-1 sets in systems with XCT (NT8D17 Conference/TDS) cards.</p>	grp-14
HBCS		Held call ringing for BCS (SL-1) sets	ftc-13
HCAD	0-(1)-255	<p>Held call reminder Cadence</p> <p>500/2500 and Digital set held call reminder ringing cadence MCAD cadence number</p> <p>It is recommended that the cadence used matches the cadence provided for SL-1 sets (prompt HBCS). HCAD is also used for SL-1 sets in systems with XCT (NT8D17 Conference/TDS) cards.</p>	ftc-13
HCCT	(NO) YES	<p>Hardware Controlled Cadences and Tones</p> <p>Modification of the hardware (TDS card) controlled cadence tone definitions allowed.</p> <p>For systems with XCT (NT8D17 Conference/TDS) cards, each feature requires a firmware cadence (XCAD) and tone (XTON). For other TDS cards, the tone and cadence is defined by prompt TDSH.</p>	ftc-13
HLDC		Hold Confirmation tone	ftc-13

# LD 56

Prompt	Response	Comment	Pack/Rel
HOWL		Howler tone	ftc-13
IBCS		Intercom ringing for BCS (SL-1)sets Distinctive Dial Intercom ringing for BCS (SL-1) sets	ftc-13
ICAD	0-(5)-255	Intercom Cadence  500/2500 and Digital set Dial Intercom Distinctive ringing MCAD cadence number  It is recommended that the cadence used matches the cadence provided for SL-1 sets (prompt IBCS). ICAD is also used for SL-1 sets in systems with XCT (NT8D17 Conference/TDS) cards.	ftc-13
ID1	256-(768)-1024	Inter-Digit 1(P10 interdigit pause in milliseconds)	ftc-13
ID2	256-(512)-1024	Interdigit 2 (P20 interdigit pause in milliseconds)	ftc-13
IDD	256-1024	Interdigit DTMF pause in milliseconds  Default is 512 if 100 is the response to prompt DTRB in LD 17. Otherwise, the default is 384.	ftc-13
IDE	256 - (384)	EOS interdigital pause in ms. Prompted if DDD package is equipped and PULS = YES.	ftc-13
ILIN		Nortel Symposium Call Center (NXCC) pending agent Login tone	nxcc-22
ILOU		Nortel Symposium Call Center (NXCC) pending agent Logout tone	nxcc-22

Prompt	Response	Comment	Pack/Rel
INTU		<p>Intrusion tone</p> <p>This cadence repeats the last 8 on/off phases to allow for a special tone burst on the first cycle.</p> <p>For example, a cadence is defined as 3 s on, 3 s off, 1 s on, 3 s off. After the initial burst, the tone repeats in a 1 s on, 3 s off pattern.</p> <p>In order to repeat the initial 3 s burst, it must be entered as the first and last cycle because the first cycle is not repeated. In this case the cadence is defined as: 3 s on, 3 s off, 1 s on, 3 s off, 3 s on 3 s off.</p>	ftc-13
LDN		Listed Directory Number tone	ftc-13
LIMT		<p>Log In Mode Tone for 500/2500 ACD sets</p> <p>This is the tone setting for ACD services to 500/2500 agent sets. You must have Flexible Tones and Cadences (FTC) supported for this feature to function properly.</p>	bacd-16
MINT	(NO) YES	Allow tones or announcements (NO- tone default values)	mint-15
MWAN	0-255 0-255	<p>Message Waiting</p> <p>The first parameter is the MCAD table cadence entry number. The second parameter is the XCT tone code.</p>	ftc-15
MWDT		Message Waiting Dial Tone	ftc-13
NBCS		Normal BCS (SL-1 set) ringing	ftc-13
NCAD	(1)-255	<p>Normal Cadence</p> <p>500/2500 and Digital set ringing MCAD cadence number. (Notes 1 and 3)</p> <p>It is recommended that the cadence used matches the cadence provided for SL-1 sets (prompt NBCS). NCAD is also used for SL-1 sets in systems with XCT (NT8D17 Conference/TDS) cards.</p>	ftc-13
NDR1 BCS		Network Distinctive Ring 1 for BCS (SL-1) sets	ftc-16

# LD 56

Prompt	Response	Comment	Pack/Rel
NDR1 PBX		Network Distinctive Ring 1 cadence for PBX sets	ftc-16
	0-255	500/2500 and Digital set Network Distinctive Ringing cadence 1 MCAD cadence number.  It is recommended that the cadence used matches the cadence provided for SL-1 sets (prompt NDR1 BCS). NDR1 PBX is also used for SL-1 sets in systems with XCT (NT8D17 Conference/TDS) cards.	
NDR2 BCS		Network Distinctive Ring 2 for BCS (SL-1) sets	ftc-16
NDR2 PBX		Network Distinctive Ring 2 cadence for PBX sets	ftc-16
	0-255	500/2500 and Digital set Network Distinctive Ringing cadence 2 MCAD cadence number.  It is recommended that the cadence used matches the cadence provided for SL-1 sets (prompt NDR2 BCS). NDR2 PBX is also used for SL-1 sets in systems with XCT (NT8D17 Conference/TDS) cards.	
NDR3 BCS		Network Distinctive Ring 3 for BCS (SL-1) sets	ftc-16
NDR3 PBX		Network Distinctive Ring 3 cadence for PBX sets	ftc-16
	0-255	500/2500 and Digital set Network Distinctive Ringing cadence 3 MCAD cadence number.  It is recommended that the cadence used matches the cadence provided for SL-1 sets (prompt NDR3 BCS). NDR3 PBX is also used for SL-1 sets in systems with XCT (NT8D17 Conference/TDS) cards.	
NDR4 BCS		Network Distinctive Ring 4 for BCS (SL-1) sets	ftc-16
NDR4 PBX		Network Distinctive Ring 4 cadence for PBX sets	ftc-16
	0-255	500/2500 and Digital set Network Distinctive Ringing cadence 4 MCAD cadence number  It is recommended that the cadence used matches the cadence provided for SL-1 sets (prompt NDR4 BCS). NDR4 PBX is also used for SL-1 sets in systems with XCT (NT8D17 Conference/TDS) cards.	

Prompt	Response	Comment	Pack/Rel
NIPR	(NO) YES	Nightstation announcement priority. If NIPR is set to YES, ANNS is given for each call to the nightstation.	atan-25.4
NRMT		Not Ready (NRDY) Mode Tone for ACD sets  This is the tone setting for the NRDY function within ACD services to 500/2500 agent sets. You must have Flexible Tones and Cadences supported for this feature to function properly.	bacd-16
OACn	xxxx Xxxxx	Outgoing Access Code (1-4 digits) Where: n = ACNO response Remove OACn	ftc-12
OBKT		Observe Blocking Tone	ftc-13
OHQ		Off-Hook Queuing tone	ftc-13
OTH	(0)-63  <cr>	Other (ADM, DIC, MDM, PAG, RCD) These route types will be assigned the entered ART when the route is created in LD 16. Return to REQ prompt.	ftc-10
OVFL		Overflow tone	ftc-13
OVRD		Override tone  This cadence repeats the last 8 on/off phases to allow for a special tone burst on the first cycle.  For example, a cadence is defined as 3 s on, 3 s off, 1 s on, 3 s off. After the initial burst, the tone repeats in a 1 s on, 3 s off pattern.  In order to repeat the initial 3 s burst, it must be entered as the first and last cycle because the first cycle is not repeated. In this case the cadence is defined as: 3 s on, 3 s off, 1 s on, 3 s off, 3 s on 3 s off.	ftc-13
P10	4 (8)	Codes for make/break ratio for 10 pps. Other make/break ratio (Prompt S10P in LD97) North American make/break ratio (Prompt S10P in LD97) (See also CLS P10 in LD 14)	ftc-13
PATI		Patience tone multi-party operations	frta-21

# LD 56

Prompt	Response	Comment	Pack/Rel
PBCS		Recall or Misoperation ringing for BCS (SL-1) sets (default is SL-1 ringing tone TDS code)	ftc-12
PCAD	0-255	Recall or Misoperation Cadence 500/2500 and Digital set Recall or Misoperation ringing cadence MCAD cadence number It is recommended that the cadence used matches the cadence provided for SL-1 sets (prompt PBCS). PCAD is also used for SL-1 sets in systems with XCT (NT8D17 Conference/TDS) cards.	ftc-12
PCWT		Precedence Call Waiting Tone When defining the TDS hex codes for this tone, only the code for the frequency/level is required as the cadence is provided by software. Enter zero for the other values (e.g., 0 0 0 xx).	ftc-13
PNNC		Process Notification for Networked Calls tone	mfc-24
PRBK		Precedence Ringback tone	ftc-13
PREM		Preemption tone	ftc-13
PULS	(NO) YES	Pulse timers are to be changed	ftc-13
RBCS		Call Park Recall ringing for BCS (SL-1) sets	ftc-14
RCAD	0-(1)-255	Recall Cadence 500/2500 and digital set Call Park recall ringing cadence MCAD cadence number. RCAD is also used for SL-1 sets in systems with XCT (NT8D17 Conference/TDS) cards.	ftc-14
REQ	CHG END NEW OUT PRT	Request Change existing data block Exit Overlay program Add new data block to the system Remove data block Print data block	ftc-13

Prompt	Response	Comment	Pack/Rel
RGAB	0-255 0-255	Station Dialed Busy (calling party allowed to apply Ring Again)  The first parameter is the MCAD table cadence entry number. The second parameter is the XCT tone code.	ftc-15
RGAR	0-255 0-255	Ring Again is applied by another set  The first parameter is the MCAD table cadence entry number. The second parameter is the XCT tone code.	ftc-15
RGBK		Ringback tone	ftc-13
RING	(NO) YES	Change the Ringing feature definitions  For systems with NT8D17 Conference/TDS cards, all telephones share the same ringing cadence. SL-1 telephones require an NT8D17 tone (XTON).	ftc-13
ROUT	(0)-127 <cr>	Route Print routes with non-zero ART numbers, along with the ART number. Return to REQ prompt. REQ = NEW or OUT is disallowed for RCDT	ftc-10
RPAW	x xx xx xx	Radio Paging Warning tone	ftc-15
RPCT	0-255 0-255	Confirmation Tone Replaced by an announcement  The first parameter is the MCAD table cadence entry number. The second parameter is the XCT tone code.	ftc-15
RVDL	(0) 1 2	Reverse Dial format No Reverse Dial format Reverse Dial format 1 Reverse Dial format 2	ftc-10
SCCT	(NO) YES	Software Controlled Cadences and Tones Modification of the Software Controlled Cadence Tone definitions allowed	ftc-13
SPCL		Special dial tone Only the code for the frequency/level is required as the cadence is provided by software. Enter 0 for the other values (e.g., TDSH = 0 0 0 xx, XTON = xxx, XCAD = 000).	ftc-13

# LD 56

Prompt	Response	Comment	Pack/Rel
SRC	(NO) YES	Source tones (SRC1 through SRC8) are required. Eight intercept Source tones can be defined. These tones are entered in LD 15 in response to the various intercept treatment prompts.	ftc-13
SRC1		Source tone 1 Prompts and default values for TDSH, XTON and XCAD are the same for all SRC1 through SRC8 prompts.	ftc-13
SRC2		Source tone 2	ftc-13
SRC3		Source tone 3	ftc-13
SRC4		Source tone 4	ftc-13
SRC5		Source tone 5	ftc-13
SRC6		Source tone 6	ftc-13
SRC7		Source tone 7	ftc-13
SRC8		Source tone 8	ftc-13
SRT		Set Relocation Tone	ftc-13
SSLK	0-255 0-255	Set Status Lockout First parameter is the MCAD table cadence entry number. Second parameter is the XCT tone code.	ftc-13
SURV		Flexible Survivable Dial Tone	ip-25.4
TABL	0-31  <cr>	FTC Table number To associate a FTC table with a trunk route, enter the table number in response to prompt TTBL in LD 16. Prints all tables	ftc-13
TBL	0-31	Announcement table number.	atan-25.4
TDSH	i bb c tt	Hexadecimal code for TDS. Internal/External, burst, cadence and tone (See Note 2)  The default value of a TDSH prompt changes according to the tone-type prompt (e.g. NBCS, IBCS, HOWL, etc.) which precedes it.	ftc-14

Prompt	Response	Comment	Pack/Rel
TEST		Test tone	ftc-13
TIE	(0)-63	CAA, CAM, CSA, TIE These route types will be assigned the entered ART when the route is created in LD16.	
TLP		Tone to Last Party	
TLPT TMAT	(0)-30	Tone to Last Party Timer in seconds. No tone = 0. Telephone Messaging Alert Tone	ftc-13
TMOT		Telephone Messaging OK Tone	ftc-13
TONE	(DIAL) SPDT SRC-SRC8	Tone to be provide after the dialed digits. Dial tone Special Dial Tone Source tones 1-8 (Valid if FTC package [125] is equipped)	pnp-15
TONES	ttt ttt ...	NT8D17 tones (0-255) to be used with each phase of the cadence.  Default is no tones (0 0 0 0 0). See "Default Firmware Cadence (FCAD) tables" on page 809.	ftc-14
TSUT		Telephone Status Update Tone	ftc-13
TYPE		Type of data block	ftc-13
	AANN	PC Attendant Announcement data block	atan-25.4
	DTAD	Special Dial tone After Dialed number data block	
	FCAD	Firmware Cadence data block	ftc-15
	FDTD	Flexible Dial Tone Detection data block	
	FTC	Flexible Tones and Cadences data block	ftc-13
	MCAD	Master Cadence data block	ftc-14
	RART	Route Access Restriction Table data block REQ = NEW or OUT is disallowed for RART.	
	RCDT	Route Category Default Table data block	

# LD 56

Prompt	Response	Comment	Pack/Rel
		REQ = NEW or OUT is disallowed for RCDT.	
	TBAR	Trunk Barring data block	
USER	(NO) YES	Print Users of this table and tone table values (tone table value only) Prompted when REQ = PRT	ftc-13
WCAD	0-225	Cadence number in the Firmware Cadence table (FCAD) Cadence number 0 is reserved for continuous tone and is not changeable.	ftc-14
WTON	(NO) YES	Define tones associated with the cadence. Prompted for systems equipped with Conference /TDS / MF Sender cards.	ftc-14
XCAD	0-(2)-255	XCT (NT8D17 Conference/TDS) Cadence number (FCAD cadence number)  The default range of a XCAD prompt changes according to the tone-type prompt (e.g. DBCS, HOWL, etc.) which precedes it.	ftc-19
XTON	0-(2)-255	XCT (NT8D17 Conference/TDS) Tone code	ftc-19

---

---

## LD 57: Flexible Feature Codes

---

Overlay program 57 allows the implementation and administration of the Flexible Feature Codes (FFC) software and hardware.

Up to 100 user access codes may be entered at a time for one or more different codes. After entering 100 user access codes, SCH8891 is output.

If the Directory Number Expansion (DNXP) package 150 is equipped, up to 7 digits are allowed for Flexible Feature Codes. Otherwise, a maximum of 4 digits can be entered.

## Prompts and responses

Prompt	Response	Comment
REQ	aaa	Request
TYPE	FFC	Type of data block
CUST	xx	Customer number associated with this function
FFCT	(NO) YES	Flexible Feature Confirmation Tone
CEPT	(NO) YES	Conference European Des Postes Tel defaults
- REP*	0-9	Replacement for the * in the CEPT default codes
ALL	(NO) YES	Remove all Flexible Feature Codes
CODE	aaaa	Specific Flexible Feature Code type
- ADMN	ADMN xxxx	Set-based Administration sequence code Enter Flexible Feature Code
- AFTO	AFTO xxxx	DSN Flash Precedence code Enter Flexible Feature Code
- AREM	AREM xxxx	Automatic Set Removal code Enter Flexible Feature Code
- ASRC	ASRC xxxx	Automatic Set Relocation code Enter Flexible Feature Code
- ATDA	ATDA xxxx	Autodial Activated Enter Flexible Feature Code
- ATDD	ATDD xxxx	Autodial Deactivated code Enter Flexible Feature Code
- ATVF	ATVF xxxx	DSN Immedicate Precedence code Enter Flexible Feature Code
- ATVM	ATVM xxxx	DSN Priority Precedence code Enter Flexible Feature Code
- ATVP	ATVP xxxx	DSN Flash Override Precedence code Enter Flexible Feature Code
- AUTH	AUTH xxxx	Authorization code Enter Flexible Feature Code
- AVNR	AVNR xxx	DSN Routine Call code Enter Flexible Feature Code. Where xxx = 0-999

---

- AWUA	AWUA xxxx	Automatic Wake Up Activate code Enter Flexible Feature Code
- AWUD	AWUD xxxx	Automatic Wake Up Deactivate code Enter Flexible Feature Code
- AWUV	AWUV xxxx	Automatic Wake Up Verify code Enter Flexible Feature Code
- BNRA	BNRA xxxx	Busy Number Redial code Enter Flexible Feature Code
- BNRD	BNRD xxxx	Busy Number Redial Deactivate code Enter Flexible Feature Code
- CCFA	CCFA xxxx	Customer Call Forward code Enter Flexible Feature Code
- CCFD	CCFD xxxx	Customer Call Forward Deactivate code Enter Flexible Feature Code
- CDRC	CDRC xxxx	CDR Charge Account code Enter Flexible Feature Code
- CFDD	CFDD xxxx	Call forward destination deactivation Enter Flexible Feature Code
- CFHO	CFHO xxxx	Call Forward/HUNT Override via FFC code Enter Flexible Feature Code
- CFWA	CFWA xxxx	Call Forward All Calls Activate code Enter Flexible Feature Code
- CFWD	CFWD xxxx	Call Forward All Calls Deactivate code Enter Flexible Feature Code
- CFWV	CFWV xxxx	Call Forward All Calls Verify code Enter Flexible Feature Code
- COND	COND xxxx	Conference Diagnostics code Enter Flexible Feature Code
- CPAC	CPAC xxxx	Call Park Access Code Enter Flexible Feature Code
- CPP	CPP xxxx	Calling Party Privacy code Enter Flexible Feature Code

# LD 57

- CPPO	CPPO (*82) xxxx	Calling Party Privacy Override code Enter Flexible Feature Code
- CPRK	CPRK xxxx	Call Park code Enter Flexible Feature Code
- CSHF	CSHF xxxx	Centrex Switchhook Flash code Enter Flexible Feature Code
- CWGA	CWGA xxxx	Call Waiting Activated code Enter Flexible Feature Code
- CWGD	CWGD xxxx	Call Waiting Deactivated code Enter Flexible Feature Code
- C6DS	C6DS xxxx	Six-Party Conference code Enter Flexible Feature Code
- DEAF	DEAF xxxx	Deactivate Feature code Enter Flexible Feature Code
- DPVS	DPVS xxxx	Data Port Verification code Enter Flexible Feature Code
- ELKA	ELKA xxxx	Electronic Lock Activate code Enter Flexible Feature Code
- ELKD	ELKD xxxx	Electronic Lock Deactivate code Enter Flexible Feature Code
- EOVR	EOVR xxxx	Enhanced Override code Enter Flexible Feature Code
- FDIS	FDIS xxxx	Forced Disconnect code Enter Forced Disconnect code
- GHTA	GHTA xxxx	Group Hunt Termination Allowed code Enter Flexible Feature Code
- GHTD	GHTD xxxx	Group Hunt Termination Disallowed code Enter Flexible Feature Code
- GRHP	xxxx	Group Hunt Pilot DN
-- USE	(GPHT)	Initiate Group Hunting
-- LSNO	nnn	List Number
-- HTYP	aaa	Hunting Type

---

- - CFBA	(NO) YES	Call Forward Busy Activate
- GRPF	GRPF xxxx	Group Call code Enter Flexible Feature Code
- GRCL	GRCL xxxx	Group Call List number code Enter Flexible Feature Code
- HIDN	HIDN xxxx	Hospitality Identification (Hospitality Management) code Enter Flexible Feature Code
- HOLD	HOLD xxxx	Permanent Hold code Enter Flexible Feature Code
- ICFA	ICFA xxxx	Internal Call Forward Activate code Enter Flexible Feature Code
- ICFD	ICFD xxxx	Internal Call Forward Deactivate code Enter Flexible Feature Code
- ICFV	ICFV xxxx	Internal Call Forward Verify code Enter Flexible Feature Code
- INST	INST xxxx	Set based administration Installer code Enter Flexible Feature Code
- HREL	HREL xxxx	Hospitality Relocation (Hospitality Management) code Enter Flexible Feature Code
- ICPA	ICPA xxxx	Intercept Computer Interface Activate code Enter Flexible Feature Code
- ICPD	ICPD xxxx	Intercept Computer Interface Deactivate code Enter Flexible Feature Code
- ICPO	ICPO xxxx	Intercept Computer Interface Override code Enter Flexible Feature Code
- ICPP	ICPP xxxx	Intercept Computer Interface Print code Enter Flexible Feature Code
- IMS	IMS xxxx	Integrated Message System access code Enter Flexible Feature Code
- ITXX	xxxx	For "1xx" Special Services (up to 4 digits)
- - RTXX	xxxx	CO route number for the "1xx" service
	LILO	Log In-Log Out for 500/2500 ACD sets code

---

# LD 57

- LILO	xxxx	Enter Flexible Feature Code
- MLIO	MLIO xxxx	Multi-Language I O code Enter Flexible Feature Code
- MNT	MNT xxxx	Enter set-based Maintenance sequence code Enter Flexible Feature Code
- MNTC	MNTC xxxx	Maintenance Access code Enter Flexible Feature Code
- MSBA	MSBA xxxx	Make Set Busy Activated code Enter Flexible Feature Code
- MSBD	MSBD xxxx	Make Set Busy Deactivated code Enter Flexible Feature Code
- MTRC	MTRC xxxx	Malicious Call Trace code Enter Flexible Feature Code
- MWRA	MWRA xxxx	Repeat Multiple Wake Up Activated code Enter Flexible Feature Code
- MWUA	MWUA xxxx	Multiple Wake Up Activated code Enter Flexible Feature Code
- MWUD	MWUD xxxx	Multiple Wake Up Deactivated code Enter Flexible Feature Code
- NRDY	NRDY xxxx	Not Ready Activation/Deactivation for 500/2500 ACD sets code Enter Flexible Feature Code
- OVRD	OVRD xxxx	Override and Priority Override code Enter Flexible Feature Code
- OCBA	OCBA xxxx	Outgoing Call Barring feature code Outgoing Call Barring feature
- OCBD	OCBD xxxx	Outgoing Call Barring Deactivate code Enter Flexible Feature Code
- OCBV	OCBV xxxx	Verify the Outgoing Call Barring feature code Enter Flexible Feature Code
- PGAP	PGAP xxxx	Answer Parallel Paging code Enter Flexible Feature Code
	PGIP	Initiate Parallel Paging code

---

- PGIP	xxxx	Enter Flexible Feature Code
- PGSP	PGSP xxxx	Initiate Serial Paging code Enter Flexible Feature Code
- PLDN	PLDN xxxx	Pilot DN code Enter Flexible Feature Code
- - USE	aaaa	Use (aaaa = GPHT, SCLU, or SCLC)
- - LSNO	nnnn	List Number
- - HTPY	aaa	Hunting Type (aaa = (LIN) or RRB)
- - CFWI	(NO) YES	Call Forward All Calls have priority over Group Hunting
- - MQUE	aaaa	Limit to calls Queued against pilot DN (aaa = (ALL), 0, 1, or ACTM)
- PONW	PONW xxxx	Priority Override Network Wide Enter Flexible Feature Code
- PUDN	PUDN xxxx	Pick Up DN code Enter Flexible Feature Code
- PUGR	PUGR xxxx	Pick Up Group code Enter Flexible Feature Code
- PURN	PURN xxxx	Pick Up Ringing Number code Enter Flexible Feature Code
- RCFA	RCFA xxxx	Remote Call Forward Activate code Enter Flexible Feature Code
- RCFD	RCFD xxxx	Remote Call Forward Deactivate code Enter Flexible Feature Code
- RCFV	RCFV xxxx	Remote Call Forward Verify code Enter Flexible Feature Code
- RDLN	RDLN xxxx	Redial Last Number code Enter Flexible Feature Code
- RDNE	RDNE xxxx	Redial Number Erase code Enter Flexible Feature Code
- RDSN	RDSN xxxx	Redial Saved Number code Enter Flexible Feature Code
- RDST	RDST xxxx	Redial Store code Enter Flexible Feature Code

---

# LD 57

- RGAA	RGAA xxxx	Ring Again Activate code Enter Flexible Feature Code
- RGAD	RGAD xxxx	Ring Again Deactivate code Enter Flexible Feature Code
- RGAV	RGAV xxxx	Ring Again Verify code Enter Flexible Feature Code
- RMST	RMST xxxx	Room Status code Enter Flexible Feature Code
- RPAN	RPAN xxxx	Radio Paging Answer call code Enter Flexible Feature Code
- RPAX	RPAX xxxx	Radio Paging Access code Enter Flexible Feature Code
- SADS	SADS xxxx	SAR Disable code Enter Flexible Feature Code
- SAEN	SAEN xxxx	SAR Enable code Enter Flexible Feature Code
- SALK	SALK xxxx	SAR Lock code Enter Flexible Feature Code
- SAUN	SAUN xxxx	SAR Unlock code Enter Flexible Feature Code
- SCPC	SCPC xxxx	Station Control Password Change code Enter Flexible Feature Code
- SFAC	SFAC xxxx	Secretarial Filtering Access code Enter Flexible Feature Code
- SPCC	SPCC xxxx	Speed Call Controller code Enter Flexible Feature Code
- SPCE	SPCE xxxx	Speed Call Erase code Enter Flexible Feature Code
- SPCU	SPCU xxxx	Speed Call User code Enter Flexible Feature Code
- SSPU	SSPU xxxx	System Speed Call User code Enter Flexible Feature Code

- TFAS	TFAS xxxx	Trunk Answer From Any Station code Enter Flexible Feature Code
- TNDN	TNDN xxxx	Enter the DN-to-TN conversion utility code Enter Flexible Feature Code
- TRMD	TRMD xxxx	Terminal Diagnostics code Enter Flexible Feature Code
- TRVS	TRVS xxxx	Trunk Verification code Enter Flexible Feature Code
- USER	USER xxxx	Set based administration User code Enter Flexible Feature Code
- USCR	USCR xxxx	User Selectable Call Redirection code Enter Flexible Feature Code
- USTA	USTA xxxx	User Status code Enter Flexible Feature Code
- VTLF	VTLF xxxx	Virtual Office Terminal Logoff Enter Flexible Feature Code
- VTLN	VTLN xxxx	Virtual Terminal Login Enter Flexible Feature Code

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ADMN	xxxx	Enter set-based administration sequence (used to configure trunks)	supp-16
ALL	(NO) YES	Remove all Flexible Feature Codes Prompted when REQ = OUT, Choose default (NO) if removing individual Flexible Feature Codes. Enter the selected code at the CODE prompt and the actual Flexible Feature Code when the Flexible Feature Code is displayed.	ffc-15
AREM	xxxx	Automatic Set Removal code	supp-16
ASRC	xxxx	Automatic Set Relocation Code	sr-15
ATDA	xxxx	Autodial Activated	ffc-20
ATDD	xxxx	Autodial Deactivated	ffc-20
AUTH	xxxx	Authorization code	baut-15
AWUA	xxxx	Auto Wake Up Activate code	awu-15
AWUD	xxxx	Auto Wake Up Deactivate code	awu-15
AWUV	xxxx	Auto Wake Up Verify	awu-15
BNRA	xxxx	Activate the Busy Number Redial feature	ffc-21
BNRD	xxxx	Deactivate the Busy Number Redial feature	ffc-21
C6DS	xxxx	Six-Party Conference code	awu-15
CCFA	xxxx	Activate the Customer Call Forward feature	ffc-21
CCFD	xxxx	Deactivate the Customer Call Forward feature	ffc-21
CDRC	xxxx	CDR Charge Account code	chg-15

Prompt	Response	Comment	Pack/Rel
CEPT	(NO) YES	Conference European Des Postes Tel defaults are to be used.  CEPT is prompted when REQ = NEW. If CEPT = YES, then all CEPT defaults will be set up. The default value for CPP is *67 if Calling Party Privacy (CPP) package 301 is equipped.	basic-15
CFBA	(NO) YES	Call Forward Busy Activated Call Forward to attendant	pldn-15
CFDD		Call forward destination deactivation code	chffc/ffc-22
CFHO	xxxx	Call Forward/HUNT Override via FFC	optf-15
CFWA	xxxx	Call Forward All Calls Activate code	optf-15
CFWD	xxxx	Call Forward All Calls Deactivate code	optf-15
CFWI	(NO) YES	Call Forward All Calls have priority over Group Hunting Skip idle station with CFW active Terminate on idle station with CFW active Prompted when USE = GPHT	optf-15
CFWV	xxxx	Call Forward All Calls Verify code	optf-15

# LD 57

Prompt	Response	Comment	Pack/Rel
CODE	aaaa	<p>Specific Flexible Feature Code (FFC) type. Where: aaa = FFC type to be changed. (e.g., AUTH, CPP, etc.)</p> <p>Two entries are required to change a specific FFC. First enter the mnemonic of the FFC to be changed and then carriage return &lt;cr&gt;. The switch will then prompt the mnemonic just entered. Respond to this second prompt by entering the numeric value desired for that Flexible Feature Code. See example below.</p> <p>The Flexible Feature Code may be up to 4 digits, or up to 7 digits with Directory Number Expansion (DNXP) package (150). CODE is prompted when ALL = NO.</p> <p>Example: to change the Flexible Feature Code for Call Park to 88, respond to CODE as follows:</p> <p><u>Prompt</u>    <u>Response</u> CODE        CPRK &lt;cr&gt; CPRK        88 &lt;cr&gt; CODE        &lt;cr&gt; (No further prompts, return to REQ)</p>	ffc-15
	FDIS	Forced Disconnect.	
	PONW	Priority Override/Breakin Network wide code.	
	<cr>	No further prompts, return to REQ.	
COND	xxxx	Conference Diagnostics code	basic-15
CPAC	xxxx	Call Park Access Code	cpk-15
CPP	xxxx	Calling Party Privacy	cpp-21
CPPO	(*82) xxxx	Calling Party Privacy Override code	cpp-23
CPRK	xxxx	Call Park code	cpk-15
CSHF	xxxx	Centrex Switchhook Flash code	thf-15
CUST	xx	Customer number associated with this function as defined in LD 15	cust-15
CWGA	xxxx	Call Waiting Activated	ffc-20

Prompt	Response	Comment	Pack/Rel
CWGD	xxxx	Call Waiting Deactivated	ffc-20
DEAF	xxxx	Deactivate Feature (deactivates RDLN, RGA, CFW, GHD and SNA codes. Same operation as ATDD, CFWD, MSBD, CWGD and RGAD	optf-15
DPVS	xxxx	Data port verifications code	basic-15
ELKA	xxxx	Electronic Lock Activate code	basic-15
ELKD	xxxx	Electronic Lock Deactivate code	basic-15
EOVR	xxxx	Enhanced Override (manual Forced Camp-On followed by Priority Override)	povr-20
FDIS	xxxx	Force Disconnect code.	ponw-25.4
FFCT	(NO) YES	Flexible Feature Confirmation Tone  This tone allows users of 500/2500 or multi-line telephone sets to receive a confirmation tone after activating/deactivating the following features:  Call Forward activate, deactivate Ring Again deactivate Store/erase Stored Number Redial all Automatic Wake Up codes Speed Call store any verification code	ffc-15
GHTA	xxxx	Group Hunt Termination Allowed	pldn-15
GHTD	xxxx	Group Hunt Termination Disallowed	pldn-15
GRCL	xxxx	Group Call List number	ffc-20
GRHP	xxxx	Group Hunt Pilot DN	ffc-14
GRPF	xxxx	Group Call	ffc-20
HIDN	xxxx	Hospitality Identification	hosp-16
HOLD	xxxx	Permanent Hold code	basic-15
HREL	xxxx	Hospitality Relocation	hosp-16

# LD 57

Prompt	Response	Comment	Pack/Rel
HTYP	(LIN) RRB	Hunting Type Linear Hunting Round Robin Hunting Prompted when USE = GPHT	pldn-15
ICFA	xxxx	Internal Call Forward Activate code	icf-19
ICFD	xxxx	Internal Call Forward Deactivate code	icf-19
ICFV	xxxx	Internal Call Forward Verify code	icf-19
ICPA	xxxx	Intercept Computer Interface Activate code	icp-10
ICPD	xxxx	Intercept Computer Interface Deactivate code	icp-10
ICPO	xxxx	Intercept Computer Interface Override code	icp-10
ICPP	xxxx	Intercept Computer Interface Print code	icp-10
IMS	xxxx	Integrated Message System Access code	ims-15
INST	xxxx	Set based administration Installer	adminset-21
ITXX	xxxx	For "1xx" Special Services (up to 4 digits)	ees-18
LILO	xxxx	Login-Logout for 500/2500 ACD sets  Dialing the number programmed here allows an ACD Agent on a 500/2500 telephone set to toggle between Login and Logout. There is no confirmation tone.	bacd-16
LSNO	nnnn	List Number SCL/SSC/GHT list number LSNO is prompted when the PLDN response has not been defined as a GPHT pilot DN.	pldn-15
MLIO	xxxx	Multi-Language I O	mlio-16
MNT	xxxx	Enter set-based maintenance sequence (used to enable or disable trunks).	mlio-16
MNTC	xxxx	Maintenance Access code	basic-15

Prompt	Response	Comment	Pack/Rel
MQUE	(All) 0 1 ACTM	Limit to calls queued against pilot DN No limit to the number of queued calls No calls to be queued One call can be queued. Active Members (Allowed with French Type Approval (FRTA) package 197)	supp-16
MSBA	xxxx	Make Set Busy Activated.	ffc-20
MSBD	xxxx	Make Set Busy Deactivated.	ffc-20
MTRC	xxxx	Malicious Call Trace code	mct-15
MWRA	xxxx	Multiple Wake Up Activated Automatic Wake Up (AWU) package 102 must be equipped for the MWU FFC codes to be available.	ffc-20
MWUA	xxxx	Repeat Multiple Wake Up Activated.	ffc-20
MWUD	xxxx	Multiple Wake Up Deactivated	ffc-20
NRDY	xxxx	Not Ready activation/deactivation for 500/2500 ACD sets  Dialing the number programmed here allows an ACD Agent on a 500/2500 telephone set to toggle in and out of the Not Ready state like other ACD Agents. There is no confirmation tone returned.	bacd-16
OCBA	xxxx	Activate the Outgoing Call Barring feature	ffc-21
OCBD	xxxx	Deactivate the Outgoing Call Barring feature	ffc-21
OCBV	xxxx	Verify the Outgoing Call Barring feature	ffc-21
OVRD	xxxx	Override and Priority Override	povr-20
PGAP	xxxx	Answer Parallel Paging code.	ffc-14
PGIP	xxxx	Initiate Parallel Paging code.	ffc-14
PGSP	xxxx	Initiate Serial Paging code.	ffc-14
PLDN	xxxx	Pilot DN	supp-15
PONW	xxxx	Priority Override Network Wide code.	ponw-25.4

# LD 57

Prompt	Response	Comment	Pack/Rel
PUDN	xxxx	Pick Up DN code.	grp-15
PUGR	xxxx	Pick Up Group code.	grp-15
PURN	xxxx	Pick Up Ringing Number code.	grp-15
RCFA	xxxx	Remote Call Forward Activate code.	optf-15
RCFD	xxxx	Remote Call Forward Deactivate code.	optf-15
RCFV	xxxx	Remote Call Forward Verify code.	optf-15
RDLN	xxxx	Redial Last Number code.	lnr-15
RDNE	xxxx	Redial Number Erase code.	snr-15
RDSN	xxxx	Redial Saved Number code.	snr-15
RDST	xxxx	Redial Store code.	snr-15
REP*	0-9	One digit replacement for the * in the CEPT default codes.  The CEPT defaults will be defined again with this digit used in place of the “*”. In addition, the trailing # will be omitted. REP* is prompted only when REQ = NEW and CEPT = YES.  Use <cr> to create only CEPT defaults. Note that digit replacement is blocked for CPP defaults.  No change to defaults	ffc-15
REQ	CHG END NEW OUT PRT	Request Change existing data. Exit Overlay program. Create a new data block. Remove Data Block. Print Data Block.	ffc-15
RGAA	xxxx	Ring Again Activate code.	optf-15
RGAD	xxxx	Ring Again Deactivate code.	optf-15
RGAV	xxxx	Ring Again Verify code.	optf-15

Prompt	Response	Comment	Pack/Rel
RMST	xxxx	Room Status code	rms-15
RPAN	xxxx	Radio Paging Answer call code	rpa-20
RPAX	xxxx	Radio Paging Access code	rpa-20
RTXX	0-511	CO route number for the "1xx" service	ees-18
SADS	xxxx	SAR Enable code	sar-20
SAEN	xxxx	SAR Lock code	sar-20
SALK	xxxx	Ring Again Activate code	sar-20
SAUN	xxxx	SAR Unlock code	sar-20
SCPC	xxxx	Station Control Password Change code	basic-15
SFAC	xxxx	Secretarial Filtering Access code	ffcsf-15
SPCC	xxxx	Speed Call Controller code	optf-15
SPCE	xxxx	Speed Call Erase code	ffc-14
SPCU	xxxx	Speed Call User code	optf-15
SSPU	xxxx	System Speed Call User code	optf-15
TFAS	xxxx	Trunk Answer From Any Station code	basic-15
TNDN	xxxx	Enter the DN-to-TN conversion utility.	supp-16
TRMD	xxxx	Terminal Diagnostics code	basic-15
TRVS	xxxx	Trunk Verification code	tvsv-15
TYPE	FFC	Flexible Feature Codes data block	ffc-15
USCR	xxxx	User Selectable Call Redirection	uscr-19
USE	GPHT SCLU SCLC	Initiate Group Hunting SCL/SSC List User SCL/SSC List Controller Prompted when the PLDN response has not already been defined.	pldn-15

# LD 57

Prompt	Response	Comment	Pack/Rel
USER	xxxx	Set based administration User	adminset-21
USTA	xxxx	User Status code	basic-15
VTLF	xxxx	Virtual Terminal Logoff	arie-25
VTLN	xxxx	Virtual Terminal Login	arie-25

---

---

## LD 58: Radio Paging

---

Overlay program 58 allows the definition of options on a Radio Paging Access Code (RPAX) basis per customer.

# Prompts and responses

## Contents

Section	Page
<i>Prompts and responses by data block:</i>	
RPAX: Radio Paging Access Code data block	848
RPCD: Radio Paging Customer Data block	849
RPS: Radio Paging System data block	850
TBL: Translation Table access data block	850

## RPAX: Radio Paging Access Code data block

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	RPAX	Radio Paging Access Code data block
CUST	xx	Customer number associated with this function
SNUM	0-15	System Number
RPAX	nnnn	Radio Paging Access code
- ROUT	0-511	Route number
- PANN	(NO) YES	Recorded Paging Announcement
- - RPAR	0-511	Route number that provides the recorded announcement
- INTR	xxxx	Treatment for internal calls to pager which is in the rack
- RANR	0 - 511	Route number that provides the recorded announcement, prompted if INTR = RAN
- MMDN	xxxx	Meridian Mail DN which provides the recorded announcement or the defined function, prompted if INTR or EXTR = MAIL
- EXTR		Treatment for external calls to pager which is in the rack
- RANR	0 - 511	Route number that provides the recorded announcement, prompted if EXTR = RAN
- BYPS	(NO) YES	Bypass the DN-PSA translation
- OPER	aaaa	Operation (aaaa = (AUTO) or MANU)

---

-- INTM	(0)-1-9	Internal Mode digit for this RPAX
-- TRDN	(0)-7	Transmit this number of digits of caller's DN to paging equipment
	(0)- 16	Number of digits of caller's DN to paging equipment
- PATH	aaaa	Type of path to be provided (aaaa = (NONE), SPCH, or RRGB)
-- TWSP	aaaa	Two-way Speech Path with a mobile pager allowed (aaaa = (BOTH) or INT)
-- ACPS	(YES) NO	Radio Paging System to provide call-in-progress signals
--- ACPT	(YES) NO	Call Accepted is to be detected
- DCHR	xxxx	Display Characters

---

## RPCD: Radio Paging Customer Data block

---

Prompt	Response	Comment
REQ	aaa	Request (CHG, END, NEW, OUT, or PRT)
TYPE	RPCD	Radio Paging Customer Data block
CUST	xx	Customer number associated with this function
RPTO	a...a	Radio Paging Tone (a...a = (SPCL), DIAL, or NONE)
MRPS	(NO) YES	Multiple Radio Paging Systems
TRAN	aaa	Translation type (aaa = (TAB), TWO, THR, FOR, or NO)
DNLN	1-(4)-16	DN Length
PRET	(YES) NO	Pretranslation for Radio Paging
RCRG	0-(6)-20	Number of Ring Cycles when recall to transferring set, before reroute to attendant
RCTI	0-(30)-120	Time to wait for a "BUSY" transferring set to become idle
RCAL	(NO) YES	Recall if busy from RPA
TBTR	4-(10)-30	Time between two recall attempts (to an SL-1 set)

---

# LD 58

## RPS: Radio Paging System data block

---

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	RPS	Radio Paging System data block
CUST	xx	Customer number associated with this function
SNUM	0-15	System Number
PSAL	1-7	Paging System Access code Length
RTIM	0-(60)-630	Length of the Recall Timer
STO	10-(30)-630	Length of time required for Speech Path to be maintained in seconds
NSTO	10-(30)-630	Length of time required for paging when No Speech Path is required
MTO	0-(150)-630	Length of the Meet-Me Timeout timer in seconds.

---

## TBL: Translation Table access data block

---

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	TBL	Translation Table access
CUST	xx	Customer number associated with this function
SNUM	0-15	System Number
DNPS	xxxx yyyy	The DN to be translated and the number of the paging equipment to which the DN is assigned.
TABT	aaa	Table Type (aaa = DNP, NPS, or UPS)
RANG	xxxx...xxxx	Print DN Range from the first DN to the second DN

---

## Alphabetical List of Prompts

Prompt	Response	Comment	Pack/Rel
ACPS	(YES) NO	Radio Paging System to provide the call-in-progress signals	rpa-15
ACPT	(YES) NO	<p>Call Accepted is to be detected.</p> <p>Prompted when PATH = RNGB or SPCH.</p> <p>If PATH = RNGB or SPCH and ACPT = YES, then ringback is provided only when the call accepted signal is received. Speech path opens when Start-talk signal is received.</p> <p>If PATH = RNGB and ACPT = NO, then ringback is provided when all the paging information has been entered.</p> <p>If PATH = SPCH and ACPT = NO, then speech path is provided when all paging information has been sent (number processed).</p>	
BYPS	(NO) YES	<p>By-pass the DN-PSA translation</p> <p>YES means that meet-me is not available and that the trunk is accessed directly; the next prompt is RPAX. Prompted when MRPS = NO.</p>	rpa-15
CUST	xx	Customer number associated with this function as defined in LD 15.	rpa-15
DCHR	xxxx (PAGE)	<p>Display Characters. Enter X to remove all characters</p> <p>Characters to be displayed on sets with Call Party Name Display (CPND) activated (replaces the FFC) (one per page).</p>	rpa-15
DNLN	0 - (4) - 16	<p>DN Length</p> <p>Prompted if TRAN = NO, TWO, THR, or FOR</p>	rpa-15
DNPS	xxxx yyyy  Xxxxx <cr>	<p>The DN to be translated and the number of the paging equipment to which the DN is assigned. This prompt is repeated to allow multiple entries.</p> <p>The DN to be deleted from the entry</p> <p>Stops the DNPS prompt</p>	rpa-15

# LD 58

Prompt	Response	Comment	Pack/Rel
EXTR	(BUSY) ATT SRC1 - SRC8 RAN MAIL	Treatment for external calls to pager which is in the rack. Caller gets busy tone. Call is routed to the Attendant Tones or announcement delivered from the TDS card, programmed in Overlay 56. Call is routed to the RAN machine Call is routed to Meridian Mail.	rpa- 23
INTR	(BUSY) ATT SRC1- SRC8 RAN MAIL	Treatment for internal calls to pager which is in the rack. Caller gets busy tone. Call is routed to the attendant. Tones or announcement delivered from the TDS card, programmed in Overlay 56. Call is routed to the RAN machine. Call is routed to Meridian Mail.	rpa- 23
INTM	1-9-(0) <cr>	Internal Mode digit for this RPAX Default is the mode digit defined in EXTM	rpa-15
MMDN	xxxx	Meridian Mail DN which provides the recorded announcement or the defined function, prompted if INTR = MAIL.  Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	rpa- 23
MRPS	(NO) YES	Multiple Radio Paging Systems	rpa-15
MTO	0-(150)-630	Length of the Meet-Me Timeout timer in seconds, after the STO or NSTO timer has expired  Where: 0 = no meet-me after STO or NSTO has expired. 10 second resolution.	rpa-15
NSTO	10-(30)-630	Length of time required for paging when No Speech Path is required. 10 second resolution.	rpa-15
OPER	(AUTO) MANU	Automatic Operation Manual Operation	rpa-15
PANN	(NO) YES	Recorded Paging Announcement allowed (denied) for this route	rpa-15
PATH	(NONE) SPCH RNGB	No speech path or ringback provided Speech path provided Ringback to the calling party provided	rpa-15

Prompt	Response	Comment	Pack/Rel
PRET	(YES) NO	Pretranslation for Radio Paging calls Allowed. Pretranslation for Radio Paging calls Denied.	rpa- 23
PSAL	1-7	Paging System Access code length Number of digits that are to be used to identify individual paging devices	rpa-15
RANG	xxxx xxxx xxxx <cr>	Print DN Range from the first DN to the second DN. Print this DN. Print all DNs. DNs are those listed in the Radio Paging (RPA) translation table. Prompted when TABT = DNP	rpa-15
RANR	0 - 511	Route number that provides the recorded announcement, prompted if EXTR = RAN.  Route number that provides the recorded announcement, prompted if INTR = RAN.	rpa- 23
RCAL	(NO) YES	Recall if busy from RPA.	rpa-15
RCRG	0-(6)-20	Number of ring cycles when recall to transferring set, before reroute to attendant.  Where: 0 = use value entered in response to CFNA prompt in LD 15	rpa-15
	X	Reroute to attendant (that is, no recall attempts to transferring set).	
RCTI	0-(30)-120	Time to wait for a "BUSY" transferring set to become idle. After this time the call is routed to the attendant.	rpa-15
REQ	CHG END NEW OUT PRT	Request Change existing data block. Exit Overlay program. Create a new data block. Remove data block. Print data block.	rpa-15
ROUT	0-511	Route number of the trunk route connected to this paging system. Route must be defined as PRA in LD 14 and 16.	rpa-15

# LD 58

Prompt	Response	Comment	Pack/Rel
RPAR	0-511	The route number where the recorded announcement is provided from. Route must be defined as RAN in LD 16.	rpa-15
RPAX	nnnn <cr>	Radio Paging Access Code This prompt is repeated to allow multiple entries. Stop RPAX prompt. Access Codes must previously be defined in LD 57.	rpa-15
RPTO	(SPCL) DIAL NONE	Radio Paging Tone, which is to be provided after the RPAX/RPAN Special dial tone Normal Dial tone No tone	rpa-15
RTIM	0-(60)-630	Length of the Recall Timer (in seconds) after the STO or NSTO timer has expired  Where: 0 = no timeout limit. 10 second resolution	rpa-15
SNUM	0-15	System Number Prompted when MPRS = YES	rpa-15
STO	10-(30)-630	Length of time required for Speech Path to be maintained in seconds. 10 second resolution.	rpa-15
TABT	DNP NPS UPS	Table Type Print the DN-Paging System Access (PSA) entries Print the unused PSA codes Print the used PSA codes Prompted when TYPE = TBL	rpa-15
TBTR	4-(10)-30	Time between two recall attempts (to an SL-1 set)	rpa-15
TRAN	(TAB) TWO THR FOR NO	Translation type Translation lookup table Last two digits of DN Last three digits of DN Last four digits of DN No translation (DN sent as PSA code) Prompt is not given if MRPS = YES. TRAN is then forced to TAB.	rpa-15
TRDN	(0)-16	Transmit this number of digits of the caller's DN to the paging equipment	rpa-15

---

Prompt	Response	Comment	Pack/Rel
TWSP	(BOTH) INT	Two-way speech path with a mobile pager allowed Both internal and external calls Internal calls Prompted when PATH = SPCH	rpa-15
TYPE	RPAX RPCD RPS TBL	Type of data block Radio Paging Access Code data block Radio Paging Customer Data block Radio Paging System data block Translation Table access data block	rpa-15

---

# LD 58

Page 856 of 1134 LD 58: Radio Paging

---

---

## LD 73: Digital Trunk Interface

---

Overlay program 73 allows the implementation and administration of the Digital Trunk Interface (DTI) and Primary Rate Interface (PRI) software and hardware.

# Prompts and responses

## Contents

Section	Page
<i>Prompts and responses by data block:</i>	
PRI2 data block (FEAT = LPTI)	861
DTI2 / JDMI data block (FEAT = LPTI)	862
DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)	863
DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)	863
Prompts and responses DTI / PRI data blocks (with GPRI package 167)	863
Table 5 Pad codes & corresponding dB values for DTI/PRI/BRIT/BRIL/PRI2/DTI2/JDMI	867
Table 6 Default Pad Category 1 values (PDCA 1) (DTI/PRI with GPRI pkg 167)	868
Table 7 Default Pad Category 1 values (PDCA 1) (BRIL/BRIT/DTI2/PRI2)	869
Table 8 Default Pad Category 16 values (PDCA 16) (JDMI)	870
Table 9 Default pad values for TOLL prompt	871
Signaling category assignment and modification	872
Prompts and responses for ABCD signaling category	875
Table 10 Default values for Signaling Categories 1 & 16 (In/Out Calls)	879
Table 11 Default values for Signaling Categories 1 & 16 (Incoming Calls)	880
Table 12 Default values for Signaling Categories 1 & 16 (Outgoing Calls)	881

## Prompts and responses by data block

### DDB: Digital data block

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	DDB	Type of data block = DDB (Digital data block)
CEQP	(NO) YES	Clock Controller Equipped
CLKN	xx	Card number for Clock Controller (Small System)
- PREF	xxx	Primary Reference
-- SREF	xxx	Secondary Reference
CC0	xx	Card number for Clock Controller 0 (Small System with Survivable IP)
PREF CC0	1-9	Card number of PRI/DTI/SILC containing the primary clock reference for the main cabinet (Option 11C)
SREF CC0	1-9	Card number of PRI/DTI/SILC containing the secondary clock reference for the main cabinet (Option 11C)
CC1	xx	Card number for Clock Controller 1
PREF CC1	xx	Card number of PRI/DTI/SILC containing the primary clock reference, Where xx is: <ul style="list-style-type: none"> <li>• 11-19 for IP expansion cabinet 1</li> <li>• 11-14 for Media Gateway 1</li> </ul>
SREF CC1	xx	Card number of PRI/DTI/SILC containing the secondary clock reference. Where xx is: <ul style="list-style-type: none"> <li>• 11-19 for IP expansion cabinet 1</li> <li>• 11-14 for Media Gateway 1</li> </ul>
CC2	xx	Card number for Clock Controller 2
PREF CC2	xx	Card number of PRI/DTI/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"> <li>• 21-29 for IP expansion cabinet 2</li> <li>• 21-24 for Media Gateway 2</li> </ul>

# LD 73

SREF CC2	xx	Card number of PRI/DTI/SILC containing the secondary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 21-29 for IP expansion cabinet 2</li><li>• 21-24 for Media Gateway 2</li></ul>
CC3	xx	Card number for Clock Controller 3
PREF CC3	xx	Card number of PRI/DTI/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 31-39 for IP expansion cabinet 3</li><li>• 31-34 for Media Gateway 3</li></ul>
SREF CC3	xx	Card number of PRI/DTI/SILC containing the secondary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 31-39 for IP expansion cabinet 3</li><li>• 31-34 for Media Gateway 3</li></ul>
CC4	xx	Card number for Clock Controller 4
PREF CC4	xx	Card number of PRI/DTI/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 41-49 for IP expansion cabinet 4</li><li>• 41-44 for Media Gateway 4</li></ul>
SREF CC4	xx	Card number of PRI/DTI/SILC containing the secondary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 41-49 for IP expansion cabinet 4</li><li>• 41-44 for Media Gateway 4</li></ul>
TRSH	0-15	Threshold set
RALM	1-(3)-128	Remote (yellow) Alarm clear threshold
BIPC	0-(2)-128	Bipolar violation Count threshold
LFAC	0-(3)-128	Loss of Frame Alignment Counter
BIPV	1-(3)-4 1-(2)-4	Bipolar Violation maintenance and out-of-service threshold
SRTK	1-(5)-24 1-(30)-3600	Slip Rate Tracking mode maintenance
SRNT	1-(15)-1024 1-(3)-1024	Slip Rate Non-Tracking
LFAL	1-(17)-10240	Loss of Frame Alignment maintenance and out-of-service thresholds
AUTO	(NO) YES	Automatic recovery for frame slippage

---

SRAR	(NO) YES	Slip Rate Automatic Recovery
SRGT	1-(15)-127	Slip Rate Guard Time in minutes
SRIM	(1)-127	Slip Rate Improvement Monitoring time in minutes
SRMM	1-(2)-127	Slip Rate Maintenance Maximum
ICS	0-159	Multi Purpose Serial Data Link Idle Code Selection

---

## PRI2 data block (FEAT = LPTI)

The following prompts and associated responses define the grade of service timers for the DTI card. Group I problems are treated individually. They are bipolar violations, bit error rate (frame alignment) problems and slips.

Group II problems are treated as a group. They are bit 3 of TS0 (far-end out-of-service), bit 6 of TS16 (far-end lost multiframe alignment), Alarm Indication Signal (AIS), loss of frame alignment and loss of multiframe alignment.

---

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	PRI2	Type of data block = PRI2
FEAT	LPTI	Feature = LPTI (Loop timer)
LOOP	loop	Loop number for PRI2
MFF	aaa	Multiframe Format (aaa = (AFF) or CRC)
ACRC	(NO) YES	Automatic reporting of CRC-4 error
ALRM	aaa	Default alarm handler selected (aaa = (REG) or ALT)
RAIE	(NO) YES	RAIE Group II alarm state enabled or disabled
SLP	mc mt oc ot	Slip count
NOOS	(NO) YES	The grade-of-service feat
BPV	1-(128) or (122)-255	Bipolar Violation thresholds
RATS	1-(10)-15	The number of consecutive seconds the firmware has to check and validate error rate condition
CRC	x...x	Cyclic Redundancy Check threshold [x...x = 1-(201) or (97)-255]
FAP	1-(28)-255 (1)-255	Frame Alignment thresholds
GP2	T2 mt dt ct ot	Group 2 error thresholds
MNG1	nnnM	Maintenance Guard time Group 1

---

# LD 73

NCG1	nnnM	No New Calls Guard time Group 1
OSG1	nnnM	Out-of-Service Guard time Group 1
MNG2	nnnS	Maintenance Guard time Group 2
NCG2	nnnS	No New Calls Guard time Group 2
OSG2	nnnS	Out-of-Service Guard time Group 2
PERS	0-(50)-254	Group 2 Persistence timer and clearance timer
CLEA	0-(100)-256	Clearance timer for Group II problems in 2 ms increments
OOSC	0-(5)-127	Out -of-Service Counter

---

## DTI2 / JDMI data block (FEAT = LPTI)

---

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	aaaa	Type of data block = DTI2 or JDMI
FEAT	LPTI	Feature = LPTI (Loop timer)
LOOP	loop	Loop number for DTI2
CDTI2	(NO) YES	CDTI2/CSDTI2 Card
P DIGT (S)	abcd	Digit pulse timing from TDS (Bits P, X or U are selectable)
P METR (R)	abcd	Metering (Bits P, X or U are selectable)
- EDGE	x	Edge of pulse (0 or 1)
- TIME	40-(240)-480	Maximum time METR signal can be on
- MINP	(8)-256	Minimum Pulse length for a Meter Pulse
- PPM	(NO) YES	PPM Parameter Download required
- ITPP	(NO) YES	Italian PPM option allowed
-MINP	8-(72)-248	Minimum time a PPM pulse is active
-ITBP	8-(72)-248	Idle time between PPM pulses
SASU	0-8064	Seize Acknowledge Supervision period
MFAO	YES NO	Multiframe Alignment Option
SZNI	(NO) YES	PSTN incoming seizure during lockout of MFAS and far-end fault states allowed
LCLB	(NO) YES	Lockout Clear Back option for DID trunks
UCFS	xxxx	Unequipped Channel Fault Signal
TGLR	(NO) YES	Toggle Reserve bits in Frame 0
MFF	aaa	Multiframe Format (aaa = (AFF) or CRC)
CRC	NC mt dt ct ot	Cyclic Redundancy Check error counts

---

---

BPV	NB mt dt ct ot	Bipolar Violation error counts
FAP	NF mt dt ct ot	Frame Alignment Problem thresholds
SLP	NS mt dt ct ot	Slip count maintenance threshold
GP2	T2 mt dt ct ot	Group 2 error thresholds
FRFW	(NO) YES	DTI2 loop is equipped with special Firmware for France
CISFW	aaa	Defines the CDTI2/CSDTI2 card's FW option to be used
-MFSL	(0)-3	The MFS signals transmission level.
-500L	(0)-1	ANI request tone (500 Hz) transmission level

---

### DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)

---

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	aaaa	Type (aaaa = DTI2, PRI2, or JDMI)
FEAT	SYTI	Feature = SYTI (System timers)
MAND	0-(15)-1440	Maintenance Guard time
NCSD	0-(15)-1440 1S-59S	New Call Suppression Guard time
OSGD	0-(15)-1440	Out-of-Service Guard time in minutes
OOSC	0-(5)-127	Out-of-Service Counter
PERS	0-(100)-254	Persistence timer
DBNC	(10)-32	Debounce timer
CLKN	xx	Small System card number for Clock Controller
CC0	xx	Card number for Clock Controller 0
PREF CC0	1-9	Card number of DTI2/PRI2/SILC containing the primary clock reference for the main cabinet (Option 11C)
SREF CC0	1-9	Card number of DTI2/PRI2/SILC containing the secondary clock reference for the main cabinet (Option 11C)
CC1	xx	Card number for Clock Controller 1
PREF CC1	xx	Card number of DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"> <li>• 11-19 for IP expansion cabinet 1</li> <li>• 11-14 for Media Gateway 1</li> </ul>
SREF CC1	xx	Card number of DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"> <li>• 11-19 for IP expansion cabinet 1</li> <li>• 11-14 for Media Gateway 1</li> </ul>

---

# LD 73

CC2	xx	Card number for Clock Controller 2
PREF CC2	xx	Card number of DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 21-29 for IP expansion cabinet 2</li><li>• 21-24 for Media Gateway 2</li></ul>
SREF CC2	xx	Card number of DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 21-29 for IP expansion cabinet 2</li><li>• 21-24 for Media Gateway 2</li></ul>
CC3	xx	Card number for Clock Controller 3
PREF CC3	xx	Card number of DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 31-39 for IP expansion cabinet 3</li><li>• 31-34 for Media Gateway 3</li></ul>
SREF CC3	xx	Card number of DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 31-39 for IP expansion cabinet 3</li><li>• 31-34 for Media Gateway 3</li></ul>
CC4	xx	Card number for Clock Controller 4
PREF CC4	xx	Card number of DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 41-49 for IP expansion cabinet 4</li><li>• 41-44 for Media Gateway 4</li></ul>
SREF CC4	xx	Card number of DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 41-49 for IP expansion cabinet 4</li><li>• 41-44 for Media Gateway 4</li></ul>
CCGD	0-(15)-1440	Clock Controller free run Guard time
CCAR	0-(15)	Clock Controller Audit Rate
EFCS	(NO) YES	Enable Fast Clock Switching

---

## Prompts and responses for setting pad values

### Prompts and responses DTI / PRI data blocks (with GPRI package 167)

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	aaa	Type of data block = DTI or PRI
FEAT	PAD	Pad Category
PDCA	1-16	Pad Category table. PDCA 1 and PDCA 16 are preconfigured. See the Note below for further details.
TNLS	(NO) YES	Terminal Number List
DFLT	1-16	Use default codes from this pad category table for the following prompts if <cr> is entered at the prompt

**Note:** For the following prompts, **x = Rx code (receive)** and **y = Tx code (transmit)**. You may assign receive and transmit dB values to the following prompts by entering a code which corresponds to a dB value. Code options and their corresponding dB values are listed in Table 5 on page 867. The codes listed in Table 5 apply for both Rx codes and Tx codes.

To find the default values for Pad Category 1 when TYPE = DTI or PRI, refer to Table 6 on page 868. To find default values for Pad Category 1 when TYPE = BRIL, BRIT, DTI2, or PRI2, refer to Table 7 on page 869. To find default values for Pad Category 16 when TYPE = JDML, refer to Table 8 on page 870.

ONP	x y	On-Premises Extension
DSET	x y	Meridian Digital Set
OPX	x y	Off-Premises Extension
DTT	x y	Digital TIE Trunks
SDTT	x y	Satellite Digital TIE Trunks
DCO	x y	Digital COT, FEX, WAT, and DID trunks
DTO	x y	1.5 Mb/s DTI/PRI Digital TOLL Office trunks
VNL	x y	Via Net Loss (Analog TIE)
SATT	x y	Satellite Analog TIE Trunks
ACO	x y	Analog COT and WATS trunks

# LD 73

ATO	x y	Analog TOLL Office trunks
PRI	x y	1.5 Mb/s PRI/DTI trunk
PRI2	x y	2.0 Mb/s PRI/DTI trunk
XUT	x y	Extended Peripheral Equipment Universal Trunk
XEM	x y	Extended Peripheral Equipment E&M Trunk
BRIL	x y	Basic Rate Interface Line
BRIT	x y	Basic Rate Interface Trunk
MCM	x y	M1 CT2 mobility pad value
TOLT	x y	Toll call pad data on DTI2 card
TOLL	x y	Toll call pad data on line card (Do not refer to Table 5 for TOLL values. Refer instead to Table 9).

---

**Table 5**  
**Pad codes & corresponding dB values for DTI/PRI/BRIT/BRIL/PRI2/DTI2/JDMI**

Code	Value (dB)	Code	Value (dB)	Code	Value (dB)
0	0.0 †	9	+9.0	18	-4.0 †
1	+1.0 †	10	+10.0 †	19	-5.0
2	+2.0 †	11	+11.0	20	-6.0 †
3	+3.0 †	12	+12.0 †	21	-7.0
4	+4.0 †	13	+13.0	22	-8.0
5	+5.0 †	14	+14.0	23	-9.0
6	+6.0 †	15	-1.0 †	24	-10.0
7	+7.0	16	-2.0 †	25	Idle †
8	+8.0 †	17	-3.0 †	26	+0.6 †

**Note 1:** PRI/DTI pad category prompts require GPRI package 167.

**Note 2:** † Represents pad values supported by DTI2 for large systems.

**Note 3:** Small System supports all pad values for DTI2.

**Note 4:** Positive dB represents loss and negative dB represents gain.

**Note 5:** Code 0, pad value 0.0, is equivalent to no pad. It is used for DTA (Data only) and VOD (Voice or Data) call types and supported by DTI2.

**Note 6:** “Idle” means that PCM signals are converted to silence.

# LD 73

**Table 6**  
**Default Pad Category 1 values (PDCA 1) (DTI/PRI with GPRI pkg 167)**

Connection type	Rx code	Rx PAD (dB)	Tx code	Rx PAD (dB)
ONP	6	+6.0	0	0.0
DSET	6	+6.0	0	0.0
OPX	6	+6.0	0	0.0
DTT	0	0.0	0	0.0
SDTT	3	+3.0	0	0.0
DCO	3	+3.0	0	0.0
DTO	0	0.0	0	0.0
VNL	6	+6.0	0	0.0
SATT	6	+6.0	0	0.0
ACO	6	+6.0	0	0.0
ATO	6	+6.0	0	0.0
PRI	0	0.0	0	0.0
PRI2	0	0.0	0	0.0
XUT	6	+6.0	0	0.0
XEM	3	+3.0	0	0.0
BRIL	0	0.0	0	0.0
BRIT	0	0.0	0	0.0
MCM	0	0.0000	0	0.0

**Table 7**  
**Default Pad Category 1 values (PDCA 1) (BRIL/BRIT/DTI2/PRI2)**

Connection type	Rx code	Rx PAD (dB)	Tx code	Rx PAD (dB)
ONP	17	-3.0	0	0.0
OPX	17	-3.0	0	0.0
DTT	0	0.0	0	0.0
DCO	0	0.0	0	0.0
NTC	4	+4.0	1	+1.0
TRC	4	+4.0	1	+1.0
DTR	17	-3.0		
VNL	4	+4.0	1	+1.0
ACO	4	+4.0	1	+1.0
AFX	4	+4.0	1	+1.0
ADD	4	+4.0	1	+1.0
PRI	0	0.0	0	0.0
DSET	6	+6.0	0	0.0
BRIL	0	0.0	0	0.0
BRIT	0	0.0	0	0.0
MCM	0	0.0	0	0.0
TOLT	0	0.0	0	0.0
TOLL	16	0.0	30	-7.0

# LD 73

**Table 8**  
**Default Pad Category 16 values (PDCA 16) (JDMI)**

Connection type	Rx code	Rx PAD (dB)	Tx code	Rx PAD (dB)
ONP	15	-1.0	8	+8.0
OPX	17	-3.0	0	0.0
DTT	0	0.0	0	0.0
DCO	0	0.0	0	0.0
NTC	4	+4.0	1	+1.0
TRC	4	+4.0	1	+1.0
DTR	0	0.0	---	---
VNL	4	+4.0	1	+1.0
ACO	4	+4.0	1	+1.0
AFX	4	+4.0	1	+1.0
ADD	4	+4.0	1	+1.0
PRI	0	0.0	0	0.0
DSET	6	+6.0	0	0.0
BRIL	0	0.0	0	0.0
BRIT	0	0.0	0	0.0
MCM	0	0.0	0	0.0
TOLT	0	0.0	0	0.0
TOLL	16	0.0	30	-7.0

**Table 9**  
**Default pad values for TOLL prompt**

Code	dB Value	Code	dB Value	Code	dB Value
0	>= +8.0	14	+1.0	28	-6.0
1	+7.5	15	+0.5	29	-6.5
2	+7.0	16	0.0	30	-7.0
3	+6.5	17	-0.5	31	-7.5
4	+6.0	18	-1.0	32	-8.0
5	+5.5	19	-1.5	33	-8.5
6	+5.0	20	-2.0	34	-9.0
7	+4.5	21	-2.5	35	-9.5
8	+4.0	22	-3.0	36	-10.0
9	+3.5	23	-3.5	37	-10.5
10	+3.0	24	-4.0	38	-11.0
11	+2.5	25	-4.5	39	<= -11.5
12	+2.0	26	-5.0		
13	+1.5	27	-5.5		

## Signaling category assignment and modification

### What can be entered for the abcd response?

Prompts which show the response abcd, such as IDLE (S), require a four field response to indicate the status of four bits: a, b, c and d. The abcd response represents a trunk supervisory message. The bit states within the message are determined by using the appropriate input. Allowable inputs for each bit are: 0, 1, C, P, U, X, N. These input options are explained as follows:

- 0 - Bit is a steady state 0 (LOW) e.g. 0000 bits abcd are all steady state 0.
- 1 - Bit is a steady state 1 (HIGH) e.g. 0101 bits b and d are steady state 1 while bits a and c are steady state 0.
- C - Bit is pulsed and present continuously (Continuous pulsing of two or more bits is not allowed.).
- “C” can only be entered for signals that have “C” in front of them when the signal is prompted; the signals are: “C CLRB (S), C CLRB (R) and C SUPO (S) UNUSED”
- “C” cannot be mixed with 0 or 1 or P in the ABCD pattern. Therefore, the entry must look like CXXX, XCXX, etc.
- “C” can only be entered once in the ABCD pattern
- C cannot be entered for the CLRB (R) or CLRB (S) prompts if the pulsed E&M package (232) PEMD is equipped P - Bit is pulsed. e.g. PC10 bit a is pulsed, bit b is pulsed and sent continuously, bit c is steady state 1 and bit d is steady state 0.
- U - Bit is a don't-care bit (for received signals only) e.g. U10U bits a and d are don't-care bits, bit b is steady state 1 and bit c is steady state 0.
- X - Bit is not to be changed (used in conjunction with Pulsed or Continuously pulsed bit) e.g. XPXX bits a, c and d are unchanged, bit b is set to steady state 1 and bit c is set to steady state 0.

Another input to the signal name prompt is allowed. The other allowable input is:

- N - The signal is not required.

### **How to tell if the signal is pulsing, pulsed or steady?**

The signal type is identified by a single character followed by a blank space preceding the signal name. For example, the prompt E SEZ(R) indicates that the Seize signal may be either Pulsed or steady state. The signal type identifiers are:

- C - Continuous Pulsing, Pulsed or steady state
- E - Pulsed or steady state
- P - Pulsed (single pulse unless otherwise indicated)
- No preceding character indicates the signal is steady state only

Pulsed signals will output the TIME prompt. This prompt is described for each of the signals that may prompt it.

### **How to determine signal direction?**

The direction of the signal is indicated by a single character in brackets at the end of the signal name:

- (R) - Indicates that the signal is to be received by the switch
- (S) - Indicates that the signal is to be sent by the switch

For example, E SEZ (R) indicates that the Seize signal may be either Pulsed or steady state and that the signal is to be received by the switch.

### **How to tell if the prompt incoming or outgoing, or both**

ABCD prompts correspond to incoming calls, outgoing calls or both incoming and outgoing calls. Prompts IDLE (S) to P RRC correspond to incoming/outgoing calls. Prompts E SEZ (R) to P FRLS (R) correspond to incoming calls. Prompts E SEZ (S) to C SUPO (S) correspond to outgoing calls.

## **A note about JDMI**

For Japan Digital Multiplex Interface (JDMI), the signal requires only a bit signaling. All four bits will be allowed to be programmed as the software uses all four bits for call processing. The JDMI hardware defaults the bcd bits to 101 for sending signaling changes. Therefore, if any changes are made to received signals, the bcd bits must be set to 101; otherwise, these signals will not be recognized.

## Prompts and responses for ABCD signaling category

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	aaa	Type of data block
FEAT	ABCD	Feature = ABCD
SICA	2-16	Signaling Category
TNLS	(NO) YES	Terminal Number List
DFLT	(1)-16	Default signaling category to be used for Default values

**Note:** The following prompts have default values for Signalling Category 1 and 16 which may be found in Table 7 on page 869.

### Prompts for Incoming/Outgoing Calls

IDLE (S)	abcd	Idle
IDLE (R)	abcd	Idle
FALT (S)	abcd	Fault (DTI out-of-service)
FALT (R)	abcd	Fault (DTI out-of-service)
P RRC (S)	abcd	Register Recall
- TIME	10-(100)-630	Time of RRC (S) in milliseconds
TIME	(0)-1920	Persistence Time required before signal is accepted

### Prompts for Incoming Calls

E SEZ (R)	abcd	Seize for voice or data calls from a non-SL-1
- TIME	16-(56)-1000	16-(296)-1000 Minimum and maximum acceptable pulse duration
SEZD (R)	abcd	Seize for data calls between SL-1s
- SEZV (R)	abcd	Seize for voice calls
P CALL (R)	abcd	Signal sent during seize by an incoming CO trunk

# LD 73

- TIME	1-(2)-15 1-(8)-15	Pulse on time, pulse off time
SEZA (S)	abcd	Seize Acknowledgment
- TIME	50-80-90	Time delay prior to sending SEZA
PRCS (S)	abcd	PRCS
WNKS (S)	abcd	Wink Start
P WNKS (S)	abcd	Wink Start
- TIME	10-(220)-630	Time for P WNKS (S)
P DIGT (R)	abcd	Decadic pulses
NRCV (S)	abcd	Number Received
P EOSF (S)	abcd	End of Selection Free
- TIME	(100)-150	Time for EOSF (S)
- P EOSB (S)	abcd	End of Selection Busy
- - TIME	(100)-150	Time for EOSB (S)
P OPC (R)	abcd	Operator Calling
- TIME	64-(128)-192	Time of OPCA (R) pulse
- TIME	16-(96)-1000 16-(160)-1000	Minimum and maximum acceptable pulse duration
- REPT	(1)-5	Number of OPCA (R) pulses
CONN (S)	abcd	Connect
E CON (S)	abcd	Connect
- TIME	10-(150) 630	Time of pulse length in 10 ms increments
CONN (R)	abcd	Connect
P BURS (S)	abcd	Bring Up Receiver for L1 networking
P BURS (R)	abcd	Bring Up Receiver for L1 networking
- TIME	64-(128)-192	Time for BURS (R) pulse
CLRB (S)	abcd	Clear Back
C CLRB (S)	abcd	Clear Back

- TIME	10-(600)-2000	Time of pulse length in 10 ms increments
- P RCT (S)	abcd	Release Control
- - TIME	100-(150) 300	Time value is stored in 10 ms increments
- - P RCOD (S)	abcd	Release Control Originating party Disconnect
- - - TIME	150	Timer value in milliseconds is fixed
P OPRS (R)	abcd	Operator manual recall
- TIME	xxxx yyyy	Minimum and maximum time range for OPRS (R)
P NXFR (S)	abcd	Network Transfer
P ESNW (S)	abcd	ESN Wink
P CAS (S)	abcd	Centralized Attendant
CLRF (R)	abcd	Clear Forward
- SOS	abcd	Special Operator Signal
P BRLS (S)	abcd	Backward Release
- TIME	10-(600)-2000	Time of pulse length in 10 ms increments
P FRLS (R)	abcd	Forward Release
- TIME	16-(296)-2000	16-(960)-2000 Minimum and maximum acceptable pulse duration

### Prompts for Outgoing Calls

E SEZ (S)	abcd	Seize for voice or data calls to a non-SL-1
- TIME	10-(150)-630	Time of pulse length in 10 ms increments
SEZD (S)	abcd	Seize for Data calls
- SEZV (S)	abcd	Seize for Voice calls
SEZA (R)	abcd	Seize Acknowledgment
- TIME	xxx	Delay time for the SEZA signal (xxx = 50, 80, 90, (150), or 800)
WNKS (R)	abcd	Wink Start
- TIME	20-(140)-500	20-(290)-500 Minimum and maximum length of WNKS (R) pulse

# LD 73

P WNKS (R)	abcd	Wink Start
- TIME	16-(136)-504 16-(288)-504	
		Minimum and maximum length of P WNKS (R) pulse
P EOS (R)	abcd	End of Selection
- TIME	(64)-320 64-(256)-320	
		Length of EOS (R) pulse
CONN (S)	abcd	Connect
CONN (R)	abcd	Connect
E CONN (R)	abcd	Connect
- TIME	16-(56)-1000 16-(296)-1000	
		Time of pulse length in 8 ms increments
P OPRC (R)	abcd	Operator Recall for special services
P BURS (S)	abcd	Bring Up Receiver for L1 networking
P BURS (R)	abcd	Bring Up Receiver for L1 networking
- TIME	64-(128)-192	Time for BURS (R) pulse
CLRB (R)	abcd	Clear Back
C CLRB (R)	abcd	Clear Back
- TIME	16-(296)-2000 16-(960)-2000	
		Time of pulse length in 8 ms increments
- P RCTL (R)	abcd	Release Control
- - TIME	96-(128)-320 96-(256)-320	
		Time stored in 8 ms increments
P NXFR (R)	abcd	Network Transfer
P ESNW (R)	abcd	ESN Wink
P CAS (R)	abcd	Centralized Attendant Service
CLRF (S)	abcd	Clear Forward
- TIME	(0)-800	Time in milliseconds
- SOS	abcd	Special Operator Signal

P FRLS (S)	abcd	Forward Release
- TIME	10-(600)-2000	Only prompted for pulsed signals
P BRLS (R)	abcd	Backward Release
- TIME	16-(296)-2000	16-(960)-2000
		Time of pulse length in 8 ms increments
C SUPO (S)	abcd	Complex Supervision to Operator Signal used for KD3 signaling. Note that the input for a must be C.

**Table 10**  
**Default values for Signaling Categories 1 & 16 (In/Out Calls)**

In/Out Calls	SICA 1	SICA 16
IDLE (S)	1001	1101
IDLE (R)	1001	1101
FALT (S)	1101	0101
FALT (R)	1101	0101
TIME	0	0
P RRC (S)	UNUSED	UNUSED

**Table 11**  
**Default values for Signaling Categories 1 & 16 (Incoming Calls)**

Incoming Calls	SICA 1	SICA 16	Incoming Calls	SICA 1	SICA 16
E SEZ (R)	0001	0101	CONN (R)	0001	0101
SEZD (R)	UNUSED	UNUSED	P BURS (S)	UNUSED	UNUSED
SEZV (R)	UNUSED	UNUSED	P BURS (R)	UNUSED	UNUSED
P CALL (R)	UNUSED	UNUSED	C CLRB (S)	1101	1101
SEZA (S)	1101	UNUSED	P RCTL (S)	UNUSED	UNUSED
TIME	150		P RCOD (S)	UNUSED	UNUSED
PRCS (S)	UNUSED	UNUSED	P OPRS (R)	UNUSED	UNUSED
P WNKS (S)	UNUSED	PXXX	P NXFR (S)	UNUSED	UNUSED
TIME		220	P ESNW (S)	UNUSED	UNUSED
P DIGT (R)	UNUSED	PXXX	P CAS (S)	UNUSED	UNUSED
NRCV (S)	UNUSED	UNUSED	CLRF (R)	UNUSED	UNUSED
P EOSF (S)	UNUSED	UNUSED	SOS (R)	UNUSED	UNUSED
P EOSB (S)	UNUSED	UNUSED	P BRLS (S)	UNUSED	UNUSED
P OPCA (R)	UNUSED	UNUSED	P FRLS (R)	UNUSED	UNUSED
E CONN (S)	0101	0101			

**Table 12**  
**Default values for Signaling Categories 1 & 16 (Outgoing Calls)**

Outgoing Calls	SICA 1	SICA 16
E SEZ (S)	0001	0101
SEZD (S)	UNUSED	UNUSED
SEZV (S)	UNUSED	UNUSED
SEZA (R)	1101	UNUSED
P WNKS (R)	UNUSED	PXXX
TIME		136 288
P EOS (R)	UNUSED	UNUSED
CONN (S)	0001	0101
E CONN (R)	0101	0101
P OPRC (R)	UNUSED	UNUSED
P BURS (S)	UNUSED	UNUSED
P BURS (R)	UNUSED	UNUSED
C CLRБ (R)	1101	1101
P RCTL (R)	UNUSED	UNUSED
P NXFR (R)	UNUSED	UNUSED
P ESNW (R)	UNUSED	UNUSED
P CAS (R)	UNUSED	UNUSED
CLRF (S)	UNUSED	UNUSED
SOS (R)	UNUSED	UNUSED
P FRLS (S)	UNUSED	UNUSED
P BRLS (R)	UNUSED	UNUSED

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
500L	(0)-1	ANI request tone (500 Hz) transmission level. The prompt appears only when CISFW is set to MFA.  The transmission level may be set to the following values:  0 (default) = -7.3 DB 1 = -3.5 DB	
ACO	x y  <cr>	Analog COT and WATS trunks. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes.  Initial values	dti/pa-14
ACRC	(NO) YES	No reporting of CRC-4 error Automatic reporting of CRC-4 error during transmission ACRC is only printed for PRI2 loops and if MFF = CRC.	euro-20
ADD	x y  <cr>	Analog Direct Inward Dial trunks. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes.  Initial values	dti/pa-14
AFX	x y  <cr>	Analog Foreign Exchange trunks. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes.  Initial values	dti/pa-14
ALRM	(REG)  ALT	Regular firmware alarm handler (RAI transmission is controlled by software) Alternate firmware alarm handles (Immediate transmission of RAI by firmware)  An error rate less than 10 is reported as a Group 1 alarm message.	dti/pa-14

Prompt	Response	Comment	Pack/Rel
ATO	x y  <cr>	Analog Toll Office trunks. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See “DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)” on page 863 for more information about x and y codes.  Initial values	gpri-18
BIPC	0-(2)-128	Bipolar violation Count threshold  This is the maximum number of times a DTI/PRI loop can be taken out of service in 24 hours. If this threshold is reached the DTI/PRI must be restored to service manually.  Refer to the <i>Digital Trunk Interface maintenance</i> NTP or the <i>PRI and DCHI maintenance</i> NTP for details.  If “0” is entered, there is no limit on number of times trunks can be taken out and automatically restored to service.  The method of bit rate monitoring depends on the loop configuration: <ol style="list-style-type: none"> <li>1. For DTI mode: bipolar violation threshold</li> <li>2. For PRI mode with D2, D3, or D4 framing format: bipolar violation threshold</li> <li>3. For PRI mode with Extended Superframe Format (ESF): Cyclic Redundancy Check (CRC) threshold</li> </ol>	dti/pri-14
BIPV	1-(3)-4 1-(2)-4	Bipolar Violation maintenance and Out-of-Service threshold  The BIPV values determine the sensitivity of the loop to errors, where BIPV = 1 is the least tolerant to errors, and BIPV = 4 is the most tolerant. The maintenance threshold must be greater than the out-of-service threshold.	dti/pri-14

Prompt	Response	Comment	Pack/Rel
		<p>The method of bit rate monitoring depends on the loop configuration:</p> <ol style="list-style-type: none"> <li>1. For DTI mode: bipolar violation thresholds</li> <li>2. For PRI mode with D2, D3, or D4 framing format: bipolar violation thresholds</li> <li>3. For PRI mode with Extended Superframe Format (ESF): Cyclic Redundancy Check (CRC) thresholds</li> </ol>	
BPV	1-(128)-255	<p>1-(122)-255 Bipolar Violation Maintenance and Out-of-Service thresholds. The values entered are multiplied by 16 to obtain the actual count, giving an actual range of 16-4080.</p>	dti/prs-14
BPV	NB mt dt ct ot	<p>Bipolar Violation error counts. Where:</p> <p>NB = Error count values are in the range 1-(205)-255</p> <p>mt = Maintenance threshold time (MNT) (default = 10S)</p> <p>dt = No new data calls threshold time (NNDC) (default = 3S)</p> <p>ct = No new calls threshold time (NNC) (default = 3S)</p> <p>ot = Out-of-service threshold time (OOS) (default = 1S)</p> <p><b>Response options for mt, dt, ct, ot:</b></p> <p>Threshold time entries end in one of the following letters: T, S, M, H. These letters indicate the time increment to be used. Response options for mt, dt, ct and ot are as follows:</p> <ul style="list-style-type: none"> <li>• 20T–5000T = 20 millisecond increments</li> <li>• 1S–240S = 1 second increments</li> <li>• 1M–240M = 1 minute increments</li> <li>• 1H–24H = 1 hour increments</li> </ul>	dti/prs-14

Prompt	Response	Comment	Pack/Rel
		<p><b>Important note:</b> The following requirements must be met:</p> <p>mt = &gt;dt = &gt;ct = &gt;ot</p>	
BRIL	x y	Basic Rate Interface Line. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes.	gpri-18
	<cr>	Initial values	
BRIT	x y	Basic Rate Interface Trunk. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes.	gpri-18
	<cr>	Initial values	
C CLRB (R)	abcd	Clear Back. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-18
	N	If C CLRB (R) not required, when IDLE would be used	
C CLRB (S)	abcd	Clear Back. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-18
	N	If Clear Back is configured as continuous pulsing then a 100 ms pulse is sent very 333 ms. If CLRB (S) not required (IDLE signal is used)	
CCAR	0-(15)	Clock Controller Audit Rate	supp-15
		The time, in minutes, between normal CC audits. Only programmable on units equipped with 2.0 Mb/s DTI/PRI.	
		Before programming clock controller references, the QPC775 clock controller card(s) must be plugged in, and the switches on the system's QPC441 3 Port Extender appropriately set.	
		Unless this is done, the PREF and SREF prompts are not given.	
CC0	1-9	Card number for Clock Controller 0 (Option 11C with Survivable IP)	sipe-25

# LD 73

Prompt	Response	Comment	Pack/Rel
CC1	xx	Card number for Clock Controller 1. Where xx is: <ul style="list-style-type: none"><li>• 11-19 for Survivable IP expansion cabinet 1</li><li>• 11-14 for Survivable Media Gateway 1</li></ul>	sipe-25 basic-1
CC2	xx	Card number for Clock Controller 2. Where xx is: <ul style="list-style-type: none"><li>• 21-29 for Survivable IP expansion cabinet 2</li><li>• 21-24 for Survivable Media Gateway 2</li></ul>	sipe-25 basic-1
CC3	xx	Card number for Clock Controller 2. Where xx is: <ul style="list-style-type: none"><li>• 31-39 for Survivable IP expansion cabinet 3</li><li>• 31-34 for Survivable Media Gateway 3</li></ul>	sipe-25 basic-1
CC4	xx	Card number for Clock Controller 2. Where xx is: <ul style="list-style-type: none"><li>• 41-49 for Survivable IP expansion cabinet 4</li><li>• 41-44 for Survivable Media Gateway 4</li></ul>	sipe-25 basic-1
CCGD	0-(15)-1440	Clock Controller free run Guard time (in minutes)	supp-15
CDTI2	(NO) YES	No CDTI2/CSDTI2 Card CDTI2/CSDTI2 Card	dti/pa-14
CEQP	(NO) YES	Clock Controller Equipped Prompted only for SL-1 M, MS or S.	dti/pa-14
CISFW		CISFW defines the CDTI2/CSDTI2 card's FW option to be used.	cist-21
	YES	YES means that this loop is CIS DTI trunk. NO means that the given loop must be considered as DTI2. Prompted with CIST package 221 and CDTI2 = YES.	
	(NO)	Non CIS DTI2 signalling protocols on the NTCG01AA/NTCG02AA or NTCG01AB/NTCG02AB card.	cismfs-23
	DP	Dial Pulse CIS signalling protocol on the NTCG01AA/NTCG02AA card.	
	MFS	Both the CIS Dial Pulse and the CIS MFS signalling protocols on the NTCG01AB/NTCG02AB. Minimum card vintages are specified.	

Prompt	Response	Comment	Pack/Rel
	MFA	CIS Firmware type is MFA - which means that the Multifrequency Shuttle protocol handling + ANI Reception + Firmware Dial Tone Detection capabilities are supported	cist-24
CLEA	0-(100)-256	Clearance timer for Group II problems in 2 millisecond increments. CLEA is only printed for PRI2 loops.	euro-20
CLKN	xx	Card number for Clock Controller (Option 11C) Where: <ul style="list-style-type: none"> <li>• xx = 1-9</li> </ul>	supp-18
CLRB (R)	abcd N	Clear Back. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If CLRB (R) not required, when IDLE would be used	abcd-14
CLRB (S)	abcd N	Clear Back. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If CLRB (S) not required (IDLE signal is used)	abcd-14
CLRF (R)	abcd N	Clear Forward. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If CLRF (R) not required	abcd-18
CLRF (S)	abcd N	Clear Forward. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If CLRF (S) not required	abcd-18
CONN (R)	abcd	Connect. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14
CONN (S)	abcd	Connect. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14
CRC	1-(201)-255	1-(97)-255 Cyclic Redundancy Check threshold	pri2-14

# LD 73

Prompt	Response	Comment	Pack/Rel
CRC	NC mt dt ct ot	<p>Cyclic Redundancy Check error counts. Where:</p> <p>NC = Error count values are in the range 1 - 255 - error count value</p> <p>mt = Maintenance threshold time (MNT) (default = 10S)</p> <p>dt = No new data calls threshold time (NNDC) (default = 3S)</p> <p>ct = No new calls threshold time (NNC) (default = 3S)</p> <p>ot = Out-of-service threshold time (OOS) (default = 1S)</p> <p><b>Response options for mt, dt, ct, ot:</b></p> <p>Threshold time entries end in one of the following letters: T, S, M, H. These letters indicate the time increment to be used. Response options for mt, dt, ct and ot are as follows:</p> <ul style="list-style-type: none"><li>• 20T–5000T = 20 millisecond increments</li><li>• 1S–240S = 1 second increments</li><li>• 1M–240M = 1 minute increments</li><li>• 1H–24H = 1 hour increments</li></ul> <p><b>Important note:</b> The following requirements must be met:</p> <p>mt = &gt;dt = &gt;ct = &gt;ot</p>	pri2-14
C SUPO(S)	abcd	<p>Complex Supervision to Operator signal used for KD3 signalling calls to Special Services with Hold. For information about your response options, refer to “Signaling category assignment and modification” on page 872.</p> <p>Note that the input for the a field must be C. If SUPO not required</p>	kd3-20
DBNC	(10)-32	<p>Debounce timer (in milliseconds) For DTI2 only.</p>	pedm-18

Prompt	Response	Comment	Pack/Rel
DCO	x y  <cr>	Digital COT, FEX, WAT, and DID trunks. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	dti/pri-14
DFLT	(1)-16  <cr>	Default signaling category to be used for default values. When REQ = NEW, default is SICA 1 for DTI2 and SICA 16 for JDMI. Table 6 on page 868 shows the default values for both Signaling Categories 1 & 16.  A carriage return configures default values, according to your configuration:  <b>DTI/PRI</b> - default pad codes from Table 6 on page 868. (PDCA 1). Must be equipped with GPRI package 167.  <b>BRIL/BRIT/DTI2/PRI2</b> - default pad codes from Table 7 on page 868. (PDCA 1)  <b>JDMI</b> - default pad codes from Table 8 on page 871. (PDCA 16)	dti/pri-14
DSET	x y  <cr>	Meridian Digital Set. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	gpri-18
DTO	x y  <cr>	1.5 Mb/s DTI/PRI Digital TOLL Office trunks. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	gpri-18
DTT	x y  <cr>	Digital TIE Trunks. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	gpri-18
E CONN (R)	abcd	Connect. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14

# LD 73

Prompt	Response	Comment	Pack/Rel
E CONN (S)	abcd	Connect. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14
E SEZ (R)	abcd	Seize for voice or data calls to a non-SL-1. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-18
E SEZ (S)	abcd	Seize for voice or data calls to a non-SL-1. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-18
EDGE	0 1	Edge of pulse PPM bit counted when changed from 1 to 0 PPM bit counted when changed from 0 to 1	dti/pa-14
EFCS	(NO) YES	Enable Fast Clock Switching EREF option in LD 60 must be chosen to enable this prompt.	dti/pa-18
FALT (R)	abcd  N	Fault (DTI out-of-service). For information about your response options, refer to "Signaling category assignment and modification" on page 872. If FALT not required	abcd-14
FALT (S)	abcd  N	Fault (DTI out-of-service). For information about your response options, refer to "Signaling category assignment and modification" on page 872. If FALT not required	abcd-14
FAP	1-(28)-255 (1)-255	Frame Alignment thresholds	dti/pa-14
	NF mt dt ct ot	Frame Alignment Problem thresholds	dti/pa-14

Prompt	Response	Comment	Pack/Rel
--------	----------	---------	----------

Where:

NF = Error count values are in the range: 1-(32)-255

mt = Maintenance threshold time (MNT)  
(default = 4S)

dt = No new data calls threshold time (NNDC)  
(default = 1S)

ct = No new calls threshold time (NNC)  
(default = 1S)

ot = Out-of-service threshold time (OOS)  
(default = 100T)

**Response options for mt, dt, ct, ot:**

Threshold time entries end in one of the following letters: T, S, M, H. These letters indicate the time increment to be used. Response options for mt, dt, ct and ot are as follows:

- 20T–5000T = 20 millisecond increments
- 1S–240S = 1 second increments
- 1M–240M = 1 minute increments
- 1H–24H = 1 hour increments

**Important note:** The following requirements must be met: mt = >dt = >ct = >ot

# LD 73

Prompt	Response	Comment	Pack/Rel
FEAT		Feature	dti/pr-14
	ABCD	ABCD bit signaling category Valid response when TYPE = DTI2 or JDMI. Refer to NTP 553-2911-200 for default ABCD table with suggested values.	
	PAD	Pad category Valid response for all types.  This prompt is not applicable for DPNSS and DASS2 applications. For DPNSS, the pad values are automatically set to zero (0) for both transmit and receive. For DASS2, the loss pad values are set to zero (0) for transmit and four (4) for receive.  If TYPE = BRIL or BRIT, then FEAT = PAD is the only response allowed.	
	LPTI	Loop Timers Valid response when TYPE = DTI2, JDMI or PRI2.	
	SYTI	System Timers and counter (only one set per system) Valid response when TYPE = DTI2, JDMI or PRI2.	
FRFW	(NO) YES	This DTI2 loop is (is not) equipped with special Firmware for France.	dti/pr-18

Prompt	Response	Comment	Pack/Rel
GP2	T2 mt dt ct ot	<p>Group 2 error thresholds</p> <p>Where:</p> <p>T2 = Error count values in range: 1-(20)-255. The T2 entry defines the maximum time that can occur before software checks the associated thresholds of 120 to 32,640 msec and rounds them to the closest multiple of 128 msec.</p> <p>mt = Maintenance threshold time (MNT) (default = 100S)</p> <p>dt = No new data calls threshold time (NNDC) (default = 12S)</p> <p>ct = No new calls threshold time (NNC) (default = 12S)</p> <p>ot = Out-of-service threshold time (OOS) (default = 4S)</p> <p><b>Response options for mt, dt, ct, ot:</b></p> <p>Threshold time entries end in one of the following letters: T, S, M, H. These letters indicate the time increment to be used. Response options for mt, dt, ct and ot are as follows:</p> <ul style="list-style-type: none"> <li>• 20T–5000T = 20 millisecond increments</li> <li>• 1S–240S = 1 second increments</li> <li>• 1M–240M = 1 minute increments</li> <li>• 1H–24H = 1 hour increments</li> </ul> <p><b>Important note:</b> The following requirements must be met:</p> <p>mt = &gt;dt = &gt;ct = &gt;ot</p>	dti/prs-14
ICS	0-159	<p>Multi Purpose Serial Data Link Idle Code Selection</p> <p>Loop number for which IDLE PCM code has to be sent</p> <p>Precede loop number with X to remove</p>	pra-24
IDLE (R)	abcd	<p>Idle. For information about your response options, refer to “Signaling category assignment and modification” on page 872.</p>	abcd-14

# LD 73

Prompt	Response	Comment	Pack/Rel
IDLE (S)	abcd	Idle. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14
ITBP	8-(72)-248	Idle Time between PPM pulses in milliseconds	kd3-20
ITPP	(NO) YES	Italian PPM option denied Italian PPM option allowed	kd3-20
LCLB	(NO) YES	Lockout Clear Back option for DID trunks	
LFAC	0-(3)-128	Loss-of-Frame-Alignment Counter  This is the maximum number of times a DTI/PRI loop can be taken out-of-service in 24 hours. If this threshold is reached the DTI/PRI must be restored to service manually.  If "0" is entered, there is no limit on number of times that trunks can be taken out and automatically restored to service.	dti/pri-14
LFAL	1-(17)-10240	1-(511)-10240 Loss-of-Frame-Alignment maintenance and out-of-service thresholds for a 24 hour period  The maintenance threshold must be greater than the out-of-service threshold.	dti/pri-14
LOOP	loop card	PRI2 Loop number PRI2 or DTI2 card slot for Option 11C only	dti/pri-14
LOOP	loop	DTI Loop number Must be defined in LD 17.	dti/pri-14
MAND	0-(15)-1440	Maintenance guard time (in minutes). For DTI2 only.	dti2-14
MCM	x y  <cr>	M1 CT2 Mobility Pad value. . Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	mcmo-20

Prompt	Response	Comment	Pack/Rel
MFAO	YES NO <cr>	Multiframe Alignment Option DTI card will set bit 3 of timeslot 0 if loss of Multiframe Alignment Signal (MFAS) occurs (JDMI default) DTI card will not set bit 3 of timeslot 0 if loss of Multiframe Alignment Signal (MFAS) occurs (DTI2 default) No change is required.	dti/pra
MFF	(AFF) CRC	Multiframe Format  The prompt appears only if CDTI2 = YES. CRC4 or Alternate Frame Format may be chosen. In the previous design, this prompt was issued for SDC2 (Option 11C DTI2) loops.  Alternative Frame Format Cyclic Redundancy Check (CRC 4). CRC is prompted for Small System. For Large System, only AFF is supported.	dti/pra-14
MFSL	(0)-3	The MFS signals transmission level. The prompt appears when CISFW is set to MFS or MFA and the CISMFS package is equipped.  The transmission level may be set to the following values:  (0) = -7.3 db 1 = -5.0 db 2 = -3.5 db 3 = 0 DB	
MINP	8-(72)-248	Idle time between PPM pulses (in milliseconds)	kd3-20
MNG1	nnnM	Maintenance Guard time Group 1, where nnn = 1-(15)-240. Default = 15M.	dti/pra-14
MNG2	nnnM	Out-of-Service Guard time Group 1, where nnn = 1-(15)-240. Default = 15M.	dti/pra-14
NCG1	nnnM	No New Calls Guard time Group 1, where nnn = 1-(15)-240. Default = 15M.	dti/pra-14
NCG2	nnnS	No New Calls Guard time Group 2, where nnn = 1-(15)-240. Default = 15S.	dti/pra-14

# LD 73

Prompt	Response	Comment	Pack/Rel
NCSD	0-(15)-1440	1S-59S New Call Suppression Guard time in minutes and seconds. For DTI2 only.	dti2-14
NOOS	(NO) YES	The grade of service feat Enable current grade of service feat Alternate grade of service feat	dti/pr-18
NRCV (S)	abcd  N	Number Received. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If NRCV (S) not required	abcd-14
NTC	x y  <cr>	Non-Transmission Compensated (Analog TIE). Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	dti/pr-14
ONP	x y  <cr>	On-Premises extension. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	dti/pr-14
OOSC	0-(5)-127	Out-of-Service Counter (Counts out-of-service occurrences since midnight) (DTI disabled) For DTI2 only.	dti2-14
OPX	x y  <cr>	Off-Premises Extension. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	dti/pr-14
OSG1	nnnM	Out-of-Service Guard time Group 1, where nnn = 1-(15)-240.	dti2-14
OSG2	nnnS	Out-of-Service Guard time Group 2, where nnn = 1-(15)-240. Default = 15S.	dti2-14

Prompt	Response	Comment	Pack/Rel
OSGD	0-(15)-1440		dti2-14
P BRLS (R)	abcd	Out-of-Service Guard time (in minutes). For DTI2 only. Backward Release. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-18
	N	This signal is mutually exclusive with the P RCTL (R) signal. If P BRLS (R) not required	
P BRLS (S)	abcd	Backward Release. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-18
	N	This signal is mutually exclusive with P RCTL (S) and RCOD (S) signals. If P BRLS (S) not required	
P BURS (R)	abcd	Bring Up Receiver for L1 networking. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14
	N	If BURS (R) not required	
P BURS (S)	abcd	Bring Up Receiver for L1 networking. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14
	N	Uses switchhook flash timer for pulse duration time. If BURS (S) not required	
P CALL (R)	abcd	Signal sent during seize by an incoming CO trunk. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14
P CAS (R)	abcd	Centralized Attendant Service (DTI2 only). For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14
	N	If CAS (R) not required	
P CAS (S)	abcd	Centralized Attendant. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14
	N	Pulse time not variable. Prompted for DTI2 only. If CAS (S) not required	

# LD 73

Prompt	Response	Comment	Pack/Rel
P DIGT (R)	abcd N	Decadic pulses. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If DIGT (R) not required	abcd-14
P DIGT (S)	abcd N	Digit pulse timing from TDS (Bits P, X or U). For information about your response options, refer to "Signaling category assignment and modification" on page 872. JDML default = PXXX If DIGT (S) signal not required	abcd-14
P EOS (R)	abcd N	End of Selection. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If EOS (R) not required	abcd-14
P EOSB (S)	abcd N	End of Selection Busy. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If EOSB (S) not required	abcd-14
P EOSF (S)	abcd N	End Of Selection Free. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If EOSF (S) not required	abcd-14
P ESNW (R)	abcd N	ESN Wink. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If ESNW (R) not required	abcd-14
P ESNW (S)	abcd N	ESN Wink. For information about your response options, refer to "Signaling category assignment and modification" on page 872. Pulse time not variable. If ESNW (S) not required	abcd-14
P FRLS (R)	abcd N	Forward Release. For information about your response options, refer to "Signaling category assignment and modification" on page 872. This signal is mutually exclusive with CLRf (R) the signal. If P FRLS (R) not required	abcd-18

Prompt	Response	Comment	Pack/Rel
P FRLS (S)	abcd	Forward Release. For information about your response options, refer to "Signaling category assignment and modification" on page 872. This signal is mutually exclusive with the CLRf (S) signal.	abcd-18
	N	If P FRLS (S) not required	
P METR (R)	abcd	ABCD bits value for received metering pulses. For information about your response options, refer to "Signaling category assignment and modification" on page 872.  Bits P, X or U are selectable. Only two P bits may be selected. P METR (R) is prompted only when COT and DID trunks are equipped. Periodic Pulse Metering (PPM) package 101 is required.	ppm-14
	N	If METR (R) signal not required N must be selected when either a CDTI2 or a CSDTI2 cards is equipped. These cards do not support PPM.	
P NXFR (R)	abcd	Network Transfer. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14
	N	If not required	
P NXFR (S)	abcd	Network Transfer. For information about your response options, refer to "Signaling category assignment and modification" on page 872. Pulse time not variable.	abcd-14
	N	If NXFR (S) not required	
P OPCA (R)	abcd	Operator Calling. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-14
	N	If OPCA (R) not required	
P OPRC (R)	abcd	Operator Recall for special services. For information about your response options, refer to "Signaling category assignment and modification" on page 872. Minimum three pulses of 160 milliseconds each.	abcd-14
	N	If OPRC (R) not required	

# LD 73

Prompt	Response	Comment	Pack/Rel
P OPRS (R)	abcd N	Operator manual recall. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If OPRS (R) not required	abcd-14
P RCOD (S)	abcd N	Release Control Originating party Disconnect. For information about your response options, refer to "Signaling category assignment and modification" on page 872. This signal is another pulsed SL-1 signal sent on incoming trunks when the originating party disconnects first. If RCOD (S) not required	abcd-15
P RCTL (R)	abcd N	Release Control. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If RCTL (R) not required	abcd-14
P RCTL (S)	abcd N	Release Control. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If RCTL (S) not required Prompted when CLRB is unused or is defined the same as IDLE.	abcd-14
P RRC (S)	abcd N	Register Recall (activated by Malicious Call Trace). For information about your response options, refer to "Signaling category assignment and modification" on page 872. If RRC(S) not required	abcd-14
P WNKS (R)	abcd N	Wink Start. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If P WNKS (R) not required	abcd-18
P WNKS (S)	abcd N	Wink Start (corresponds to a pulsed seize. For information about your response options, refer to "Signaling category assignment and modification" on page 872. acknowledgment). If P WNKS (S) not required P WNKS (S) is prompted when SEZA (S) is not required.	abcd-18

Prompt	Response	Comment	Pack/Rel
PDCA	1-16 <cr>	Pad Category table (Pad Category Table1 cannot be changed or deleted) Print all the pad category tables	dti/pa-14
PERS	0-(100)-254 0-(50)-254	Persistence timer in milliseconds for far-end problems For DTI2 only. Group 2 Persistence timer and clearance timer (in 2 millisecond increments)	dti2-14
PPMD	(NO) YES	PPM Parameter Download not required PPM Parameter Download required	kd3-20
PRCS (S)	abcd N	PRCS. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If PRCS (S) not required	abcd-14
PREF	0-159 0-254 l s c	Primary Reference Source loop for clock controller (Large System format) Systems with Fibre Network Fabric Source from a Basic Rate Interface Trunk (BRIT) S/T Interface Line Card (SILC) (Large System format)  Where: l = 0-156 (loop number must be zero or a multiple of four) s = 0-1 cc = 0-15  The SILC must have DSL 0 defined as a trunk and CLOK = YES in LD 27.	dti/pa-14 fnf-25
	1-9	Source card for clock controller (Option 11C format)  The response must be the same as CLKN above, or <cr> for free run.  If source is a Basic Rate Interface Trunk (BRIT) S/T Interface Line Card (SILC) then the SILC must have DSL 0 defined as a trunk and CLOK = YES in LD 27.	
	<cr>	If REQ = NEW and carriage return is entered, then Primary Reference is free-run mode.  If REQ = CHG, then Primary Reference is not changed.	

# LD 73

Prompt	Response	Comment	Pack/Rel
		The loop or card must already be defined in LD 17 (prompt DLOP). Use <cr> for free-running mode. Free-running mode uses loop 255. If <cr> is used, you are not prompted for the Secondary Reference (SREF). Precede with X to remove	
PREF CC0	loop	Primary Reference DTI/PRI loop for Clock controller zero (non-Small System). The clock controller will derive its primary clock pulses from the loop selected here.	dti/pr-14
	1-9	Card number containing the primary clock reference for the main cabinet (Option 11C)	
		If a BRI trunk (BRIT) is the reference source then the SILC must have DSL 0 defined as a trunk and CLOK = YES in LD 27.	
		Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the primary clock reference main cabinet (Option 11C)	
	0-254	Systems with Fibre Network Fabric	fnf-25
	<cr>	Primary Reference remains at current setting	
	X	Primary Reference reverts to the free-run mode	
PREF CC1	loop	Primary Reference DTI/PRI loop for Clock controller one. The response is the loop from which the clock controller will be deriving its primary clock pulses. (Large System)	dti/pr-14
	0-254	Systems with Fibre Network Fabric	fnf-25
	<cr>	Primary Reference remains at current setting	
	X	Primary Reference reverts to the free-run mode	
	xx	Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the primary clock reference. Where xx is:	
		<ul style="list-style-type: none"><li>• 11-19 for IP expansion cabinet 1</li></ul>	sipe-25
		<ul style="list-style-type: none"><li>• 11-14 for Media Gateway 1</li></ul>	basic-1
PREF CC2	xx	Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the primary clock reference. Where xx is:	
		<ul style="list-style-type: none"><li>• 21-29 for IP expansion cabinet 2</li></ul>	sipe-25
		<ul style="list-style-type: none"><li>• 21-24 for Media Gateway 2</li></ul>	basic-1
PREF CC3	xx	Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the primary clock reference. Where xx is:	
		<ul style="list-style-type: none"><li>• 31-39 for IP expansion cabinet 3</li></ul>	sipe-25
		<ul style="list-style-type: none"><li>• 31-34 for Media Gateway 3</li></ul>	basic-1

Prompt	Response	Comment	Pack/Rel
PREF CC4	xx	Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"> <li>• 41-49 for IP expansion cabinet 4</li> <li>• 41-44 for Media Gateway 4</li> </ul>	sipe-25 basic-1
PRI	x y  <cr>	1.5 Mb/s PRI/DTI trunk. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	gpri-18
PRI2	x y  <cr>	2.0 Mb/s PRI/DTI trunk. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	gpri-18
RAIE	(NO)  YES	Disable reporting of RAIE Group II alarm state with continuous CRC error information reporting Enable reporting of RAIE Group II alarm state with continuous CRC error information reporting	euro-20
RALM	1-(3)-128	Remote (yellow) Alarm clear threshold  This is the number of "remote alarm clear" signals received in 24 hours. If the threshold is reached the DTI/ PRI must be restored to service manually.	dti/pri-14
RATS	1-(10)-15	The number of consecutive seconds the firmware has to check and validate error rate condition.	dti/pri-18
REPT	(1)-5	Number of OPCA (R) pulses	dti/pri-14
REQ	CHG END NEW OUT PRT	Request Change existing data block Exit Overlay program Create a new data block Remove data block Print the specified data block	dti/pri-14
SASU	0-32256	Seize Acknowledge Supervision period (in milliseconds) DTI2 default = 1920; JDMI default = 4992	sasu-18

# LD 73

Prompt	Response	Comment	Pack/Rel
SATT	x y  <cr>	Satellite Analog TIE Trunks. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	gpri-18
SDTT	x y  <cr>	Satellite Digital TIE Trunks. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes. Initial values	gpri-18
SEZA (R)	abcd  N	Seize Acknowledgment. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If SEZA (R) not required	abcd-14
SEZA (S)	abcd  N	Seize Acknowledgment. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If SEZA (S) not required	abcd-14
SEZD (R)	abcd	Seize for voice or data calls from a non-SL-1. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	abcd-18
SEZD (R)	abcd  N	Seize for data calls between SL-1s. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If SEZD (R) signal not required	abcd-18
SEZD (S)	abcd  N	Seize for data calls (only recommended for SL-1 to SL-1 applications). For information about your response options, refer to "Signaling category assignment and modification" on page 872. If SEZD (S) not required	abcd-14
SEZV (R)	abcd  N	Seize for voice calls. For information about your response options, refer to "Signaling category assignment and modification" on page 872. If SEZV (R) signals not required	abcd-14

Prompt	Response	Comment	Pack/Rel
SEZV (S)	abcd  N	Seize for voice calls (only recommended for SL-1 to SL-1 applications). For information about your response options, refer to "Signaling category assignment and modification" on page 872. If SEZV (S) not required	abcd-14
SICA	2-16 1 <cr>	Signaling Category If REQ = PRT, then 1 must be input to print default table If REQ = PRT, all signaling tables are printed	abcd-14
SLP	mc mt oc ot	Slip count. Where:  mc = Maintenance threshold slip count 1-(5)-255 mt = Maintenance threshold time default = 24H oc = Out-of-service threshold slip count 1-(30)-255 ot = Out-of-service threshold time default = 1H Threshold times must be one of the following: nnnnT, nnnS, nnnM, or nnH  Where:  nnnn is an integer T,S,M, or H show the increments of use  The time values are as follows:  nnnnT = 20 millisecond increments (nnnn = 20-5000) nnnS = 1 second increments (nnn = 1-240) nnnM = 1 minute increments (nnn = 1-240) nnH = 1 hour increments (nn = 1-24)	dti/pr-14

# LD 73

Prompt	Response	Comment	Pack/Rel
	NS mt dt ct ot	Slip count maintenance threshold. Where: NS = Error count values are in the range: 1-(20)-255 mt = Maintenance threshold time (MNT) (default = 30S) dt = No new data calls threshold time (NNDC) (default = 10S) ct = No new calls threshold time (NNC) (default = 10S) ot = Out-of-service threshold time (OOS) (default = 6S)  <b>Response options for mt, dt, ct, ot:</b> Threshold time entries end in one of the following letters: T, S, M, H. These letters indicate the time increment to be used. Response options for mt, dt, ct and ot are as follows: <ul style="list-style-type: none"><li>• 20T–5000T = 20 millisecond increments</li><li>• 1S–240S = 1 second increments</li><li>• 1M–240M = 1 minute increments</li><li>• 1H–24H = 1 hour increments</li></ul> <b>Important note:</b> The following requirements must be met: mt = >dt = >ct = >ot	dti/prs-14
SOS	abcd	Special Operator Signal. For information about your response options, refer to “Signaling category assignment and modification” on page 872.	abcd-14
	N	Undefined Prompted when OPRC = N.	

Prompt	Response	Comment	Pack/Rel
SREF		Secondary Reference. Prompted when PREF is not free-run.	dti/pa-14
	0-159	Source loop for clock controller (non-Option 11C format)	
	0-254	Systems with Fibre Network Fabric	fnf-25
	l s c	Source from a Basic Rate Interface Trunk (BRIT) S/T Interface Line Card (SILC) (non-Option 11C format)	
		Where:	
		l = 0-156 (loop # must be 0 or a multiple of 4)	
		s = 0-1	
		cc = 0-15	
		The SILC must have DSL 0 defined as a trunk and CLOK = YES in LD 27.	
	1-9	Source card for clock controller (Option 11C format)	
		If source is a Basic Rate Interface Trunk (BRIT) S/T Interface Line Card (SILC) then the SILC must have DSL 0 defined as a trunk and CLOK = YES in LD 27.	
		The loop or card must already be defined in LD 17 at the DLOP prompt.	
	<cr>	Free-running mode. Loop 255 is reserved for free-running mode.	
	X	Precede with X to remove	
SREF CC0	loop	Secondary Reference DTI/PRI loop for Clock controller zero (non-Small System). The response is the loop from which the clock controller will be deriving its secondary clock pulses.	dti/pa-14
	0-254	Systems with Fibre Network Fabric	fnf-25
	1-9	Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the secondary clock reference for the main cabinet (Option 11C)	sipe-25
		If a BRI trunk (BRIT) is the reference source then the SILC must have DSL 0 defined as a trunk and CLOK = YES in LD 27.	
	<cr>	Secondary Reference remains at current setting	
	X	Secondary Reference reverts to the free-run mode	
SREF CC1	loop	Secondary Reference DTI/PRI loop for Clock controller one. The response is the loop from which the clock controller will be deriving its secondary clock pulses. (Large System)	dti/pa-14
	0-254	Systems with Fibre Network Fabric	fnf-25

# LD 73

Prompt	Response	Comment	Pack/Rel
	<cr> X	Secondary Reference remains at current setting Secondary Reference reverts to the free-run mode  The clock controller prompts will only appear for clocks which are valid for the machine type being configured.  The prompts will only appear if the system is in a valid state for the definition of the DTI2/PRI2/BRIT clock controller data (i.e., the 1.5 Mb/s DTI clock references must be unused or in a free-run mode).	
	xx	Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 11-19 for IP expansion cabinet 1</li><li>• 11-14 for Media Gateway 1</li></ul>	sipe-25 basic-1
SREF CC2	xx	Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 21-29 for IP expansion cabinet 2</li><li>• 21-24 for Media Gateway 2</li></ul>	sipe-25 basic-1
SREF CC3	xx	Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 31-39 for IP expansion cabinet 3</li><li>• 31-34 for Media Gateway 3</li></ul>	sipe-25 basic-1
SREF CC4	xx	Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the primary clock reference. Where xx is: <ul style="list-style-type: none"><li>• 41-49 for IP expansion cabinet 4</li><li>• 41-44 for Media Gateway 4</li></ul>	sipe-25 basic-1
SRIM	(1)-127	Slip Rate Improvement Monitoring time (the amount of time in minutes before returning trunks either to service or to the SRGT state)  After the tracking or non-tracking mode frame slippage out-of-service threshold is exceeded, the slip rate is monitored for improvement.  If the non-tracking maintenance threshold exceeds SRMM or fewer times in the duration of this timer, then the trunks are returned to service. Otherwise, this timer is reset and monitoring continues.	dti/pri-15

Prompt	Response	Comment	Pack/Rel
SRMM	1-(2)-127	Slip Rate Maintenance Maximum Number of times the Slip Rate exceeds the maintenance limit while waiting for Slip Rate improvement during the time window specified at the SRIM prompt.	dti/pr-14
SRNT	1-(15)-1024	1-(3)-1024 Slip Rate Non-Tracking mode maintenance and out-of-service thresholds These are frame slip rate thresholds for the non-tracking mode. The first value is the maintenance threshold in seconds. The second value is the out-of-service threshold in seconds, the amount of time in which 10 slips occur.	dti/pr-14
SRTK	1-(5)-24	1-(30)-3600 Slip Rate Tracking mode maintenance (in hours) and out-of-service thresholds (per hour) These are frame slip rate thresholds for the tracking mode. The first value is the maintenance threshold or the elapsed time (in hours) between frame slips. The default is 1 slip in 5 hours. The second value is the out-of-service threshold or the number of slips per hour. The default is 30 slips in 1 hour.	dti/pr-14
SZNI	(NO) YES	PSTN incoming seizure during lockout of MFAS and far-end fault states allowed	
TGLR	(NO) YES	Toggle reserves bits in Frame 0, Timeslot 0. Prompted for JDMI loops.	jdmi-14
TIME	1-(2)-15 1-(8)-15	Pulse on time Pulse off time	
	(100)-150	Time for EOSF (S) (in milliseconds)	abcd-14
	64-(128)-192	Time of OPCA (R) pulse (in milliseconds)	abcd-14
TIME	10-(100)-630	Time of Register Recall signal timer {RRC (S)} in milliseconds. This defines the flash duration for 2.0 Mbit DTI trunks.	emct-20

# LD 73

Prompt	Response	Comment	Pack/Rel
	64-(128)-192	Length of BURS (R) pulse (in milliseconds)	abcd-14
xxxx yyyy	abcd-14	Minimum and maximum time range for OPRS (R) (in milliseconds). Where: xxxx = 8-(48)-2040 yyyy = xxxx-(128)-2040	abcd-14
50 80 90 (150) 800		Delay time for the SEZA signal (in milliseconds)	abcd-14
20-(140)-500 20-(290)-500		Minimum and maximum length of WNKS (R) pulse (in milliseconds).	abcd-14
64-(128)-192		Length of BURS (R) pulse (in milliseconds)	abcd-14
40-(240)-480		Maximum time METR signal can be on (in milliseconds)	
(0)-800	Milliseconds	Prompted when the abcd bits entered in response to the CLFR (S) prompt are different from the abcd bits of the IDLE signal	abcd-14
100-(150) 300		Time value is stored (in multiples of 10 milliseconds)	
150		Timer value in milliseconds is fixed	
(64)-320 64-(256)-320		Length of EOS (R) pulse (in increments of 8 milliseconds)	
96-(128)-320 96-(256)-320		Time (stored in multiples of 8 milliseconds)	
10-(220)-630		Time for P WNKS (S) (in increments of 10ms)	abcd-18

Prompt	Response	Comment	Pack/Rel
	16-(96)-1000	16-(160)-1000 Minimum and maximum acceptable pulse duration (in increments of 8 ms)	
	10-(150) 630	Prompted for pulsed signals (in increments of 10 ms)	
	10-(600)-2000	Prompted for pulsed signals (in increments of 10 ms)	
	10-(600)-2000	Pulse length (in increments of 10 milliseconds)	
	16-(296)-2000	16-(960)-2000 Minimum and maximum acceptable pulse duration (in increments of 8 milliseconds)	
	10-(150)-630	Only prompted for pulsed signals. Pulse length (in increments of 10 milliseconds)	
	16-(136)-504	16-(288)-504 Minimum and maximum length of P WNKS (R) pulse (in increments of 8 milliseconds)	abcd-18
	16-(56)-1000	16-(296)-1000 Only prompted for pulsed signals. Pulse length (in increments of 8 milliseconds)	
	16-(296)-2000	16-(960)-2000 Only prompted for pulsed signals. Pulse length (in increments of 8 milliseconds)	
	10-(600)-2000	Only prompted for pulsed signals. Pulse length (in increments of 10 milliseconds)	
	16-(296)-2000	16-(960)-2000 Only prompted for pulsed signals. Pulse length (in increments of 8 milliseconds)	

# LD 73

Prompt	Response	Comment	Pack/Rel
TNLS		Terminal Number List (for the PRT command)	dti/pa-14
	(NO)	Will not print the list of trunk TNs using the requested table (pad category or SICA) following the table number.	
	YES	Will print the list of trunk TNs using the requested table (pad category or SICA) following the table number.	
TOLL	x y	Toll call pad data on line card. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x = 0 - 31 and y = 8-39.  The values entered are pad values to be used for the 500/2500 TN on the line card connected to the DTI2 call. Valid codes and their corresponding dB values are listed in Table 9 on page 871.	chtl-21
TOLT	x y	Toll call pad data on DTI2 card. Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes.	chtl-21
TRC	x y	Transmission Compensated (Analog TIE). Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes.	dti/pa-14
	<cr>	Initial values	
TRSH	0-15	Threshold set Enter this number in LD 17 when defining a DTI/PRI loop. Use X0-15 to remove TRSH.  <b>Note:</b> The LD 17 DLOP/TRSH associated with this LD 73 TRSH must be removed first.  Precede with X to remove.	dti/pa-19

Prompt	Response	Comment	Pack/Rel
TYPE		Type of data block	dti/pa-14
	BRIL	Basic Rate Interface Line data block with Basic Rate Interface Line Application (BRIL) package 235	
	BRIT	Basic Rate Interface Trunk data block with Integrated Service Digital Network BRI Trunk Access (BRIT) package 233.	
	DDB	1.5 Mb/s DTI data block	dti/pa-14
	DTI	1.5 Mb/s DTI with International 1.5/ 2.0 Mb/S Gateway (GPRI) package 167 data block	grpi-18
	DTI2	2.0 Mb/s DTI data block	
	JDMI	Japan Digital Multiplex Interface data block (not supported on Option 11C)	jdmi-12
	PRI	1.5 Mb/s PRI data block with International 1.5/ 2.0 Mb/s Gateway (GPRI) package 167	grpi-18
	PRI2	2.0 Mb/s PRI data block	
UCFS	abcd	Unequipped Channel Fault Signal - ABCD bits to be sent on unequipped channel.  The default is 1101. Allowable input for each of the four fields is 0 or 1. For information about your response options, refer to "Signaling category assignment and modification" on page 872.	
VNL	x y	Via Net Loss (Analog TIE). Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes.	dti/pa-14
	<cr>	Initial values	
XEM	x y	Extended Peripheral Equipment E&M Trunk (Analog TIE trunk). Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "DTI2 / PRI2 / JDMI data blocks (FEAT = SYTI)" on page 863 for more information about x and y codes.	grpi-18
	<cr>	Initial values	

# LD 73

Prompt	Response	Comment	Pack/Rel
XUT	x y	Extended Peripheral Equipment Universal Trunk (Analog CO trunk). Where x = Rx code (receive) and y = Tx code (transmit). Response range for x and y is: 0-26. See "Default Pad Category 1 values (PDCA 1) (DTI/PRI with GPRI pkg 167)" on page 868 for more information about x and y codes.	gpri-18

---

---

## **LD 74: Digital Private Network Signaling System Link**

---

Overlay program 74 allows data blocks for Digital Private Network Signaling System Number 1 (DPNSS1) and Digital Access Signaling System Number 2 (DASS2) protocols to be created or modified.

## Prompts and responses

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	aaaa	Type of data block (aaaa = DDSL, DTSL, LSSL, LSRC, or LSVC)
LSSL	xx	Low Speed Signaling Link
RATE	a...a	Baud rate for Low Speed Signaling Link (aaaa = (EXT), 110, 150, 300, 600, 1200, 2400, 4800, 9600, 19K, 56K, or 64K)
S2	(0)-1	Switch 2 mode
HTYP	aaaa	Hardware Type (aaaa = DCHI, DCHX, or MSDL)
DDSL	0-n	DPNSS link number
DTSL	0-159	Digital Trunk Signaling Link number
SIGL	DA	Level 2 Signaling (DASS2)
DDCS	x...x	Loop for DPNSS Channel Switch
DTCS	0-159	Digital Trunk Channel Switch loop number
PRIV	(YES) NO	Private link
- SIDE	aaa	Side for Termination (aaa = (AET) or BNT)
- MWIF	a...a	Message Waiting Interface (a...a = (STD) or ISDM]
- SAT	(NO) YES	Satellite
-- NT2	1-(26)-100	Post retransmission acknowledgment delay.
L2_RST	(YES) NO	Indicates if Layer 2 could be reset during a system initialize.
FLOW CNTL	(NO) YES	Flow Control
- BRST PARM	xx	Burst Parameter set on public network (xx = (0) 4, 8, 16, or 32)
-- REPL PARM	x	Replenishment Parameter set on public network (x = 1, 2, 4, or 8)
CNTL	(NO) YES	Change Control timers and counters
- ALRM	aaa pp mm cc	Alarm timers (aaa = AIS, DAI, FAE, HER, LOI, TBF, or TSF; pp = persistence time; mm = monitor time; cc = repeat threshold time)
- CNTR	aaa x	Counter threshold (aaa = CRT, TMT, or SCT; x = threshold value)

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ALRM		Alarm timers. For the following response alternatives, pp = Persistence time, mm = Monitor time and cc = Repeat count threshold.	dpnss1/dass2-16
	AIS pp mm cc	Alarm Indication Signal Where: pp = 0-(1)-15 minutes, mm = 0-(1)-24 hours and cc = 0-(4)-15.	
	DAI pp mm cc	Distant Alarm Indication Where: pp = 0-(1)-15 minutes, mm = 0-(1)-24 hours and cc = 0-(5)-15.	
	FAE pp mm cc	Frame Alignment Error Where: pp = 0-(2)-15 seconds, mm = 0-(1)-24 hours and cc = 0-(4)-15.	
	HER pp mm cc	High Error Where: pp = 0-(1)-15 minutes, mm = 0-(1)-24 hours and cc = 0-(10)-15.	
	LOI pp mm cc	Loss Of Input Where: pp = (0)-15 seconds, mm = (0)-24 hours and cc = (0)-15.	
	TBF pp mm cc	Transmit Buffer Full Where: pp = 0-(5)-15 seconds, mm = (0)-24 hours and cc = 0-(1)-15.	
	TSF pp mm cc	Transmit Signaling Failure Where: pp = (0)-15 seconds, mm = (0)-24 hours and cc = (0)-15.	
BRST PARM xx		Burst Parameter set on public network. You may respond with: (0), 4, 8, 16, or 32.	dpnss1/dass2-16
CNTL	(NO) YES	Do not change Control timers and counters Change Control timers and counters	dpnss1/dass2-16

# LD 74

Prompt	Response	Comment	Pack/Rel
CNTR	CRT 0-(120)-255 TMT 0-(50)-255 SCT 0-(20)-255	Counter threshold Channel Reset Threshold Test Message Threshold Stop Count Threshold If 255 is entered, the threshold is set to infinity.	dpnss1/dass2-16
DDCS	xxx	Loop for DPNSS Channel Switch Where xxx is: <ul style="list-style-type: none"><li>• 0-159</li><li>• 1-9, 11-19, 21-29, 31-39, 41-49 (Small System)</li><li>• 11-14, 21-24, 31-34, 41-45 for Succession 1000</li></ul> DDCS is prompted when TYPE = DDSL.	dpnss1/dass2-16  sipe-25  basic-2
DDSL	0-n	DPNSS link number. Where: n = 15 for NT5K35AA or NT5K75AA in standard mode (S2 = 0) n = 159 for NT5K75AA in expanded mode (S2 = 1)  DDSL: is prompted when TYPE = DDSL.	dpnss1/dass2-16
DTCS	0-159	Digital Trunk Channel Switch loop number Prompted when TYPE = DTSL. (Large System)	dass2-16
DTSL	0-159	Digital Trunk Signaling Link number. Prompted when TYPE = DTSL. (Large System)	dass2-16
FLOW CNTL	(NO) YES	Flow Control FLOW CNTL is prompted if PRIV = NO.	dpnss1/dass2-16
HTYP		Hardware Type	dpnss_es-21
	DCHI	DPNSS1, DASS2 or APNSS link configured with the NT5K35 DCHI card or on the NT5K75 DCHI card in standard mode.	
	DCHX	DPNSS1 or DASS2 link configured with the NT5K75 DCHI card in the expanded mode.	
	MSDL	DPNSS1, DASS2 or APNSS link configured with the MSDL card.	

Prompt	Response	Comment	Pack/Rel
L2_RST	(YES) NO	Indicates if Layer 2 could be reset during a system initialize. On certain systems, for example System Y and SX2000, established calls would be released if the Layer 2 is reset during an initialize. This prompt should only be set to NO when using NTAG54AA type Dual DCH Daughter board on a NTCK43AB DCH PRI card.  Note: If this Option is set to NO on an NT6D11 type card, the card would be left disabled after the initialize.	ida- 23
LSSL	xx	Low Speed Signaling Link Link number identifying the D-channel to be used for APNSS.	dpnss1-18
MWIF	(STD) ISDM	Message Waiting Interface Standard message waiting interface Plessey ISDX switch with remote message notification	samm-20
NT2	1-(26)-100	Minimum post retransmission acknowledgment delay.  This is the minimum period of time after the expiry of NL and NTI that the system will wait for acknowledgment before reporting a retransmission failure to level 3 in 20 ms units.	dpnss_es-21
PRIV	(YES) NO	For a Private link to another PBX For a link to the public exchange Not prompted for APNSS.	dpnss1/dass2-16
RATE	(EXT) 110 150 300 600 1200 2400 4800 9600 19K 56K	Baud Rate for Low Speed Signaling Link  110 bits per second 150 bits per second 300 bits per second 600 bits per second 1200 bits per second 2400 bits per second 4800 bits per second 9600 bits per second 19 kilobits per second 56 kilobits per second	dpnss1/dass2-18

# LD 74

Prompt	Response	Comment	Pack/Rel
	64K	64 kilobits per second	
REPL PARM		Replenishment Parameter set on public network.	dpnss1/dass2-16
	x	You may enter: 1, 2, 4, or 8.	
REQ		Request	basic-1
	CHG	Change existing data block.	
	END	Exit Overlay program	
	NEW	Create a new data block	
	OUT	Remove data block	
	PRT	Print data block	
S2		Switch 2 mode (the mode selected with the switch S2 located on the NT5K75AA DCHI card)	dpnss1/dass2-16
	(0)	NT5K35AA DCHI card or NT5K75AA DCHI card operating in standard mode	
	1	NT5K75AA DCHI card operating in expanded mode	
SAT	(NO) YES	Satellite	dpnss_es-21
SIDE	(AET) BNT	A Side (Exchange Termination) B Side - PBX Termination	dpnss1/dass2-16
SIGL	DA	Level 2 Signaling (DASS2)	dpnss1/dass2-16
TYPE		Type of data block	dpnss1/dass2-16
	DDSL	DPNSS Link (NT hardware) data block	
	DTSL	Digital Trunk Signaling Link (GPT hardware) data block. Not supported on Small System.	
	LSSL	Low Speed Signaling Link data block. Required for APNSS.	
	LSRC	Low Speed Channel data block. Accepted when REQ=PRT.	
	LSVC	Low Speed Virtual Channel data block. Accepted when REQ=PRT.	

---

---

## LD 79: Virtual Network Service

---

Overlay program 79 allows the implementation of Virtual Network Services feature.

# LD 79

## Prompts and responses

---

Prompt	Response	Comment
REQ	aaa	Request
TYPE	aaa	Type of data block
CUST	xx	Customer number
VNDN	1-4000 n...n	Number of contiguous VNS Directory Numbers
<p>When REQ = OUT and VNDN = XALLVNDNS., the switch outputs the following: REMOVE ALL VDN BLOCKS? The following prompt then appears:</p>		
CONF	(NO) YES	(Deny) Confirm intent to remove all VDN blocks

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
CONF	(NO) YES	Confirm Deny intent to remove all VDN blocks Confirm intent to remove all VDN blocks CONF is prompted if REQ = OUT and VNDN = XALLVNDNS.	vns-22
CUST	xx	Customer number associated with this function as defined in LD 15	basic-1
REQ	CHG DIS  END ENL NEW OUT PRT	Request Change existing data block Disable a block of contiguous VDN to prevent the use of a VDN in this block Exit Overlay program Enable a block of contiguous VDN Create Virtual Network Service data block Remove Virtual Network Service data block Print Virtual Network Service data block	basic-1
TYPE	VNS	Type of data block Virtual Network Service data block	basic-1
VNDN	1-100 n...n  x...x  1-4000 xxxxxxxx  XALLVDNS	Number of contiguous VNS Directory Numbers, and first VNS DN Individual VDN. This entry is accepted if REQ = NEW, OUT, DIS or ENL. Number of contiguous VDNs and first VDN. This entry is accepted if REQ = NEW. Remove all VNS data blocks. This entry is accepted if REQ = OUT. VNDN is reprompted until a carriage return is entered.	vns-16

# LD 79

Page 924 of 1134 LD 79: Virtual Network Service

---

---

## LD 81: Features and Station Print

---

Overlay program 81 is used to print a list or count of telephones with selected features. It also allows last service change date information to be printed.

A TN which is the Multiple Appearance Redirection Prime (MARP) is indicated by an “M” following FEAT (when TYPE = MCN, SCN, MCR, or SCR).

# LD 81

## Prompts and responses

---

Prompt	Response	Comment
REQ	aaa	Request (aaa = LST, CNT, or END)
CUST	xx xx	One Customer or a range of Customer numbers
DATE	a...a	Print data from activity date specified (You may enter: dd mmm yyyy or ACT)
PAGE	(NO) YES	Data printed on a per page basis
DES	d...d	1-6 alphanumeric character Office Data Administration System
FEAT	aaaa	Features requested (FEAT responses begin on page 927)
- HMDN	x..x	Home Directory Number
SGRP	0-999 0-999	Station Group
RNPG	xx yy	Ringling Number Pick Up Group
LSNO	xx yy	List Number
NCOS	xx yy	Network Class of Service
ZONE	(0)-255 (0)-255 (0)-255 <cr>	Branch Office Zone Range of Zones All Zones
- ADJUST PAPER THEN <cr>	<cr>	Starts printing
NACT	(NO) YES	Next Activity

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ADJUST PAPER THEN	<cr>	Starts printing Prompted when PAGE = YES	basic-1
CUST	xx xx <cr>	One Customer or a range of Customer numbers associated with this function as defined in LD 15 All Customers	basic-1
DATE	dd mmm yyyy	Print data from activity date specified. Where: dd = day (0-31) mmm = month (JAN-DEC) yyyy = year	basic-1
	ACT <cr>	Print data from last Activity date. Disregard date restrictions.	
DES	d...d  dddd d+ + <cr>	1-6 alphanumeric character Office Data Administration System (ODAS) Station Designator Print data for stations with specific DES. Print data for stations with a DES starting with d. Print data for all stations with no DES. Print data for all stations.	odas-1
FEAT		Features requested  Enter a specific feature mnemonic or one the following for groups of features: ALL, COS, DNK, SETS, SCL, RNP or 500.  FEAT is repeated until <cr> is entered.	basic-1
	2000	All M2000 telephones	dset-7
	3000	M3000 Touchphone	tset-7
	4020	M4020 telephone (no longer supported)	basic-8
	500	500/2500 type telephone	basic-1
	3900	M3901, M3902, M3903, M3904, M3905 Print both MNL and DIP telephones. 2500 type telephones are requested by DTN entry.	basic-24
	2002	All i2002 telephones	basic-3.0
	2004	All i2004 telephones	basic-3.0
	2050	All i2050 telephones	basic-3.0

# LD 81

Prompt	Response	Comment	Pack/Rel
AAA		Automatic Answerback Allowed	aab-1
AAD		Automatic Answerback Denied	
AAG		Answer call from Agent key	
AAK		Automatic Answerback Key	aab-1
ABDA		Abandoned call record and time to answer Allowed	supp-18
ABDD		Abandoned call record and time to answer Denied	
ACD		ACD in calls key	bacd-1
ACNT		Assignment of activity codes allowed	bacd-13
ADD		Automatic Digit Display equipped	ddsp-1
ADL		Autodial key	optf-1
ADV		Data port Verification allowed	bacd-5
AGN		ACD Agent	bacd-1
AGT		ACD Agent's key	
AGTA		ACD services for 500/2500 telephone Allowed	bacd-16
AGTD		ACD services for 500/2500 telephone Denied	
AHA		Automatic Hold Allowed	supp-10
AHD		Automatic Hold Denied	
ALL		All features  When REQ = LST, only the features actually programmed on telephones are listed along with the associated TN. Features not listed are RNPk, DIP and MNL.  When REQ = CNT, features available in the system software are listed even if they are not programmed on any telephone. Not listed are RNPk, 500, 2500, SL-1, 2000, and 3000.	basic-1
AMG		ACD Answer/Monitor Emergency call key	supp-14
AO3		Three-party conference key	basic-1
AO6		Six-party conference key	

Prompt	Response	Comment	Pack/Rel
	ARC	Attendant Recall key	basic-1
	ARHA	Audible Reminder of Held Call Allowed	basic-14
	ARHD	Audible Reminder of Held Call Denied	
	ASCA	Alarm Security Allowed	ohas-18
	ASCD	Alarm Security Denied	
	ASP	ACD Answer Supervisor call key	iani-14
	ATW	ACD Call Waiting time indication key	
	AUTD	Authorization Code Denied	ssau-19
	AUTR	Authorization Code Restricted	
	AUTU	Authorization Code Unrestricted	
	AWC	ACD Calls Waiting display key	
	BFEA	Boss Secretary Filtering Enhancement Allowed	ffcsf-24
	BFED	Boss Secretary Filtering Enhancement Denied	
	BFS	Busy Forward Status key	bfs-20
	BNRA	Busy Number Redial Allowed	ffc-21
	BNRD	Busy Number Redial Denied	
	BRCA	Recall to boss Allowed	ffcsf-24
	BRCD	Recall to boss Denied	
	C6A	Six-Party Conference Allowed	basic-10
	C6D	Six-Party Conference Denied	
	CA	Combined No Hold Conference and Autodial	basic-14
	CAS	Centralized Attendant Service	casm-1
	CCBA	Collect Call Blocking Allowed	ccb-21
	CCBD	Collect Call Blocking Denied	
	CCOS	Controlled Class of Service key	ccos-7
	CCSA	Controlled Class of Service Allowed	
	CCSD	Controlled Class of Service Denied	
	CDCA	Conferee Display Count Allowed	basic-23
	CDCD	Conferee Display Count Denied	
	CDMA	Station Activity Records Allowed	mct-20

# LD 81

Prompt	Response	Comment	Pack/Rel
	CDMD CFHA CFHD	Station Activity Records Denied List/count sets with CFHA CLS List/count sets with CFHD CLS	cfho-20
	CFTA CFTD	Call Forward by Call Type Allowed Call Forward by Call Type Denied	basic-10
	CFW	Call Forward key	basic-1
	CFXA CFXD	Call Forward number to External DN Allowed Call Forward number to External DN Denied	basic-10
	CHD	Combined No Hold Conference and Direct Hot Line	basic-14
	CHG	Charge Account key	fca-1
	CHL	Combined No Hold Conference and Hot Line list	basic-14
	CLT	Callers List key	basic-25.4
	CLTA CLTD	Network Call Trace Allowed Network Call Trace Denied	basic-17
	CMSA	Command and Status link Allowed	csl-8
	CNAA	CLASS Calling Name Multiple Data Format Allowed.	cname- 23
	CNAD	CLASS Calling Name Denied.	cname- 23
	CNDA CNDD	Call Party Name Display Allowed Call Party Name Display Denied	cpnd-10
	CNIA CNID	Call Number Identification Allowed Call Number Identification Denied	pra-12
	CNTA CNTD	Network ACD Countdown Allowed Network ACD Countdown Denied	nacd-15
	CNUA	CLASS Calling Number Multiple Data Format Allowed.	cnumb- 23
	CNUD CNUS	CLASS Calling Number Denied. CLASS Calling Number Single Data Format Allowed.	cnumb- 23 cnumb- 23

Prompt	Response	Comment	Pack/Rel
	COS	Print stations with Class of Service restrictions. These are telephones with equipped with C6A, C6D, CMSA, CNDA, CNDD, CTD, CUN, DSI, FRE, FR1, FR2, NCOS, SFA, SFD, SRE, TLD, TTA, TTD, UNR and VMA.	basic-1
	CPFA CPFD	Forced Camp-On from another set Allowed Forced Camp-On from another set Denied	povr-15
	CPN	Display Calling Party Number key	cpnd-10
	CPTA CPTD	Forced Camp-On to another set Allowed Forced Camp-On to another set Denied	ffc-15
	CRA CRD	Continuous Ring Allowed Continuous Ring Denied	basic-14
	CS	Combined No Hold Conference and Speed Call	
	CSD	Conferee Selectable Display key	basic- 23
	CTD CUN	Conditionally Toll Denied Conditionally Unrestricted	basic-1
	CWA CWD CWT	Call Waiting Allowed Call Waiting Denied Call Waiting key	basic-1
	DAG	ACD Display Agents key	bacd-1
	DAPA DAPD	Display of Access Prefix Allowed Display of Access Prefix Denied	isdn-24
	DCFW	Default call forward for Phantom TNs Report includes Virtual and Host terminals	phtn-20 arie-25
	DDGA DDGD	DN Display on other set Allowed DN Display on other set Denied	sdd-21
	DDS	Digit Display allowed	ddsp-1
	DDV	Data port Verification denied	amp-5
	DELA DELD	Dealer Allowed Dealer Denied	ohol-20

# LD 81

Prompt	Response	Comment	Pack/Rel
	DIG	Dial Intercom Group	di-1
	DIP	Dial Pulse telephone (500 type)	bssic-1
	DLO	Digital Long line COS	ftc-16
	DNAA	ANI DN used as the customer Listed Directory number	cist-21
	DNAD	Outgoing CDTI2/CSDTI2 route used as DN in ANI message	
	DNDA DNDD	Dialed Name Display Allowed Dialed Name Display Denied	cpnd-13
	DNK	Telephones with MCN, MCR, SCN, and SCR keys	basic-1
	DPU	DN Pickup key	grp-1
	DPUA DPUD	DN Pickup Allowed DN Pickup Denied	dcp-12
	DRC	DID Route Control	basic-14
	DRDA DRDD	Distinctive Ringing by Directory Number Allowed. Distinctive Ringing by Directory Number Denied.	edrg-24
	DRG1 DRG2 DRG3 DRG4	Digital telephone Distinctive Ringing (high/fast) Digital telephone Distinctive Ringing (high/slow) Digital telephone Distinctive Ringing (low/fast) Digital telephone Distinctive Ringing (low/slow)	drng-7
	DSH	Digital Short line COS	ftc-16
	DSI	Data Service access or IS Server TN allowed	xcti-16
	DSP	Digit Display key	ddsp-1
	DTA	Data set	basic-5
	DTN	Digitone dial telephone (2500 type)	basic-1
	DWC	ACD Display Waiting Calls key	bacd-1
	ELA	Erase Lists Allowed	basic-25.4

Prompt	Response	Comment	Pack/Rel
	ELD	Erase Lists Denied	
	EOVR	Enhanced Override key	povr-15
	FAXS	Facsimile servers	faxs-18
	FBA FBD	Call Forward Busy Allowed Call Forward Busy Denied	optf-1
	FITA FITD	Flexible Incoming Tones Allowed Flexible Incoming Tones Denied	basic-14
	FLXA FLXD	Flexible voice/data TN allowed Flexible voice/data TN denied	digital_set-22
	FNA FND	Call Forward No Answer Allowed Call Forward No Answer Denied	basic-1
	FR1 FR2 FRE	Fully Restricted class 1 Fully Restricted class 2 Fully Restricted	basic-1
	FRN	French language display for M2317	dlt2-12
	FTTC FTTR FTTU	Flexible Trunk to Trunk Connections Conditional Flexible Trunk to Trunk Connections Restricted Flexible Trunk to Trunk Connections Unrestricted	basic-23 basic-23 basic-23
	GHD	Group Hunt Denied key	grp-1
	GPU	Group Call Pickup key	dcp-12
	GPUA GPUD	Group call Pickup Allowed Group call Pickup Denied	dcp-12
	GRC	Group Recall key	grp-1
	HBTA HBTD	Hunt by call Type Allowed Hunt by call Type Denied	supp-10
	HFA HFD	Handsfree Allowed M2616 Handsfree Denied M2616	arie-14
	HLD	LOGIVOX Telephone Hold key	supp-10

# LD 81

Prompt	Response	Comment	Pack/Rel
	HOTD HOTL	Enhanced Hot Line, Direct entry method Enhanced Hot Line, List entry method	hot-10
	HPR	High Priority station	basic-1
	HSPA HSPD	Hospitality Management Allowed Hospitality Management Denied	hosp-16
	HSTA HSTD	Host Terminal Allowed Host Terminal Denied	arie-25
	HTA HTD	Hunting Allowed Hunting Denied	basic-1
	HTL	Hot Line	hot-10
	i2004	Internet Telephone	basic-25
	IAMA	ICP Answering Machine Denied/Allowed	icp-16
	ICDA ICDD	Internal CDR Allowed Internal CDR Denied	icdr-10
	ICF	Internal Call Forward key	icf-19
	IMA	IMS or IVMS Allowed	ims-2
	IMM	Immediate	xct1-16
	IPNA	Intercept Position Allowed	icp-14
	IRA IRD	Incoming Ringing line preference Allowed Incoming Ringing line preference Denied	1sel-4
	IRGA	Interrogation Set Allowed	icp-14
	ITGE	Incoming Trunk Group Exclusion	baut-10
	KLS	Key/lamp Strip	basic-1
	LDN	Listed Directory Number (DN)	dldn-12
	LDTA LDTD	Line Disconnect Tone allowed Line Disconnect Tone denied	basic-17

Prompt	Response	Comment	Pack/Rel
	LED	LED state for ACD agents	supp-10
	LLC1	Line Load Control level 1	11c-10
	LLC2	Line Load Control level 2	
	LLC3	Line Load Control level 3	
	LLCA	Line Load Control Allowed	
	LLCN	Line Load Control off	
	LMPN	Red LED on Meridian Modular Telephone reflects the status of the mailbox associated with the PDN	vmba-24
	LMPX	Red LED on Meridian Modular Telephone reflects the status of the mailbox associated with the PDN and non-PDNs	
	LNA	Last Number Redial Allowed	1nr-8
	LND	Last Number Redial Denied	
	LNK	Last Number Redial Key	
	LOL	Long Line Class of Service	xops-20
	LPA	Message Waiting lamp Allowed	mwc-1
	LPD	Message Waiting lamp Denied	mwc-1
	LPR	Low Priority station	basic-1
	LSPK	Loudspeaker key	ohol-20
	LVXA	LOGIVOX Telephone Allowed	supp-10
	LVXD	LOGIVOX Telephone Denied	
	MBXD	Multi-Party Operation (MPO) Blind Transfer Denied.	mpo-21
	MBXA	Multi-Party Operation (MPO) Blind Transfer Allowed. Multi-Party Operations (MPO) package 141 must be equipped to enter MBXD or MBXA.	
	MCBY	Set linked to a MICB line card.	basic-25
	MCBN	Set linked to a non-MICB line card.	
	MCD	Message Center DN	mwc-1
	MCK	Message Cancellation Key	
	MCN	Multiple Call Non-Ringing DN	basic-1
		A TN which is the Multiple Appearance Redirection Prime (MARP) for the DN is indicated by an "M" in the output (MCN M).	

# LD 81

Prompt	Response	Comment	Pack/Rel
	MCR	Multiple Call Ringing DN A TN which is the Multiple Appearance Redirection Prime (MARP) for the DN is indicated by an "M" in the output (MCN M).	basic-1
	MCRA MCRD	Multiple Call Arrangement Allowed Multiple Call Arrangement Denied	supp-15
	MCTA MCTD	Malicious Call Trace Allowed Malicious Call Trace Denied	mct-10 mct-19
	MIK	Message Indication Key	mwc-1
	MINA MIND	Message Intercept Allowed Message Intercept Denied	mint-15
	MISA MISD	Make Set Busy Improvement Allowed Make Set Busy Improvement Denied	msb-24 msb-24
	MLNG	Language Selection	basic-25.4
	MMA MMD	Multimedia Allowed Multimedia Denied	ngen-24 ngen-24
	MNL	Manual service	basic-1
	MMA MMD	Multimedia Messaging Allowed Multimedia Messaging Denied	
	MON	TN(s) Monitored by at least one BFS key	bfs-20
	MRA MRD	Message Registration Allowed Message Registration Denied	mr-10
	MSB	Make Set Busy key	msb-1
	MSID MSIA	Make Set Busy Improvement Denied Make Set Busy Improvement Allowed	msb-24
	MTA	Maintenance set Allowed	basic-1
	MWA MWD MWK	Message Waiting Allowed Message Waiting Denied Message Waiting key	mwc-1

Prompt	Response	Comment	Pack/Rel
	NAMA	Name display on other set Allowed	sdd-21
	NAMD	Name display on other set Denied	
	NCOS	Network Class of Service (COS)	ncos-1
	NDD	No Digit Display	ddsp-1
	NHC	No Hold Conference	basic-14
	NIA	Incoming non-ringing line preference Allowed	1se1-4
	NID	Incoming non-ringing line preference Denied	1se1-4
	NKL	Notification Key Lamps	drng-7
	NRCA	Forced Camp-On night class restriction Allowed	supp-16
	NRCD	Forced Campon night class restriction Denied	
	NRD	ACD Not Ready key	bacd-1
	NROA	Priority override night class restriction Allowed	supp-16
	NROD	Priority override night class restriction Denied	
	NRWA	Call Waiting Night class restriction Allowed	supp-16
	NRWD	Call Waiting Night class restriction Denied	
	NSVC	ACD Night Service key for Supervisor Control	bacd-12
	OBV	ACD Observe agent key	
	OCBA	Outgoing Call Barring Allowed	ccb-21
	OCBD	Outgoing Call Barring Denied	
	OLA	Outgoing Line preference Allowed	1se1-4
	OLD	Outgoing Line preference Denied	
	ONS	On Premise Station	xops-20
	OPS	Off Premise Station	xops-20
	OSN	On Site Notification key. OSN is accepted as valid input only if the system is ESA and ESA_SUPP package equipped.	esa- 23
	OVB	Attendant Overflow position	aop-1

# LD 81

Prompt	Response	Comment	Pack/Rel
	OVDA	Override Allowed (500/2500 telephone)	ffc-15
	OVDD	Override Denied (500/2500 telephone)	
	OVR	Override key	basic-1
	PDN	Prime Directory Number release 22.	pra-12
	PEPE	Prints all TNs and cards configured on PE/EPE shelves.	basic-3.0
	(PGND)	Deny PAGENET access	pagenet-22
	PGNA	Allow PAGENET access	
	PHD	Permanent Hold	basic-4
	POA	Optional Privacy Allowed	basic-1
	POD	Optional Privacy Denied	
	PRK	Park key	cprk-2
	PRS	Privacy Release key	basic-1
	PRSA	Priority Call Pickup Allowed	supp-15
	PRSD	Priority Call Pickup Denied	
	PUA	Call Pickup Allowed	grp-1
	PUD	Call Pickup Denied	
	PVN	Private Line Non-ringing phantom DN	basic-1
	PVR	Private Line Ringing phantom DN	
	RAG	ACD Call Agent key	
	RBDA	Redirection By Day Allowed	basic-24
	RBDD	Redirection By Day Denied	
	RBHA	Redirection By Holiday Allowed	basic-24
	RBHD	Redirection By Holiday Denied	
	RCC	Restricted from Receiving Collect Calls	supp-10
	RCK	Ringin Change Key	rck-15
	RDI	Restricted from receiving DID calls	supp-10
	RDL	Stored Number Redial	basic-14

Prompt	Response	Comment	Pack/Rel
	RDLA	Automatic Redial call Allowed	ardl-22
	RDLA	Automatic Redial call Denied	
	RGA	Ring Again key	optf-1
	RLFA	Reversed Lamp Flash Allowed	supp-10
	RLFD	Reversed Lamp Flash Denied	
	RLS	Release key	basic-1
	RLT	Redial List key	basic- 25.4
	RMMA	Remote Monitoring of Messages Allowed	vmba-24
	RMMD	Remote Monitoring of Messages Denied	
	RMMO	Allow Remote Monitoring of Messages and to Override, if it is being already monitored	
	RMWK	Remote Message Waiting indication key	vmba-24
	RNP	Ringin Number Pickup (includes PUA, PUD and RNPK)	grp-1
	RNPK	Ringin Number Pickup key	grp-1
	RPA	Radio Paging Allowed	rpa-15
	RTDA	Call Redirection by Time of day allowed	basic-22
	RTDD	Call Redirection by Time of day denied	
	SAR	Scheduled Access Restriction	sar-20
	SCC	Speed Call Controller	optf-1
	SCI	Station Category Indication Priority Level	sci-7
	SCL	Speed Call (includes SCU and SCC)	optf-1
	SCN	Single Call Non-ringing DN	basic-1
		A TN which is the Multiple Appearance Redirection Prime (MARP) for the DN is indicated by an "M" in the output (MCN M).	

# LD 81

Prompt	Response	Comment	Pack/Rel
	SCR	Single Call Ringing DN A TN which is the Multiple Appearance Redirection Prime (MARP) for the DN is indicated by an "M" in the output (MCN M).	basic-1
	SCU	Speed Call User	optf-1
	SETS	All telephones	basic-1
	SFA SFD	Second level Forwarding Allowed Second level Forwarding Denied	optf-10
	SHL	Short Line Class of Service	xops-20
	SIG	Buzz key to phantom DN	basic-1
	SL1	SL-1 stations	basic-1
	SMSA SMSD	Standalone Mail Server Allowed Standalone Mail Server Denied	samm-20
	SMWD SMWA	Extended message waiting indication denied. Extended message waiting indication allowed.	mw-24
	SNR	Stored Number Redial	ffc-15
	SPKA SPKD	Speaker Class of Service Allowed Speaker Class of Service Denied	ohol-20
	SPV	ACD Supervisor	acdb-1
	SRE	Semi-Restricted	basic-1
	SSC SSU	System Speed Call Controller System Speed Call User	optf-1
	SWA SWD	Station-to-Station Call Waiting Allowed Station-to-Station Call Waiting Denied	basic-8
	TAD	Time And Date key	ddsp-1
	TDD	Touchphone Display	tset-7

Prompt	Response	Comment	Pack/Rel
THF		Centrex Trunk Switchhook Flash	thf-14
THFA		Centrex Trunk Switchhook Flash Allowed (500/ 2500 telephones)	
THFD		Centrex Trunk Switchhook Flash Denied (500/ 2500 telephones)	
TLD		Toll Denied	basic-1
TRC		Malicious Call Trace key	mct-10
TRN		Call Transfer key	basic-1
TSA		Three-Party Service Allowed	mpo-21
TVA		Trunk Verification Allowed	basic-1
TVD		Trunk Verification Denied	basic-1
UCC		Unrestricted from Receiving Collect Calls	supp-10
UDI		Unrestricted from receiving DID calls	
ULAA		User Level Access Allowed for set based administration	adminset-21
ULAD		User Level Access Denied for set based administration	
UNR		Unrestricted	basic-1
USR		User Selectable Call Redirection key	uscr-19
USRA		User Selectable Call Redirection allowed	
USRD		User Selectable Call Redirection denied	
UST		Telephone Status feature	iap3p-13
VCC		Voice Call to phantom DN	basic-1
VCE		Voice set	basic-5
VDN		LOGIVOX telephone Volume Down	supp-10
VMA		Server Voice Messaging Allowed	csi-8
VOLA		Virtual Office login operation is allowed on this TN	
VOLD		Virtual Office login operation is denied on this TN For Succession 1000	basic-2

# LD 81

Prompt	Response	Comment	Pack/Rel
	VOUA VOUD	Allow other user to virtually login onto this TN Deny other user to virtually login onto this TN For Succession 1000	basic-2
	VSIT	DECT visitors	msmn-25
	VUP WTA WTD	LOGIVOX telephone Volume Up Warning Tone Allowed Warning Tone Denied	supp-10 basic-1
	WUK	Guest entry of Automatic Wake Up key	gewu-16
	XFA XFD	Call Transfer Allowed Call Transfer Denied	basic-1
	XHA XHD	Exclusive Hold Allowed Exclusive Hold Denied	dhld-4
	XMWD XMWI	Extended Message Waiting indication Denied Extended Message Waiting indication Allowed	vmba-24
	XMWK	Extended Message Waiting indication key	vmba-24
	XRA XRD	Ring Again Allowed Ring Again Denied	optf-1
	ZONE	Branch Office zone(s) For Succession 1000	basic-2
HMDN	x..x	Home Directory Number	msmn-25
MLNG	a...a	To print telephones with a language selection matching the language in the response to the MLNG prompt.  Where:  a...a = ENG, FRE, GER, DUT, SPA, ITA, NOR, SWE, DAN, POR, FIN, POL, CZE, HUN, JAP, RUS, LAT, TUR.	basic-25.4

Prompt	Response	Comment	Pack/Rel
LSNO	0-8190 0-8190	List Number. One Speed Call List Number or a range of list numbers	basic-1
	<cr>	Print all lists. LSNO is prompted when FEAT is SCL, SCU, SCC, SSC, SSU or CS.	
NACT	(NO) YES END	Next Activity Return to REQ prompt. Print current system data and exit overlay. Exit Overlay program.	odas-1
NCOS		Network Class of Service. NCOS is prompted when FEAT = COS or NCOS.	basic-1
	0-3 0-3	One NCOS group number or a range of group numbers when CDP equipped	
	0-7 0-7	One NCOS group number or a range of group numbers when BARS or NFCR equipped	
	0-15 0-15	One NCOS group number or a range of group numbers when NARS equipped	
	0-99 0-99	One NCOS group number, or a range of group numbers for all features	
PAGE	(NO) YES	Data printed on a per page basis	basic-1
REQ	CNT	Request Print a count of telephones equipped with the features specified in response to the FEAT prompt.	basic-1
	END LST	Exit Overlay program. List telephones equipped with the features specified in response to the FEAT prompt.	

# LD 81

Prompt	Response	Comment	Pack/Rel
RNPG	0-255 0-255	Ringin Number Pickup Group. One Ringin Number Pickup Group number or a range of group numbers	basic-1
	0-4095 0-4095		
	<cr>	Ringin Number Pickup Group: Print all groups.  RPNG is prompted when FEAT = RNP, RNPK, PUA, PUD, DPU, DPUA, DPUD, GPU, GPU A or GPUD.	
SGRP	0-999 0-999	Station Group One station group number or a range of station group numbers	sar-20
ZONE	(0)-255 (0)-255 (0)-255 <cr>	Branch Office Zone Range of Zones All Zones For Succession 1000	basic-2

---

---

## LD 82: Print Hunt Chain, Multiple Appearance Group

---

Overlay program 82 allows the printing of hunting patterns and Multiple Appearance groups for system stations.

Refer to the *Office Data Administration System: Description and Engineering* (553-3001-352) for detailed information regarding printouts for multiple appearance DNs, single appearance DNs appearing on telephones with multiple appearance DN, and hunting patterns.

A TN which is the Multiple Appearance Redirection Prime (MARP) is indicated by an “M” preceding the TN in the output.

# LD 82

## Prompts and responses

---

Prompt	Response	Comment
REQ	aaa	Request (aaa = EHT, END, HNT, MAG, MAP)
CUST	xx xx	Customer number or range of customer numbers
DATE	a...a	Print data from activity date specified or last activity date (You may enter: dd mmm yyyy or ACT)
PAGE	(NO) YES	Data printed on a per-page basis
DES	a...a	Print all telephones with DES "dddddd"
DN	xxxx	Print specific DN
- ADJUST PAPER THEN	<cr>	
	<cr>	Starts printing
NACT	(NO) YES	Next Activity

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ADJUST PAPER THEN	<cr> <cr>	Starts printing. Prompted when PAGE = YES	basic-1
CUST	xx xx <cr>	Customer number or range of customer numbers Print data for all customers.	basic-1
DATE	dd mmm yyyy	Print data from activity date specified. Where: dd = day (0-31) mmm = month (JAN-DEC) yyyy = year	basic-1
	ACT <cr>	Print data from last activity date. Disregard date restrictions.	
DES	dddddd d+ + <cr>	Print all telephones with DES "dddddd" Print all telephones with DES "d" Print all telephones with no DES assignment Disregard DES	odas-1
DN	xxxx xxxx xxxx ALL <cr>	Print specific DN Print range of DNs Print data when REQ = MAG or MAP Print data for all DNs DN may be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.	basic-1
NACT	(NO) YES END	Next Activity Return to REQ prompt Print current system data and exit Overlay Exit Overlay program	odas-1
PAGE	(NO) YES	Data printed on a per-page basis	basic-1
REQ	EHT END HNT	Request External Hunting pattern (except regular and short hunting) Exit Overlay program Hunting pattern (except short hunting and EHT)	basic-1

# LD 82

Prompt	Response	Comment	Pack/Rel
	MAG	Multiple Appearance Groups Print Multiple Appearance Groups including all Single Appearance DNs assigned on telephones having Multiple Call Assignments.	
	MAP	Multiple Appearance Print Multiple Appearance DN and associated TNs. The hunt pattern displayed shows only the first TN in a MADN hunt group.	

---

---

## LD 83: Terminal Number Sort and Print

---

Overlay program 83 allows the printing of a list of TNs and of TN blocks in Designation (DES) order.

“MARF” is output after the DN when printing the TN block (NOT when using the LST command) if the TN is the Multiple Appearance Redirection Prime.

# LD 83

## Prompts and responses

---

Prompt	Response	Comment
REQ	aaa	Request (aaa = END, LST, TNB)
CUST	xx xx	Customer number or range of customer numbers
DATE	a...a	Print data from activity date specified or last activity date (You may enter: dd mmm yyyy or ACT)
PAGE	(NO) YES	Data printed on a per-page basis
- ADJUST PAPER THEN <cr>	<cr>	Starts printing
NACT	(NO) YES	Next Activity

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ADJUST PAPER THEN	<cr> <cr>	Starts printing	odas-1
CUST	xx xx <cr>	Customer number or range of customer numbers Print data date for all customers	odas-1
DATE	dd mmm yyyy	Print data from activity date specified. Where: dd = day (0-31) mmm = month (JAN-DEC) yyyy = year	odas-1
	ACT <cr>	Print data from last activity date Disregard date restrictions	
NACT	(NO) YES END	Next Activity Return to REQ prompt Print current system data and exit overlay Exit Overlay program	odas-1
PAGE	(NO) YES	Data printed on a per-page basis	odas-1
REQ	END LST TNB	Request Exit Overlay program Print List of TNs in designator order Print list of TN blocks in designator order	odas-1

# LD 83

---

## LD 84, 85: Set Designation Entry (ODAS)

---

Overlay program 84 allows the addition of line designators to existing single line (500/2500) sets.

Overlay program 85 allows the addition of line designators to existing multi-line (SL-1, M2000, etc.) sets.

If currently active on a call, the station will be disconnected after the last <cr>.

# LD 84, 85

## Prompts and responses

---

Prompt	Response	Comment
TN	l s c u	Terminal Number
DES	d...d	1-6 character alphanumeric designator

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
DES	d...d	1-6 character alphanumeric Office Data Administration System (ODAS) Station Designator.	odas-1
TN	l s c u c u END	Terminal Number Small System Exit Overlay program	basic-1

---

---

## **LD 86: Electronic Switched Network 1**

---

Overlay program 86 allows data defining the NARS/BARS/CDP features to be created, modified, and printed.

## Prompts and responses

### Contents

Section	Page
<i>Prompts and responses by feature:</i>	
FEAT = DGT (Digit Manipulation)	956
FEAT = ESN (Electronic Switched Network)	957
FEAT = ITGE (Incoming Trunk Exclusion)	958
FEAT = NAS (Network Attendant Service)	958
FEAT = RLB (Route List)	959
FEAT = SCC (Special Common Carrier)	960

### FEAT = DGT (Digit Manipulation)

---

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	DGT	Feature = DGT (Digit manipulation)
DMI	(0)-999	Digit Manipulation Index numbers
DEL	(0)-19	Number of leading digits to be Deleted
INST	x...x	Insert
SCCI	(0)-7	Special Common Carrier Index into the SCC data table
CTYP	a...a	Call Type to be used by the manipulated digits (a...a = (NCHG), INTL, NPA, NXX, LOC, CDP, SPN, or UKWN)

---

## FEAT = ESN (Electronic Switched Network)

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	ESN	Feature = ESN (Electronic switched network)
MXLC	0-1000	Maximum number of LOC codes (NARS only)
MXSD	xxx	Maximum number of Supplemental Digit restriction blocks
MXIX	xxx	Maximum number of Incoming Trunk Group exclusion tables
MXDM	0-256	Maximum number of Digit Manipulation tables
MXRL	xxx	Maximum number of Route Lists
MXFC	0-256	Maximum number of Free Calling area screening tables
MXFS	0-255	Maximum number of Free Special number screening tables
CDP	(YES) NO	Coordinated Dialing Plan feature for this customer
- MXSC	0-5000	Maximum number of Steering Codes
- NCDP	3-7	Number of digits in CDP DN (DSC + DN or LSC + DN)
MSCC	0-7	Maximum number of Special Common Carrier entries
AC1	xx	One or two digit NARS/BARS Access Code 1
AC2	xx	One or two digit NARS Access Code 2
DLTN	(YES) NO	NARS/BARS Dial Tone after dialing AC1 or AC2 access codes
ERWT	(YES) NO	Expensive Route Warning Tone
- ERDT	0-(6)-10	Expensive Route Delay Time
TODS	aa-aa	Time of Day Schedules
RTCL	(DIS) YES	Routing Controls
NMAP	xx yy	NCOS Map
ETOD	1-7	Extended Time of Day schedule
TGAR	(NO) YES	Check for Trunk Group Access Restrictions

# LD 86

## FEAT = ITGE (Incoming Trunk Exclusion)

---

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	ITGE	Feature = ITGE (Incoming Trunk Exclusion)
ITEI	1-127	Incoming Trunk group Exclusion Index number
RTNO	0-127	Route Number associated with index

---

## FEAT = NAS (Network Attendant Service)

---

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	NAS	Feature = NAS (Network Attendant Service)
TBL	(0)-63	NAS routing Table 0 is the customer routing table
ALT	1-7	Attendant Alternative number
ID	x...x	Digits (up to 16) dialed to reach a remote attendant
TODS	1-31	Schedule period to be changed
- PER	hh mm hh mm	The start and stop times for the schedule period
- DAYS	1-7	Days assigned to the currently defined schedule period.
ALST	1-7	Alternatives List
DBK	(N) Y	Drop Back busy option
QUE	(N) Y	Queuing to a route

---

## FEAT = RLB (Route List)

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	RLB	Feature = RLB (Route list)
RLI	xxx	Route List Index to be accessed
ENTR	xxx	Entry number for NARS/BARS Route list
LTER	(NO) YES	Local Termination entry
ROUT	0-511	Route number
SCNV	(NO) YES	Skip Conventional signaling
TDET	(NO) YES	Tone Detector used
- TYPE	aaa	Type of tone detector application (aaa = TIE, CC1, or CC2)
- TONE	a...a	Tone type expected from SCC (a...a = DIAL or SCC)
TOD	0-7	Time of Day schedule
VNS	(NO) YES	Entry is a VNS route
- VDCH	1-15	VNS D-channel number
- VDMI	xxx	VNS Digit Manipulation Index
- VTRK	1-(20)-254	VNS Trunks
CNV	(NO) YES	Conversion to LDN
EXP	(NO) YES	Expensive route
FRL	(0)-7	Facility Restriction Level
DMI	(0)-999	Digit Manipulation Index
ISDM	(0)-255	ISL D-channel Down Digit Manipulation index
FCI	(0)-255	Free Calling Area Screening Index number
FSNI	(0)-1-255	Free Special Number Screening Index
BNE	(NO) YES	Business Network Extension Route
SBOC	aaa	Step Back on Congestion (aaa = (NRR), RRO, or ROA)
- COPT	(1) 2	QSIG Alternate Routing is supported for (1), 2
IDBB	aaa	ISDN Drop Back Busy (aaa = (DBD), DBA, or DBI)
IOHQ	(NO) YES	ISDN Off-Hook Queuing option
OHQ	(NO) YES	Off-Hook Queuing allowed
CBQ	(NO) YES	Call Back Queuing
ISET	(0)-8	Initial Set

# LD 86

NALT	1-(5)-10	Number of alternate routing attempts
MFRL	aaa	Set Minimum Facility Restriction Level (aaa = (MIN) or 0-7)
OVLL	(0)-24	Overlap Length

---

## FEAT = SCC (Special Common Carrier)

---

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	SCC	Feature = SCC (Special Common Carrier)
MXLC	0-1000	Maximum number of LOC codes (NARS only)
SCCI	(0)-7	Special Common Carrier Index
LDN2	(0)-10	Number of digits in SCC type 2 LDN
RBTD	(0)-30	Ringback Tone Delay time

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
AC1	xx xxxx	One or two digit NARS/BARS Access Code 1 One to four digit Flexible Numbering Plan Access Code 1 The access code cannot conflict with the numbering plan.	b/nars-1
AC2	xx xxxx	One or two digit NARS Access Code 2 One to four digit Flexible Numbering Plan Access Code 2 The access code cannot conflict with the numbering plan.	nars-1
ALST	1-7	Attendant Alternatives List (up to 4 for each schedule period)  If no attendants are placed on the list, local attendant service is given. Precede with X to remove an alternative attendant.  The order of the input determines which entry in the alternative list is being changed. For example, to change the third alternative, both the first and second alternatives must be entered.	nas-15
ALT	1-7 X1-X7  <cr>	Attendant Alternative number Clear the alternative number (zero ID store); allowed only if there is no schedule period associated with it. Stop ALT prompt, go to TODS prompt.	nas-15
BNE	(NO) YES	Business Networking Express/Name Display, Private CLID and COLP allowed/denied.  <b>Note:</b> BNE is output only if the route of the RLI entry is EuroISDN.	bne-25
CBQ	(NO) YES	Call-Back Queuing not allowed Call-Back Queuing allowed This prompt should not be used with NARS DPNSS1. CBQ is not prompted if LTER = YES.	fc bq-1
CDP	(YES) NO	Coordinated Dialing Plan feature for this customer	cdp-1
CNV	(NO) YES	Conversion to LDN required (NARS). Not prompted if route is TKTP = ADM or LTER = YES	nars-1

# LD 86

Prompt	Response	Comment	Pack/Rel
COPT	(1)	QSIG Alternate Routing is supported for the following causes: — cause 34 "No channel / circuit available" — cause 38 "Network out of order" — cause 42 "Congestion"	
	2	QSIG Alternate Routing is supported for the following causes: — cause 3 "No route to destination" — cause 27 "Destination is out of service" — cause 34 "No channel / circuit available" — cause 38 "Network out of order" — cause 41 "Temporary failure" — cause 42 "Congestion"	
COTP	(NCHG) INTL NPA NXX LOC CDP SPN UKWN	Call Type to be used by the manipulated digits. This call type must be recognized by the far-end switch. Call type will not be changed Special number in International format NPA NXX Location Code Coordinated Dialing Plan Special Number other than International Unknown call type	pra-15
CUST	xx	Customer number associated with this function as defined in LD 15	basic-1
DAYS	1-7	Days assigned to the currently defined schedule period  To remove days from the schedule period precede the number representing the day with X. Up to 7 entries, separated with a space, may be input (Where: 1 = Monday, 7 = Sunday).	nas-15

Prompt	Response	Comment	Pack/Rel
DBK	(NO) YES	Drop Back busy option disabled Drop Back busy option enabled  Up to four entries one for each of the attendant alternatives in this schedule period.  If both sides of the ISDN trunk are set to N the remote node accepts the call and reroutes it, thus one side of the trunk must be set to Y.  If a node has all the NAS routes with DBK = Y it will be considered by the network as "Centralized Night DN Node". This permits all other nodes in night to reject all attempts of this specific node, even in night, thus the call can only be inserted in this local night DN que.  The order of the response to this prompt must correspond to the order of response to the ALST prompt.	nas-15
DEL	(0)-19	Number of leading digits to be Deleted	b/nars-1
DLTN	(YES) NO	NARS/BARS Dial Tone after dialing AC1 or AC2 access codes	b/nars-1
DMI	(0) (0)-31 (0)-255 (0)-999	Digit Manipulation Index numbers No digit manipulation required CDP NARS/BARS NARS/BARS with Flexible Numbering Plan (FNP) package 160 The maximum number of Digit Manipulation tables is defined by prompt MXDM. DMI is not prompted if route TKTP = ADM.	b/nars-20
ENTR	0-63 0-6 X	Entry number for NARS/BARS Route List Route list entry number for CDP Precede with x to remove	esn-1

# LD 86

Prompt	Response	Comment	Pack/Rel
ERDT	0-(6)-10	Expensive Route Delay Time (in 2 second intervals)	b/nars-1
ERWT	(YES) NO	Expensive Route Warning Tone <b>Note:</b> ERWT is not supported on TIE trunks. ERWT defaults to of three bursts of tone, but may be modified in LD 56 if Flexible Tones and Cadences (FTC) package 125 is equipped, to indicate that the call will be placed over an expensive route. The user has 3 choices: <ol style="list-style-type: none"><li>1. go On-Hook and abort the call</li><li>2. remain On-Hook and accept the call</li><li>3. activate Ring Again</li></ol>	b/nars-1
ETOD	1-7 X1-X7	Extended Time of Day schedule (day(s) of the week for special TOD schedule) Where:1 = Sunday and 7 = Saturday. To remove a day	b/nars-1
EXP	(NO) YES	Expensive route Not prompted if route TKTP = ADM or LTER = YES	b/nars-1
FCI	(0)-127 (0)-255	Free Calling area screening Index number BARS NARS Use 0 if no FCAS is required. Not prompted if route TKTP = ADM.	b/nars-1
FEAT	DGT ESN ITGE NAS RLB SCC	Feature Digit manipulation data block ESN data block Incoming Trunk Group Exclusion data block Network Attendant Service data block Route List data Block Special Common Carrier data block	esn-1
FRL	(0)-7	Facility Restriction Level	b/nars-1
FSNI	(0)-1-255	Free Special Number screening Index	fnp-20
ID	x...x <cr>	Digits (up to 16) dialed to reach a remote attendant Leave ID unchanged, go to ALT prompt.	nas-15

Prompt	Response	Comment	Pack/Rel
IDBB	(DBD) DBA DBI	ISDN Drop Back Busy Drop Back Disabled Drop Back if All routes busy Drop Back if Initial set busy. IDBB appears if ISDN=YES in LD 15	orc/orq-16
INST	x...x  x...x y...y	Insert. Where x...x is:  up to 31 leading digits may be inserted  For Specialized Common Carriers (SCC), up to 23 leading digits may be inserted including: access number, delimiter*, and authorization code.	b/nars-1
IOHQ	(NO) YES	ISDN Off-Hook Queuing option Prompted if ISDN = YES in LD 15.	ohq-16
ISDM	(0)-255 (0) (0)-31 (0)-127 (0)-999	ISL D-channel Down Digit Manipulation Index number. Not prompted if route TKTP = ADM or LTER = YES CDP NARS/BARS NARS/BARS with Flexible Numbering Plan (FNP) package 160.  When the ISL D-channel goes down, this Digit Manipulation Index is used to perform the Digit Manipulation which includes the ESN access code insertion capability.  This is only used when the ISL reverts back to conventional signaling. When the D-channel is up the existing DMI is used to perform digit manipulation.  This DMI is only used when the ISL D-channel is down. Any valid DMI can be entered. The ISDM is intended to be a DMI which inserts an ESN access code.	is1-17
ISET	(0)-64	Initial Set. Number of entries in Initial Set for route list block.	b/nars-1
ITEI	1-127 1-255	Incoming Trunk group Exclusion Index BARS NARS	b/nars-5
LDN2	(0)-10	Number of digits in SCC type 2 LDN	b/nars-1

# LD 86

Prompt	Response	Comment	Pack/Rel
LTER	(NO) YES	Local Termination entry	fgd-17
MFRL	(MIN) 0-7	Set Minimum Facility Restriction Level used to determine autocode prompting. Use default of MIN to set to the minimum FRL value.	b/nars-1
MSCC	0-7	Maximum number of Special Common Carrier (SCC) entries	nars-1
MXDM	0-32 0-256 0-1000	Maximum number of Digit Manipulation tables (you must count Table 0 for the system) CDP NARS/BARS NARS/BARS with Flexible Numbering Plan (FNP) package 160 equipped	esn-1
MXFC	0-127 0-255	Maximum Free Calling area screening tables BARS NARS Prompted when NARS/BARS equipped	b/nars-1
MXFS	0-255	Maximum number of Free Special Number Screening tables	b/nars-1
MXIX	0-127 0-255	Maximum number of Incoming Trunk Group Exclusion tables (use "0" if not required) BARS NARS	b/nars-5
MXLC	0-999	Maximum number of LOC codes (NARS only)	nars-1
MXRL	0-128 0-128 0-256 0-1000	Maximum number of Route Lists If MXRL = 0, the system will not allow the creation of any route lists. CDP BARS NARS NARS with Flexible Numbering Plan (FNP) package 160 equipped	esn-1
MXSC	0-8000 0-10000 0-32000	Maximum number of Steering Codes for Small System Maximum number of Steering Codes in North America Maximum number of Steering Codes outside North America	cdp-1

Prompt	Response	Comment	Pack/Rel
MXSD	(0)-1500	Maximum Supplemental Digit restriction blocks	b/nars-1
NALT	1-(5)-10	Number of alternate routing attempts. Prompt appears once per RLI.	brte-24
NCDP		Define DN length for CDP  A Coordinated Dialing Plan (CDP) consists of the CDP code and the Directory Number (DN). This dialing plan does not need an access code because the CDP code is part of the internal dialing plan.  The CDP code is one of the following: the Distant Steering Code (DSC) or the Local Steering Code (LSC)	cdp-1
	3-7 3-10	Number of digits in CDP DN (DSC + DN or LSC + DN) Number of digits in CDP DN with Directory Number Expansion (DNXP) package 150	
NMAP	xx yy	NCOS Map (NCOS numbers to be applied for routing controls). Where:  xx = current NCOS number yy = NCOS number to be applied for  BARS/CDP or NARS when routing control is in effect.  NCOS ranges:  0-99	ncos-1
OHQ	(NO) YES	Off-Hook Queuing not allowed Off-Hook Queuing allowed This prompt should not be used with NARS DPNSS1. OHQ is not prompted if LTER = YES.	bars-1
OVLL	(0)-24	Overlap Length Number of digits dialed (after the ESN access code) before SETUP message is sent or outpulsing begins. If OVLL = 0, Overlap Sending is controlled by the number of digits in the ESN or CDP steering codes (e.g. FLEN).	ovlp-16
PER	hh mm hh mm	The start and stop times for the schedule period (the start time must be less than the stop time)	

# LD 86

Prompt	Response	Comment	Pack/Rel
QUE	(NO) YES	Queuing to a route disabled Queuing to a route enabled	
		Up to four entries one for each of the attendant alternatives in this schedule period. The order of the response to this prompt must correspond to the order of response to the ALST prompt.	
RBTD	(0)-30	Ringback Tone Delay time in seconds for SCC (only even numbers will be accepted)	nars-1
REQ	CHG END LCHG  NEW OUT PRT	Request Change existing data block. Exit Overlay program. Print date and time that each data group was last changed (data groups include: ESN, DGT, NAS, RLB, SCC, and ITGE) Create new data block. Remove data block. Print data block.	esn-1
RLI	0-127 0-255 0-999	Route List Index to be accessed CDP and BARS NARS FNP	esn-20
ROUT	0-511	Route number Not prompted if LTER = YES.	esn-1
RTCL	(DIS) YES	Disable Routing Controls. Enable or modify Routing Controls.	esn-1
RTNO	0-511	Route Number associated with index Precede with X to delete an existing route.	b/nars-5
SBOC	(NRR) RRO RRA	Step Back on Congestion No Reroute Reroute if originating node, step back if transit node. Reroute all.	dpnss1-16
SCCI	(0)-7	Special Common Carrier Index into the SCC data table Use "0" if not required.	nars-1
SCNV	(NO) YES	Skip Conventional Signaling.	

Prompt	Response	Comment	Pack/Rel
TBL	(0)-63	NAS routing table. 0 is the customer routing table. It is also associated with Attendant Console Group 0.	nars-16
TDET	(NO) YES	Tone Detector used Not prompted if route TKTP = ADM or LTER = YES.	nars-1
TGAR	(NO) YES	Check for Trunk Group Access Restrictions Ignore TGAR/TARG when call is placed through BARS. Examine TGAR/TARG when call is placed through BARS.	esn-1
TOD	0-1 0-7	Time of Day schedule CDP NARS/BARS Precede with X to turn off schedule.	esn-1
TODS	1-31 0 0-1 0-7 0-7 hh mm hh mm 0-1 hh mm hh mm X1-X31 X0 <cr>	Time of Day schedule Schedule period to be changed. Catch-all period. Start and stop times are not relevant for this period. The next prompt is ALST. CDP NARS/BARS Schedule number, start hour, start minute, end hour, end minute for NARS/BARS. Schedule number, start hour, start minute, end hour, end minute for CDP. Remove the schedule period Remove/clear all alternatives associated with period 0. This leaves the catch-all treatment as local attendant treatment. End NAS feature data setup and return to REQ prompt.	esn-1
TONE	SCC DIAL	SCC dial tone type expected Normal dial tone type expected	nars-1
TYPE	CC1 CC2 TIE	SCC Type 1 tone detector application SCC type 2 tone detector application On-network call tone detector application	
VDCH	1-15	VNS D-channel number	vns-16

# LD 86

Prompt	Response	Comment	Pack/Rel
VDMI	(0) 1-31 1-255 0-999	VNS Digit Manipulation Index number for the D-channel (ESN routing) No digit manipulation required CDP NARS/BARS With Flexible Numbering Plan (FNP) package 160	vns-16
VNS	(NO) YES	Entry is a VNS route Prompted for DID, TIE and CO.	vns-16
VTRK	1-(20)-254	VNS Trunks (maximum number of VNS Trunks to be used by this route list entry)	vns-16

---

---

## **LD 87: Electronic Switched Network 2**

---

Overlay program 87 allows data which define the NARS/BARS/CDP features to be created, modified and printed.

## Prompts and responses

### Contents

Section	Page
<i>Prompts and responses by feature:</i>	
FEAT = CDP (Coordinated Dialing Plan)	973
FEAT = FCAS (Free Calling Area Screening)	974
FEAT = FSNS (Free Special Number Screening)	974
FEAT = NCTL (Network Control)	975

## FEAT = CDP (Coordinated Dialing Plan)

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	CDP	Feature = CDP (Coordinated Dialing Plan)
TYPE	aaa	Type of steering code (aaa = LSC, DSC, or TSC)
LSC	x...x	Local Steering Code
- DMI	0-31	Digit Manipulation Index for LSC
- DEL	0-4	Number of digits to be deleted
DSC	x...x	Distant Steering Code
- FLEN	(0)-24	Flexible Length number of digits
- DSP	aaa	Display (aaa = LSC, LOC, or DN)
- RRPA	(NO) YES	Remote Radio Paging Access
- RLI	xxx	Route List to be accessed for Distant Steering Code
- CCBA	(NO) YES	Collect Call Blocking
- NPA	xxxxxxx	maximum 7 digit NPA code allowed
- NXX	xxxxxxx	maximum 7 digit NXX code allowed
TSC	x...x	Trunk Steering Code
- FLEN	(0)-24	Flexible Length number of digits
- ITOH	(NO) YES	Inhibit Time-out option
- CCBA	(NO) YES	Collect Call Blocking
- RLI	0-999	Route List to be accessed for trunk steering code

# LD 87

## FEAT = FCAS (Free Calling Area Screening)

---

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	FCAS	Feature = FCAS (Free Calling Area Screening)
FCI	xxx	Free Calling Area Screening Index number
GKCF	(0)-255	Gatekeeper Cost Factor
NPA	xxx	Three-digit NPA code to be screened
NXX	aaaa	NXX codes for NPA (aaaa = DENY or ALLOW)
- DENY	xxx xxx	NXX code or range of codes to be Denied
- ALLOW	xxx xxx	NXX code or range of codes to be Allowed

---

## FEAT = FSNS (Free Special Number Screening)

---

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	FSNS	Feature = FSNS (Free Special Number Screening)
FSNI	1-255	Free Special Number screening Index
SPN	x...x	Special Number code to be screened
XXX	aaaa	Routing codes (aaaa = DENY or ALLOW)
- DENY	xxx xxx	Routing code or range of codes to be Denied
- ALLOW	xxx xxx	Routing code or range of codes to be Allowed

---

## FEAT = NCTL (Network Control)

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	NCTL	Feature = NCTL (Network Control)
SOHQ	(NO) YES	Off-Hook Queuing option
- OHTL	2-(10)-60	Off-Hook Queue Time Limit
SCBQ	(NO) YES	Call-Back Queuing option
- CBTL	10-(20)-30	Call-Back Queue Time Limit
- RANE	0-511	RAN route number for CBQ offer to ESN stations
- RANC	0-511	RAN route number for CBQ offer to Conventional main
NRNG	0-99 1-99	NCOS Range
NCOS	(0)-99	Network Class of Service group number
MLPPSD	xxxxxx	MLPP Service Domain class of service.
ARDL	a	ARDL network route selection is allowed from both initial and extended route sets or only the initial route set (a = (A) or I)
- MPL	aaaa	Maximum Precedence Level
- EQA	(NO) YES	Equal Access associated with this NCOS group
- FRL	(0)-7	Facility Restriction Level
- RWTA	(NO) YES	Expensive Route Warning Tone
- NSC	(NO) YES	Network Speed Call access allowed
- - LIST	0-253	List numbers to which System Speed Call has access
- OHQ	(YES) NO	Off-Hook Queuing eligibility
- CBQ	(NO) YES	Call Back Queuing eligibility
- RETT	2-(10)-30	Remote Virtual Queuing Retry Timer
- RETC	4-(5)-16	Remote Virtual Queuing Retry Counter
- - ROUT	a	Call Back Queuing on Initial or All Routes (a = (I) or A)
- - RADT	(0)-30	Route Advance Timer
- SPRI	(0)-3	Starting Priority in CBQ
- MPRI	(0)-3	Maximum Priority attainable in CBQ
- PROM	(0)-30	Priority Promotion timer
TOHQ	0-7	TCOS OHQ eligibility

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ALOW	xxx xxx <cr>	Routing code (NXX) code or range of codes to be allowed Stop ALOW prompt	b/nars-20
ARDL	(A) I	ARDL network route selection is allowed from ALL (both initial and extended) route sets ARDL network route selection is only allowed from initial route set	ardl-22
CBQ	(NO) YES	Call Back Queuing eligibility	bque-1
CBTL	10-(20)-30	Call Back Queue Time Limit (in 2 second increments) This is the time in which the user must respond to Ring Again feature to accept the CBQ call. Applies to multi-line sets only.	b/nars-1
CCBA	(NO) YES	Collect Call Blocking (CCB) Denied Collect Call Blocking Allowed CCBA is prompted when TYPE =TSC or DSC. CCBA is prompted with CCB package 290.	ccb-21
CUST	xx	Customer number associated with this function as defined in LD 15	esn-1
DEL	0-4 0-7	Number of digits to be Deleted Up to 7 digits with Directory Number Expansion (DNXP) package 150	cdp-1
DENY	xxx xxx <cr>	Routing (NXX) code or range of codes to be denied Stop DENY prompt.	b/nars-20
DMI	0-31 0-999	Digit Manipulation Index for LSC With Flexible Numbering Plan (FNP) package 160	b/nars-20
DSC	xxxx	Distant Steering Code Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Prompted until <CR> is entered.	cdp-19

Prompt	Response	Comment	Pack/Rel
DSP	(LSC) HLOC DN	Display Local Steering Code Home Location code Directory Number to be used for CLID Prompted with Flexible Numbering Plan (FNP) package 160 and ISDN are equipped.	fnp-20
EQA	(NO) YES	Equal Access associated with this NCOS group	eqa-18
FCI	1-127 1-255	Free Calling area screening Index number BARS NARS Table 0 is network reserved to indicate that no FCAS is applied.	b/nars-1
FEAT	CDP FCAS FSNS NCTL	Feature Coordinated Dialing Plan Free Calling Area Screening Free Special Number Screening (allowed with Flexible Numbering Plan (FNP) package 160) Network Control	esn-1
FLEN	(0)-24	Flexible Length number of digits  Prompted with Flexible Numbering Plan (FNP) package 160.	fnp-20
FRL	(0)-7	Facility Restriction Level  FRL is assigned to each NCOS. It determines the entries in a Route List (RLI) to which it has access. 0 is the most restrictive, 7 is the least restrictive and can access more entries.	b/nars-1
FSNI	1-255	Free Special Number screening Index	fnp-20
GKCF	(0)-255	Gatekeeper Cost Factor, where:  0 = not required for Gatekeeper configuration 1-255 = a higher number represents a more expensive call For Large System and Small System For Succession 1000	n/a basic-2
ITOH	(NO) YES	Inhibit Time-out option	fnp-20

# LD 87

Prompt	Response	Comment	Pack/Rel
LIST	0-4095 <cr>	List numbers to which System Speed Call has access All lists Precede with X to remove SSC list.	ssc-2
LSC	xxxx	Local Steering Code Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Prompted until <CR> is entered.	cdp-19
MLPPSD	xxxxxx	MLPP Service Domain class of service. Where:  xxxxxx = six hexadecimal characters in the range (000000 to FFFFFFF) used to signify a 24 bit binary integer. Default is taken from Overlay 15.  Precede with x to remove.	atvn-25.47
MPL	aaaa	Maximum Precedence Level	
MPRI	(0)-3	Maximum Priority attainable in CBQ	bque-1
NCOS	(0)-99	Network Class of Service group number	ncos-1
NPA	xxx	Three-digit NPA code to be screened (the first digit must be 2-9; the second and third digits can be 0-9). Omit the "1" in 1 + NPA format. <ul style="list-style-type: none"><li>xxx = 200-999. Only 3 digits are allowed, even when using 1 + dialing.</li></ul> BARS allows up to 15 NPA codes per table. NARS allows up to 15 NPA codes per table with a maximum of 800 NXX codes each.	nanp-19
	xxx yyy	Area code or extended NPA code translation Where:  xxx & yyy = 200 - 999. FCAS accepts only three digits for the NPA, even if 1 + dialing in use.	
	xxxxxxx	Numbering Plan Area Code  7 digits are allowed when TYPE = DSC	basic-25

Prompt	Response	Comment	Pack/Rel
NRNG	0-99 1-99  <cr>	NCOS Range (starting and ending number for NCOS printing) Pressed without defining the ending number, then only the NCOS with the starting number defined is printed. Prompted when REQ = PRT.	ncos-14
NSC	(NO) YES	Network Speed Call access allowed	nsc-2
NXX	DENY ALLOW  xxxxxxx	NXX codes to be denied for NPA NXX codes to be allowed for NPA  Public Network Exchange Code 7 digits are allowed when TYPE = DSC	b/nars-1  basic-25
OHQ	(YES) NO	Off-Hook Queuing eligibility	ohq-1
OHTL	2-(10)-60	Off-Hook Queue Time Limit (in 2 second increments)  This is the maximum amount of time a user will remain off-hook for OHQ before it times out. After timeout the system searches once before going to Network Blocking Intercept treatment.  If an odd number is entered, it is rounded up to the next even number.	b/nars-1
PROM	(0)-30	Priority Promotion timer (in 30 second increments, where: 1 = 30 seconds and 30 = 15 minutes)	pque-1
RADT	(0)-30	Route Advance Timer (in 30 second increments, where: 1 = 30 seconds and 30 = 15 minutes)	bque-1
RANC	0-511	RAN route number for CBQ offer to Conventional main Enter X to remove RAN route.	nars-1
RANE	0-511	RAN route number for CBQ offer to ESN stations Enter X to remove RAN route.	nars-1

# LD 87

Prompt	Response	Comment	Pack/Rel
REQ	CHG END LCHG  NEW OUT PRT	Request Change existing data block Exit Overlay program Print date and time that each data group level was last changed (data groups include: NCTL, FCAS, FSNS, LSC, DSC, and TSC) Create new data block Delete existing data block Print data block	esn-1
RETC	4-(5)-16	Remote Virtual Queuing Retry Counter.  This is the number of times the initial set should be searched before the scanning includes the extended set. Once the retry counter threshold is met, each node in the network searches its extended set.	rvq-18
RETT	2-(10)-30	Remote Virtual Queuing Retry Timer in seconds. This is the number of seconds between forward scanning attempts.	rvq-18
RLI	0-31 0-127 0-255 0-999	Route List accessed for trunk or distant steering code CDP BARS NARS Flexible Numbering Plan (FNP) (Release 20 & later)	cdp-20
ROUT	(I)  A	Call Back Queuing on Initial routes The system offers queuing only after examining ISET (Initial Set) entries. Call Back Queuing on All routes The system examines all entries in the route list, both ISET (Initial Set) and ESET (Extended Set) before offering queuing.	bque-2
RRPA	(NO) YES	Remote Radio Paging Access (Remote Radio Paging FFC is being used). Prompted if a CDP, TSC or DSC is being added or changed.	rpa-20
RWTA	(NO) YES	Expensive Route Warning Tone	b/nars-1
SCBQ	(NO) YES	Call Back Queuing option	b/nars-1
SOHQ	(NO) YES	Off-Hook Queuing option	b/nars-1

Prompt	Response	Comment	Pack/Rel
SPN	x...x	Special Number code to be screened. xxx = 1-19 digits	fnp-20
SPRI	(0)-3	Starting Priority in CBQ	pque-2
TOHQ	0-7  <cr>	TCOS OHQ eligibility Which TCOS (i.e., FRL) are OHQ eligible (Up to 8 entries). No TCOS are OHQ eligible Precede with X to remove OHQ eligibility from a TCOS.	b/nars-1
TSC	xxxx	Trunk Steering Code  Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Prompted until <CR> is entered.	cdp-19
TYPE	LSC DSC TSC FSNS ALL	Local Steering Code Distant Steering Code Trunk Steering Code Free Special Number Screening Index All steering codes	fnp/ cdp-20
XXX	DENY ALLOW	Routing codes to be denied Routing codes to be allowed	fnp-20

# LD 87

---

## LD 88: Authorization Code

---

Overlay program 88 allows data for Basic Authorization Code (BAUT) and Network Authorization Code (NAUT) to be created, modified and printed.

## Prompts and responses

### Contents

Section	Page
<i>Prompts and responses by data block:</i>	
AUB or RAUB: Authcode or Room Authcode data block	985
AUT: Authcode entries data block	986
SAR: Scheduled Access Restriction data block	986

## AUB or RAUB: Authcode or Room Authcode data block

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	aaaa	Type = AUB (Authcode) or RAUB (Room Authcode)
CUST	xx	Customer number associated with this function
SPWD	xxxx	Secure Data Password
ALEN	1-14	Authcode Length
ACDR	NO YES	Activate CDR for authcodes
AUTHCOD_ALARM	(OFF) ON	Authcode Alarm
RANR	0-511	RAN Route number
ACLE	(NO) YES	Authorization Code Conditionally Last Enhancement
BRST	0-(10)	Number of initial bursts of tone to be given
RTRY	(NO) YES	(Disable) Enable Authcode - last Retry
- RAN2	0-511	Route number for Authcode - last Retry RAN
CLAS	(0)-115	Class code value assigned to authcode
- COS	a...a	Class of Service
- TGAR	0-(1)-31	Trunk Group Access Restriction
- NCOS	(0)-99	Network Class of Service
CAC	0-(3)-9	ANI Category for 3WT calls
CAC_CIS	0-(3)-9	CIS ANI category code
AUTO	YES NO	Automatically generate authcodes
- SECR	0000-9999	Security password (NAUT)
- NMBR	1-50000	Number of authcodes to be generated automatically
- CLAS	(0)-115	Class code to be automatically assigned

**AUT: Authcode entries data block**

---

<b>Prompt</b>	<b>Response</b>	<b>Comment</b>
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	AUT	Type = AUT (Authcode entries)
CUST	xx	Customer number associated with this function
SPWD	xxxx	Secure Data Password
CODE	xxxx	Authcode
SARC	NO YES	Scheduled Access Restriction (SAR) Code
- SERV	nnn...nnn	SAR Service functions for SARC
- SGRP	0-999	SGRP number
CLAS	(0)-115	Class code
SECR	0000-9999	Security password

---

**SAR: Scheduled Access Restriction data block**

---

<b>Prompt</b>	<b>Response</b>	<b>Comment</b>
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	SAR	Type = SAR (Scheduled Access Restriction)
CUST	xx	Customer number associated with this function
SPWD	xxxx	Secure Data Password
SGRP	0-999	SAR Group number
SCDR	(NO) YES	Activate CDR for the SAR code feature
OFFP	1-8	Off-hour Period number
- STAR	hh mm	Start time
- STOP	hh mm	Stop time
- DAYS	d ... d	Respond with a new set of days to be used
- COS	a...a	Class of Service
- TGAR	0-(1)-31	Trunk Group Access Restriction
- NCOS	(0)-99	Network Class of Service
ICR	(NO) YES	Incoming Calls are Restricted.
LOCK	(1)-8	Lock period

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ACDR	NO YES	Activate CDR for authcodes. There is no default.	cdr-1
ACLE	(NO) YES	Authorization Code Conditionally Last Enhancement	nars-24
ALEN	1-4 1-7 1-14	Authcode Length (all authcodes are the same length). Room Authcode NAUT BAUT	baut-1
AUTHCOD_ALARM	(OFF) ON	Disable Authcode Alarm Enable Authcode Alarm	basic-21
AUTO	YES NO	Automatically generate authcodes. Prompted when Network Authorization Code (NAUT) package 63 is equipped and REQ = "NEW". ALEN must be a minimum of four digits.	naut-1
BRST	0-(10)	Number of initial bursts of tone to be given	nars-24
CAC	0 -(3)- 9	ANI category for 3WT calls Prompted with Commonwealth of Independent States - Three Wire Analog Trunk (CIST) package 221.	cist-21
CAC_CIS	0-(3)-9	CIS ANI category code	cist-24
CLAS	(0)-115	Class code value assigned to authcode. Cycle continues with CODE. Prompted when SARC = NO.  When TYPE = "AUT", enter X to have authcode be an exempt code. When this data is printed, the month in which authcode was deactivated is output. Default is "0" when adding authcode entries.	baut-1
	X <cr>	Exempt authcode End of input	

# LD 88

Prompt	Response	Comment	Pack/Rel
CODE	xxxx ALL	Authcode (number of digits must equal the ALEN response). May be used to delete Authcodes if Network Authorization Code (NAUT) package 63 is equipped and codes were automatically generated.	baut-1
COS	(CTD) CUN FR1 FR2 FRE IPNA IRGA SRE TLD UNR	Class of Service Conditionally Toll Denied Conditionally Unrestricted Fully Restricted class 1 Fully Restricted class 2 Fully Restricted Intercept Position Interrogation set Semi-Restricted Toll Denied Unrestricted	baut-1
CUST	xx	Customer number associated with this function as defined in LD 15	esn-1
DAYS	d...d	Respond with a new set of days to be used d...d = maximum of seven entries in range of 1-7	sar-20
ICR	(NO) YES	Incoming Calls are Restricted.	sar-20
LOCK	(1)-8	Lock period	sar-20
NCOS	0-99	Network Class of Service (enter the new NCOS that will replace the NCOS of the station).	baut-1
NMBR	1-50000	Number of authcodes to be generated automatically To generate up to 50,000 authcodes, the maximum entry at NMBR is 5000 each time it is prompted.	baut-1
OFFP	1-8 <cr>	Off-hour Period number Go to ICR prompt.	sar-20
RANR	0-511 0-127 X	RAN route number for "Authcode Last" prompt (NAUT) Small System No RAN route	naut-1
RAN2	0 - 511 0-127 X	Route number for Authcode - last Retry RAN Small System Removes and deactivates Authcode-last Retry RAN	dpna-21

Prompt	Response	Comment	Pack/Rel
REQ	CHG END NEW OUT PRT	Request Change existing data block Exit Overlay program Create new data block Delete existing data block Print data block	baut-1
RTRY	(NO) YES	Disable authcode - last Retry. Enable authcode - last Retry. Prompted with Direct Private Network Access (DPNA) package 250.	dpna-21
SARC	NO YES	Scheduled Access Restriction (SAR) Code is to be a Scheduled Access Restriction (SAR) authorization code.	sar-20
SCDR	(NO) YES	Activate CDR for the SAR code feature.	sar-20
SECR	0000-9999	Security password as entered during AUTO sequence Prompted when CODE = ALL. Cycle continues with CODE.	baut-1
SERV	(END) ENA  (LKD) LKA  (DSD) DSA  (UND) UNA	SAR Service functions for SARC  Enable Denied Enable Allowed  Lock Denied Lock Allowed  Disable Denied Disable Allowed  Unlock Denied Unlock Allowed	sar-20
SGRP	0-999 ALL <cr>	Up to four entries can be made at once. Scheduled Access Restriction group (SGRP) number Authorization code is to be a customer SARC. End of SAR changes, return to REQ.	sar-20
SPWD	xxxx	Secure Data Password (same password as defined for DISA on a per customer basis in LD 15). Prompt will not appear to user with a LAO password.	baut-1

# LD 88

Prompt	Response	Comment	Pack/Rel
STAR	hh mm	Start time The current start time (hours and minutes) is printed individually after the prompt. Respond with the new start time.	sar-20
	X	Remove value and return to OFFP.	
STOP	hh mm	Stop time The current stop time (hours and minutes) is printed individually after the prompt. Respond with the new stop time.	sar-20
	X	Remove value and return to OFFP.	
TGAR	0-(1)-31	Trunk Group Access Restriction range	baut-1
TYPE		Type of data block	baut-1
	AUB	Authcode data block	
	AUT	Authcode entries data block	
	RAUB	Room Authcode data block (Hospitality Management)	
	RAUT	Room Authcode entries (Hospitality Management) data block	
	SAR	Scheduled Access Restriction data block	

---

---

## LD 90: Electronic Switched Network 3

---

Overlay program 90 allows data for network translation tables to be generated and administered.

# Prompts and responses

## Contents

Section	Page
<i>Prompts and responses by data block:</i>	
HLOC: Home Location data block (NARS only)	992
HNPA: Home Number Plan area code data block	993
LOC: Location code data block (NARS only)	993
NPA: Number Plan area code data block	994
NSCL: Network Speed Call List data block	995
NXX: Central Office Code Translation data block	996
SPN: Special Number Translation data block	997

## HLOC: Home Location data block (NARS only)

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	NET	Feature = NET
TRAN	aaa	Translator (aaa = AC1, AC2, or SUM)
TYPE	HLOC	Type = HLOC (Home Location code)
HLOC	xxx y..y	Home Location code, where xxx = home location code and y...y = extended code of 1-4 digits. The extended code is optional.
- DMI	1-255	Digit Manipulation Index

## HNPA: Home Number Plan area code data block

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	NET	Feature = NET
TRAN	aaa	Translator (aaa = AC1, AC2, or SUM)
TYPE	HNPA	Type = HNPA (Home Number plan area code transmission)
HNPA	xxx	Home Numbering Plan Area code where xxx = 200 - 999
	1xxx	Home Numbering Plan Area code using 1+ dialing, where xxx = 200 - 999.

## LOC: Location code data block (NARS only)

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	NET	Feature = NET
TRAN	aaa	Translator (aaa = AC1, AC2, or SUM)
TYPE	LOC	Type = LOC (Location code)
LOC	xxx y..y	Location code, where xxx = home location code and y..y = extended code of 1-4 digits. The extended code is optional.
- FLEN	(0)-24	Flexible Length
- RLI	xxx	Route List Index
- NPA	xxxxxxx	maximum 7 digit NPA code allowed
- NXX	xxxxxxx	maximum 7 digit NXX code allowed
- ITOH	(NO) YES	Inhibit Time Out Handler
- ITEI	xxx	Incoming Trunk group Exclusion Index
- LDN	xx...xx	Listed Directory Number
- DID	(NO) YES	Direct Inward Dial (DID)
-- MNXX	(NO) YES	Multiple NXX
-- SAVE	1-4	Saved digits
--- OFFC	xxx	Office
-- RNGE	0-9999 0-9999	Range

## NPA: Number Plan area code data block

---

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	NET	Feature = NET
TRAN	aaa	Translator (aaa = AC1, AC2, or SUM)
TYPE	NPA	Type = NPA (Number plan area code transmission)
NPA	xxx y..y z..z	Numbering Plan Area code translation, where xxx = 3 digits, y..y = 1-3 digits, and z..z = 1-4 digits. the y..y and z..z entries are optional. Precede the xxx entry with the character "1" when using 1+ dialing.
- RLI	xxx	Route List Index
- SDRR	a...a	Supplemental Digit Restriction or Recognition (a...a = ALLOW, DDD, DENY, DID, ITED, LDDD, LDID, or STRK)
-- DENY	x...x	Number to be denied within the NPA
-- DMI	1-255	Digit Manipulation Index
-- - LDID	x...x	Local DID number to be recognized
-- LDDD	x...x	Local DDD number to be recognized
-- DID	x...x	Remote DID number to be recognized
-- DDD	x...x	Remote DDD number to be recognized
-- ITED	x...x	Incoming Trunk group Exclusion Digits
-- ALLOW	x...x	Allowed codes
- ITEI	xxx	Incoming Trunk group Exclusion Index

---

---

**NSCL: Network Speed Call List data block**

---

<b>Prompt</b>	<b>Response</b>	<b>Comment</b>
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	NET	Feature = NET
TRAN	aaa	Translator (aaa = AC1, AC2, or SUM)
TYPE	NSCL	Type = NSCL (Network Speed Call List)
- ITEI	xxx	Incoming Trunk group Exclusion Index
NSSC	xxx	Network Speed Call access Code
- SSCL	0-253	System Speed Call List number

---

## NXX: Central Office Code Translation data block

---

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	NET	Feature = NET
TRAN	aaa	Translator (aaa = AC1, AC2, or SUM)
TYPE	NXX	Type = NXX (Central Office Code Translation)
NXX	xxx y..y	Numbering Plan Exchange (Central Office)
- RLI	xxx	Route List Index
- SDRR	a...a	Supplemental Digit Restriction or Recognition (a...a = ALLOW, DDD, DENY, DID, ITED, LDDD, LDID, or STRK)
-- DENY	x...x	Number to be denied within the NXX
-- DMI	1-255	Digit Manipulation Index
--- LDID	x...x	Local DID number to be recognized
- LDDD	x...x	Local DDD number to be recognized
-- DID	x...x	Remote DID number to be recognized
-- DDD	x...x	Remote DDD number to be recognized
-- ITED	x...x	Incoming Trunk group Exclusion Digits
-- ALLOW	x...x	Allowed codes
- ITEI	xxx	Incoming Trunk group Exclusion index

---

## SPN: Special Number Translation data block

Prompt	Response	Comment
REQ	a...a	Request (a...a = CHG, END, LCHG, NEW, OUT, or PRT)
CUST	xx	Customer number associated with this function
FEAT	NET	Feature = NET
TRAN	aaa	Translator (aaa = AC1, AC2, or SUM)
TYPE	SPN	Type = SPN (Special Number Translation)
SPN	x..x	Special Number translation
- FLEN	(0)-24	Flexible Length
- - INPL	(NO) YES	International Dialing Plan
- ITOH	(NO) YES	Inhibit Time-out Handler
- RLI	xxx	Route List Index
- CLTP	a...a	Type of call that is defined by the special number (a...a = (NONE), LOCL, NATL, INTL, SSER, or SERH)
- SDRR	a...a	Supplemental Digit Restriction or Recognition (a...a = ALLOW, ARRN, DDD, DENY, DID, ITED, LDDD, LDID, or STRK)
- - DENY	x...x	Number to be Denied
- - DMI	1-255	Digit Manipulation Index
- - - LDID	x...x	Local DID number to be recognized
- - LDDD	x...x	Local DDD number to be recognized
- - DID	x...x	Remote DID number to be recognized
- - DDD	x...x	Remote DDD number to be recognized
- - ITED	x...x	Incoming Trunk group Exclusion Digits
- - ARRN	x...x	Alternate Routing Remote Number
- - STRK	x...x	Allowed codes for ADM/MDM
- - ALLOW	x...x	Allowed codes
- - - ARLI	0-255 0-999	Alternative Route List Index

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ALLOW	x...x	<p>Allowed codes for ADM/MDM to be recognized within the NXX, NPA or SPN</p> <p>The maximum number of digits to be entered must be the lesser of 10 or:</p> <p style="padding-left: 40px;">7-m (8-m for 1 + dialing) for NXX 10-m (11-m for 1 + dialing) for NPA 19-m for SPN</p> <p>Where: m = number of digits entered for NPA, NXX, or SPN.</p> <p>These numbers do not have to be leftwise unique. For non leftwise unique numbers, the longer number takes precedence over the shorter number. However, the exact same numbers (not leftwise unique and the same length) are still blocked.</p>	basic-22
ARLI	0-255 0-999	<p>Alternative Route List Index</p> <p>Alternative Route List Index with Flexible Numbering Plan (FNP) package 160.</p> <p>The ARRAN prompt is repeated after the ARLI prompt until &lt;cr&gt; is entered (in response to ARRAN).</p>	fnp-16
ARRN	x...x	<p>Alternate Routing Remote Number to be recognized within SPN.</p> <p>The maximum number of digits to be entered must be the lesser of 10 or 19-m for SPN.</p> <p>Where: m = number of digits entered for SPN.</p> <p>These numbers do not have to be leftwise unique. For non leftwise unique numbers, the longer number takes precedence over the shorter number. However, the exact same numbers (not leftwise unique and the same length) are still blocked.</p>	fnp-16
CLTP	(NONE) LOCL NATL INTL SSER SERH	<p>Type of call that is defined by the special number.</p> <p>No call type Local National International Special Service Special Service Hold</p>	kd3-20

Prompt	Response	Comment	Pack/Rel
CUST	xx	Customer number associated with this function as defined in LD 15.	b/nars-1
DDD	x...x	Remote DDD number to be recognized within the NPA, NXX or SPN.  The maximum number of digits to be entered must be the lesser of 10 or:  7-m (8-m for 1 + dialing) for NXX 10-m (11-m for 1 + dialing) for NPA 19-m for SPN  Where: m = number of digits entered for NPA, NXX, or SPN.  These numbers do not have to be leftwise unique. For non leftwise unique numbers, the longer number takes precedence over the shorter number. However, the exact same numbers (not leftwise unique and the same length) are still blocked.	b/nars-5
	<cr>	Return to SDRR prompt.	
DENY	x...x	Number to be denied within the NPA,NXX,SPN, or SDR.  The maximum number of digits to be entered must be the lesser of 10 or:  7-m (8-m for 1 + dialing) for NXX 10-m (11-m for 1 + dialing) for NPA 19-m for SPN  Where: m = number of digits entered for NPA, NXX, or SPN.  These numbers do not have to be leftwise unique. For non leftwise unique numbers, the longer number takes precedence over the shorter number. However, the exact same numbers (not leftwise unique and the same length) are still blocked.	b/nars-1
	<cr>	Return to SDRR prompt.	

# LD 90

Prompt	Response	Comment	Pack/Rel
DID	(NO) YES x...x	Direct Inward Dial (DID) This location arranged for DID Remote DID number to be recognized within the NPA,NXX or SPN.  The maximum number of digits to be entered must be the lesser of 10 or:  7-m (8-m for 1 + dialing) for NXX 10-m (11-m for 1 + dialing) for NPA 19-m for SPN  Where: m = number of digits entered for NPA, NXX, or SPN.  These numbers do not have to be leftwise unique. For non leftwise unique numbers, the longer number takes precedence over the shorter number. However, the exact same numbers (not leftwise unique and the same length) are still blocked.  Precede with X to remove. Return to SDRR prompt.	bnars-1
DMI	1-255 1-999	Digit Manipulation Index Digit Manipulation Index with Flexible Numbering Plan (FNP) package 160 DMI is only prompted when the Directory Number Expansion (DNXP) package 150 is equipped and SDRR = LDID.	dnxp-13
FEAT	NET	Feature Network translation tables	nars-1
FLEN	(0)-24	Flexible Length (the number of digits the system expects to receive before accessing a trunk and outputting these digits) Flexible Length range	fnp-20
HLOC	xxx xxx y..y	Home Location code xxx = 3 digits Extended Home Location code, where xxx = 3 digits and y..y = 1-4 digits. Separate the xxx and y..y with a space.	nars-1



# LD 90

Prompt	Response	Comment	Pack/Rel
LDDD	x...x	Local DDD number to be recognized within the NPA, NXX, or SPN  The maximum number of digits to be entered must be the lesser of 10 or:  7-m (8-m for 1 + dialing) for NXX 10-m (11-m for 1 + dialing) for NPA 19-m for SPN  Where: m = number of digits entered for NPA, NXX, or SPN.  These numbers do not have to be leftwise unique. For non leftwise unique numbers, the longer number takes precedence over the shorter number. However, the exact same numbers (not leftwise unique and the same length) are still blocked.	b/nars-5
	<cr>	Return to SDRR prompt	
LDID	x...x	Local DID number to be recognized within the NXX, NPA or SPN  The maximum number of digits to be entered must be the lesser of 10 or:  7-m (8-m for 1 + dialing) for NXX 10-m (11-m for 1 + dialing) for NPA 19-m for SPN  Where: m = number of digits entered for NPA, NXX, or SPN.  These numbers do not have to be leftwise unique. For non leftwise unique numbers, the longer number takes precedence over the shorter number. However, the exact same numbers (not leftwise unique and the same length) are still blocked.	b/nars-5
	<cr>	Return to SDRR prompt	
LDN	xx...xx	Listed Directory Number Up to 10 digit listed directory number, including NPA.	
LOC	x...x xxx y..y	Location code, where xxx = 3 digits Extended Location code, where xxx = 3 digits and y..y = 1-4 digits. Separate xxx and y..y entries with a space.	nars-1

Prompt	Response	Comment	Pack/Rel
MNXX	(NO) YES	Multiple NXX codes and ranges This prompt should not be used with NARS DPNSS1.	b/nars-5
NPA	xxx	Numbering Plan Area code translation Area code translation, where xxx = 3 digits. A leading zero is not allowed.	nanp-19
	xxx y..y z..z	Extended NPA code translation. An extended NPA code can be from 4 to 10 digits, where xxx = 3 digits, y..y = 1-3 digits and z..z = 1-4 digits. Separate xxx, y..y and z..z entries with a space.	
	1xxx	Area code translation using 1+ dialing, where xxx = 3 digits. Note that the xxx entry must be preceded with the character "1".	
	1xxx y..y z..z	Extended NPA code translation 1+ dialing. An extended NPA code using 1+ dialing can be from 5 to 11 digits, where xxx = 3 digits, y..y = 1-3 digits and z..z = 1-4 digits. Separate xxx, y..y and z..z entries with a space. Note that the xxx entry must be preceded with the character "1".	
	xxxxxxx	Numbering Plan Area Code up to 7 digits are allowed when TYPE = LOC	basic-25
NSSC	xxx	One to three-digit Network Speed Call access Code	nars-1
NXX		Numbering Plan Exchange	b/nars-1
	xxx	Office code translation, where xxx = 3 digits. A leading zero is not allowed.	
	1xxx	Office code translation using 1+ dialing, where: xxx = 3 digits. The xxx entry must be preceded with the digit "1".	
	xxx y..y	Extended NXX code, where xxx = 3 digits and y..y = 1-4 digits. Separate the NXX code (xxx) and the extended	
	1xxx y..y	Extended NXX code using 1+ dialing, where xxx = 3 digits and y..y = 1-4 digits. Separate the NXX code (xxx) and the extended code (y..y) with a space. The xxx entry must be preceded with the digit "1".	
	<cr>	Return to REQ.	
	xxxxxxx	Public Network Exchange Code up to 7 digits are allowed when TYPE = LOC	basic-25

# LD 90

Prompt	Response	Comment	Pack/Rel
OFFC	xxx	Office (NXX of the DID number) Prompted if MNXX = YES.	b/nars-5
REQ	CHG END LCHG  NEW OUT PRT	Request. Change existing data block. Exit Overlay program. Print date and time that each data group was last changed (data groups include: LOC, HLOC, NPA, HNPA, NXX, SPN and NSCL) Create new data block. Delete existing data block. Print data block.	esn-1
RLI	0-127 0-255 0-999	BARS Route List Index NARS Route List Index Flexible Numbering Plan (FNP) Route List Index Must be in the range specified by prompt MXRL in LD 86, (i.e., 0 ≤ RLI < MXRL).	esn-20
RNGE	0-9999 0-9999	Range (upper and lower limit for DID number range) Inputs must be the same number of digits as the number of trailing digits to be saved.	b/nars-1
SAVE	1-4	Saved digits (number of trailing digits to be saved in dialed extension number - DID only) Must be 4 if MNXX = YES.	b/nars-1
SDRR	ALLOW ARRN DDD DENY DID ITED LDDD LDID STRK <cr>	Supplemental Digit Restriction or Recognition Allowed codes Alternate Routing Remote Number Recognized remote Direct Distance Dial codes Restricted codes Recognized remote Direct Inward Dial codes Incoming Trunk group Exclusion Digits Recognized Local Direct Distance Dial codes Recognized Local Direct Inward Dial codes For ADM/MDM trunk groups Return to SPN	b/nars-5

Prompt	Response	Comment	Pack/Rel
SPN		Special Number. Enter a carriage return or <cr> to return to the REQ prompt.	b/nars-1
	x...x	Special Number translation Enter the SPN digits in groups of 3 or 4 digits, separated by a space (e.g., xxxx xxx xxxx). The SPN can be up to 19 digits long. The maximum length no longer depends on whether or not the first digit of the SPN is a "1". That restriction has been removed. The maximum number of groups allowed is 5.	
SSCL	0-4095	System Speed Call List number	nars-1
STRK	x...x	Allowed codes for ADM/MDM to be recognized within the NXX, NPA or SPN The maximum number of digits to be entered must be the lesser of 10 or: 7-m (8-m for 1 + dialing) for NXX 10-m (11-m for 1 + dialing) for NPA 19-m for SPN Where: m = number of digits entered for NPA, NXX, or SPN. These numbers do not have to be leftwise unique. For non leftwise unique numbers, the longer number takes precedence over the shorter number. However, the exact same numbers (not leftwise unique and the same length) are still blocked.	
TRAN	AC1 AC2 SUM	Translator Access Code 1 (NARS/BARS) Access Code 2 (NARS) Summary of Network Translations (allowed when REQ = PRT)	b/nars-1

# LD 90

Prompt	Response	Comment	Pack/Rel
TYPE		Type of data block	esn-1
	ALL	If REQ = PRT, all of the following types will be printed	
	HLOC	ESN Home Location Code translation data block (NARS only)	
	HNPA	Home NPA translation code (Should not be used on DPNSS1)	
	LOC	ESN Location Code translation data block (NARS only)	
	NPA	Numbering Plan Area code translation data block (Should not be used on DPNSS1)	
	NSCL	Network Speed Call List data block	
	NXX	Central Office Code Translation data block (Should not be used on DPNSS1)	
	SPN	Special code translation data block	

---

---

## LD 93: Multi-Tenant Service

---

Overlay program 93 is used to enable and administer the Multi-Tenant Service feature. It is used to configure or change assignments and print data for Attendant Console groups, Tenant-to-Tenant groups, Tenant-to-Route groups, Tenant-to-Attendant Console groups, and Route-to-Attendant Console groups.

## Prompts and responses

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	a...a	Type of data block (a...a = ACG, CPG, CPGP, RACC, RACG, RCPG, TACC, TACG, TCPG, TENS, or TGEN)
CUST	xx	Customer number associated with this function
CPG	1-63	Console Presentation Group number
CPGS	(NO) YES	Customer Presentation Group Services
ROUT	0-511	Route number
TEN	1-511	Tenant number
MBGS	(0)-65535	Multi-location Business Group Subgroup
SGRP	(0)-999	Scheduled Access Restriction Group number
ECDN	x...x	External Call DN
ICDN	x...x	Internal Call DN
ICPS	aaa	Intercept Computer Printer Search [(CIR) or COM]
- ICPR	0-<NIPN>	Intercept Computer Printer number
ACC	aaaa	Access (aaaa = ALLOW or DENY)
DENY	1-511 1-511	Access denied tenant numbers
ALLOW	1-511 1-511	Access allowed tenant numbers
AGNO	0-63	Attendant Console Group Number
NTBL	(0)-63	NAS routing Table
ANUM	1-63 1-63	Add Attendant Console Numbers
NAGN	0-63	Night Attendant Console Group Number
LDN0	x...x	Listed DN 0
LDN1	x...x	Listed DN 1
LDN2	x...x	Listed DN 2
LDN3	x...x	Listed DN 3
LDN4	x...x	Listed DN 4
LDN5	x...x	Listed DN 5
NIT1	x...x	First Night Service by Time of Day (NTOD) DN

---

TIM1	hh mm	Time for first NTOD DN
NIT2	x...x	Second NTOD DN
TIM2	hh mm	Time for second NTOD DN
NIT3	x...x	Third NTOD DN
TIM3	hh mm	Time for third NTOD DN
NIT4	x...x	Fourth NTOD DN
TIM4	hh mm	Time for fourth NTOD DN
ICI	xx aaa	Incoming Call Indicators (ICI)
AQTT	0-(30)-255	Attendant Queuing Threshold
AODN	xxxx	Attendant Overflow DN
CWCL	(0)-255 (0)-255	Call Waiting Call Limit
CWTM	(0)-511 (0)-511	Call Waiting Time
CWBZ	(NO) YES	Call Waiting Buzz
EFLL	(0)-8064	Efficiency Factor Loading Level
FRRT	0-511	First RAN Route number
- FRT	0-(20)-2044	First RAN Time threshold
SRRT	0-511	Second RAN Route number
- SRT	0-(20)-2044	Second RAN Time threshold
WAIT	aaa	Wait time treatment (aaa = (RGB), MUS, or SIL)
- MURT	0-511	Music Route number if WAIT = MUS
RICI	(NO) xx	Recorded overflow announcement on ICI keys

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ACC		Access	tens-7
	DENY	Denied tenants are to be entered. Sets with TEND Class of Service can access all routes. Sets with TENA can only access routes if tenant to route access is allowed for that set's tenant. When REQ = PRT, print access denied tenants.	
	ALLOW	Allowed tenants are to be entered. Sets with TEND Class of Service can access all routes. Sets with TENA can only access routes if tenant to route access is allowed for that set's tenant. When REQ = PRT, print access allowed tenants.	
AGNO	0-63	Attendant Console Group Number AGNO 0 always exists and contains all Attendant Consoles that are configured for the customer. AGNO is initially specified for all tenants. When TYPE = CPG, AGNO cannot be zero.	tens-7
ALLOW	1-511 1-511 ALL <cr>	Access allowed tenant numbers Prompted when ACC = ALLOW. Access allowed all tenants Stop ALLOW prompt.	tens-7
ANUM	1-63 1-63 <cr>	Add Attendant Console Numbers. Stop prompt. Precede with X to remove.	tens-7
AODN	xxxx	Attendant Overflow DN Precede with X to remove.	aop/ cpg-15
AQTT	0-(30)-255	Attendant Queuing Threshold	aop/ cpg-15
CPG	1-63	Console Presentation Group number Use <cr> to print all configured CPG data blocks for the customer.	cpg-15



# LD 93

Prompt	Response	Comment	Pack/Rel
DENY	1-511 1-511 ALL <cr>	Access denied tenant numbers Prompted when ACC = DENY. Access denied all other tenants Stop DENY prompt.	tens-7
ECDN	x...x	External Call DN, where: <ul style="list-style-type: none"><li>x...x = up to 13 digits</li></ul> DN used for intercept transfer when the FDN and multi-tenant is not on intercept position. The DN is used for intercept treatment for external calls. Prompted with Intercept Computer Interface (ICP) package 143.	icp-16
EFLL	(0)-8064	Efficiency Factor Loading Level Prompted with Network Attendant Service (NAS) package 159.	nas-18
FRRT	0-511	First RAN Route number Precede with X to remove.	roa/cpg-15
FRT	0-(20)-2044	First RAN Time threshold	roa/cpg-15
ICDN	xxxx	Internal Call DN, where: <ul style="list-style-type: none"><li>x...x = up to 13 digits</li></ul> DN used for intercept transfer when the FDN and multi-tenant is not on intercept position. The DN is used for intercept treatment for internal calls.	

Prompt	Response	Comment	Pack/Rel
ICI	xx aaa	Incoming Call Indicators (ICI). Where: xx = key number (0-19) aaa = Call type  aaa may be any of the following: CAx = Station Category (x = 1-7) CFB = Call Forward Busy CFN = Call Forward No Answer DF0 = Dial 0 Fully Restricted DL0 = Dial 0 IAT = Inter-Attendant call IEN = Idle Extension Notification INT = Intercept LCT = Lockout intercept LD0 = Listed DN 0 LD1 = Listed DN 1 LD2 = Listed DN 2 LD3 = Listed DN 3 LD4 = Listed DN 4 LD5 = Listed DN 5 MWC = Message Waiting Calls NUL = remove ICI appearances RLL = Recall Rxxx Rxxx = Routes (0-511). Enter one or more routes.	cpg-20
ICPR	0-<NIPN>	Intercept Computer Printer number NIPN is defined in LD 15. Prompted when ICPS = COM.	icp-10
ICPS	(CIR) COM	Intercept Computer Printer Search (when more than one console is used) Circular search One common printer for all consoles	icp-10
LDN0	xxxx	Listed DN 0 Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove.	cpg-15

# LD 93

Prompt	Response	Comment	Pack/Rel
LDN1	xxxx	Listed DN 1 Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove.	cpg-15
LDN2	xxxx	Listed DN 2 Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove.	cpg-15
LDN3	xxxx	Listed DN 3 Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove.	cpg-15
LDN4	xxxx	Listed DN 4 Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove.	nldn-20
LDN5	xxxx	Listed DN 5 Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove.	nldn-20
MBGS	(0)-65535	Multi-location Business Group Subgroup for tenant. Where: 0 = no indication 1-65535 = Subgroup (tenant) identifier  As with the ISDN Private Network Identifier (PNI), the entries to this prompt must be coordinated with the far-end to ensure all features function correctly within a network.	tens-16
MURT	0-511	Music Route number if WAIT = MUS Precede with X to remove.	roa/ cpg-15
NAGN	0-63	Night Attendant Console Group Number	

Prompt	Response	Comment	Pack/Rel
NIT1	xxxx	First Night Service by Time of Day (NTOD) DN DN can be defined as a PLDN Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove.	cpg-15
NIT2	xxxx	Second NTOD DN DN can be defined as a PLDN Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove.	cpg-15
NIT3	xxxx	Third NTOD DN DN can be defined as a PLDN Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove.	cpg-15
NIT4	xxxx	Fourth NTOD DN DN can be defined as a PLDN Up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150. Precede with X to remove.	cpg-15
NTBL	(0)-63	NAS routing Table to be used for calls directed to this Attendant Console Group (ACG)/Console Presentation Group (CPG).	nas-16
REQ	CHG END NEW	Request Change existing data block Exit Overlay program Create the Multi-Tenant Service data block.  If REQ = NEW and <cr> is entered for all prompts, then all parameters default to the customer data block (LD 15) values except LDN0-3, ICI, RIC1 and AQTT.	tens-7
	OUT PRT	Remove the Multi-Tenant Service data block. Print the data block specified by TYPE.	
RIC1	(NO) xx ... xx	Recorded overflow announcement on ICI keys 0-19 Precede with X to remove.	roa/ cpg-15

# LD 93

Prompt	Response	Comment	Pack/Rel
ROUT	0-511 <cr>	Route number Print all routes for the specified type when REQ = PRT.	tens-7
SGRP	(0)-999	Scheduled Access Restriction Group number. Prompted when TYPE = TGEN	sar-20
SRRT	0-511	Second RAN Route number Precede with X to remove.	roa/ cpg-15
SRT	0-(20)-2044	Second RAN Time threshold	roa/ cpg-15
TEN	1-511 <cr>	Tenant number Print specified data for all tenants of CUST when REQ = PRT.	tens-7
TIM1	hh mm	Time for first NTOD DN. Where: hh = 0-23 mm = 0-59	cpg-15
TIM2	hh mm	Time for second NTOD DN	cpg-15
TIM3	hh mm	Time for third NTOD DN	cpg-15
TIM4	hh mm	Time for fourth NTOD DN	cpg-15
TYPE		Type of data block	tens-7
	CPG	Console Presentation Group data block.  If REQ = NEW and <cr> is entered for all prompts, then all parameters default to the customer data block (LD 15) values except LDNO-LDN3, ICI, and RIC1 which are cleared.  Use <cr> to print all configured CPG data blocks for the customer.	
	CPGP	Console Presentation Group level parameters	
	RACC	Tenant-to-Route Access data block	
	RCPG	Route-to-Attendant Presentation Group data block	
	TACC	Tenant-to-Tenant Access data block	
	TCPG	Tenant-to-Attendant Console Group data block	

---

Prompt	Response	Comment	Pack/Rel
	TENS	Multi-Tenant Service data block	
	TGEN	Tenant SAR data block	
WAIT	(RGB)	Wait time treatment	roa/ cpg -15
	MUS	Ring Back	
	SIL	Music	
		Silence	

---

# LD 93

---

## LD 94: Multifrequency Signaling

---

Overlay program 94 allows the implementation and administration of R2 and L1 Multifrequency Compelled Signaling (MFC) and Multifrequency Signaling for Socotel (MFE) tables.

## Contents

Section	Page
<i>Overlay program 94 allows the implementation and administration of R2 and L1 Multifrequency Compelled Signaling (MFC) and Multifrequency Signaling for Socotel (MFE) tables.</i>	1021
<i>MFC Information:</i>	
MFC DID/TIE signal functions: Incoming and outgoing route tables	1022
MFC DID/TIE default (standard) incoming table	1024
MFC DID/TIE default (standard) outgoing table	1026
<i>MFE Information:</i>	
MFE signal functions: Incoming and outgoing route tables	1027
MFE DID default incoming table	1028
MFE DOD default outgoing table	1029
<i>2 of 5 and 2 Of 6 Information:</i>	
2 of 5 MFK signal functions ; Incoming and outgoing route tables	1030
2 of 6 MFK signal functions ; Incoming and outgoing route tables	1031
<i>L1 Signaling information:</i>	
Programmable signals for all 6 L1 signaling levels	1032
MFC default (standard) incoming tables for L1 signaling	1035
MFC default (standard) outgoing tables for L1 signaling	1039

## Prompts and responses

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, NEW, OUT, or PRT)
TYPE	aaaa	Type of data block (aaaa = L1MF, MFET, MFK5, MFK6, R2MF or R2MFC)
ICOG	aaa	Incoming/Outgoing (aaa = ICT or OGT)
MAXT	(1)-127	Maximum Number of Tables
TBNO	1-127 <cr>	Table Number
CACD	(NO) YES	Category Code Default
- SET	(1)-10	Set category code
- ATT	(1)-10	Attendant category code
- TIE	1-(6)-10	TIE category code
- NTT	1-(6)-10	Non-TIE category code
EECD	1-127 <cr>	End-to-End Signaling Code
SMFC	(NO) YES	Send MFC
SCNT	(NO) YES	Switch CNI on Next
CNDR	(NO) YES	Calling Number Display Restriction
LVNO	1-6	Level Number
DFLT	0-127	Default Table number
RECV	1-15 mmmm	Receive signal number and mnemonic (MFC or, MFE, MFK5 or MFK6)
	1-15 NUL	Remove signal number and mnemonic (MFC or, MFE, MFK5 or MFK6)
XMIT	mmmm 1-15	Transmit signal mnemonic and number (MFC, MFE or MFK)
	mmmm 0	Remove signal mnemonic and number (MFC, MFE or MFK)
	IDCT n	Idle Call Trace Signal number

**Table 13**  
**MFC DID/TIE signal functions: Incoming and outgoing route tables**

Group	Function mnemonic	Description of mnemonic
<b>Forward Level 1 Group I</b>	DGT1 -	Digit 1 -
	DGT9	Digit 9
	DGT0	Digit 0
	HTDM	H tandem signal. Sent before the called party DN if DN is in the Special Service List (SSL). The International Supplementary Features (SUPP) package 131 must be equipped.
	ECNI	CNI (Calling Number Identification) not available
	EODL	End of Dialing End of CPN (Calling Party Number) Request not accepted.
<b>Backward Level 1 Group A</b>	CCNI	Send category. Send first CNI digit. Send next CNI digit.
	COMP	Address Complete, next group
	CONG	Congestion
	FAIL	Call Failure
	NEXT	Send Next digit (fixed value)
	SCAT	Send Category
	SCNI	Send first CNI digit; send next CNI digit
	TERM	Terminated
	TFST *	Tandem, send first digit
	TNM1 *	Send last but one digit
	TNM2 *	Send last but two digits
	TNM3 *	Send last but three digits
TNXT *	Tandem, send next digit	

Group	Function mnemonic	Description of mnemonic
<b>Forward Level 2 Group II</b>	VACO *	Vacant Office
	OPER	Operator/attendant
	NOPR	Subscriber No Priority
	PRIO *	Subscriber with Priority
	REST	Restricted Station
	RICA *	Route Incoming Call to Attendant
	TOBI *	Toll Operator Break-In
	TOLL	Toll call
<b>Backward Level 2 Group B</b>	BUBA **	Busy (break in allowed after TOBI)
	BUBN **	Busy (break in not allowed after TOBI)
	BUSY	Station Busy
	CONG	Congestion
	FAIL	Failure
	IDCT	Idle Call Trace
	IDLE	Station Idle
	OUTT	Station Out-of-Order
	VACC	Vacant number

\* Function will not be transmitted (Receive only)

\*\* Function will not be received (Transmit only)

**Note:** Signal numbers not listed in Table 13 default to NUL (no assigned function).

# LD 94

**Table 14**  
**MFC DID/TIE default (standard) incoming table**

Group	Signal number	Function mnemonic
<b>Receive Level 1 Group I</b>	1 -	DGT1 -
	9	DGT9
	10	DGT0
	11	11 ASTX (CNR)
	12	ECNI
	12	12 DPAL (CNR)
	13	13 POND (CNR)
	15	EODL
	15	15 DPDN (CNR)
<b>Transmit Level 1 Group A</b>	1	NEXT
	3	COMP
	4	CONG
	5	SCAT
	6	TERM
	9	SCNI
	11	ASTX 11 (CNR)
	12	DPAL 12 (CNR)
	13	POND 13 (CNR)
<b>Receive Level 2 Group II</b>	1	NOPR
	2	PRIO
	3	NOPR
	5	OPER
	6	NOPR
	7	REST
	8	NOPR
	9	PRIO
	10	OPER
	11	NOPR
	12	NOPR
	13	NOPR

---

Group	Signal number	Function mnemonic
<b>Transmit Level 2 Group B</b>	2	IDLE
	3	BUSY
	4	CONG
	5	VACC
	8	OUTT
	9	FAIL

---

*Note:* Signal numbers not listed in Table 14 default to NUL (no assigned function.)

# LD 94

**Table 15**  
**MFC DID/TIE default (standard) outgoing table**

Group	Signal number	Function mnemonic
<b>Transmit Level 1 Group I</b>	1 -	DGT1 -
	9	DGT9
	10	DGT0
	12	ECNI
	15	EODL
<b>Receive Level 1 Group A</b>	1	NEXT
	2	TNM1
	3	COMP
	4	CONG
	5	SCAT
	6	TERM
	7	TMN2
	8	TNM3
	9	SCNI
	10	TFST
	11	TNXT
15	FAIL	
<b>Transmit Level 2 Group II; Receive Level 2 Group B</b>	1	NOPR
	5	OPER
	7	REST
	2	IDLE
	3	BUSY
	4	CONG
	5	VACC
	8	OUTT
	9	FAIL

**Note 1:** In Table 16, for incoming tables the signals which are received are forwarded signals, MFE tables have no Level 2 forward signals. Level 1 values for function xxxx range from DGT0 to DGT9 (Digits 0 - 9).

**Note 2:** Multiple function assignment allowed (same function to different signals).

**Note 3:** Signals transmitted in the case of incoming tables, are backward signals.

**Table 16**  
**MFE signal functions: Incoming and outgoing route tables**

Group I	Function mnemonic	Description of mnemonic
<b>Forward Level 1</b>	DGT1-9	Digits 1-9
	DGT0	Digit 0
	ACOC	Access code for a call to other installation
	ACSS	Access code for a call to special services
<b>Backward Level 1</b>	SACD	Send Access Code and Digits
	SEND	Send remaining digits (plus last digits if preceded by TRAN)
	COMP	Address Complete, change to Level 2 congestion
	TRAN	Transit connection
	FAIL	Failure, new attempt
	CONG	Congestion
<b>Backward: Level 2</b>	IDLE	Station Idle, charge call
	BUSY	Station Busy
	CONG	Congestion
	OUTT	Out-of-Order
	VACC	Vacant number

# LD 94

**Table 17**  
**MFE DID default incoming table**

Group I	Signal number	Function mnemonic
<b>Receive Level 1</b>	1-9	DGT1-DGT9
	10	DGT0
<b>Transmit Level 1</b>	2	SEND
	3	COMP
	-	CONG
<b>Transmit Level 2</b>	1	IDLE
	3	BUSY
	3	CONG
	3	OUTT
	3	VACC

**Table 18**  
**MFE DOD default outgoing table**

Group I	Signal number	Function mnemonic
<b>Transmit Level 1</b>	1-9	DGT1-DGT9
	10	DGT0
	1	ACOC
	5	ACSS
<b>Receive Level 1</b>	1	SACD
	2	SEND
	3	COMP
	6	TRAN
	8	FAIL
	9	CONG
<b>Receive Level 2</b>	1	IDLE
	2	IDLE
	3	BUSY
	4	IDLE
	5	IDLE
	6	IDLE
	7	BUSY
	8	BUSY
	9	BUSY
	10	BUSY

# LD 94

**Table 19**  
**2 of 5 MFK signal functions ; Incoming and outgoing route tables**

Group	Function mnemonic	Description of mnemonic
<b>Forward Group I</b>	DGT0-9	Digits 0-9
<b>Forward Group II</b>	LOCB	Regular subscriber
	SERB	Special Services inside the province
	NATB	National
	INTB	International
<b>Backward Code A</b>	GRPA	Send Group a digits
	CCAL	Send Class of Call
	GRBC	Send Group bc digits
	SALL	Send All the digits
	GRPC	Send Group c digits
	COMP	Change to code "b"
	CONG	Congestion
<b>Backward Code B</b>	FMTR	Subscriber free with Metering
	CONG	Congestion
	BUSY	Subscriber Busy
	OUTT	Line dead
	EOSL	End of Selection without line state reached

**Table 20**  
**2 of 6 MFK signal functions ; Incoming and outgoing route tables**

Group	Function mnemonic	Description of mnemonic
<b>Forward Group I</b>	DGT0-15	Digits 0-15
<b>Forward Group II</b>	LOCB	Provincial-regular subscriber (charging by block)
	LOCL	Provincial-regular subscriber (charging by line)
	NATB	National-regular subscriber (charging by block)
	NATL	National-regular subscriber (charging by line)
	INTB	International-regular subscriber (charging by block)
	INTL	International-regular subscriber (charging by line)
	SERB	Special services (charging by block)
	SERL	Special services (charging by line)
<b>Backward Code A</b>	GRBC	Send Group BC digits
	SALL	Send All the digits
	SORG	Send Origination subscribers number - All Digits
	CCAL	Send Class of Call
	CONG	Congestion
	COMP	Change to code "B"
<b>Backward Code B</b>	FMTR	Subscriber free with Metering
	CONG	Congestion
	BUSY	Subscriber Busy
	OUTT	Line dead
	EOSL	End of Selection without line state reached

# LD 94

**Table 21**  
**Programmable signals for all 6 L1 signaling levels**

Group	Function mnemonic	Description of mnemonic
<b>Forward Level 1</b>	DGT1 -	Digit 1 -
	DGT9	Digit 9
	DGT0	Digit 0
	UREJ	Level 1 signal rejected (Abort call)
	GOEN	Change to a Supplementary Service (SS) level. New level is Level 6 when terminator has a Backward Supplementary Service (BSS). Otherwise, the new level is Level 5.
	EODL	End of Dialing. No more digits to send. Aborts call when no digits have been received.
<b>Backward Level 1</b>	NEXT	Send Next digit in destination address
	TNFS	Tandem encountered. Send digits again starting from the first digit.
	COMP	Address Complete (Terminate signaling)
	FAIL	Call Failure (Abort call)
	SCAT	Send calling party category (always rejected)
	TERM	Address complete (Terminate signaling)
	CONG	Congestion (Abort call)
	EINF	Request change from Level 1 to Level 6 for BSS activity. Enhanced signal set is implied.
	ELV2	Address complete. Change to Level 2. Signaling will also use Level 3 or higher.
	ENO1	Request next digit in destination address. Implies using at least Level 3 signaling.
	TNTX	Tandem encountered (Send next digit)

Group	Function mnemonic	Description of mnemonic
<b>Forward Level 2</b>	OLNE	Originator is a subscriber without priority
	OPER	Originator is an attendant
	NETW	Network call for Ring Again (RGA). Call is not intended for termination at a station.
	LSIG*	Restricted circuit
<b>Backward Level 2</b>	BUSY	Destination is busy
	FAIL	Call has failed. Abort.
	VCOT	Call has terminated on a vacant DN
	IDLE	Destination is idle
	CONG	Congestion (Abort call)
	SOTI	State of Termination undetermined
<b>Forward Level 3</b>	SIIN	Simple call (No restrictions)
	SUPL	Request a Forward Supplementary Service (FSS)
	NOSS	No further SS activity
<b>Backward Level 3</b>	TERM	Call complete (Terminate signaling)
	FAIL	Call has failed (Abort)
	SUPL	Request BSS activity
	SCNI**	Request Call Number Indicator (CNI)
	NEXT	Send FSS digit
<b>Forward Level 4</b>	DGT1 -	CNI digit 1 -
	DGT9	CNI digit 9
	DGT0	CNI digit 0
	LFSS	Change to Level 1 when CNI is complete.
	EODG	No more CNI digits.

# LD 94

Group	Function mnemonic	Description of mnemonic
<b>Backward Level 4</b>	DGT1 -	CNI digit 1 -
	DGT9	CNI digit 9
	DGT0	CNI digit 0
	KEND	Changing to Level 6. Preceded by a LFSS signal.
	NEXT	Send next CNI digit
<b>Forward Level 5 and Backward Level 6</b>		
	DGT1	FSS digit 1
	DGT2	FSS digit 2
	DGT3*	FSS digit 3
	DGT4**	FSS Digit 4
	DGT5**	FSS Digit 5
	DGT6*	FSS Digit 6
	DGT7*	FSS Digit 7
	DGT8*	FSS Digit 8
	DGT9*	FSS Digit 9
	DGT10*	FSS Digit 10
	DGT11**	FSS Digit 11
	DGT12**	FSS Digit 12
	DGT13*	FSS Digit 13
	DGT14*	FSS Digit 14
	DGT15*	FSS Digit 15
<b>Backward Level 5 and Forward Level 6</b>		
	KEND	SS successful (Terminate signaling)
	FEND	SS failed (Terminate signaling)
	KMFC	SS successful (Signaling continues at a slower rate)

Group	Function mnemonic	Description of mnemonic
	FMFC	SS failed (Signaling continues at a slower rate)
	NEXT	Request next SS digit

\* Function will not be transmitted (Receive only)

\*\* Used for Ring Again (RGA)

**Table 22**  
**MFC default (standard) incoming tables for L1 signaling**

This table indicates the default signal tables for L1 signaling. The transmit sets indicate only those signals that can be sent. The receive sets must have duplicate signals in order to be able to accept signals that must be mapped to another signal for processing.

Group	Signal number	Function mnemonic
<b>Receive Level 1 Group I</b>	1 -	DGT1 -
	9	DGT9
	10	DGT0
	12	UREJ
	13	GOEN
	15	EODL
<b>Transmit Level 1 Group A</b>	1	NEXT
	2	TNFS
	3	COMP
	4	FAIL
	5	SCAT
	6	TERM

# LD 94

Group	Signal number	Function mnemonic
	9	CONG
	10	EINF
	11	ELV2
	12	ENOI
	14	TNXT
<b>Receive Level 2 Group II</b>	1	OLNE
	2	LSIG
	4	OLNE
	5	OPER
	7	OPER
	8	OPER
	9	OPER
	10	NETW*
	11	OLNE
	12	UREJ
	13	OLNE
<b>Transmit Level 2 Group B</b>	3	BUSY
	4	FAIL
	5	VCOT
	6	IDLE
	9	CONG
	14	SOTI
<b>Receive Level 3 Group III</b>	1	SIIN
	2	SIIN
	3	SIIN

Group	Signal number	Function mnemonic
	4	SIIN
	5	SUPL
	6	SUPL
	7	SUPL
	8	SUPL
	9	SIIN
	10	SIIN
	11	SUPL
	12	SUPL
	15	NOSS
<b>Transmit Level 3 Group C</b>	1	TERM
	4	FAIL
	8	SUPL
	9	SCNI*
	15	NEXT
<b>Receive Level 4 Group IV</b>	1 -	DGT1 -
	9	DGT9
	10	DGT0
	11	LFSS
	15	EODG
<b>Transmit Level 4 Group D</b>	1 -	DGT1 -
	9	DGT9
	10	DGT0
	11	KEND
	15	NEXT

# LD 94

Group	Signal number	Function mnemonic
<b>Receive Level 5 Group V</b>	1 -	DGT1 -
	9	DGT9
	10 -	DG10 -
	15	DG15
<b>Transmit Level 5 Group E</b>	11	KEND
	12	FEND
	13	KMFC
	14	FMFC
	15	NEXT
<b>Receive Level 6 Group VI</b>	11	KEND
	12	FEND
	13	KMFC
	14	FMFC
	15	NEXT
<b>Transmit Level 6 Group F</b>	1	DGT1
	2	DGT2
	4	DGT4
	13	DG13

\* Not included unless Ring Again (RGA) is included for L1 signaling.

**Table 23**  
**MFC default (standard) outgoing tables for L1 signaling**

This table indicates the default signal tables for L1 signaling. The transmit sets indicate only those signals that can be sent. The receive sets must have duplicate signals in order to be able to accept signals that must be mapped to another signal for processing.

Group	Signal number	Function mnemonic
<b>Transmit Level 1 Group I</b>	1 -	DGT1 -
	9	DGT9
	10	DGT0
	12	UREJ
	13	GOEN
	15	EODL
<b>Receive Level 1 Group A</b>	1	NEXT
	2	TNFS
	3	COMP
	4	FAIL
	5	SCAT
	6	TERM
	7	RUID
	8	ALFS
	9	CONG
	10	EINF
	11	ELV2
	12	ENOI
	13	PSNX
	14	TNXT

# LD 94

Group	Signal number	Function mnemonic
<b>Transmit Level 2 Group II</b>	1	OLNE
	2	LSIG
	5	OPER
	10	NETW*
<b>Receive Level 2 Group B</b>	3	BUSY
	4	FAIL
	5	VCOT
	6	IDLE
	9	CONG
	10	BUSY
	11	IDLE
	12	BUSY
	13	IDLE
	14	SOTI
<b>Transmit Level 3 Group III; Receive Level 3 Group C</b>		
	1	SIIN
	5	SUPL
	15	NOSS
	1	TERM
	2	TERM
	3	TERM
	4	FAIL
	5	TERM
	7	SUPL
	8	SUPL
	9	SCNI*
	10	SUPL

Group	Signal number	Function mnemonic
	11	SCNI*
	12	SCNI*
	13	SUPL
	14	SCNI*
	15	NEXT
<b>Transmit Level 4 Group IV</b>	1 -	DGT 1 -
	9	DGT9
	10	DGT0
	11	LFSS
	15	EODG
<b>Receive Level 4 Group D</b>	1 -	DGT 1 -
	9	DGT9
	10	DGT0
	11	KEND
	15	NEXT
<b>Transmit Level 5 Group V</b>	1 -	DGT1 -
	3	DGT3
	4	DGT4*
	5	DGT5*
	6 -	DGT6 -
	9	DGT9
	10	DGT0
	11	DG11*
	12	DG12*
<b>Receive Level 5 Group E</b>	11	KEND

# LD 94

Group	Signal number	Function mnemonic
	12	FEND
	13	KMFC
	14	FMFC
	15	NEXT
<b>Transmit Level 6 Group VI</b>	11	KEND
	12	FEND
	13	KMFC
	14	FMFC
	15	NEXT
<b>Receive Level 6 Group F</b>	1 -	DGT 1 -
	9	DGT9
	10	DGT0
	11 -	DG11 -
	15	DG15

\* Not included unless Ring Again (RGA) is included for L1 signaling.

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
ATT	(1)-10	Attendant category code Category code for attendants	mfc-10
CACD	(NO) YES	Category Code Default Change category code default. Prompted when TYPE = R2MF	opcb-14
CNDR	(NO) YES	Calling Number Display Restriction Set the table for CNDR CLID feature	basic-24
DFLT	0-127	Default table number	mfc-10
EECD	1-127 <cr>	End-to-End Signaling code Default to TBNO response when REQ = NEW otherwise leave TBNO as assigned.	mfc-18
ICOG	ICT OGT	Incoming/Outgoing Incoming table Outgoing table	mfc-10
LVNO	1-6	Level Number  1-2 for TYPE = R2MF, MFK5, MFK6 1-6 for TYPE = L1MF  Precede with X to remove.	mfc-10
MAXT	(1)-127	Maximum number of Tables Prompted when REQ = NEW	mfc-10
NTT	1-(6)-10	Non-TIE category code Category code for non-TIE trunks	mfc-14

# LD 94

Prompt	Response	Comment	Pack/Rel
RECV	1-15 mmmm	Receive signal number and mnemonic (MFC or, MFE, MFK5 or MFK6)  Signal number range is: 1 - 10 if TYPE = MFK5 1 - 15 if TYPE = MFK6	mfc-10
	1-15 NUL	Remove signal number and associated function mnemonic.	
	<cr>	Stop RECV prompts Refer to Tables 13 through 23 for function mnemonics.	
REQ	CHG END NEW OUT PRT	Request Change existing data. Exit Overlay program. Add new data to the system. Remove data block. Print data.	mfc-10
SCNT	(NO)  YES	Switch CNI on Next. When the NEXT signal is received during CNI transmission on Level 1, the system will continue with sending the calling number. When the NEXT signal is received during CNI transmission on Level 1, the system will switch to called number and then send the next called number digit.	mfc-18
SET	(1)-10	Set category code. Category code for SL-1 and 500/2500 sets.	mfc-10
SMFC	(NO)  YES	Send MFC Backward signals are stopped when the forward signal is recognized as having stopped. Backward signals are sent (incoming calls) pulsed for 150 ms or received (outgoing calls) pulsed 150 ms +/- 20%.	mfc-18
TBNO	1-127 <cr>	Table Number MFC or, MFE, MFK5 or MFK6 table number Print all MFC, MFE, MFK5 or MFK6 tables.	mfc-10
TIE	1-(6)-10	TIE category code Category code for TIE trunks	mfc-10

Prompt	Response	Comment	Pack/Rel
TYPE	L1MF	Type of data block. L1 MFC data block Must have X08 to X11 Gateway (L1MF) package 188.	mfc-10
	MFET	MFE data block	
	MFK5	2/5 Spanish KD3 MF Signaling	
	MFK6	2/6 Spanish KD3 MF Signaling	
	R2MF	R2 MFC data block	
XMIT	m m m m 1-15	Transmit signal mnemonic and number (MFC, MFE or MFK)  1 - 10 if TYPE = MFK5 1 - 15 if TYPE = MFK6	mfe-10
	m m m m 0	Remove function mnemonic m m m m and associated signal number  Any undesired function in the default transmit tables should not be removed, but instead assigned a different signal number.  LNVO is prompted following a null entry for XMIT. If nothing is entered in response to LVNO then, provided that there is a level one, the table is stored.	
	IDCT n	Idle Call Trace signal number (Default is the same as the IDLE signal) Where: n = signal number and 0 = close	
	<cr>	Stop XMIT prompts. Refer to Tables 18 through 28 for the function mnemonics.	

# LD 94

---

## LD 95: Call Party Name Display

---

Overlay program 95 is used to define, change, remove or print information for the Call Party Name Display (CPND) data block and name assignment, on a per customer basis.

## Prompts and responses

### Contents

Section	Page
<i>Prompts and responses by task:</i>	
Create or Change Calling Party Name Display (CPND)	1048
Add Calling Party Name Display name	1049
Change Calling Party Name Display name	1050
Remove Calling Party Name Display name	1050
Print Calling Party Name Display data and names	1051

### Create or Change Calling Party Name Display (CPND)

Prompt	Response	Comment
REQ	aaa	Req = NEW or CHG
TYPE	CPND	Type = CPND (Calling Party Name Display)
CUST	xx	Customer number associated with this function
CNFG	aaaa	Configuration (aaaa = (ALON), REMO, or LOCL)
MXLN	5-(17)-27	Maximum Length
STAL	(NO) YES	Static Allocation of name storage
- DFLN	5-(13)-27	Default Length
DES	(NO) YES	Designator for Multiple Appearance DNs allowed
RESN	(NO) YES	Display of Reason for redirecting calls allowed
- CFWD	(F) aaaa	Mnemonic for Call Forward All Calls display
- CFNA	(N) aaaa	Mnemonic for Call Forward No Answer display
- HUNT	(B) aaaa	Mnemonic for Call Forward No Answer display
- NITC	(NI) aaaa	Mnemonic for Call Forward Non Intercom Call
- PKUP	(P) aaaa	Mnemonic for Call Pickup display
- XFER	(T) aaaa	Mnemonic for Call Transfer display
- AAA	(A) aaaa	Mnemonic for Attendant Alternative Answering display

## Add Calling Party Name Display name

Prompt	Response	Comment
REQ	NEW	Req = NEW
TYPE	NAME	Type = NAME (CPND Name)
CUST	xx	Customer number associated with this function
CPND_LANG	aaa	CPND Language (aaa = (ROM) or KAT)
DIG	0-253 0-99	Dial Intercom Group
- LANG	aaa	Language (aaa = (ROM), KAT, or ALL)
- NAME	a...a	CPND Name in ASCII characters
- XPLN	xx	Expected Length
DISPLAY_FMT	aaaa	Display Format (aaaa = (LAST) or FIRST)
DN	x...x	Directory Number
- LANG	aaa	Language (aaa = (ROM), KAT, or ALL)
- NAME	a...a	CPND Name in ASCII characters
- XPLN	xx	Expected Length
DCNO	0-254	Digit Conversion table Number
- IDC	0-254	Incoming DID Digit Conversion number
- NAME	a...a	CPND Name in ASCII characters

# LD 95

## Change Calling Party Name Display name

---

Prompt	Response	Comment
REQ	CHG	Req = CHG
TYPE	NAME	Type = NAME (CPND Name)
CUST	xx	Customer number associated with this function
CPND_LANG	aaa	CPND Language (aaa = (ROM) or KAT)
DIG	0-253 0-99	Dial Intercom Group
- NAME	a...a	CPND Name using ASCII characters
- DN	x...x	Directory Number
- NAME	a...a	CPND Name in ASCII characters
DCNO	0-254	Digit Conversion table Number
- IDC	0-254	Incoming DID Digit Conversion number
- NAME	a...a	CPND Name in ASCII characters

---

## Remove Calling Party Name Display name

---

Prompt	Response	Comment
REQ	OUT	Req = OUT
TYPE	NAME	Type = NAME (CPND Name)
CUST	xx	Customer number associated with this function
CPND_LANG	aaa	CPND Language (aaa = (ROM) or KAT)
DIG	0-253 0-99	Dial Intercom Group
DN	x...x	Remove Directory Number x...x
	x...x y...y	Remove range of DN-defined names
	ALL	Remove all DN-defined names
DCNO	0-254	Digit Conversion table Number
- IDC	0-254	Incoming DID Digit Conversion number
ARE YOU SURE?	(YES) NO	(Confirm) or remove operation

---

---

## Print Calling Party Name Display data and names

---

Prompt	Response	Comment
REQ	PRT	Req = PRT
TYPE	NAME	Type = NAME (CPND Name)
CUST	xx	Customer number associated with this function
CPND_LANG	aaa	CPND Language (aaa = (ROM) or KAT)
LANG	aaa	Language choice for name display (aaa = ROM or KAT)
PAGE	(NO) YES	Page headers and numbers printed (or not) if the Multiple DN/DIG is specified.
DIG	0-2045 0-99	Dial Intercom Group
SHRT	(NO) YES	Short form
- DN	x...x	Print single Directory Number x...x
	x...x y...y	Print range of Directory Numbers
	x/xx/xxx	Print all DNs starting with x, xx, or xxx
	ALL	Print all DNs
SHRT	(NO) YES	Short form
DCNO	0-254	Digit Conversion table Number
- IDC	nnn	Incoming DID Digit Conversion number
	ALL	All names defined are printed
SHRT	(NO) YES	Short form

---

# LD 95

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
AAA	aaa	Attendant Alternative Answering display mnemonic Default = A	cpnd-10
ARE YOU SURE?	(YES) NO	(Confirm) or remove operation. The default response is YES.	cpnd-1
CFNA	xxxx	Call Forward No Answer display mnemonic Default = N	cpnd-10
CFWD	xxxx	Call Forward All Calls display mnemonic Default = F	cpnd-10
CNFG	(ALON) REMO LOCL	Configuration Standalone CPND configuration Interwork with a remote directory system Interwork with a local (inboard) system	cpnd-10
CPND_LANG	(ROM) KAT	CPND language. Prompted when FTR = CPND. Roman CPND language Katakana CPND language	cpnd-19
CUST	xx	Customer number associated with this function as defined in LD 15	cpnd-10
DCNO	0-254	Digit Conversion table Number	dnis-17
DES	(NO) YES	Designator for Multiple Appearance DN's allowed Prompted when ODAS is equipped.	odas-10
DFLN	5-(13)-27	Default character string Length Default to 13 or MXLN, whichever is less. Prompted when STAL = YES	cpnd-10
DIG	0-2045 0-99 <cr>	Existing Dial Intercom Group number followed by member number To prompt DN  If CPND Name already exists, an error message is returned. Prompted when DIG is equipped.	di-10

Prompt	Response	Comment	Pack/Rel
DIG	gg mm	Existing Dial Intercom Group number followed by member number (optional), where: <ul style="list-style-type: none"> <li>• gg = 0-2045</li> <li>• mm = 0-99</li> </ul>	di-10
	gg	Existing DIG Group number Without member number specified, ALL members within this Group are printed.	
	ALL	Print all Dial Intercom Groups.	
	<cr>	Prompts DN	
DISPLAY_FMT	(LAST) FIRST	Display format for CPND name Last name, First name (Doe, John) First name, Last name (John Doe)	cpnd-19
DN	xxxx	Directory Number (Existing eligible DN or Partial DN). The DN can be up to 4 digits, up to 7 digits with Directory Number Expansion (DNXP) package 150.  Valid DN types are Single or Multiple line prime DN, trunk DN, attendant DN or ACD DN. If Partial DN, all possible DNs are printed.	cpnd-10
	x...x y...y	Range of DN-defined names are deleted/printed. This entry is valid when REQ = OUT/PRT.	
	ALL	All names defined are deleted/printed. ALL is a valid entry when REQ = OUT/PRT.	
	x/xx/xxx	DNs starting with x, xx, or xxx are printed. This entry is valid when REQ = PRT.	
	<cr>	To re-prompt DCNO  If the CPND name is already defined, an error message is returned.	
HUNT	xxxx	Call Forward No Answer display mnemonic Default = B	cpnd-10
IDC	0-254	Incoming DID Digit Conversion number Existing complete or partial IDC number	dnis-17
	ALL	All Names defined	

# LD 95

Prompt	Response	Comment	Pack/Rel
LANG	(ROM) KAT ALL  <cr>	Language choice for name for CPND screen and set display. Allowed only if REQ = OUT. English display (Roman characters) Non-English display (Katakana characters) Remove ALL names from CPND data block for the DN or DIG selected. Roman (English) display	cpnd-16
MXLN	5-(17)-27	Maximum allowable CPND character string Length Once an MXLN is entered, it cannot be changed to a lower value via the CHG prompt.	cpnd-10
NAME	a...a  <cr>	CPND Name using ASCII characters If STAL = YES, then Name size < XPLN If STAL = NO, then Name size = number of characters entered. DIG is reprompted. to DN prompt	cpnd-19
NITC	(NI) aaaa	Non intercom call NITC indicates that an intercom call terminated as a normal call.	
PAGE	(NO)  YES	Page headers and numbers not printed if the Multiple DN/DIG is specified. Page headers and numbers printed if the Multiple DN/DIG is specified. Page headers (date and page number) are not printed if a single DN/DIG is specified.	cpnd-10
PKUP	xxxx	Call Pickup display mnemonic. Default = P.	cpnd-10
REQ	CHG END NEW OUT PRT	Request. Change existing data block Exit Overlay program Create CPND data blocks and/or name strings Remove existing name or data block Print an existing Name or data block from the data base	cpnd-10
RESN	(NO) YES	Display of Reason for redirecting calls allowed	cpnd-19

Prompt	Response	Comment	Pack/Rel
SHRT	(NO) YES	Prints one DN or IDC per single line. (long form) Prints several DNs or IDCs on a single line. (one-line form) Prompted when DN = ALL, Range or Partial DN to be specified.	cpnd-10
STAL	(NO) YES	Static Allocation of Name storage  In a Hotel/Motel environment with Background Terminal facilities, STAL must be YES.  STAL = YES is recommended whenever CPND Names change frequently, for efficient use of available memory (i.e., when a guest checks in).	cpnd-10
TYPE	CPND NAME	Type of data block CPND data block CPND Name data block Allowed only if CPND data block is already defined.	cpnd-10
XFER	xxxx	Call Transfer display mnemonic  Mnemonic for call transfer display in Network Call Redirection (NCRD). One to four characters are accepted.  Default = T. Prompted if ISDN = YES in LD 15	nrcd-16
XPLN	xx  <cr>	Expected Length  Range must be between the Input Name length and the MXLN, or it default to DFLN. This value should be set to a sufficient length to allow for current and future names to be entered.  When REQ = NEW, the XPLN prompt defines the maximum name length for that particular entry. The XPLN for a DN cannot be changed without deleting that name entry.  This sets the XPLN to the input length, or DFLN whichever is greater. Re-prompts DIG.  Prompted when STAL = YES	cpnd-10

# LD 95

---

## LD 97: Configuration Record 2

---

Overlay program 97 is used to specify several system parameters for XPE and other related equipment. These parameters include the minimum flash timing to download to the XPE packs when required.

Loss and Level Plan information may also be specified. Refer to the *International Loss and Level Plan planning and engineering* NTP for information regarding Loss and Level Plans prior to making any changes to the parameters defined in this Overlay.

## Prompts and responses

### Contents

Section	Page
<i>Prompts and responses by data block:</i>	
BTD: Busy Tone Detection data block	1059
DTD: Dial Tone Detection parameters data block	1059
DTR: Digitone Receiver parameters data block	1060
FIRP: Fiber Remote Parameters Data Block	1062
LOSP: Loss Plan Tables data block	1063
LOSP: Loss Plan Tables data block (STYP or DTYP = PRED)	1063
LOSP: Loss Plan Tables data block (STYP or DTYP = DISL)	1064
LOSP: Loss Plan Tables data block (DTYP or STYP = CSTM)	1065
SUPL: Superloop parameters data block	1066
SYSM: System Parameters for MSDL/MISP card	1066
SYSP: System parameters for Peripheral Equipment	1067
XCTP: Conference/TDS/MF Sender card parameters data block	1068
XPE: Extended Peripheral Equipment shelf data block	1069
<i>Other Information:</i>	
Print information on Superloop or Extended PE shelves	1069

## BTD: Busy Tone Detection data block

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, PRT)
TYPE	BTD	Type = BTD (Busy Tone Detection)
BTDT	(0)-7	Busy Tone Detection Table
BCAD	x...x x...x	Busy Tone Cadence (ON and OFF cycles)
BTDD	a...a	Busy Tone Detection Direction (a...a = (BOTH) or INC)
FREQ_0	350 - 655	Frequency of Busy Tone for Frequency 0
FREQ_1	350 - 655	Frequency of Busy Tone for Frequency 1
FDLT	10 - 315	Frequency delta
FLVL_MAX	0 - 15	Maximum Frequency Tone level to be detected.
FLVL_MIN	20 - 35	Minimum Frequency Tone level to be detected.

## DTD: Dial Tone Detection parameters data block

For all DTD parameters, if a value is entered between two valid responses, the lowest valid response is stored for downloading to the XTD card. The stored value is also echoed to the craftsperson.

The type for the DTMF parameters is DTR.

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, PRT)
TYPE	DTD	Type = DTD (Dial Tone Detection)
XTDT	(0)-7	Extended Tone Detection Table
DFQ	0-(4)-15	Dial Tone Frequency band for 1st dial tone
MDL	10-(20)-40	Minimum Detect Level for 1st Dial Tone
MVT	100-(400)-1600	Minimum Validation Time for 1st Dial Tone
BRK	(0)-240	Break Duration (maximum) for 1st Dial Tone
CAD	(0)-15	Cadence type for 1st Dial Tone
SSC	(0)-15	Second Stage Configuration

# LD 97

## DTR: Digitone Receiver parameters data block

For all DTR parameters, if a value is entered between two valid responses, the lowest valid response is stored for downloading to the XTD/DTR card. The stored value is also echoed to the craftsperson.

---

Prompt	Response	Comment
REQ	aaa	Request (aaa = CHG, END, PRT)
TYPE	DTR	Type = DTR (Digitone Receiver)
MINL	3-(42)-48	Minimum accept Level for Digitone receiver

---

## FDL: Flash Download for M3900 sets

---

Prompt	Response	Comment
REQ	CHG PRT	Change or Print
TYPE	FDL	Flash Download for M3900 sets.
FDTP	t	M3900 set selected for download. Where t = (NONE) No M3900 flash download 3902 - M3902 sets 3903 - M3903 sets 3904 - M3904 sets 3905 - M3905 sets ALL - all M3900 sets
FDTM	(NO) YES	Time interval restriction for Flash Download. No change to time intervals Change time intervals  <b>Note:</b> Flash download is automatically paused one hour before virtual midnight (refer to TODR in Ovl 17) to allow midnight routines to run. This option is not applicable to reporting.

---

---

- FDAY	d n	Day and number of time intervals for download. Prompted only if FDTM = YES.  d = (0-6) Day of week, Sunday to Saturday n = (0-4) Number of time intervals where 0 = no download for that day.  <b>Note:</b> If two or more intervals are specified, they must be non overlapping, non consecutive and in increasing order. Day is re-prompted until <CR> is entered.
-- FINT	s l	Starting hour and length for a time interval. Prompted n times if n>0.  Where:  s = (0-23) Starting hour using 24 hour format l = (1-24) Length of interval in hours
FTNR	NO YES <cr>	TN range restriction option for Flash Download. No TN restriction Specify TN range No change to TN range restrictions
- FSTN	l s c u c u	Starting Terminal Number for Flash Download. Prompted only if FTNR = YES  Large System TN format: l s c u = loop, shelf, card, unit Small System TN format: c u = card, unit
- FETN	l s c u c u	Ending Terminal Number for Flash Download. Prompted only if FTNR = YES  Large System TN format: l s c u = loop, shelf, card, unit Small System TN format: c u = card, unit
FDNR	NO YES <cr>	DN range or list restriction option for Flash Download. No DN or list restriction Specify DN range No change to DN range restrictions
- FDDN		Flash Download Prime Directory Number range. Prompted only if FDNR = YES

---

# LD 97

	c d1 d2	Where: c = Customer number d1 = starting prime DN d2 = ending prime DN
FRCE	(NO)	System-wide flash download control option. Conditional. System-wide flash download (via FDLS in OVL 32) applies only to a M3900 set whose flash firmware version is different from version currently found on the system disk.
	YES	Forced. Force system-wide flash download to all the specified M3900 sets regardless of their current flash firmware versions. <b>Note:</b> Use this option with caution! Once the download tree is built (after FDLS in OVL 32) this option is automatically reverted to NO (conditional). Not applicable to reporting.
FVER	(0)-99	Flash firmware version specified for full report. Where: (0) = Report all Flash firmware version 1-99 = Selected Flash firmware version

---

## FIRP: Fiber Remote Parameters Data Block

---

Prompt	Response	Comment
REQ	CHG PRT	Change or Print
TYPE	FIRP	Fiber Remote Parameters
SUPL	0-156	Superloop number associated with the Remote IPE shelf
	0-252	Systems with Fibre Network Fabric
NNDC	5-(7)-8	No-New-Data -Calls condition Threshold
XSMN	(0)-63	XSM address on the remote shelf

---

## LOSP: Loss Plan Tables data block

Loss and Level Plan information may also be specified. Please refer to *International Loss and Level Plan* NTP for information regarding Loss and Level Plans prior to making any changes to the parameters defined in this Overlay.

Prompt	Response	Comment
REQ	aaa	Request (CHG, END, PRT)
TYPE	LOSP	Type = LOSP (Loss Plan Tables)
NATP	(NO) YES	North American Transmission Plan for generic XFCOT
TTYP	aaaa	Table Type (aaaa = (STAT) or DYNM)
- STYP	aaaa	Static Loss Plan table type (aaaa = (PRED), CSTM, or DISL)
- DTYP	aaaa	Dynamic Loss Switching alternate table type (aaaa = (PRED), CSTM, or DISL)

## LOSP: Loss Plan Tables data block (STYP or DTYP = PRED)

Prompt	Response	Comment
REQ	aaa	Request (CHG, END, PRT)
TYPE	LOSP	Loss Plan Tables
NATP	(NO) YES	North American Transmission Plan for generic XFCOT
TTYP	aaaa	Table Type (aaaa = (STAT) or DYNM)
- STYP	aaaa	Static Loss Plan table type (aaaa = (PRED), CSTM, or DISL)
- DTYP	aaaa	Dynamic Loss Switching alternate table type (aaaa = (PRED), CSTM, or DISL)
-- TNUM	xx	Table Number

# LD 97

## LOSP: Loss Plan Tables data block (STYP or DTYP = DISL)

---

Prompt	Response	Comment
REQ	aaa	Request (CHG, END, PRT)
TYPE	LOSP	Type = LOSP (Loss Plan Tables)
NATP	(NO) YES	North American Transmission Plan for generic XFCOT
TTYP	aaaa	Table Type (aaaa = (STAT) or DYNM)
- STYP	aaaa	Static Loss Plan table type (aaaa = (PRED), CSTM, or DISL)
- DTYP	aaaa	Dynamic Loss Switching alternate table type (aaaa = (PRED), CSTM, or DISL)
PWD2	xxxx	Password 2

---

---

**LOSP: Loss Plan Tables data block (DTYP or STYP = CSTM)**


---

Prompt	Response	Comment
REQ	aaa	Request (CHG, END, PRT)
TYPE	LOSP	Type = LOSP (Loss Plan Tables)
NATP	(NO) YES	North American Transmission Plan for generic XFCOT
TTYP	aaaa	Table Type (aaaa = (STAT) or DYNM)
- STYP	aaaa	Static Loss Plan table type (aaaa = (PRED), CSTM, or DISL)
- DTYP	aaaa	Dynamic Loss Switching alternate table type (aaaa = (PRED), CSTM, or DISL)
PWD2	xxxx	Password 2
- COTS	8-39 0-31	Central Office Trunk Short line Class of Service
- COTL	8-39 0-31	Central Office Trunk Long line Class of Service
- DIDS	8-39 0-31	Direct Inward Dial trunk Short line Class of Service
- DIDL	8-39 0-31	Direct Inward Dial Trunk Long line Class of Service
- T2WT	8-39 0-31	TIE trunk 2-Wire TRC Class of Service
- T2WN	8-39 0-31	TIE trunk 2-Wire NTC Class of Service
- T2WV	8-39 0-31	TIE trunk 2-Wire VNL Class of Service
- T4WT	8-39 0-31	TIE trunk 4-Wire TRC Class of Service
- T4WN	8-39 0-31	TIE trunk 4-Wire NTC Class of Service
- T4WV	8-39 0-31	TIE trunk 4-Wire VNL Class of Service
- PAGT	0-31	Paging Trunk
- RANR	8-39	Recorded Announcement trunk
- ALUS	0-31 8-39	Analog Line card Unit Short line Class of Service
- ALUL	0-31 8-39	Analog Line card Unit Long line Class of Service

---

## SUPL: Superloop parameters data block

---

Prompt	Response	Comment
REQ	aaa	Request (CHG, END, PRT)
TYPE	SUPL	Type = SUPL (Superloop)
SUPL	0-156 0-252	Superloop number in multiples of 4 Systems with Fibre Network Fabric
SLOT	a	Network Card is in Left or Right Slot (x = (L) or R)
SUPT	aaaa	Superloop type (aaaa = (STD), CARR, or FIBR)
XPE0	x y z	Extended Peripheral Equipment controller 0 (STD)
XPE1	x y z	Extended Peripheral Equipment controller 1 (STD)
XPEC	1-95	Extended Peripheral Equipment Controller (CARR or FIBR)

---

## SYSM: System Parameters for MSDL/MISP card

---

Prompt	Response	Comment
REQ	aaa	Req = CHG or PRT
TYPE	SYSM	Type = SYSM (System parameters for MSDL/MISP cards)
FDLC	p1 p2 p3 p4	Fast Download Control parameters

---

## SYSP: System parameters for Peripheral Equipment

Prompt	Response	Comment
REQ	aaa	Req = CHG or PRT
TYPE	SYSP	Type = SYSP (System parameters for Peripheral equipment)
INTN	(NO) YES	International companding law
CODE	(0)-3	Quite Code is used by Network Card firmware
CONT	1-(4)-32767	Continuity
CRCF	1-(4)-32767	Cyclic Redundancy Check (CRC) Failures
FLSH	(120)-168	Flash timing
TOHV	0-(250)-1275	Timer - Off-Hook Validation
TDP	(15)-1275	Timer - Dial Pulse
TID	0-(150)-1275	Timer - InterDigit
TDPO	15-(150)-1275	Timer - Dial Pulse On
TPF	0-(200)-1275	Timer - Post Flash
MFRL	0-(2)-3	Multifrequency minimum Receiver Level
MFLT0	(0)-15	Multifrequency transmit level code for Identifier 0 for Small System
MFLT1	(0)-15	Multifrequency transmit level code for Identifier 1 for Small System
P10R	(50)-70	Primary Pulse 10 Ratio
P12R	(50)-70	Secondary Pulse 10 Ratio
P20R	(50)-70	Pulse 20 Ratio
INSO	(NO) YES	Installation Options
- DEFS	(NO) YES	Default sets
-- DEF 2006 xx	yy	New default model number, 2006 set
-- DEF 2008 xx	yy	New default model number, 2008 set
-- DEF 2216 xx	yy	New default model number, 2216 set
-- DEF 2616 xx	yy	New default model number, 2616 set
-- DEF 2000 xx	yy	New default model number, 2000 set
-- DEF 500 xx	yy	New default model number, 500 set

# LD 97

-- DEF 2500 xx yy		New default model number, 2500 set
-- DEF i2002 xx yy		Enter new default model number (yy) for i2002 set (where: xx is old default)
-- DEF i2004 xx yy		Enter new default model number (yy) for i2004 set (where: xx is old default)
-- DEF i2050 xx yy		Enter new default model number (yy) for i2050 set (where: xx is old default)
FNUMwww	zzzz	First DN in the default numbering plan
ISM	(NO) YES	Incremental Software Management
- TNS	0-1000	Maximum number of Terminal Numbers
- AGNT	0-1000	Maximum number of ACD Agents
- ACDN	0-100	Maximum number of ACD Directory numbers
- AST	0-100	Maximum number of Associate Sets
- DSL	0-32767	Maximum number of Digital Subscriber Loops
- LTID	0-32767	Maximum number of Logical Terminal IDs
- MOPT	0-11	Meridian mail Option
- KEY1	(xxxxxxx)	Eight digit security key 1 provided by NT
- KEY2	(xxxxxxx)	Eight digit security key 2 provided by NT
- KEY3	(xxxxxxx)	Eight digit security key 3 provided by NT
FDLC	p1 p2 p3 p4	Fast Download Control parameters

---

## **XCTP: Conference/TDS/MF Sender card parameters data block**

---

<b>Prompt</b>	<b>Response</b>	<b>Comment</b>
REQ	aaa	Request (CHG, END, PRT)
TYPE	XCTP	Type = XCTP (Conference/TDS/MF Sender card parameters)
CPAD	x	Conference PAD (x = (0) or 1)
DTMF	0-(14)-255	Dual Tone Multifrequency

---

---

CFWT	(NO) YES	Conference Warning Tone to be provided
INTU	(NO) YES	Intrusion tone
P10P	0-(30)-255	Primary 10 Pulses per second
S10P	0-(31)-255	Secondary 10 Pulses per second
20PP	0-(32)-255	20 Pulses Per second

---

### **XPE: Extended Peripheral Equipment shelf data block**

---

<b>Prompt</b>	<b>Response</b>	<b>Comment</b>
REQ	aaa	Request (aaa = CHG, END, PRT)
TYPE	XPE	Type = XPE (Extended Peripheral Equipment shelves)
XPEC	(0)-95	Extended Peripheral Equipment Controller
	1-99	Systems with Fibre Network Fabric
LOC	xxxxxx	Location code for Peripheral Controller
MED	(COP)	Connection Media to Peripheral Controller
RGTP	x	Ringng Generator Type (x = (8) or 16)

---

### **Print information on Superloop or Extended PE shelves**

---

<b>Prompt</b>	<b>Response</b>	<b>Comment</b>
REQ	PRT	Req = PRT
TYPE	aaaa	Type = SUPL or XPE
SUPL	0-156	Superloop number in multiples of 4
	2-252	Systems with Fibre Network Fabric
XPEC	1-95	Extended Peripheral Equipment controller
	0-252	Systems with Fibre Network Fabric

---

## Alphabetical list of prompts

Prompt	Response	Comment	Pack/Rel
20PP	0-(32)-255	20 Pulses Per second Tone table index for primary 20 pulses per second (pps) digit set. Use 32 for North American tones. Tone tables are defined in LD 56.	xct-15
ACDN	0-100 0-32767	Maximum number of ACD Directory Numbers Maximum number of ACD Directory Numbers	xpe-16
AGNT	0-1000 0-32767	Maximum number of ACD Agents Maximum number of ACD Agents	xpe-16
ALUL	0-31 8-39	Analog Line card Unit Long line Class of Service Enter the coded Relative Input/Output Levels; the 1st field is the Receive (A/D) entry; the 2nd field is the Transmit (D/A) entry. Prompted if TTYP = STAT	xpe-18
ALUS	0-31 8-39	Analog Line card Unit Short line Class of Service Enter the coded Relative Input/Output Levels; the 1st field is the Receive (A/D) entry; the 2nd field is the Transmit (D/A) entry. Prompted if TTYP = STAT.	xpe-18
AST	0-100 0-32767	Maximum number of Associated Sets Maximum number of Associated Sets	csi-16
BCAD		Busy Tone Cadence Your entry determines the on phase length and the off phase length during the cycle.	xpe-16
	0000-(350)-1500	0000-(350)-1500 PH1 (ON cycle) and PH2 (OFF cycle)	
	0000-(500)-1500	0000-(500)-1500 PH1 (ON cycle) and PH2 (OFF cycle) for Japan (when Japan package 97 is enabled)  The values for each phase can be from 0 to 1.5 seconds (1500 ms) and are entered as milliseconds. The input values are rounded to the nearest multiple of 25 ms.	

Prompt	Response	Comment	Pack/Rel
		Entering all 0's indicates continuous tone. (Continuous tones lasts for 3.2 seconds or longer) The smallest cadence is 50 ms even though 25 ms can be entered. The stored values will be echoed.	
BRK	(0)-240	Break Duration (maximum) for 1st Dial Tone. Input is a multiple of 16 ms:  0 = 0 ms 16 = 16 ms 32 = 32 ms ... 240 = 240 ms  Input that is not a multiple of 16 is rounded down to a valid multiple of 16. Recommended country specific BRK values follow:  CountryBRK Denmark000 ms France030 ms Germany000 ms HollandTBD New ZealandTBD Norway000 ms Spain000 ms Sweden000 ms Switzerland000 ms U.K. 33/50000 ms U.K. 330/440000 ms	xpe-16
BTDD	(BOTH) INC	Busy Tone Detection on both incoming and outgoing calls Busy Tone Detection on incoming calls only	xpe-16

# LD 97

Prompt	Response	Comment	Pack/Rel
BTD	(0) - 7	<p>Busy Tone Detection Table</p> <p>Table 0 can be changed but cannot be removed. Table 0 always exists (when the BTD package is equipped) and is initialized to default values for China and Japan.</p> <p>When creating alternate tables, table 0's values are used to fill the table and these can be changed.</p> <p>If table 0 does not exist, the Japanese BCAD defaults (500 500) are used when creating it.</p> <p>Enter X in front of the table number to remove the table.</p>	btd-21
CAD	(0)-15	<p>Cadence type for 1st Dial Tone. Where:</p> <p>0 = no cadence or continuous tone 1 = Italian complex cadence 2-15 reserved for future use</p> <p>Recommended country specific CAD values follow:</p> <p>CountryCAD Denmark00 France00 Germany00 Holland00 New Zealand00 Norway00 Spain00 Sweden00 Switzerland00 U.K. 33/5000 U.K. 330/44000</p>	xpe-16
CFWT	(NO) YES	<p>Conference Warning Tone is not provided Conference Warning Tone is provided</p>	basic-21
CODE	(0)	<p>Quite Code is used by Network Card firmware 0 is the only valid entry. Entries 1-3 are for future use.</p>	xpe-15

Prompt	Response	Comment	Pack/Rel
CONT	1-(4)-32767	Continuity. Maintenance threshold for number of continuity faults per timeslot.	xpe-15
COTL	8-39 0-31	Central Office Trunk Long line Class of Service Enter the coded Relative Input/Output Levels; the first field is the Receive (A/D) entry; the second field is the Transmit (D/A) entry.	xpe-18
COTS	8-39 0-31	Central Office Trunk Short line Class of Service Enter the coded Relative Input/Output Levels; the first field is the Receive (A/D) entry; the second field is the Transmit (D/A) entry.	xpe-18
CPAD	(0) 1	Conference PAD Use software PAD values Use PAD values defined by switch settings on card (NT8D17). The CNFC command in LD 38 will not do the attenuation testing when CPAD = 1.	xct-15
CRCF	1-(4)-32767	Cyclic Redundancy Check (CRC) Failures	xpe-15
DEF 500 xx	yy	Enter new default model number (yy) for 500 set (where: xx is old default)	xpe-16
DEF 2000 xx	yy	Enter new default model number (yy) for 2000 set (where: xx is old default)	xpe-16
DEF 2006 xx	yy	Enter new default model number (yy) for 2006 set (where: xx is old default)	xpe-16
DEF 2008 xx	yy	Enter new default model number (yy) for 2008 set (where: xx is old default)	xpe-16
DEF 2216 xx	yy	Enter new default model number (yy) for 2216 set (where: xx is old default)	xpe-16
DEF 2500 xx	yy	Enter new default model number (yy) for 2500 set (where: xx is old default)	xpe-16
DEF 2616 xx	yy	Enter new default model number (yy) for 2616 set (where: xx is old default)	xpe-16

# LD 97

Prompt	Response	Comment	Pack/Rel
DEF i2002 xx	yy	Enter new default model number (yy) for i2002 set (where: xx is old default) For Succession 1000	basic-2
DEF i2004 xx	yy	Enter new default model number (yy) for i2004 set (where: xx is old default) For Succession 1000	basic-2
DEF i2050 xx	yy	Enter new default model number (yy) for i2050 set (where: xx is old default) For Succession 1000	basic-2
DEFS	(NO) YES	Default Sets	xpe-16
DFQ	0-(4)-15	Dial Tone Frequency band for 1st dial tone. Input is frequency band as described below:  0 = 300-500 Hz 1 = 350-500 Hz 2 = 320-630 Hz 3 = 0-500 Hz 4 = 355-550 Hz 5-15 = reserved for future use  With UK package (190) default value for DFQ = 0. Recommended country specific DFQ values follow:  Country                      DFQ Denmark                      1 France                        0 Germany                      1 Holland                      TBD New Zealand                1 Norway                        1 Spain                         2 Sweden                       11 Switzerland                 4 U.K. 33/50                    3 U.K. 330/440                0	xpe-16
DIDL	8-39 0-31	Direct Inward Dial (or Direct Outward Dial [DOD]) trunk Long line Class of Service  Enter the coded Relative Input/Output Levels; the first field is the Receive (A/D) entry; the second field is the Transmit (D/A) entry.	xpe-18

Prompt	Response	Comment	Pack/Rel
DIDS	8-39 0-31	Direct Inward Dial (or Direct Outward Dial [DOD]) trunk Short line Class of Service  Enter the coded Relative Input/Output Levels; the first field is the Receive (A/D) entry; the second field is the Transmit (D/A) entry.	xpe-18
DSL	0-32767	Maximum number of Digital Subscriber Loops	xpe-18
DTMF	0-(14)-255	Dual Tone Multifrequency (Tone table index of the first DTMF digit to be used). Use 14 for North American tones.	xct-15
DTYP	(PRED) CSTM  DISL	Predefined Dynamic Loss Switching Table Customized Dynamic Loss Switching Table (user will be prompted to input required PORT TYPE LI LO values)  Disable current active table (Disables Dynamic Loss Switching)  If the DTYP was previously DISL then entering a Predefined Table number or Customized Table will ENABLE the Dynamic Loss Switching feature.  Only 1 Dynamic Loss Switching table, either predefined or customized, exists within the system. When Dynamic Loss Plan Switch is ENABLED then the Static Loss Plan Table is used as the "base level" table of values.  If an entry is customized, other entries in this table and in the Base Table (TTYP = STAT) should be re-examined in case possible adjustment is necessary. Dynamic Pad Switching continues for non-B34 cards (EPE, XUT, XEM).	xpe-18
FDAY	d n	Day and number of time intervals for download. Prompted only if FDTM = YES.  d = (0-6) Day of week, Sunday to Saturday n = (0-4) Number of time intervals where 0 = no download for that day.  <b>Note:</b> If two or more intervals are specified, they must be non overlapping, non consecutive and in increasing order. Day is re-prompted until <CR> is entered.	arie-25

# LD 97

Prompt	Response	Comment	Pack/Rel
FDDN	c d1 d2	Flash Download Prime Directory Number range. Prompted only if FDNR = YES Where:  c = Customer number d1 = starting prime DN d2 = ending prime DN	arie-25
FDLC	p1 p2 p3 p4	Fast Download Control parameters. Where <b>p1</b> can be:  <ol style="list-style-type: none"><li>1. (ALL) = All cards listed below</li><li>2. AML = Applications Module Link</li><li>3. BRIE = BRI Trunk Universal ISDN Protocol Engine</li><li>4. BRIL = BRI Line cards</li><li>5. BRIT = Basic Rate Interface Trunk</li><li>6. DCH = D-channel cards</li><li>7. FNET = Fiber Network Card (NT1P61)</li><li>8. FPEC = Fiber Peripheral Equipment Controller card (NT1P62)</li><li>9. LCRI = Carrier Remote IPE</li><li>10. MISP = Multipurpose ISDN Signaling Link cards</li><li>11. MSDL = Multipurpose Serial Data Link cards</li><li>12. PRIE = Primary Rate Interface Universal ISDN Protocol Engine</li><li>13. SDI = Serial Data Interface cards</li><li>14. XNET = Network cards</li><li>15. XPEC = Controller cards (includes Carrier Remote IPE RCI)</li><li>16. XXXX = Data file for specific ISDN interface type (e.g. DQSG data file for QSIG; DTCZ data file for TCNZ)</li></ol>	xpe/msdl-15

Prompt	Response	Comment	Pack/Rel
		<p>Where <b>p2</b> can be:</p> <ol style="list-style-type: none"> <li>1. (C) = Conditional download (only if there is a major fault in the firmware or after a power failure). "C" is the recommended setting.</li> <li>2. F = Force download after initialization. Entering "F" only applies to the first INIT following the entry. After the INIT, the system reverts to C (conditional).</li> </ol> <p>Where <b>p3</b> can be:</p> <ol style="list-style-type: none"> <li>1. (C) = Current version</li> <li>2. L = Latest version</li> <li>3. S = Specified version</li> </ol> <p>Where <b>p4</b> is :</p> <p>xx (version number, if p3 = S).</p> <p>See LD 20-22 to print versions.</p>	
FDLT	10 - 315	<p>Frequency delta, gives the tolerance of the tone to be detected in +/- hertz. Valid entries will be in multiples of 5Hz.</p> <p>For dual Busy Tone Detection on card (NT5D31), the same maximum and minimum levels applies to both tones.</p>	btd- 23
FDNR	NO YES <cr>	<p>DN range restriction option for Flash Download.</p> <p>No DN restriction Specify DN range No change to DN range restrictions</p>	arie-25
FDTM	(NO) YES	<p>Time interval restriction for Flash Download.</p> <p>No change to time intervals Change time intervals</p> <p><b>Note:</b> Flash download is automatically paused one hour before virtual midnight (refer to TODR in Ovl 17) to allow midnight routines to run. This option is not applicable to reporting.</p>	arie-25

# LD 97

Prompt	Response	Comment	Pack/Rel
FDTP	t	M3900 set selected for download. Where t = (NONE) No M3900 flash download 3902 - M3902 sets 3903 - M3903 sets 3904 - M3904 sets 3905 - M3905 sets ALL - all M3900 sets	arie-25
FETN	l s c u c u	Ending Terminal Number for Flash Download. Prompted only if FTNR = YES General TN format: l s c u = loop, shelf, card, unit Small System TN format: c u = card, unit	arie-25
FINT	s l	Starting hour and length for a time interval. Prompted n times if n>0.  Where:  s = (0-23) Starting hour using 24 hour format l = (1-24) Length of interval in hours	arie-25
FLSH	(120)-768  xxx yyyy	Flash timing Switchhook Flash timing  (SUPP package 131 not equipped). Establishes Switchhook Flash time in milliseconds for 500/2500 sets (NT8D PE only)  Switchhook Flash timing (SUPP package 131 equipped) Establishes minimum and maximum Switchhook Flash timer in milliseconds for 500/2500 sets (NT8D PE only), where:  xxx = 20-(45)-768 yyyy = xxx value-(896)-1275  The timing specified will be used for extended peripheral equipment only. Non-extended peripheral equipment will use the FLSH specified in LD 15.	xpe-15
FLVL_MAX	0 - 15	Maximum Frequency Tone level to be detected. Valid entries will be in multiples of 5dBm.  For dual Busy Tone Detection on card (NT5D31), the same level applies to both tones.	btd- 23

Prompt	Response	Comment	Pack/Rel
FLVL_MIN	20 - 35	Minimum Frequency Tone level to be detected. Valid entries will be in multiples of 5dBm.  For dual Busy Tone Detection card (NT5D31), the same level applies to both tones.	btd- 23
FNUM <i>www</i>	<i>zzzz</i>	First DN in the default numbering plan ( <i>www</i> is current setting)	xpe-16
FRCE	(NO)  YES	System-wide flash download control option. Conditional. System-wide flash download (via FDLS in OVL 32) applies only to a M3900 set whose flash firmware version is different from version currently found on the system disk. Forced. Force system-wide flash download to all the specified M3900 sets regardless of their current flash firmware versions.  <b>Note:</b> Use this option with caution! Once the download tree is built (after FDLS in OVL 32) this option is automatically reverted to NO (conditional). Not applicable to reporting.	arie-25
FREQ_0	350 - 655	Frequency of Busy Tone for Frequency 0 of a dual Busy Tone Detection to be detected in Hz. Valid entries will be in multiples of 5Hz.	btd- 23
FREQ_1	350 - 655	Frequency of Busy Tone for Frequency 1 of a dual Busy Tone Detection to be detected in Hz. Valid entries will be in multiples of 5Hz.  For a single busy tone FREQ_1 must be set the same as FREQ_0.	btd- 23
FSTN	<i>l s c u</i> <i>c u</i>	Starting Terminal Number for Flash Download. Prompted only if FTNR = YES General TN format: <i>l s c u</i> = loop, shelf, card, unit Small System TN format: <i>c u</i> = card, unit	arie-25
FTNR	NO YES <cr>	TN range restriction option for Flash Download. No TN restriction Specify TN range No change to TN range restrictions	arie-25

# LD 97

Prompt	Response	Comment	Pack/Rel
FVER	(0)-99	Flash firmware version specified for full report. Where:  (0) = Report all Flash firmware version 1-99 = Selected Flash firmware version	arie-25
INSO	(NO) YES	Installation Options Change installation options, do not modify installation options	xpe-16
INTN	(NO) YES	µ- International companding Law A- International companding Law	xpe-15
INTU	(NO) YES	Intrusion tone (insert Intrusion tone in conferences)  <b>Note:</b> To invoke any changes, the Small System must be initialized.	xpe-16
ISM	(NO) YES	Incremental Software Management  ISM and all of its subprompts (prompts TNS through KEY3) are not prompted for Option 11C. To change the system ISM parameters on an Option 11C, the installation program must be used.	xpe-16
KEY1	(xxxxxxx)	8 digit security key 1 provided by NT	xpe-16
KEY2	(xxxxxxx)	8 digit security key 2 provided by NT	xpe-16
KEY3	(xxxxxxx)	8 digit security key 3 provided by NT	xpe-16
LOC	xxxxxx	Location code for Peripheral Controller (0-6 characters)  Should be equal to the column number assigned to the System Monitor and the Universal Equipment Module (UEM) that contains the Controller.  For example: CxxMy  Where:  xx = column number y = UEM number	xpe-15
LTID	0-32767	Maximum number of Logical Terminal IDs	xpe-18

Prompt	Response	Comment	Pack/Rel																								
MDL	10-(20)-40	<p>Minimum Detect Level for 1st Dial Tone. Input is absolute value of the minimum detect level. Input is a multiple of 2 dBm:</p> <p>10 = -10 dBm  12 = -12 dBm  14 = -14 dBm  ...  40 = -40 dBm</p> <p>Odd input is rounded down. With UK package (190) default value for MDL = 30 (-30 dBm).  Recommended country specific MDL values follow:</p> <table border="1"> <thead> <tr> <th><u>Country</u></th> <th><u>MDL</u></th> </tr> </thead> <tbody> <tr> <td>Denmark</td> <td>-26 dBm</td> </tr> <tr> <td>France</td> <td>-24 dBm</td> </tr> <tr> <td>Germany</td> <td>-22 dBm</td> </tr> <tr> <td>Holland</td> <td>-26 dBm</td> </tr> <tr> <td>New Zealand</td> <td>TBD</td> </tr> <tr> <td>Norway</td> <td>-30 dBm</td> </tr> <tr> <td>Spain</td> <td>-32 dBm</td> </tr> <tr> <td>Sweden</td> <td>-28 dBm</td> </tr> <tr> <td>Switzerland</td> <td>-30 dBm</td> </tr> <tr> <td>U.K. 33/50</td> <td>-30 dBm</td> </tr> <tr> <td>U.K. 330/440</td> <td>-30 dBm</td> </tr> </tbody> </table>	<u>Country</u>	<u>MDL</u>	Denmark	-26 dBm	France	-24 dBm	Germany	-22 dBm	Holland	-26 dBm	New Zealand	TBD	Norway	-30 dBm	Spain	-32 dBm	Sweden	-28 dBm	Switzerland	-30 dBm	U.K. 33/50	-30 dBm	U.K. 330/440	-30 dBm	xpe-16
<u>Country</u>	<u>MDL</u>																										
Denmark	-26 dBm																										
France	-24 dBm																										
Germany	-22 dBm																										
Holland	-26 dBm																										
New Zealand	TBD																										
Norway	-30 dBm																										
Spain	-32 dBm																										
Sweden	-28 dBm																										
Switzerland	-30 dBm																										
U.K. 33/50	-30 dBm																										
U.K. 330/440	-30 dBm																										
MED	(COP)	Connection Media to Peripheral Controller (copper cabling)	xpe-17																								

# LD 97

Prompt	Response	Comment	Pack/Rel
MFLT0	(0)-15	Multifrequency transmit level code for Identifier 0 for Option 11C. The code and level values listed below apply to MFLT0 and MFLT1.  Codes            Level Values 0                -8 dBmO 1                -11 dBmO 2                -12 dBmO 3                -13 dBmO 4                -14 dBmO 5                -15 dBmO 6                -16 dBmO 7                -31 dBmO 8                -4 dBmO 9                -5 dBmO 10               -6 dBmO  MF transmit level changes will take effect on Card 0 only if the command ENLX 0 is entered in LD 34. For XMFC packs, MF transmit level changes take effect immediately.	basic-22
MFLT1	(0)-15	Multifrequency transmit level code for Identifier 1 for Option 11C. Refer to the MFLT0 prompt for a listing of codes and level values for MFLT1.	basic-22
MFRL	0-(2)-3	Multifrequency minimum Receiver Level for XMFC/ XMFE (NT5K21) for only Meridian 1 (superloop)  Codes            Level Values 0                -28 dBmO 1                -32 dBmO 2                -36 dBmO 3                -40 dBmO	xpe-16

Prompt	Response	Comment	Pack/Rel																								
MINL	3-(42)-48	<p>Minimum accept Level for Digitone receivers. Input is a multiple of 3 dBm:</p> <p>3 = -3 dBm  6 = -6 dBm  9 = -9 dBm  ...  48 = -48 dBm</p> <p>Input that is not a multiple of 3 is rounded down to a valid multiple of 3. With UK package (190) default value for  MINL = 45 (-45 dBm). Recommended country specific MINL values follow:</p> <table> <thead> <tr> <th>Country</th> <th>MINL</th> </tr> </thead> <tbody> <tr> <td>Denmark</td> <td>-45 dBm</td> </tr> <tr> <td>France</td> <td>-30 dBm</td> </tr> <tr> <td>Germany</td> <td>-30 dBm</td> </tr> <tr> <td>Holland</td> <td>-30 dBm</td> </tr> <tr> <td>New Zealand</td> <td>-45 dBm</td> </tr> <tr> <td>Norway</td> <td>-45dBm</td> </tr> <tr> <td>Spain</td> <td>-30 dBm</td> </tr> <tr> <td>Sweden</td> <td>-28 dBm</td> </tr> <tr> <td>Switzerland</td> <td>-30 dBm</td> </tr> <tr> <td>U.K. 33/50</td> <td>-45 dBm</td> </tr> <tr> <td>U.K. 330/440</td> <td>-45 dBm</td> </tr> </tbody> </table>	Country	MINL	Denmark	-45 dBm	France	-30 dBm	Germany	-30 dBm	Holland	-30 dBm	New Zealand	-45 dBm	Norway	-45dBm	Spain	-30 dBm	Sweden	-28 dBm	Switzerland	-30 dBm	U.K. 33/50	-45 dBm	U.K. 330/440	-45 dBm	xpe-16
Country	MINL																										
Denmark	-45 dBm																										
France	-30 dBm																										
Germany	-30 dBm																										
Holland	-30 dBm																										
New Zealand	-45 dBm																										
Norway	-45dBm																										
Spain	-30 dBm																										
Sweden	-28 dBm																										
Switzerland	-30 dBm																										
U.K. 33/50	-45 dBm																										
U.K. 330/440	-45 dBm																										
MOPT	0-11	Meridian Mail Option	xpe-16																								

# LD 97

Prompt	Response	Comment	Pack/Rel																								
MVT	100-(400)-1600	<p>Minimum Validation Time for 1st Dial Tone Input is a multiple of 100 ms:</p> <p>100 = 100 ms 200 = 200 ms 300 = 300 ms ... 1600 = 1600 ms (1.6 sec)</p> <p>Input that is not a multiple of 100 is rounded down to a valid multiple of 100. With UK package (190) default value for MVT = 300. Recommended country specific MVT values follow:</p> <table><thead><tr><th>Country</th><th>MVT</th></tr></thead><tbody><tr><td>Denmark</td><td>1200 ms</td></tr><tr><td>France</td><td>1000 ms</td></tr><tr><td>Germany</td><td>0900 ms</td></tr><tr><td>Holland</td><td>1200 ms</td></tr><tr><td>New Zealand</td><td>TBD</td></tr><tr><td>Norway</td><td>1000 ms</td></tr><tr><td>Spain</td><td>1000 ms</td></tr><tr><td>Sweden</td><td>0300 ms</td></tr><tr><td>Switzerland</td><td>0400 ms</td></tr><tr><td>U.K. 33/50</td><td>0300 ms</td></tr><tr><td>U.K. 330/440</td><td>0300 ms</td></tr></tbody></table>	Country	MVT	Denmark	1200 ms	France	1000 ms	Germany	0900 ms	Holland	1200 ms	New Zealand	TBD	Norway	1000 ms	Spain	1000 ms	Sweden	0300 ms	Switzerland	0400 ms	U.K. 33/50	0300 ms	U.K. 330/440	0300 ms	xpe-16
Country	MVT																										
Denmark	1200 ms																										
France	1000 ms																										
Germany	0900 ms																										
Holland	1200 ms																										
New Zealand	TBD																										
Norway	1000 ms																										
Spain	1000 ms																										
Sweden	0300 ms																										
Switzerland	0400 ms																										
U.K. 33/50	0300 ms																										
U.K. 330/440	0300 ms																										
NATP	(NO) YES	North American Transmission Plan for generic XFCOT	xpe-18																								
NNDC	5-(7)-8	<p>No-New-Data-Calls condition Threshold</p> <p>NNDC defines the bit error rate (BER) for Signal Degrad, calculated by the loadware. The actual range is <math>10^{-5}</math> to <math>10^{-8}</math>. The value entered here is the absolute value to the power of 10 (logarithmic scale).</p>	rem_ipe-22																								

Prompt	Response	Comment	Pack/Rel
P10P	0-(30)-255	Primary 10 Pulses per second Tone table index for primary 10 pulses per second (pps) digit set. Use 30 for North American tones.	xct-15
P10R	(50)-70	Primary Pulse 10 Ratio (make-break ratio for 10 PPS dial pulse dialing) Range is 50% to 70%, in steps of 1. For example, at 70% the signal is on for 30 ms and off for 70 ms producing the 100 ms cycle for one pulse. To use on individual XUT, XUTJ and XEM trunks, set CLS to P10 in LD 14. For either XUT, XUTJ and XEM trunks specified or Option 11C DTI2 trunks.	xpe-16
P12R	(50)-70	Secondary Pulse 10 Ratio (make-break ratio for 10 PPS dial pulse dialing) Range is 50% to 70%, in steps of 1. For example, at 70% the signal is on for 30 ms and off for 70 ms producing the 100 ms cycle for one pulse. To use on individual XUT, XUTJ and XEM trunks, set CLS to P12 in LD 14. For either XUT, XUTJ and XEM trunks specified or Option 11C DTI2 trunks.	xpe-16
P20R	(50)-70	Pulse 20 Ratio (make-break ratio for 20 PPS dial pulse dialing) Range is 50% to 70%, in steps of 1. For example, at 70% the signal is on for 15 ms and off for 35 ms producing the 50 ms cycle for one pulse. To use on individual XUT, XUTJ and XEM trunks, set CLS to P20 in LD 14. For either XUT, XUTJ and XEM trunks specified or Small System DTI2 trunks.	xpe-16
PAGT	0-31	Paging Trunk. Enter the coded Transmit (D/A) Input/ Output Relative Level.	xpe-18
PWD2	xxxx	Password 2 Second Level Administration Password as defined in LD 17. This password is required to "Disable" an active Table or "Create" a customized Table. PWD2 is prompted if STYP or DTYP = CSTM or DISL, or if the user is not logged in using Loss Planning Allowed password.	

# LD 97

Prompt	Response	Comment	Pack/Rel
RANR	8-39	Recorded Announcement trunk Enter the coded Receive (A/D) Input/Output Relative Level.	xpe-18
REQ	CHG END PRT	Request Modify existing data Exit overlay Print data block	xpe-15
RGTP	(8) 16	Ringling Generator Type (8 or 16 concurrent ringers; 16 requires NT6D42CA Ringling Generator). This prompt determines the maximum number of 500/ 2500 telephones which can be in the active ringling state at the same time.  CAUTION: Do not set RGTP = 16 if you do not have the NT6D42 ringling generator. Exceeding the ringer capacity may cause intermittent overload alarms on the ringling generator.  The value is not passed to the Peripheral Controller card immediately after service change. That information is downloaded when the card is enabled.	xpe-18
S10P	0-(31)-255	Secondary 10 Pulses per second  Tone table index for secondary 10 pulses per second (pps) digit set. Use 31 for North American tones. Tone tables are defined in LD 56.	xct-15
SLOT	(L) R	Network Card is in Left or Right slot  Enter L (left) if the Network Card is located in the lower numbered network pair. For example, in superloop 0, enter L if the Network Card sits in the slot for network loops 0/1, enter R (right) for 2/3.	xpe-15

Prompt	Response	Comment	Pack/Rel																								
SSC	(0)-15	<p>Second Stage Configuration. Where:</p> <p>0 = Second Stage Dial Tone Detection and uses same parameters as defined for first stage.</p> <p>1-15 = Reserved for future use.</p> <p>Recommended country specific SCC values follow:</p> <table border="1"> <thead> <tr> <th>Country</th> <th>SSC</th> </tr> </thead> <tbody> <tr> <td>Denmark</td> <td>0</td> </tr> <tr> <td>France</td> <td>0</td> </tr> <tr> <td>Germany</td> <td>0</td> </tr> <tr> <td>Holland</td> <td>0</td> </tr> <tr> <td>New Zealand</td> <td>0</td> </tr> <tr> <td>Norway</td> <td>0</td> </tr> <tr> <td>Spain</td> <td>0</td> </tr> <tr> <td>Sweden</td> <td>0</td> </tr> <tr> <td>Switzerland</td> <td>0</td> </tr> <tr> <td>U.K. 33/50</td> <td>0</td> </tr> <tr> <td>U.K. 330/440</td> <td>0</td> </tr> </tbody> </table>	Country	SSC	Denmark	0	France	0	Germany	0	Holland	0	New Zealand	0	Norway	0	Spain	0	Sweden	0	Switzerland	0	U.K. 33/50	0	U.K. 330/440	0	xpe-16
Country	SSC																										
Denmark	0																										
France	0																										
Germany	0																										
Holland	0																										
New Zealand	0																										
Norway	0																										
Spain	0																										
Sweden	0																										
Switzerland	0																										
U.K. 33/50	0																										
U.K. 330/440	0																										
STYP	(PRED)	Predefined Static Loss Plan table	xpe-18																								
	CSTM	Customized Static Loss Plan table (user will be prompted to input required PORT TYPE LI LO values)																									
	DISL	<p>Disable current active table (disables Static Loss Plan downloading)</p> <p>Only 1 Static Loss Plan table, either predefined or customized, exists within the system.</p> <p>When Dynamic Loss Switching is ENABLED then the Static Loss Plan Table is used as the "B34 DYNAMIC LOSS SWITCHING BASE TABLE" of values.</p>																									

# LD 97

Prompt	Response	Comment	Pack/Rel
		<p>If an entry is customized, other entries in this table and in the Alternative Table (TTYP = DYNM) should be re-examined in case possible adjustment is necessary.</p> <p>Dynamic Pad Switching continues for non-B34 cards (EPE, XUT, XEM).</p>	
SUPL	0-156 N0-N156	Superloop number in multiples of 4 Precede loop number with N to create a phantom loop	xpe-20
	N96-N112 0-252 Vxxx	In multiples of 4 (Small System) Systems with Fibre Network Fabric Virtual superloop number in multiples of 4. Where: <ul style="list-style-type: none"><li>• xxx = 0 - 156 and multiple of 4 for large systems without Network Capacity Expansion package.</li><li>• xxx = 0 - 252 and multiple of 4 for Systems with Fibre Network Fabric package.</li><li>• xxx = 96 - 112 and multiple of 4 for 11C systems.</li></ul>	fnf-25 basic-25
SUPT	(STD)	Standard Superloop type (normal copper cable connecting an XNET to XPEC)	rem_ipe-21
	CARR	Carrier Link Superloop type: this connects an Local Carrier Interface (LCI) to a Remote Carrier Interface (RCI)	
	FIBR	Fiber Link [connects a Fiber Network NT1P61 Card (FNET) to a Fiber PE Controller Card NT1P62 (FPEC)]	
T2WN	8-39 0-31	TIE trunk 2-Wire NTC (Non-Transmission Compensated) Class of Service  Enter the coded Relative Input/Output Levels; the first field is the Receive (A/D) entry; the second field is the Transmit (D/A) entry.	xpe-18

Prompt	Response	Comment	Pack/Rel
T2WT	8-39 0-31	TIE trunk 2-Wire TRC (Transmission Compensated) Class of Service  Enter the coded Relative Input/Output Levels; the first field is the Receive (A/D) entry; the second field is the Transmit (D/A) entry.	xpe-18
T2WV	8-39 0-31	TIE trunk 2-Wire VNL (Via Network Loss) Class of Service  Enter the coded Relative Input/Output Levels; the first field is the Receive (A/D) entry; the second field is the Transmit (D/A) entry.	xpe-18
T4WN	8-39 0-31	TIE trunk 4-Wire NTC (Non-Transmission Compensated) Class of Service  Enter the coded Relative Input/Output Levels; the first field is the Receive (A/D) entry; the second field is the Transmit (D/A) entry.	xpe-18
T4WT	8-39 0-31	TIE trunk 4-Wire TRC (Transmission Compensated) Class of Service  Enter the coded Relative Input/Output Levels; the first field is the Receive (A/D) entry; the second field is the Transmit (D/A) entry.	xpe-18
T4WV	8-39 0-31	TIE trunk 4-Wire VNL (Via Network Loss) Class of Service  Enter the coded Relative Input/Output Levels; the first field is the Receive (A/D) entry; the second field is the Transmit (D/A) entry.	xpe-18
TDP	(15)-1275	Timer - Dial Pulse  Minimum time for dial pulse for Extended Flexible Analog Line Card (XFALC) NT5K02. Inputs in increments of 5 milliseconds. CDP must be greater than Minimum Switchhook Flash.	xpe-18
TDPO	15-(150)-1275	Timer - Dial Pulse On  Maximum time for dial pulse for Extended Flexible Analog Line Card (XFALC) NT5K02. Inputs in increments of 5 milliseconds. TDPO must be greater than or equal to TDP.	xpe-18

# LD 97

Prompt	Response	Comment	Pack/Rel
TID	0-(150)-1275	Timer - InterDigit. Interdigit time for Extended Flexible Analog Line Card (XFALC) NT5K02. Inputs in increments of 5 milliseconds.	xpe-18
TNS	0-1000 0-32767	Maximum number of Terminal Numbers Maximum number of Terminals	xpe-18
TNUM	xx	Predefined Table Number to be used. Prompted if PRED is selected. There is no default. Where:  xx = 1-27 when TTYP = STAT xxx = 1-5 when TTYP = DYNM  Following is the list of predefined tables.  A table noted as ETSI Mode of Operation should only be used on systems where all Peripheral cards are equipped with the B34 Codec.  A table noted as Existing Mode of Operation should be used on systems where all Peripheral cards are not equipped with the B34 Codec.	xpe-18

For TTYP = STAT , the predefined tables are:

TNUM	Country	Mode
1	Austria & Greece	ETSI
2	Austria	Existing
3	Belgium	ETSI
4	Belgium	Existing
5	Denmark	ETSI
6	Denmark	Existing
7	Finland	ETSI
8	Germany	ETSI/Existing
9	Italy	ETSI
10	Italy	Existing
11	Netherlands	ETSI
12	Netherlands	Existing
13	Norway	ETSI
14	Norway	Existing
15	Portugal	ETSI
16	Greece & Portugal	Existing
17	Spain	ETSI/Existing
18	Sweden	ETSI/Existing
19	Switzerland	ETSI
20	Switzerland	Existing
21	U.K.	ETSI/Existing
22	France	ETSI
23	France	Existing
24	New Zealand	Existing
25	Australia	Existing
26	China - hybrid	EPE and IPE
27	China - pure	IPE system

For TTYP = DYNM the predefined tables are:

TNUM	Country	Mode
1	New Zealand	Existing
2	Australia	Existing
3	Italy	Existing
4	China	EPE and IPE
5	China	IPE system

# LD 97

Prompt	Response	Comment	Pack/Rel
TOHV	0-(250)-1275	Timer - Off-Hook Validation  Off-Hook Validation timer for Extended Flexible Analog Line Card (XFALC) NT5K02. Inputs in increments of 5 milliseconds.	xpe-18
TPF	0-(200)-1275	Timer - Post Flash  Post Flash timer for Extended Flexible Analog Line Card (XFALC) NT5K02. Inputs in increments of 5 milliseconds. Prompted with Multi-Party Operations (MPO) package 141.	xpe-18
TTYP	(STAT) DYNM	B34 Static Loss Plan Table Type to be installed/modified B34 Dynamic Loss Plan Alternative Level Table Type to be installed/modified  A B34 Static Loss Plan Table must be installed before B34 Dynamic Loss Switching can be enabled. Therefore, if TTYP= DYNM, and the existing STYP = "DISL", then error message SCH5838 will be printed, and TTYP will be re-prompted.	xpe-18
TYPE		Type of data block  When modifying PE system parameters, the system must initialize for the changes to come into effect. The loop number for the NT8D17 Conference/TDS/MFS card is defined by prompt XCT in LD 17.	xpe/ msdl-18
BTD		Busy Tone Detection	
DTD		Dial Tone Detection parameters	
DTR		Digitone Receiver parameters	
FDL		Flash Download for M3900 telephones	
FIRP		Fiber Remote Parameters	
LOSP		Loss Plan Tables	
SYSM		System parameters for MSDL/MISP cards.	
SYSP		System parameters. When modifying the PE system parameters, the system must initialize for the changes to come into effect.	
SUPL		Superloop parameters	
XCTP		Conference/TDS/MF Sender card parameters. The loop number for the NT8D17 Conference/TDS/MFS card is defined by prompt XCT in LD 17.	
XPE		Extended Peripheral Equipment shelves	

Prompt	Response	Comment	Pack/Rel
XNPD	28	Network loop number for Extended Network/ Peripheral equipment controller/ Digitone receiver (XNPD) card  The NT8D18 card contains a superloop and 8 Digitone Receivers. The Digitone Receivers are defined in LD 13.	xpe-15
XPE	1-95 <cr>	Extended Peripheral Equipment controller All Extended Peripheral Equipment controllers  The output format for Peripheral Controller data is:  SO S1 S2 S3 LOC DISRGTP xx yyy yyy yyy yyy zzz YES/NO rr  Where:  xx = Controller number yyy = superloop number for each segment zzz = location code entered with prompt LOC DIS = YES of NO (Peripheral Controller disabled) RGTP = 8 or 16 (Ringing Generator Type)	xpe-15
XPE0	1-99 x y z	Systems with Fibre Network Fabric Extended Peripheral Equipment controller 0 Peripheral Controller number, starting segment and ending segment  Define the superloop configuration, where:  x = Controller number (1-95) for superloop's shelf 0 y = starting shelf segment number (0-3) z = ending shelf segment number (0-3)  Enter: X to remove XPE0 or <cr> Return to REQ prompt.	fnf-25 xpe-15
XPE1	x y z	Extended Peripheral Equipment controller 1 Peripheral Controller number, starting segment and ending segment  Define the superloop configuration, where:  x = Controller number (1-95) for superloop's shelf 1 y = starting shelf segment number (0-3) z = ending shelf segment number (0-3)  Enter:  X to remove XPE1 <cr> Return to REQ prompt.	xpe-15

# LD 97

Prompt	Response	Comment	Pack/Rel
XPEC	(0)-95	<p>Extended Peripheral Equipment Controller (assign Peripheral Controller numbers; 0 for automatic)</p> <p>Block is built with segments of the peripheral shelf (RCI or FXPEC) which are associated with this SUPL (LCI or FXNET)</p> <p>Where:</p> <p>0 = Automatically assign Controller numbers. The system assigns the next available Controller number. 0 cannot be assigned for XPND.</p> <p>1-95 = Manually assign Controller numbers</p> <p>Precede with X to remove. Remove all cards/TNs in the Controller shelf first. XPEC is prompted if SUPT=CARR or FIBR.</p>	xpe-15
	1-95	<p>Extended Peripheral Equipment Controller if SUPT = CARR or FIBR.</p> <p>If SUPT = CARR, the superloop block is built with all segments (0-3) of the peripheral shelf (RCI) and associated with this SUPL (LCI). This ensures that one LCI is configured to only one RCI, and that all segments on the RCI are associated with the LCI.</p> <p>If SUPT = FIBR, the superloop block is built with default Fiber remote parameters and all segments (0-3) of the peripheral shelf (FPEC) are associated with this SUPL (FNET).</p>	rem_ipe-21
XSMN	(0)-63	<p>XSM address on the remote shelf. (0) means not configured. XSMN applies only to Wall-Mounted remotes.</p>	rem_ipe-22

Prompt	Response	Comment	Pack/Rel																												
XTDT	(0)-7	<p>Extended Tone Detection Table</p> <p>XTDT table number in which all the following parameters are stored.</p> <p>Table 0 can be changed but must not be removed. Table 0 always exists and is initialized to default values. With UK package (190) Table 0 defaults are:</p> <table border="1"> <thead> <tr> <th><u>Parameter</u></th> <th><u>Value</u></th> </tr> </thead> <tbody> <tr> <td>DFQ</td> <td>0</td> </tr> <tr> <td>MDL</td> <td>- 30 dBm</td> </tr> <tr> <td>MVT</td> <td>300 ms</td> </tr> <tr> <td>BRK</td> <td>0 ms</td> </tr> <tr> <td>CAD</td> <td>0</td> </tr> <tr> <td>SSC</td> <td>0</td> </tr> </tbody> </table> <p>Without UK package (190) Table 0 defaults are:</p> <table border="1"> <thead> <tr> <th><u>Parameter</u></th> <th><u>Value</u></th> </tr> </thead> <tbody> <tr> <td>DFQ</td> <td>4</td> </tr> <tr> <td>MDL</td> <td>-20 dBm</td> </tr> <tr> <td>MVT</td> <td>400 ms</td> </tr> <tr> <td>BRK</td> <td>0 ms</td> </tr> <tr> <td>CAD</td> <td>0</td> </tr> <tr> <td>SSC</td> <td>0</td> </tr> </tbody> </table>	<u>Parameter</u>	<u>Value</u>	DFQ	0	MDL	- 30 dBm	MVT	300 ms	BRK	0 ms	CAD	0	SSC	0	<u>Parameter</u>	<u>Value</u>	DFQ	4	MDL	-20 dBm	MVT	400 ms	BRK	0 ms	CAD	0	SSC	0	xpe-16
<u>Parameter</u>	<u>Value</u>																														
DFQ	0																														
MDL	- 30 dBm																														
MVT	300 ms																														
BRK	0 ms																														
CAD	0																														
SSC	0																														
<u>Parameter</u>	<u>Value</u>																														
DFQ	4																														
MDL	-20 dBm																														
MVT	400 ms																														
BRK	0 ms																														
CAD	0																														
SSC	0																														

# LD 97

---

# Index of prompts

---

## Symbols

# (LD 18), 573

\* (LD 18), 573

## Numerics

0+RT (LD 28), 753

0-RT (LD 28), 753

1RT (LD 28), 753

20PP (LD 97), 1070

2DT (LD 16), 400

3ANI (LD 19), 585

500B (LD 17), 495

500L (LD 73), 882

## A

A (LD 18), 573

A\_FILTER (LD 17), 497

A1MR (LD 16), 400

AAA (LD 95), 1052

AAAO (LD 16), 400

AACD (LD 10), 89

AACQ (LD 23), 674

AACR (LD 21), 644

AACS (LD 20), 619

AADN (LD 12), 213

AANI (LD 16), 400

AAT (LD 16), 400

AATB (LD 16), 400

AATO (LD 16), 400

AATT (LD 15), 294

ABAN (LD 12), 213

ABAN (LD 16), 400

ABCD (LD 17), 495

ABDN (LD 15), 294

ABOR (LD 17), 495

ABST (LD 56), 813

AC1 (LD 86), 961

AC2 (LD 15), 294

AC2 (LD 86), 961

ACAA (LD 23), 674

ACC (LD 93), 1010

ACCD (LD 15), 294

ACDN (LD 23), 674

ACDN (LD 97), 1070

ACDR (LD 88), 987

ACFT (LD 56), 813

ACKW (LD 16), 401

ACLE (LD 88), 987

ACMP (LD 16), 401

ACNI (LD 16), 401

ACNO (LD 16), 401

ACNO (LD 56), 813

ACNS (LD 15), 295

ACNT (LD 23), 674

ACO (LD 73), 882

ACOD (LD 16), 401

ACOD (LD 21), 644

ACPQ (LD 23), 674

ACPS (LD 58), 851

ACPT (LD 58), 851

ACRC (LD 73), 882

ACT\_BUSY (LD 15), 295  
ACT\_IDLE (LD 15), 295  
ACTN (LD 56), 813  
ADAN (LD 17), 495  
ADAY (LD 10), 89  
ADAY (LD 11), 138  
ADAY (LD 16), 401  
ADCP (LD 11), 138  
ADCP (LD 15), 295  
ADCP (LD 16), 402  
ADD (LD 73), 882  
ADDG (LD 15), 295  
ADDG (LD 16), 401  
ADDITIONAL\_PORT (LD 17), 496  
ADDP (LD 16), 402  
ADFT (LD 19), 585  
ADHT (LD 15), 295  
ADID (LD 14), 233  
ADJUST PAPER THEN (LD 20), 619  
ADJUST PAPER THEN (LD 22), 656  
ADJUST PAPER THEN (LD 81), 927  
ADJUST PAPER THEN (LD 82), 947  
ADJUST PAPER THEN (LD 83), 951  
ADLD (LD 15), 296  
ADMIN\_PORT (LD 17), 497  
ADMN (LD 57), 838  
ADPD (LD 23), 674  
AEFD (LD 11), 138  
AEHT (LD 11), 138  
AENI (LD 23), 674  
AF\_STATUS (LD 17), 497  
AFBT (LD 15), 296  
AFCO (LD 15), 296  
AFD (LD 11), 138  
AFNT (LD 15), 296  
AFX (LD 73), 882  
AGCD (LD 17), 497  
AGNO (LD 93), 1010  
AGNT (LD 97), 1070  
AHNT (LD 11), 138  
AHOL (LD 10), 89  
AHOL (LD 11), 138  
AHOL (LD 16), 402  
AIA (LD 16), 402  
AID (LD 23), 674  
AIOD (LD 16), 402  
ALARM (LD 17), 497  
ALDN (LD 15), 296  
ALEN (LD 88), 987  
ALL (LD 57), 838  
ALOG (LD 23), 674  
ALOW (LD 19), 585  
ALOW (LD 49), 765  
ALOW (LD 87), 976  
ALOW (LD 90), 998  
ALOW (LD 93), 1010  
ALPD (LD 12), 213  
ALRM (LD 15), 296  
ALRM (LD 16), 402  
ALRM (LD 17), 497  
ALRM (LD 18), 573  
ALRM (LD 73), 882  
ALRM (LD 74), 917  
ALST (LD 86), 961  
ALT (LD 86), 961  
ALUL (LD 97), 1070  
ALUS (LD 97), 1070  
AML (LD 17), 497  
AML\_DATA (LD 15), 296  
ANAT (LD 15), 297  
ANAT (LD 56), 813  
ANDN (LD 15), 295  
ANDN (LD 16), 403  
ANDT (LD 16), 403  
ANFA (LD 56), 813  
ANFB (LD 56), 813  
ANFT (LD 16), 403  
ANI\_DATA (LD 15), 297  
ANIC (LD 16), 404  
ANIE (LD 10), 89  
ANIE (LD 11), 139  
ANIE (LD 16), 404  
ANIE (LD 27), 729  
ANII (LD 19), 585  
ANIT (LD 19), 585  
ANKP (LD 16), 404

---

ANLD (LD 15), 297	ASPCT (LD 15), 299
ANNS (LD 56), 813	ASRC (LD 57), 838
ANOF (LD 56), 814	AST (LD 10), 89
ANQU (LD 56), 814	AST (LD 11), 139
ANSR (LD 56), 814	AST (LD 14), 233
ANSZ (LD 16), 404	AST (LD 23), 675
ANTK (LD 16), 404	AST (LD 97), 1070
ANUM (LD 12), 213	ASTM (LD 15), 300
ANUM (LD 93), 1010	ASTP (LD 16), 404
ANXC (LD 56), 814	ASUM (LD 02), 63, 78
AOBT (LD 56), 814	ASUM A (LD 02), 63, 78
AOCS (LD 15), 297	ASUM E (LD 02), 63, 78
AODN (LD 15), 297	ASUP (LD 16), 405
AODN (LD 93), 1010	ATAC (LD 15), 300
AOLR (LD 17), 497	ATAN (LD 16), 405
AOM (LD 11), 139	ATBL (LD 16), 405
APAD (LD 15), 298	ATCH (LD 15), 300
APL (LD 15), 298	ATDA (LD 57), 838
APL (LD 23), 674	ATDD (LD 57), 838
APPL (LD 17), 498	ATDN (LD 14), 233
APPL (LD 27), 729	ATDN (LD 15), 300
APPL_DN (LD 15), 298	ATDN (LD 16), 405
APRF (LD 15), 298	ATGT (LD 16), 405
APRT (LD 17), 498	ATIM (LD 15), 300
APVL (LD 17), 498	ATO (LD 73), 883
AQTT (LD 15), 298	ATRC (LD 15), 300
AQTT (LD 93), 1010	ATRN (LD 17), 499
ARBK (LD 56), 814	ATRR (LD 16), 405
ARDL (LD 87), 976	ATT (LD 94), 1043
ARDL_ACCEPT (LD 15), 299	ATT_DATA (LD 15), 301
ARDL_ATTEMPT (LD 15), 299	ATTK (LD 16), 405
ARDL_RETRY (LD 15), 299	ATVR (LD 16), 405
AREM (LD 57), 838	AUDN (LD 16), 405
ARE YOU SURE? (LD 95), 1052	AUDT (LD 17), 499
ARLI (LD 90), 998	AUT (LD 11), 139
ARNO (LD 16), 404	AUTB (LD 11), 139
ARRN (LD 90), 998	AUTH (LD 10), 89
ART (LD 56), 814	AUTH (LD 11), 140
ARTO (LD 10), 89	AUTH (LD 16), 406
ARTO (LD 11), 139	AUTH (LD 49), 765
ASID (LD 20), 619	AUTH (LD 57), 838
ASID (LD 21), 644	AUTHCOD_ALRM (LD 88), 987
ASID (LD 23), 675	AUTM (LD 16), 406

AUTO (LD 16), 406  
AUTO (LD 88), 987  
AUTO\_AUDIT (LD 17), 499  
AUTO\_BIMP (LD 14), 233  
AUTR (LD 15), 301  
AUTR (LD 24), 700  
AWU (LD 15), 301  
AWU\_DATA (LD 15), 301  
AWUA (LD 57), 838  
AWUD (LD 57), 838  
AWUT (LD 56), 814  
AWUV (LD 57), 838  
AXID (LD 15), 301  
AXQI (LD 17), 499  
AXQO (LD 17), 499

## B

B (LD 18), 573  
B1 (LD 27), 730  
B1CT (LD 27), 730  
B2 (LD 27), 730  
B2CT (LD 27), 731  
BAND (LD 16), 406  
BANR (LD 17), 500  
BATT (LD 17), 500  
BAUD (LD 11), 140  
BCAD (LD 97), 1070  
BCAP (LD 15), 301  
BCAP (LD 17), 500  
BCH (LD 27), 731  
BCHI (LD 17), 500  
BCHL (LD 17), 500  
BCOT (LD 16), 406  
BCST (LD 17), 501  
BDCT (LD 16), 406  
BDI (LD 15), 301  
BDSP (LD 16), 406  
BGTH (LD 52), 779  
BILN (LD 16), 406  
BIMP (LD 10), 90  
BIMP (LD 14), 233  
BIPC (LD 73), 883

BIPV (LD 73), 883  
BITL (LD 17), 501  
BKGD (LD 17), 501  
BLEN (LD 16), 406  
BLOC (LD 50), 772  
BNE (LD 86), 961  
BNRA (LD 57), 838  
BNRD (LD 57), 838  
BNUM (LD 16), 406  
BOTO (LD 15), 301  
BPS (LD 17), 501  
BPSS (LD 15), 301  
BPV (LD 73), 884  
BRIL (LD 73), 885  
BRIP (LD 16), 406  
BRIT (LD 73), 885  
BRK (LD 97), 1071  
BRSC (LD 27), 731  
BRST (LD 88), 987  
BRST PARM (LD 74), 917  
BSCW (LD 23), 675  
BSFE (LD 15), 301  
BSGC (LD 15), 302  
BSRV (LD 17), 502  
BSSU (LD 16), 406  
BTCG (LD 16), 407  
BTDD (LD 97), 1071  
BTDT (LD 14), 234  
BTDT (LD 97), 1072  
BTID (LD 14), 234  
BTT (LD 16), 407  
BTUA (LD 16), 407  
BUID (LD 11), 141  
BUID (LD 20), 619  
BUSY (LD 23), 675  
BUSY (LD 56), 814  
BWTM (LD 02), 63  
BYPS (LD 49), 765  
BYPS (LD 58), 851  
BYTH (LD 23), 675

**C**

C (LD 18), 573  
C6DS (LD 57), 838  
CAB (LD 17), 502  
CAB (LD 56), 814  
CAB\_TYPE (LD 17), 502  
CAC (LD 10), 90  
CAC (LD 16), 407  
CAC (LD 27), 731  
CAC (LD 88), 987  
CAC\_CIS (LD 10), 90  
CAC\_CIS (LD 11), 141  
CAC\_CIS (LD 16), 407  
CAC\_CIS (LD 27), 731  
CAC\_CIS (LD 88), 987  
CAC\_CONV (LD 16), 407  
CAC\_MFC (LD 10), 90  
CAC\_MFC (LD 11), 141  
CAC\_MFC (LD 27), 731  
CAC0 (LD 15), 302  
CAC1 (LD 15), 302  
CAC2 (LD 15), 302  
CAC3 (LD 15), 302  
CAC4 (LD 15), 303  
CAC5 (LD 15), 303  
CAC6 (LD 15), 303  
CAC7 (LD 15), 303  
CAC8 (LD 15), 303  
CAC9 (LD 15), 303  
CACC (LD 15), 303  
CACC (LD 16), 407  
CACD (LD 16), 407  
CACD (LD 94), 1043  
CAD (LD 97), 1072  
CALB (LD 20), 619  
CALB (LD 21), 644  
CALB (LD 23), 676  
CAMP (LD 56), 815  
CANC (LD 15), 304  
CARD (LD 27), 731  
CAS (LD 15), 304  
CAS\_DATA (LD 15), 304  
CAST (LD 56), 815  
CAT (LD 16), 407  
CBCR (LD 16), 408  
CBQ (LD 16), 408  
CBQ (LD 86), 961  
CBQ (LD 87), 976  
CBTL (LD 87), 976  
CC0 (LD 73), 885  
CC1 (LD 73), 886  
CC2 (LD 73), 886  
CC3 (LD 73), 886  
CC4 (LD 73), 886  
CCAN (LD 19), 585  
CCAR (LD 73), 885  
CCB (LD 16), 408  
CCB1 (LD 16), 408  
CCB2 (LD 16), 408  
CCBA (LD 16), 408  
CCBA (LD 23), 676  
CCBA (LD 24), 700  
CCBA (LD 87), 976  
CCDO (LD 15), 304  
CCFA (LD 57), 838  
CCFD (LD 57), 838  
CCFWDN (LD 15), 304  
CCGD (LD 73), 886  
C CLR B (R) (LD 73), 885  
C CLR B (S) (LD 73), 885  
CCLS (LD 19), 586  
CCNI (LD 16), 408  
CCO (LD 16), 409  
CCRS (LD 15), 305  
CCS\_DATA (LD 15), 305  
CDAN (LD 19), 586  
CDCT (LD 16), 409  
CDEN (LD 10), 90  
CDEN (LD 11), 141  
CDEN (LD 12), 213  
CDEN (LD 13), 225  
CDEN (LD 14), 235  
CDEN (LD 20), 619  
CDN (LD 23), 676  
CDNC (LD 56), 815

CDNO (LD 17), 502  
CDP (LD 86), 961  
CDPC (LD 16), 409  
CDPC (LD 18), 573  
CDPL (LD 15), 305  
CDPR (LD 15), 305  
CDR (LD 15), 305  
CDR (LD 16), 409  
CDR (LD 27), 731  
CDR\_DATA (LD 15), 305  
CDRB (LD 16), 409  
CDRC (LD 57), 838  
CDRX (LD 16), 409  
CDRY (LD 16), 409  
CDT (LD 56), 816  
CDTI2 (LD 73), 886  
CDTO (LD 15), 306  
CEIL (LD 23), 676  
CEPT (LD 57), 839  
CEQP (LD 73), 886  
CEQU (LD 17), 503  
CFBA (LD 57), 839  
CFDD (LD 57), 839  
CFDT (LD 56), 816  
CFHO (LD 57), 839  
CFLP (LD 14), 235  
CFMW (LD 56), 816  
CFN0 (LD 15), 306  
CFN1 (LD 15), 306  
CFN2 (LD 15), 306  
CFNA (LD 15), 306  
CFNA (LD 95), 1052  
CFSN (LD 56), 816  
CFTA (LD 15), 306  
CFTN (LD 10), 90  
CFTN (LD 11), 141  
CFWA (LD 57), 839  
CFWD (LD 57), 839  
CFWD (LD 95), 1052  
CFWI (LD 57), 839  
CFWR (LD 16), 409  
CFWS (LD 17), 503  
CFWT (LD 56), 816  
CFWT (LD 97), 1072  
CFWV (LD 57), 839  
CGPC (LD 16), 409  
CH (LD 27), 732  
CHANGE MAP? (LD 29), 757  
CHDN (LD 15), 306  
CHID (LD 14), 235  
CHLN (LD 15), 306  
CHMN (LD 15), 306  
CHRG (LD 16), 409  
CHTY (LD 16), 410  
CIC (LD 19), 586  
CIS\_ANI (LD 15), 306  
CIS\_ENT (LD 15), 307  
CISFW (LD 73), 886  
CISR (LD 16), 410  
CIST (LD 14), 235  
CITM (LD 02), 63  
CLAS (LD 88), 987  
CLASS\_FMT (LD 15), 307  
CLDN (LD 15), 307  
CLEA (LD 73), 887  
CLEN (LD 16), 410  
CLID (LD 15), 307  
CLID (LD 16), 411  
CLID (LD 17), 503  
CLIP (LD 27), 732  
CLK (LD 11), 141  
CLK (LD 16), 410  
CLKN (LD 73), 887  
CLN (LD 56), 816  
CLOK (LD 17), 504  
CLOK (LD 27), 732  
CLR (LD 19), 586  
CLRB (R) (LD 73), 887  
CLRB (S) (LD 73), 887  
CLRF (R) (LD 73), 887  
CLRF (S) (LD 73), 887  
CLS (LD 10), 90  
CLS (LD 14), 235  
CLS (LD 16), 410  
CLS (LD 27), 732  
CLS1 (LD 15), 308

---

CLS2 (LD 15), 308	CONF (LD 79), 923
CLTP (LD 90), 998	CONF_DSP (LD 15), 310
CMD (LD 29), 757	CONG (LD 15), 310
CMF (LD 14), 241	CONN (LD 14), 241
CMS (LD 17), 504	CONN (R) (LD 73), 887
CMS (LD 23), 676	CONN (S) (LD 73), 887
CNAT (LD 15), 308	CONT (LD 18), 573
CNCS (LD 15), 308	CONT (LD 97), 1073
CNDN (LD 15), 309	COPC (LD 02), 63
CNDR (LD 94), 1043	COPN (LD 02), 63
CNEG (LD 16), 411	COPS (LD 02), 63
CNEG (LD 17), 504	COPT (LD 86), 962
CNF_NAME (LD 15), 309	CORT (LD 28), 753
CNFD (LD 15), 309	COS (LD 24), 700
CNFFIELD (LD 15), 309	COS (LD 88), 988
CNFG (LD 95), 1052	COT (LD 56), 816
CNI (LD 15), 309	COTL (LD 97), 1073
CNI (LD 17), 504	COTR (LD 16), 413
CNIE (LD 16), 412	COTS (LD 97), 1073
CNIP (LD 15), 309	CPAC (LD 57), 840
CNIT (LD 16), 412	CPAD (LD 14), 241
CNT (LD 56), 816	CPAD (LD 97), 1073
CNTC (LD 15), 309	CPAR (LD 19), 586
CNTL (LD 16), 412	CPAS (LD 15), 310
CNTL (LD 23), 676	CPCI (LD 15), 310
CNTL (LD 74), 917	CPDC (LD 16), 413
CNTP (LD 15), 310	CPFXS (LD 16), 413
CNTR (LD 74), 918	CPG (LD 93), 1010
CNTY (LD 16), 412	CPGS (LD 93), 1011
CNTY (LD 17), 505	CPNC (LD 56), 816
CNV (LD 86), 961	CPND (LD 10), 102
CNVT (LD 16), 413	CPND (LD 11), 158
CO_TYPE (LD 17), 506	CPND (LD 12), 213
COAT (LD 16), 413	CPND_LANG (LD 10), 102
CODE (LD 17), 505	CPND_LANG (LD 11), 159
CODE (LD 57), 840	CPND_LANG (LD 95), 1052
CODE (LD 88), 988	CPOQ (LD 56), 816
CODE (LD 97), 1072	CPP (LD 16), 414
COLP (LD 27), 733	CPP (LD 57), 840
COLR (LD 50), 772	CPPO (LD 57), 840
COND (LD 57), 840	CPRD (LD 23), 676
CONF (LD 15), 310	CPRK (LD 57), 840
CONF (LD 17), 506	CPTM (LD 50), 772

CRC (LD 17), 506  
CRC (LD 73), 887, 888  
CRCF (LD 97), 1073  
CRCS (LD 10), 102  
CRCS (LD 24), 700  
CRDAY (LD 15), 310  
CRHOL (LD 15), 310  
CRNO (LD 49), 765  
CRQS (LD 23), 677  
CRT0 (LD 15), 311  
CRT1 (LD 15), 311  
CRT2 (LD 15), 311  
CRT3 (LD 15), 311  
CRTOD (LD 15), 311  
CSHF (LD 57), 840  
CSQI (LD 17), 507  
CSQO (LD 17), 507  
C SUPO(S) (LD 73), 888  
CT (LD 27), 733  
CTOC (LD 16), 414  
CTON (LD 16), 414  
CTRC (LD 15), 311  
CTVN (LD 15), 311  
CTYP (LD 11), 159  
CTYP (LD 12), 214  
CTYP (LD 16), 414  
CTYP (LD 17), 507  
CTYP (LD 20), 620  
CTYP (LD 27), 734  
CTYP (LD 86), 962  
CUST (LD 10), 102  
CUST (LD 11), 159  
CUST (LD 12), 214  
CUST (LD 14), 241  
CUST (LD 15), 312  
CUST (LD 16), 415  
CUST (LD 17), 508  
CUST (LD 18), 573  
CUST (LD 19), 586  
CUST (LD 20), 620  
CUST (LD 21), 644  
CUST (LD 22), 656  
CUST (LD 23), 677

CUST (LD 24), 700  
CUST (LD 25), 708  
CUST (LD 26), 715  
CUST (LD 27), 734  
CUST (LD 28), 753  
CUST (LD 49), 765  
CUST (LD 50), 772  
CUST (LD 56), 816  
CUST (LD 57), 840  
CUST (LD 58), 851  
CUST (LD 79), 923  
CUST (LD 81), 927  
CUST (LD 82), 947  
CUST (LD 83), 951  
CUST (LD 86), 962  
CUST (LD 87), 976  
CUST (LD 88), 988  
CUST (LD 90), 999  
CUST (LD 93), 1011  
CUST (LD 95), 1052  
CWBZ (LD 15), 312  
CWBZ (LD 93), 1011  
CWCL (LD 15), 312  
CWCL (LD 93), 1011  
CWGA (LD 57), 840  
CWGD (LD 57), 841  
CWLf (LD 23), 677  
CWLW (LD 23), 677  
CWNC (LD 23), 677  
CWNT (LD 23), 677  
CWT, 817  
CWT (LD 56), 817  
CWTH (LD 23), 677  
CWTM (LD 15), 312  
CWTM (LD 93), 1011  
CWTT (LD 23), 677  
CWUP (LD 15), 313  
CY45 (LD 17), 508  
CYCS (LD 56), 817

## D

D (LD 18), 573

---

DACT_BUSY (LD 15), 313	DCTI (LD 16), 415
DACT_IDLE (LD 15), 313	DCUS (LD 17), 509
DAL (LD 23), 677	DDCS (LD 17), 509
DAPC (LD 12), 214	DDCS (LD 74), 918
DAPC (LD 15), 313	DDD (LD 90), 999
DAPC (LD 16), 415, 417	DDGT (LD 24), 700
DAPC (LD 21), 645	DDGT (LD 56), 817
DASC (LD 15), 313	DDL Y (LD 16), 415
DATA_CORRECT (LD 17), 508	DDMI (LD 16), 416
DATE (LD 15), 313	DDO (LD 16), 416
DATE (LD 20), 620	DDSL (LD 14), 241
DATE (LD 22), 656	DDSL (LD 74), 918
DATE (LD 81), 927	DEAF (LD 57), 841
DATE (LD 82), 947	DEF 2000 (LD 97), 1073
DATE (LD 83), 951	DEF 2006 (LD 97), 1073
DAY (LD 15), 314	DEF 2008 (LD 97), 1073
DAY0 (LD 15), 314	DEF 2216 (LD 97), 1073
DAY1 (LD 15), 314	DEF 2500 (LD 97), 1073
DAY2 (LD 15), 315	DEF 2616 (LD 97), 1073
DAY3 (LD 15), 315	DEF 500 (LD 97), 1073
DAYS (LD 86), 962	DEF i2002 xx (LD 97), 1074
DAYS (LD 88), 988	DEF i2004 xx (LD 97), 1074
DBA (LD 11), 159	DEF i2050 xx (LD 97), 1074
DBCS (LD 56), 817	DEFS (LD 97), 1074
DBK (LD 86), 963	DEL (LD 86), 963
DBNC (LD 73), 888	DEL (LD 87), 976
DBRC (LD 15), 315	DELETE_VMB (LD 10), 102
DCAD (LD 56), 817	DELETE_VMB (LD 11), 160
DCD (LD 11), 159	DEM (LD 11), 160
DCD (LD 16), 415	DEM (LD 16), 416
DCCR (LD 16), 415	DENS (LD 17), 510
DCFV (LD 11), 159	DENY (LD 19), 586
DCH (LD 16), 415	DENY (LD 49), 765
DCHI (LD 16), 415	DENY (LD 56), 817
DCHI (LD 17), 508	DENY (LD 87), 976
DCHL (LD 17), 509	DENY (LD 90), 999
DCHR (LD 58), 851	DENY (LD 93), 1012
DCLP (LD 10), 102	DES (LD 10), 102
DCMX (LD 15), 315	DES (LD 11), 160
DCNO (LD 16), 415	DES (LD 14), 241
DCNO (LD 49), 765	DES (LD 16), 416
DCNO (LD 95), 1052	DES (LD 17), 510
DCO (LD 73), 889	DES (LD 20), 620

DES (LD 22), 656  
DES (LD 27), 734  
DES (LD 81), 927  
DES (LD 82), 947  
DES (LD 84&85), 954  
DES (LD 95), 1052  
DEST (LD 25), 708  
DEXT (LD 16), 416  
DFCL (LD 24), 701  
DFDN (LD 23), 678  
DFDN (LD 27), 734  
DFLN (LD 95), 1052  
DFLT (LD 15), 316  
DFLT (LD 18), 573  
DFLT (LD 56), 817  
DFLT (LD 73), 889  
DFLT (LD 94), 1043  
DFLT\_LANG (LD 15), 316  
DFN0 (LD 15), 316  
DFN1 (LD 15), 316  
DFN2 (LD 15), 316  
DFNA (LD 15), 316  
DFNR (LD 15), 317  
DFQ (LD 97), 1074  
DGRP (LD 11), 160  
DGRP (LD 15), 317  
DGRP (LD 20), 620  
DGTO (LD 19), 587  
DGTP (LD 16), 416  
DGTS (LD 24), 701  
DGTS (LD 56), 817  
DI0 (LD 56), 818  
DIAL (LD 56), 818  
DIAL\_PLAN (LD 15), 317  
DID (LD 56), 818  
DID (LD 90), 1000  
DIDD (LD 16), 416  
DIDD (LD 17), 510  
DIDL (LD 97), 1074  
DIDN (LD 15), 317  
DIDS (LD 97), 1075  
DIDT (LD 15), 317  
DIG# (LD 16), 416  
DIG (LD 10), 103  
DIG (LD 95), 1052, 1053  
DIGS (LD 16), 416  
DIND (LD 15), 318  
DISD (LD 15), 318  
DISPLAY\_FMT (LD 10), 103  
DISPLAY\_FMT (LD 11), 160  
DISPLAY\_FMT (LD 95), 1053  
DISPLAY NEW MAP? (LD 29), 757  
DITI (LD 15), 318  
DLAT (LD 15), 318  
DLDN (LD 15), 318  
DLEN (LD 12), 214  
DLNG (LD 11), 161  
DLNT (LD 24), 701  
DLOP (LD 17), 510  
DLT (LD 15), 319  
DLTN (LD 16), 417  
DLTN (LD 86), 963  
DMC (LD 10), 103  
DMC (LD 20), 620  
DMEM (LD 20), 621  
DMI (LD 86), 963  
DMI (LD 87), 976  
DMI (LD 90), 1000  
DMOD (LD 16), 417  
DMPH (LD 27), 734  
DMWM (LD 15), 319  
DN (LD 10), 103  
DN (LD 11), 161  
DN (LD 20), 621  
DN (LD 22), 656  
DN (LD 24), 701  
DN (LD 27), 734  
DN (LD 82), 947  
DN (LD 95), 1053  
DNAM (LD 16), 417  
DNAN (LD 11), 161  
DNAN (LD 12), 214  
DNAT (LD 27), 734  
DNDA (LD 56), 818  
DNDH (LD 15), 319  
DNDI (LD 12), 214

DNDL (LD 15), 319  
DNDR (LD 11), 161  
DNDR (LD 15), 319  
DNIC (LD 27), 735  
DNIS (LD 16), 417  
DNIS (LD 23), 678  
DNLG (LD 15), 319  
DNLN (LD 58), 851  
DNPS (LD 58), 851  
DNRI (LD 11), 161  
DNRO (LD 11), 161  
DNRT (LD 23), 678  
DNSZ (LD 16), 417  
DNSZ (LD 18), 574  
DNUM (LD 17), 511  
DOW (LD 23), 678  
DPNS (LD 17), 511  
DPPI (LD 16), 417  
DPPO (LD 16), 417  
DPSD (LD 27), 735  
DPVS (LD 57), 841  
DRAT (LD 17), 511  
DRNG (LD 16), 417, 418  
DROL (LD 17), 511  
DSAC (LD 23), 678  
DSBL (LD 16), 418  
DSC (Distant Steering Code), 967  
DSC (LD 87), 976  
DSEL (LD 16), 418  
DSET (LD 73), 889  
DSL (LD 27), 735  
DSL (LD 97), 1075  
DSP (LD 87), 977  
DSPD (LD 16), 418  
DSPL (LD 11), 161  
DSPT (LD 11), 162  
DSPT (LD 16), 418  
DSTL (LD 25), 708  
DTAO (LD 11), 162  
DTCR (LD 14), 242  
DTCS (LD 17), 511  
DTCS (LD 74), 918  
DTD (LD 16), 418

DTDF (LD 16), 418  
DTDT (LD 17), 512  
DTI2 (LD 17), 512  
DTIB (LD 17), 512  
DTIC (LD 17), 512  
DTMF (LD 15), 319  
DTMF (LD 97), 1075  
DTMK (LD 11), 162  
DTO (LD 13), 225  
DTO (LD 73), 889  
DTOB (LD 17), 512  
DTOC (LD 16), 418  
DTOS (LD 16), 418  
DTPI (LD 16), 419  
DTPn (LD 56), 818  
DTPO (LD 16), 419  
DTR (LD 11), 162  
DTR (LD 16), 419  
DTRB (LD 17), 513  
DTRK (LD 16), 419  
DTSL (LD 14), 242  
DTSL (LD 74), 918  
DTT (LD 73), 889  
DTYP (LD 11), 162  
DTYP (LD 16), 419  
DTYP (LD 97), 1075  
DUP (LD 11), 163  
DUP (LD 16), 419  
DUPX (LD 17), 513  
DUR5 (LD 17), 513  
DURT (LD 23), 678

## E

E\_FILTER (LD 17), 516  
EBLF (LD 12), 214  
ECC1 (LD 15), 320  
ECC2 (LD 15), 320  
ECDN (LD 15), 321  
ECDN (LD 93), 1012  
ECCR (LD 15), 321  
ECHG (LD 10), 104  
ECHG (LD 11), 163

E CONN (R) (LD 73), 889  
E CONN (S) (LD 73), 890  
EDGE (LD 73), 890  
EECD (LD 94), 1043  
EES (LD 23), 678  
EESD (LD 15), 321  
EEST (LD 15), 321  
EEST (LD 56), 818  
EFCS (LD 73), 890  
EFD (LD 11), 163  
EFD (LD 27), 735  
EFLL (LD 15), 321  
EFLL (LD 93), 1012  
EHNO (LD 20), 621  
EHR (LD 23), 678  
EHT (LD 11), 164  
EHT (LD 27), 735  
ELAN (LD 17), 513  
ELKA (LD 57), 841  
ELKD (LD 57), 841  
ELKP (LD 10), 104  
ELKP (LD 11), 164  
ELPL (LD 15), 321  
EMGY (LD 16), 419  
EML (LD 16), 419  
EMRT (LD 23), 679  
EMTY (LD 14), 242  
ENBL (LD 19), 587  
ENBS (LD 19), 587  
END (LD 56), 818  
ENL (LD 17), 513  
ENS (LD 15), 321  
ENTR (LD 86), 963  
ENTRY (LD 15), 321  
EOS (LD 16), 419  
EOVR (LD 57), 841  
EQA (LD 87), 977  
EQAR (LD 16), 420  
ERDT (LD 86), 964  
ERR (LD 52), 779  
ERRM (LD 17), 514  
ERWT (LD 56), 818  
ERWT (LD 86), 964

ESA\_APDN (LD 15), 322  
ESA\_HLCL (LD 15), 322  
ESA\_INHN (LD 15), 322  
ESCALATE (LD 17), 514  
ESDI (LD 17), 514  
ESDN (LD 24), 701  
E SEZ (R) (LD 73), 890  
E SEZ (S) (LD 73), 890  
ESN (LD 11), 164  
ESN (LD 16), 420  
ESRT (LD 24), 702  
ETOD (LD 86), 964  
EXP (LD 86), 964  
EXT\_NAME (LD 15), 322  
EXT0 (LD 17), 514  
EXT1 (LD 17), 515  
EXTFIELD (LD 15), 322  
EXTR (LD 58), 852  
EXTT (LD 15), 322

**F**

FACN (LD 16), 420  
FACY (LD 16), 420  
FADR (LD 23), 679  
FADT (LD 23), 679  
FAEL (LD 52), 779  
FAER (LD 52), 779  
FALT (LD 16), 420  
FALT (R) (LD 73), 890  
FALT (S) (LD 73), 890  
FAP (LD 73), 890  
FCAF (LD 15), 322  
FCAR (LD 10), 104  
FCAR (LD 11), 164  
FCAR (LD 14), 242  
FCDR (LD 17), 516  
FCFT (LD 23), 679  
FCI (LD 86), 964  
FCI (LD 87), 977  
FCNC (LD 15), 322  
FCR\_DATA (LD 15), 322  
FCTH (LD 23), 679

---

FCWD (LD 15), 323  
FDAY (LD 97), 1075  
FDDN (LD 97), 1076  
FDID (LD 49), 765  
FDIS (LD 57), 841  
FDLC (LD 97), 1076  
FDLT (LD 97), 1077  
FDN (LD 11), 165  
FDN (LD 27), 735  
FDNR (LD 97), 1077  
FDTM (LD 97), 1077  
FDTP (LD 97), 1078  
FEAT (LD 27), 736  
FEAT (LD 73), 892  
FEAT (LD 81), 927  
FEAT (LD 86), 964  
FEAT (LD 87), 977  
FEAT (LD 90), 1000  
FEATID (LD 27), 737  
FEDC (LD 16), 420  
FETN (LD 97), 1078  
FFC\_DATA (LD 15), 323  
FFCS (LD 15), 323  
FFCT (LD 56), 819  
FFCT (LD 57), 841  
FGNO (LD 16), 421  
FGNO (LD 19), 587  
FINT (LD 97), 1078  
FLEN (LD 15), 323  
FLEN (LD 87), 977  
FLEN (LD 90), 1000  
FLOW (LD 17), 516  
FLOW\_TYPE (LD 17), 516  
FLOW\_CNTL (LD 74), 918  
FLSH (LD 15), 323  
FLSH (LD 97), 1078  
FLTA (LD 17), 516  
FLTH (LD 17), 516  
FLVL\_MAX (LD 97), 1078  
FLVL\_MIN (LD 97), 1079  
FMOP (LD 15), 323  
FMT\_OUTPUT (LD 17), 517  
FNAD (LD 15), 324  
FNAL (LD 15), 324  
FNAT (LD 15), 324  
FNCF (LD 23), 679  
FNP (LD 15), 324  
FNUM (LD 97), 1079  
FOPT (LD 15), 324  
FOR (LD 20), 621  
FORC (LD 23), 679  
FORM (LD 16), 421  
FRAN (LD 15), 325  
FRCE (LD 49), 766  
FRCE (LD 97), 1079  
FREQ\_0 (LD 97), 1079  
FREQ\_1 (LD 97), 1079  
FRFW (LD 73), 892  
FRIN (LD 16), 421  
FRL (LD 16), 421  
FRL (LD 86), 964  
FRL (LD 87), 977  
FROA (LD 23), 680  
FROM (LD 49), 766  
FRPT (LD 17), 517  
FRRC (LD 16), 422  
FRRD (LD 16), 422  
FRRS (LD 16), 422  
FRRT (LD 15), 325  
FRRT (LD 23), 680  
FRRT (LD 93), 1012  
FRT (LD 15), 325  
FRT (LD 23), 680  
FRT (LD 93), 1012  
FSNI (LD 86), 964  
FSNI (LD 87), 977  
FSTN (LD 97), 1079  
FSVC (LD 11), 165  
FTNR (LD 97), 1079  
FTOP (LD 15), 325  
FTR (LD 10), 104  
FTR\_DATA (LD 15), 325  
FTR\_DATA (LD 21), 645  
FTYP (LD 17), 517  
FUNC (LD 17), 517  
FVER (LD 97), 1080

FWTM (LD 02), 63  
FWTM (LD 14), 242

## G

GBCS (LD 56), 819  
GCAD (LD 56), 819  
GCR (LD 16), 422  
GHTA (LD 57), 841  
GHTD (LD 57), 841  
GKCF (LD 87), 977  
GP02 (LD 15), 327  
GP03 (LD 15), 327  
GP04 (LD 15), 327  
GP05 (LD 15), 327  
GP06 (LD 15), 327  
GP07 (LD 15), 327  
GP08 (LD 15), 328  
GP09 (LD 15), 328  
GP10 (LD 15), 328  
GP11 (LD 15), 328  
GP12 (LD 15), 328  
GP13 (LD 15), 328  
GP14 (LD 15), 328  
GP15 (LD 15), 328  
GP2 (LD 73), 893  
GPNO (LD 26), 715  
GPXX (LD 15), 326  
GRCL (LD 57), 841  
GRD (LD 16), 422  
GRHP (LD 57), 841  
GRNO (LD 18), 574  
GRNO (LD 20), 621  
GRP (LD 17), 517  
GRP (LD 18), 574  
GRP (LD 20), 622  
GRP (LD 52), 779  
GRPC (LD 18), 574  
GRPF (LD 57), 841  
GRPx (LD 26), 715

## H

HBCS (LD 56), 819  
HCAD (LD 56), 819  
HCC (LD 15), 328  
HCCT (LD 56), 819  
HDID (LD 10), 110  
HDLC (LD 11), 165  
HDLC (LD 16), 422  
HDOPT (LD 15), 328  
HDTM (LD 15), 328  
HIDN (LD 57), 841  
HLCL (LD 15), 328  
HLCL (LD 16), 423  
HLDC (LD 56), 819  
HLOC (LD 15), 329  
HLOC (LD 90), 1000  
HMDN (LD 10), 110  
HMDN (LD 15), 329  
HMDN (LD 81), 942  
HMSB (LD 23), 680  
HMTL (LD 15), 329  
HNPA (LD 15), 329  
HNPA (LD 90), 1001  
HNTN (LD 15), 329  
HNTN (LD 16), 423  
HNXX (LD 15), 329  
HOL\_OPT (LD 15), 329  
HOLD (LD 16), 423  
HOLD (LD 57), 841  
HOML (LD 23), 680  
HOSP (LD 15), 329  
HOSP (LD 49), 766  
HOST (LD 17), 518  
HOT (LD 11), 166  
HOUR (LD 15), 330  
HOUR (LD 16), 424  
HOUR (LD 21), 645  
HOWL (LD 56), 820  
HPIB (LD 17), 518  
HPQ (LD 23), 681  
HRCL (LD 15), 330  
HREL (LD 57), 841

---

HRLR (LD 17), 518  
HSID (LD 23), 681  
HSP\_DATA (LD 15), 330  
HTLR (LD 17), 519  
HTNO (LD 20), 622  
HTYP (LD 57), 842  
HTYP (LD 74), 918  
HUNT (LD 10), 110  
HUNT (LD 11), 166  
HUNT (LD 27), 737  
HUNT (LD 95), 1053  
HWTT (LD 15), 330

**I**

IABS (LD 16), 424  
IADN (LD 12), 215  
IADR (LD 17), 519  
IAMP (LD 16), 424  
IANI (LD 16), 424  
IAPG (LD 10), 110  
IAPG (LD 11), 166  
IAPG (LD 14), 242  
IBCS (LD 56), 820  
IC (LD 27), 737  
ICAD (LD 56), 820  
ICCR (LD 15), 330  
ICDL (LD 15), 330  
ICDN (LD 15), 330  
ICDN (LD 16), 424  
ICDN (LD 93), 1012  
ICDR (LD 12), 215  
ICFA (LD 57), 842  
ICFD (LD 57), 842  
ICFV (LD 57), 842  
ICI (LD 15), 330  
ICI (LD 93), 1013  
ICIS (LD 16), 424  
ICMM (LD 15), 331  
ICNP (LD 16), 424  
ICNT (LD 16), 425  
ICOG (LD 16), 425  
ICOG (LD 94), 1043  
ICON (LD 17), 519  
ICP (LD 12), 215  
ICP (LD 15), 332  
ICP (LD 23), 681  
ICP\_DATA (LD 15), 332  
ICPA (LD 57), 842  
ICPD (LD 15), 332  
ICPD (LD 57), 842  
ICPO (LD 57), 842  
ICPP (LD 57), 842  
ICPR (LD 15), 332  
ICPR (LD 23), 681  
ICPR (LD 93), 1013  
ICPS (LD 15), 332  
ICPS (LD 16), 425  
ICPS (LD 23), 681  
ICPS (LD 93), 1013  
ICR (LD 88), 988  
ICS (LD 73), 893  
ICT (LD 10), 110  
ICT (LD 11), 166  
ICT (LD 12), 215  
ICTD (LD 15), 332  
ICWN (LD 15), 332  
ID (LD 16), 425  
ID (LD 52), 779  
ID (LD 86), 964  
ID1 (LD 56), 820  
ID2 (LD 56), 820  
IDBB (LD 86), 965  
IDBZ (LD 15), 332  
IDC (LD 16), 425  
IDC (LD 95), 1053  
IDCA (LD 15), 332  
IDD (LD 56), 820  
IDE (LD 56), 820  
IDEF (LD 15), 333  
IDEF (LD 16), 425  
IDGT (LD 49), 766  
IDLB (LD 23), 681  
IDLE (R) (LD 73), 893  
IDLE (S) (LD 73), 894  
IDLE\_DISP\_CHAR (LD 17), 519

IDLE\_DISP\_STRING (LD 17), 520  
IDLE\_SET\_DISPLAY (LD 17), 520  
IDL P (LD 17), 520  
IDLT (LD 02), 63  
IDLT 1 (LD 02), 63  
IDOP (LD 16), 425  
IDR (LD 15), 333  
IDTB (LD 16), 425  
IDUB (LD 23), 682  
IEC (LD 16), 426  
IFC (LD 16), 426  
IFC (LD 17), 520  
IFDN (LD 23), 682  
IFLS (LD 15), 333  
IFTO (LD 19), 587  
IHT (LD 16), 427  
IIT (LD 19), 587  
IITP (LD 19), 588  
ILIN (LD 56), 820  
ILLR (LD 16), 427  
ILOU (LD 56), 820  
IMA (LD 15), 333  
IMA (LD 23), 682  
IMBI (LD 16), 428  
IMCB (LD 16), 428  
IMPH (LD 15), 333  
IMS (LD 15), 333  
IMS (LD 23), 682  
IMS (LD 57), 842  
IMS\_DATA (LD 15), 333  
INAC (LD 16), 428  
INC (LD 14), 242  
INC (LD 16), 429  
INC\_T306 (LD 16), 429  
INC\_T306 (LD 17), 522  
INDMF (LD 16), 429  
INDX (LD 10), 110  
INFO (LD 20), 622  
INIT (LD 17), 522  
INIT (LD 19), 588  
INIT (LD 49), 767  
INPL (LD 90), 1001  
INSO (LD 97), 1080  
INST (LD 16), 429  
INST (LD 57), 842  
INST (LD 86), 965  
INT (LD 11), 167  
INT (LD 15), 334  
INT (LD 16), 429  
INT\_DATA (LD 15), 334  
INT\_NAME (LD 15), 334  
INTC (LD 16), 429  
INTFIELD (LD 15), 334  
INTL (LD 15), 334  
INTL (LD 17), 522  
INTM (LD 58), 852  
INTN (LD 97), 1080  
INTR (LD 15), 334  
INTR (LD 19), 588  
INTR (LD 58), 852  
INTU (LD 56), 821  
INTU (LD 97), 1080  
INVC (LD 02), 63  
INVN (LD 02), 63  
INVS (LD 02), 63  
IOHQ (LD 86), 965  
IPRI (LD 14), 243  
IPTN (LD 14), 243  
IPUB (LD 16), 429  
IRFP (LD 15), 335  
IRFR (LD 15), 335  
IRNG (LD 15), 335  
ISAP (LD 23), 682  
ISAR (LD 16), 430  
ISDM (LD 86), 965  
ISDN (Integrated Service Digital Network), 673  
ISDN (LD 15), 335  
ISDN (LD 16), 430  
ISDN\_MCNT (LD 17), 522  
ISDN\_MCNT (LD 27), 737  
ISET (LD 86), 965  
ISLM (LD 17), 522  
ISM (LD 97), 1080  
ITBP (LD 73), 894  
ITDN (LD 16), 430  
ITED (LD 90), 1001

ITEI (LD 86), 965  
ITEI (LD 90), 1001  
ITEM (LD 10), 110  
ITEM (LD 11), 167  
ITH1 (LD 15), 335  
ITH2 (LD 15), 335  
ITH3 (LD 15), 335  
ITHC (LD 02), 63  
ITHS (LD 02), 63  
ITNA (LD 11), 167  
ITOH (LD 87), 977  
ITOH (LD 90), 1001  
ITOL (LD 16), 430  
ITPP (LD 73), 894  
ITXX (LD 57), 842  
IVMS (LD 23), 682  
IVR (LD 23), 683

## J

JDGT (LD 16), 430  
JDMI (LD 17), 522

## K

KBA (LD 11), 167  
KBD (LD 11), 168  
KEEP\_MSGS (LD 10), 110  
KEEP\_MSGS (LD 11), 168  
KEY (LD 12), 215  
KEY1 (LD 97), 1080  
KEY2 (LD 97), 1080  
KEY3 (LD 97), 1080  
KLS (LD 11), 193

## L

L2\_RST (LD 74), 919  
LA11 (LD 15), 335  
LA12 (LD 15), 335  
LA21 (LD 15), 335  
LA22 (LD 15), 336  
LA31 (LD 15), 336

LA32 (LD 15), 336  
LA41 (LD 15), 336  
LA42 (LD 15), 336  
LA51 (LD 15), 336  
LA52 (LD 15), 336  
LAAC (LD 19), 588  
LADN (LD 15), 336  
LANG (LD 11), 193  
LANG (LD 12), 219  
LANG (LD 95), 1054  
LANGUAGE (LD 17), 522  
LAPB (LD 27), 737  
LAPD (LD 17), 523  
LAPD (LD 27), 737  
LAPW (LD 17), 523  
LAST (LD 16), 430  
LCKT (LD 15), 336  
LCLB (LD 73), 894  
LCMT (LD 17), 523  
LCN1 (LD 27), 737  
LCN2 (LD 27), 738  
LCNO (LD 16), 430  
LCTL (LD 17), 523  
LD 11 program, 688  
LDA0 (LD 15), 336  
LDA1 (LD 15), 336  
LDA2 (LD 15), 336  
LDA3 (LD 15), 336  
LDA4 (LD 15), 337  
LDA5 (LD 15), 337  
LDAC (LD 19), 589  
LDBZ (LD 15), 337  
LDDD (LD 90), 1002  
LDID (LD 90), 1002  
LDN (LD 10), 111  
LDN (LD 11), 194  
LDN (LD 27), 738  
LDN (LD 56), 821  
LDN (LD 90), 1002  
LDN\_DATA (LD 15), 337  
LDN0 (LD 15), 337  
LDN0 (LD 93), 1013  
LDN1 (LD 15), 337

LDN1 (LD 93), 1014  
LDN2 (LD 15), 337  
LDN2 (LD 86), 965  
LDN2 (LD 93), 1014  
LDN3 (LD 15), 338  
LDN3 (LD 93), 1014  
LDN4 (LD 15), 338  
LDN4 (LD 93), 1014  
LDN5 (LD 15), 338  
LDN5 (LD 93), 1014  
LDNT (LD 15), 338  
LDOP (LD 14), 243  
LDTT (LD 15), 338  
LEC (LD 15), 338  
LEC (LD 16), 431  
LEND (LD 15), 338  
LEVL (LD 17), 523  
LFAC (LD 73), 894  
LFAL (LD 52), 779  
LFAL (LD 73), 894  
LFAR (LD 52), 779  
LFFD (LD 15), 339  
LFTN (LD 15), 339  
LGTH (LD 16), 431  
LHK (LD 11), 194  
LID (LD 16), 431  
LILO (LD 57), 842  
LIMT (LD 56), 821  
LINK (LD 15), 339  
LINT (LD 52), 779  
LIST (LD 87), 978  
LLID (LD 17), 523  
LLT (LD 15), 339  
LM0 (LD 52), 779  
LM1 (LD 52), 780  
LM2 (LD 52), 780  
LM3 (LD 52), 780  
LMNL (LD 16), 431  
LNAME\_OPTION (LD 17), 524  
LNRS (LD 10), 111  
LNRS (LD 11), 194  
LOC (LD 90), 1002  
LOC (LD 97), 1080

LOCD (LD 16), 431  
LOCK (LD 17), 525  
LOCK (LD 88), 988  
LOCL (LD 15), 339, 379  
LOG (LD 23), 683  
LOGIN\_NAME (LD 17), 525  
LOOP (LD 27), 738  
LOOP (LD 52), 780  
LOOP (LD 73), 894  
LOUT (LD 16), 431  
LOUT (LD 17), 525  
LPIB (LD 17), 525  
LPK (LD 11), 194  
LPWD (LD 17), 525  
LSC (LD 15), 340  
LSC (LD 87), 978  
LSC (Local Steering Code), 967  
LSNO (LD 18), 574  
LSNO (LD 20), 622  
LSNO (LD 57), 842  
LSNO (LD 81), 943  
LSSL (LD 74), 919  
LTEI (LD 27), 738  
LTER (LD 86), 966  
LTHR (LD 17), 526  
LTID (LD 97), 1080  
LTN (LD 11), 194  
LVNO (LD 94), 1043

## M

M911\_ABAN (LD 16), 436  
M911\_ANI (LD 16), 436  
M911\_FORM (LD 16), 436  
M911\_TONE (LD 16), 436  
M911\_TRK\_TYPE (LD 16), 436  
MAIN (LD 15), 340  
MAND (LD 73), 894  
MANO (LD 16), 431  
MANU (LD 17), 526  
MAP (LD 29), 757  
MARP (LD 10), 111  
MARP (LD 11), 195

---

MARP (LD 17), 526	MFEI (LD 16), 433
MAT (LD 17), 526	MFEO (LD 16), 433
MAT_READ_ONLY (LD 17), 526	MFF (LD 73), 895
MATT (LD 15), 340	MFID (LD 15), 342
MAUT (LD 10), 111	MFKI (LD 16), 433
MAUT (LD 11), 195	MFKO (LD 16), 433
MAX (LD 16), 432	MFL (LD 14), 244
MAXP (LD 23), 683	MFLI (LD 14), 245
MAXT (LD 15), 340	MFLT0 (LD 97), 1082
MAXT (LD 94), 1043	MFLT1 (LD 97), 1082
MAXU (LD 14), 243	MFPD (LD 14), 245
MBG (LD 15), 340	MFRL (LD 86), 966
MBGA (LD 16), 432	MFRL (LD 97), 1082
MBGA (LD 17), 526	MFSD (LD 17), 527
MBGS (LD 93), 1014	MFSL (LD 73), 895
MBNR (LD 15), 341	MFSS (LD 16), 433
MCAL (LD 27), 739	MFVN (LD 15), 342
MCCD (LD 16), 432	MFVO (LD 15), 342
MCDC (LD 15), 341	MGCR (LD 17), 527
MCDT (LD 16), 432	MHLD (LD 15), 342
MCFD (LD 23), 683	MID_SCPU (LD 17), 527
MCLR (LD 15), 341	MIN (LD 11), 195
MCM (LD 73), 894	MIN (LD 16), 433
MCNT (LD 17), 526	MINL (LD 97), 1083
MCR (LD 15), 341	MINP (LD 73), 895
MCRT (LD 15), 341	MINT (LD 56), 821
MCTM (LD 16), 432	MISP (LD 27), 739
MCTS (LD 16), 432	MLDN (LD 15), 342
MDID (LD 15), 341	MLDN (LD 17), 527
MDL (LD 97), 1081	MLIO (LD 57), 842
MDMP (LD 16), 432	MLNG (LD 11), 195
MDTD (LD 16), 432	MLNG (LD 81), 942
MED (LD 97), 1081	MLPPSD (LD 15), 342
MEM (LD 17), 527	MLPPSD (LD 87), 978
MEMB (LD 27), 739	MLWU_LANG (LD 10), 111
MFAO (LD 73), 895	MLWU_LANG (LD 11), 195
MFC (LD 16), 432	MMDN (LD 58), 852
MFC_ENT (LD 15), 341	MMSN (LD 15), 342
MFCG (LD 15), 342	MNDN (LD 14), 245
MFCI (LD 16), 433	MNG1 (LD 73), 895
MFCO (LD 16), 433	MNG2 (LD 73), 895
MFEA (LD 16), 433	MNT (LD 57), 842
MFED (LD 16), 433	MNTC (LD 57), 842

MNXX (LD 90), 1003  
MOD (LD 11), 196  
MOD (LD 16), 433  
MODE (LD 16), 434  
MODE (LD 17), 527  
MODE (LD 27), 740  
MODIFY (LD 17), 527  
MODL (LD 10), 111  
MODL (LD 11), 196  
MODL (LD 14), 245  
MODL (LD 20), 622  
MON (LD 16), 434  
MONT (LD 19), 589  
MOPT (LD 97), 1083  
MOTN (LD 11), 196  
MOTN (LD 20), 622  
MPED (LD 17), 528  
MPH (LD 15), 343  
MPH (LD 27), 740  
MPHC (LD 27), 740  
MPHI (LD 11), 196  
MPHI (LD 20), 622  
MPL (LD 87), 978  
MPO\_DATA (LD 15), 343  
MPOP (LD 15), 343  
MPR (LD 11), 196  
MPRI (LD 87), 978  
MQA (LD 23), 683  
MQAP (LD 23), 683  
MQAS (LD 23), 683  
MQC\_FEAT (LD 16), 434  
MQC\_FEAT (LD 17), 528  
MQCF (LD 23), 684  
MQUE (LD 57), 843  
MR (LD 16), 434  
MRAT (LD 16), 435  
MRPS (LD 58), 852  
MRT (LD 16), 435  
MSBA (LD 57), 843  
MSBD (LD 57), 843  
MSCC (LD 86), 966  
MSCD (LD 15), 343  
MSCL (LD 17), 528  
MSDT (LD 17), 528  
MSG (LD 29), 757  
MSG1 (LD 15), 343  
MSG10 (LD 15), 345  
MSG2 (LD 15), 343  
MSG3 (LD 15), 343  
MSG4 (LD 15), 344  
MSG5 (LD 15), 344  
MSG6 (LD 15), 344  
MSG7 (LD 15), 344  
MSG8 (LD 15), 344  
MSG9 (LD 15), 344  
MSSC (LD 15), 345  
MTAR (LD 15), 345  
MTEI (LD 27), 740  
MTFM (LD 27), 740  
MTN (LD 14), 245  
MTND (LD 16), 435  
MTO (LD 58), 852  
MTRC (LD 57), 843  
MTRO (LD 17), 528  
MTSP (LD 27), 740  
MUD\_DN (LD 15), 345  
MUD\_SRVR (LD 15), 345  
MULT (LD 16), 435  
MULTI\_USER (LD 17), 528  
MURT (LD 15), 345  
MURT (LD 23), 684  
MURT (LD 50), 772  
MURT (LD 93), 1014  
MUS (LD 15), 345  
MUS (LD 16), 435  
MUSR (LD 15), 345  
MVSG (LD 25), 708  
MVT (LD 97), 1084  
MWAN (LD 56), 821  
MWC (LD 23), 684  
MWDT (LD 56), 821  
MWFB (LD 15), 346  
MWIF (LD 17), 528  
MWIF (LD 74), 919  
MWNS (LD 15), 346  
MWRA (LD 57), 843

MWRT (LD 16), 435  
MWRT (LD 17), 529  
MWTO (LD 16), 436  
MWTO (LD 17), 528  
MWUA (LD 57), 843  
MWUD (LD 57), 843  
MWUN (LD 10), 111  
MXDM (LD 86), 966  
MXFC (LD 86), 966  
MXFS (LD 86), 966  
MXIX (LD 86), 966  
MXLC (LD 86), 966  
MXLN (LD 95), 1054  
MXRL (LD 86), 966  
MXSC (LD 86), 966  
MXSD (LD 86), 967  
MXTI (LD 16), 436

## N

N1 (LD 17), 529  
N1 (LD 27), 740  
N2 (LD 17), 529  
N2 (LD 27), 740  
N200 (LD 17), 529  
N200 (LD 27), 740  
N201 (LD 17), 529  
N201 (LD 27), 740  
N2X4 (LD 17), 529  
N2X4 (LD 27), 741  
NACC (LD 16), 436  
NACT (LD 20), 622  
NACT (LD 22), 657  
NACT (LD 81), 943  
NACT (LD 82), 947  
NACT (LD 83), 951  
NADT (LD 16), 436  
NAGN (LD 93), 1014  
NALT (LD 86), 967  
NAME (LD 10), 112  
NAME (LD 11), 197  
NAME (LD 95), 1054  
NAS\_ ACTV (LD 15), 346  
NAS\_ ATCL (LD 15), 346  
NASA (LD 16), 436  
NASA (LD 17), 529  
NATC (LD 15), 346  
NATL (LD 16), 437  
NATP (LD 97), 1084  
NAUT (LD 15), 346  
NBCS (LD 56), 821  
NBLK (LD 15), 346  
NCAD (LD 56), 821  
NCDP (LD 86), 967  
NCFW (LD 23), 684  
NCG1 (LD 73), 895  
NCG2 (LD 73), 895  
NCNA (LD 16), 437  
NCNI (LD 16), 437  
NCOS (LD 10), 112  
NCOS (LD 11), 197  
NCOS (LD 14), 245  
NCOS (LD 15), 346  
NCOS (LD 16), 437  
NCOS (LD 18), 574  
NCOS (LD 19), 589  
NCOS (LD 24), 702  
NCOS (LD 27), 741  
NCOS (LD 81), 943  
NCOS (LD 87), 978  
NCOS (LD 88), 988  
NCPU (LD 17), 529  
NCR (LD 17), 529  
NCRD (LD 16), 437  
NCS1 (LD 15), 346  
NCS2 (LD 15), 346  
NCSD (LD 73), 896  
NCTH (LD 16), 438  
NCWL (LD 23), 684  
NDCH (LD 17), 530  
NDFL (LD 23), 684  
NDGT (LD 16), 438  
NDGT (LD 18), 575  
NDID (LD 15), 347  
NDIG (LD 16), 438  
NDIS (LD 17), 530

NDNO (LD 16), 438  
NDP (LD 16), 438  
NDR1 BCS (LD 56), 821  
NDR1 PBX (LD 56), 822  
NDR2 BCS (LD 56), 822  
NDR2 PBX (LD 56), 822  
NDR3 BCS (LD 56), 822  
NDR3 PBX (LD 56), 822  
NDR4 BCS (LD 56), 822  
NDR4 PBX (LD 56), 822  
NDRG (LD 17), 530  
NDRI (LD 16), 438  
NEDC (LD 16), 439  
NET\_DATA (LD 15), 347  
NEW DATA PLANNED? (LD 29), 757  
NFCR (LD 15), 347  
NFNA (LD 15), 347  
NFNS (LD 15), 347  
NGRP (LD 14), 245  
NINV (LD 15), 347  
NIPN (LD 15), 347  
NIPR (LD 56), 823  
NIT (LD 15), 347  
NIT\_DATA (LD 15), 347  
NIT1 (LD 15), 348  
NIT1 (LD 93), 1015  
NIT2 (LD 15), 348  
NIT2 (LD 93), 1015  
NIT3 (LD 15), 348  
NIT3 (LD 93), 1015  
NIT4 (LD 15), 348  
NIT4 (LD 93), 1015  
NIT5 (LD 15), 348  
NITC (LD 95), 1054  
NITE (LD 14), 246  
NITR (LD 15), 348  
NLPW (LD 17), 530  
NMAP (LD 86), 967  
NMBR (LD 88), 988  
NMNL (LD 16), 439  
NMSG (LD 16), 439  
NND (LD 52), 780  
NNDC (LD 97), 1084  
NNT (LD 15), 348  
NODE (LD 16), 439  
NOLS (LD 18), 575  
NOOS (LD 73), 896  
NORTEL\_BRAND (LD 17), 530  
NOTI (LD 15), 348  
NOUT (LD 16), 439  
NPA (LD 16), 439  
NPA (LD 19), 589  
NPA (LD 87), 978  
NPA (LD 90), 1003  
NPI (LD 15), 349  
NPID (LD 16), 439  
NPID\_TBL\_NUM (LD 16), 439  
NPW1 (LD 17), 530  
NPW2 (LD 17), 531  
NPWC (LD 17), 531  
NRAC (LD 23), 684  
NRCV (S) (LD 73), 896  
NRDY (LD 57), 843  
NRES (LD 15), 349  
NRMT (LD 56), 823  
NRNG (LD 87), 979  
NRRT (LD 23), 685  
NRT (LD 16), 439  
NRT (LD 23), 685  
NRWU (LD 15), 349  
NSC (LD 87), 979  
NSCC (LD 90), 1003  
NSCP (LD 15), 349  
NSF (LD 16), 440  
NSO (LD 15), 349  
NSTO (LD 58), 852  
NT2 (LD 74), 919  
NTBL (LD 93), 1015  
NTC (LD 73), 896  
NTCD (LD 50), 772  
NTN (LD 27), 741  
NTN1 (LD 27), 741  
NTN2 (LD 27), 741  
NTNO (LD 27), 741  
NTOF (LD 16), 440  
NTOL (LD 16), 440

NTT (LD 94), 1043  
NUMD (LD 17), 531  
NWIF (LD 27), 741  
NWT (LD 15), 349  
NXX (LD 19), 589  
NXX (LD 87), 979  
NXX (LD 90), 1003

## O

OABS (LD 16), 440  
OACn (LD 56), 823  
OAL (LD 16), 440  
OAMP (LD 16), 440  
OAN (LD 16), 440  
OAS\_DATA (LD 15), 349  
OBKT (LD 56), 823  
OBPT (LD 23), 685  
OBSC (LD 23), 685  
OBTN (LD 23), 685  
OC (LD 27), 741  
OCAC (LD 17), 531  
OCB1 (LD 15), 349  
OCB2 (LD 15), 349  
OCB3 (LD 15), 350  
OCBA (LD 57), 843  
OCBD (LD 57), 843  
OCBV (LD 57), 843  
OCLI (LD 15), 350  
OCN (LD 23), 685  
ODN0 (LD 15), 350  
ODN1 (LD 15), 350  
ODN2 (LD 15), 350  
ODN3 (LD 15), 350  
ODN4 (LD 15), 350  
ODN5 (LD 15), 350  
ODN6 (LD 15), 350  
ODN7 (LD 15), 351  
ODN8 (LD 15), 351  
ODN9 (LD 15), 351  
OFFC (LD 90), 1004  
OFFP (LD 88), 988  
OGDN (LD 16), 440  
OGIS (LD 16), 441  
OGNP (LD 16), 441  
OGNT (LD 16), 441  
OGPS (LD 16), 441  
OHAS (LD 15), 351  
OHID (LD 10), 112  
OHID (LD 11), 197  
OHQ (LD 16), 441  
OHQ (LD 56), 823  
OHQ (LD 86), 967  
OHQ (LD 87), 979  
OHQT (LD 16), 441  
OHT (LD 16), 441  
OHTD (LD 16), 442  
OHTL (LD 87), 979  
OHTT (LD 16), 442  
OK (LD 17), 531  
OMPH (LD 15), 351  
ONP (LD 73), 896  
OOSC (LD 73), 896  
OPA (LD 16), 442  
OPCB (LD 16), 442  
OPD (LD 16), 442  
OPDL (LD 16), 442  
OPE (LD 11), 197  
OPE (LD 16), 442  
OPER (LD 19), 589  
OPER (LD 58), 852  
OPP (LD 16), 442  
OPR (LD 16), 443  
OPR (LD 20), 645  
OPRI (LD 14), 246  
OPT (LD 15), 351  
OPT (LD 17), 531  
OPT (LD 27), 742  
OPT (LD 29), 757  
OPX (LD 73), 896  
ORUR (LD 17), 533  
OSDN (LD 24), 702  
OSG1 (LD 73), 896  
OSG2 (LD 73), 896  
OSGD (LD 73), 897  
OTBF (LD 17), 533

OTCR (LD 15), 360  
OTH (LD 56), 823  
OTL (LD 16), 443  
OUT\_T306 (LD 16), 443  
OUT\_T306 (LD 17), 533  
OUTS (LD 23), 686  
OVBU (LD 23), 686  
OVDN (LD 23), 687  
OVFL (LD 23), 687  
OVFL (LD 56), 823  
OVLA (LD 17), 533  
OVLL (LD 86), 967  
OVLP (LD 19), 589  
OVLN (LD 16), 443  
OVLN (LD 17), 533  
OVLS (LD 16), 443  
OVLS (LD 17), 533  
OVLT (LD 16), 443  
OVLT (LD 17), 533  
OVLY (LD 17), 533  
OVRD (LD 56), 823  
OVRD (LD 57), 843  
OVTH (LD 23), 687

## P

P10 (LD 56), 823  
P10P (LD 97), 1085  
P10R (LD 97), 1085  
P12R (LD 97), 1085  
P20R (LD 97), 1085  
PADL (LD 16), 444  
PADT (LD 16), 444  
PAGE (LD 20), 623  
PAGE (LD 22), 657  
PAGE (LD 23), 687  
PAGE (LD 81), 943  
PAGE (LD 82), 947  
PAGE (LD 83), 951  
PAGE (LD 95), 1054  
PAGT (LD 97), 1085  
PANI (LD 15), 360  
PANN (LD 58), 852

PANS (LD 16), 444  
PAR (LD 11), 197  
PAR (LD 16), 444  
PARM (LD 17), 534  
PARY (LD 17), 534  
PATH (LD 58), 852  
PATI (LD 56), 823  
PBCS (LD 56), 824  
PBDO (LD 11), 198  
PBDO (LD 16), 444  
PBLK (LD 15), 360  
P BRLS (R) (LD 73), 897  
P BRLS (S) (LD 73), 897  
P BURS (R) (LD 73), 897  
P BURS (S) (LD 73), 897  
PBUZ (LD 15), 360  
PBXH (LD 17), 534  
PCA (LD 15), 360  
PCA (LD 21), 645  
PCAD (LD 56), 824  
P CALL (R) (LD 73), 897  
P CAS (R) (LD 73), 897  
P CAS (S) (LD 73), 897  
PCDL (LD 15), 360  
PCDR (LD 17), 534  
PCDS (LD 15), 361  
PCID (LD 16), 444  
PCMC (LD 15), 361  
PCML (LD 14), 246  
PCML (LD 17), 534  
PCML (LD 52), 780  
PCMM (LD 23), 687  
PCMR (LD 52), 780  
PCWT (LD 56), 824  
PDCA (LD 14), 246  
PDCA (LD 27), 742  
PDCA (LD 73), 901  
PDCH (LD 17), 534  
P DIGT (R) (LD 73), 898  
P DIGT (S) (LD 73), 898  
PECL (LD 16), 444  
PELK (LD 15), 361  
P EOS (R) (LD 73), 898

---

P EOSB (S) (LD 73), 898  
P EOSF (S) (LD 73), 898  
PER (LD 86), 967  
PERS (LD 73), 901  
P ESNW (R) (LD 73), 898  
P ESNW (S) (LD 73), 898  
PFAN (LD 15), 361  
PFNA (LD 15), 361  
P FRLS (R) (LD 73), 898  
P FRLS (S) (LD 73), 899  
PFX1 (LD 15), 361  
PFX2 (LD 15), 361  
PGAP (LD 57), 843  
PGBY (LD 29), 757  
PGIP (LD 57), 843  
PGMM (LD 29), 758  
PGPN (LD 16), 444  
PGPN (LD 27), 742  
PGSP (LD 57), 843  
PH (LD 27), 742  
PHDT (LD 15), 362  
PHIP (LD 15), 362  
PICP (LD 15), 362  
PII (LD 16), 445  
PINT (LD 15), 362  
PINX\_CUST (LD 17), 535  
PINX\_DN (LD 15), 362  
PKND (LD 15), 362  
PKUP (LD 95), 1054  
PLAT (LD 18), 575  
PLDN (LD 18), 575  
PLDN (LD 57), 843  
PLEV (LD 10), 112  
PLEV (LD 11), 198  
PLEV (LD 16), 445  
PMCR (LD 17), 535  
P METR (R) (LD 73), 899  
PMIN (LD 17), 535  
PMSI (LD 17), 535  
PNDL (LD 16), 445  
PNI (LD 15), 363  
PNI (LD 16), 445  
PNNC (LD 16), 445  
PNNC (LD 56), 824  
PNPS (LD 16), 445  
P NXFR (R) (LD 73), 899  
P NXFR (S) (LD 73), 899  
POLR (LD 13), 225  
PONW (LD 57), 843  
P OPCA (R) (LD 73), 899  
P OPRC (R) (LD 73), 899  
P OPRS (R) (LD 73), 900  
PORT (LD 15), 363  
PORT (LD 17), 535  
POS (LD 10), 112  
POS (LD 11), 198  
POST (LD 16), 446  
POST (LD 18), 575  
PPID (LD 14), 247  
PPM\_DATA (LD 15), 363  
PPMD (LD 15), 363  
PPMD (LD 73), 901  
PR\_RTN (LD 16), 446  
PR\_RTN (LD 17), 539  
PR\_TRIGS (LD 16), 447  
PR\_TRIGS (LD 17), 539  
PRBK (LD 56), 824  
P RCOD (S) (LD 73), 900  
PRCS (S) (LD 73), 901  
P RCTL (R) (LD 73), 900  
P RCTL (S) (LD 73), 900  
PRDL (LD 16), 446  
PRDN (LD 14), 247  
PRE (LD 18), 575  
PRED (LD 18), 575  
PREF (LD 15), 364  
PREF (LD 73), 901  
PREF CC2 (LD 73), 902  
PREF CC3 (LD 73), 902  
PREF CC4 (LD 73), 903  
PREF CK0 (LD 73), 902  
PREF CK1 (LD 73), 902  
PREM (LD 16), 446  
PREM (LD 56), 824  
PREO (LD 15), 364  
PRES (LD 12), 219

PRES (LD 19), 589  
PRES (LD 27), 742  
PRET (LD 58), 853  
PREFIX (LD 27), 742  
PRI (LD 10), 113  
PRI (LD 11), 198  
PRI (LD 17), 536  
PRI (LD 27), 743  
PRI (LD 73), 903  
PRI\_CH (LD 27), 743  
PRI2 (LD 17), 537  
PRI2 (LD 73), 903  
PRID (LD 27), 743  
PRIM (LD 17), 538  
PRIM (LD 23), 687  
PRIO (LD 14), 247  
PRIO (LD 23), 687  
PRIV (LD 16), 446  
PRIV (LD 74), 919  
PRM (LD 11), 198  
PRMT (LD 15), 364  
PRNG (LD 15), 364  
PROG (LD 16), 446  
PROG (LD 17), 539  
PROM (LD 87), 979  
P RRC (S) (LD 73), 900  
PRTD (LD 19), 589  
PRTY (LD 17), 540  
PSAL (LD 58), 853  
PSDS (LD 11), 198  
PSDS (LD 16), 447  
PSEL (LD 11), 199  
PSEL (LD 16), 447  
PSIZ (LD 27), 744  
PST (LD 18), 575  
PSTN (LD 15), 364  
PTMR (LD 17), 540  
PTTY (LD 15), 364  
PTUT (LD 16), 447  
PTY (LD 16), 447  
PUDN (LD 57), 844  
PUGR (LD 57), 844  
PULS (LD 56), 824

PURN (LD 57), 844  
PUTYP (LD 11), 199  
PVC (LD 27), 744  
PVCN (LD 27), 744  
PWD (LD 17), 540  
PWD\_DATA (LD 15), 365  
PWD2 (LD 15), 365  
PWD2 (LD 17), 541  
PWD2 (LD 22), 657  
PWD2 (LD 29), 758  
PWD2 (LD 97), 1085  
P WNKS (R) (LD 73), 900  
P WNKS (S) (LD 73), 900  
PWnn (LD 17), 541  
PWTP (LD 17), 541

## Q

QCHID (LD 17), 541  
QDIS (LD 12), 219  
QREC (LD 16), 448  
QTHM (LD 12), 220  
QUE (LD 86), 968

## R

R\_ENTRY (LD 15), 367  
R\_SIZE (LD 15), 369  
R2BN (LD 15), 365  
R2ED (LD 15), 365  
R2MD (LD 16), 448  
RACD (LD 16), 448  
RADR (LD 17), 541  
RADT (LD 87), 979  
RAGT (LD 23), 688  
RAIE (LD 73), 903  
RALL (LD 15), 365  
RALM (LD 73), 903  
RAN (LD 23), 688  
RAN1 (LD 15), 365  
RAN2 (LD 15), 365  
RAN2 (LD 88), 988  
RANC (LD 87), 979

---

RANE (LD 87), 979	RECD (LD 15), 366
RANF (LD 15), 365	RECV (LD 94), 1044
RANG (LD 58), 853	REF (LD 16), 452
RANH (LD 16), 449	REF0 (LD 15), 366
RANR (LD 15), 365	REF1 (LD 15), 366
RANR (LD 16), 449	REF2 (LD 15), 366
RANR (LD 24), 702	REF3 (LD 15), 366
RANR (LD 58), 853	REMD (LD 17), 545
RANR (LD 88), 988	REMO (LD 17), 546
RANR (LD 97), 1086	REMQ (LD 17), 546
RANX (LD 16), 449	REP (LD 16), 452
RAO (LD 23), 688	REP* (LD 57), 844
RATE (LD 27), 744	REPL PARM (LD 74), 920
RATE (LD 74), 919	REPT (LD 73), 903
RATS (LD 73), 903	REQ (LD 10), 113
RBCS (LD 56), 824	REQ (LD 11), 199
RBTD (LD 86), 968	REQ (LD 12), 220
RCAD (LD 56), 824	REQ (LD 13), 225
RCAL (LD 16), 449	REQ (LD 14), 248
RCAL (LD 18), 575	REQ (LD 15), 367
RCAL (LD 58), 853	REQ (LD 16), 452
RCAP (LD 17), 542	REQ (LD 17), 546
RCFA (LD 57), 844	REQ (LD 18), 576
RCFD (LD 57), 844	REQ (LD 19), 589
RCFV (LD 57), 844	REQ (LD 20), 623
RCLE (LD 15), 365	REQ (LD 21), 645
RCLS (LD 16), 452	REQ (LD 22), 657
RCNT (LD 15), 366	REQ (LD 23), 689
RCO (LD 10), 113	REQ (LD 24), 702
RCO (LD 11), 199	REQ (LD 25), 708
RCRG (LD 58), 853	REQ (LD 26), 715
RCTI (LD 58), 853	REQ (LD 27), 744
RCVP (LD 17), 545	REQ (LD 28), 753
RCY1 (LD 15), 366	REQ (LD 29), 758
RCY2 (LD 15), 366	REQ (LD 49), 767
RDLN (LD 57), 844	REQ (LD 50), 773
RDNA (LD 23), 688	REQ (LD 52), 780
RDNE (LD 57), 844	REQ (LD 56), 824
RDNL (LD 16), 452	REQ (LD 57), 844
RDR_DATA (LD 15), 366	REQ (LD 58), 853
RDSN (LD 57), 844	REQ (LD 73), 903
RDST (LD 57), 844	REQ (LD 74), 920
RECA (LD 50), 772	REQ (LD 79), 923

REQ (LD 81), 943  
REQ (LD 82), 947  
REQ (LD 83), 951  
REQ (LD 86), 968  
REQ (LD 87), 980  
REQ (LD 88), 989  
REQ (LD 90), 1004  
REQ (LD 93), 1015  
REQ (LD 94), 1044  
REQ (LD 95), 1054  
REQ (LD 97), 1086  
RESN (LD 95), 1054  
RETC (LD 87), 980  
RETT (LD 87), 980  
RFRQ (LD 23), 689  
RGAA (LD 57), 844  
RGAB (LD 56), 825  
RGAD (LD 57), 844  
RGAI (LD 23), 690  
RGAR (LD 56), 825  
RGAV (LD 57), 844  
RGBK (LD 56), 825  
RGFL (LD 16), 452  
RGNA (LD 15), 368  
RGTP (LD 97), 1086  
RICI (LD 15), 368  
RICI (LD 93), 1015  
RING (LD 56), 825  
RLA (LD 15), 368  
RLCR (LD 15), 368  
RLDN (LD 14), 248  
RLI (LD 15), 368  
RLI (LD 86), 968  
RLI (LD 87), 980  
RLI (LD 90), 1004  
RLS (LD 17), 546  
RLS (LD 50), 773  
RLSM (LD 16), 452  
RMOV (LD 26), 715  
RMST (LD 57), 845  
RNGE (LD 20), 623  
RNGE (LD 21), 645  
RNGE (LD 90), 1004  
RNPG (LD 10), 114  
RNPG (LD 11), 201  
RNPG (LD 81), 944  
ROA\_DATA (LD 15), 368  
ROLR (LD 17), 547  
ROPT (LD 15), 368  
ROPT (LD 23), 690  
ROUT (LD 16), 453  
ROUT (LD 19), 590  
ROUT (LD 21), 645  
ROUT (LD 27), 744  
ROUT (LD 56), 825  
ROUT (LD 58), 853  
ROUT (LD 86), 968  
ROUT (LD 87), 980  
ROUT (LD 93), 1016  
RPA (LD 15), 369  
RPA (LD 16), 453  
RPAN (LD 57), 845  
RPAR (LD 58), 854  
RPAW (LD 56), 825  
RPAX (LD 57), 845  
RPAX (LD 58), 854  
RPCT (LD 56), 825  
RPEB (LD 17), 547  
RPF (LD 52), 780, 781  
RPNS (LD 15), 369  
RPPM (LD 16), 453  
RPRT (LD 23), 690  
RPTO (LD 58), 854  
RR (LD 15), 369  
RRBS (LD 16), 453  
RRPA (LD 87), 980  
RSAC (LD 28), 753  
RSND (LD 23), 690  
RTCL (LD 86), 968  
RTIM (LD 15), 369  
RTIM (LD 58), 854  
RTMB (LD 14), 248  
RTMR (LD 24), 703  
RTN (LD 16), 453  
RTNO (LD 86), 968  
RTPC (LD 23), 691

---

RTQO (LD 23), 691  
RTQT (LD 23), 691  
RTRY (LD 88), 989  
RTS (LD 11), 201  
RTSA (LD 15), 369  
RTXX (LD 57), 845  
RTYP (LD 16), 453  
RUCF (LD 16), 454  
RUCS (LD 16), 455  
RURC (LD 16), 455  
RVDL (LD 56), 825  
RVSD (LD 16), 456  
RWTA (LD 87), 980  
RXMT (LD 17), 547

## S

S\_ENTRY (LD 15), 371  
S\_SIZE (LD 15), 372  
S10P (LD 97), 1086  
S2 (LD 74), 920  
SAC (LD 19), 590  
SACP (LD 15), 370  
SADS (LD 57), 845  
SAEN (LD 57), 845  
SALK (LD 57), 845  
SAMM (LD 15), 370  
SARC (LD 88), 989  
SASU (LD 73), 903  
SAT (LD 16), 456  
SAT (LD 74), 920  
SATD (LD 15), 370  
SATN (LD 17), 547  
SATT (LD 73), 904  
SAUN (LD 57), 845  
SAVE (LD 90), 1004  
SAVE NEW MAP? (LD 29), 758  
SBA\_ADM\_INS (LD 17), 548  
SBA\_USER (LD 17), 548  
SBLF (LD 15), 370  
SBN (LD 16), 456  
SBOC (LD 86), 968  
SBUP (LD 15), 370  
SCBQ (LD 87), 980  
SCCI (LD 86), 968  
SCCT (LD 56), 825  
SCDL (LD 15), 370  
SCDR (LD 88), 989  
SCDT (LD 16), 456  
SCFT (LD 02), 63  
SCI (LD 10), 114  
SCI (LD 11), 201  
SCNO (LD 20), 623  
SCNT (LD 94), 1044  
SCNV (LD 86), 968  
SCOD (LD 24), 703  
SCPC (LD 57), 845  
SCPL (LD 15), 371  
SCPW (LD 10), 114  
SCPW (LD 11), 201  
SCPW (LD 27), 744  
SCR (LD 16), 456  
SCTL (LD 02), 63  
SDA (LD 18), 576  
SDCH (LD 14), 248  
SDFL (LD 15), 371  
SDID (LD 16), 456  
SDID (LD 49), 767  
SDNB (LD 23), 691  
SDRR (LD 90), 1004  
SDST (LD 02), 64  
SDTA (LD 02), 63  
SDTT (LD 73), 904  
SECOND\_DN (LD 10), 114  
SECOND\_DN (LD 11), 201  
SECR (LD 88), 989  
SECU (LD 17), 548  
SEIZ (LD 14), 248  
SEIZ (LD 16), 456  
SEMT (LD 17), 548  
SER (LD 50), 773  
SERV (LD 88), 989  
SET (LD 94), 1044  
SETN (LD 12), 220  
SEVERITY (LD 17), 548  
SEZA (R) (LD 73), 904

SEZA (S) (LD 73), 904  
SEZD (R) (LD 73), 904  
SEZD (S) (LD 73), 904  
SEZV (R) (LD 73), 904  
SEZV (S) (LD 73), 905  
SFAC (LD 57), 845  
SFDN (LD 10), 115  
SFDN (LD 11), 202  
SFEX (LD 14), 249  
SFLT (LD 10), 115  
SFLT (LD 11), 202  
SFMT (LD 10), 115  
SFMT (LD 11), 202  
SFNB (LD 20), 623  
SFNB (LD 21), 646  
SFNB (LD 23), 691  
SFRB (LD 20), 624  
SFRQ (LD 23), 691  
SGL (LD 16), 456  
SGRP (LD 10), 115  
SGRP (LD 11), 203  
SGRP (LD 12), 220  
SGRP (LD 16), 457  
SGRP (LD 27), 744  
SGRP (LD 81), 944  
SGRP (LD 88), 989  
SGRP (LD 93), 1016  
SHAN (LD 19), 590  
SHCD (LD 25), 709  
SHR (LD 23), 691  
SHRT (LD 95), 1055  
SHSG (LD 25), 710  
SICA (LD 14), 249  
SICA (LD 73), 905  
SID (LD 16), 457  
SID (LD 17), 548  
SIDE (LD 16), 457  
SIDE (LD 17), 548  
SIDE (LD 74), 920  
SIGL (LD 14), 249  
SIGL (LD 16), 457  
SIGL (LD 74), 920  
SIGO (LD 16), 457  
SITM (LD 02), 64  
SIZE (LD 15), 371  
SIZE (LD 17), 549  
SIZE (LD 18), 576  
SIZE (LD 21), 646  
SL1B (LD 17), 549  
SLCT (LD 16), 457  
SLLC (LD 02), 64  
SLOT (LD 97), 1086  
SLP (LD 73), 905  
SLV3 (LD 19), 590  
SLV6 (LD 19), 590  
SMAS (LD 14), 250  
SMEM (LD 17), 549  
SMFC (LD 94), 1044  
SNUM (LD 58), 854  
SOHQ (LD 87), 980  
SOLR (LD 17), 549  
SOPC (LD 02), 64  
SOPN (LD 02), 64  
SOPS (LD 02), 64  
SOS (LD 73), 906  
Source Timed Local Flow-in queue, 686  
Source Timed Overflow queue, 686  
SPAR (LD 52), 781  
SPCC (LD 57), 845  
SPCE (LD 57), 845  
SPCL (LD 56), 825  
SPCP (LD 23), 691  
SPCT (LD 16), 458  
SPCU (LD 57), 845  
SPDN (LD 50), 773  
SPID (LD 10), 116  
SPID (LD 11), 203  
SPID (LD 27), 745  
SPN (LD 16), 458  
SPN (LD 87), 981  
SPN (LD 90), 1005  
SPRE (LD 15), 371  
SPRI (LD 87), 981  
SPTO (LD 16), 458  
SPVC (LD 15), 371  
SPWD (LD 10), 116

---

SPWD (LD 11), 203  
SPWD (LD 15), 371  
SPWD (LD 20), 624  
SPWD (LD 24), 703  
SPWD (LD 88), 989  
SRAN (LD 15), 372  
SRC (LD 25), 710  
SRC (LD 56), 826  
SRC1 (LD 56), 826  
SRC2 (LD 56), 826  
SRC3 (LD 56), 826  
SRC4 (LD 56), 826  
SRC5 (LD 56), 826  
SRC6 (LD 56), 826  
SRC7 (LD 56), 826  
SRC8 (LD 56), 826  
SRCD (LD 15), 372  
SRCH (LD 16), 458  
SRCL (LD 25), 710  
SREF (LD 14), 250  
SREF (LD 73), 907  
SREF CC2 (LD 73), 908  
SREF CC3 (LD 73), 908  
SREF CC4 (LD 73), 908  
SREF CK0 (LD 73), 907  
SREF CK1 (LD 73), 907  
SRIM (LD 73), 908  
SRMM (LD 73), 909  
SRNT (LD 73), 909  
SRPM (LD 16), 458  
SRPT (LD 23), 692  
SRRT (LD 15), 372  
SRRT (LD 23), 692  
SRRT (LD 93), 1016  
SRT (LD 15), 372  
SRT (LD 16), 458  
SRT (LD 23), 692  
SRT (LD 56), 826  
SRT (LD 93), 1016  
SRTK (LD 73), 909  
SRVC (LD 16), 459  
SRVR\_DN (LD 15), 372  
SRVR\_LOC (LD 15), 372  
SSC (LD 97), 1087  
SSCL (LD 90), 1005  
SSDG (LD 18), 576  
SSDT (LD 17), 550  
SSHC (LD 02), 64  
SSHS (LD 02), 64  
SSID (LD 02), 64  
SSL (LD 16), 459  
SSL (LD 18), 576  
SSLK (LD 56), 826  
SSPU (LD 57), 845  
SSRV\_ETSI (LD 27), 745  
SSRV\_N1 (LD 27), 745  
SST (LD 16), 460  
SSU (LD 11), 203  
SSU (LD 12), 220  
SSUC (LD 18), 577  
SSUP (LD 17), 550  
STAD (LD 02), 64  
STAL (LD 95), 1055  
STAR (LD 88), 990  
STCB (LD 15), 372  
STE (LD 15), 372  
STEP (LD 16), 460  
STHC (LD 02), 64  
STHS (LD 02), 64  
STIO (LD 23), 693  
STND (LD 16), 460  
STO (LD 58), 854  
STOP (LD 17), 550  
STOP (LD 88), 990  
STOR (LD 18), 577  
STOR (LD 26), 715  
STRG (LD 15), 373  
STRI (LD 14), 250  
STRK (LD 16), 460  
STRK (LD 90), 1005  
STRL (LD 15), 373  
STRO (LD 14), 252  
STRT (LD 16), 460  
STSG (LD 25), 710  
STUN (LD 25), 710  
STYP (LD 14), 253

STYP (LD 16), 460  
STYP (LD 97), 1087  
SUB (LD 19), 590  
SUPL (LD 97), 1088  
SUPL\_SVC (LD 27), 746  
SUPN (LD 14), 254  
SUPPORTED\_TEXT\_ONLY (LD 17), 550  
SUPPRESS (LD 17), 550  
SUPT (LD 97), 1088  
SURV (LD 56), 826  
SVFL (LD 16), 461  
SWP (LD 16), 461  
SXS (LD 14), 254  
SYNC (LD 17), 550  
SYNM (LD 17), 551  
SZNI (LD 73), 909

## T

T\_TN (LD 14), 255  
T1 (LD 17), 551  
T1 (LD 27), 746  
T100 (LD 15), 373  
T100 (LD 16), 461  
T10/T20 (LD 27), 746  
T11/T21 (LD 27), 746  
T12/T22 (LD 27), 746  
T13/T23 (LD 27), 746  
T2 (LD 17), 551  
T2 (LD 27), 746  
T200 (LD 17), 551  
T200 (LD 27), 746  
T203 (LD 17), 551  
T203 (LD 27), 746  
T23 (LD 17), 551  
T2WN (LD 97), 1088  
T2WT (LD 97), 1089  
T2WV (LD 97), 1089  
T3 (LD 17), 551  
T3 (LD 27), 746  
T310 (LD 17), 551  
T310 (LD 27), 746  
T4WN (LD 97), 1089

T4WT (LD 97), 1089  
T4WV (LD 97), 1089  
TABL (LD 16), 461  
TABL (LD 23), 693  
TABL (LD 56), 826  
TABT (LD 58), 854  
TARG (LD 16), 461  
TASK (LD 52), 781  
TAWU (LD 15), 373  
TBL (LD 15), 373  
TBL (LD 16), 461  
TBL (LD 56), 826  
TBL (LD 86), 969  
TBNO (LD 18), 577  
TBNO (LD 20), 624  
TBNO (LD 94), 1044  
TBTR (LD 58), 854  
TC (LD 27), 747  
TCFT (LD 02), 64  
TCPP (LD 16), 461  
TCRS (LD 16), 461  
TDET (LD 16), 462  
TDET (LD 86), 969  
TDG (LD 16), 462  
TDNS, 693  
TDNS (LD 23), 693  
TDP (LD 97), 1089  
TDPO (LD 97), 1089  
TDS (LD 17), 552  
TDSH (LD 56), 826  
TDST (LD 02), 64  
TDTA (LD 02), 64  
TEI (LD 27), 747  
TEM (LD 20), 624  
TEMP (LD 20), 624  
TEN (LD 10), 116  
TEN (LD 11), 204  
TEN (LD 17), 552  
TEN (LD 20), 624  
TEN (LD 93), 1016  
TERD (LD 17), 552  
TERM (LD 17), 552  
TERQ (LD 17), 553

---

TEST (LD 56), 827	TKID (LD 14), 256
TFAS (LD 57), 845	TKTP (LD 16), 468
TFD (LD 16), 462	TKTP (LD 27), 747
TFDR (LD 15), 373	TLLC (LD 02), 64
TGAR (LD 10), 116	TLPT (LD 56), 827
TGAR (LD 11), 204	TLPT (LD 56), 827
TGAR (LD 14), 255	TMAT (LD 56), 827
TGAR (LD 16), 462	TMDI (LD 17), 553
TGAR (LD 24), 703	TMON (LD 15), 374
TGAR (LD 27), 747	TMOT (LD 56), 827
TGAR (LD 86), 969	TMRK (LD 17), 553
TGAR (LD 88), 990	TN (LD 10), 117
TGLD (LD 15), 373	TN (LD 11), 205
TGLR (LD 73), 909	TN (LD 12), 221
TGR1 (LD 15), 373	TN (LD 13), 226
TGR2 (LD 15), 373	TN (LD 14), 256
THIRD_DN (LD 10), 116	TN (LD 17), 553
THIRD_DN (LD 11), 204	TN (LD 20), 625
TID (LD 97), 1090	TN (LD 22), 658
TIDM (LD 15), 373	TN (LD 27), 747
TIDY (LD 16), 462	TN (LD 50), 773
TIE (LD 56), 827	TN (LD 84&85), 954
TIE (LD 94), 1044	TN1 (LD 15), 374
TIER (LD 16), 462	TN2 (LD 15), 375
TIM_DATA (LD 15), 374	TN3 (LD 15), 375
TIM1 (LD 15), 374	TN4 (LD 15), 375
TIM1 (LD 93), 1016	TN5 (LD 15), 375
TIM2 (LD 15), 374	TN6 (LD 15), 375
TIM2 (LD 93), 1016	TNDM (LD 15), 375
TIM3 (LD 15), 374	TNDM (LD 18), 578
TIM3 (LD 93), 1016	TNDN (LD 57), 845
TIM4 (LD 15), 374	TNLS (LD 73), 912
TIM4 (LD 93), 1016	TNS (LD 97), 1090
TIME (LD 15), 374	TNUM (LD 97), 1090
TIME (LD 73), 909	TO (LD 49), 767
TIMP (LD 10), 117	TOBO (LD 16), 470
TIMP (LD 14), 255	TOD (LD 86), 969
TIMR (LD 16), 462	TODR (LD 17), 553
TIMR (LD 17), 553	TODS (LD 86), 969
TIMR (LD 27), 747	TOFT (LD 23), 693
TITE (LD 17), 553	TOGP (LD 26), 715
TITH (LD 16), 468	TOGR (LD 18), 578
TITM (LD 02), 64	TOHQ (LD 87), 981

TOHV (LD 97), 1092  
TOLL (LD 18), 578  
TOLL (LD 73), 912  
TOLR (LD 17), 553  
TOLS (LD 18), 578  
TOLT (LD 73), 912  
TON (LD 15), 376  
TONE (LD 56), 827  
TONE (LD 86), 969  
TONES (LD 56), 827  
TOPC (LD 02), 64  
TOPN (LD 02), 64  
TOPS (LD 02), 64  
TORT (LD 19), 590  
TOT4 (LD 23), 693  
TOTN (LD 10), 118  
TOTN (LD 11), 206  
TOTN (LD 12), 221  
TOTN (LD 13), 227  
TOTN (LD 14), 257  
TOV (LD 11), 206  
TOV (LD 16), 471  
TPDN (LD 15), 376  
TPDN (LD 21), 646  
TPF (LD 97), 1092  
TPO (LD 17), 554  
TRAN (LD 11), 206  
TRAN (LD 16), 471  
TRAN (LD 58), 854  
TRAN (LD 90), 1005  
TRANS (LD 27), 748  
TRC (LD 73), 912  
TRCL (LD 15), 376  
TRCR (LD 15), 376  
TRDN (LD 23), 694  
TRDN (LD 58), 854  
TRGT (LD 23), 694  
TRIGGER (LD 17), 554  
TRLL (LD 17), 554  
TRMB (LD 16), 471  
TRMD (LD 57), 845  
TRMT (LD 16), 471  
TRMT (LD 27), 748  
TRNS (LD 17), 554  
TRNX (LD 15), 376  
TRO (LD 16), 471  
TRRL (LD 16), 471  
TRSH (LD 17), 554  
TRSH (LD 73), 912  
TRVS (LD 57), 845  
TSC (LD 87), 981  
TSET (LD 27), 748  
TSFT (LD 23), 694  
TSHC (LD 02), 64  
TSHS (LD 02), 64  
TSID (LD 02), 64  
TSO (LD 17), 554  
TST (LD 16), 471  
TST\_DATA (LD 15), 376  
TST0 (LD 15), 376  
TST1 (LD 15), 377  
TST2 (LD 15), 377  
TST3 (LD 15), 377  
TSTL (LD 15), 377  
TSUT (LD 56), 827  
TTA (LD 16), 471  
TTAD (LD 02), 64  
TTBL (LD 15), 377  
TTBL (LD 16), 472  
TTHC (LD 02), 64  
TTHS (LD 02), 64  
TTY (LD 17), 554  
TTY\_TYPE (LD 17), 554  
TTYLOG (LD 17), 555  
TTYYP (LD 97), 1092  
TUBO (LD 17), 555  
TW\_INC\_CLID (LD 16), 472  
TW\_ROUTE (LD 16), 472  
TWSP (LD 58), 855  
TYNM (LD 29), 758  
TYPE (LD 10), 118  
TYPE (LD 11), 206  
TYPE (LD 12), 222  
TYPE (LD 13), 227  
TYPE (LD 14), 257  
TYPE (LD 15), 378

TYPE (LD 16), 472  
TYPE (LD 17), 555  
TYPE (LD 18), 578  
TYPE (LD 19), 590  
TYPE (LD 20), 626  
TYPE (LD 21), 646  
TYPE (LD 22), 659  
TYPE (LD 23), 694  
TYPE (LD 24), 703  
TYPE (LD 26), 715  
TYPE (LD 27), 748  
TYPE (LD 28), 753  
TYPE (LD 49), 767  
TYPE (LD 50), 773  
TYPE (LD 52), 781  
TYPE (LD 56), 827  
TYPE (LD 57), 845  
TYPE (LD 58), 855  
TYPE (LD 73), 913  
TYPE (LD 74), 920  
TYPE (LD 79), 923  
TYPE (LD 86), 969  
TYPE (LD 87), 981  
TYPE (LD 88), 990  
TYPE (LD 90), 1006  
TYPE (LD 93), 1016  
TYPE (LD 94), 1045  
TYPE (LD 95), 1055  
TYPE (LD 97), 1092

## U

UBRI (LD 15), 379  
UCFS (LD 73), 913  
UCST (LD 15), 379  
UMG (LD 15), 379  
UMG (LD 23), 695  
UMT (LD 23), 695  
UPDT (LD 49), 767  
USBM (LD 15), 379  
USCR (LD 57), 845  
USE (LD 57), 845  
USER (LD 17), 555

USER (LD 27), 749  
USER (LD 56), 828  
USER (LD 57), 846  
USFB (LD 20), 631  
USFB (LD 21), 648  
USFB (LD 23), 695  
USID (LD 27), 749  
USR (LD 17), 558  
UST (LD 15), 379  
UST (LD 23), 695  
USTA (LD 57), 846  
UUI (LD 23), 695

## V

V25 (LD 11), 209  
V25 (LD 16), 472  
VAS (LD 17), 558  
VCNA (LD 17), 558  
VCRD (LD 17), 558  
VDCH (LD 86), 969  
VDMI (LD 86), 970  
VHST (LD 22), 661  
VISI (LD 11), 209  
VLL (LD 11), 209  
VMB (LD 10), 118  
VMB (LD 11), 209  
VMB\_COS (LD 10), 118  
VMB\_COS (LD 11), 209  
VMB\_STATE (LD 20), 631  
VNDN (LD 79), 923  
VNL (LD 73), 913  
VNR (LD 15), 379  
VNS (LD 86), 970  
VNSC (LD 17), 559  
VNSM (LD 17), 559  
VNSP (LD 17), 559  
VO\_ALO (LD 15), 379  
VO\_ALOHR (LD 15), 379  
VOLR (LD 17), 559  
VPNI (LD 15), 380  
VRAT (LD 16), 472  
VSID (LD 15), 380

VSID (LD 17), 559  
VSID (LD 23), 695  
VSIG (LD 17), 559  
VSIT (LD 10), 118  
VTLF (LD 57), 846  
VTLN (LD 57), 846  
VTRK (LD 16), 472  
VTRK (LD 86), 970  
VTRO (LD 17), 559

## W

WAIT (LD 15), 380  
WAIT (LD 16), 472  
WAIT (LD 93), 1017  
WATR (LD 16), 472  
WCAD (LD 56), 828  
WDGT (LD 16), 473  
WIRE (LD 11), 209  
WKDY (LD 15), 380  
WRLS (LD 10), 119  
WRT (LD 18), 578  
WSIZ (LD 27), 749  
WTON (LD 56), 828  
WTYP (LD 10), 119  
WUD (LD 15), 380

## X

X25P (LD 27), 749  
XCAD (LD 56), 828  
XCT (LD 17), 560  
XDIC (LD 14), 260  
XEM (LD 73), 913  
XFER (LD 95), 1055  
XLAT (LD 18), 579  
XLST (LD 10), 119  
XLST (LD 11), 209  
XLST (LD 27), 749  
XMIT (LD 94), 1045  
XNPD (LD 97), 1093  
XNUM (LD 17), 560  
XPDN (LD 49), 767

XPE (LD 97), 1093  
XPE0 (LD 97), 1093  
XPE1 (LD 97), 1093  
XPEC (LD 97), 1094  
XPLN (LD 10), 119  
XPLN (LD 11), 210  
XPLN (LD 95), 1055  
XPVC (LD 27), 749  
XRFP (LD 15), 380  
XRRF (LD 15), 380  
XSM (LD 17), 560  
XSMN (LD 97), 1094  
XTDT (LD 13), 228  
XTDT (LD 16), 473  
XTDT (LD 97), 1095  
XTMR (LD 17), 560  
XTON (LD 56), 828  
XTRK (LD 14), 260  
XUT (LD 73), 914  
XXX (LD 87), 981

## Y

YALM (LD 17), 561

## Z

ZONE (LD 11), 210  
ZONE (LD 14), 260  
ZONE (LD 16), 473  
ZONE (LD 81), 944







Meridian 1, Succession 1000,  
Succession 1000M

## **Software Input/Output** Administration

Copyright © 1995–2003 Nortel Networks  
All Rights Reserved

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules, and the radio interference regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

SL-1, Meridian 1, and Succession are trademarks of Nortel Networks. Intel and Pentium are trademarks of Intel Corporation. cPCI is a trademark of PCI Industrial Computer Manufacturers Group.

Publication number: 553-3001-311

Document release: Standard 11.00

Date: October 2003

Produced in Canada

