
Meridian 1

ISDN PRI

Installation

Document Number: 553-2901-201
Document Release: Standard 6.00
Date: April 2000

Copyright © 1991– 2000 Nortel Networks
All Rights Reserved

Printed in Canada

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules, and the radio interference regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

SL-1 and Meridian 1 are trademarks of Nortel Networks.

Revision history

April 2000

Standard 6.00. This is a global document and is up-issued for X11 Release 25.0x. Document changes include removal of: redundant content; references to equipment types except Options 11C, 51C, 61C, and 81C; and references to previous software releases.

June 1999

Issue 5.00 released as Standard for Generic X11 Release 24.2x.

October 1997

Issue 4.00 released as Standard for Generic X11 Release 23.00

December 1995

Issue 3.00 released as Standard for Generic X11 Release 21.1x

August 1995

Issue 2.00 released as Standard for Generic X11 Release 21.xx

August 1994

Issue 1.00 released as Standard for Generic X11 Release 20.00

August 1993

This document is the standard release for Phase 8b.

October 1992

This document is the standard release for Phase 7C.

June 1992

This publication is the standard release for Phase 7B.

Contents

About this document	7
ISDN Primary Rate Interface equipment overview	9
DCH installation	117
NTBK51 DDCH installation and removal for the NTCK43, NT5D97 and NT5D12	135
MSDL installation for all systems	143
NT8D72 and QPC720 PRI card installation	149
NTCK43 Dual-port PRI2 installation and removal	179
NT5D97 Dual-port DTI2/PRI2 installation and removal	187
NTD12 Dual-port DTI/PRI card installation	201
Clock Controller description and installation	215
ISL installation	239
Echo canceller installation	257
Non-standard cables	261

About this document

This document describes the basic hardware and the associated installation procedures needed to equip ISDN PRI on Meridian 1 system Options 51C, 61C, and 81C.

This document is a global document. Contact your system supplier or your Nortel Networks representative to verify that the hardware and software described is supported in your area.

Note: For Option 11C specific information, refer to *Option 11C 1.5Mb DTI/PRI* (553-3011-310) and *Option 11C 2.0Mb DTI/PRI* (553-3011-315).

ISDN Primary Rate Interface equipment overview

Content list

The following are the topics in this section:

- [Reference list 12](#)
- [Introduction 12](#)
- [Primary Rate Interface \(PRI\) hardware requirements 12](#)
- [ISDN Signaling Link \(ISL\) hardware 15](#)
- [64 Kb/s Clear Data Hardware 17](#)
- [D-Channel Handler description 17](#)
- [NT6D11 DCH 17](#)
- [Power requirements 17](#)
- [DCH/PRI interface 17](#)
- [DCH faceplate 17](#)
- [QPC757 DCH 19](#)
- [Power requirements 19](#)
- [DCH/PRI interface 19](#)
- [QPC757 faceplate 19](#)
- [NT6D80 MSDL 21](#)
- [Power requirements 21](#)
- [MSDL/PRI interface 21](#)

- [MSDL faceplate 21](#)
- [NTBK51 Downloadable D-Channel Daughterboard 23](#)
- [Standard PRI cards 24](#)
- [NT8D72 PRI2 24](#)
- [Power requirements 24](#)
- [NT8D72 faceplate 24](#)
- [Cable requirements 27](#)
- [Carrier interface 28](#)
- [Echo canceller interface 28](#)
- [QMT21 High Speed Data Module 28](#)
- [QPC720 PRI for 1.5/2.0 Mb gateway 28](#)
- [Clock operation for the NT8D72 29](#)
- [QPC720 PRI 32](#)
- [Power requirements 32](#)
- [QPC720 faceplate 32](#)
- [Cable requirements 34](#)
- [Carrier interface 34](#)
- [Echo Canceller interface 35](#)
- [64 T-link version 2 protocol 35](#)
- [Disk drive hardware 37](#)
- [Dual-port PRI cards 38](#)
- [NTCK 43 Dual-port PRI2 card 38](#)
- [NTCK43 product compatibility 38](#)
- [NTCK43 faceplate 38](#)
- [NTCK43 external connectors 40](#)
- [NTCK43 LEDs 41](#)
- [LED descriptions 41](#)

- [NTCK43 Cabling 42](#)
- [NTCK43 DPRI carrier interface 47](#)
- [Clock for the NTCK43 48](#)
- [NT5D97 Dual-port DTI2/PRI2 card 58](#)
- [External D-Channel Interface \(DCH or MSDL\) 58](#)
- [NT5D97 faceplate 59](#)
- [System capacity and performance 64](#)
- [Testability and diagnostics 65](#)
- [Cable requirements 66](#)
- [Cable diagrams 78](#)
- [Clock for the NT5D97 81](#)
- [NT5D12 Dual-port DTI/PRI 91](#)
- [D-Channel and MSDL interface 91](#)
- [NT5D12 faceplate 92](#)
- [System capacity and performance 98](#)
- [Power requirements 99](#)
- [Testability and diagnostics 99](#)
- [NT5D12 Cable requirements 100](#)
- [Trunk Tip/Ring cables 101](#)
- [Reference clock cables 103](#)
- [MSDL/DCHI cables 103](#)
- [Cable diagrams 104](#)
- [Clock 106](#)
- [Reference clock errors 108](#)
- [Automatic clock recovery 108](#)
- [Automatic clock switching 109](#)
- [Clock configurations 109](#)

Reference list

The following are the references in this section:

Meridian Link ISDN/AP General Guide (553-2901-100)

Option 11C 1.5Mb DTI/PRI (553-3011-310)

Option 11C 2.0Mb DTI/PRI (553-3011-315)

Introduction

This chapter describes the basic hardware needed to equip ISDN PRI on Meridian 1 system Options 51C, 61C, and 81C.

Note: For Option 11C specific information, refer to *Option 11C 1.5Mb DTI/PRI (553-3011-310)* and *Option 11C 2.0Mb DTI/PRI (553-3011-315)*.

Primary Rate Interface (PRI) hardware requirements

The following hardware is required to equip ISDN PRI on Meridian 1 system Options 51C, 61C, and 81C:

- NT6D11(AB/AE/AF) D-Channel Interface (DCH) card (for 2.0 Mb PRI)
- QPC757 D-channel Interface (DCH) for (1.5 Mb PRI)
- NT6D80 Multipurpose Serial Data Link (MSDL) card
- NTBK51 Downloadable D-Channel Daughterboard (DDCH), used as an option to the NT6D80 MSDL with the NTCK43 dual-port PRI2 card, the NT5D97 dual-port DTI2/PRI2 card, or the NT5D12 dual-port 1.5 Mb DTI/PRI card
- NT8D72 (AB/BA) PRI2 card
- NTCK43 dual-port PRI2 card
- NT5D97 dual-port DTI2/PRI2 card
- QPC720 1.5 Mb PRI card
- NT5D12 dual-port 1.5 DTI/PRI card
- QPC471 or QPC775 Clock Controller

Note: The QPC775 Clock Controller is currently not available for U.S. markets. The QPC471 and QPC775 Clock Controllers cannot be mixed in one system. Vintages A through G of the QPC471 Clock Controller can be used in one system; vintage H of QPC471 Clock Controllers cannot be mixed with Clock Controllers of other vintages.

Additional hardware is also required for PRI capability and applications. Installation instructions are given in other Nortel Networks publications, or supplied by the manufacturer. This additional hardware includes:

- QPC414 Network card
- Channel Service Unit (CSU)
- Echo canceller
- ROM circuit card requirements:
 - the QPC939A for Option 1C
 - the QPC939A for option 61C


Note: Option 81C ROM requirements are fulfilled by the NT6D66 Call Processor (CP) card.

- QMT8 Asynchronous Data Module (ADM)

See Figure 1 for a representation of the basic PRI system hardware.

Note: This illustration shows a basic configuration, the dual-port NT5D12 DTI/PRI card, nor the associated dual-port NTBK51AA Downloadable D-Channel daughterboard.

Figure 1
PRI hardware (shown without downloadable PRI and DCH cards)

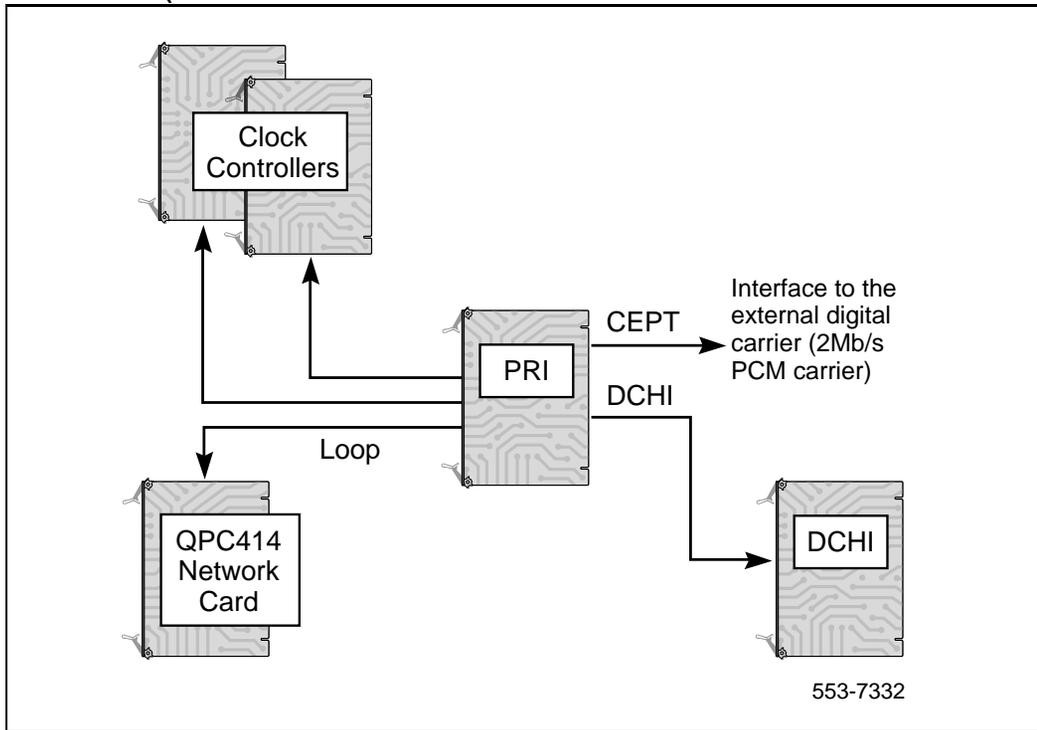

ISDN Signaling Link (ISL) hardware

The following hardware is required for ISDN Signaling Link (ISL) capability and applications.

Equipment required for shared mode capability:

- NT6D11(AB/AE/AF) D-Channel (DCH) card (for 2.0 Mb PRI)
- QPC757 D-channel (DCH) for (1.5 Mb PRI)
- NT6D80 Multipurpose Serial Data Link (MSDL) card
- NTBK51 Downloadable D-Channel Daughterboard (DDCH), used as an option to the NT6D80 MSDL with the NTCK43 dual-port PRI2 card, the NT5D97 dual-port DTI2/PRI2 card, or the NT5D12 dual-port 1.5 Mb DTI/PRI card
- NT8D72 (AB/BA) PRI2 card
- NTCK43 dual-port PRI2 card
- NT5D97 dual-port DTI2/PRI2 card
- QPC720 1.5 Mb PRI card
- NT5D12 dual-port 1.5 DTI/PRI card
- QPC471 or QPC775 Clock Controller

Equipment required for dedicated mode using leased lines:

- NT6D11(AB/AE/AF) D-Channel (DCH) card (for 2.0 Mb PRI)
- QPC757 D-channel (DCH) for (1.5 Mb PRI)
- NT6D80 Multipurpose Serial Data Link (MSDL) card
- NTBK51 Downloadable D-Channel Daughterboard (DDCH), used as an option to the NT6D80 MSDL
- modem set in synchronous mode

Equipment required for dedicated mode using a dial-up modem:

- NT6D11(AB/AE/AF) D-Channel (DCH) card (for 2.0 Mb PRI)
- QPC757 D-channel (DCH) for (1.5 Mb PRI)
- NT6D80 Multipurpose Serial Data Link (MSDL) card
- NTBK51 Downloadable D-Channel Daughterboard (DDCH), used as an option to the NT6D80 MSDL
- modem with auto-dial capability

Note: This configuration is the least reliable due to lockup problems inherent in Smart Modems from power spikes and noisy lines. To increase the reliability on this configuration, use a constant power source when powering the modems. Also, verify that TIE lines meet data grade specifications. Nortel Networks takes no responsibility for ISL D-Channel outages due to modem lockup.

- 500 set line card
- QPC71 2W Tie, or QPC237 4W Tie E&M

Equipment required for dedicated mode using a DTI/DTI2 trunk:

- NT6D11(AB/AE/AF) D-Channel (DCH) card (for 2.0 Mb PRI)
- QPC757 D-channel (DCH) for (1.5 Mb PRI)
- NT6D80 Multipurpose Serial Data Link (MSDL) card
- NTBK51 Downloadable D-Channel Daughterboard (DDCH), used as an option to the NT6D80 MSDL
- QPC536 DTI2 card, or NTCK43 dual-port PRI2 card or NT5D97 dual-port DTI2/PRI2 card
- QPC472 1.5 Mb DTI card or NT5D12 dual-port 1.5 DTI/PRI card
- QMT8 Asynchronous Data Module (ADM), QMT11 Asynchronous/Synchronous Interface Module (ASIM) or QMT21 High Speed Data Module (HSDM)
- Data line card

64 Kb/s Clear Data Hardware

The QMT21 High Speed Data Module (HSDM) is required in the clear-data pathway to support the 64Kb/s clear-data function. One module is required at each Meridian 1 end of any connection.

D-Channel Handler description

This section provides descriptions of the D-Channel (DCH) cards, the MSDL card, and the Downloadable D-Channel Daughterboard.

NT6D11 DCH

Power requirements

The power requirements for the NT6D11AB/11AE/AF DCH are:

- +5 volts at 3 amperes
- +12 volts at 75 milliamperes
- 12 volts at 75 milliamperes

DCH/PRI interface

The NT6D11AB/AE/AF DCHs connect to the PRI2 cards by means of a special RS422 cable, the QCAD328A, which is a special RS422 cable; refer to “QCAD328” on page 268 of the Cabling chapter for more details.


DCH faceplate

NT6D11AB/AE/AF DCHs have one light-emitting-diode (LED), to indicate an active or inactive state, and two external connectors:

- Port J1 is a standard asynchronous port providing an interface for non-PRI applications.
Note: This connection will not support an Add-on Data Module (ADM) terminal.
- Port J2 is the D-Channel Interface port.

Figure 2 shows the faceplate layout.

Figure 2
NT6D11 DCH faceplate layout

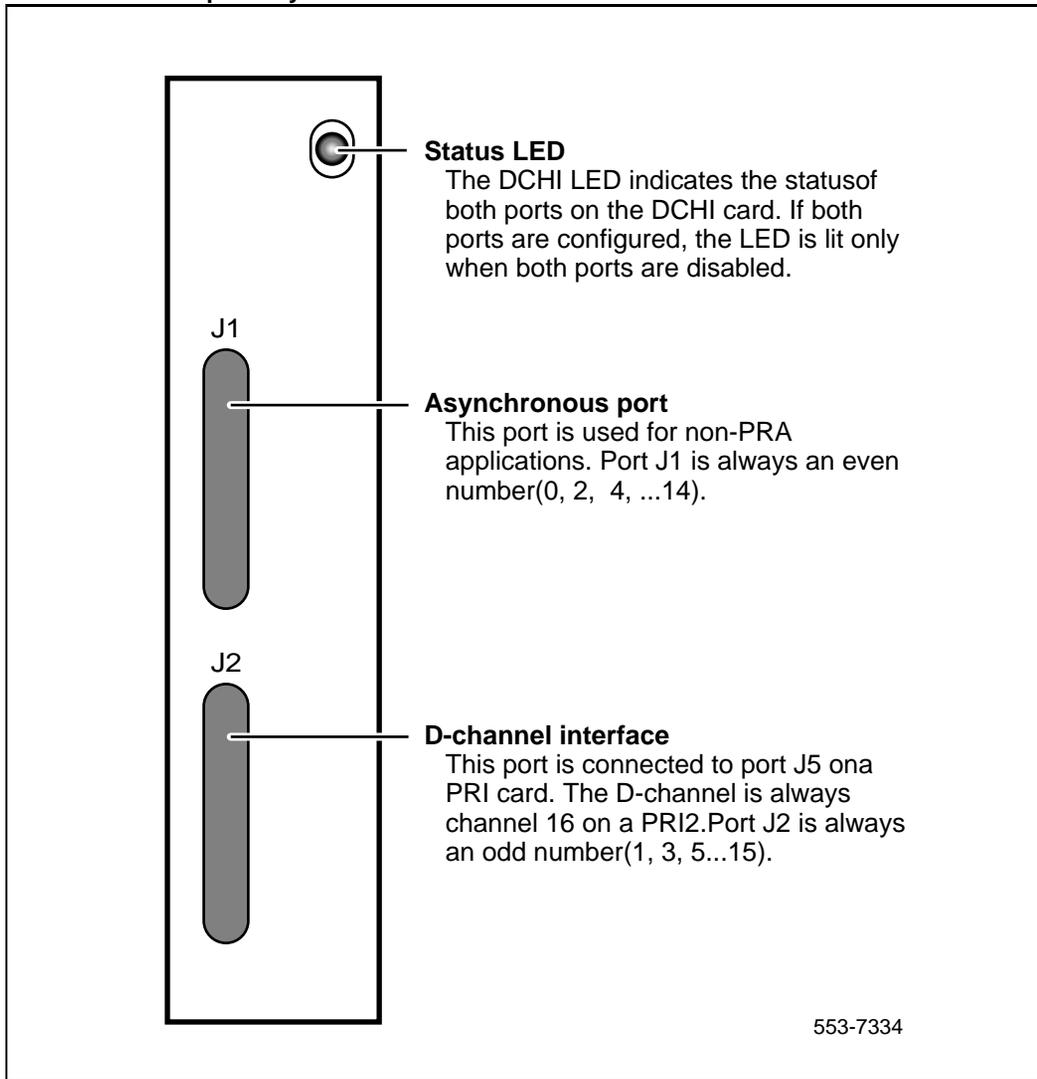

QPC757 DCH

Power requirements

The power requirements for the QPC757 DCH are:

- +5 volts at 3 amperes
- +12 volts at 50 milliamperes
- 12 volts at 50 milliamperes

DCH/PRI interface

The QPC757 DCH connects to the QPC720 PRI via a RS-422 cable. The following signals are transmitted across the interface:

- RCV DATA
- RCV CLOCK
- XMIT CLOCK
- XMIT READY
- PRI READY
- DCH READY

PRI READY and DCH READY are handshake signals.

QPC757 faceplate

The QPC757 DCH, as shown in Figure 3, has one light emitting diode (LED) to indicate an active or inactive state and two external connectors as follows:


- 1 Port J1 is a standard asynchronous port in LD 48

Note: This connection does not support an Add-on Data Module (ADM) terminal.

- 2 Port J2 is the D-Channel Interface port.

Note: A QPC757 vintage C is required if the ISL Revert to Conventional Signaling feature is configured. The QPC757 vintage D is recommended for combination ISL/PRI networks using NACD or Network Message Services and ISL networks using modems.

Figure 3
QPC757 DCH faceplate layout

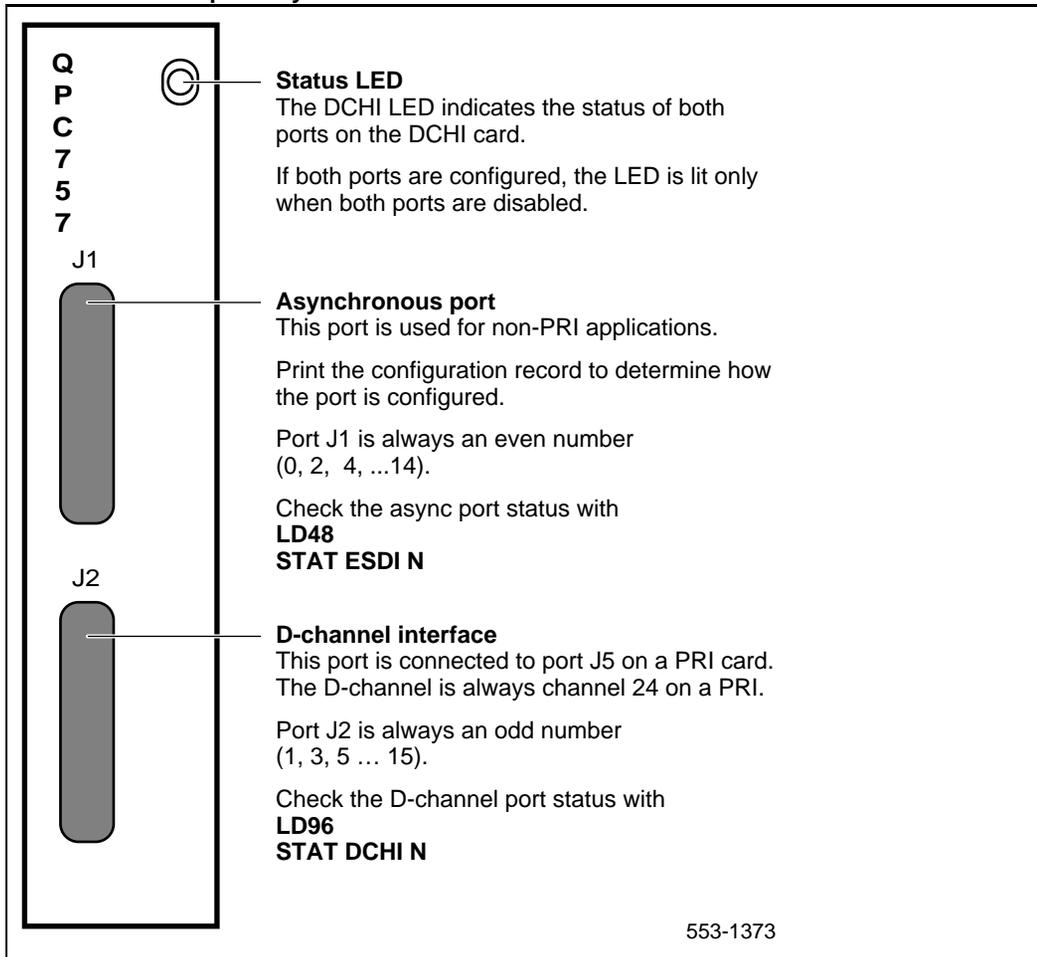

NT6D80 MSDL

The NT6D80 MSDL card can be used in conjunction with, or independently from, the QPC757, or NT6D11AB/AE/AF DCH.

Power requirements

The NT6D80 MSDL power requirements are:

Voltage (VAC)	Current (Amps)	Power (Watts)	Heat (BTUs)
+5	3.20	16.00	55.36
+12	0.10	1.20	4.15
-12	0.10	1.20	4.15


MSDL/PRI interface

MSDL can connect to PRI trunks through RS-422 or RS-232 interfaces. The interfaces are switch configured.

MSDL faceplate

The NT6D80 MSDL has one light-emitting-diode (LED) to indicate an active or inactive state and four external connectors. Each port can be RS-422 or RS-232 connectors, with either DCE or DTE interfaces. Refer to Figure 4.

Figure 4
NT6D80 MSDL faceplate layout

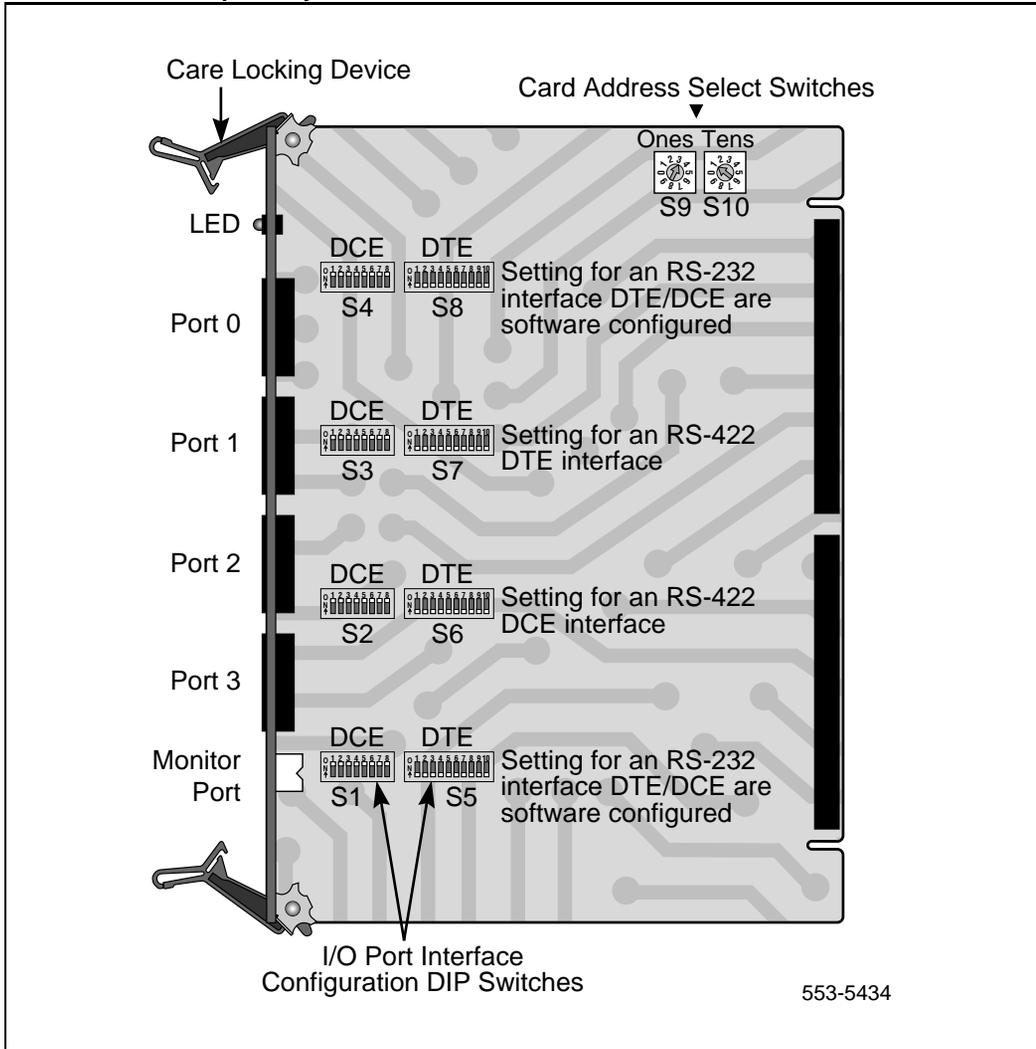

NTBK51 Downloadable D-Channel Daughterboard

The NTBK51 is a two port Downloadable D-Channel Daughterboard (DDCH) that has been introduced as an option to the NT6D80 MSDL with the NTCK43 dual-port PRI2 card, the NT5D97 dual-port DTI2/PRI2 card, or the NT5D12 dual-port 1.5 Mb DTI/PRI card.

The NTBK51 supports all the features of the existing 4 port MSDL (NT6D80), and eliminates the need for an external DCH card and associated cables for MSDL applications. The NTBK51 can support a maximum of 32 (16*2) MSDL type D-Channels per system, unlike the MSDL which can support a maximum of 64.

Note 1: Only one version, the NTBK51AA, can be used with the NTCK43, the NT5D97, or the NT5D12. The NTBK51BA version has only 30+30 pin connectors (instead of 40+30 pins in the AA version). The missing 10 pins in the BA version prohibits the use of port 0 on the NTCK43, the NT5D97, or NT5D12 card.

Note 2: The software allocation for NTBK51AA DDCH is similar to the MSDL. It is both physical and logical, and supports D-Channel functionality only.

Note 3: Port 0 has to be an even loop on the DDP2, and Port 1 has to be an odd loop. Port 2 and Port 3 should not be configured.

The connection between the dual-port cards and the DDCH daughterboard is made using two headers: one 30 pin and one 40 pin connector.

Standard PRI cards

This section provides a description of the standard ISDN PRI cards, namely the NT8D72 (AB/BA) PRI2 card, and the QPC720 1.5 Mb PRI card.

NT8D72 PRI2

Power requirements

The NT8D72AB and NT8D72BA PRI use power and ground connections from the backplane. Power requirements are:

- +5 volts at 4 amperes
- +12 volts at 50 milliamperes
- 12 volts at 50 milliamperes

NT8D72 faceplate

The NT8D72 contains five LEDs and six external connectors. Figure 5 shows the faceplate layout.

Figure 5
NT8D72 PRI faceplate layout

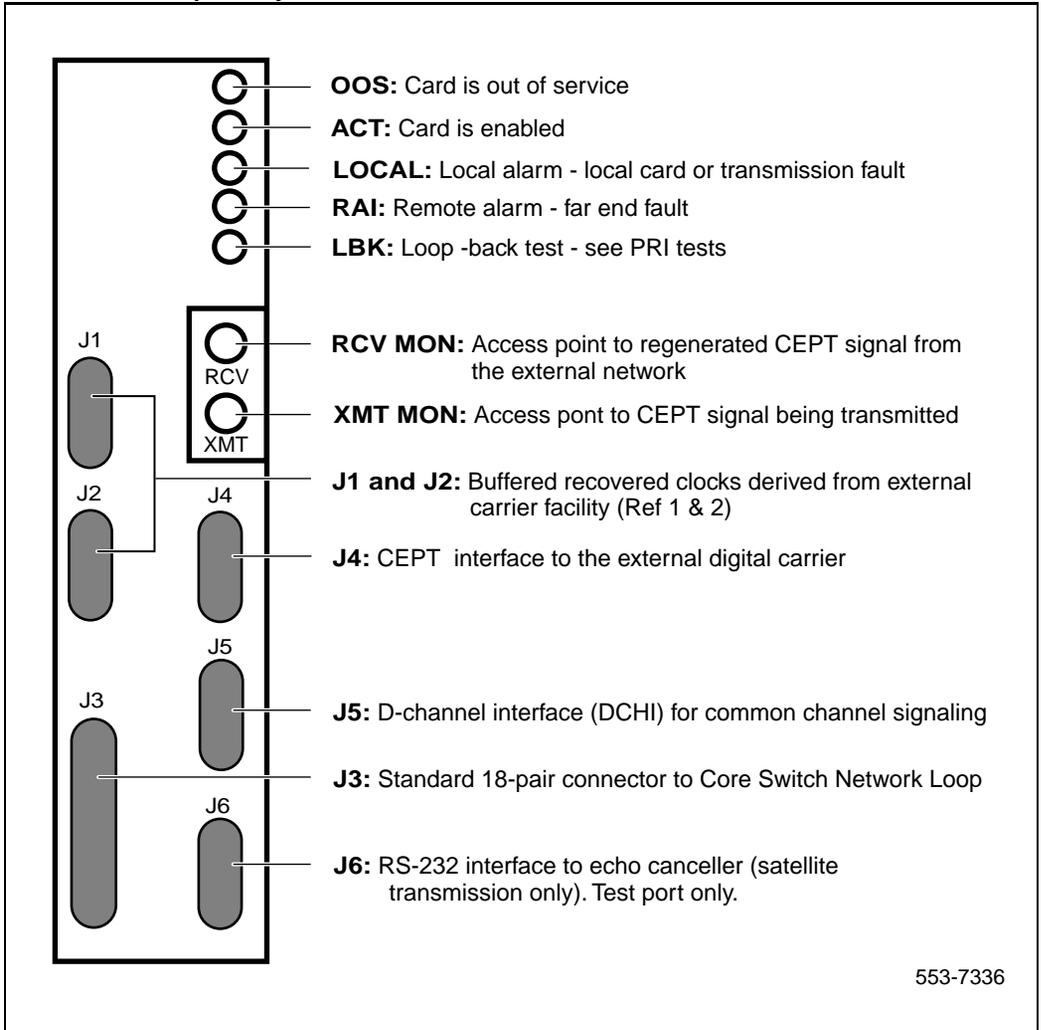


Table 1 gives information about the external connectors located on the NT8D72 PRI2 faceplate.

Table 1
NT8D72 PRI External connectors

Faceplate Destination	Type	Description
J1	9-pin female, D-connector	Reference Clock 0 interface
J2	9-pin female, D-connector	Reference Clock 1 interface
J3	36-pin connector	Loop interface
J4	15-pin male, D-connector	External digital trunk
J5	15-pin male, D-connector	D-Channel interface
J6	15-pin female, D-connector	Echo Canceller/RS-232 interface
RCV MON	Miniature bantam jack	Monitor DSI from network
XMT MON	Miniature bantam jack	Monitor DSI from PRI

Cable requirements

Table 2 lists the types of cable used and the lengths required for internal and external NT8D72 PRI2 connections.

Note: No additional cabling is required for nB+D configurations. Multiple PRIs and the D-Channel are associated through software in Overlay 17, prompt PRI.

Table 2
NT8D72AB and NT8D72BA PRI: Cables and cable lengths

Cable Type	From	To	Maximum length (meters)
NT8D79AA	PRI card	Clock controller (CC-0)	2.13
NT8D79AA	PRI card	Clock controller (CC-1)	2.13
QCAD328A	PRI card	DCH card	1.8
QCAD328B	PRI card	DCH card	5.5
QCAD328C	PRI card	DCH card	10.67
QCAD328D	PRI card	DCH card	15.24
NTND26AA	PRI card	MSDL	1.8
NTND26AB	PRI card	MSDL	5.5
NTND26AC	PRI card	MSDL	10.67
NTND26AD	PRI card	MSDL	15.24
NT8D85AB	PRI card Network	Network Card	15.24
RS-232	PRI card	Echo canceller	15.24
NT8D7207	PRI card	I/O panel	3.05
NT8D7205	I/O panel	crossconnect	15.24

Carrier interface

The NT8D72 PRI2 provide an interface to the 2Mb external digital line either directly or through an office repeater, echo canceller or line terminating unit (LTU).

Echo canceller interface

Echo cancellers are required only on satellite transmission circuits. The echo canceller detects the length of the loop, and then cancels out reflected transmission. (Callers will not hear echoes of their own voices reflecting back to them from the far end of the call.)

The echo canceller's control protocol must conform with that of the Tellabs Model 251. Both the echo canceller and the PRI circuit card act as data terminal equipment (DTEs).

QMT21 High Speed Data Module

The QMT21 High Speed Data Module supports the 64K Clear Data feature. (It allows data terminating equipment (DTE) to send and receive 64-Kb/s clear data.) The QMT21B is required for the Meridian 1 to Meridian 1 configurations.

QPC720 PRI for 1.5/2.0 Mb gateway

On Meridian 1 systems which are being used as a 1.5/2.0 Mb Gateway, one or more QPC720 (1.5 Mb) Primary Rate Interface circuit cards will also be needed.

Note: Older vintages of the QPC720 PRI can not be used for Gateway applications. The 1.5/2.0 Mb Gateway feature requires the use of a QPC720 circuit card with firmware updated to provide modified PAD values.

Clock operation for the NT8D72


There are two types of clock operation—tracking mode and free-run mode.

Tracking mode

In tracking mode, the PRI loop supplies an external clock reference to a clock controller. Two PRI loops can operate in tracking mode, with one defined as the primary reference source for clock synchronization, the other defined as the secondary reference source. The secondary reference acts as a back-up to the primary reference.

As shown in Figure 6, a Meridian 1 system with dual CPUs may have two clock controllers (CC-0 and CC-1). One clock controller acts as a back-up to the other. The clock controllers should be completely locked to the reference clock.

Figure 6
Clock controller primary and secondary tracking

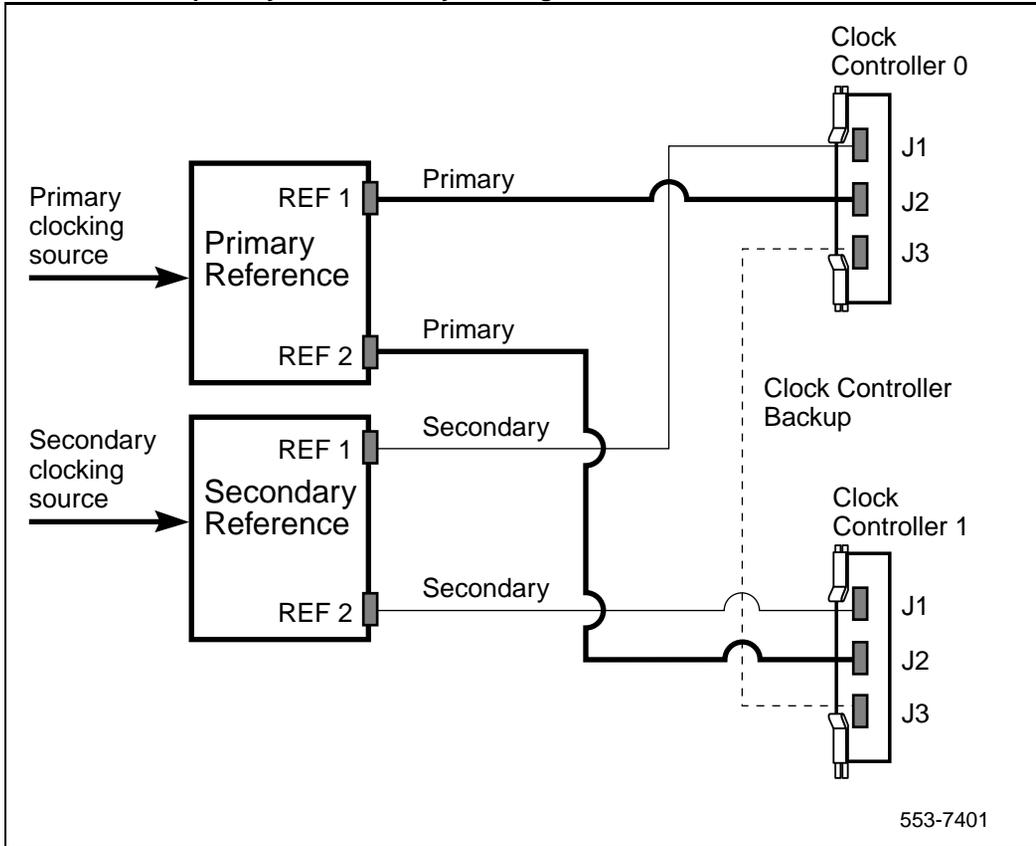

Free run (non-tracking) mode

The clock synchronization of the Meridian 1 may operate in free-run mode if:

- no loop is defined as the primary or secondary clock reference,
- the primary and secondary references are disabled, or
- the primary and secondary references are in local alarm

Reference clock errors

Meridian 1 software checks at intervals of 1 to 15 minutes to see if a clock controller or reference-clock error has occurred. (The interval of this check can be configured in Overlay 73.)

In tracking mode, at any one time, there is one active clock controller which is tracking on one reference clock. If a clock-controller error is detected, the Meridian 1 switches to the back-up clock controller, without affecting which reference clock is being tracked.

A reference-clock error occurs when there is a problem with the clock driver or with the reference clock at the far end. If the clock controller detects a reference-clock error, the reference clocks are switched.

Automatic clock recovery

A command for automatic clock recovery can be selected in LD 60 with the command EREF.

A PRI loop is disabled when it enters a local-alarm condition. If the local alarm is cleared, the loop is enabled automatically. When the loop is enabled, clock tracking is restored in the following conditions:

- 1 If the loop is assigned as the primary reference clock but the clock controller is tracking on the secondary reference or in free-run mode, it is restored to tracking on primary.
- 2 If the loop is assigned as the secondary reference clock but the clock controller is in free-run mode, it is restored to tracking on secondary.

If the clock check indicates the switch is in free-run mode:

- 1 Tracking is restored to the primary reference clock if defined.
- 2 If the primary reference is disabled or in local alarm, tracking is restored to the secondary reference clock if defined.

Note: If the switch was put into free-run mode intentionally by the craftsperson, it will resume tracking on a reference clock unless the clock-switching option has been disabled (LD 60, command MREF), or the reference clock has been "undefined" in the database.

Automatic clock switching

If the EREF command is selected in Overlay 60, tracking on the primary or secondary reference clock is automatically switched in the following manner:

- 1 If software is unable to track on the assigned primary reference clock, it switches to the secondary reference clock and sends appropriate DTC maintenance messages.
- 2 If software is unable to track on the assigned secondary reference clock, it switches to free run.

QPC720 PRI

The QPC720 PRI card is required for PRI operation in all machine types.

Power requirements

The QPC720 PRI uses power and ground from the backplane. This card does not require an intelligent bus. Power requirements are:

- +5 volts at 6 amperes
- +12 volts at 50 milliamperes
- 12 volts at 50 milliamperes

QPC720 faceplate

QPC720 PRI contains five LEDs and six external connectors. Figure 7 shows the QPC720 PRI faceplate layout. Table 3 gives information about the external connectors located on the QPC720 PRI faceplate.

Figure 7
QPC720 PRI faceplate layout

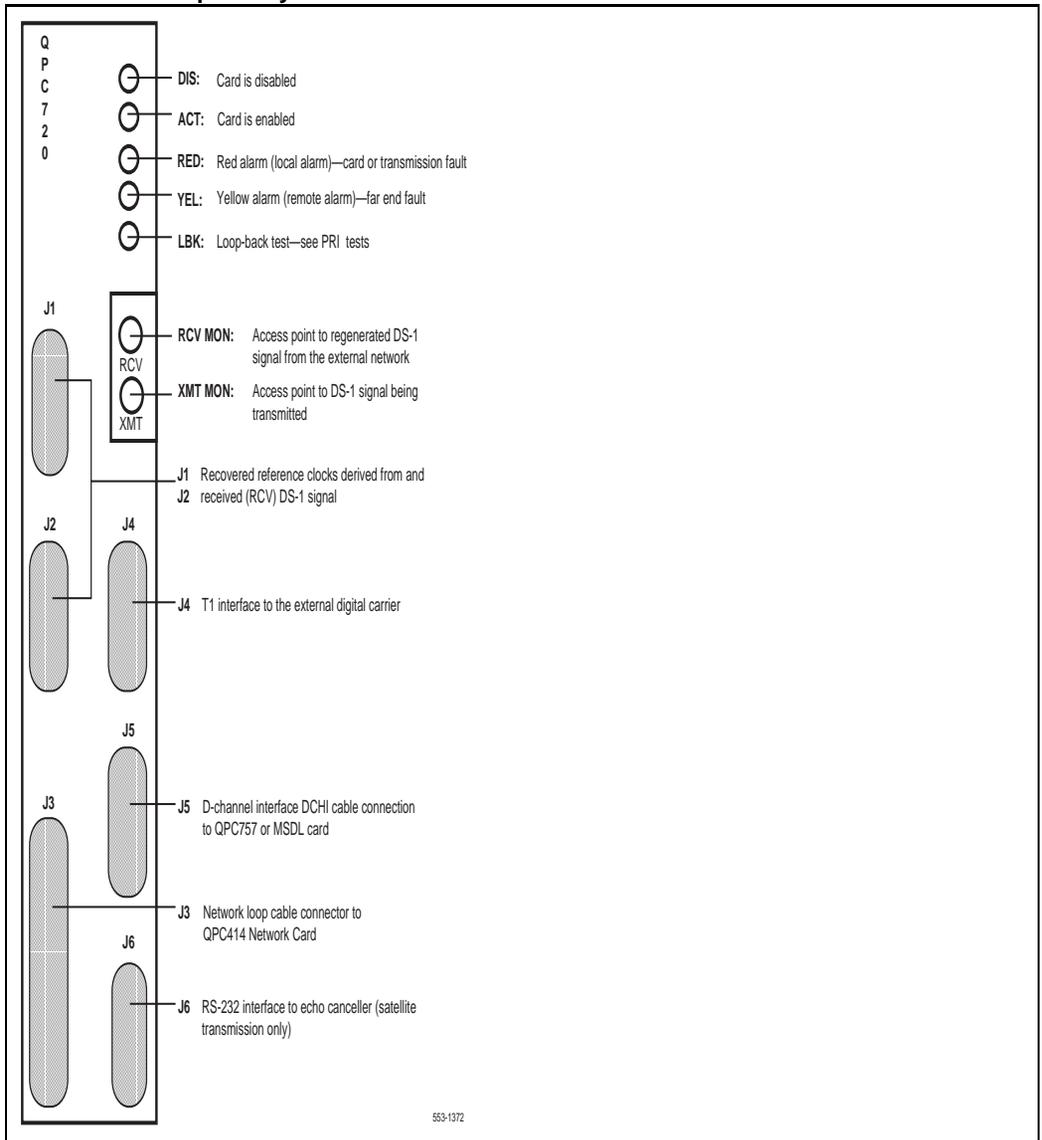


Table 3
QPC720 PRI external connectors

Faceplate destination	Type
J1	9-pin female, D-connector
J2	9-pin female, D-connector
J3	36-pin connector
J4	15-pin male, D-connector
J5	15-pin male, D-connector
J6	15-pin female, D-connector
RCV MON	Miniature bantam jack
XMT MON	Miniature bantam jack

Cable requirements

Table 4 lists the types of cable used and the lengths required for external QPC720 PRI connections.

Note: No additional cabling is required for nB+D configurations. Multiple PRIs and the D-channel are associated through software in LD 17, prompt PRI.

Carrier interface

The QPC720 PRI provides an interface to the DS-1 Channel either directly, through an office repeater, or through an Echo Canceller.

The T1 Channel Service Units listed below are compatible with the QPC720 PRI card and the 64K Clear Data feature as well as with PRI connection parameters such as the Superframe format, the Extended superframe format, and the B7 and B8ZS Alternate Mark Inversion (AMI) line coding.

- Digital Link 551A
- Digital Link 551C
- Digital Link 551E

- Tellabs Model 441
- Verilink Model 551V ST

In the U.S.A., FCC Part 68 regulations require Network Channel Terminating Equipment (for example, the NT QRY551 Channel Service Unit) installed at of the point of connection between a system and a registered common carrier trunk.

Echo Canceller interface

Echo Cancellers are required only with satellite transmission. The Echo Canceller detects the length of the loop, then cancels the reflected transmission (callers do not hear their own voices echoed).

The QPC720 PRI provides both a T1 line interface and a control interface to link to a signal format compatible with EIA standard RS-232-C. Both the PRI and the Echo Canceller act as Data Terminal Equipment (DTE). The Echo Canceller's control protocol must conform to that of the Tellabs Model 251.

64 T-link version 2 protocol

The QPC720 card supports the 64 T-link version 2 protocol. The QPC720 together with the QMT21 High Speed Data Module supports the 64K Clear Data feature. The QPC720 card provides a trunk that ties two switches together. This trunk allows 64K Clear Data to pass from the Meridian 1 to an outside network. The QMT21 module allows Data Terminal Equipment (DTE) to send and receive 64K Clear Data. See *Meridian Link ISDN/AP General Guide* (553-2901-100) for more information about the 64K Clear Data feature.

Table 4
QPC720 PRI cables and cable lengths

Cable type	From	To	Maximum length (feet)	Maximum length (meters)
QCAD130	QPC720	QPC471/QPC775 (CC-0)	7	2.13
QCAD130	QPC720	QPC471/QPC775 (CC-1)	7	2.13
QCAD328A	QPC720	QPC757 DCHI	6	1.8
QCAD328B	QPC720	QPC757 DCHI	18	5.5
QCAD328C	QPC720	QPC757 DCHI	35	10.67
QCAD328D	QPC720	QPC757 DCHI	50	15.24
QCAD124	QPC720	QPC414 Network	50	15.24
QCAD128	QPC720	Bulkhead I/O panel	25	7.62
RS-232	QPC720	Echo Cancellor	50	15.24
NTND26AA	QPC720	NT6D80 MSDL	6	1.8
NTND26AB	QPC720	NT6D80 MSDL	18	5.5
NTND26AC	QPC720	NT6D80 MSDL	35	10.67
NTND26AD	QPC720	NT6D80 MSDL	50	15.24
NTND98	QPC720	Input/output panel	6	1.8
22AWG ABAM	Echo Cancellor	DSX-1	655	199.64

Note: The QPC775 Clock Controller is not available in the U.S.A. There can be no mixing of QPC775 and QPC471 in one system.

Disk drive hardware

The following hardware is required for Meridian 1 Options 51C, 61C, and 81C system upgrades:

- 3.5-inch disk drive unit
- disk drive controller for above
- cable for above

Note: Group F software (or any later issue) on an ST does not require a 3.5-inch disk drive. On this machine option, Group F software will function with the 5.25-inch disk drive.

See Table 5 for information on disk drive components.

Table 5
3.5 inch disk hardware requirements

Product Code	Description
NT8D68AA	Floppy Disk Unit (FDU)
NTUD69AA	Mass Disk Unit (MDU)
QPC742D	Floppy Disk Interface (FDI) for FDU
QPC584E	Floppy Disk Interface (FDI) for MDU
NT8D77AB	Mass Storage Unit (MSU) interface cable (2 ft, 0.6m)
NT8D77AA	Mass Storage Unit (MSU) interface cable (3 ft, 0.9m)
NT8D77AC	Mass Storage Unit (MSU) interface cable (4 ft, 1.2m)
NT8D77AD	Mass Storage Unit (MSU) interface cable (5 ft, 1.5m)

Dual-port PRI cards

This section provides a description of the dual-port PRI cards, namely the NTCK43 dual-port PRI2 card, the NT5D97 dual-port DTI2/PRI2 card, and the NT5D12 dual-port 1.5 DTI/PRI card

NTCK 43 Dual-port PRI2 card

The NTCK43 is a dual-port (two port) 2.0 Mb Primary Rate Interface card. It reduces the PRI footprint by integrating the functionalities of two NT8D72 PRI cards and one QPC414 ENET into one card. The NTCK43 occupies a single Network shelf slot providing two primary rate network connections.

NTCK43 product compatibility


The NTCK43 DPRI supports all the functionality of the NT8D72BA PRI2 card, it is software independent. Earlier PRI cards may be mixed with the NTCK43 DPRI card on the same system type, where necessary.

Due to cabling limitations it is not possible on a specific Dual PRI to connect both MSDL and non MSDL D-Channel handlers when external DCHs are being used. e.g. It is not possible to have an MSDL D-Channel handler connected to Unit 0 and a NT6D11 type D-Channel handler connected to Unit 1.

NTCK43 faceplate

The NTCK43 DPRI contain a set of vertical LEDs for each PRI Loop plus one Led giving the DDCH status. The faceplate includes five external connectors of which three are used by the customer. These are the Trunk connection P1, the external DCH connector P3 and the clock controller connector P4. Figure 8 shows the NTCK43 faceplate layout.

Figure 8
NTCK43 DPRI faceplate

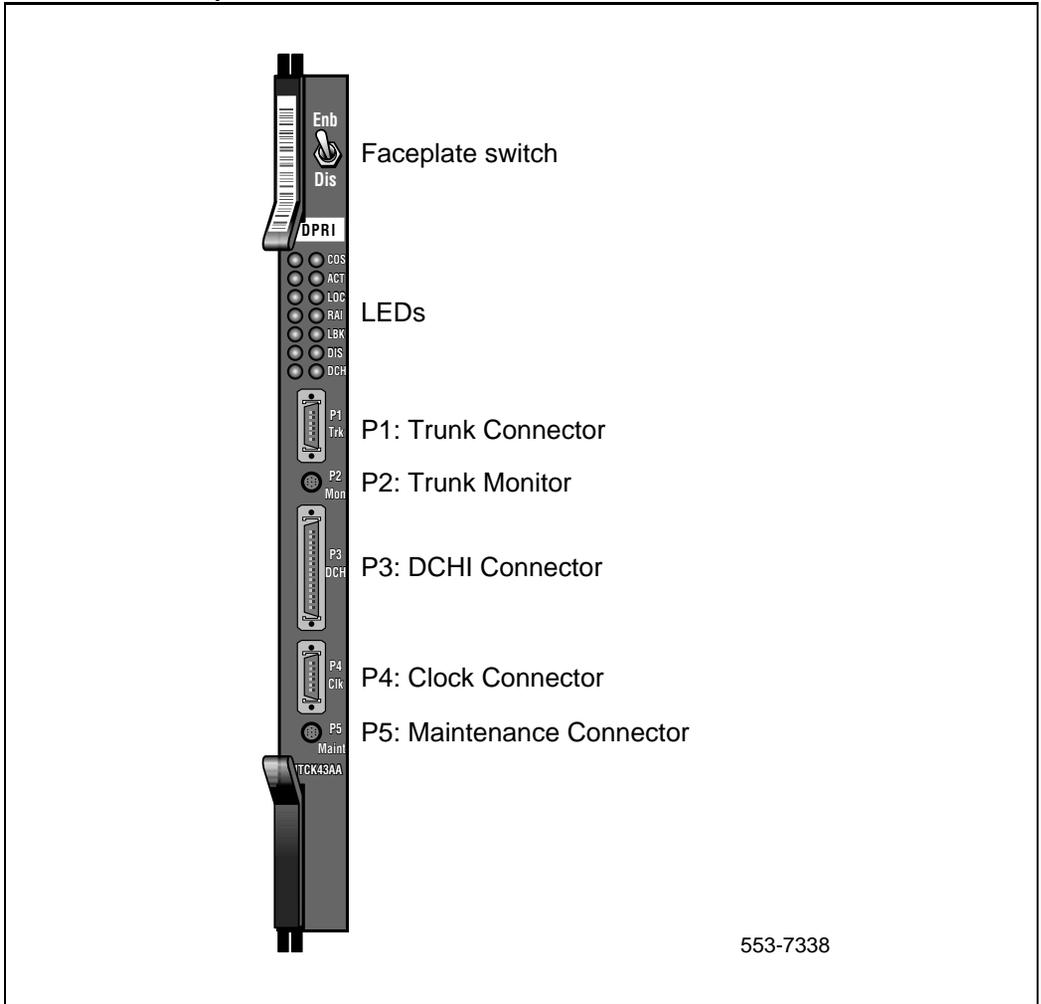

NTCK43 external connectors

Table 6 gives information about the external connectors located on NTCK43 DPRI faceplate.

Table 6
NTCK43 DPRI: External connectors

Faceplate Connector	Connector Type	Description
P1	9-pin female, D-connector	Dual External Trunk Connection
P2	9-pin female, DIN	Monitor Port
P3	26-pin female, D-connector	Dual DCH interface
P4	15-pin female, D-connector	Clock Controller Port
P5	9-pin female, DIN	Maintenance Port

NTCK43 LEDs

Table 7 gives information about the external connectors located on NTCK43 DPRI faceplate. A more detailed description of the LEDs follows.

Table 7
NTCK43 DPRI LEDs

U0	U1	Abbr.	Description
Red	Red	OOS	Out of Service
Green	Green	ACT	Active
Red	Red	RED	Local Alarm
Yellow	Yellow	RAI	Remote Alarm
Green	Green	LBK	Loopback
Red	Red	DIS	Loop Status (Off = Loop Enabled) (ON = Loop Disabled)
Multi- Coloured		DCH	DDCH Status OFF = No DDCH Daughterboard Installed Red = DDCH Disabled Flashing Red = DDCH Download in Progress Green = DDCH Enabled

LED descriptions

OOS

This red LED indicates that the particular PRI channel is in an Out-of-Service state, having received either the "disable loop" or "enter Out-of-Service state" message from software. This is also the state of both channels after power-up, completion of self-test, and exiting remote loopback mode.

ACT

This green LED indicates that the channel is in the active state, having received the "enable loop" message from software.

RED

This red LED indicates that the channel is in the Local alarm state. This is the state when the channel has a local problem with the received CEPT signal such as Loss of signal, Loss of Multi-frame Alignment, or Loss of Frame Alignment.

RAI

This yellow LED is turned on and off by firmware to indicate that the channel has received either an RAI or an AIS signal from the remote end and notified software that it has persisted but not yet cleared.

LBK

This green LED indicates that the channel is in one of the various per loop loopback states.

DIS

This red LED indicates that the Loop is disabled.

DCH

This dual colour red/green LED indicates that the on-board DDCH is present (red) or is present and enabled (green).

NTCK43 Cabling

This section lists the types of cable used and the lengths required for internal and external NTCK43 DPRI connections.


Note: No additional cabling is required for nB+D configurations. Multiple DPRI's and the D-Channel are associated through software in Overlay 17, prompt PRI2.

DPRI cables

The various cables associated with the Dual PRI are given below. Note that the D-Channel and Clock Controller cables have length variations to facilitate different configurations. These cable length variations match the lengths that are presently available for the NT8D72BA.

NTCK45AA

120 Ohm Dual PRI to I/O Panel cable (8ft)

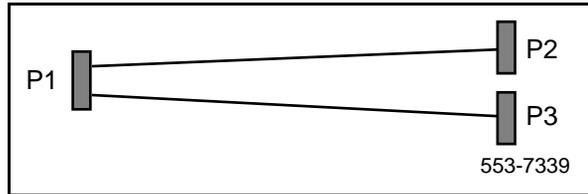
Note: This cable is not used for ST Machines.

Connector P2 supplies the PRI Trunk connection for Unit 0.

Connector P3 supplies the PRI Trunk connection for Unit 1.

NTCK78AA

120 Ohm Dual PRI cable for ST Machines (50ft)

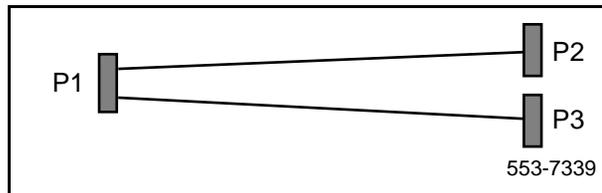Note: This cable is used for ST Machines only.


Connector P2 supplies the PRI Trunk connection for Unit 0.

Connector P3 supplies the PRI Trunk connection for Unit 1.

NTCK79AA

75 Ohm Dual PRI Coax Cable (40ft)

This cable is 75 Ohm Dual Coaxial cable which interfaces to P1 on the faceplate side and to external equipment such as an LIU.

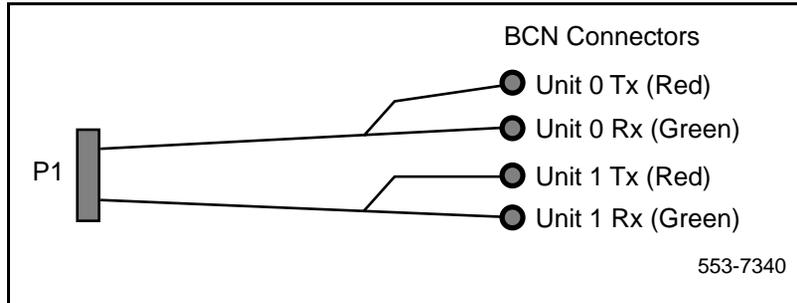


External DPRI cable

NT8D7217

Dual PRI I/O Panel to Multiplexer cable (50ft)

Note: This cable is not used for ST Machines.

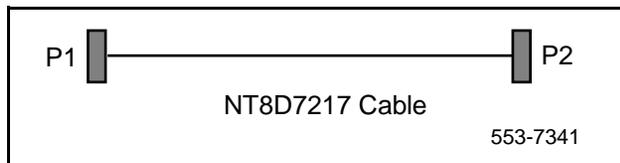

External MSDL/DDCH D-Channel cables

NTCK80AA

Dual PRI to MSDL DCH cable (6ft)

NTCK80AB


Dual PRI to MSDL DCH cable (18ft)

NTCK80AC

Dual PRI to MSDL DCH cable (35ft)

NTCK80AD

Dual PRI to MSDL DCH cable (50ft)

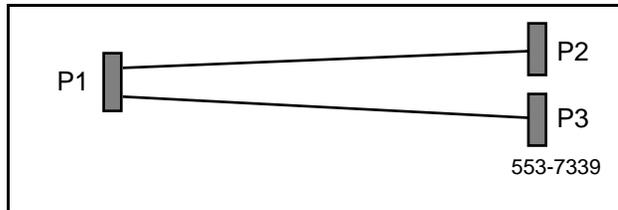

Connector P2 supplies the DCH connections for Unit 0.

Connector P3 supplies the DCH connections for Unit 1.

Clock Controller cables (1 to 2 port cables)**NTCK47AA**

Dual PRI to Clock Controller cable (2ft)

NTCK47AB

Dual PRI to Clock Controller cable (4ft)

NTCK47AC


Dual PRI to Clock Controller cable (6ft)

NTCK47AD

Dual PRI to Clock Controller cable (8ft)

NTCK47AE

Dual PRI to Clock Controller cable (10ft)

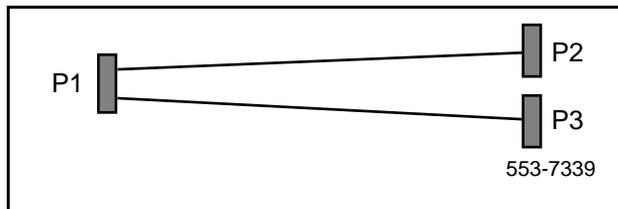

Cable NTCK47 is the clock control cable used for most configurations. The NTCK47 can be used for all clocking options that use a Single CPU.

It can also be used for all clocking options using a Dual CPU where a Dual PRI provides one of the references and the other reference is provided from a different source, that source being either a different Dual PRI, a NT8D72 PRI or a DTI.

Clock Controller Cables (1 to 4 port cables)

NTCK81AA

Dual PRI to Clock Controller cable (2ft)

NTCK81AB

Dual PRI to Clock Controller cable (4ft)

NTCK81AC


Dual PRI to Clock Controller cable (6ft)

NTCK81AD

Dual PRI to Clock Controller cable (8ft)

NTCK81AE

Dual PRI to Clock Controller cable (10ft)

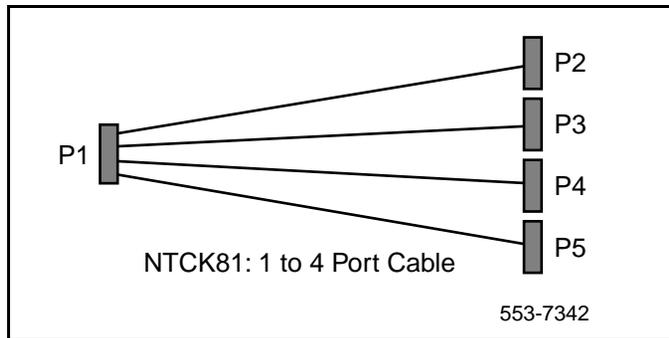


Cable NTCK81 is used only in the situation where 1 Dual PRI provides both references to both CPUs, i.e., where the Dual PRI is the sole source of clocking references for the system. If a system has other PRIs installed (DPRIs or NT8D72) other than the Dual PRI, it is recommended that one of the clocking references be taken from that other source. This will de-risk the impact of a Dual PRI card failure on the system.

Note: When the Dual PRI cabling is completed, any connector that remains unterminated should have a protective plastic sleeve placed over the connector, to protect it from dust or from coming into contact with other voltages. An example of this might be when all of the connectors on the NTCK47 cable were not terminated.

NTCK43 DPRI carrier interface

The NTCK43 DPRI provide an interface to the 2.0 Mb external digital line either directly or through an office repeater, line terminating unit (LTU), or Channel Service Unit (CSU). This is depicted by Figure 9.

Figure 9
Carrier Interface

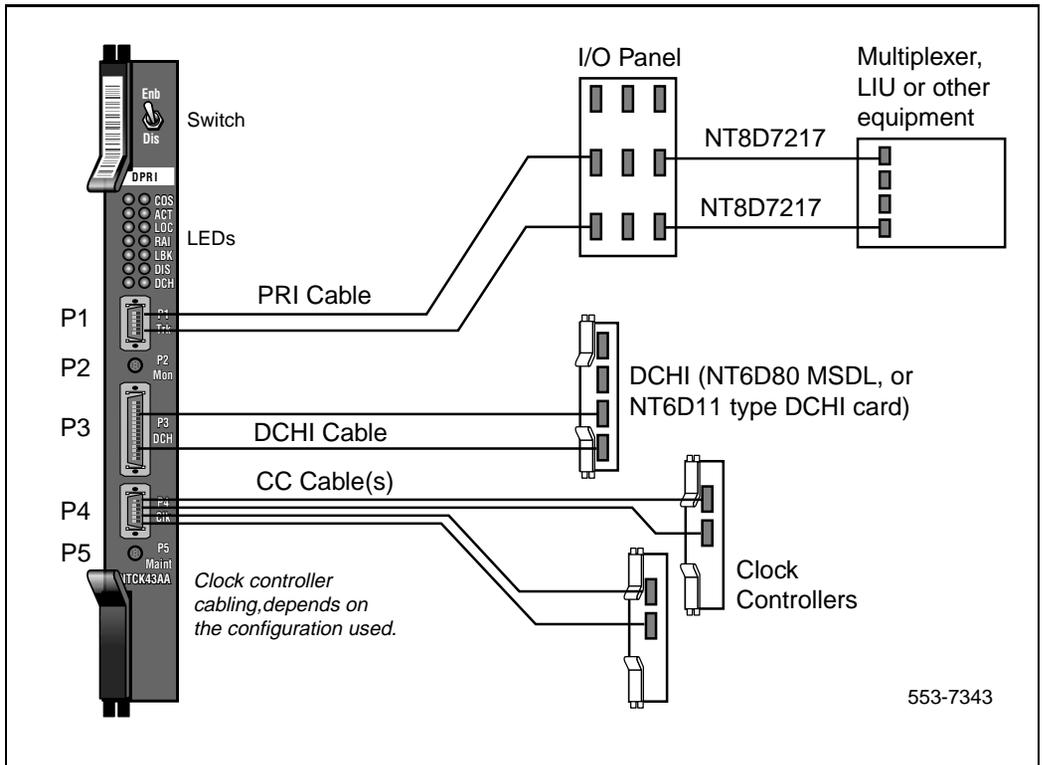

Clock for the NTCK43

Clock operation


There are two types of clock operation - tracking mode and free-run mode.

Tracking mode

In tracking mode, the DPRI loop supplies an external clock reference to a clock controller. Two DPRI loops can operate in tracking mode, with one defined as the primary reference source for clock synchronization, the other defined as the secondary reference source. The secondary reference acts as a back-up to the primary reference.

As shown in Figure 10, a Meridian 1 system with dual CPUs may have two clock controllers (CC-0 and CC-1). One clock controller acts as a back-up to the other. The clock controllers should be completely locked to the reference clock.

Figure 10
Clock controller, primary and secondary tracking

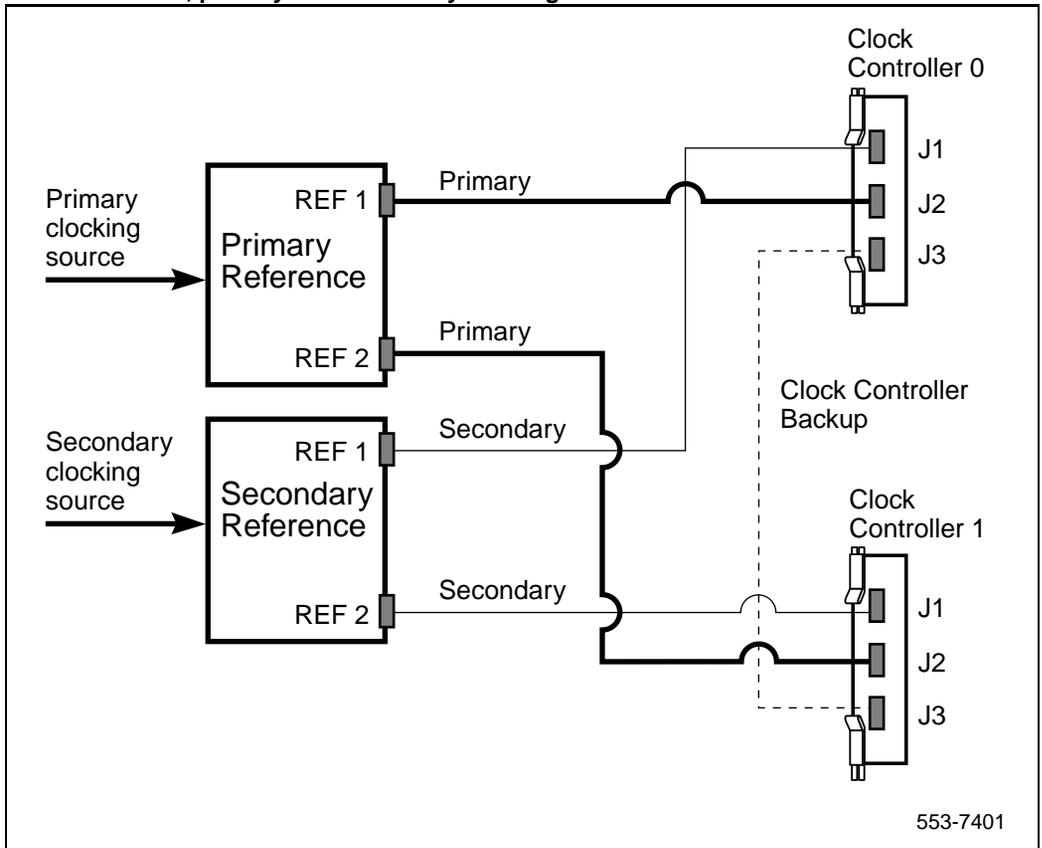

Free run (non-tracking) mode

The clock synchronization of the Meridian 1 may operate in free-run mode if:

- no loop is defined as the primary or secondary clock reference,
- the primary and secondary references are disabled, or
- the primary and secondary references are in local alarm.

Reference clock errors

Meridian 1 software checks at intervals of 1 to 15 minutes to see if a clock-controller or reference-clock error has occurred. (The interval of this check can be configured in Overlay 73.)

In tracking mode, at any one time, there is one active clock controller which is tracking on one reference clock. If a clock-controller error is detected, the Meridian 1 system switches to the back-up clock controller, without affecting which reference clock is being tracked.

A reference-clock error occurs when there is a problem with the clock driver or with the reference clock at the far end. If the clock controller detects a reference-clock error, the reference clocks are switched.

Automatic clock recovery

A command for automatic clock recovery can be selected in Overlay 60 with the command EREF.

A DPRI loop is disabled when it enters a local-alarm condition. If the local alarm is cleared, the loop is enabled automatically. When the loop is enabled, clock tracking is restored in the following conditions:

- 1 If the loop is assigned as the primary reference clock but the clock controller is tracking on the secondary reference or in free-run mode, it is restored to tracking on primary.
- 2 If the loop is assigned as the secondary reference clock but the clock controller is in free-run mode, it is restored to tracking on secondary.

If the clock check indicates the switch is in free-run mode:

- 1 Tracking is restored to the primary reference clock if defined.
- 2 If the primary reference is disabled or in local alarm, tracking is restored to the secondary reference clock if defined.

Note: If the switch was put into free-run mode intentionally by the craftsperson, it will resume tracking on a reference clock unless the clock-switching option has been disabled (LD 60, command MREF), or the reference clock has been "undefined" in the database.

Automatic clock switching

If the EREF command is selected in Overlay 60, tracking on the primary or secondary reference clock is automatically switched in the following manner:

- 1** If software is unable to track on the assigned primary reference clock, it switches to the secondary reference clock and sends appropriate DTC maintenance messages.
- 2** If software is unable to track on the assigned secondary reference clock, it switches to free run.

Clock configurations

The following Clock Controller configurations are possible:

- a single CPU System.
- a dual CPU System.

A single CPU system has one Clock Controller card. This card can receive references clocks from two sources referred to as the primary and secondary sources. These two sources can originate from a PRI, DTI etc. PRI cards such as the NT8D72BA are capable of supplying 2 references of the same clock source. These are known as Ref1 (available at J1) and Ref2 (available at J2) on the NT8D72BA.

The NTCK43 Dual PRI is capable of supplying two references from each clock source i.e. four references in total. The NTCK43 can thus supply Ref1 and Ref2 from its Primary and Ref1 and Ref2 from its Secondary.

There are two Clock Controller Cables, namely NTCK47 & NTCK81.

The following tables give full details of clocking options.

Table 8
Clock Controller Options for the NTCK43 - Summary

CC Option	S2-1	S2-2	CPU Type	Cable	Notes
Option 1	OFF	OFF	Single	NTCK47	Ref from U0 on P2 Ref from U1 on P3
Option 2	OFF	ON	Dual	NTCK47	Ref 1 from U0 on P2 Ref 2 from U0 on P3
Option 3	ON	OFF	Dual	NTCK47	Ref 1 from U1 on P2 Ref 2 from U1 on P3
Option 4	ON	ON	Dual	NTCK81	Ref 1 from U0 on P2 Ref 2 from U0 on P3 Ref 1 from U1 on P4 Ref 2 from U1 on P5

Table 9
Clock Controller Options for the NTCK43 - Descriptions

Clock Option	Notes
Option 1	This option provides a single CPU system with 2 clock sources derived from the 2 units of the Dual PRI. Connector P2 provides a clock source from Unit 0. Connector P3 provides a clock source from Unit 1. Refer to Figure 11.
Option 2	This option provides a Dual CPU system with 2 references of a clock source derived from unit 0 of the DPRI. Connector P2 provides a Ref 1 clock source from Unit 0. Connector P3 provides a Ref 2 clock source from Unit 0. Refer to Figure 12.
Option 3	This option provides a Dual CPU system with 2 references of a clock source derived from unit 1 of the DPRI. Connector P2 provides a Ref 1 clock source from Unit 1. Connector P3 provides a Ref 2 clock source from Unit 1. Refer to Figure 13.

Table 9
Clock Controller Options for the NTCK43 - Descriptions

Clock Option	Notes
Option 4	This option provides a Dual CPU system with 2 references from each clock source derived from the DPR1. Connector P2 provides a Ref 1 clock source from Unit 0. Connector P3 provides a Ref 2 clock source from Unit 0. Connector P4 provides a Ref 1 clock source from Unit 1. Connector P5 provides a Ref 2 clock source from Unit 1. Refer to Figure 14.

Figures 11 to 14 illustrate the various clocking configurations available, as well as the Clock Controller cables and Clock switch options that support these configurations.

Figure 11
CC Option 1

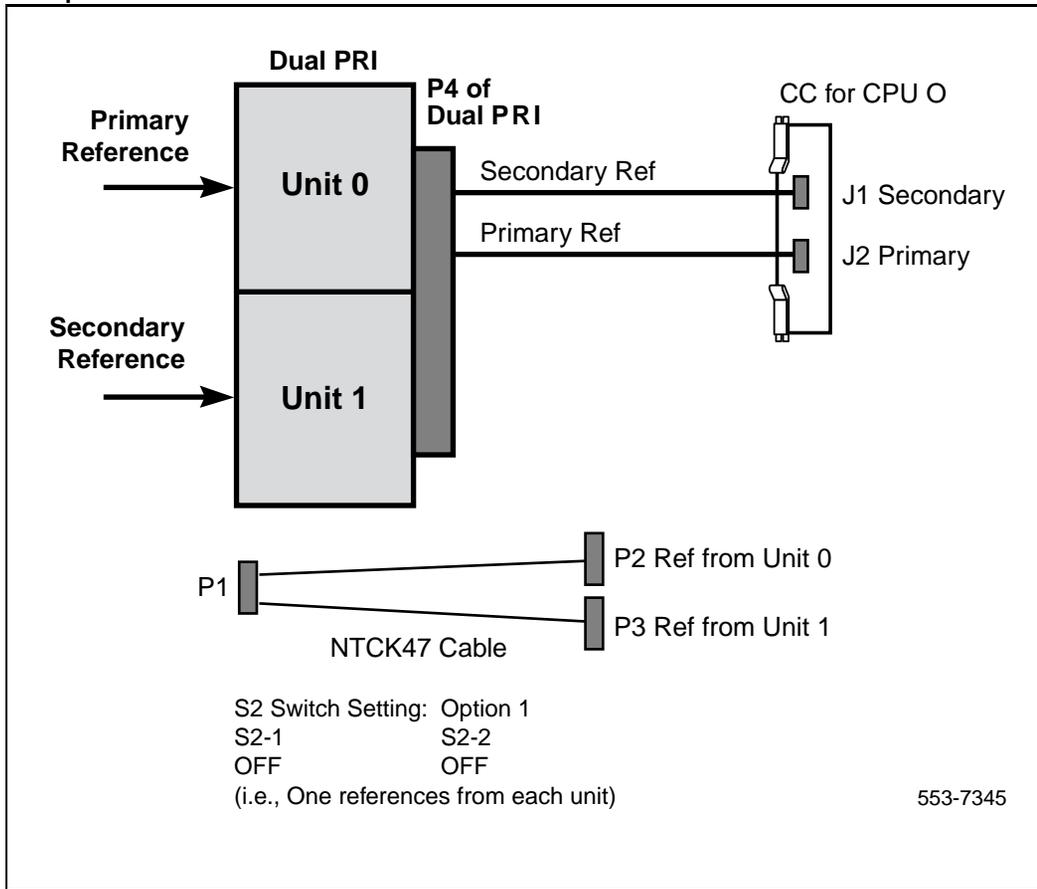


Figure 12
CC Option 2

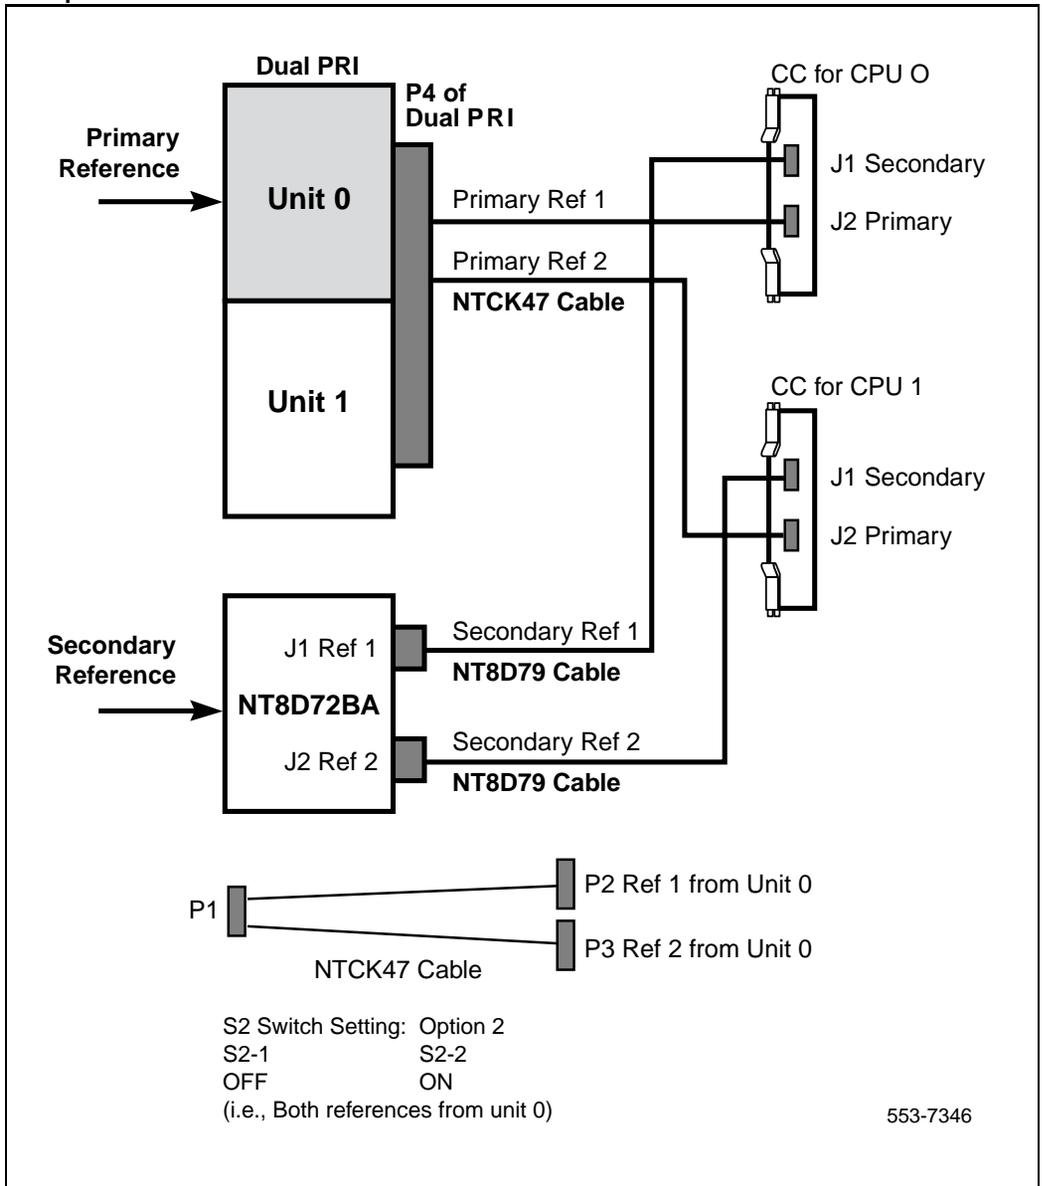


Figure 13
CC Option 3


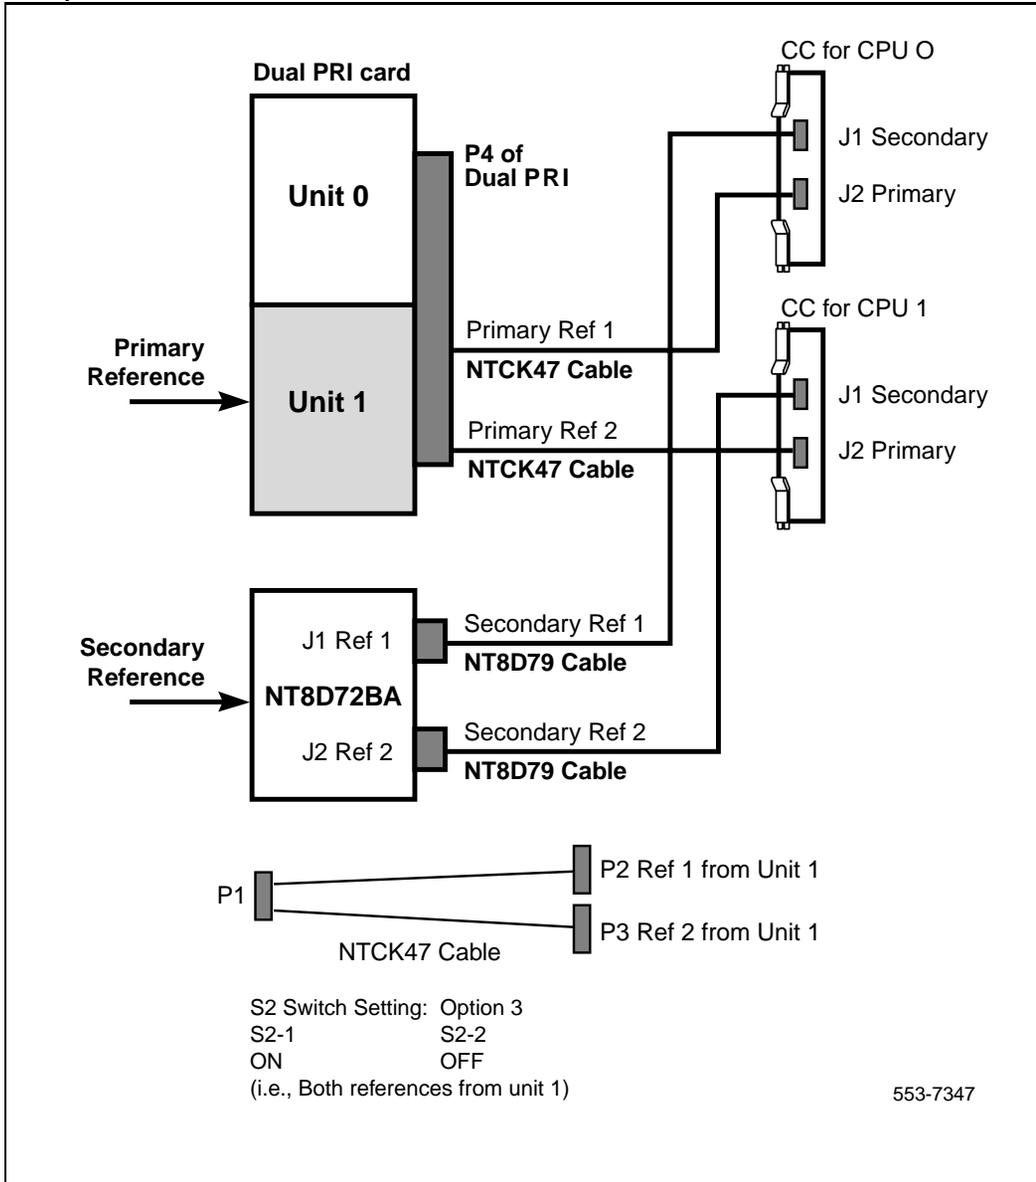


Figure 14
CC Option 4

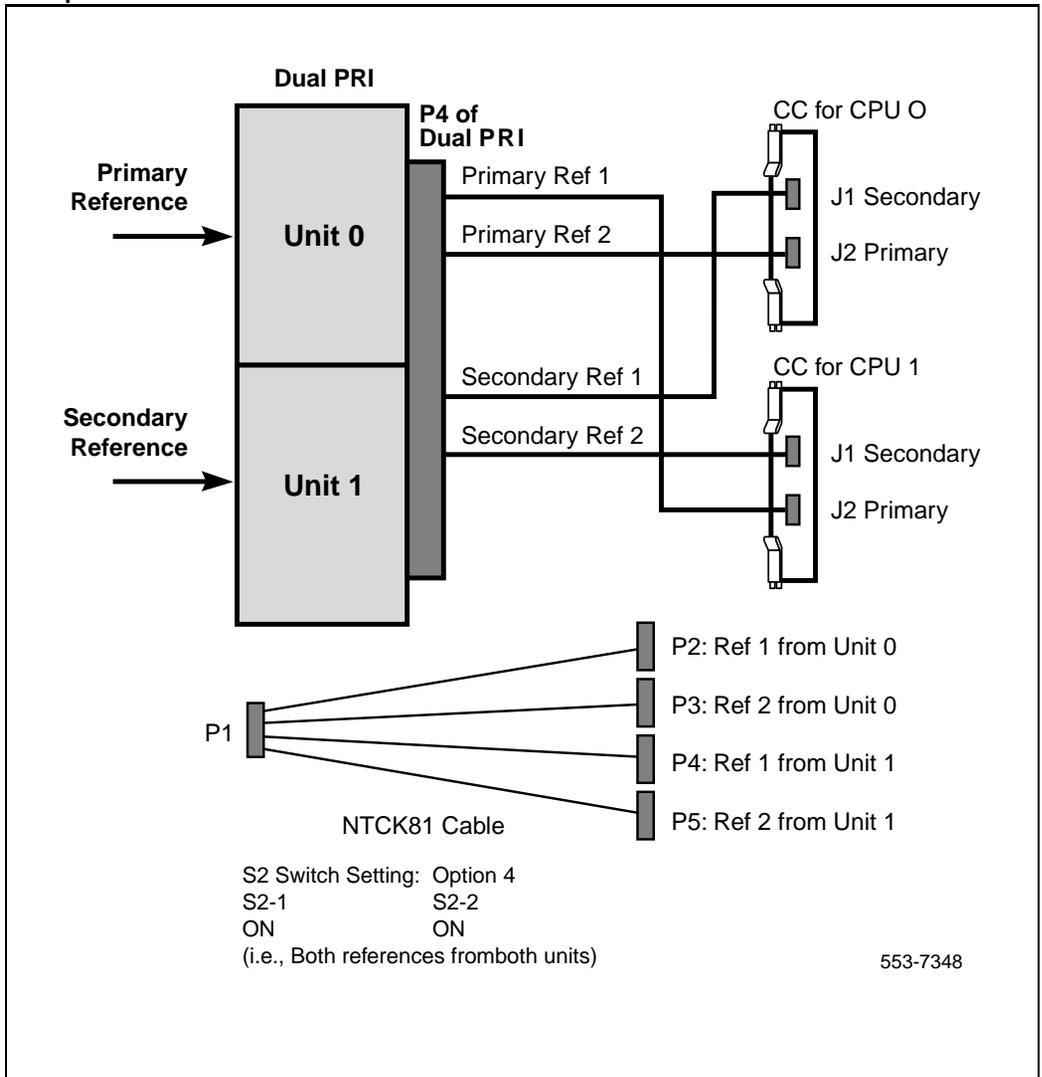

NT5D97 Dual-port DTI2/PRI2 card

The NT5D97 is a dual-port 2.0 Mb DTI2/PRI2 card (the DDP2 firmware functions in DTI2 or PRI2 mode, depending on DIP switch settings) integrating the functionality of two QPC536E DTI2 cards or two NT8D72BA PRI2 cards, and one QPC414 ENET card, into a single CE card. The NT5D97 occupies a single slot in the Network shelf, providing two DTI2/PRI2 network connections, an interface to an external D-Channel Handler (the NT6D11AF) or the NT6D80 Multi-purpose Serial Data Link card, and an optional plug-on NTBK51AA Downloadable D-Channel daughterboard (DDCH) with two DCH interface ports.

The NT5D97 DDP2 card may be mixed in the same machine with earlier DTI2 (QPC536E) cards or PRI2 (NT8D72BA) cards, and the NTCK43 dual-port PRI2 (DPRI) card.

The NT5D97 DDP2 card hardware design uses a B57 ASIC E1/T1 framer. The carrier specifications comply with the ANSI T1.403 specification. The NT5D97 provides an interface to the 2.048 Mbps external digital line either directly or through an office repeater, Network Channel Terminating Equipment (NCTE), or Line Terminating Unit (LTU).

WARNING

The NT5D97 DDP2 card is not designed to be directly connected to the Public Switched Network, or other exposed plant networks. Such a connection should only be done using an isolating-type networking terminating device that provides voltage surge protection, such as a Line Terminating Unit (LTU), Network Channel Terminating Equipment (NCTE), or Network Termination 1 (NT1), as certified by your local, regional, or national safety agency and telecommunications authority.

External D-Channel Interface (DCH or MSDL)

The connection between the DDP2 card and the external DCH or MSDL is via a 26 pin female D type connector. The data signals conform to the electrical characteristics of the EIA standard RS-422.

Two control signals are used to communicate the D-channel link status to the DCH or MSDL. These are:

- Receiver Ready (RR), originating at the DDP2 card, to indicate to the DCH or MSDL that the D-channel link is operational.
- Transmitter Ready (TR), originating at the DCH or MSDL, to indicate to the DDP2 card that the DCH or MSDL are ready to use the D-channel link.

Table 10 indicates how the RR control signal operates with regard to the DDP2 status.

Table 10
DCH/MSDL Receiver Ready control signals

RR State	Condition
ON	D-Channel data rate selected at 64 Kbps <i>and</i> PRI2 loop is enabled <i>and</i> PRI2 link is not in OOS or Local Alarm mode state <i>and</i> PRI2 link is not transmitting a Remote Alarm pattern <i>and</i> PRI2 link is not receiving a Remote Alarm Indication from a remote facility
OFF	All other conditions

NT5D97 faceplate

Figure 15 illustrates the faceplate layout for the NT5D97 DDP card. The faceplate contains an enable/disable switch; a DDCH status LED; 6 x 2 trunk port status LEDs; and six external connectors. Table 11 shows the name of each connector, its designation with respect to the faceplate and the name and description of the card it is connected to. Also shown are the names of the LEDs.

Figure 15
NT5D97AA faceplate

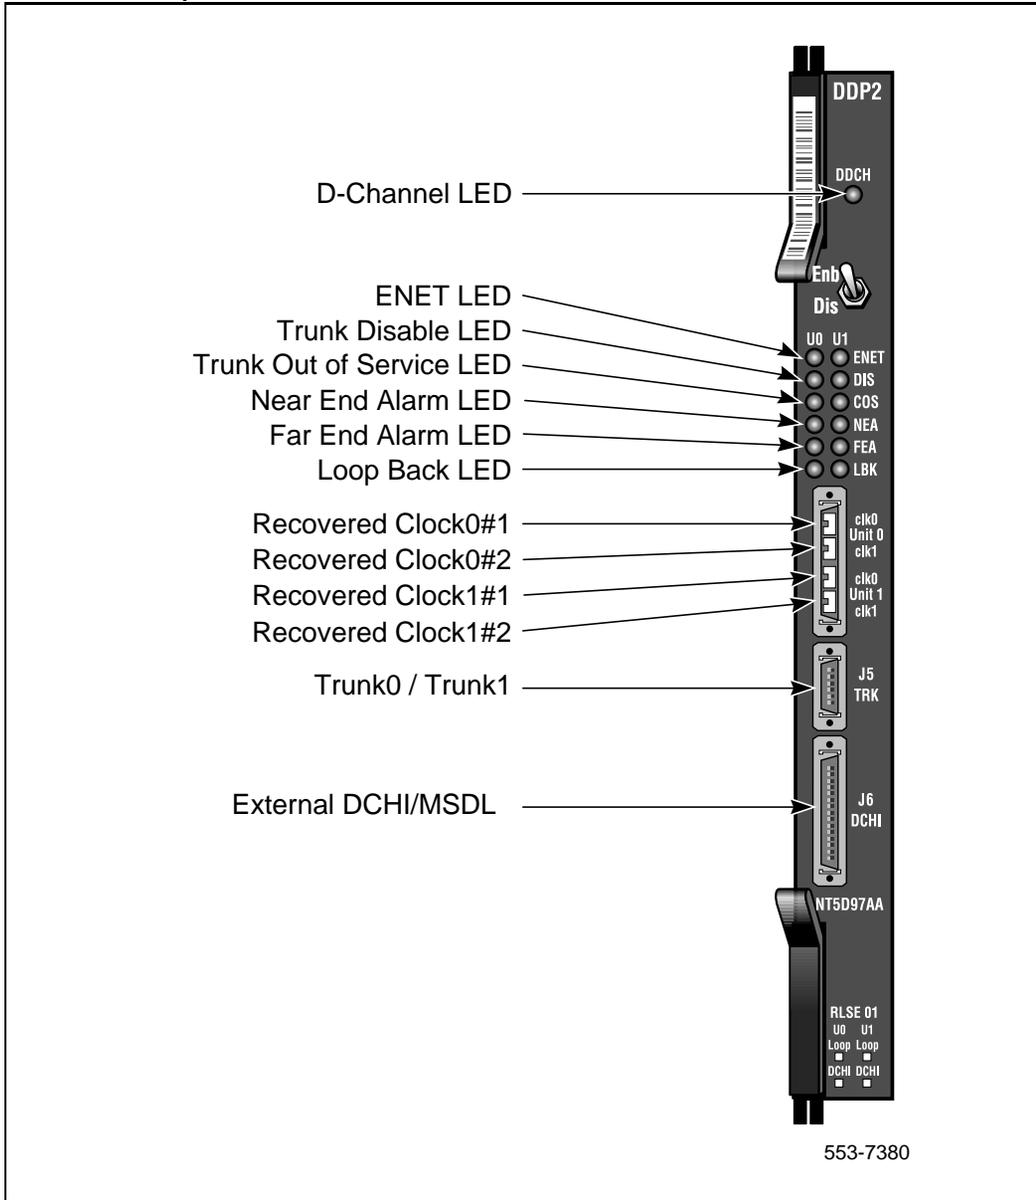


Table 11
External connectors and LEDs

Function	Faceplate Designator	Type	Description
Switch	ENB/DIS	Plastic, ESD protected	Card Enable/disable switch
Connectors	Unit 0 Clock 0	RJ11 Connector	Connects reference clock 0 to Clock Controller card 0
	Unit 0 Clock 1	RJ11 Connector	Connects reference clock 0 to Clock Controller card 1
	Unit 1 Clock 0	RJ11 Connector	Connects reference clock 1 to Clock Controller card 0
	Unit 1 Clock 1	RJ11 Connector	Connects reference clock 1 to Clock Controller card 1
	J5 TRK	9 Pin Female D Connector	Two external E1 Trunk 0 and Trunk 1
	J6 DCH	26 Pin Female D Connector	Connects to external DCH or MSDL
LEDs	ENET	2 Red LEDs	ENET 0 or ENET 1 is disabled
	DIS	2 Red LEDs	Trunk 0 or Trunk 1 is disabled
	OOS	2 Yellow LEDs	Trunk is out of service
	NEA	2 Yellow LEDs	Local (Near End) Alarm
	FEA	2 Yellow LEDs	Far End Alarm
	LBK	2 Yellow LEDs	Loop Back test being performed on Trunk 0 or Trunk 1
	DCH	Bicolor Red/Green LED	NTBK51AA status

The following is a brief description of each element on the faceplate.

Enable/Disable Switch

This switch is used to disable the card prior to insertion or removal from the network shelf. While this switch is in disable position, the card will not respond to the Meridian 1 CPU.

ENET LEDs

Two red LEDs which indicate if the “ENET0” and “ENET1” portions of the card are disabled. These LEDs are lit in the following cases:

- When the enable/disable switch is in disabled state (lit by hardware).
- After power-up, before the card is enabled.
- When the ENET port on the card is disabled by software.

Trunk Disable (DIS) LEDs

Two red LEDs which indicate if the “trunk port 0” or “trunk port 1” portions of the card are disabled. These LEDs are lit in the following cases:

- Upon reception of the “disable loop” message from the software.
- After power-up.

OOS LEDs

Two yellow LEDs which indicate if the “trunk port 0” and “trunk port 1” portions of the card are out of service.

NEA LEDs

Two yellow LEDs which indicate if the near end detects absence of incoming signal or loss of synchronization in “trunk port 0” or “trunk port 1” respectively. The Near End Alarm causes a Far End Alarm signal to be transmitted to the far end.

FEA LEDs

Two yellow LEDs which indicate if a Far End Alarm has been reported by the far end (usually in response to a Near End Alarm condition at the far end) on “trunk port 0” or “trunk port 1”.

LBK LEDs

Two yellow LEDs which indicate if a remote loopback test is being performed on trunk port 0 or trunk port 1. The loopback indication is active when the digital trunk is in remote loopback mode. Normal call processing is inhibited during the remote loopback test.

DCH LED

Dual color red/green LED which indicates that the on-board DDCH is present but disabled (red), or is present and enabled (green). If a DDCH is not configured on the DDP2 card, this lamp will not be lit.

Unit 0 Clk Connectors

Two RJ11 connectors for connecting:

- Digital trunk unit 0 recovered clock to primary or secondary reference source on clock controller card 0.
- Digital trunk unit 0 recovered clock to primary or secondary reference source on clock controller card 1.

Unit 1 Clk Connectors

Two RJ11 connectors for connecting:

- Digital trunk unit 1 recovered clock to primary or secondary reference source on clock controller card 0.
- Digital trunk unit 1 recovered clock to primary or secondary reference source on clock controller card 1.

Connector J5 (TRK)

A 9 pin D-Type connector used to connect:

- Digital trunk unit 0 receive and transmit Tip / Ring pairs.
- Digital trunk unit 1 receive and transmit Tip / Ring pairs.

Connector J6 (DCH)

A 26 pin D-type connector (identical to the one used on the NTCK43 dual-port PRI2 card), used to connect the DDP2 card to the external MSDL or D-channel handler.

System capacity and performance

Physical capacity

Each NT5D97 DDP2 card occupies one slot on the network shelf. Each card supports two digital trunk circuits and two network loops. The total number of DDP2 cards per system is limited by the number of network loops, physical capacity of the shelf, number of DTI2/PRI2 interfaces allowed by the software and the range of DCH addresses.

D-Channel capacity

The software configuration for the NTBK51AA DDCH is similar to the MSDL. It is both physical and logical, and supports D-channel functionality only.

Meridian 1 has a total capacity of 16 addresses (Device Addresses or DNUM) that may be reserved for DCH card, MSDL card or DDCH card. One exception is DNUM 0 which is commonly assigned to the TTY terminal.

No two different D-Channel providers can share the same DNUM. Hence, the combined maximum number of DCH, MSDL and DDCH cards in the system is 16.

The DCH has one D-Channel unit, the DDCH has two D-Channel units, and the MSDL has up to four. Therefore the total number of D-Channel in a Meridian 1 is derived by the following formula:

$$\text{Total_Num_DCH-Units} = \text{Num_DCH} \times 1 + \text{Num_DDCH} \times 2 + \text{Num_MSDL} \times 4$$

Therefore, Total_Num_DCH-Units in any given system is between 0-63.

CPU capacity

Using a NT5D97 DDP2 card instead of DTI2/PRI2 cards does not increase the load on the Meridian 1 CPU. The DDP2 replaces an ENET card and two DTI2/PRI2 cards. Emulating the ENET card and the overall CPU capacity is not impacted by using a DDP2 card instead of a DTI2/PRI2 card.

Power requirements

Table 12 lists the power requirements for the NT5D97 DDP2 card.

Table 12
NT5D97 DDP2 power requirements

Voltage	Source	Current	
		DDP2 (without NTBK51AA)	DDP2 (with NTBK51AA)
+5V	Backplane	3A	3.8A
+12V	Backplane	25mA	75mA
-12V	Backplane	25mA	75mA
Total Power (Maximum)		15.6W	20.8W

Testability and diagnostics

The DDP2 card supports testing and maintenance functions through the following procedures:

- Selftest upon power up or reset
- Signalling test performed in the Overlay 30
- Loopback tests, self tests, and continuity tests performed by Overlay 60 and Overlay 45
- The D-Channel (MSDL, DCH, DDCH) maintenance is supported by Overlay 96.

Note: The MSDL selftest is not applicable to the NTBK51AA D-Channel daughterboard.

Cable requirements

This section lists the types of cable used and the lengths required for internal and external NT5D97 DDP2 connections.

Note: No additional cabling is required for nB+D configurations. Multiple DDP2 cards and the D-channel are associated through software in Overlay 17.

DDP2 cable assemblies include:

- E1 carrier cables
 - NTCK45AA (A0407956)
 - NT8D7217 (A0617192)
 - NTCK78AA (A0618294)
 - NTCK79AA (A0618296)
- DDP2 to QPC471/QPC775 Clock Controller Cables
 - NTCG03AA
 - NTCG03AB
 - NTCG03AC
 - NTCG03AD
- DDP2 to DCH cables
 - NTCK46AA
 - NTCK46AB
 - NTCK46AC
 - NTCK46AD
- DDP2 to MSDL cables
 - NTCK80AA
 - NTCK80AB
 - NTCK80AC
 - NTCK80AD

A detailed discussion of each type of DDP2 cable follows.

E1 carrier cables

NTCK45AA (A0407956)

The NTCK45AA (8 ft.) is an 120Ω cable for Meridian 1 systems equipped with an I/O filter panel, connecting the TRK port (P1, D-type 9 pin male) on the DDP2 faceplate to the I/O filter (P2, P3 D-type 9 pin males).

Figure 16
NTCK45AA

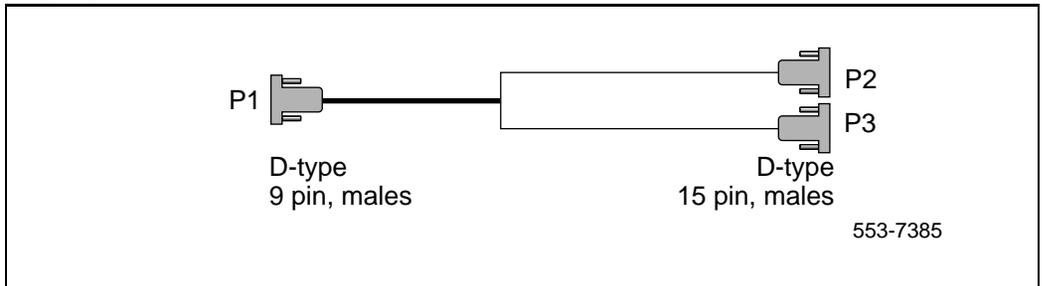


Table 13 which follows lists the pin attributes for the NTCK45AA cable.

Table 13
NTCK45AA cable pins

Cable	Name	Description	Color	DDP2 pins	I/O Panel pins
0	T-PRI0TX	Trunk 0 Transmit Tip	Black	P1-1	P2-6
0	R-PRI0TX	Trunk 0 Transmit Ring	Red	P2-2	P2-7
0	T-PRI0RX	Trunk 0 Receive Tip	Black	P1-3	P2-2
0	R-PRI0RX	Trunk 0 Receive Ring	White	P1-4	P2-3
0		GND Shield Wire	Bare	N/C	Case P2
0		GND Shield Wire	Bare	N/C	Case P2
0		Standard Wire (3")	Bare	Case P2	P2-5
0		Standard Wire (3")	Bare	Case P2	P2-9
1	T-PRI1TX	Trunk 1 Transmit Tip	Black	P1-5	P3-6
1	R-PRI1TX	Trunk 1 Transmit Ring	Red	P1-6	P3-7
1	T-PRI1RX	Trunk 1 Receive Tip	Black	P1-7	P3-2
1	R-PRI1RX	Trunk 1 Receive Ring	White	P1-8	P3-3
1		GND Shield Wire	Bare	N/C	Case P3
1		GND Shield Wire	Bare	N/C	Case P3
1		Standard Wire (3")	Bare	Case P3	P3-5
1		Standard Wire (3")	Bare	Case P3	P3-9

NT8D7217 (A0617192)

The NT8D7217 (50 ft.) is an 120 Ω cable for Meridian 1 systems equipped with an I/O filter panel, connecting the 9 pin I/O filter connector to the 9 pin NCTE connector.

Figure 17
NT8D7217

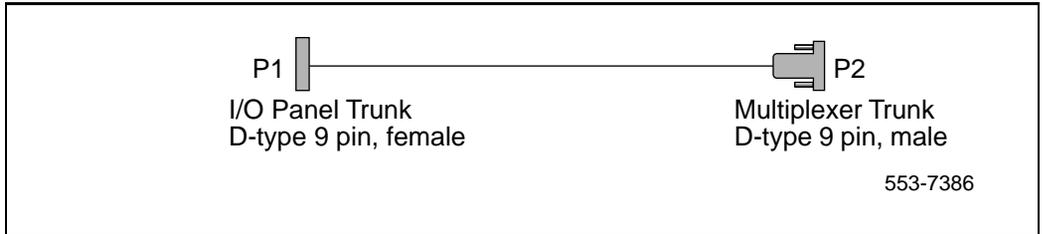


Table 14 which follows lists the pin attributes for the NT8D7217 cable.

Table 14
NT8D7217 cable pins

Cable	Name	Description	Color	DDP2 pins	I/O Panel pins
0	T-PRI0TX	Trunk 0 Transmit Tip	Black	P1-6	P2-6
0	R-PRI0TX	Trunk 0 Transmit Ring	White	P1-7	P2-7
0	T-PRI0RX	Trunk 0 Receive Tip	Black	P1-2	P2-2
0	R-PRI0RX	Trunk 0 Receive Ring	Red	P1-3	P2-3
0		GND Shield Wire	Bare	P1-5	N/C
0		GND Shield Wire	Bare	P1-9	N/C
1	T-PRI1TX	Trunk 1 Transmit Tip	Black	P1-6	P2-6
1	R-PRI1TX	Trunk 1 Transmit Ring	White	P1-7	P2-7
1	T-PRI1RX	Trunk 1 Receive Tip	Black	P1-2	P2-2
1	R-PRI1RX	Trunk 1 Receive Ring	Red	P1-3	P2-3
1		GND Shield Wire	Bare	P1-5	N/C
1		GND Shield Wire	Bare	P1-9	N/C

NTCK78AA (A0618294)

The NTCK78AA (50 ft.) is an 120Ω cable for connecting the TRK port on the DDP2 faceplate (P1, D-type 9 pin male) to the Main Distribution Frame (MDF) (P2, P3 D-type 15 pin males). The NTCK78AA is used for Meridian 1 systems not equipped with an I/O filter panel.

Figure 18
NTCK78AA

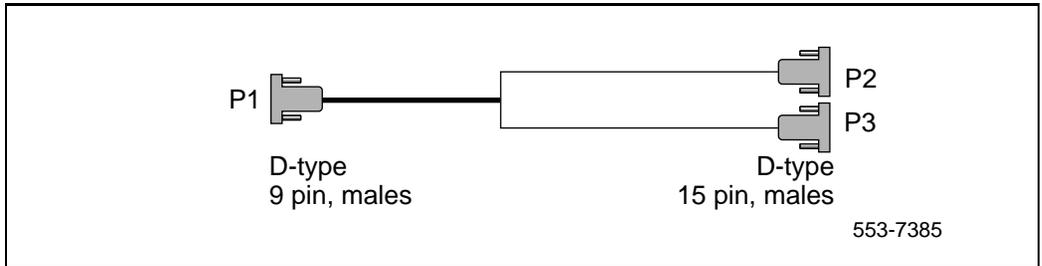


Table 15 which follows lists the pin attributes for the NTCK78AA cable.

Table 15
NTCK78AA cable pins

Cable	Name	Description	Color	DDP2 pins	NCTE pins
0	T-PRI0TX	Trunk 0 Transmit Tip	Black	P1-1	P2-1
0	R-PRI0TX	Trunk 0 Transmit Ring	Red	P1-2	P2-9
0	T-PRI0RX	Trunk 0 Receive Tip	Black	P1-3	P2-3
0	R-PRI0RX	Trunk 0 Receive Ring	White	P1-4	P2-11
0		GND Shield Wire	Bare	P1 Case	P2-2
0		GND Shield Wire	Bare	P1 Case	P2-4
1	T-PRI1TX	Trunk 1 Transmit Tip	Black	P1-5	P3-1
1	R-PRI1TX	Trunk 1 Transmit Ring	Red	P1-6	P3-9
1	T-PRI1RX	Trunk 1 Receive Tip	Black	P1-7	P3-3
1	R-PRI1RX	Trunk 1 Receive Ring	White	P1-8	P3-11
1		GND Shield Wire	Bare	P1 Case	P3-2
1		GND Shield Wire	Bare	P1 Case	P3-4

NTCK79AA (A0618296)

The NTCK79AA (40 ft) is a 75 Ω coaxial cable for connecting the TRK port on the DDP2 faceplate (P1, D-type 9 pin male) to the Line Terminating Unit (LTU) (P2, P3, P4, P5 BNC males).

Figure 19
NTCK79AA

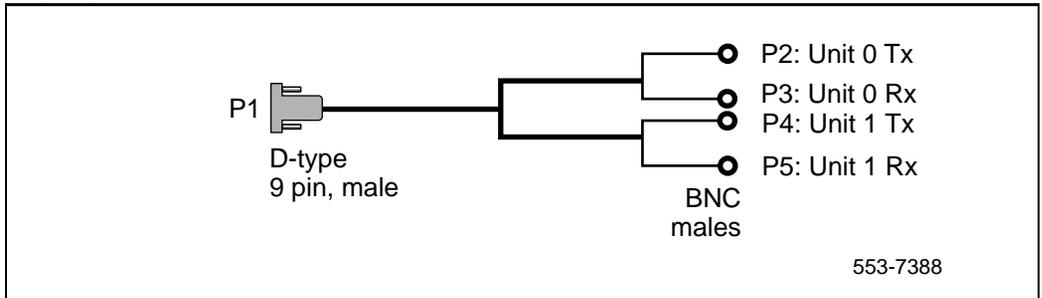


Table 16 which follows lists the pin attributes for the NTCK79AA cable.


Table 16
NTCK79AA cable pins

Cable	Name	Description	Color	DDP2 pins	NCTE pins
0	T-PRI0TX	Trunk 0 Transmit Tip	Red	P1-1	P2 inner conductor
0	R-PRI0TX	Trunk 0 Transmit Ring	Red	P1-2	P2 shield
0	T-PRI0RX	Trunk 0 Receive Tip	Green	P1-3	P3 inner conductor
0	R-PRI0RX	Trunk 0 Receive Ring	Green	P1-4	P3 shield
1	T-PRI1TX	Trunk 1 Transmit Tip	Red	P1-5	P4 inner conductor
1	R-PRI1TX	Trunk 1 Transmit Ring	Red	P1-6	P4 shield
1	T-PRI1RX	Trunk 1 Transmit Tip	Green	P1-7	P5 inner conductor
1	R-PRI1RX	Trunk 1 Receive Ring	Green	P1-8	P5 shield
1		Outer metalized PVC shield	Bare	N/C	P1 Case
1		3 stranded wire	Bare	N/C	P1 Case

Reference clock cables

The NTCG03AA (14 ft), NTCG03AB (2.8 ft), NTCG03AC (4.0 ft), or NTCG03AD (7 ft), is a DDP2 card to Clock Controller cable, connecting each of the CLK0 or CLK1 ports on the DDP2 faceplate to the primary or secondary source ports on Clock Controller card 0 or 1.

Figure 20
NTCG03AA/AB/AC/AD

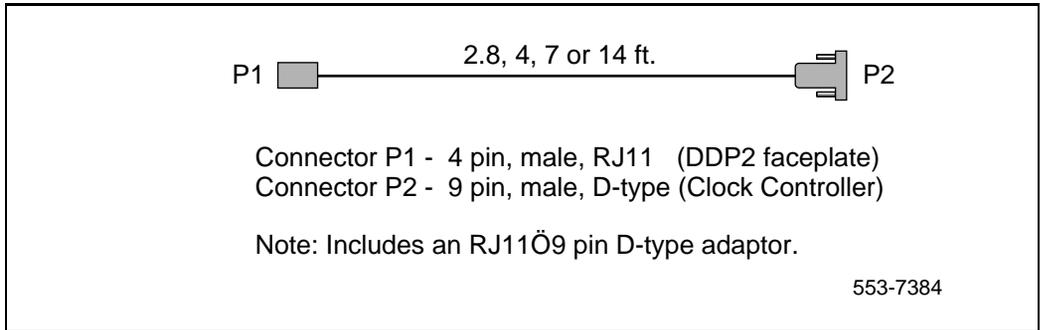


MSDL/DCH cables

External DCH cable

The NTCK46 cable connects the DDP2 card to the NT6D11AF/NT5K75AA/NT5K35AA D-Channel Handler card. The cable is available in four different sizes:

- NTCK46AA (6 ft.) - DDP2 to DCH cable
- NTCK46AB (18 ft.) - DDP2 to DCH cable
- NTCK46AC (35 ft.) - DDP2 to DCH cable
- NTCK46AD (50 ft.) - DDP2 to DCH cable

Figure 21
NTCK46AA/AB/AC/AD

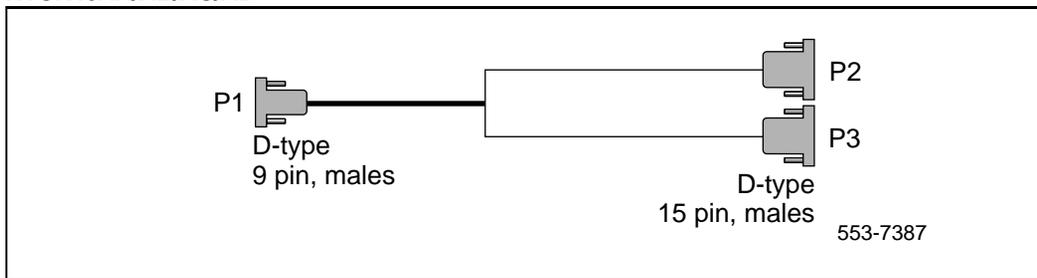


External MSDL cable

The NTCK80 cable connects the DDP2 card to the NT6D80 MSDL card. The cable is available in four different sizes:

- NTCK80AA (6 ft) - DDP2 to MSDL cable
- NTCK80AB (18 ft) - DDP2 to MSDL cable
- NTCK80AC (35 ft) - DDP2 to MSDL cable
- NTCK80AD (50 ft) - DDP2 to MSDL cable

Figure 22
NTCK80AA/AB/AC/AD

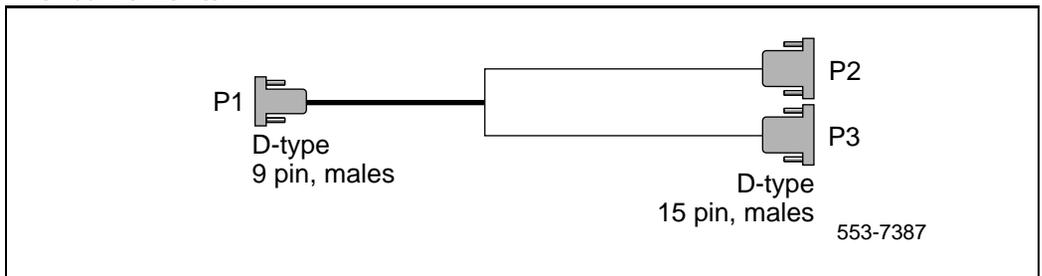

Cable diagrams

Figure 23 and Figure 24 provide examples of typical cabling configurations for the DDP2.

Figure 23 shows a typical DDP2 cabling for a Meridian 1 system Option with an I/O panel, with the connection between the I/O panel and a Network Channel Terminating Equipment (NCTE).

Figure 24 shows cabling for a Meridian 1 system without an I/O panel. Here, the DDP2 faceplate is cabled directly to the NCTE.

Note: Since there exists several clock cabling options, none has been represented in the diagrams. Please refer to “Clock configurations” on page 84 for a description on each available option.

Figure 23
DDP2 cable for Meridian 1 systems with an I/O panel


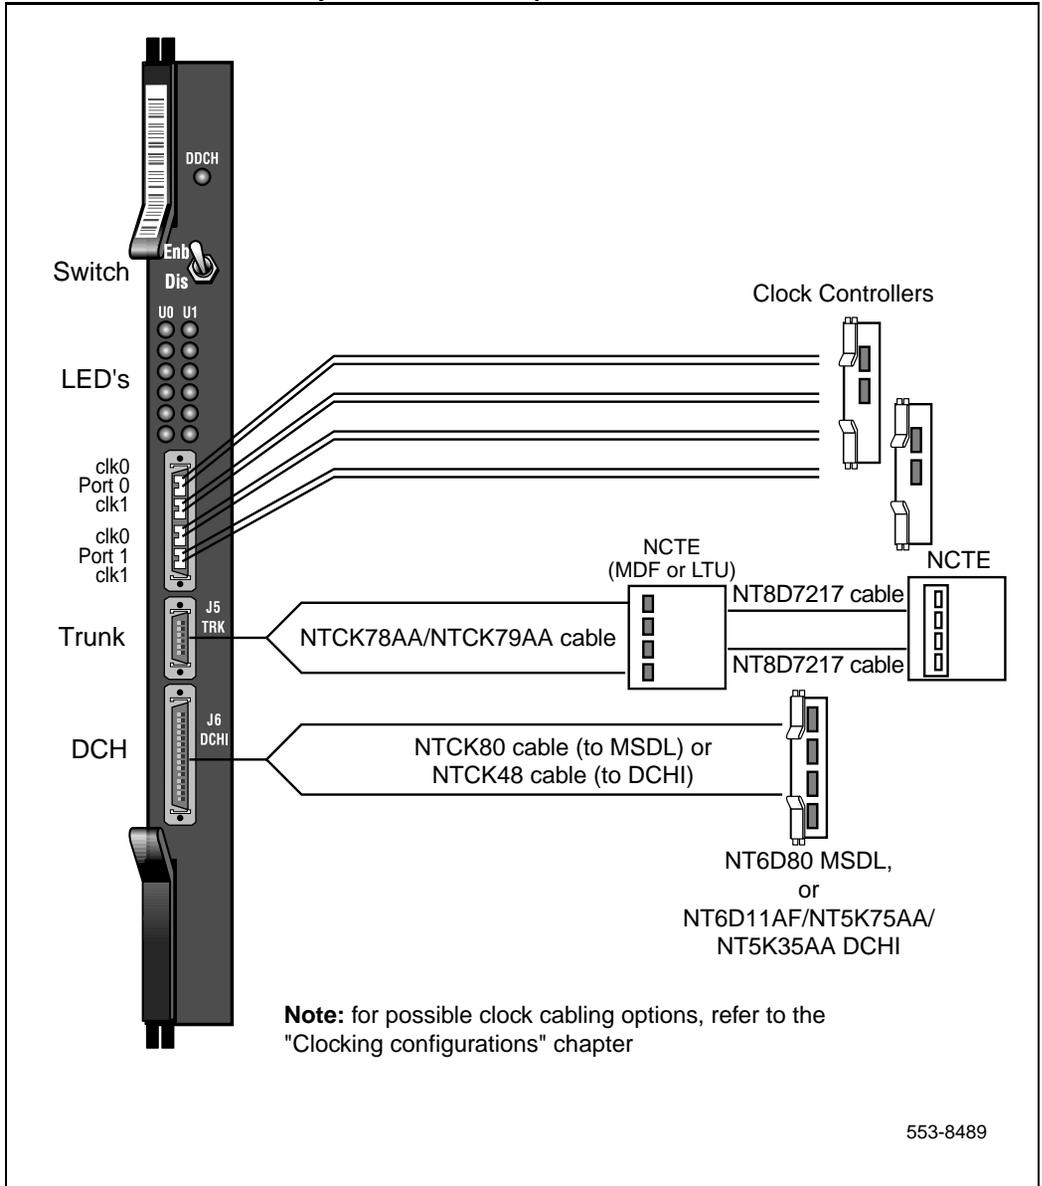


Figure 24
DDP2 cable for Meridian 1 systems without an I/O panel

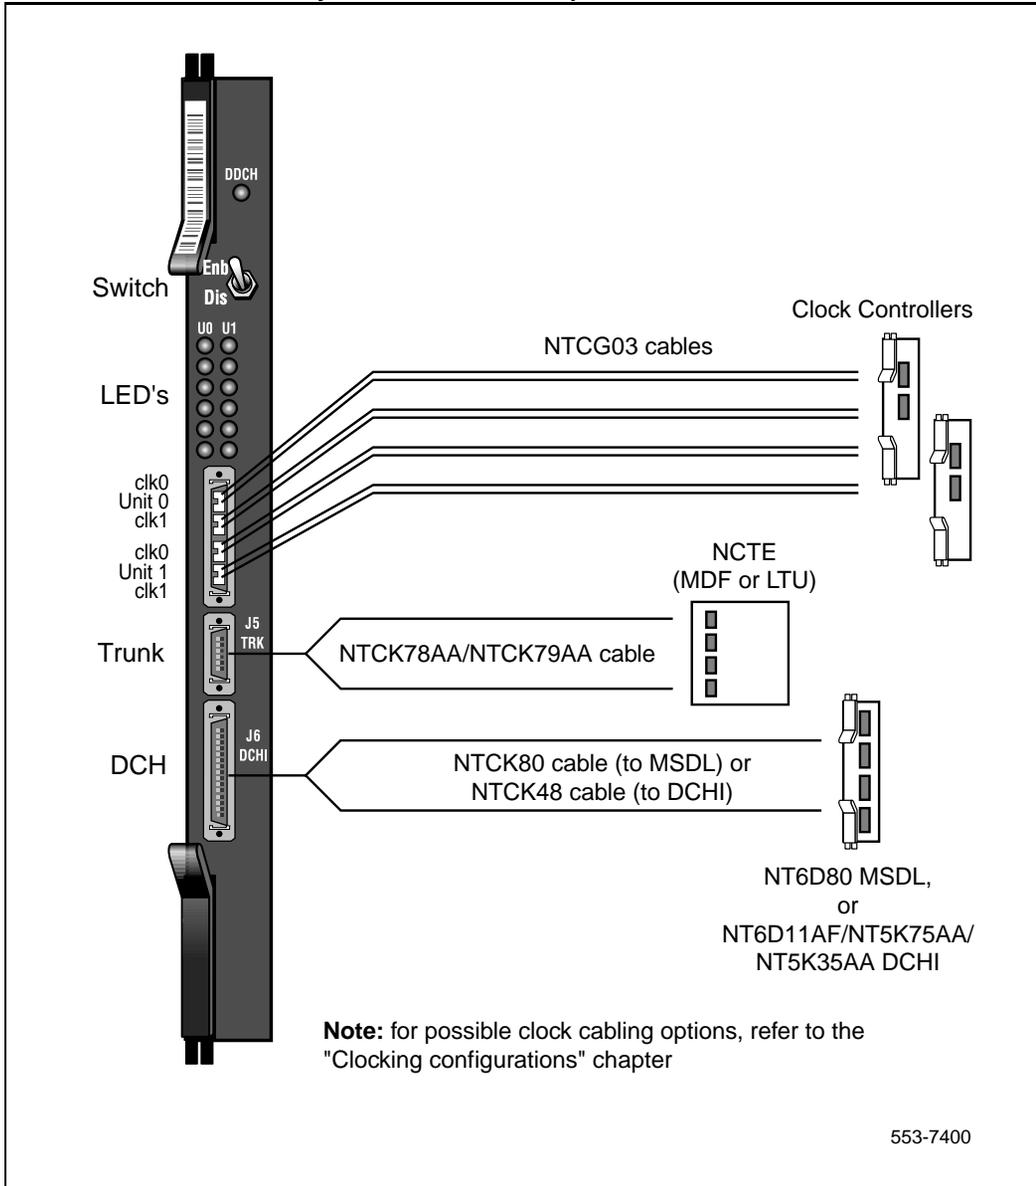

Clock for the NT5D97

Clock operation


There are two types of clock operation - tracking mode and free-run mode.

Tracking mode

In tracking mode, the DDP2 loop supplies an external clock reference to a clock controller. Two DDP2 loops can operate in tracking mode, with one defined as the primary reference source for clock synchronization, the other defined as the secondary reference source. The secondary reference acts as a back-up to the primary reference.

As shown in Figure 25, a Meridian 1 system with dual CPUs may have two clock controllers (CC-0 and CC-1). One clock controller acts as a back-up to the other. The clock controllers should be completely locked to the reference clock.

Figure 25
Clock Controller primary and secondary tracking

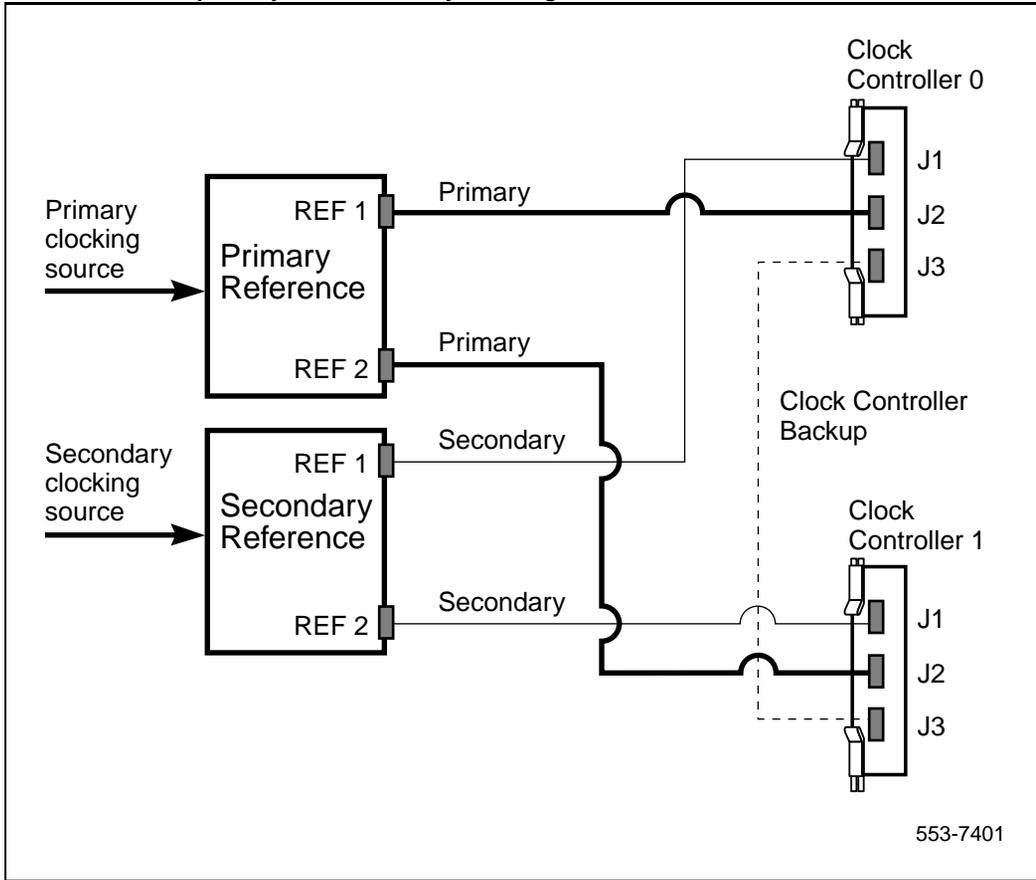

Free run (non-tracking) mode

The clock synchronization of the Meridian 1 may operate in free-run mode if:

- no loop is defined as the primary or secondary clock reference,
- the primary and secondary references are disabled, or
- the primary and secondary references are in local (near end) alarm

Reference clock errors

Meridian 1 software checks at intervals of 1 to 15 minutes to see if a clock controller or reference-clock error has occurred. (The interval of this check can be configured in Overlay 73).

In tracking mode, at any one time, there is one active clock controller which is tracking on one reference clock. If a clock controller error is detected, the Meridian 1 system switches to the back-up clock controller, without affecting which reference clock is being tracked.

A reference-clock error occurs when there is a problem with the clock driver or with the reference clock at the far end. If the clock controller detects a reference-clock error, the reference clocks are switched.

Automatic clock recovery

A command for automatic clock recovery can be selected in Overlay 60 with the command EREF.

A DDP2 loop is disabled when it enters a local-alarm condition. If the local alarm is cleared, the loop is enabled automatically. When the loop is enabled, clock tracking is restored in the following conditions:

- If the loop is assigned as the primary reference clock but the clock controller is tracking on the secondary reference or in free-run mode, it is restored to tracking on primary.
- If the loop is assigned as the secondary reference clock but the clock controller is in free-run mode, it is restored to tracking on secondary.
- If the clock check indicates the switch is in free-run mode:
 - Tracking is restored to the primary reference clock if defined.
 - If the primary reference is disabled or in local alarm, tracking is restored to the secondary reference clock if defined.

Note: If the Meridian 1 was put into free-run mode intentionally by the craftsperson, it will resume tracking on a reference clock unless the clock-switching option has been disabled (LD 60, command MREF), or the reference clock has been “undefined” in the database.

Automatic clock switching

If the EREF command is selected in Overlay 60, tracking on the primary or secondary reference clock is automatically switched in the following manner:

- If software is unable to track on the assigned primary reference clock, it switches to the secondary reference clock and sends appropriate DTC maintenance messages.
- If software is unable to track on the assigned secondary reference clock, it switches to free run.

Clock configurations

Clock Controllers may be used in a single CPU system or a dual CPU system.

A single CPU system has one Clock Controller card. This card can receive reference clocks from two sources referred to as the primary and secondary sources. These two sources can originate from a PRI2, DTI2, etc. PRI2 cards such as the NT8D72BA are capable of supplying two references of the same clock source. These are known as Ref1 (available at J1) and Ref2 (available at J2) on the NT8D72BA.

The NT5D97 card is capable of supplying two references from each clock source, i.e., four references in total. NT5D97 can supply Clk0 and Clk1 from Unit 0 and Clk0 and Clk1 from Unit 1. Either Unit 0 or Unit 1 can originate primary source, as shown in Figure 26 through Figure 29.

There is one Clock Controller cable required for the DDP2 card, which is available in four sizes; this is the NTCG03AA/AB/AC/AD. Refer to “Reference clock cables” on page 75 for more information.

Table 17 summarizes the clocking options. Table 18 explains the options in more detail.

Table 17
Clock Controller options - summary

CC Option	CPU Type	Notes
Option 1	Single	Ref from P0 on Clk0 Ref from P1 on Clk0
Option 2	Dual	Ref from P0 on Clk0 Ref from P0 on Clk1
Option 3	Dual	Ref from P1 on Clk0 Ref from P1 on Clk1
Option 4	Dual	Ref from P0 on Clk0 Ref from P0 on Clk1 Ref from P1 on Clk0 Ref from P1 on Clk1

Table 18
Clock Controller options - description

Clock Option	Notes
Option 1	<p>This option provides a single CPU system with 2 clock sources derived from the 2 ports of the DDP2.</p> <p>Connector Clk0 provides a clock source from Unit 0.</p> <p>Connector Clk1 provides a clock source from Unit 1.</p> <p>Refer to Figure 26.</p>
Option 2	<p>This option provides a Dual CPU system with 2 references of a clock source derived from port 0 of the DDP2.</p> <p>Connector Clk0 provides a Ref 1 clock source from Unit 0.</p> <p>Connector Clk1 provides a Ref 2 clock source from Unit 0.</p> <p>Refer to Figure 27.</p>
Option 3	<p>This option provides a Dual CPU system with 2 references of a clock source derived from port 1 of the DDP2.</p> <p>Connector Clk0 provides a Ref 1 clock source from Unit 1.</p> <p>Connector Clk1 provides a Ref 2 clock source from Unit 1.</p> <p>Refer to Figure 28.</p>
Option 4	<p>This option provides a Dual CPU system with 2 references from each clock source derived from the DDP2.</p> <p>Connector Clk0 provides a Ref 1 clock source from Unit 0.</p> <p>Connector Clk1 provides a Ref 2 clock source from Unit 0.</p> <p>Connector Clk2 provides a Ref 1 clock source from Unit 1.</p> <p>Connector Clk3 provides a Ref 2 clock source from Unit 1.</p> <p>Refer to Figure 29.</p>

Figure 26
Clock Controller - Option 1

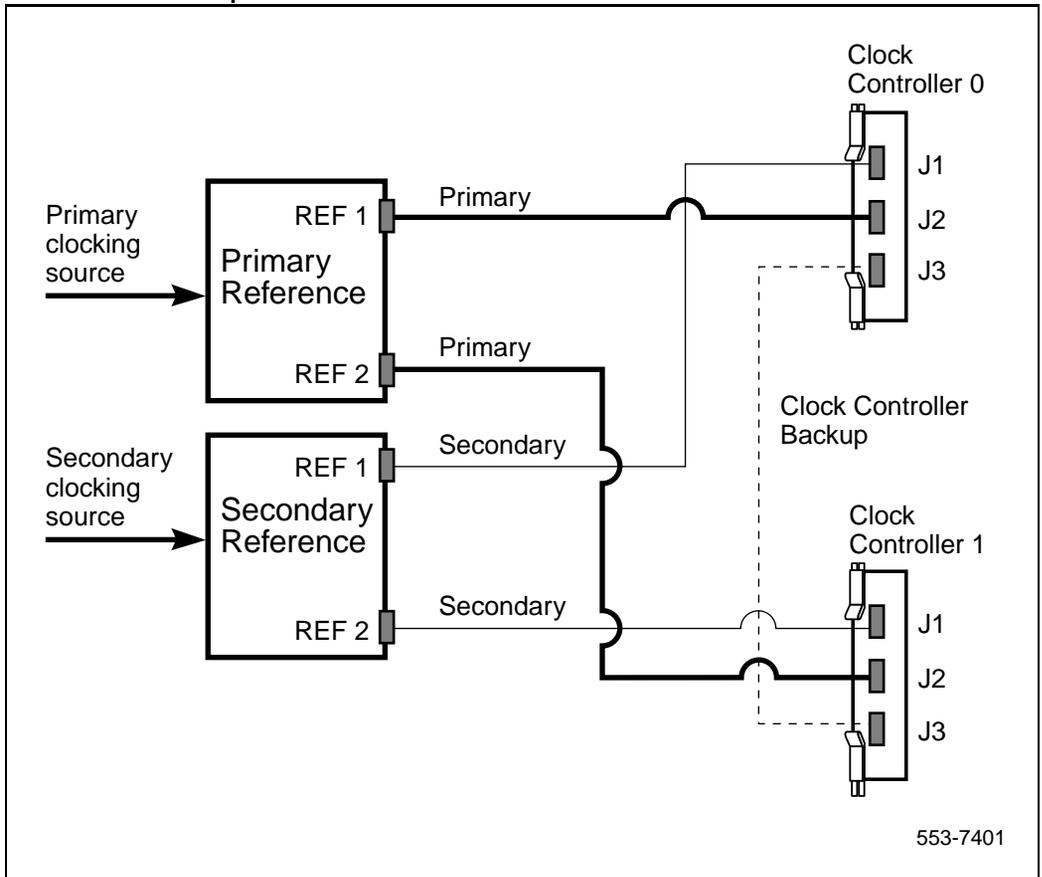


Figure 27
Clock Controller - Option 2

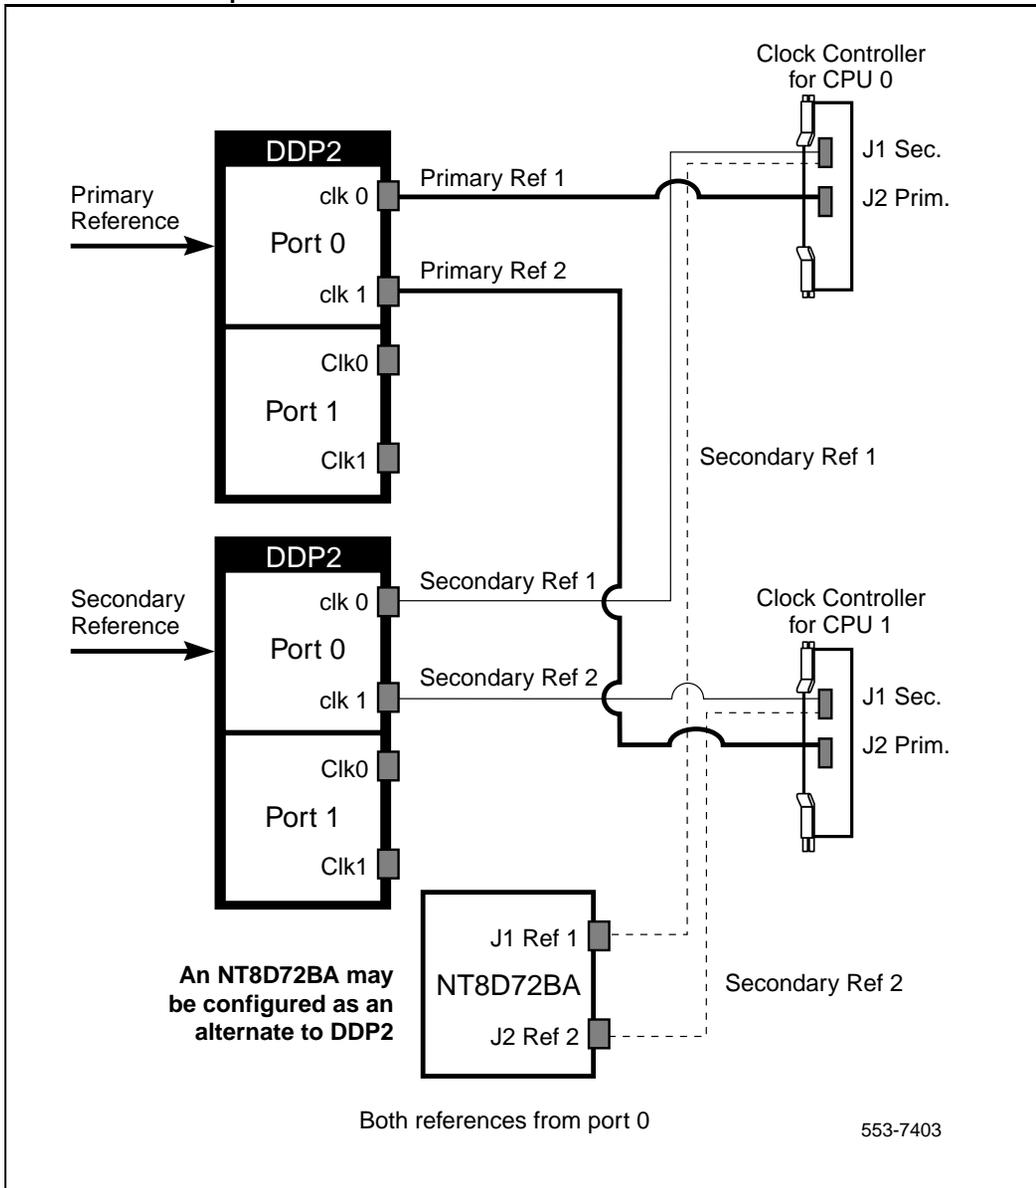


Figure 28
Clock Controller - Option 3


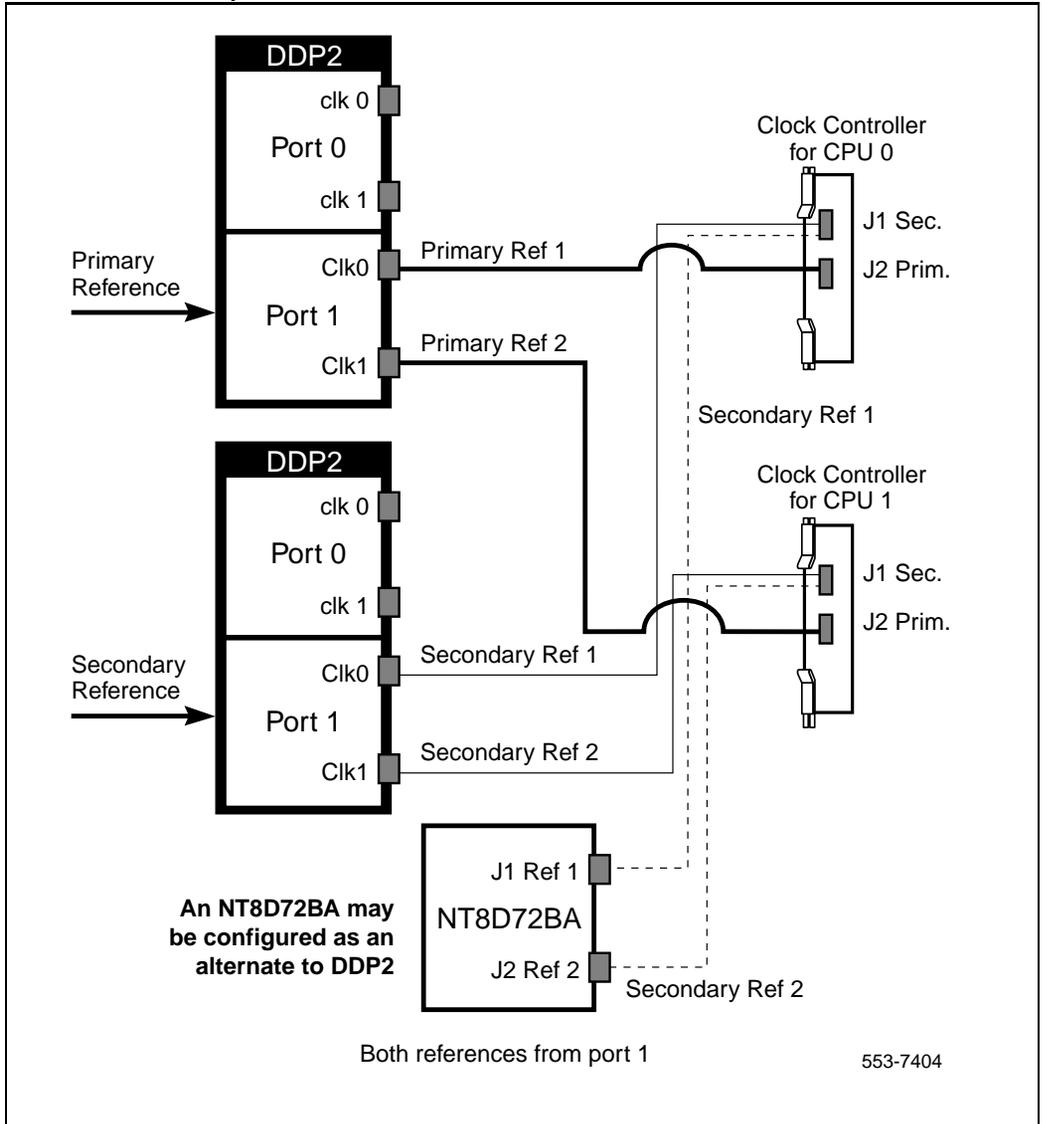


Figure 29
Clock Controller - Option 4

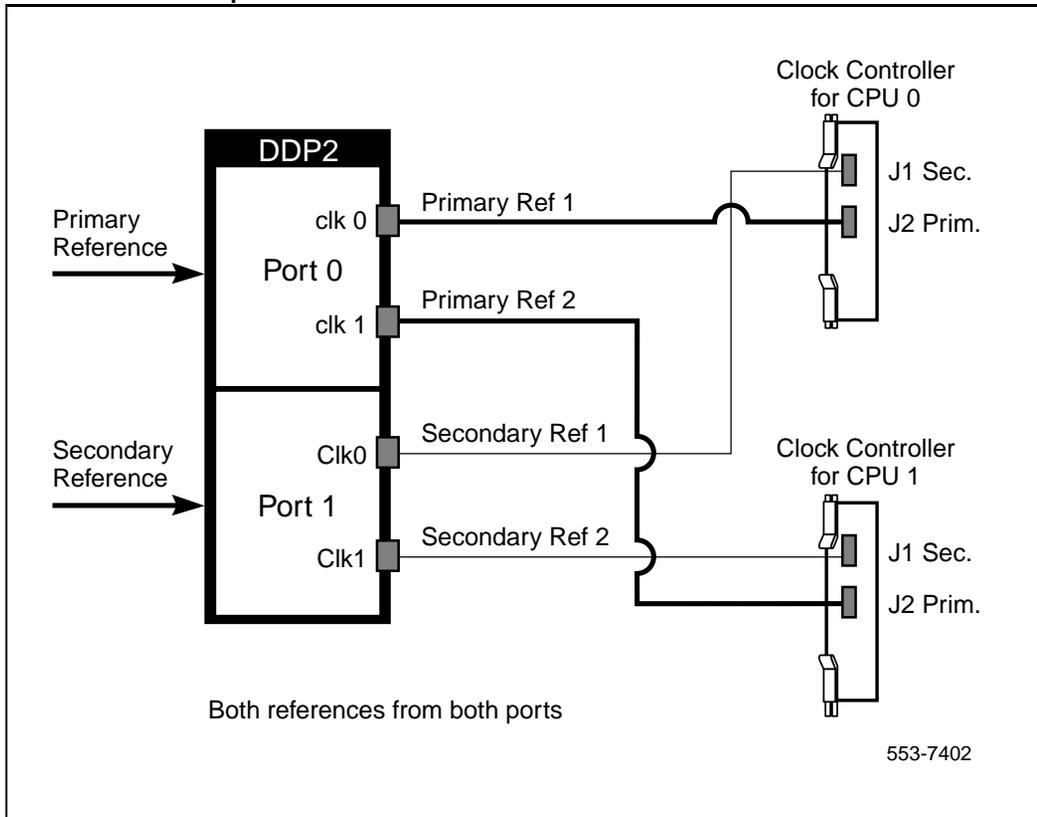

NT5D12 Dual-port DTI/PRI

The NT5D12 is a dual-port 1.5 DTI/PRI card (the DDP firmware functions in DTI or PRI mode) integrating the functionality of two QPC472 DTI/QPC720 PRI cards and one QPC414 ENET into one card. The NT5D12 occupies a single Network shelf slot and provides two DTI/PRI network connections, an optional connection to an external D-Channel Handler, the QPC757 D-Channel Handler Interface (DCHI) or NT6D80 Multi-purpose Serial Data Link (MSDL), and an optional plug-on NTBK51AA Downloadable D-Channel daughterboard (DDCH.)

The NT5D12 DDP card supports all features (except the echo canceller and protocol conversion) of the QPC720. In addition, it maintains the backward compatibility of QPC720.

The NT5D12 DDP card hardware design uses a B57 ASIC E1/T1 framer. The carrier specifications comply with the ANSI T1.403 specification. The NT5D12 provides an interface to the 1.5 Mb external digital line either directly or through an office repeater, Line Terminating Unit (LTU), or Channel Service Unit (CSU).

D-Channel and MSDL interface

The connection between the DDP card and the DCHI or MSDL is via a 26 pin female D type connector. The data signals conform to the electrical characteristics of the EIA standard RS-422.

Two control signals are used to communicate the D-Channel link status to the DCHI or MSDL. These are:

- Receiver Ready (RR), originating at the DDP card, to indicate to the DCHI or MSDL that the D-channel link is operational.
- Transmitter Ready (TR), originating at the DCHI or MSDL, to indicate to the DDP card that the DCHI or MSDL are ready to use the D-Channel link.

Table 19 indicates how the RR control signal operates with regard to the DDP status.

Table 19
DCHI/MSDL Receiver Ready control signals

RR State	Condition
ON	D-Channel data rate selected at 64 Kbps or 56 Kbps or 64 Kbps inverted <i>and</i> PRI loop is enabled <i>and</i> PRI link is not in RED alarm mode state <i>and</i> PRI link is not transmitting a yellow alarm pattern <i>and</i> PRI link is not receiving a Remote Alarm Indication from the remote facility <i>and</i> PRI link is not in FA3 mode <i>and</i> Transmitter Ready (TR) control signal from the DCHI/MSDL is ON
OFF	All other conditions

NT5D12 faceplate

Figure 30 and Figure 31 illustrate the faceplate layout for the NT5D12 DDP card. The faceplate contains an enable/disable switch; a DDCH status LED; 6 x 2 trunk port status LEDs; and six external connectors. Table 11 shows the name of each connector, its designation with respect to the faceplate and the name and description of the card it is connected to. Also shown are the names of the LEDs.

Figure 30
NT5D12 faceplate - general view

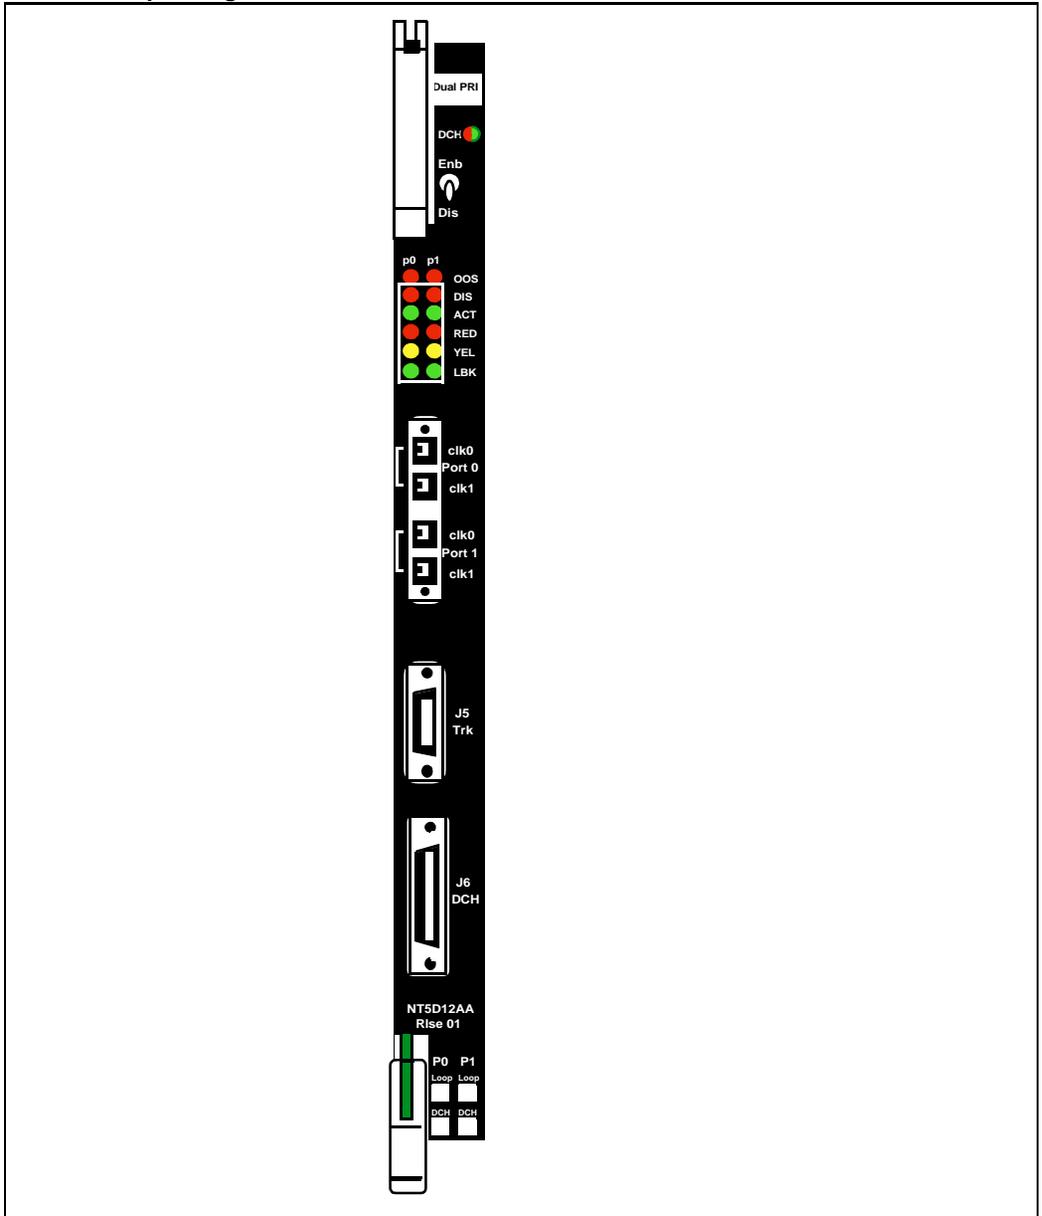


Figure 31
DDP faceplate - detailed view

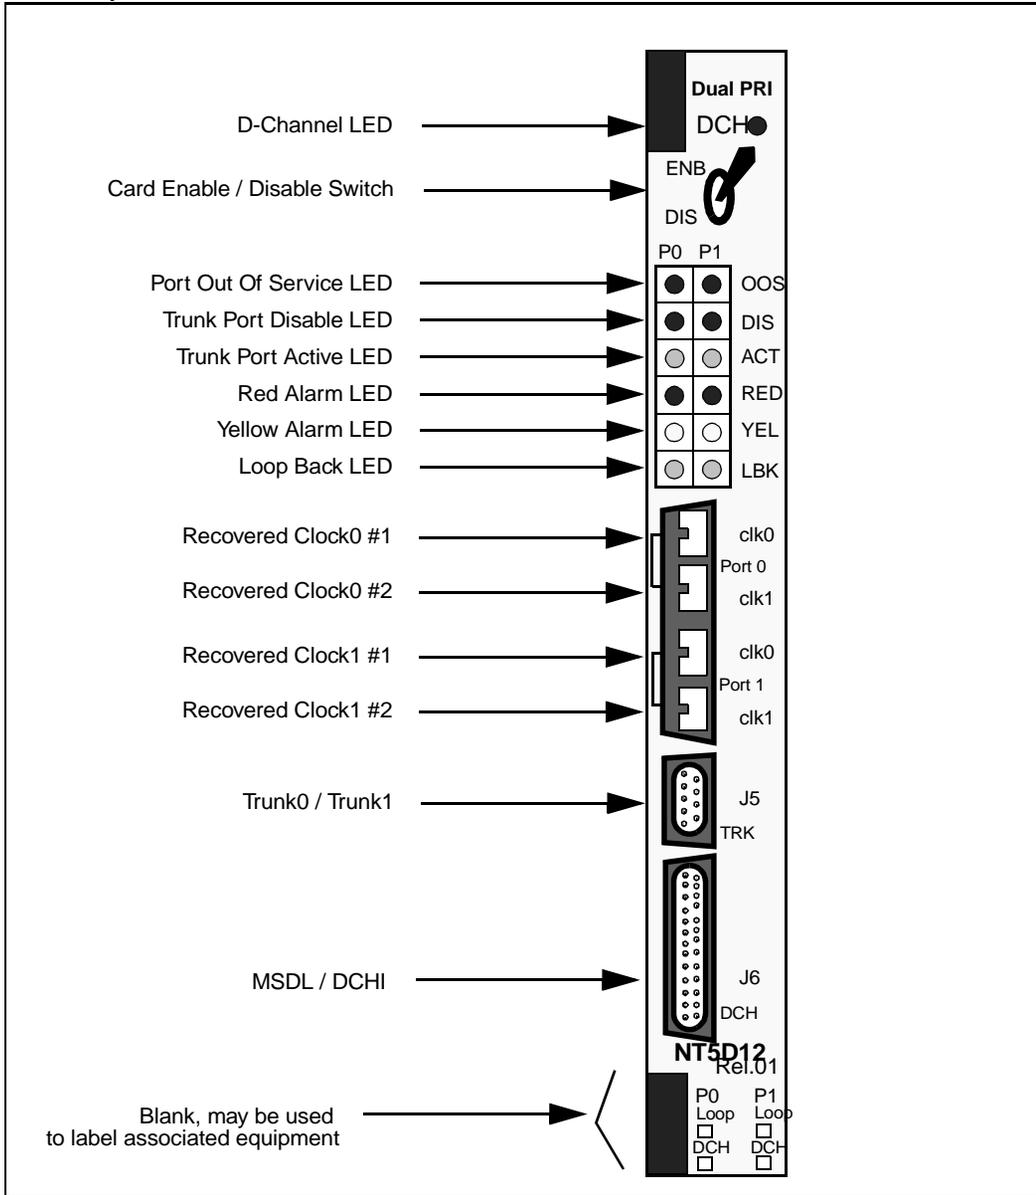


Table 20
External connectors and LEDs

Function	Faceplate Designator	Type	Description
Switch	ENB/DIS	Plastic, ESD protected	Card Enable/disable switch
Connectors	Port 0 Clock 0	RJ11 Connector	Connects reference clock to Clock Controller card
	Port 0 Clock 1	RJ11 Connector	Connects reference clock to Clock Controller card
	Port 1 Clock 0	RJ11 Connector	Connects reference clock to Clock Controller card
	Port 1 Clock 1	RJ11 Connector	Connects reference clock to Clock Controller card
	J5 TRK	9 Pin Female D Connector	Two external DS-1 Trunk 0 and Trunk 1
	J6 DCH	26 Pin Female D Connector	Connects to DCHI or MSDL
LEDs	OOS	2 Red LEDs	ENET 0 or ENET 1 disabled
	DIS	2 Red LEDs	Trunk 0 or Trunk 1 disabled
	ACT	2 Green LEDs	Trunk 0 or Trunk 1 lines active
	RED	2 Red LEDs	Red Alarm on Trunk 0 or Trunk 1
	YEL	2 Yellow LEDs	Yellow Alarm on Trunk 0 or Trunk 1
	LBK	2 Green LEDs	Loop Back test being performed on Trunk 0 or Trunk 1
	DCH	Bicolor Red/Green LED	NTBK51AA status

The following is a brief description of each element on the faceplate:

Enable/Disable Switch

This switch is used to disable the card prior to insertion or removal from the network shelf; while this switch is in disable position, the card will not respond to Meridian-1 CPU.

Port Out of Service LEDs

Two red LEDs which indicate if the “ENET0” and “ENET1” portion of the card are disabled. These LEDs are lit in the following cases:

- When the enable/disable switch is in state *disable* (lit by hardware)
- After power-up, before the card is enabled
- When the ENET port on the card is disabled by software.

Trunk Port Disable LEDs

Two red LEDs indicate if the “trunk port 0” and “trunk port 1” portion of the card are disabled. These LEDs are turned on in the following cases:

- When the enable/disable switch is in state *disable* (lit by hardware).
- After power-up, before the card is enabled.
- When digital trunk interface on the card is deactivated by software.

ACT LEDs

Two green LEDs indicate if the “trunk port 0” and “trunk port 1” portion of the card is active.

RED LEDs

Two red LEDs indicate if the near end detects absence of incoming signal or loss of synchronization in “trunk port 0” or “trunk port 1” respectively. The Near End Alarm causes a Far End Alarm signal to be transmitted to the far end.

YEL LEDs

Two yellow LEDs which indicate if Far End Alarm has been reported by the far end (usually in response to a Near End Alarm condition at the far end) on “trunk port 0” or “trunk port 1”.

LBK LEDs

Two green LEDs indicate the remote loopback test is being performed on trunk port 0 or trunk port 1. The loopback indication is active when the digital trunk is in remote loopback mode (T1 signals received from the far end are regenerated and transmitted to the far end.) Normal call processing is inhibited during remote loopback test.

DCH LED

A dual color red/green LED indicates that the on-board DDCH is present but disabled (red), or is present and enabled (green). If a DDCH is not configured on the DDP card, this lamp will not be lit.

Port 0 Clk Connectors

Two RJ11 connectors for connecting:

- Digital trunk port 0 recovered clock to primary or secondary reference source on clock controller card 0.
- Digital trunk port 0 recovered clock to primary or secondary reference source on clock controller card 1.

Port 1 Clk Connectors

Two RJ11 connectors for connecting:

- Digital trunk port 1 recovered clock to primary or secondary reference source on clock controller card 0.
- Digital trunk port 1 recovered clock to primary or secondary reference source on clock controller card 1.

Connector J5 (TRK)

A 9 pin D-Type connector used to connect:

- Digital trunk port 0 receive and transmit Tip / Ring pairs.
- Digital trunk port 1 receive and transmit Tip / Ring pairs.

Connector J6 (DCH)

A 26 pin D-type connector, used to connect the DDP card to MSDL or QPC757 external D-channel handlers.

System capacity and performance

Physical capacity

Each DDP card occupies one slot on the network shelf. It supports two digital trunk circuits and two network loops. The total number of DDP cards per system is limited by the number of network loops, physical capacity of the shelf, number of DTI/PRI interfaces allowed by the software and the range of DCH addresses.

D-Channel capacity

The software configuration for the NTBK51AA DDCH is similar to the MSDL. It is both physical and logical, and supports D-Channel functionality only.

Meridian 1 has a total capacity of 16 addresses (Device Addresses or DNUM) that may be reserved for DCHI card, MSDL card or DDCH card. One exception is DNUM 0 which is commonly assigned to the System Monitor.

No two different D-Channel providers can share the same DNUM. Hence, the combined maximum number of DCHI, MSDL and DDCH cards in the system is 16.

The DCHI and DDCH have two D-Channel units, the MSDL has four. Therefore the total number of D-Channels in a Meridian 1 is derived by the following formula:

$$\text{Total_Num_DCH-Units} = \text{Num_DCHI} \times 2 + \text{Num_DDCH} \times 2 + \text{Num_MSDL} \times 4$$

Therefore, Total_Num_DCH-Units in any given system is between 0-63.

CPU capacity

Using a NT512 DDP card instead of DTI/PRI cards does not increase the load on the Meridian 1 CPU. The DDP replaces an ENET card and two DTI/PRI cards, it emulates the ENET card and the overall CPU capacity is not impacted by usage of DDP card instead of a DTI/PRI card.

Power requirements

Table 21 lists the power requirements for the DDP card.

Table 21
DDP power requirements

Voltage	Source	Current	
		DDP (without NTBK51AA)	DDP (with NTBK51AA)
+5V	Backplane	3A	3.8A
+12V	Backplane	25mA	75mA
-12V	Backplane	25mA	75mA
Total Power (Maximum)		15.6W	20.8W

Testability and diagnostics

The DDP card supports all current QPC720 testing and maintenance functions through the following procedures:

- Selftest upon power up or reset;
- Signalling test performed in the Overlay 30;
- Loopback tests, self tests, and continuity tests performed by Overlay 60 and Overlay 45;
- The D-Channel (MSDL, DCHI, DDCH) maintenance is supported by Overlay 96.

NT5D12 Cable requirements

This section lists the types of cable used and the lengths required for internal and external NT5D12 DDP connections.

Note 1: No additional cabling is required for nB+D configurations. Multiple DDPs and the D-channel are associated through software in Overlay 17.

Note 2: A detailed discussion of each type of DDP cable listed below will follow.

New DDP cable assemblies include:

- Meridian 1 Trunk Tip/Ring Cables
 - NT5D16AA
 - NT5D17AA
 - QCAD133
- DDP to QPC471/QPC775 Clock Controller Cables
 - NTCG03AA
 - NTCG03AB
 - NTCG03AC
 - NTCG03AD
- DDP to DCHI cables
 - NTCK46AA
 - NTCK46AB
 - NTCK46AC
 - NTCK46AD
- DDP to MSDL cables
 - NTCK80AA
 - NTCK80AB

- NTCK80AC
- NTCK80AD

Trunk Tip/Ring cables

NT5D16AA

The NT5D16AA (8 ft.) is a 100 Ω cable for Meridian 1 systems equipped with an I/O filter panel, connecting the 9 pin D-type TRK port on the DDP faceplate to the I/O filter.

Note: On the I/O panel side, this cable is equipped with a monitor bantam plug and a 15 pin D-type trunk connector mounted on a small PCB. There are no bantam plugs on the DDP faceplate.

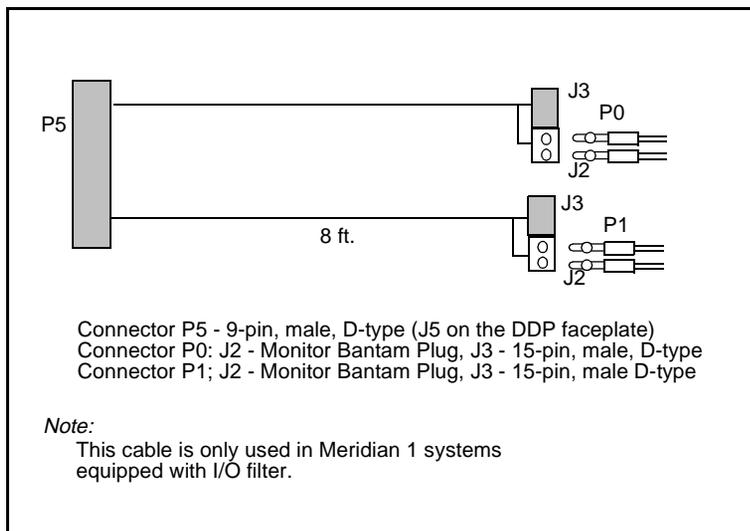



Table 22 which follows lists the pin attributes for the NT5D16AA cable.

Table 22
NT5D16AA cable pins

Cable	Name	Description	Color	DDP pins (J5)	I/O Panel pins (J2, J3)
0	T-PRI0TX	Trunk 0 Transmit Tip	Black	J5-1	P0J3-1 P0J2-3
0	R-PRI0TX	Trunk 0 Transmit Ring	Red	J5-2	P0J3-9 P0J2-9
0	T-PRI0RX	Trunk 0 Receive Tip	Black	J5-3	P0J3-3 P0J2-4
0	R-PRI0RX	Trunk 0 Receive Ring	White	J5-4	P0J3-11 P0J2-10
0		GND Shield Wire	Bare	N/C	Case P0
0		GND Shield Wire	Bare	N/C	Case P0
1	T-PRI1TX	Trunk 1 Transmit Tip	Black	J5-5	P1J3-1 P1J2-3
1	R-PRI1TX	Trunk 1 Transmit Ring	Red	J5-6	P1J3-9 P1J2-9
1	T-PRI1RX	Trunk 1 Receive Tip	Black	J5-7	P1J3-3 P1J2-4
1	R-PRI1RX	Trunk 1 Receive Ring	White	J5-8	P1J3-11 P1J2-10
1		GND Shield Wire	Bare	N/C	Case P1
1		GND Shield Wire	Bare	N/C	Case P1

Reference clock cables

The NTCG03AA (14 ft.), NTCG03AB (2.8 ft.), NTCG03AC (4.0 ft.), or NTCG03AD (7 ft.) is a DDP card to Clock Controller cable, connecting each of the CLK0 or CLK1 ports on the DDP faceplate to the primary or secondary source ports on Clock Controller card 0 or 1.

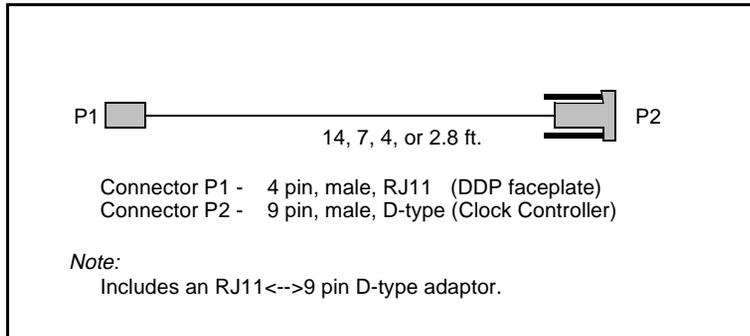


MSDL/DCHI cables

External DCHI cable

The NTCK46 cable connects the DDP card to the QPC757 DCHI D-Channel Handler card. The cable is available in four different sizes:


- NTCK46AA (6 ft.) - DDP to DCHI cable
- NTCK46AB (18 ft.) - DDP to DCHI cable
- NTCK46AC (35 ft.) - DDP to DCHI cable
- NTCK46AD (50 ft.) - DDP to DCHI cable

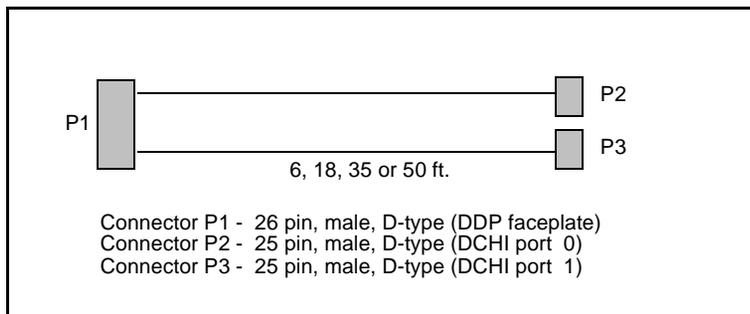

External MSDL cable

The NTCK80 cable connects the DDP card to the NT6D80 MSDL card. The cable is available in four different sizes:

- NTCK80AA (6 ft.) - DDP to MSDL cable
- NTCK80AB (18 ft.) - DDP to MSDL cable
- NTCK80AC (35 ft.) - DDP to MSDL cable
- NTCK80AD (50 ft.) - DDP to MSDL cable

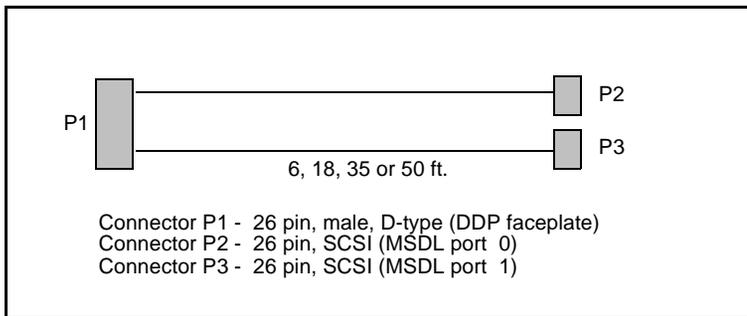


Cable diagrams

Figure 32 provides an example of a typical cabling configuration for the DDP. Please note that these figures are representational only, and are not intended to show the relational card slot position of the various cards.

Figure 32 shows a typical DDP cabling for a Meridian 1 system Option with an I/O panel, with the connection between the I/O panel and a Network Channel Terminating Equipment (NCTE).

Note: Since there exists several clock cabling options, none has been represented in the diagram. Please refer to “Clock configurations” on page 109 for a description on each available option.

Figure 32
DDP cable for Meridian 1 systems with an I/O panel

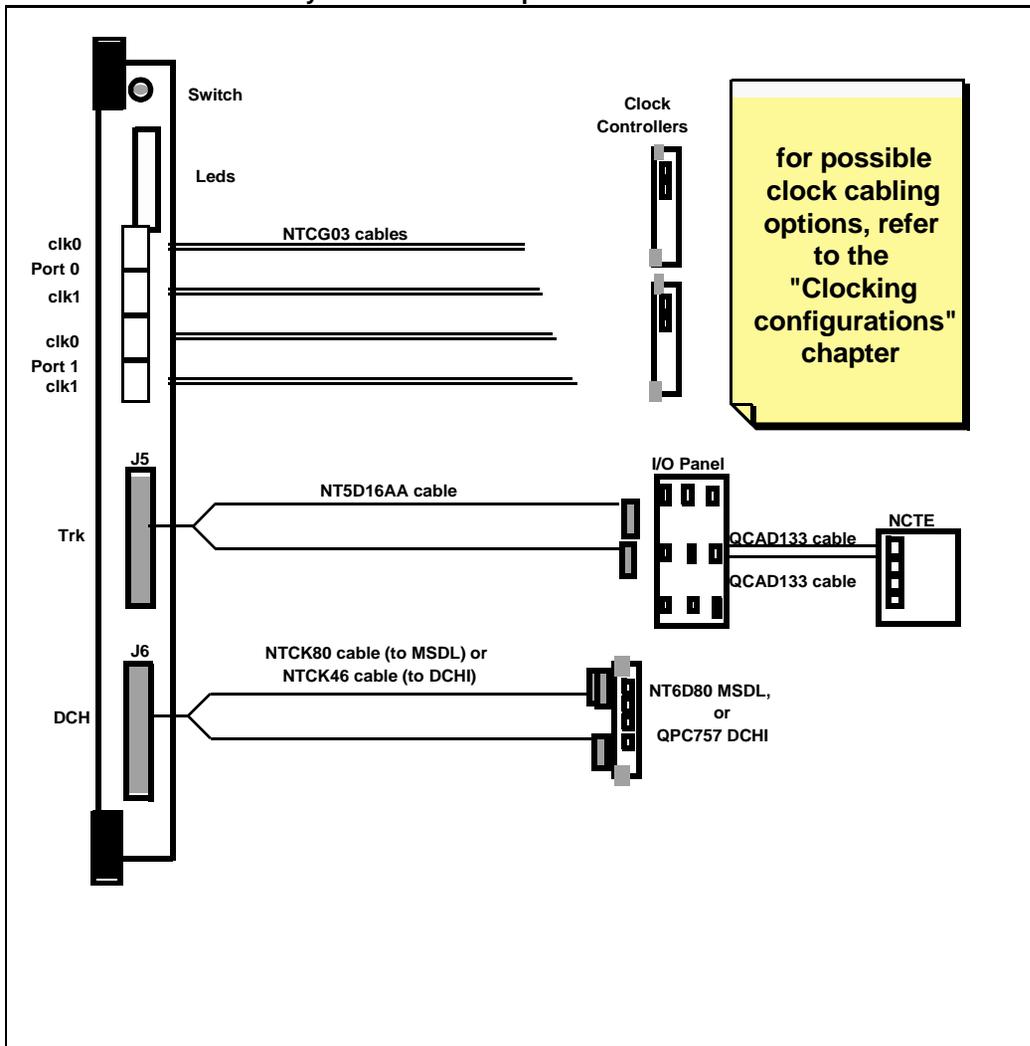

Clock


There are two types of clock operation - tracking mode and free-run mode.

Tracking mode

In tracking mode, the DDP loop supplies an external clock reference to a clock controller. Two DDP loops can operate in tracking mode, with one defined as the primary reference source for clock synchronization, the other defined as the secondary reference source. The secondary reference acts as a back-up to the primary reference.

As shown in Figure 33, a Meridian 1 system with dual CPUs may have two clock controllers (CC-0 and CC-1). One clock controller acts as a back-up to the other. The clock controllers should be completely locked to the reference clock.

Figure 33
Clock Controller primary and secondary tracking

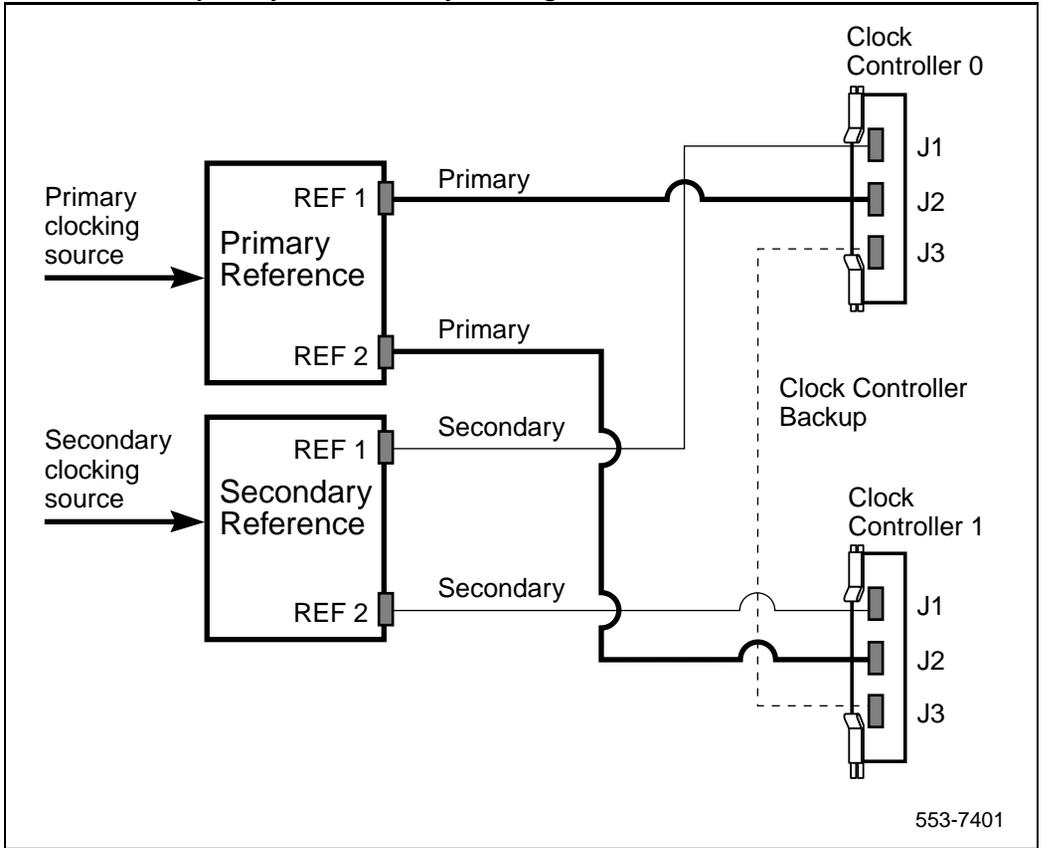

Free run (non-tracking) mode

The clock synchronization of the Meridian 1 may operate in free-run mode if:

- no loop is defined as the primary or secondary clock reference,
- the primary and secondary references are disabled, or
- the primary and secondary references are in local (near end) alarm.

Reference clock errors

Meridian 1 software checks at intervals of 1 to 15 minutes to see if a clock controller or reference-clock error has occurred. (The interval of this check can be configured in Overlay 73.)

In tracking mode, at any one time, there is one active clock controller which is tracking on one reference clock. If a clock controller error is detected, the Meridian 1 system switches to the back-up clock controller, without affecting which reference clock is being tracked.

A reference-clock error occurs when there is a problem with the clock driver or with the reference clock at the far end. If the clock controller detects a reference-clock error, the reference clocks are switched.

Automatic clock recovery

A command for automatic clock recovery can be selected in Overlay 60 with the command EREF.

A DDP loop is disabled when it enters a local-alarm condition. If the local alarm is cleared, the loop is enabled automatically. When the loop is enabled, clock tracking is restored in the following conditions:

- If the loop is assigned as the primary reference clock but the clock controller is tracking on the secondary reference or in free-run mode, it is restored to tracking on primary.
- If the loop is assigned as the secondary reference clock but the clock controller is in free-run mode, it is restored to tracking on secondary.
- If the clock check indicates the switch is in free-run mode:
 - Tracking is restored to the primary reference clock if defined.

- If the primary reference is disabled or in local alarm, tracking is restored to the secondary reference clock if defined.

Note: If the Meridian 1 was put into free-run mode intentionally by the craftsman, it will resume tracking on a reference clock unless the clock-switching option has been disabled (LD 60, command MREF), or the reference clock has been “undefined” in the database.

Automatic clock switching

If the EREF command is selected in Overlay 60, tracking on the primary or secondary reference clock is automatically switched in the following manner:

- If software is unable to track on the assigned primary reference clock, it switches to the secondary reference clock and sends appropriate DTC maintenance messages.
- If software is unable to track on the assigned secondary reference clock, it switches to free run.

Clock configurations

Clock Controllers may be used in a single CPU system or a dual CPU system.

A single CPU system has one Clock Controller card. This card can receive references clocks from two sources referred to as the primary and secondary sources. These two sources can originate from a PRI, DTI, etc. PRI cards such as the QPC720 are capable of supplying two references of the same clock source. These are known as Ref1 (available at J1) and Ref2 (available at J2) on the QPC720.

The NT5D12 card is capable of supplying two references from each clock source, i.e., four references in total. NT5D12 can thus supply Clk0 and Clk1 from Port 0 and Clk0 and Clk1 from Port 1. Either Port 0 or Port 1 can originate the primary source, as shown in Figure 34 through Figure 37.

There is one new Clock Controller cable required for the new DDP card, which is available in four sizes; this is the NTCG03AA/AB/AC/AD. Refer to “Reference clock cables” on page 103 for more information.

Table 23 summarizes the clock options. Table 24 explains the options in more detail.

Table 23
Clock Controller options- summary

CC Option	CPU Type	Notes
Option 1	Single	Ref from P0 on Clk0 Ref from P1 on Clk0
Option 2	Dual	Ref from P0 on Clk0 Ref from P0 on Clk1
Option 3	Dual	Ref from P1 on Clk0 Ref from P1 on Clk1
Option 4	Dual	Ref from P0 on Clk0 Ref from P0 on Clk1 Ref from P1 on Clk0 Ref from P1 on Clk1

Table 24
Clock Controller options - description

Clock Option	Notes
Option 1	This option provides a single CPU system with 2 clock sources derived from the 2 ports of the DDP. Connector Clk0 provides a clock source from Port 0. Connector Clk1 provides a clock source from Port 1. Refer to Figure 34 "Clock Controller - Option 1"
Option 2	This option provides a Dual CPU system with 2 references of a clock source derived from port 0 of the DDP. Connector Clk0 provides a Ref 1 clock source from Port 0. Connector Clk1 provides a Ref 2 clock source from Port 0. Refer to Figure 35 "Clock Controller - Option 2"

Clock Option	Notes
Option 3	<p>This option provides a Dual CPU system with 2 references of a clock source derived from port 1 of the DDP.</p> <p>Connector Clk0 provides a Ref 1 clock source from Port 1.</p> <p>Connector Clk1 provides a Ref 2 clock source from Port 1.</p> <p>Refer to Figure 36 "Clock Controller - Option 3"</p>
Option 4	<p>This option provides a Dual CPU system with 2 references from each clock source derived from the DDP.</p> <p>Connector Clk0 provides a Ref 1 clock source from Port 0.</p> <p>Connector Clk1 provides a Ref 2 clock source from Port 0.</p> <p>Connector Clk0 provides a Ref 1 clock source from Port 1.</p> <p>Connector Clk1 provides a Ref 2 clock source from Port 1.</p> <p>Refer to Figure 37 "Clock Controller - Option 4"</p>

Figure 34
Clock Controller - Option 1

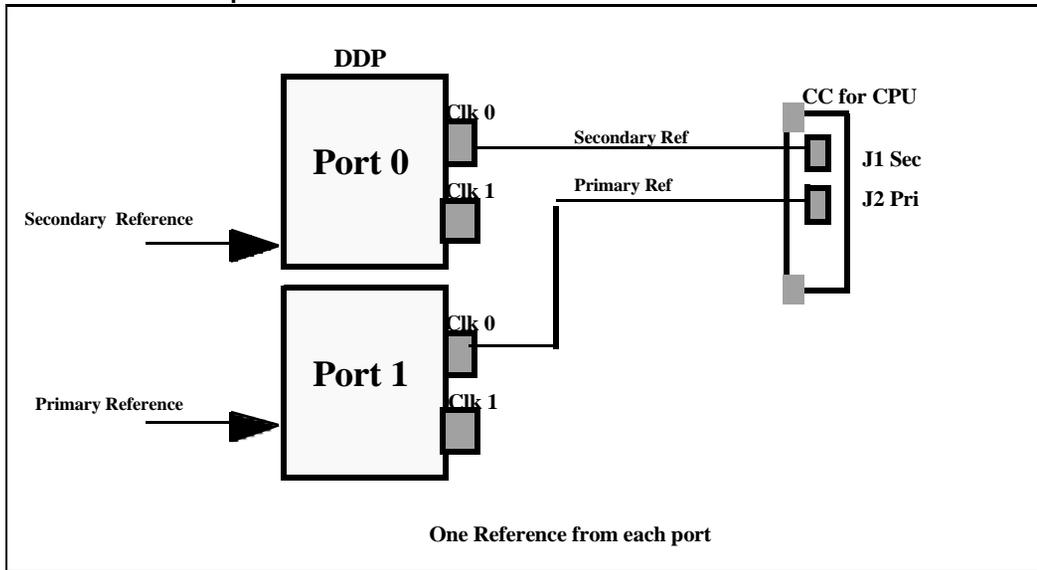


Figure 35
Clock Controller - Option 2

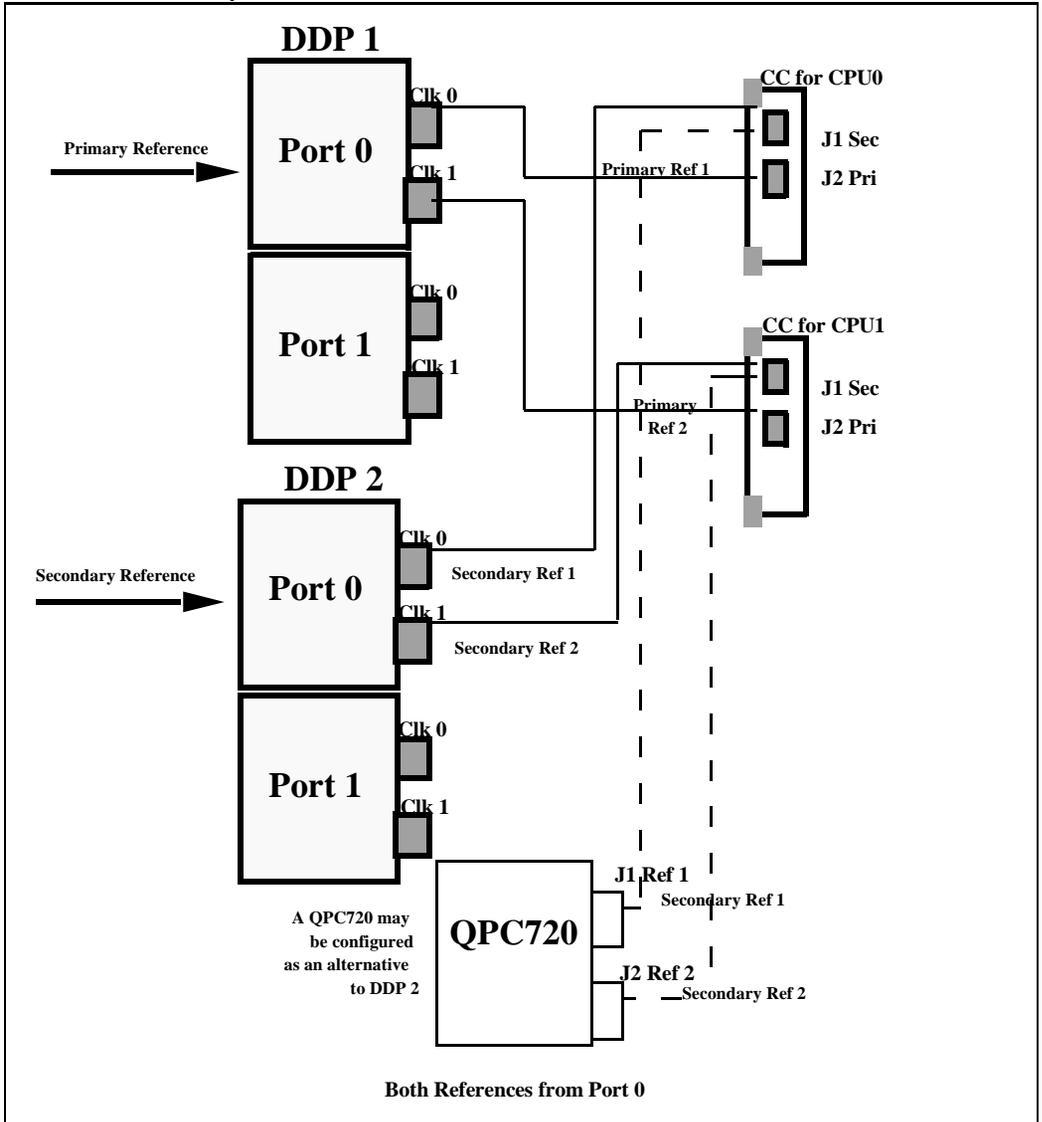


Figure 36
Clock Controller - Option 3


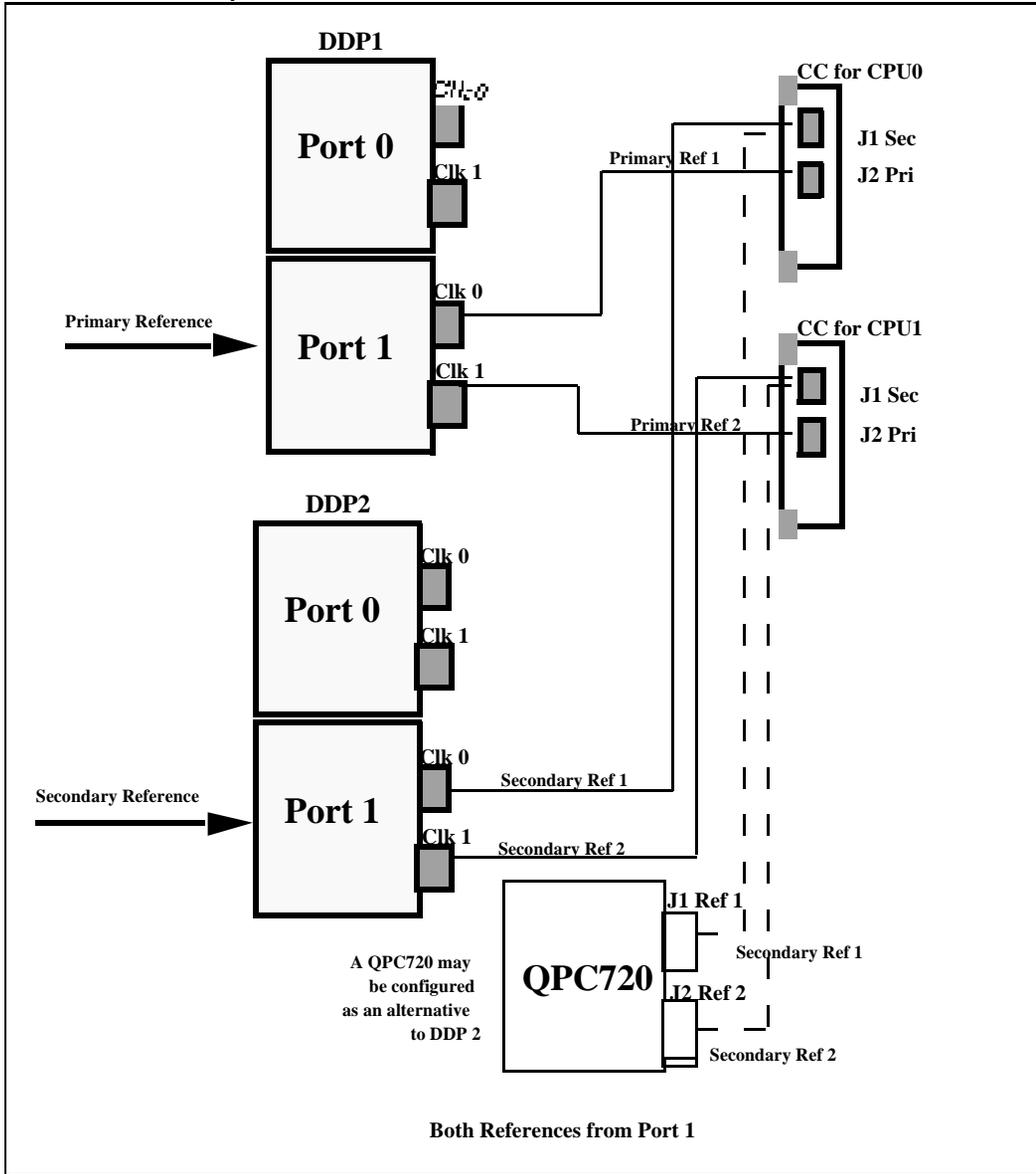


Figure 37
Clock Controller - Option 4

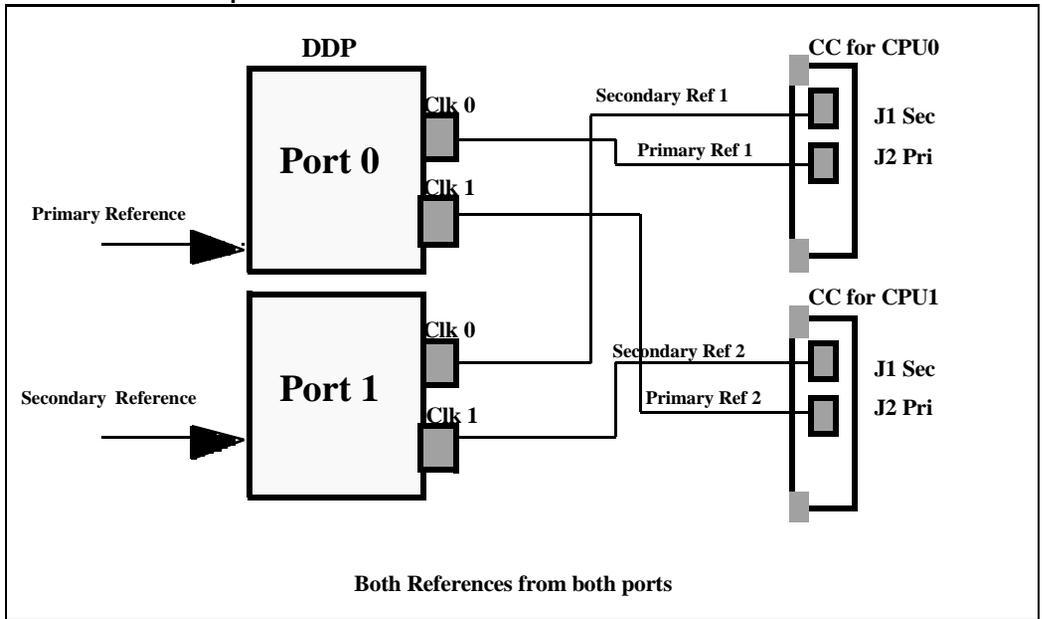

DCH installation

Content list

The following are the topics in this section:

- [Reference list 118](#)
- [Install the NT6D11AB, NT6D11AE, NT6D11AF DCH 118](#)
- [Set up the NT6D11AB, NT6D11AE, NT6D11AF DCHI 119](#)
- [DIP switch settings 119](#)
- [Protocol selection 120](#)
- [Valid switch combinations 120](#)
- [Jumper settings 121](#)
- [Port addressing modes 124](#)
- [Port address switch settings 125](#)
- [Install the NT6D11AB, NT6D11AE, NT6D11AF DCHI 127](#)
- [Task summary list 127](#)
- [Remove the NT6D11AB, NT6D11AE, NT6D11AF DCH 128](#)
- [Task summary list 128](#)
- [Install the QPC757 DCH 129](#)
- [Task summary list 129](#)
- [Port address switch settings 132](#)
- [D-channel parameter downloading 132](#)

- [Remove the QPC757 DCHI 133](#)
- [Task summary list 133](#)

Reference list

The following are the references in this section:

Circuit Card: Installation and Testing (553-3001-211)

Install the NT6D11AB, NT6D11AE, NT6D11AF DCH

Installation procedures for the NT6D11AB, NT6D11AE, and NT6D11AE DCHI cards are the same for Meridian 1 system options 51C, 61C, and 81C. These instructions apply to hardware both for primary and backup D-channels. D-channel lines must be conditioned for 64K before D-channels can be brought up.

Note: To configure J1, the asynchronous port on the DCHI card, refer to the documentation of the application being interfaced, and to NTP *Circuit Card: Installation and Testing (553-3001-211)*. J1 configuration is not described here.


Set up the NT6D11AB, NT6D11AE, NT6D11AF DCHI DIP switch settings

The NT6D11AB/AE/AF has three sets of DIP switches. Each port has its own bank of 10 DIP switches (SW1 & SW2) to select the port address (8 bits) and mode of operation (2 bits). SW1 is used for port 0 settings, SW2 is used for port 1 settings. SW3 is used to select the D-channel protocol. Port 0 is used to select whether the asynchronous ESDI port is to be disabled or not.

Port 1 is used to select the standard or expanded D-channel addressing mode on the NT6D11AB/AE/AF.

The DIP switches are located as shown by Figure 38.

Figure 38
NT6D11 DIP switches

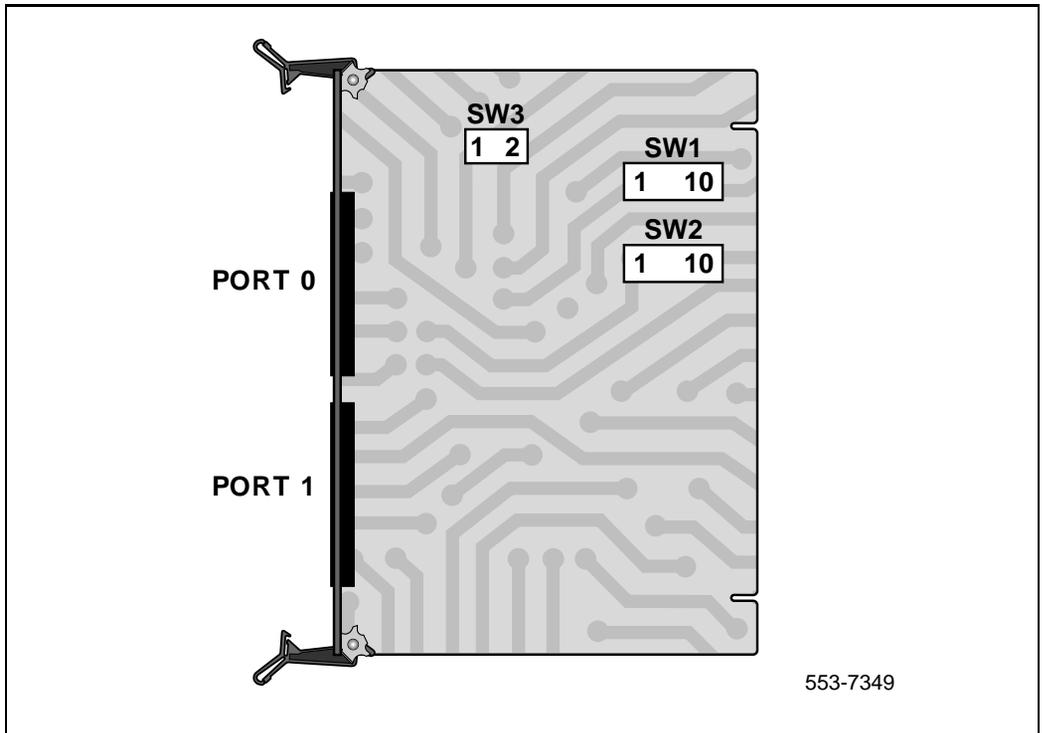

Protocol selection

SW3 is used to select the D-channel protocol, as shown by Table 25.

Note: The setting must be 1 for ISDN applications.

Table 25
Protocol selection switch settings

Protocol	Switch Setting	
	SW3.1	SW3.2
DPNSS1	0	0
ISDN	1	1

Valid switch combinations

The following are the only allowable switch setting combinations (not including address switch settings).

Port 0

Port 0 can be configured as asynchronous ESDI, or disabled. If the port is configured as disabled, it will not be visible to the system CPU. Refer to Table 26.

Table 26
Port 0 settings

Mode	Switch setting			
	SW1.1	SW1.2	SW3.1	SW3.2
Asynchronous ESDI <i>Note:</i> DO NOT USE THIS SELECTION.	1	0	0	0
Asynchronous ESDI	1	0	1	1
Port disabled	1	1	-	-

Port 1

The following are the only valid emulation modes combinations. If the port is configured as disabled, it will not be visible to the system CPU. Refer to Table 27.

Note: The ISDN emulation must be selected.

Table 27
Port 1 settings

Mode	Emulates	Switch setting			
		SW2.1	SW2.2	SW3.1	SW3.2
DPNSS1	NT5K35	0	0	0	0
ISDN	NT6D11	0	0	1	1
Expanded DPNSS1	NT5K75	0	1	0	0
Port disabled		1	1	-	-

Jumper settings

The NT6D11AB/AE/AF has two banks of option straps, one for each port. These select between DCE and DTE operation and whether the signalling interface is RS232 or RS422. Refer to Figure 39 and Figure 40.

Figure 39
NT6D11 DCH with ISL high-speed programming jumper settings


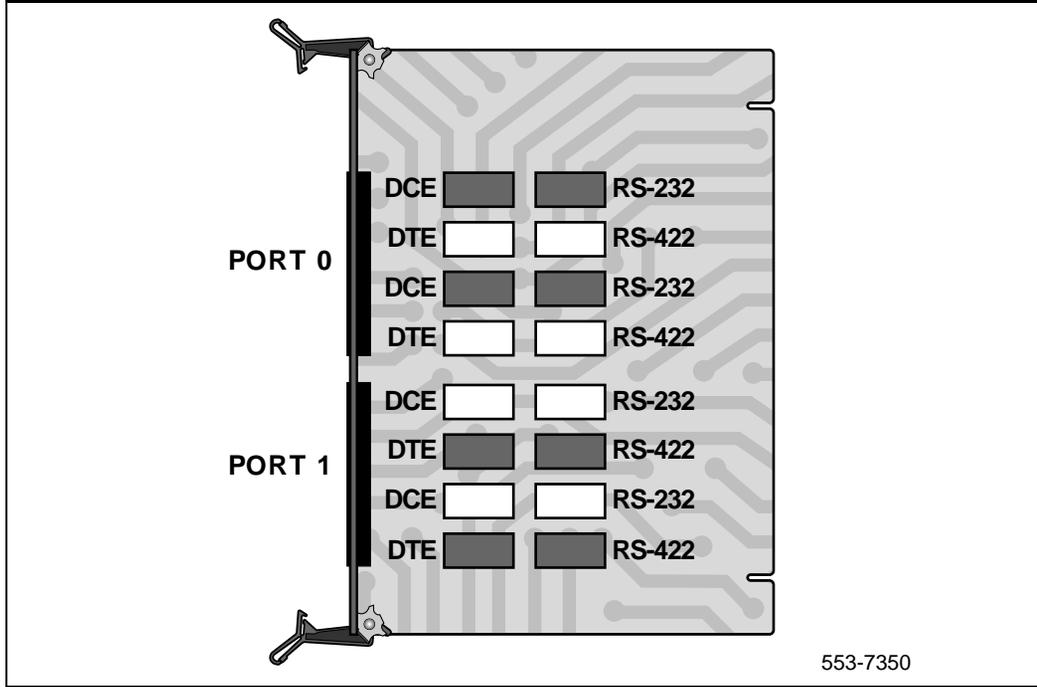


Figure 40
NT6D11 DCH with ISL low-speed programming jumper settings

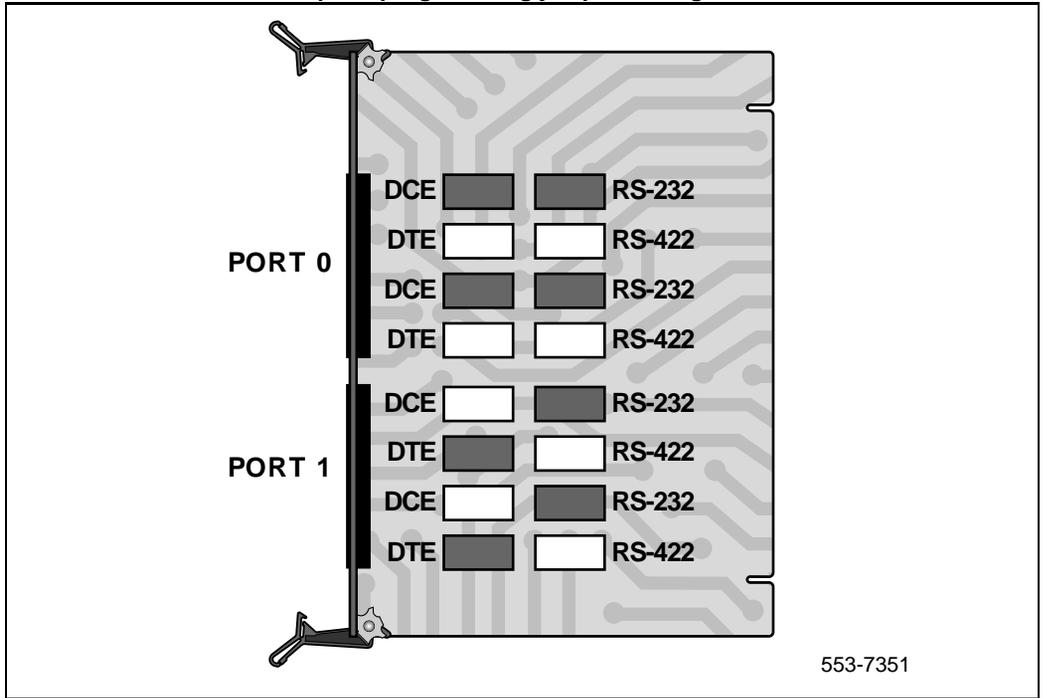

Port addressing modes

Port 0 Mode selection

Port 0 is used to select whether the asynchronous ESDI port is be disabled or not. Refer to Table 28.

Note: The asynchronous ESDI port must be set to “disabled”.

Table 28
Port 0 mode selection

Port Mode	Switch Setting	
	SW1.1	SW1.2
Not used	0	-
Asynchronous ESDI	1	0
Port disabled	1	1

Port 1 mode selection

Port 1 is used to select the standard or expanded D-channel addressing mode on the NT6D11AB/AE/AF. Refer to Table 29.

Table 29
Port 1 mode selection

Port Mode	Switch Setting	
	SW2.1	SW2.2
Synchronous, D-channel, standard addressing <i>Note:</i> THIS SELECTION MUST BE MADE FOR ISDN.	0	0
Synchronous, D-channel, expanded addressing	0	1
Not used	1	0
Port disabled	1	1

Port address switch settings

Port address switch settings in the standard mode, for ISDN

Table 30 depicts the port address switch settings that apply to SW1 or SW2, the D-channel port, for ISDN mode.

Table 30
Port address switch settings for ISDN

Port Address	Switch Setting							
	Half Group No.			Device No.				
	S3	S4	S5	S6	S7	S8	S9	S10
0	0	0	0	0	0	0	0	x
1	0	0	0	0	0	0	1	x
2	0	0	0	0	0	1	0	x
3	0	0	0	0	0	1	1	x
4	0	0	0	0	1	0	0	x
5	0	0	0	0	1	0	1	x
6	0	0	0	0	1	1	0	x
7	0	0	0	0	1	1	1	x
8	0	0	0	1	0	0	0	x
9	0	0	0	1	0	0	1	x
10	0	0	0	1	0	1	0	x
11	0	0	0	1	0	1	1	x
12	0	0	0	1	1	0	0	x
13	0	0	0	1	1	0	1	x
14	0	0	0	1	1	1	0	x
15	0	0	1					
16-31	0	0	1					

Port Address	Switch Setting							
	Half Group No.			Device No.				
	S3	S4	S5	S6	S7	S8	S9	S10
32-47	0	1	0					
48-63	0	1	1					
64-79	1	0	0					
80-95	1	0	1					
96-111	1	1	0					
112-127	1	1	1					

Install the NT6D11AB, NT6D11AE, NT6D11AF DCHI

Task summary list

The following is a summary of the tasks in this section:

1 Install the NT6D11AB, NT6D11AE, NT6D11AF DCH

Follow Procedure 1 to install the NT6D11 DCH on Meridian 1 Options 51C, 61C, and 81C.

Procedure 1

Install the NT6D11AB, NT6D11AE, NT6D11AF DCH

- 1 Determine the cabinet and shelf location for the circuit pack being installed.

The NT6D11AB, NT6D11AE, or NT6D11AF DCHI card can be installed in any slot appropriate for an I/O port card on a Network shelf. (The NT6D11 DCHI card can be located on the Common Equipment shelf only on single-CPU switches.)
- 2 Unpack and inspect card.
- 3 Set option switches on the DCHI card. For PRA capability, set port J2 to odd. For ISL capability, set port J2 for high speed or low speed operation (See Figure 39, Figure 40, and Table 30).
- 4 Set faceplate toggle switch to DISABLE.
- 5 Install DCHI card into the assigned shelf and slot.
- 6 Connect DCHI port J2 to the NT8D72AB or NT8D72BA PRI port J5 with a QCAD328A cable.
- 7 Set faceplate toggle switch to ENABLE.
- 8 Coordinate the start-up and verification of the DCHI with the start-up of the PRI.
- 9 Enable the DCHI card using Overlay 96, command ENL DCHI N..

Remove the NT6D11AB, NT6D11AE, NT6D11AF DCH

Task summary list

The following is a summary of the tasks in this section:

1 Remove the NT6D11AB, NT6D11AE, NT6D11AF DCH

Use Procedure 2 to remove the NT6D11AB, NT6D11AE, NT6D11AF DCH from Meridian 1 options 51C, 61C, and 81C

CAUTION

The NT6D11AB, NT6D11AE, NT6D11AF DCH must be software disabled before it is hardware disabled, or initialization will occur.

Procedure 2

Remove the NT6D11AB, NT6D11AE, NT6D11AF DCH

- 1** Disable the NT6D11AB, NT6D11AE, NT6D11AF DCHI using Overlay 96, command DIS DCHI N.
- 2** If asynchronous port J1 is enabled, it must also be software disabled, using Overlay 37, or initialization will occur.
- 3** If the circuit pack is being completely removed, not replaced, remove data from memory.
- 4** Determine the cabinet and shelf location of the card to be removed.
- 5** Set faceplate toggle switch to DISABLE.
- 6** Disconnect NT6D11AB, NT6D11AE, NT6D11AF DCHI cables.
- 7** Remove NT6D11AB, NT6D11AE, NT6D11AF DCHI card.
- 8** Pack and store card.

Install the QPC757 DCH

Task summary list

The following is a summary of the tasks in this section:

1 Install the QPC757 DCHI

Installation procedures for the QPC757 DCHI card are the same for Meridian 1 system options 51C, 61C, and 81C. These procedures apply to both primary and backup D-channels. See Figures 41 and 42 and Table 31 for option switch settings per port number of the DCHI card, in Primary Rate Interface mode.

Use Procedure 3 to install the QPC757 DCHI card on Meridian 1 system options 51C, 61C, and 81C.

Procedure 3

Install the QPC757 DCHI

- 1 Determine the cabinet and shelf location of the circuit card to be installed.

The QPC757 DCHI card can be installed in any slot appropriate for an I/O port card on a network shelf. For single CPU systems only, the QPC757 DCHI card can be located on the Common Equipment (CE) shelf.

- 2 Unpack and inspect card.
- 3 Set option switches and jumper plugs on the DCHI card. For PRI capability, set port J2 to odd. For ISL capability, set port J2 for high speed or low speed programming.
- 4 Set faceplate toggle switch to DISABLE.
- 5 Install DCHI card into the assigned shelf or module and slot.
- 6 Run and connect DCHI cables: connect QPC757 J2 to QPC720 PRI J5 with a QCAD328A cable.
- 7 Set faceplate toggle switch to ENABLE.
- 8 Enable the loop in LD 60.
- 9 Coordinate start-up and verification of the DCHI with the start-up of the PRI.
- 10 Enable the DCHI card using LD 96, command ENL DCH x.

Figure 41
QPC757 option and PRI/ISL high speed programming switch settings


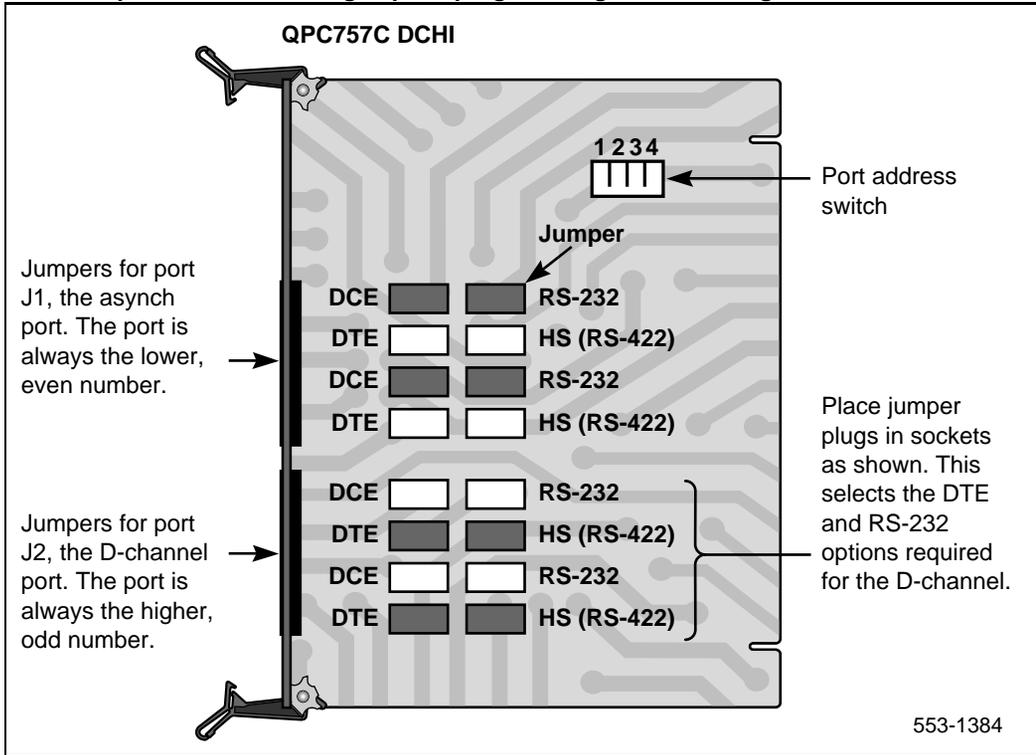


Figure 42
QPC757 option and PRI/ISL low speed programming switch settings

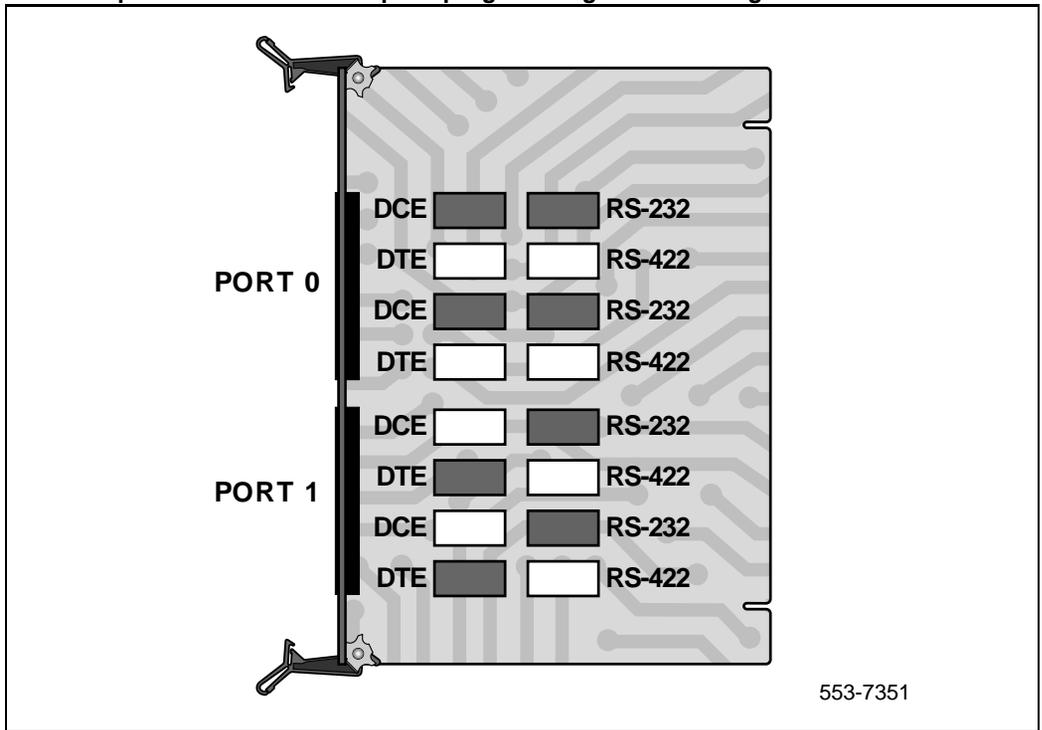

Port address switch settings

Table 31 shows the port address switch settings that apply to SW1, SW2 (the D-channel port), SW3, and SW4.

Table 31
D-channel port address switch settings for PRI

Port Number		Port Address Switch Settings			
J1	J2	SW1	SW2	SW3	SW4
0	1	Off	Off	Off	Off
2	2	Off	Off	On	Off
4	5	Off	On	Off	Off
6	7	Off	On	On	Off
8	9	On	Off	Off	Off
10	11	On	Off	On	Off
12	13	On	On	Off	Off
14	15	On	On	On	Off

D-channel parameter downloading

The Meridian 1 software automatically downloads new parameters to each D-channel Interface (DCHI) circuit card upon SYSLOAD. When this occurs, the D-channel is temporarily disabled and then automatically reenabled.

Three situations require manual disabling and reenabling of each DCHI to ensure parameter downloading:

- Performing a parallel load and switching over to the second CPU
- Following an alarm condition for the T1 loop carrying the D-channel (but the D-channel is still operational)
- Following SYSLOAD when using ISDN Signaling Link (ISL)

Remove the QPC757 DCHI

Task summary list

The following is a summary of the tasks in this section:

1 Remove the QPC757 DCH

Use Procedure 4 to remove the QPC757 DCHI card from Meridian 1 system Options 51C, 61C, and 81C.

CAUTION

The QPC757 DCH must be software disabled before it is hardware disabled to prevent initialization

Procedure 4

Remove the QPC757 DCH

- 1 Disable the QPC757 DCHI using LD 96, command DIS DCH x.
- 2 Disable asynchronous port J1 in LD 48 to prevent initialization.
- 3 Disable loop in LD 60.
- 4 If the circuit card is being removed, not replaced, remove data from memory.
- 5 Determine the cabinet and shelf location of the card to be removed.
- 6 Set faceplate toggle switch to DISABLE.
- 7 Disconnect QPC757 DCHI cables.
- 8 Remove QPC757 DCHI card.
- 9 Pack and store circuit card.

NTBK51 DDCH installation and removal for the NTCK43, NT5D97 and NT5D12

Content list

The following are the topics in this section:

- [Reference list 135](#)
- [Introduction 136](#)
- [Install NTBK51 DDCH for NTCK43 dual-port PRI2 card 137](#)
- [Task summary list 137](#)
- [Remove NTBK51 DDCH from NTCK43 dual-port PRI2 card 138](#)
- [Task summary list 138](#)
- [Install NTBK51 DDCH on NT5D97 dual-port DTI2/PRI2 card 139](#)
- [Task summary list 139](#)
- [Remove NTBK51 DDCH from NT5D97 dual-port DTI2/PRI2 card 140](#)
- [Task summary list 140](#)
- [Install the NTBK51 DDCH on the NT5D12 dual-port DTI/PRI 141](#)
- [Task summary list 141](#)
- [Remove NTBK51 DDCH from NT5D12 dual-port DTI/PRI 142](#)
- [Task summary list 142](#)

Reference list

The following are the references in this section:

Spares Planning (553-3001-153)

Introduction

This chapter provides installation and removal procedures for the NTBK51 Downloadable D-channel Daughterboard, for the NT5D12 NTCK43 dual-port PRI2 card, the NT5D97 dual-port DTI2/PRI2 card, and the NT5D12 dual-port 1.5 Mb DTI/PRI card on Meridian 1 options 51C, 61C, and 81C.

Note 1: The only version of the NTBK51 DDCH that can be used on an NTCK43, NT5D97, or NT5D12 installed on a Meridian 1 options 51C, 61C, or 81C, is the NTBK51**AA**. Vintage NTBK51**BA** cannot be used, due to a different pin configuration (the NTBK51BA is used on the Meridian 1 Option 11C.)

Note 2: Note to installers. Before beginning an installation:

Consult the *Spares Planning* (553-3001-153) document and follow the instructions.

Bring spares of all cables and boards.

Remember that test procedures require a 24-hour minimum bit error-rate testing before being used.

Either the DDCH, the MSDL, or the NTCK43, NT5D97, or NT5D12 card may be installed first. However, NTCK43 and NT5D97 PRI2 loops, and NT5D12 PRI loops, must be configured in software before defining DCH links.

Install NTBK51 DDCH for NTCK43 dual-port PRI2 card

Task summary list

The following is a summary of the tasks in this section:

- 1 Install the NTBK51 on the NTCK43 dual-port PRI2 card.

Installation procedures for the NTBK51 DDCH are the same for Meridian 1 system options 51C, 61C, and 81C. Use Procedure 5 below.

Set the address for the DDCH. If a DDCH is present on a Dual PRI pack then an external D-channel should not be connected to P3. If a DDCH is present the LED “DCH” will light up.

The DDCH can be mounted on any Dual PRI card except those in slots that are occupied by BTUs..

CAUTION

The static discharge bracelet located inside the cabinet must be worn before handling circuit cards. Failure to wear the bracelet can result in damage to the circuit cards.

Procedure 5

Install the NTBK51 on the NTCK43 dual-port PRI2 card

- 1 Unpack and inspect the NTBK51 DDCH Daughterboard.

The DDCH comes with 4 stand-offs so that it can be mounted onto the Dual PRI. These are easily pushed into 4 corresponding mounting holes on the Dual PRI.

- 2 Mount the NTBK51 so that it mates correctly with P9 and P11 on the Dual PRI motherboard.

Remove NTBK51 DDCH from NTCK43 dual-port PRI2 card

Task summary list

The following is a summary of the tasks in this section:

- 1 Remove the NTBK51 from the NTCK43 dual-port PRI2 card

Removal procedures for the NTBK51 DDCH are the same for Meridian 1 system options 51C, 61C, and 81C. Use Procedure 6 below.

The DDCH can only be removed when it is disabled in S/W. The associated PRI link must also be disabled.

CAUTION

The static discharge bracelet located inside the cabinet must be worn before handling circuit cards. Failure to wear the bracelet can result in damage to the circuit cards.

Procedure 6

Remove the NTBK51 from the NTCK43 dual-port PRI2 card

- 1 Disable the faceplate switch on the Dual PRI. If S1 is not disabled the Meridian 1 system will initialize.
- 2 Remove the NTBK51 from the NTCK43 Dual-port PRI2 PRI card.

Install NTBK51 DDCH on NT5D97 dual-port DTI2/PRI2 card

Task summary list

The following is a summary of the tasks in this section:

- 1 Install the NTBK51 on the NT5D97 dual-port DTI2/PRI2 card

Installation procedures for the NTBK51 DDCH are the same for Meridian 1 system options 51C, 61C, and 81C. Use Procedure 7 below.

The DDCH can be mounted on any NT5D97 DDP2 card. Set the address for the DDCH (see the switch settings section to set the address). If a DDCH is present on a DDP2 card then an external D-channel should not be connected to J6. If a DDCH is present the LED “DDCH” will light up.

CAUTION

The static discharge bracelet located inside the cabinet must be worn before handling circuit cards. Failure to wear the bracelet can result in damage to the circuit cards.

Procedure 7

Install the NTBK51 on the NT5D97 dual-port DTI2/PRI2 card

- 1 Unpack and inspect the DDCH daughterboard.

The DDCH comes with four stand-offs so that it can be mounted onto the NT5D97. These are easily pushed into 4 corresponding mounting holes on the DDP2.

- 2 Mount the DDCH so that it mates with P2 and P3 on the NT5D97 motherboard.

- 3 Set the DDP2 ENB/DIS faceplate switch to Enable (ON).

The DDCH LED should flash three times.

Remove NTBK51 DDCH from NT5D97 dual-port DTI2/PRI2 card

Task summary list

The following is a summary of the tasks in this section:

- 1 Remove the NTBK51 from the NT5D97 dual-port DTI2/PRI2 card

Removal procedures for the NTBK51 DDCH are the same for Meridian 1 system options 51C, 61C, and 81C. Use Procedure 8 below.

CAUTION

The static discharge bracelet located inside the cabinet must be worn before handling circuit cards. Failure to wear the bracelet can result in damage to the circuit cards.

Procedure 8

Remove the NTBK51 from the NT5D97 dual-port DTI2/PRI2 card

The NTBK51 can only be removed when it is disabled in software.

Both ports of the associated DDP2 card must be disabled.

- 1 Set the DDP2 ENB/DIS faceplate switch to Disable (OFF).
- 2 Remove the DDP2 and the DDCH.

Install the NTBK51 DDCH on the NT5D12 dual-port DTI/PRI

Task summary list

The following is a summary of the tasks in this section:

- 1 Install the NTBK51 on the NT5D12 dual-port DTI/PRI card

Installation procedures for the NTBK51 DDCH are the same for Meridian 1 system options 51C, 61C, and 81C. Use Procedure 9 below.

Set the address for the DDCH (see the switch settings section to set the address). If a DDCH is present on a DDP card then an external D-channel should not be connected to J6. If a DDCH is present the LED “DCH” will light up.

CAUTION

The static discharge bracelet located inside the cabinet must be worn before handling circuit cards. Failure to wear the bracelet can result in damage to the circuit cards.

Procedure 9

Install the NTBK51 on the NT5D12 dual-port DTI/PRI card

The DDCH can be mounted on any DDP card.

- 1 Unpack and inspect the DDCH daughterboard.

The DDCH comes with four stand-offs so that it can be mounted onto the DDP. These are easily pushed into 4 corresponding mounting holes on the DDP.

- 2 Mount the NTBK51 DDCH so that it mates correctly with P2 and P3 on the NT5D12 DDP motherboard.

Remove NTBK51 DDCH from NT5D12 dual-port DTI/PRI

Task summary list

The following is a summary of the tasks in this section:

- 1 Remove the NTBK51 from the NT5D12 dual-port DTI/PRI card

Removal procedures for the NTBK51 DDCH are the same for Meridian 1 system options 51C, 61C, and 81C. Use Procedure 10 below.

CAUTION

The static discharge bracelet located inside the cabinet must be worn before handling circuit cards. Failure to wear the bracelet can result in damage to the circuit cards.

Procedure 10

Remove the NTBK51 from the NT5D12 dual-port DTI/PRI card

The DDCH can only be removed when it is disabled in software.

Both ports of the associated DDP card must be disabled.

- 1 Disable the faceplate switch on the DDP.
- 2 Remove the DDP and DDCH.

MSDL installation for all systems

Content list

The following are the topics in this section:

- [Reference list 143](#)
- [Install the MSDL 143](#)
- [Task summary list 143](#)
- [Replace the MSDL 147](#)
- [Task summary list 147](#)

Reference list

The following are the references in this section:

Multi-Purpose Serial Data Link: Description (553-3001-195)

X11 System Messages Guide (553-3001-411)

Install the MSDL

Task summary list

The following is a summary of the tasks in this section:

- 1 Install the MSDL card

Installation procedures for the MSDL card are the same for Meridian 1 system options 51C, 61C, and 81C. Use Procedure 11 below. See Figure 43, and Table 32 for the port and interface switch settings.

The MSDL card can go into the following slots:

51C, 61C	CPU/Network Module slot 1–8, 13
81C	Network Module slot 5–14

Refer to *X11 System Messages Guide (553-3001-411)* and *Multi-Purpose Serial Data Link: Description (553-3001-195)* for more information.

Procedure 11
Install the MSDL card

- 1 Determine module and slot location for the MSDL card. Unpack and inspect the MSDL card.
- 2 Set the MSDL switch settings to correspond to Table 32, and Figure 43.
- 3 Insert the MSDL card into the selected card slot of the module following the card guides.
- 4 Observe the red LED on the MSDL faceplate. If it turns on, flashes three times, and stays on continuously, the MSDL is operating correctly but is not yet enabled.

If the LED turns on and stays on continuously without flashing three times, the card may be defective. Go to step 8.
- 5 Run and connect NT6D80 to the PRI card MSDL interface with the appropriate cable.
- 6 Enable the MSDL card in LD96.
- 7 Unplug the MSDL card and reinsert it. If the red LED still does not flash three times, leave the card installed for approximately 10 minutes to allow the card to be initialized.
- 8 After 10 minutes unplug the card, reinsert it and if the card still does not flash three times, the card is defective and must be replaced.

Figure 43
MSDL card layout

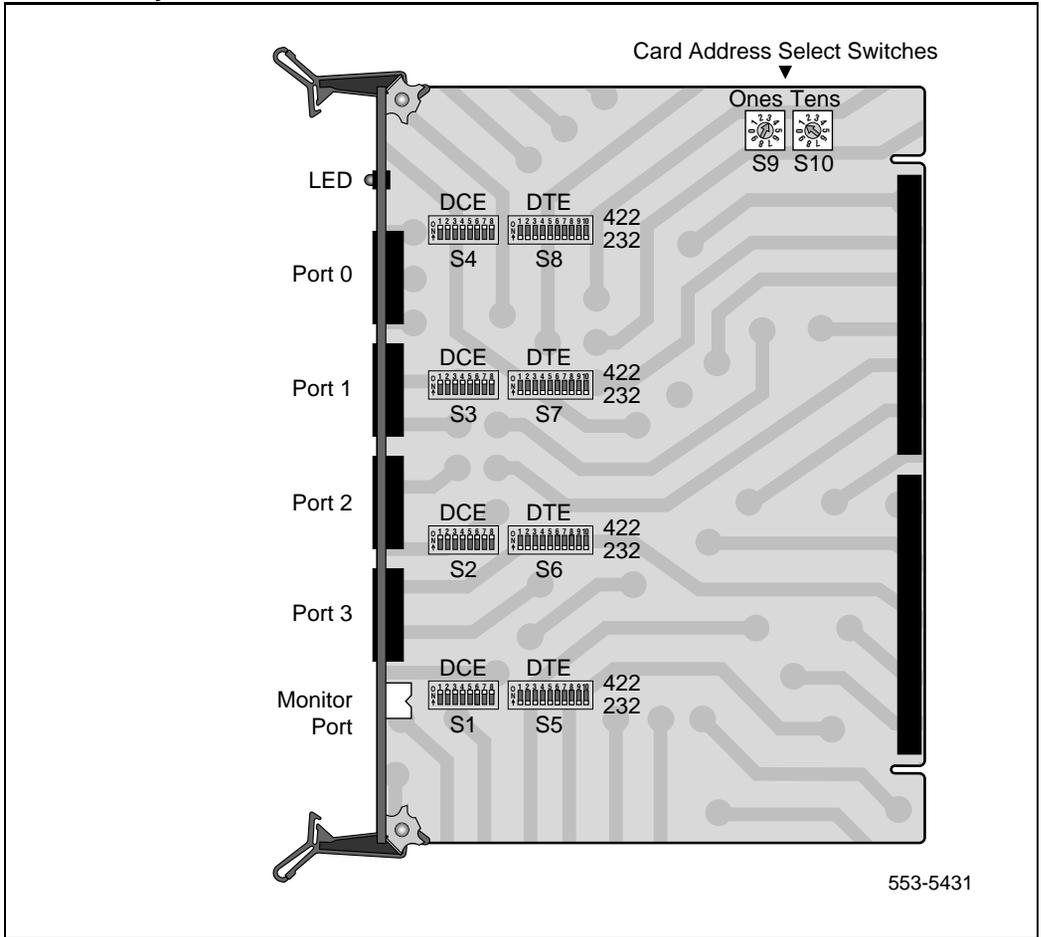


Table 32
MSDL switch settings

	Port 0—SW4	Port 0—SW8
RS-232-D	off off off off off off off off	off
RS-422-A DTE	off off off off off off off off	on
RS-422-A DCE	on on on on on on on on on	off
	Port 1—SW3	Port 1—SW7
RS-232-D	off off off off off off off off	off
RS-422-A DTE	off off off off off off off off	on
RS-422-A DCE	on on on on on on on on on	off
	Port 2—SW2	Port 2—SW6
RS-232-D	off off off off off off off off	off
RS-422-A DTE	off off off off off off off off	on
RS-422-A DCE	on on on on on on on on on	off
	Port 3—SW1	Port 3—SW5
RS-232-D	off off off off off off off off	off
RS-422-A DTE	off off off off off off off off	on
RS-422-A DCE	on on on on on on on on on	off

Replace the MSDL

Task summary list

The following is a summary of the tasks in this section:

1 Replace the MSDL card

Replacement procedures for the MSDL card are the same for Meridian 1 system options 51C, 61C, and 81C. Use Procedure 12 below.

Procedure 12

Replace the MSDL card

- 1 Disable the MSDL card in LD 96.
- 2 Disconnect MSDL to PRI cables.
- 3 Remove the faulty MSDL card.
- 4 Unpack and inspect the new MSDL card.
- 5 Set the MSDL switch settings to correspond to Table 32 and Figure 43.
- 6 Insert the new MSDL card into the selected card slot of the module following the card guides.
- 7 Observe the red LED on the MSDL faceplate. If it turns on, flashes three times, and stays on continuously, the MSDL is operating correctly but is not yet enabled.

If the LED turns on and stays on continuously without flashing three times, the card may be defective. Go to step 11.
- 8 Run and connect NT6D80 to the PRI card MSDL interface with the appropriate cable.
- 9 Enable the MSDL card in LD 96.
- 10 Unplug the MSDL card and reinsert it. If the red LED still does not flash three times, leave the card installed for approximately 10 minutes to allow the card to be initialized.
- 11 After 10 minutes unplug the card, reinsert it, and if the card still does not flash three times, the card is defective and must be replaced.

NT8D72 and QPC720 PRI card installation

Content list

The following are the topics in this section:

- [Reference list 149](#)
- [Introduction 150](#)
- [PRI circuit pack locations 150](#)
- [Cable requirements 150](#)
- [Switch settings 170](#)
- [Install NT8D72 and QPC720 PRI cards on 51C, 61C and 81C 173](#)
- [Task summary list 173](#)
- [Remove NT8D72 and QPC720 PRI cards from Options 51C, 61C, and 81C 174](#)
- [Task summary list 174](#)
- [Install an additional network shelf 176](#)
- [Task summary list 176](#)

Reference list

The following are the references in this section:

Option 11C 1.5Mb DTI/PRI (553-3011-310)

Option 11C 2.0Mb DTI/PRI (553-3011-315)

Introduction

This chapter contains information on how to install the 2.0 Mb NT8D72 and the 1.5 Mb QPC720 PRI cards, on Meridian 1 options 51C, 61C, and 81C.

Information on how to install the dual-port cards (the NTCK43, NT5D97, and NT5D12) is contained elsewhere in this document.

Information on how to install Meridian 1 option 11C specific PRI cards is found in the documents *Option 11C 1.5Mb DTI/PRI (553-3011-310)* and *Option 11C 2.0Mb DTI/PRI (553-3011-315)*.

PRI circuit pack locations

The PRI circuit pack occupies two adjacent slots on a shelf. As many as five circuit packs can be plugged into an empty Network shelf, along with a Power Converter circuit pack. Specific locations will depend on available space.

Note 1: Due to physical width, Bus Terminating Units (BTUs) and PRIs cannot fit next to each other on a shelf.

Note 2: This chapter includes instructions for installing an additional network shelf on Meridian 1 Options 51C and 61C (when no vacant Network slots are available to install PRI packs, additional network shelves can replace Peripheral Equipment shelves located on the rear of the Common Equipment or Disk shelves.) Refer to "Install an additional network shelf" on page 176.

Cable requirements

Shielded 22 AWG (0.644 mm) cables are recommended for connecting the PRI to the cross-connect point. This cable consists of two twisted-pair conductors.

The transmit and the receive pairs must be enclosed in a polyvinyl jacket. This type of cable is commonly referred to as "6-conductor" cable. The cable should be grounded at the cross-connect point.

In addition to twisted-pair conductors, 75-ohm coaxial cable can also be used to provide connection to the office repeater or line terminating unit (LTU).

To manufacture cables of lengths different than those of the standard cables provided, (to manufacture cables of lengths different than those of the standard cables provided, see the "Non-standard cables" section of this practice.)

For the 2.0 Mb NT8D72 PRI card, see Figures 44, 45, 46, and 47 for half-group and single-group cabling arrangements applying to Meridian 1 system options 51C and 61C; also, refer to Table 33. For the 2.0 NT8D72 on Option 81C, see Figures 48 and 49; also refer to Table 34.

For the 1.5 Mb QPC720 PRI card on Meridian 1 system options 51C and 61C, see Figures 50, 51, 52, and 53; also, refer to Table 35. For the QPC720 on option 81C, see Figures 54 and 55; also refer to Table 36.

Figure 44
Half-group cabling for the NT8D72 on 51C and 61C, without an echo canceller

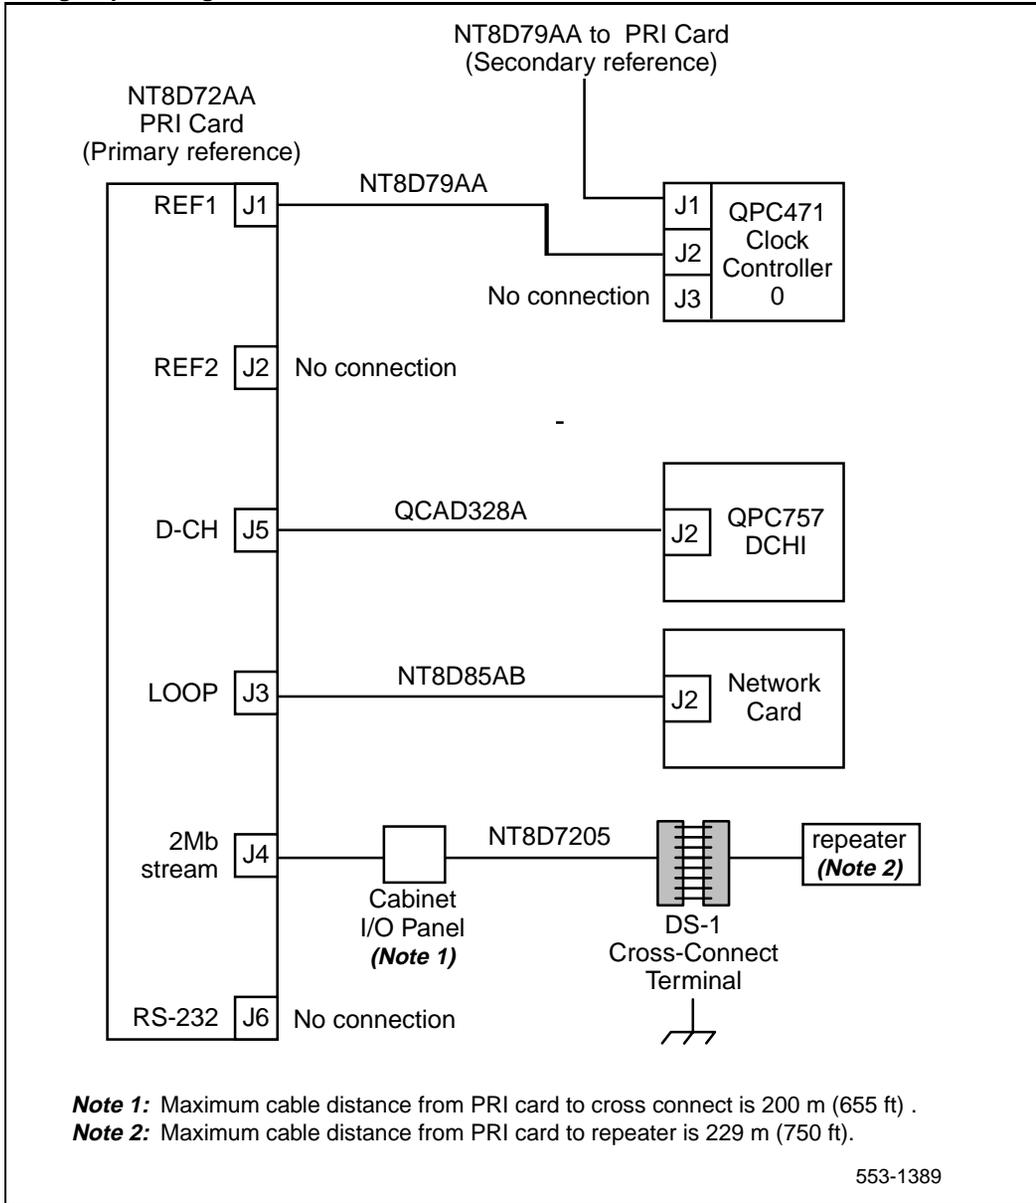


Figure 45
Half group cabling for the NT8D72 on 51C and 61C, with echo canceller

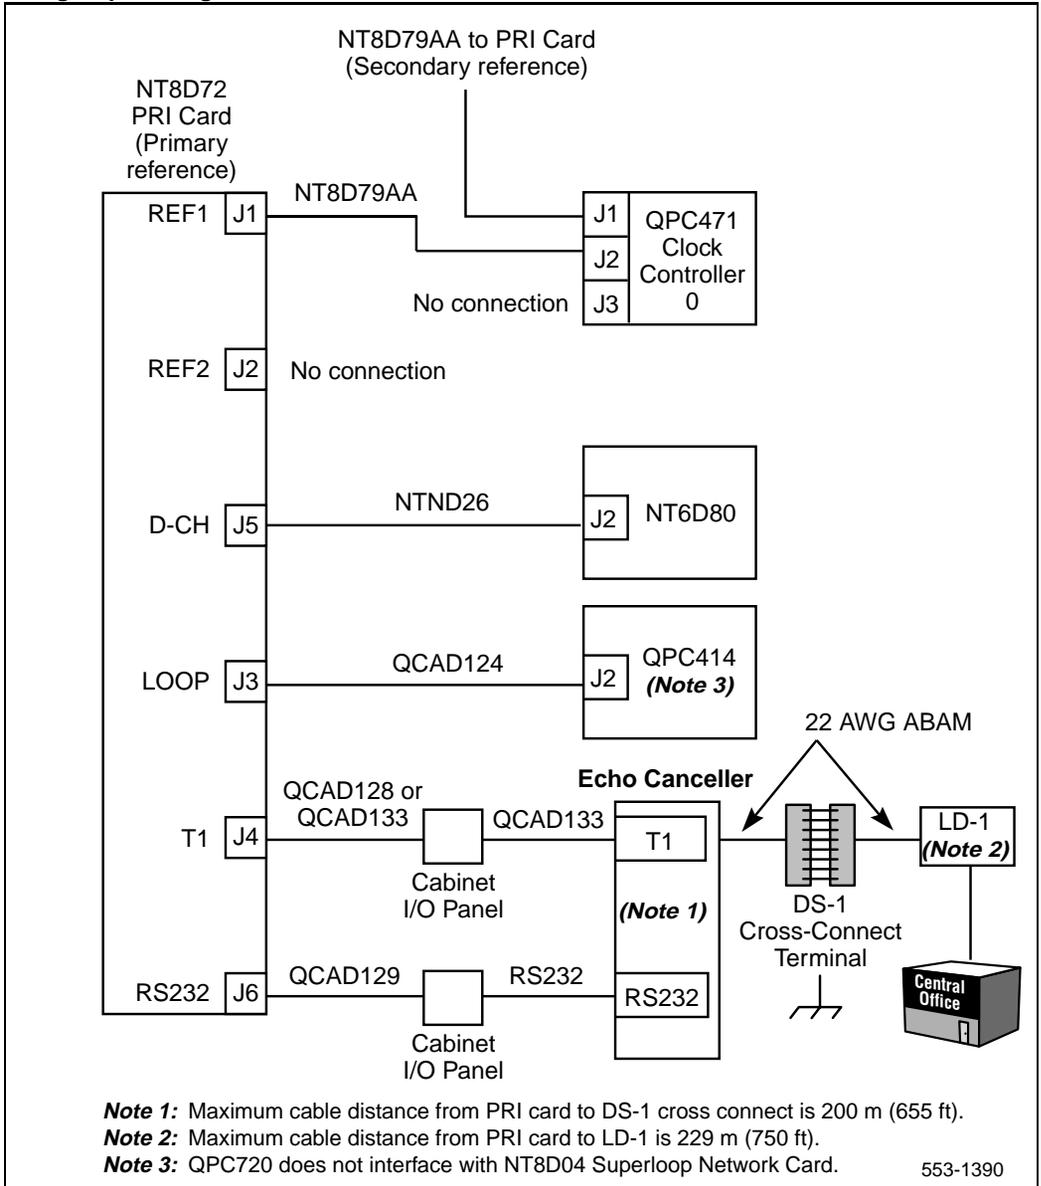


Figure 46
Single-group cabling for the NT8D72 on 51C and 61C, without echo canceller

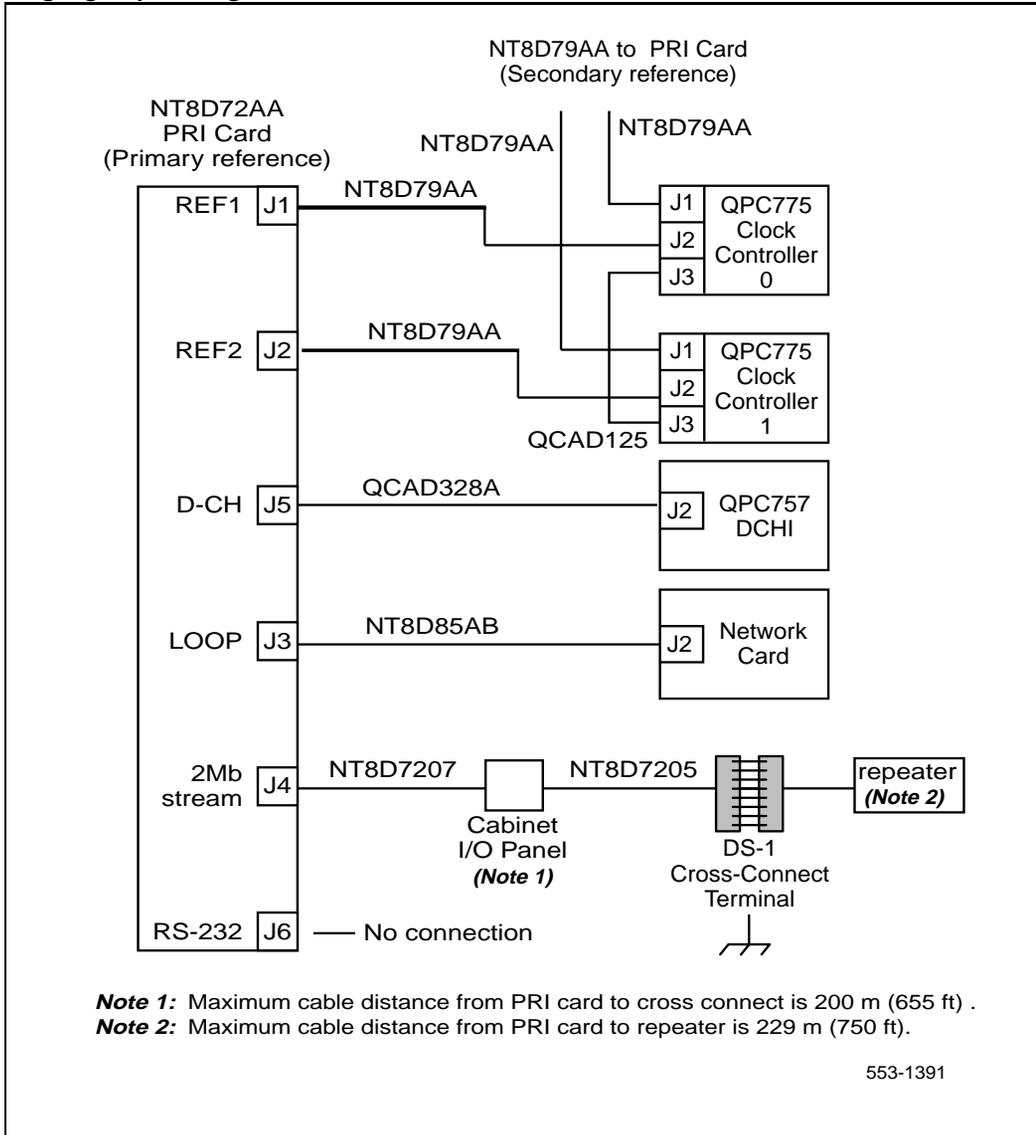


Figure 47
Single group cabling for the NT8D72 on 51C and 61C, with echo canceller

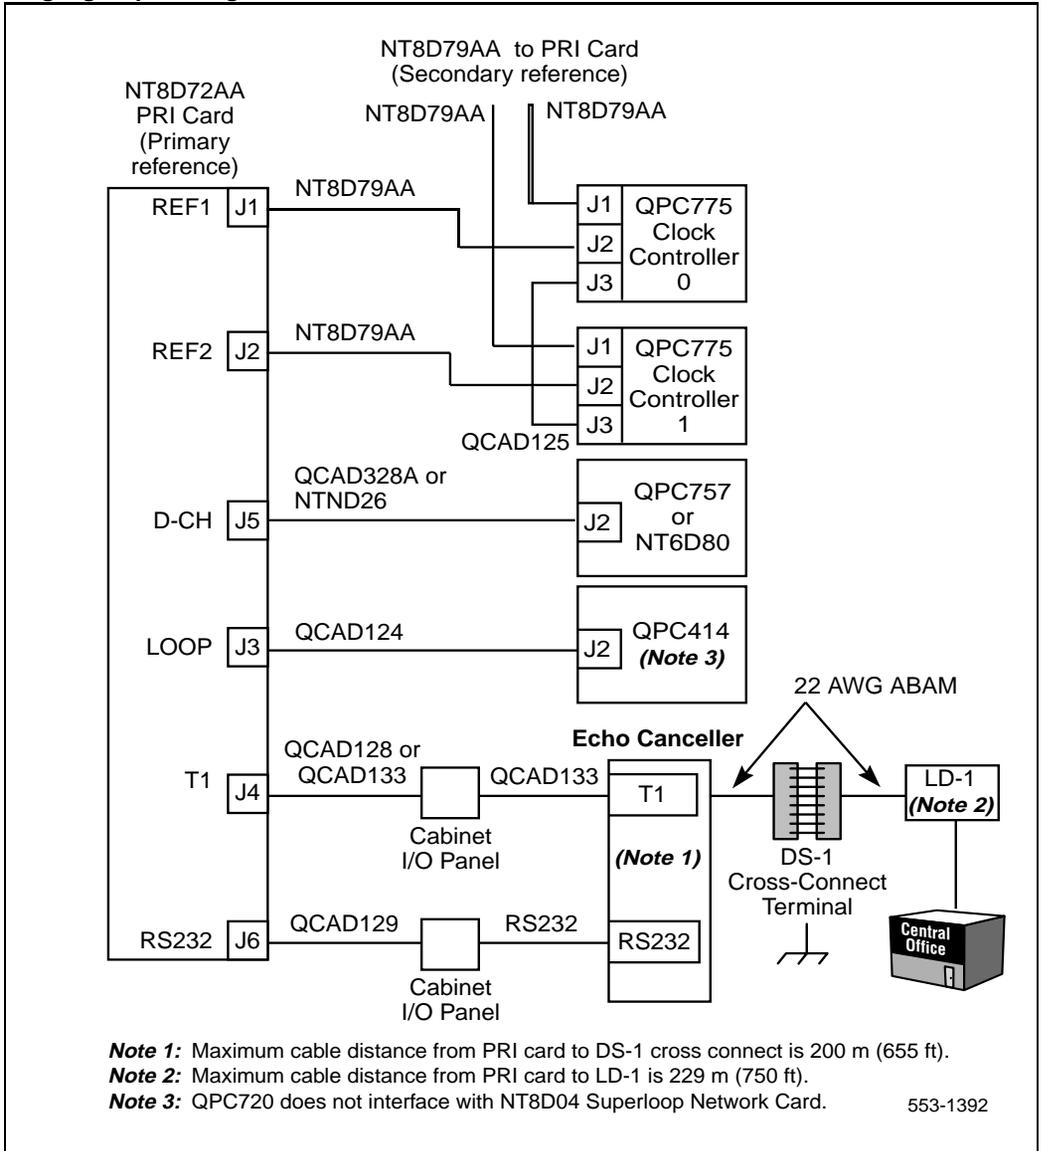


Figure 48
Cabling for the NT8D72 on 81C without echo canceller

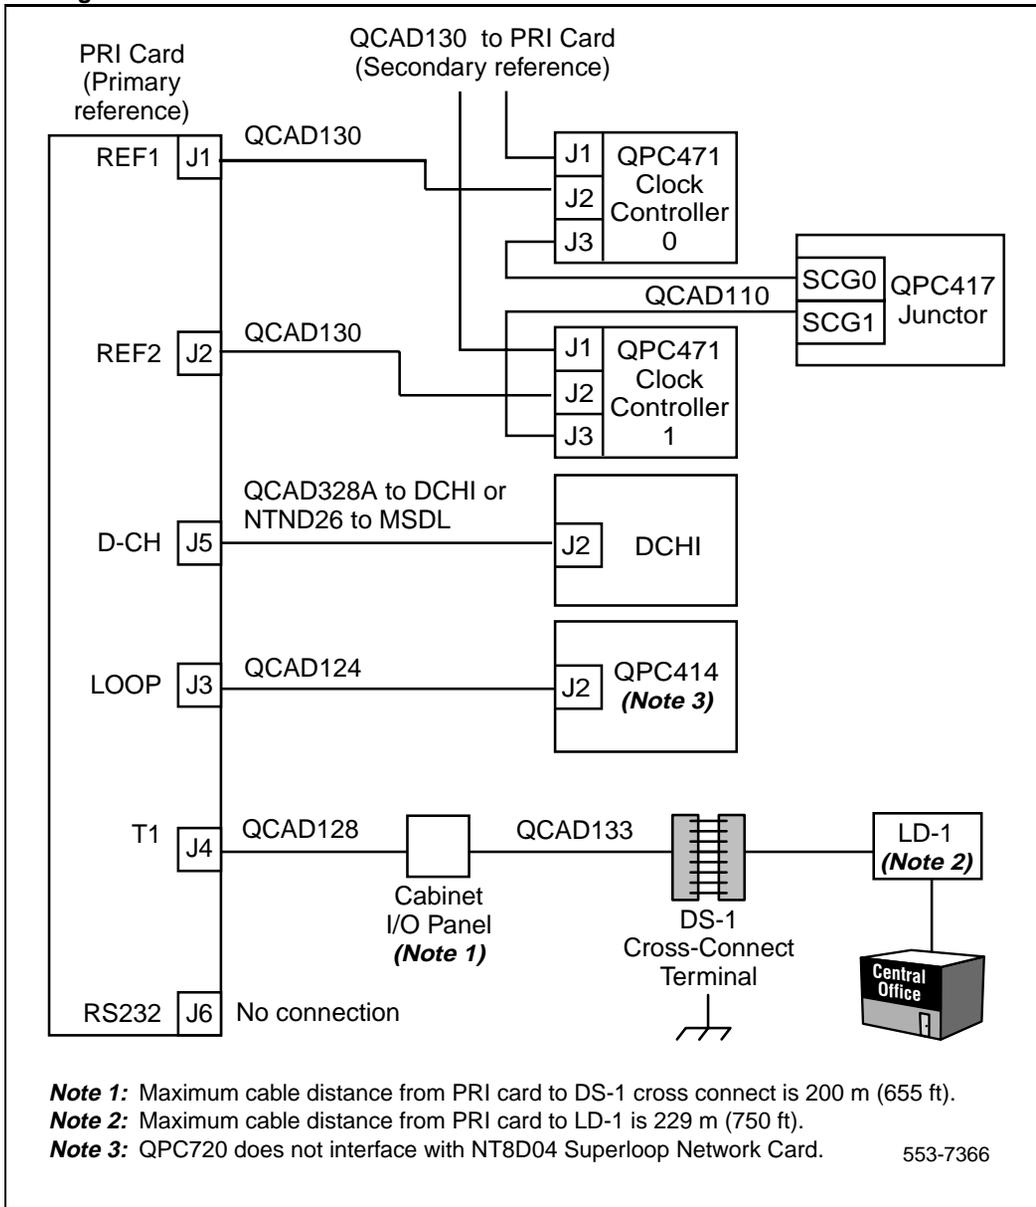


Figure 49
Cabling for the NT8D72 on 81C with echo canceller

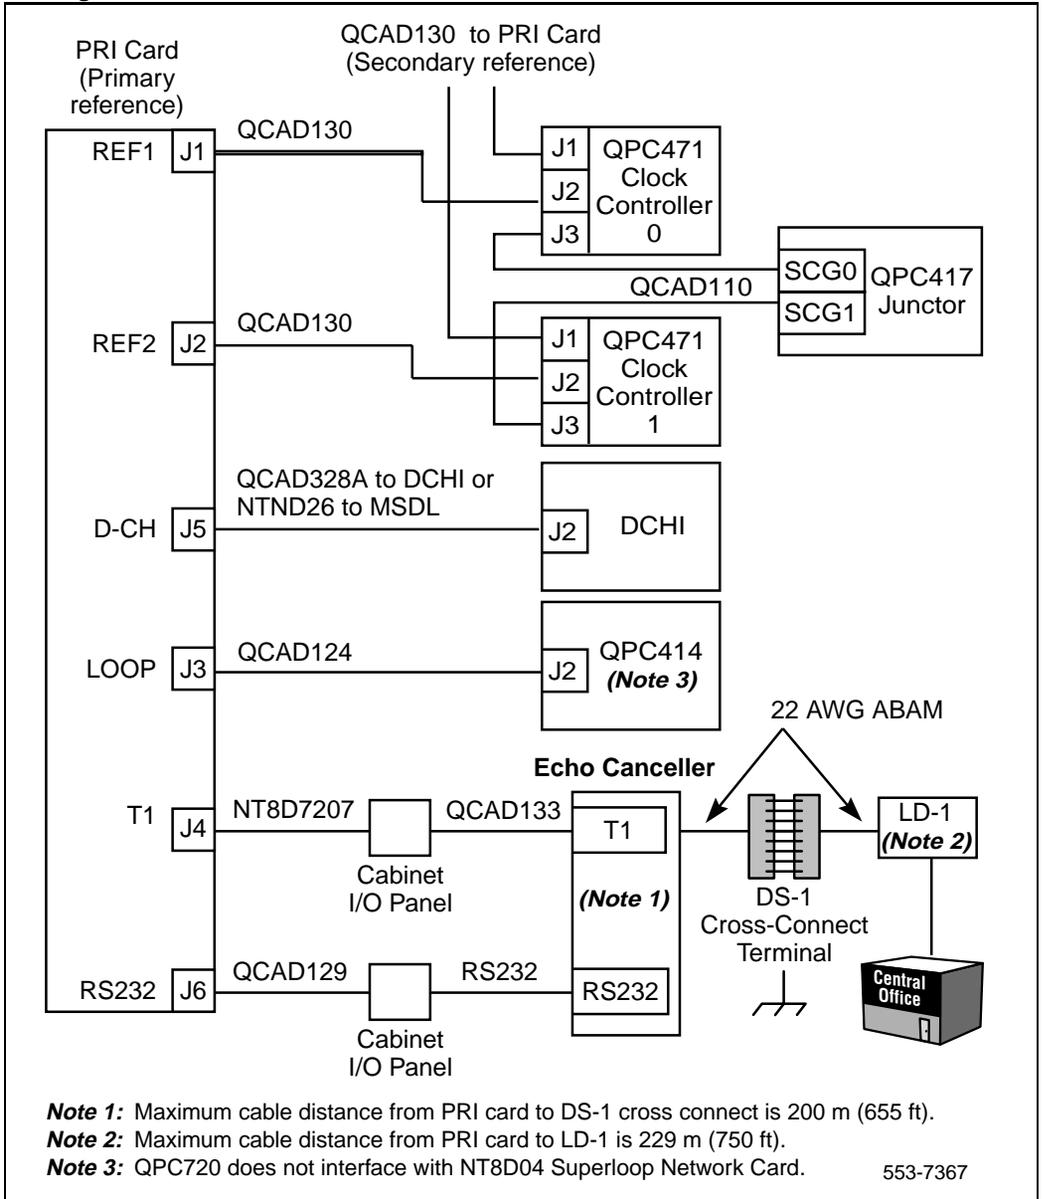


Figure 50
Half group cabling without echo canceller, for the QPC720 on 51C and 61C

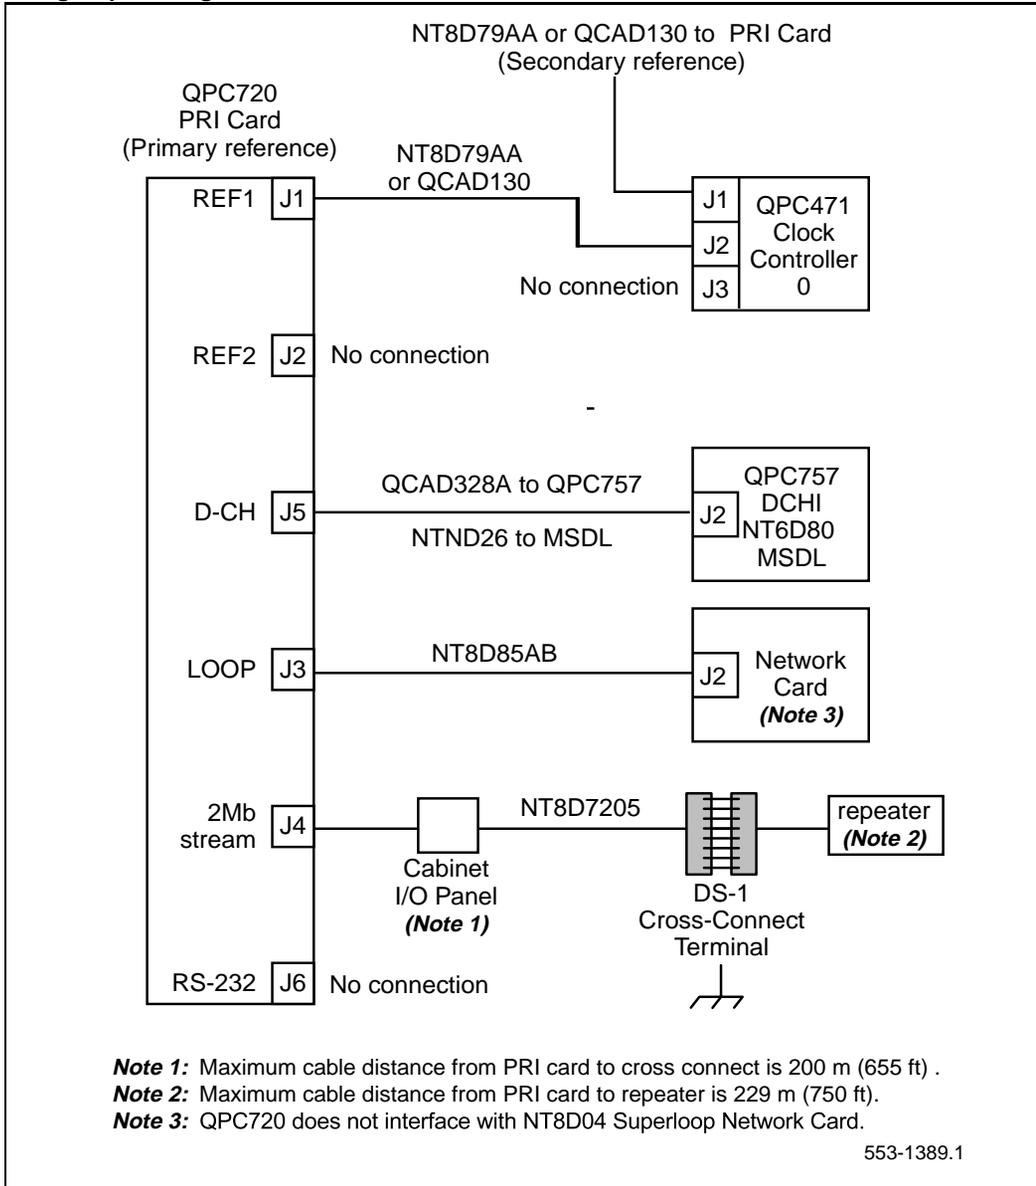


Figure 51
Half group cabling with echo canceller, for the QPC720 on 51C and 61C

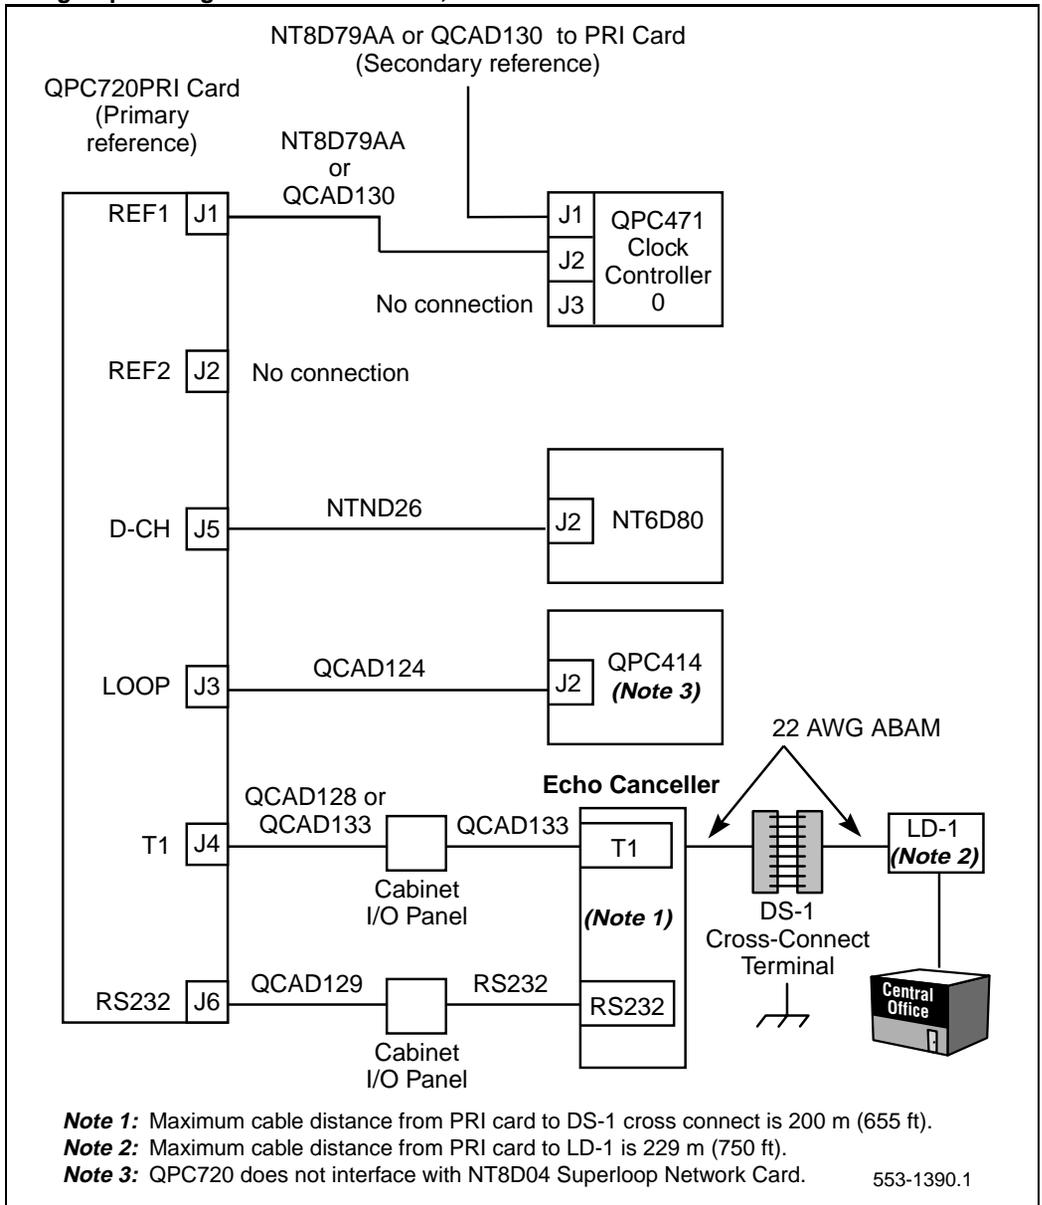


Figure 52
Single group cabling without echo canceller, for the QPC720 on 51C and 61C

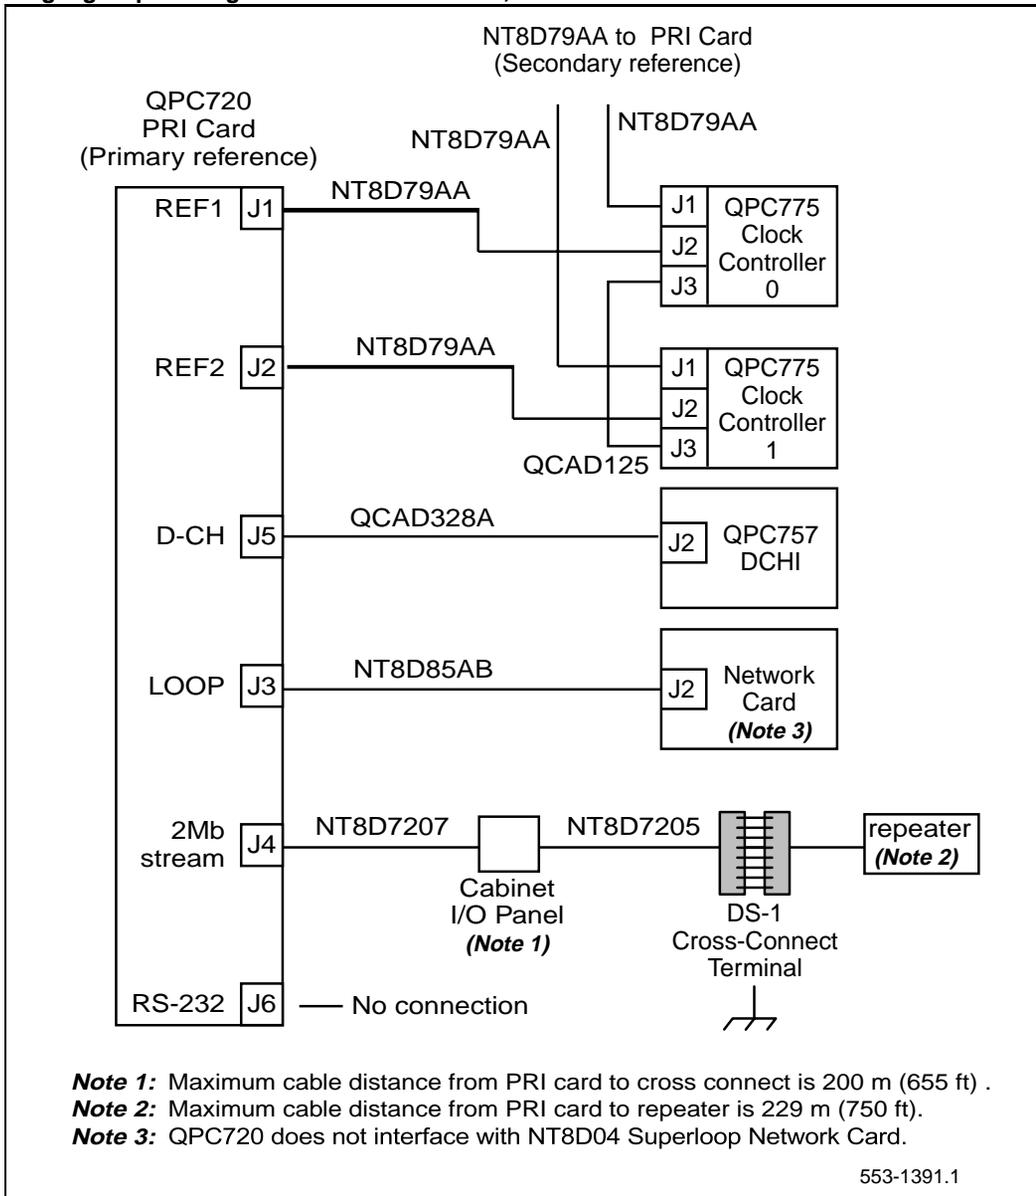


Figure 54
Option 81C cabling for the QPC720 without echo canceller

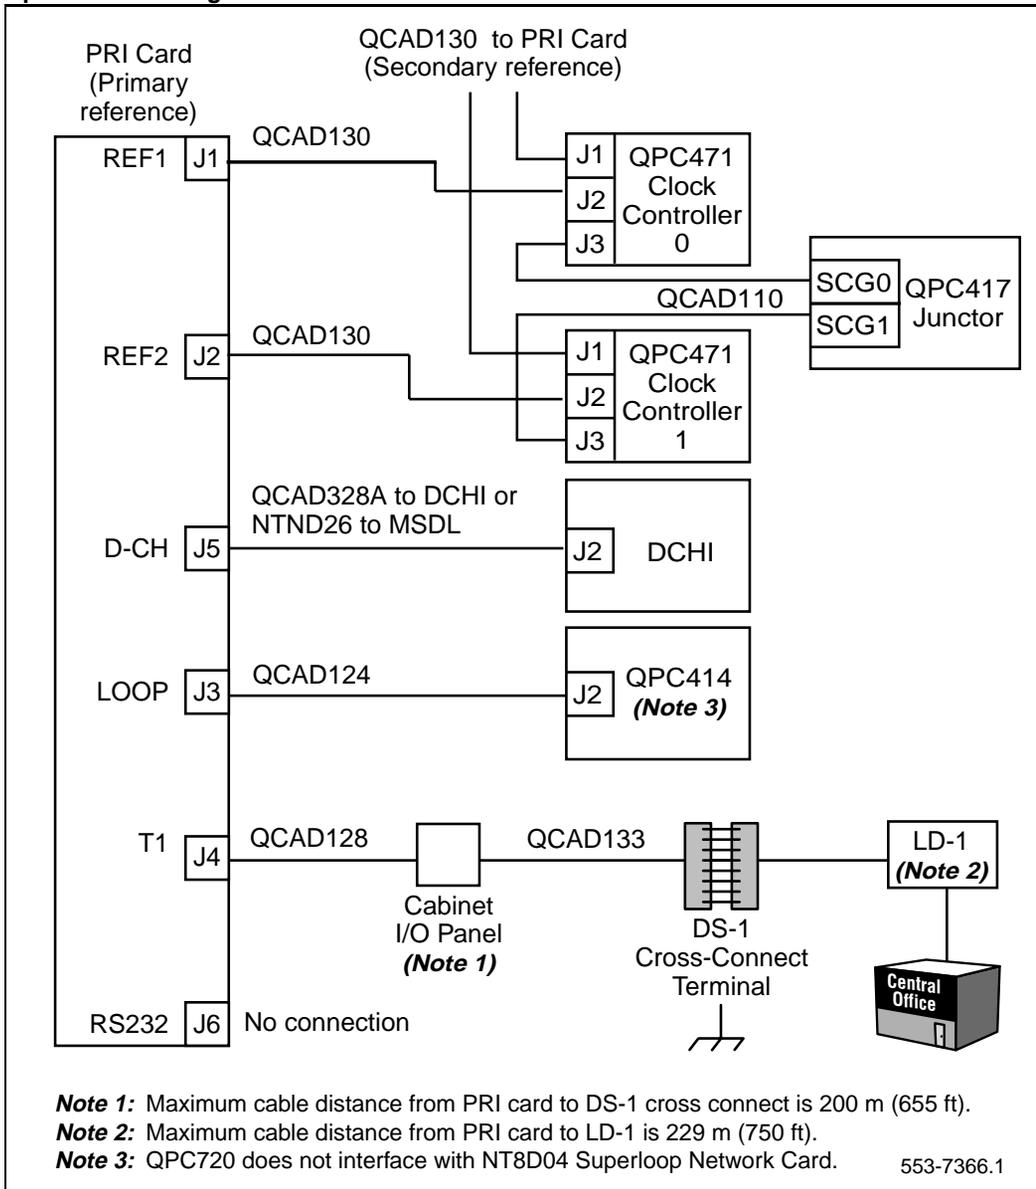


Figure 55
Option 81C cabling for the QPC720 with echo canceller

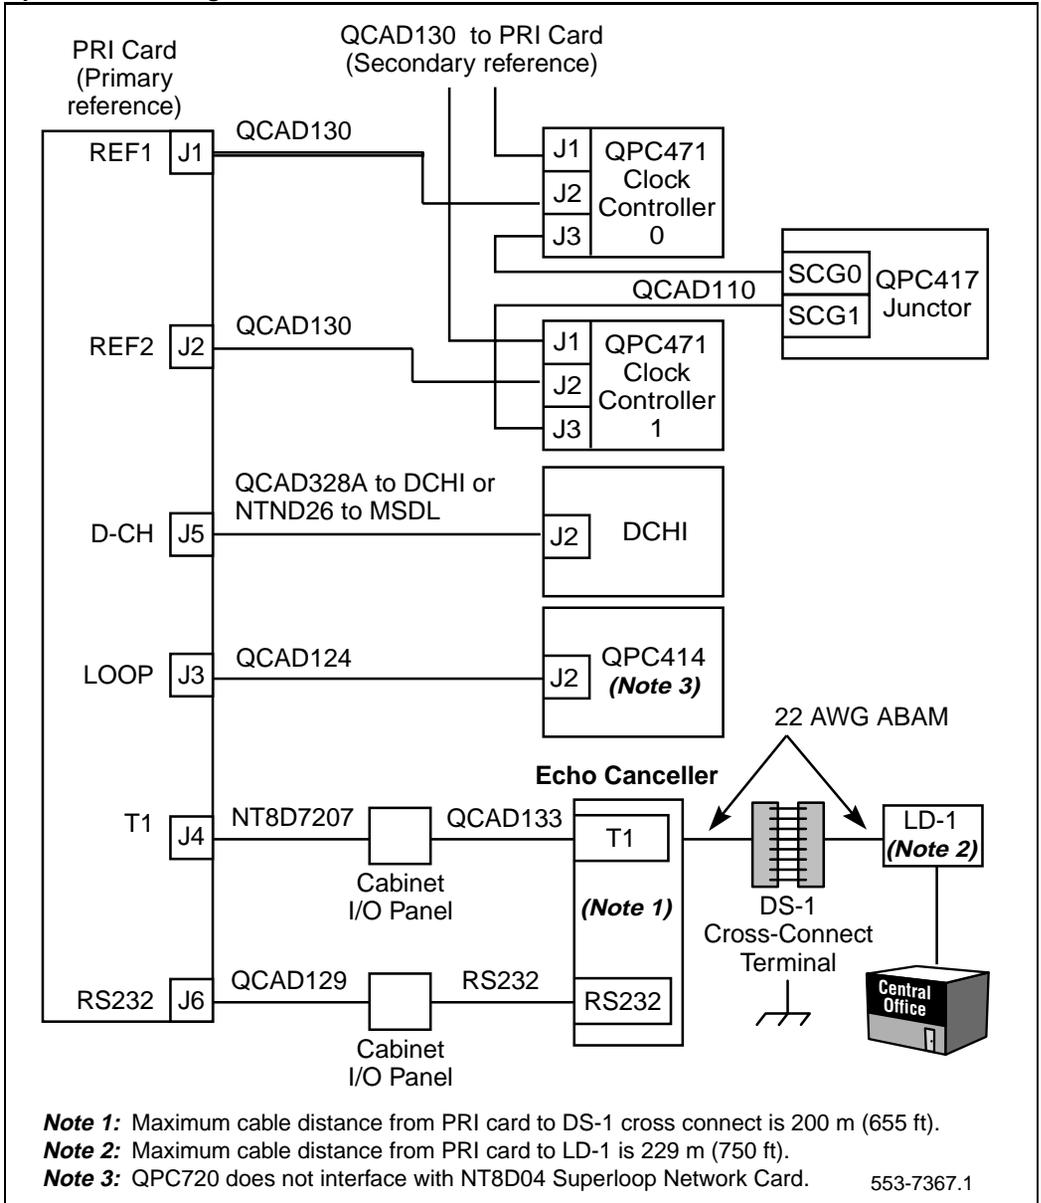


Table 33
Cable for the NT8D72 PRI card on 51C and 61C

Cable	From	Des	Con	To	Des	Con	To
NTND26	PRI card		J5	MSDL			
NT8D79AA	PRI card		J1	Clock controller	CC-0	J2	Only when primary clock source.
NT8D79AA	PRI card		J1	Clock controller	CC-0	J1	Only when secondary clock source.
For single-group only							
NT8D79AA	PRI card		J2	Clock controller	CC-1	J2	Only when primary clock source.
NT8D79AA	PRI card		J2	Clock controller	CC-1	J1	Only when secondary clock source.
QCAD125	Clock controller	CC-0	J3	Clock controller	CC-1	J3	Clock Controller back-up.
NT8D85AB	PRI card		J3	Network			Run directly to Network pack.
QCAD328A	PRI card		J2	DCHI		J2	Run directly to DCHI card.
NTND26	PRI card		J5	MSDL			
NT8D7207	PRI card		J4	I/O Panel			
RS-232	I/O Panel			Echo canceller			
RS-232	PRI card		J6	Echo canceller			
NT8D7205	I/O Panel			cross connect			Run via cabinet I/O panel to cross-connect terminal from switch.

Note: No additional cabling is required for multiple PRIs. The D-channel is associated through software in Overlay 17 (prompt PRI).

Table 34
Cable for the NT8D72 PRI card on 81C

Cable	From	Des.	Con.	To	Des.	Con.	Notes
QCAD130	PRI card			J1	Clock controller	CC-0	1
QCAD130	PRI card			J1	Clock controller	CC-0	2
QCAD130	PRI card			J2	Clock controller	CC-1	1
QCAD130	PRI card			J2	Clock controller	CC-1	2
QCAD110	Clock controller	CC-0	J3	Junctor board	JCTR	J11	3
QCAD110	Clock controller	CC-1	J3	Junctor board	JCTR	J12	
QCAD124	PRI card		J3	Network			4
QCAD328A	PRI card		J5	DCHI card		J2	5
NTND26	PRI card	J5		MSDL			
QCAD128	PRI card		J4	I/O Panel			6
QCAD133	I/O Panel			Patch Panel			6
QCAD129	PRI card		J6	I/O Panel			6
RS-232	I/O Panel			Echo Cancellor			
RS-232	PRI card		J6	Echo Cancellor			7
QCAD133	PRI card		J4	Patch Panel			7
RS-232	PRI card		J6	Echo Cancellor			7
Note 1: Only when primary clock source.							
Note 2: Only when secondary clock source.							
Note 3: Multi-group junctor board connection.							
Note 4: Run to connector on network pack.							

Note 5: Run directly to DCHI card.

Note 6: Run by means of cabinet I/O panel to CSU, echo canceller, or cross connect terminal.

Note 7: Run by means of cabinet I/O panel to cross-connect terminal or echo canceller from non shielded system.

Note 8: No additional cabling is required for multiple PRIs. The D-channel is associated through software in LD17, prompt PRI.

Table 35
Cable for the QPC720 PRI card on 51C and 61C

Cable	From	Des.	Con.	To	Des.	Con.	Comments
For half group only							
QCAD130 NT8D79xx	QPC720		J1	QPC471/ QPC775	CC-0	J2	Only when primary clock source.
QCAD130 NT8D79xx	QPC720		J1	QPC471/ QPC775	CC-0	J1	Only when secondary clock source.
NTND26	QPC720		J5	NT6D80			
For single group only							
QCAD130 NT8D79xx	QPC720		J2	QPC471/ QPC775	CC-1	J2	Only when primary clock source.
QCAD130 NT8D79xx	QPC720		J2	QPC471/ QPC775	CC-1	J1	Only when secondary clock source.
QCAD125 NT8D75xx	QPC471/ QPC775	CC-0	J3	QPC471/ QPC775	CC-1	J3	Clock controller back-up.
QCAD124 NT8D85xx	QPC720		J3	Network			Run directly to network card.
QCAD328A	QPC720		J5	QPC757		J2	Run directly to DCHI card.
NTND26	QPC720		J5	NT6D80			
QCAD133	I/O Panel			Patch panel			Run via cabinet I/O panel to CSU, Echo Cancellor, or cross-connect terminal.
QCAD129	QPC720		J6	I/O Panel			
RS-232	I/O Panel			Echo Cancellor			
RS-232	QPC720		J6	Echo Cancellor			
QCAD133 NT8D83xx	QPC720		J4	Patch panel			Run via cabinet I/O panel to cross-connect terminal or Echo Cancellor from non-shielded system.

Table 36
Cable for the QPC720 PRI card on 81C

Cable	From	Des.	Con.	To	Des.	Con.	Notes
QCAD130 NT8D79xx	QPC720			J1	QPC471 QCP775	CC-0	Only when primary clock source
QCAD130 NT8D79xx	QPC720			J1	QPC471 QCP775	CC-0	Only when secondary clock source
QCAD130 NT8D79xx	QPC720			J2	QPC471 QCP775	CC-1	Only when primary clock source
QCAD130 NT8D79xx	QPC720			J2	QPC471 QCP775	CC-1	Only when secondary clock source
QCAD110 NT8D74xx	QPC471 QCP775	CC-0	J3	QPC417	JCTR	J11	Multi-group junctor board connection
QCAD110 NT8D74xx	QPC471 QCP775	CC-1	J3	QPC417	JCTR	J12	
QCAD124 NT8D85xx	QPC720		J3	Network			Run to connector on network pack
QCAD328	QPC720		J5	QPC757		J2	Run directly to DCHI card
NTND26	QPC720		J5	NT6D80			
QCAD128 NT8D83xx	QPC720		J4	I/O Panel			Run via cabinet I/O panel to CSU, Echo Canceller, or cross-connect terminal
QCAD133 NT8D83xx	I/O Panel			Patch Panel			Run via cabinet I/O panel to CSU, Echo Canceller, or cross-connect terminal


Cable	From	Des.	Con.	To	Des.	Con.	Notes
QCAD129 NT9J93xx	QPC720		J6	I/O Panel			Run via cabinet I/O panel to CSU, Echo Cancellor, or cross-connect terminal
RS-232	I/O Panel			Echo Cancellor			
RS-232	QPC720		J6	Echo Cancellor			Run via cabinet I/O panel to Echo Cancellor or cross-connect terminal from non-shielded system
QCAD133 NT8D83xx	QPC720		J4	Patch Panel			Run via cabinet I/O panel to Echo Cancellor or cross-connect terminal from non-shielded system
RS-232	QPC720		J6	Echo Cancellor			Run via cabinet I/O panel to Echo Cancellor or cross-connect terminal from non-shielded system

Switch settings

Figure 56 shows the NT8D72AA, NT8D72AB, and NT8D72BA PRI dip switch settings for Meridian 1 options 51C, 61C, and 81C. Figure 57 shows the QPC720 PRI switch settings for Meridian 1 Options 51C, 61C, and 81C.

Table 37 indicates the Transmission equalization switch settings for the NT8D72 and QPC720 PRI cards for Meridian 1 Options 51C, 61C, and 81C.

Figure 56
NT8D72AA, NT8D72AB, NT8D72BA PRI dip switch settings for Options 51C, 61C and 81C

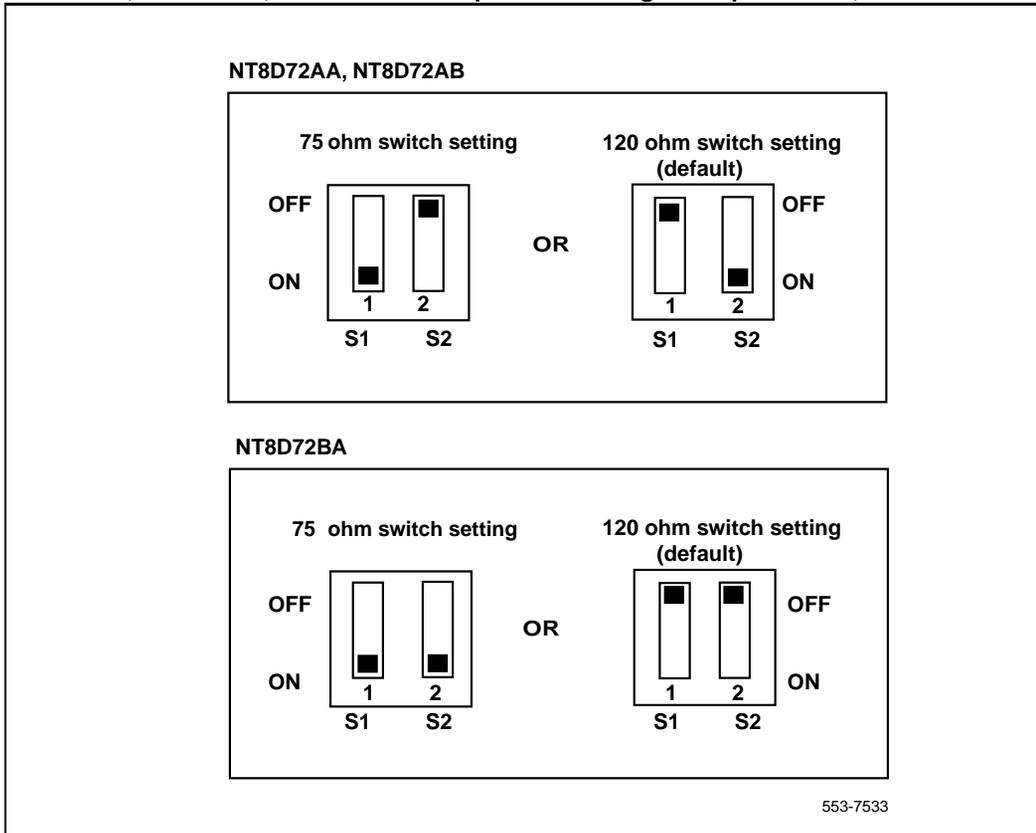

Note: For EuroISDN applications, the default setting (120 ohms) should be used.

Figure 57
QPC720 switch settings for Options 51C and 61C

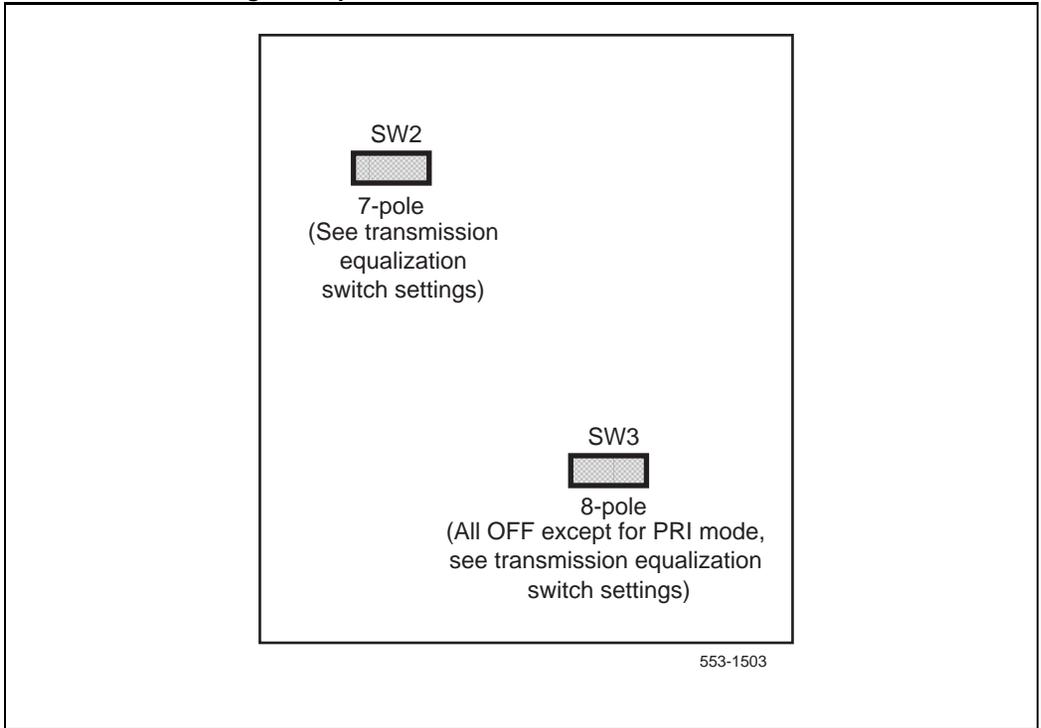


Table 37
NT8D72 and QPC720 PRI transmission equalization switch settings for Options 51C, 61C and 81C

Switch S2 settings	To repeatered facility	To cross-connect point
5 on	0 - 45 m (0 - 150 ft)	0 - 30 m (0 - 100 ft)
2, 4, 6 on	46 - 135 m (151 - 450 ft)	31 - 100 m (101 - 355 ft)
1, 3, 7 on	136 - 225 m (451 - 750 ft)	101 - 200 m (356 - 655 ft)
Switch 3 options for PRI with ESF		
SW3-1	on = extended superframe format (ESF)	
	off = superframe format (SF)	
<p>Note 1: All positions on S2 (location B22) are OFF except as shown under the column labeled "Switch S2 settings." The 8-pole SW3 (location E37) positions are OFF except for SW3-1 as shown for "Switch 3 option for DTI with ESF."</p> <p>Note 2: For D2, D3, or D4 framing formats (superframe formats), set all SW3 options to OFF.</p> <p>Note 3: For the DTI with ESF option, you must set the framing format as ESF with the DL0P prompt in LD17 before you set SW3-1 on the card.</p>		

Install NT8D72 and QPC720 PRI cards on 51C, 61C and 81C

Task summary list

The following is a summary of the tasks in this section:

- 1 Install the NT8D72 and QPC720 PRI on 51C, 61C, and 81C

Use Procedure 13 to install the NT8D72 and QPC720 PRI cards on Meridian 1 options 51C, 61C, and 81C.

Procedure 13

Install the NT8D72 and QPC720 PRI on 51C, 61C, and 81C

- 1 Determine the cabinet and shelf location of the circuit card to be installed. The following slots can be used if they are not required for other cards.

Table 38

Shelf and slot location of NT8D72 and QPC720 on 51C and 61C

System	Shelf	Slot
51C, 61C	NT6D39 CPU/NET	3–8 Note 1 18 Note 3
	NT8D35 DTI Exp Cube	2–3 Note 1 5–14 Note 1
	NT8D47 RPE Cube	1, 11, 12
81C	Core	0-3
	Network Module	5–10, 13–14
	RPE	1, 11, 12
<p>Note 1: DTI/PRI packs require two slots. The slot indicated is the maximum slot that the pack resides in. For example, the slot 14 pack uses slots 13 and 14.</p> <p>Note 2: The DTI/PRI pack cannot be installed in slot 11. The pack would come in contact with the BTU installed between slots 11 and 12.</p> <p>Note 3: Slot 18 is only available on CPU shelf, which has no MDU/FDU.</p> <p>Note 4: DTI/PRI pack could reside in slots 10 and 11, but cannot reside in slots 11 and 12 because of powering restrictions.</p>		

- 2 Unpack and inspect the PRI cards.

- 3 Set option switches on the PRI circuit cards.
- 4 Install PRI circuit card in the assigned shelf and slot.
- 5 Install network circuit card (if no network loop connection is available).
- 6 If required, install I/O adapters in I/O panel.
- 7 Run and connect the PRI cables.
- 8 If required, install connecting blocks at MDF or wall-mounted cross-connect terminal.
- 9 If required, designate connecting blocks at MDF or wall-mounted cross-connect terminal.
- 10 If required, install CSU or Echo Canceller.
- 11 Cross-connect PRI circuits.
- 12 Add related office data into system memory. Refer to the work order.
- 13 Run PRI verification tests.

Remove NT8D72 and QPC720 PRI cards from Options 51C, 61C, and 81C

Task summary list

The following is a summary of the tasks in this section:

- 1 Remove the NT8D72 QPC720 PRI from Options 51C, 61C and 81C

Use Procedure 14 to remove the NT8D72 and QPC720 PRI cards from Meridian 1 options 51C, 61C, and 81C.

Procedure 14

Remove the NT8D72 QPC720 PRI from Options 51C, 61C and 81C

- 1 Disable the D-channel in LD 96.
- 2 Disable Network Loop using LD 60. The command is DISL x.
- 3 If the circuit card is being completely removed, not replaced, remove data from memory.
- 4 Determine the location of the circuit cards to be removed.
- 5 Remove cross connections at MDF to wall-mounted cross-connect terminal.

- 6** Disconnect PRI cables at Echo Cancellor and at carrier interface (for example, Office Repeater and NCTE equipment).
- 7** Tag and disconnect cables from card. Rearrange Clock Controller card cables if required. This will affect call processing on DTI/PRI loops.
- 8** Remove PRI and network circuit cards. If the other circuit of a dual network card is in use, DO NOT remove the network card.
- 9** Pack and store circuit card.

Install an additional network shelf

Task summary list

The following is a summary of the tasks in this section:

- 1 Install an additional network shelf on 51C and 61C

Use Procedure 15 to install an additional network shelf, when additional shelf space is required for PRI cards on Meridian 1 options 51C and 61C. A QUD15 cooling unit is required for each additional shelf installed

CAUTION

Do not place the circuit packs in the shelf until Step 7 is completed

Procedure 15

Install an additional network shelf on 51C and 61C

- 1 Determine the cabinet and shelf location of the Network shelf to be installed.
- 2 Unpack and inspect the shelf.
- 3 Remove the existing left or right rear Peripheral Equipment (PE) shelf (if required).
- 4 Install the additional Network shelf in the PE (Step 3) location.
- 5 Install a QUD15 cooling unit directly below the Network shelf and secure with four mounting screws.
- 6 Install and connect the QCAD172A power cable to the added QUD15 cooling unit as follows:
 - If the added QUD15 is located below the left Network shelf, unplug the C11 connector from the QCAD111 power harness that connects to the existing left side QUD15.
 - If the added QUD15 is located below the right Network shelf, unplug the C21 connector from the QCAD111 power harness instead of the C11.

- Plug the C11 or C21 connector into the single-ended connector of the QCAD172A power cable.
 - Plug one of the two connectors at the other end of the C11 or C21 connector that was removed.
 - Plug the remaining connector of the QCAD172A power cable into the added QUD15.
- 7** At the QCAD111 power wiring harness, untie and then connect:
- the C17 power connection cable to the **right** rear Network shelf
 - the C19 power connection cable to the **left** rear Network shelf
- 8** Install PRI trunks and enter related shelf and PRI office data into switch memory.

NTCK43 Dual-port PRI2 installation and removal

Content list

The following are the topics in this section:

- [Reference list 179](#)
- [Introduction 179](#)
- [Setting up the NTCK43 180](#)
- [NTCK43 circuit pack locations 180](#)
- [NTCK43 switch settings 180](#)
- [Install the NTCK43 DPRI 185](#)

Reference list

The following are the references in this section:

X11 Networking Features and Services (553-2901-301)

ISDN PRI: Maintenance (553-2901-501)

Introduction

This section contains information required to install the NTCK43 DPRI on Meridian 1 system options 51C, 61C, 71, and 81C.

For installation and removal procedures pertaining to the NTB51AA Downloadable D-channel daughterboard, please refer to the section “NTBK51 DDCH installation and removal for the NTCK43, NT5D97 and NT5D12” on page 135.

Setting up the NTCK43


NTCK43 circuit pack locations

Each NTCK43 DPRI circuit pack requires 1 slot on a shelf. DPRI packs can be placed in any network slot.

NTCK43 switch settings

Figure 58 depicts the NTCK43 DPRI switch settings.

Figure 58
NTCK43 switch settings

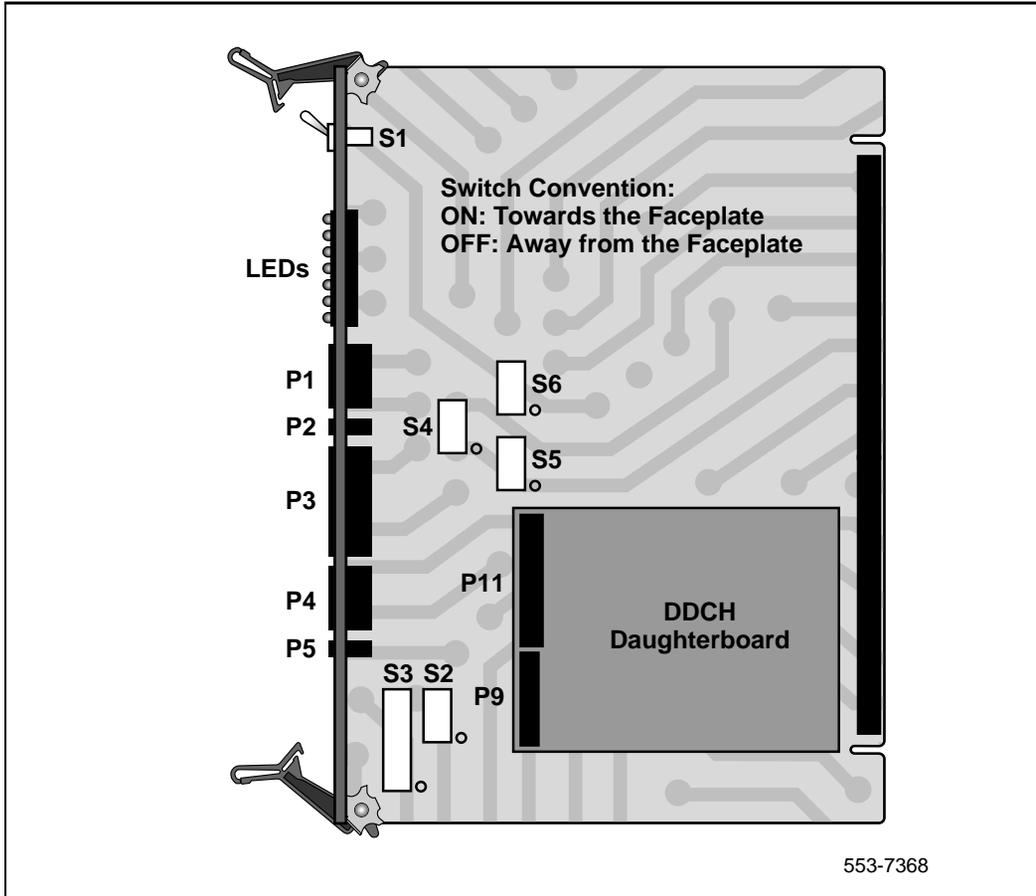

The NTCK43 DPRI pack has 6 switches, namely S1 to S6. These control the following functions:

S1: Faceplate Switch

S1 is the Faceplate Switch and corresponds to the ENET enable switch. Refer to Table 39.

Table 39
Faceplate switch setting - S1

Switch	UP	DOWN
S1	Dual PRI Enabled	Dual PRI Disabled

S2: Clock Controller Functions

Note: Switches S2 to S6 follow the convention for ON/OFF as follows:

ON is Towards the Faceplate.

OFF is Away from Faceplate.

Four options are available. Table S2 gives a summary of the switch settings.

Note: S2(3-4) are not presently used.

Table 40
Clock Controller settings - S2

S2-1	S2-2	Clock Options
OFF	OFF	Option 1
OFF	ON	Option 2
ON	OFF	Option 3
ON	ON	Option 4

S3: On-board DDCH address switch

This switch sets the address of the DDCH daughterboard only. It does not set the address of external D-channel handlers which are used with the Dual PRI. If external D-channel handlers are used then their address is set on the external DCHI card itself.

This address corresponds to the DNUM (0-15) that is assigned to Unit 0 of the DDCH during configuration. As a DDCH has 2 D Channels it is half the capacity of the MSDL but then it does not take up a cardslot. Address 0 is not normally assigned to the DDCH as it is commonly assigned to the System Terminal TTY0.

The DDCH Address (0-15) is set on S3 lower 8 switch positions, S3 (1-8) in Binary format, i.e. S3-1 is the Least Significant Bit. S3 positions 5-8 will be always ON (towards the faceplate). DDCH address can be in the range binary 0000 (Zero) to 1111 (Fifteen).

If the DDCH is not installed then the address set on the S3 switch does not matter. However if the DDCH is installed but not used then the address set on S3 should not conflict with any other DCHI address.

Note: S3 (9-10) are not used and are spare.

Note: The DDCH Address is set by setting the relevant positions of S3 to OFF.

Example 1: Setting up an address (DNUM) of "15" for the DDCH requires switch S3 positions 1, 2, 3 & 4 away from the Faceplate (OFF) and setting S3 positions 5-8 towards the Faceplate (ON).

Example 2: Setting up an address (DNUM) of "9" for the DDCH requires switch S3 positions 1 & 4 away from the Faceplate (OFF) and setting S3 positions 2,3, 5-8 towards the Faceplate (ON).

Table 41 gives a summary of the S3 on-board switch functions.

Table 41
Summary of on-board DDCH switch functions - S3

Switch	ON	OFF
S3-(1-8)	-	DDCH address
S3-9	Spare	Spare
S3-10	Spare	Spare

Note: S7 is not used with the DDCH daughter board (NTBK51) so all S7 switches should be set to “OFF” deactivating address matching in NT addressing mode.

S3 AND S7: On-board NTAG54 address switch settings

These switches reside on the NTAG54AA daughterboard, used for DASS2/DPNSS1 applications.

S4: Tx/Rx grounding options

Switch S4 provides the option to connect Frame Ground (FGND) to the carrier cable shield of the receive and / or transmit pair. This option is used in Some 75 Ohm applications. Table 42 gives a summary of the switch settings.

For 120 Ohm applications S4 (1-4) are set to OFF.

Table 42
Summary of on-board DDCH switch functions - S3

Switch	ON	OFF
	(Switch closed)	(Switch open)
S4-1	PRI 0 Rx Shield Grounded	PRI 0 Rx Shield Open
S4-2	PRI 0 Tx Shield Grounded	PRI 0 Tx Shield Open
S4-3	PRI 1 Rx Shield Grounded	PRI 1 Rx Shield Open
S4-4	PRI 1 Tx Shield Grounded	PRI 1 Tx Shield Open

S5-6: Impedance matching

CCITT recommendations provide options for the use of either 75 Ohm coaxial or 120 Ohm twisted pair cable. Both of these impedances are provided by the line interface. The impedance is switch selectable. Table 43 gives a summary of the switch settings.

Table 43
Summary of on-board DDCH switch functions - S3

Switch	ON	OFF
S6 (PRI unit 0)	75 ohm	120 ohm
S5 (PRI unit 1)	75 ohm	120 ohm

Install the NTCK43 DPRI

CAUTION

The static discharge bracelet located inside the cabinet must be worn before handling circuit cards. Failure to wear the bracelet can result in damage to the circuit cards.

- 1 Determine the cabinet and shelf location where the Dual PRI is to be installed. The Dual PRI can be installed in any Network slot.
- 2 Unpack and inspect circuit packs.
- 3 Set the option switches on the DPRI circuit pack before installation. Refer to "NTCK43 switch settings" on page 180.

S1 (faceplate switch) must be OFF when installing the Dual PRI otherwise an M1 Initialize may occur. S1 on the Dual PRI corresponds to the faceplate switch on the QPC414 Network pack.
- 4 Install DPRI circuit pack in the assigned shelf and slot.

The faceplate LEDs should flash 3 times.

Enable faceplate switch S1. This is the "Loop Enable" switch.
- 5 If required, install I/O adapters in I/O panel.
- 6 Run and connect the DPRI cables (refer to the 'Cabling requirements' section if required).
- 7 If required, install connecting blocks at MDF or wall mounted cross-connect terminal.
- 8 If required, designate connecting blocks at MDF or wall mounted cross-connect terminal.
- 9 If required, install Network Channel Terminating Equipment (NCTE).
- 10 Run PRI Verification Test.
- 11 Add related office data into switch memory. Refer to the work order and *X11 Networking Features and Services* (553-2901-301).
- 12 Run PRI status check. Refer to *ISDN PRI: Maintenance* (553-2901-501) for the PRI verification tests, DPRI self-test, PRI status check, and PRI start-up test.

NT5D97 Dual-port DTI2/PRI2 installation and removal

Content list

The following are the topics in this section:

- [Introduction 188](#)
- [NT5D97 circuit card locations 188](#)
- [Port definitions 188](#)
- [Replacement of a digital trunk \(NT8D72BA/QPC536E\) by a DDP2 card, case scenarios 189](#)
- [NT5D97 switch settings 190](#)
- [Trunk interface switches 190](#)
- [Ring ground switches 192](#)
- [On board DDCH address select switches 193](#)
- [Install the NT5D97 DDP2 197](#)
- [Task summary list 197](#)
- [Remove the NT5D97 DDP2 199](#)
- [Task summary list 199](#)
- [Configure the NT5D97 DDP2 200](#)

Introduction

This section contains information required to install the NT5D97 Dual-port DTI2/PRI2 (DDP2) card on Meridian 1 options 51C, 61C, and 81C.

For installation and removal procedures for the NTBK51AA Downloadable D-channel daughterboard, please refer to the section “NTBK51 DDCH installation and removal for the NTCK43, NT5D97 and NT5D12” on page 135.

NT5D97 circuit card locations

Each NT5D97 card requires one slot on a shelf. NT5D97 cards can be placed in any card slot in the network bus.

Port definitions

Since the NT5D97 card is dual-card, it equips two ports; these ports may be defined in the following combinations:

Port 0	Port 1
DTI2	DTI2
Not configured	DTI2
DTI2	Not configured
PRI2	PRI2
Not configured	PRI2
PRI2	Not configured
DTI2	PRI2
PRI2	DTI2

Replacement of a digital trunk (NT8D72BA/QPC536E) by a DDP2 card, case scenarios

The following discussion describes possible scenarios when replacing a digital trunk NT8D72BA PRI2 card or QPC536E DTI2 card configuration with a NT5D97 DDP2 card configuration.

Case 1 - The two ports of a QPC414 network card are connected to two digital trunks.

In this case, the QPC414 and the two digital trunks are replaced by a single DDP2 card, which is plugged into the network shelf in the QPC414 slot.

Case 2 - One port of the QPC414 card is connected to a digital trunk, and the second is connected to a peripheral buffer. Both cards are in network loop location.

In this case, the QPC414 should not be removed. The digital trunk is removed and the DDP2 card is plugged into one of the two empty slots.

Case 3 - The network shelf is full, one port of a QPC414 network card is connected to a digital trunk, and the second is connected to a peripheral buffer. This arrangement is repeated for another QPC414. The digital trunks are located in a shelf that provides only power.

In this case, the peripheral buffers will have to be re-assigned, so that each pair of buffers will use both ports of the same QPC414 card. The other QPC414 card may then be replaced by the NT5D97 DDP2.

Note in all cases - If an NT8D72BA card is being replaced by a DDP2 card, the D-channel Handler or MSDL may be either reconnected to the DDP2 card, or removed if an onboard NTBK51AA DDCH card is used.

NT5D97 switch settings

The NT5D97 DDP2 card is equipped with 6x2 sets of DIP switches for trunk parameters settings for port0 and port1 respectively. Additionally, the DDP2 card is equipped with one set of four DIP switches for the Ring Ground setting and one set of eight DIP switches for the D-channel Handler parameters setting.

The DIP switches are used for setting of default values of certain parameters. The general purpose switches are read by the firmware which sets the default values accordingly.

The parameters as shown in the tables that follow are set by the DIP switches. Factory setups are shown in bold.

Note: There is no switch setting required to select between the on-board NTBK51AA D-channel daughterboard, and an external DCHI/MSDL. The NT5D97 automatically detects when the on-board NTBK51AA D-channel daughterboard is used.

Trunk interface switches

Impedance level and unit mode

The S9/S15 switch selects the impedance level and loop operation mode (DTI2 or PRI2). Refer to Table 44.

Table 44
Impedance level and loop mode switch settings

Switch	Description	S9/S15 Switch Setting
1	Impedance level	OFF - 120 ohm ON - 75 ohm
2	Spare	
3	Spare	
4	Unit mode	OFF - loop operates in the DTI2 mode ON - loop operates in the PRI2 mode

Transmission mode

A per trunk switch (S4/S10) provides selection of the digital trunk interface type. Refer to Table 45.

Note: This setup should not be changed.

Table 45
Impedance level and loop mode switch settings

Description	S4/S10 Switch Setting
E1 Not used	OFF

Line Build Out

A per trunk set of three switches (S5/S11, S6/S12, and S7/S13) provides the dB value for the line build out. Refer to Table 46.

Note: This setup should not be changed.

Table 46
Trunk interface line build out switch settings

Description	Switch Setting		
	S5/S11	S6/S12	S7/S13
0 dB	OFF	OFF	OFF

Receiver Impedance

A per trunk set of four DIP switches (S8/S14) provides selection between 75 or 120 Ω values. Refer to Table 47.

Table 47
Trunk interface receiver impedance switch settings

Description		S8/S14 Switch Setting		
75 Ω	OFF	OFF	ON	OFF
120 Ω	OFF	OFF	OFF	ON

Ring ground switches

A set of four DIP switches (S2) selects which Ring lines are connected to ground. Refer to Table 48.

Table 48
Ring ground switch settings

Switch	Description	S2 Switch Setting
1	Trunk 0 Transmit	OFF - Ring line is not grounded ON - Ring line is grounded
2	Trunk 0 Receive	OFF - Ring line is not grounded ON - Ring line is grounded
3	Trunk 1 Transmit	OFF - Ring line is not grounded ON - Ring line is grounded
4	Trunk 1 Receive	OFF - Ring line is not grounded ON - Ring line is grounded

On board DDCH address select switches

In case of an on-board NTBK51AA D-channel daughterboard, set of four switches (S3) provide the daughterboard address. Refer to Table 49.

Note: There is no switch setting required for switch 8 of S3 (S3-8) to select between the on-board NTBK51AA D-channel daughterboard, and an external DCHI/MSDL. The NT5D97 automatically detects when the on-board NTBK51AA D-channel daughterboard is used.

Table 49
DCH mode and address select switch settings

Switch	Description	S3 Switch Setting
1-4	D-channel daughterboard Address	See Table 50
5-8	For future use.	OFF


Table 50 shows the possible selections of the NTBK51AA D-channel daughterboard address.

Table 50
NTBK51AA daughterboard address select switch settings

Device Address ¹	Switch Setting			
0 ²	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF
2	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF
8	OFF	OFF	OFF	ON
9	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON
11	ON	ON	OFF	ON
12	OFF	OFF	ON	ON
13	ON	OFF	ON	ON
14	OFF	ON	ON	ON
15	ON	ON	ON	ON
<p>Note 1: The maximum number of DCHI, MSDL, and DDCH devices in the system is 16. The Device Addresses are equivalent to the MSDL DNUM designations.</p> <p>Note 2: Device address 0 is commonly assigned to the System TTY0 Monitor.</p>				


Refer to Figure 59 and Figure 60 for switch functional areas and default settings.

Figure 59
Switch functional areas

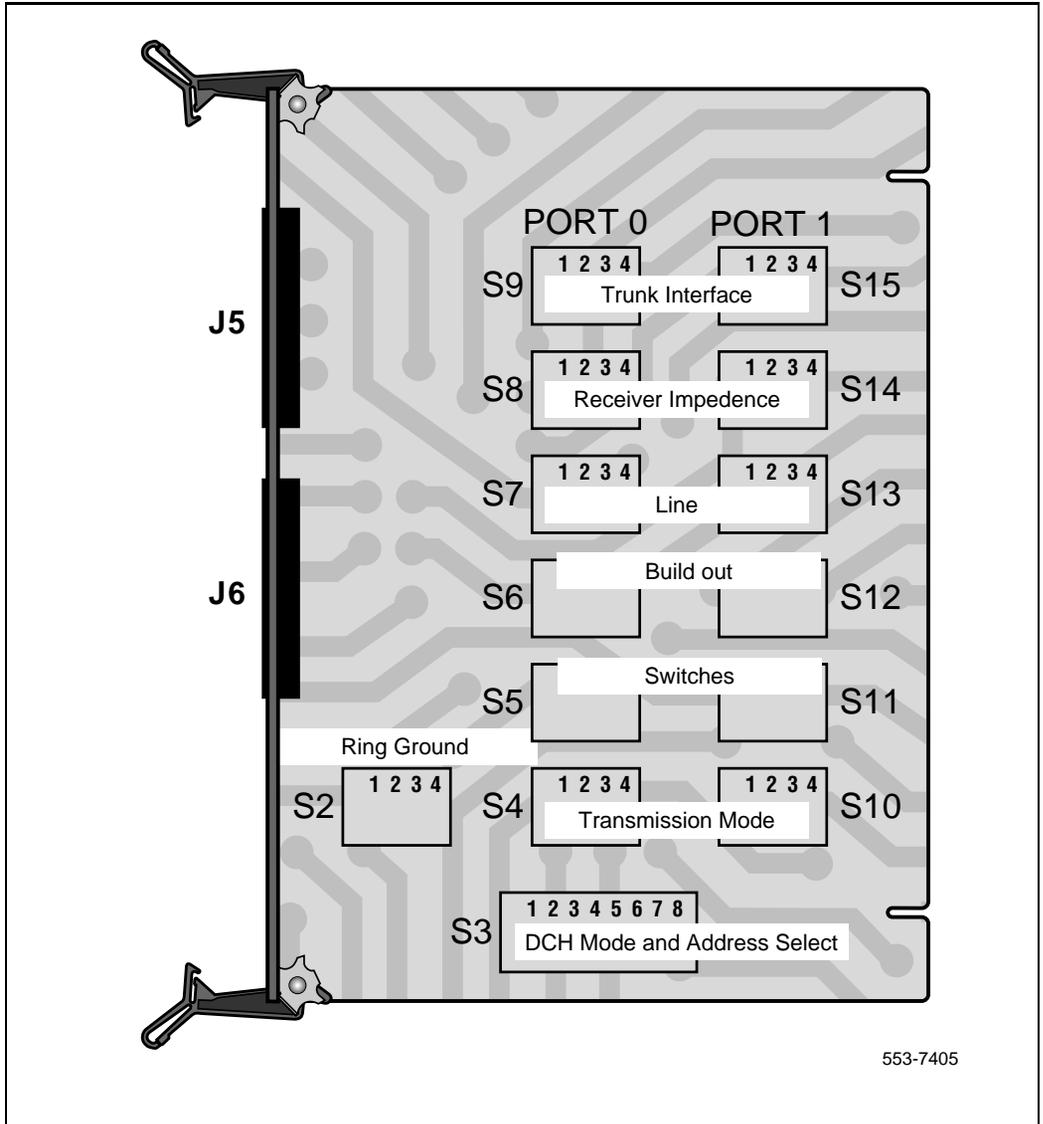

553-7405

Figure 60
Switch default settings

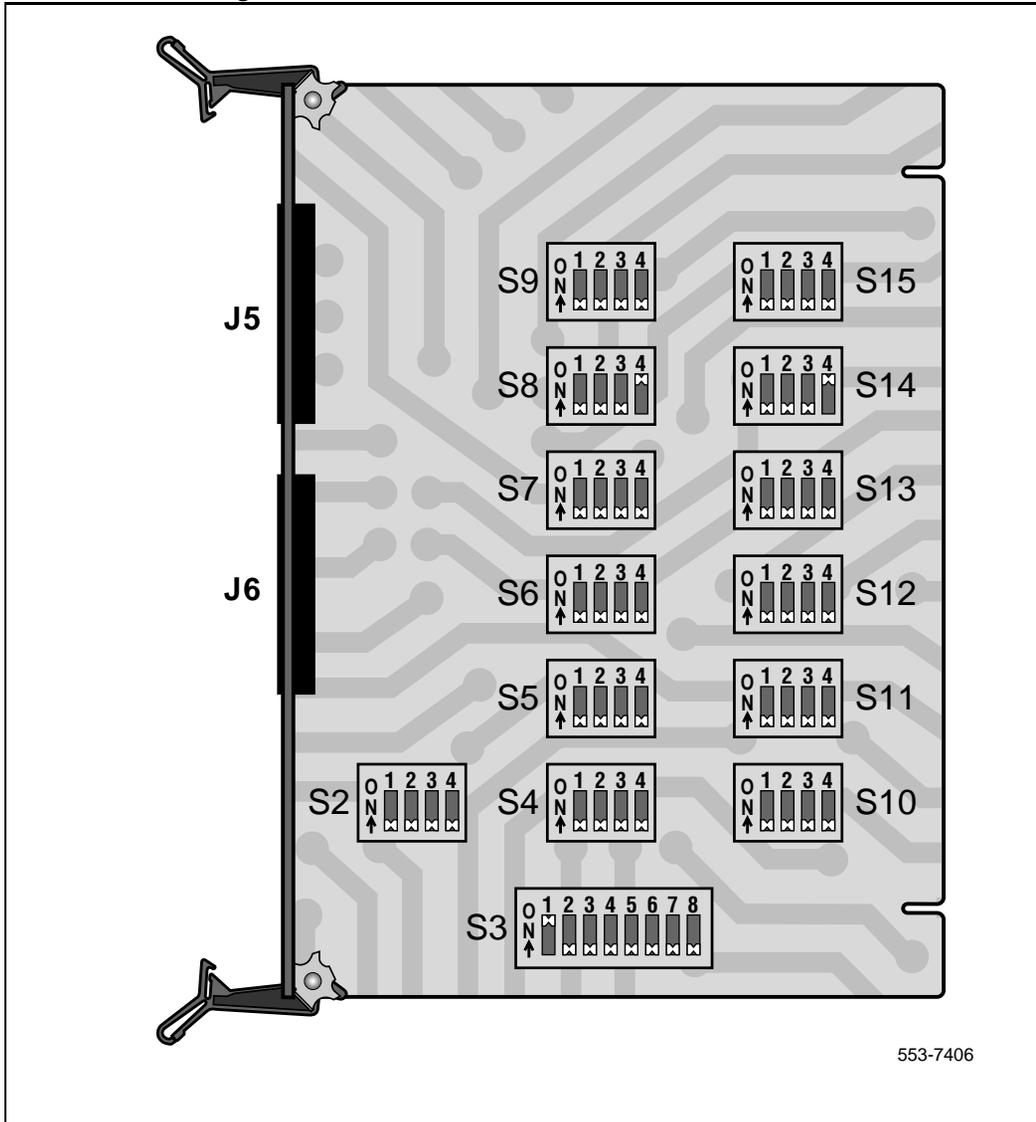

Install the NT5D97 DDP2

Task summary list

The following is a summary of the tasks in this section:

- 1 Install the NT5D97 on 51C, 61C, 81C

Use Procedure 16 to install the NT5D97 on Meridian 1 options 51C, 61C, and option 81C

CAUTION

The static discharge bracelet located inside the cabinet must be worn before handling circuit cards. Failure to wear the bracelet can result in damage to the circuit cards.

Procedure 16

Install the NT5D97 on 51C, 61C, 81C

- 1 Determine the cabinet and shelf location where the NT5D97 is to be installed. The NT5D97 can be installed in any card slot in the Network bus.
- 2 Unpack and inspect the NT5D97 and cables.
- 3 If a DDCH is to be installed, refer to the section “NTBK51 DDCH installation and removal for the NTCK43, NT5D97 and NT5D12” on page 135.
- 4 Set the option switches on the NT5D97 card before installation. Refer to “NT5D97 switch settings” on page 190.

The ENB/DIS (enable/disable faceplate switch) must be OFF (DIS) when installing the NT5D97, otherwise a system initialize may occur. The ENB/DIS on the NT5D97 corresponds to the faceplate switch on the QPC414 Network card.
- 5 Install NT5D97 card in the assigned shelf and slot.
- 6 Set the ENB/DIS faceplate switch to ON.

If the DDCH is installed, the DDCH LED should flash three times.
- 7 If required, install the I/O adapters in the I/O panel.

- 8 Run and connect the NT5D97 cables.

CAUTION

Clock Controller cables connecting the Clock Controller and NT5D97 card must **NOT** be routed through the center of the cabinet past the power harness. Instead they should be routed around the outside of the equipment shelves.

- 9 If required, install connecting blocks at the MDF or wall mounted cross-connect terminal.
- 10 If required, designate connecting blocks at the MDF or wall mounted cross-connect terminal.
- 11 If required, install a Network Channel Terminating Equipment (NCTE) or Line Terminating Unit (LTU).
- 12 Add related office data into switch memory.
- 13 Enable faceplate switch S1. This is the "Loop Enable" switch.

The faceplate LEDs should go on for 4 seconds then go off and the OOS, DIS and ACT LEDs should go on again and stay on.

IF DDCH is installed, the DCH LED should flash 3 times.
- 14 Run the PRI/DTI Verification Test.
- 15 Run the PRI status check.

Remove the NT5D97 DDP2

Task summary list

The following is a summary of the tasks in this section:

- 1 Remove the NT5D97 from 51C, 61C, 81C

Use Procedure 17 to remove the NT5D97 from Meridian 1 options 51C, 61C, and option 81C.

CAUTION

The static discharge bracelet located inside the cabinet must be worn before handling circuit cards. Failure to wear the bracelet can result in damage to the circuit cards.

Procedure 17

Remove the NT5D97 from 51C, 61C, 81C

- 1 Determine the cabinet and shelf location of the NT5D97 card to be removed.
- 2 Disable Network Loop using Overlay 60. The command is DISL “loop number.”

The associated DCHI may have to be disabled first. The faceplate switch ENB/DIS should not be disabled until both PRI2/DTI2 loops are disabled first.
- 3 If the NT5D97 card is being completely removed, not replaced, remove data from memory.
- 4 Remove cross connections at MDF to wall-mounted cross-connect terminal.
- 5 Tag and disconnect cables from card.

- 6 Rearrange Clock Controller cables if required.

CAUTION

Clock Controller cables connecting the Clock Controller and DDP2 card must **NOT** be routed through the center of the cabinet past the power harness. Instead they should be routed around the outside of the equipment shelves.

- 7 Remove the DDP2 card only if both loops are disabled. If the other circuit of a DDP2 card is in use, **DO NOT** remove the card. The Faceplate switch ENB/DIS must be in the OFF (DIS) position before the card is removed, otherwise the system will initialize.
- 8 Pack and store the NT5D97 card and circuit card.

Configure the NT5D97 DDP2

After the NT5D97 DDP2 has been installed, the system may be configured using the same procedures as for the standard NT8D72BA PRI2 and QPC536E DTI2 card.

Consider the following when configuring the NT5D97 DDP2 card:

- The Meridian 1 software allows four ports to be defined for the NT6D80 MSDL. The DDCH (NTBK51AA) card has only two ports, 0 and 1; therefore, ports 2 and 3 must not be defined when using the NTBK51AA;
- Port 0 of the NTBK51AA can only be defined to work with Loop 0 of the NT5D97 DDP2 card, and Port 1 of the NTBK51AA can only be defined to work with Loop 1 of the NT5D97. This relationship must be reflected when configuring a new DCH in overlay 17 (in response to the DCHL prompt, enter either 0 or 1 when specifying the loop number used by the DCH);
- You cannot define one of the DDP2 loops for the NTBK51AA DDCH, and the other loop for the NT6D11AF/NT5K75AA/NT5K35AA DCH card or the NT6D80 MSDL.
- When configuring the NT5D97 DDP2 in DTI2 outgoing dial pulse mode, a Digit Outpulsing patch is required.

NTD12 Dual-port DTI/PRI card installation

Content list

The following are the topics in this section:

- [Introduction 202](#)
- [NT5D12 circuit card locations 202](#)
- [Port definitions 202](#)
- [Replacement scenarios of a digital trunk \(QPC720/QPC472\) by a DDP card 203](#)
- [NT5D12 switch settings 204](#)
- [General Purpose Switches 204](#)
- [Trunk interface switches 2050](#)
- [Ring ground switches 206](#)
- [DCH mode and address select switches 207](#)
- [Install the NT5D12 DDP 211](#)
- [Task summary list 211](#)
- [Remove the NT5D12 DDP 213](#)
- [Task summary list 213](#)
- [Configure the NT5D12 DDP 214](#)

Introduction

This section contains information required to install the NT5D12 1.5 Mb DTI/PRI Dual-port (DDP) card on Meridian 1 options 51C, 61C, and 81C.

For installation and removal procedures for the NTBK51AA Downloadable D-channel daughterboard, please refer to the section “NTBK51 DDCH installation and removal for the NTCK43, NT5D97 and NT5D12” on page 135.

NT5D12 circuit card locations

Each NT5D12 circuit card requires one slot on a shelf. NT5D12 cards can be placed in any card slot in the network bus, subject to the cautionary note below.

Port definitions

Since the NT5D12 card is dual-card, it equips two ports; these ports may be defined in the following combinations:

Port 0	Port 1
DTI	DTI
DTI	PRI
PRI	DTI
PRI	PRI
DTI	Not configured
PRI	Not configured
Not configured	PRI
Not configured	DTI

Replacement scenarios of a digital trunk (QPC720/QPC472) by a DDP card

The following discussion describes possible scenarios when replacing a digital trunk QPC720 PRI card or QPC472 DTI card configuration with a NT5D12 DDP card configuration.

Case 1 - The two ports of a QPC414 network card are connected to two digital trunks.

In this case, the QPC414 and the two digital trunks are replaced by a single DDP card, which is plugged into the CE shelf in the QPC414 slot.

Case 2 - One port of the QPC414 card is connected to a digital trunk, and the second is connected to a peripheral buffer. Both cards are in network loop location.

In this case, the QPC414 should not be removed. The digital trunk is removed and the DDP card is plugged into one of the two empty slots.

Case 3 - The CE shelf is full, one port of a QPC414 network card is connected to a digital trunk, and the second is connected to a peripheral buffer. This arrangement is repeated for another QPC414. The digital trunks are located in a shelf that provides only power.

In this case, the peripheral buffers will have to be re-assigned, so that each pair of buffers will use both ports of the same QPC414 card. The other QPC414 card may then be replaced by the NT5D12 DDP.

Note in all cases - If a QPC720 card is being replaced by a DDP card, the D-channel Handler or MSDL may be either reconnected to the DDP card, or removed if an onboard NTBK51AA DDCH card is used.

NT5D12 switch settings

The NT5D12 card is equipped with 6x2 sets of DIP switches for trunk parameters settings for port0 and port1 respectively. Additionally, the NT5D12 card is equipped with one set of four DIP switches for the Ring Ground setting and one set of eight DIP switches for the D-channel Handler parameters setting.

The DIP switches are used for setting of default values of certain parameters. The general purpose switches are read by the firmware which sets the default values accordingly.

The following parameters are being set by the DIP switches. Factory setups are shown in bold.

General Purpose Switches

A per trunk set of four DIP switches provides the default setting for operational modes. Switch set S9 is used for Trunk 0. Switch set S15 is used for Trunk 1. Refer to Table 51'

Table 51
General purpose switch settings

Switch	Description	S9/S15 Switch Setting
1	Framing Mode	OFF - ESF ON - SF
2	Yellow Alarm Method	OFF - FDL ON - Digit2
3	Zero Code Suppression Mode	OFF - B8ZS ON - AMI
4	Unused	OFF

Trunk interface switches

Transmission Mode

A per trunk switch provides selection for T1 transmission. See Table 52.

Table 52
Trunk interface transmission mode switch settings

Description	S4/S10 Switch Setting
For future use.	OFF
T1	ON

Line Build Out

A per trunk set of three switches provides selection between 0, 7.5 or 15 dB values. See Table 53.

Table 53
Trunk interface line build out switch settings

Description	Switch Setting		
	S5/S11	S6/S12	S7/S13
0 dB	OFF	OFF	OFF
7.5 dB	ON	ON	OFF
15 dB	ON	OFF	ON

Receiver Impedance

A per trunk set of four DIP switches provides selection between 75, 100 or 120 Ω values. See Table 54.

Table 54
Trunk interface receiver impedance switch settings

Description		S8/S14 Switch Setting		
75 Ω	OFF	OFF	ON	OFF
100 Ω	ON	OFF	OFF	ON
120 Ω	OFF	OFF	OFF	ON

Ring ground switches

A set of four DIP switches selects which Ring lines are connected to ground. See Table 55

Table 55
Ring ground switch settings

Switch	Description	S2 Switch Setting
1	Trunk 0 Transmit	OFF - Ring line is not grounded ON - Ring line is grounded
2	Trunk 0 Receive	OFF - Ring line is not grounded ON - Ring line is grounded
3	Trunk 1 Transmit	OFF - Ring line is not grounded ON - Ring line is grounded
4	Trunk 1 Receive	OFF - Ring line is not grounded ON - Ring line is grounded

DCH mode and address select switches

A set of eight DIP switches selects between an on-board NTBK51AA D-channel daughterboard and an external MSDL/DCHI card. In case of an on-board NTBK51AA D-channel daughterboard, four of the switches provide the daughterboard address. See Table 56.


Table 56
DCH mode and address select switch settings

Switch	Description	S3 Switch Setting
1-4	D-channel daughterboard Address	See Table 57
5-7	For future use.	OFF
8	External DCH or Onboard DDCH	OFF - MSDL or DCHI card ON - Onboard DDCH daughterboard

Table 57
NTBK51AA daughterboard address select switch settings

Device Address ¹	Switch Setting			
0 ²	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF
2	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF
8	OFF	OFF	OFF	ON
9	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON
11	ON	ON	OFF	ON
12	OFF	OFF	ON	ON
13	ON	OFF	ON	ON
14	OFF	ON	ON	ON
15	ON	ON	ON	ON
<p>Note 1: The maximum number of DCHI, MSDL, and DDCH devices in the system is 16. The Device Addresses are equivalent to the MSDL DNUM designations.</p> <p>Note 2: Device address 0 is commonly assigned to the System Monitor.</p>				

Figure 61
Switch functional areas on the NT5D12

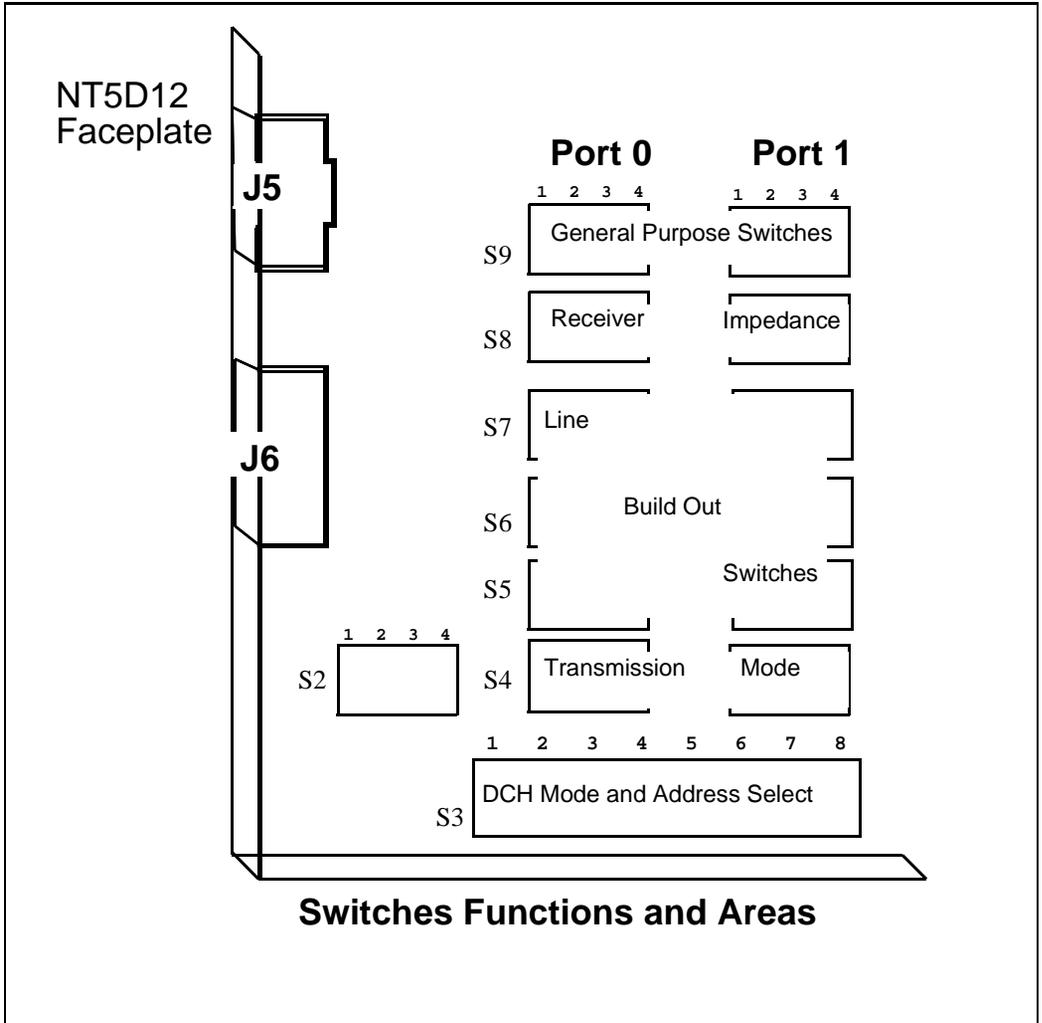

Install the NT5D12 DDP

Task summary list

The following is a summary of the tasks in this section:

- 1 Install the NT5D12 on options 51C, 61C, 81C

Use Procedure 18 to install the NT5D12 on Meridian 1 options 51C, 61C, and 81C.

CAUTION



The static discharge bracelet located inside the cabinet must be worn before handling circuit cards. Failure to wear the bracelet can result in damage to the circuit cards.

Procedure 18

Install the NT5D12 on options 51C, 61C, 81C

- 1 Determine the cabinet and shelf location where the NT5D12 card is to be installed. The NT5D12 can be installed in any card slot in the Network bus, subject to the cautionary note below.

CAUTION



Some installed-based systems may have a Bus Terminating Unit (BTU) already installed. This may interfere with a selected NT5D12 card location. In such cases, the NT5D12 should be installed in an alternate network bus card slot location.

- 2 Unpack and inspect circuit cards and cables.
- 3 If a DDCH is to be installed, refer to “NTBK51 DDCH installation and removal for the NTCK43, NT5D97 and NT5D12” on page 135.
- 4 Set the option switches on the NT5D12 circuit card before installation. Refer to “NTBK51 DDCH installation and removal for the NTCK43, NT5D97 and NT5D12” on page 135.

S1 (faceplate switch) must be OFF (DIS) when installing the NT5D12. S1 on the NT5D12 corresponds to the faceplate switch on the QPC414 Network card.
- 5 Install the NT5D12 circuit card in the assigned shelf and slot.

- 6 Add related office administration data into the system memory.
- 7 If required, install the I/O adapters in the I/O panel.
- 8 Run and connect the NT5D12 cables

CAUTION

Clock Controller cables connecting the Clock Controller and NT5D12 card must **NOT** be routed through the center of the cabinet past the power harness. Instead they should be routed around the outside of the equipment shelves.

- 9 If required, install connecting blocks at MDF or wall mounted cross-connect terminal.
- 10 If required, designate connecting blocks at MDF or wall mounted cross-connect terminal.
- 11 If required, install Network Channel Terminating Equipment (NCTE).
- 12 Enable faceplate switch S1. This is the "Loop Enable" switch.
The faceplate LEDs should go on for 4 seconds then go off and the OOS, DIS and ACT LEDs should go on again and stay on.
IF DDCH is installed, the DCH LED should flash 3 times.
- 13 Run PRI/DTI Verification Test.
- 14 Run PRI status check.

Remove the NT5D12 DDP

Task summary list

The following is a summary of the tasks in this section:

1 Remove the NT5D12 DDP

Use Procedure 19 to remove the NT5D12 from Meridian 1 options 51C, 61C, and 81C.

CAUTION

The static discharge bracelet located inside the cabinet must be worn before handling circuit cards. Failure to wear the bracelet can result in damage to the circuit cards.

Procedure 19

Remove the NT5D12 DDP

- 1 Determine the cabinet and shelf location of the NT5D12 card to be removed.
- 2 Disable Network Loop using Overlay 60. The command is DISL "loop number."

The associated DCHI may have to be disabled first. The faceplate switch S1 should not be disabled until both PRI loops are disabled first.
- 3 If the NT5D12 card is being completely removed, not replaced, remove data from memory.
- 4 Remove cross connections at MDF to wall-mounted cross-connect terminal.
- 5 Tag and disconnect cables from card.
- 6 Rearrange Clock Controller cables if required.

CAUTION

Clock Controller cables connecting the Clock Controller and NT5D12 card must **NOT** be routed through the center of the cabinet past the power harness. Instead they should be routed around the outside of the equipment shelves.

- 7 If the other circuit of a NT5D12 card is in use, **DO NOT** remove the card.
- 8 Remove the NT5D12 card only if both loops are disabled. Switch S1 (faceplate switch) must be in the OFF (DIS) position before the card is removed.
- 9 Pack and store the NT5D12 card and circuit card.

Configure the NT5D12 DDP

After the NT5D12 DDP has been installed, it may be configured using the same procedures as for the standard QPC720 PRI card.

Consider the following when configuring the NT5D12 DDP card:

- The Meridian 1 software allows four ports to be defined for the NT6D80 MSDL. The DDCH (NTBK51AA) card has only two ports, 0 and 1; therefore, ports 2 and 3 must not be defined when using the NTBK51AA;
- Port 0 of the NTBK51AA can only be defined to work with Loop 0 of the NT5D12 DDP card, and Port 1 of the NTBK51AA can only be defined to work with Loop 1 of the NT5D12. This relationship must be reflected when configuring a new DCH in overlay 17 (in response to the DCHL prompt, enter either 0 or 1 when specifying the loop number used by the DCH);
- You cannot define one of the NT5D12 loops for the NTBK51AA DDCH, and the other loop for the QPC757 DCHI or the NT6D80 MSDL.

Clock Controller description and installation

Content list

The following are the topics in this section:

- [Reference list 216](#)
- [Introduction 216](#)
- [Description 216](#)
- [Need for synchronization 217](#)
- [Synchronization methods 217](#)
- [Hierarchical synchronization 218](#)
- [Stratum levels 220](#)
- [Frame slip 220](#)
- [Guidelines 222](#)
- [Modes of operation 229](#)
- [Supported Clock Controllers 229](#)
- [Installation procedures 231](#)
- [Determine slots and shelves 231](#)
- [Set switches 232](#)
- [Start the Clock Controller 232](#)
- [Clock Controller commands 233](#)
- [Install or replace a Clock Controller on option 51C, 61C half group 233](#)

- [Install or replace a Clock Controller on option 51C, 61C half group 235](#)
- [Install or replace a Clock Controller on option 81C 237](#)

Reference list

The following are the references in this section:

Option 11C 1.5Mb DTI/PRI (553-3011-310)

Option 11C 2.0Mb DTI/PRI (553-3011-315)

Introduction

This chapter discusses the principles on the use of a Clock Clacker, and provides procedures on how to install a Clock Controller on Meridian 1 options 51C, 61C, and 81C.

Note 1: The description section of this chapter applies to all supported Meridian 1 systems, that is, options 11C, 51C, 61C, and 81C. However, the installation procedures apply only to options 51C, 61C, and 81C. For option 11C specific information, refer to *Option 11C 1.5Mb DTI/PRI (553-3011-310)* and *Option 11C 2.0Mb DTI/PRI (553-3011-315)*.

Also, the illustrations used in the description section depict an option 11C. However, the system may also be representative of an option 51C, 61C, or 81C.

Description

This section provides an overview on the use of Clock Controllers on Meridian 1 system options 11C, 51C, 61C, and 81C.

Note: The QPC775 Clock Controller is currently not available for U.S. markets. The QPC471 and QPC775 Clock Controllers cannot be mixed in one system. Vintages A through G of the QPC471 Clock Controller can be used in one system; vintage H of QPC471 Clock Controllers cannot be mixed with Clock Controllers of other vintages.

Note: For EuroISDN applications, and for use on the Meridian 1 system Option 81C in international markets, vintage QPC77E is required.

The QPC775 Clock Controller card currently is not compatible with Stratum 3 clocking in the U.S.A. Therefore, it is available for only the Canadian and International markets.

Need for synchronization

Digital trunking requires synchronized clocking so that a shift in one clock source will result in an equivalent shift of the same size and direction in all parts of the network.

When digital signals are being transported over a communication link, the receiving end must operate at the same frequency (data rate) as the originating end to prevent loss of information. This is referred to as link synchronization. If both ends of a communication link are not in synchronization, data bit slips occur and therefore a loss of data results. In general, accurate timing is very important, but more importantly synchronized timing is a must for reliable data transfer.

When only two Meridian 1 switches are interconnected, synchronization can be achieved by operating the two systems in a master/slave mode whereby one system derives its timing from the other. However, in a network of digital systems, slips can be better prevented by forcing all digital systems to use a common reference clock (see Figure 63).

Synchronization methods

There are two common methods of operation for maintaining timing coordination between switching systems, Plesiosynchronous and Mesosynchronous.

Plesiosynchronous operation

In a Plesiosynchronous operation, nodal clocks run independently (free run) at the same nominal frequency. There are frequency differences between clocks resulting in frame slips (see “Frame slip” on page 220.) The magnitude of frame slips are directly proportional to the frequency difference. Slips are inevitable but can be minimized by using very stable clocks and elastic stores or buffers. These buffers are capable of absorbing a certain number of data bits to compensate for slight variances in clock frequencies.

Mesosynchronous operation

In a Mesosynchronous operation, nodal clocks are continuously and automatically locked to an external reference clock. With this method, frame slips can be eliminated if elastic stores are large enough to compensate for transmission variances. Mesosynchronous operation is virtually slip free.


Whenever possible the Meridian 1 PBX uses the Mesosynchronous mode of operation by using the Clock Controller circuit cards to lock onto an external reference source (i.e. the Central Office, another Meridian 1 PBX, etc.). This statement is true unless the Meridian 1 is used as a Master in an independent/private network (no digital links to a higher Node Category).

In an isolated private network, the Meridian 1 clock controller can operate in free run mode and act as a master clock to be tracked by other PBX systems in the private network.

Hierarchical synchronization

Figure 63 provides a general view of a Digital Network Synchronization including the four stratum levels Node Categories of clocks (Stratum 1 being the highest--most accurate to Stratum 4 being the lowest). Meridian 1 clocking meets Node Category E--Stratum 4 requirements. Also shown are ways of providing a Secondary Clock Source while preventing timing loops.

Figure 63
Hierarchical Synchronization

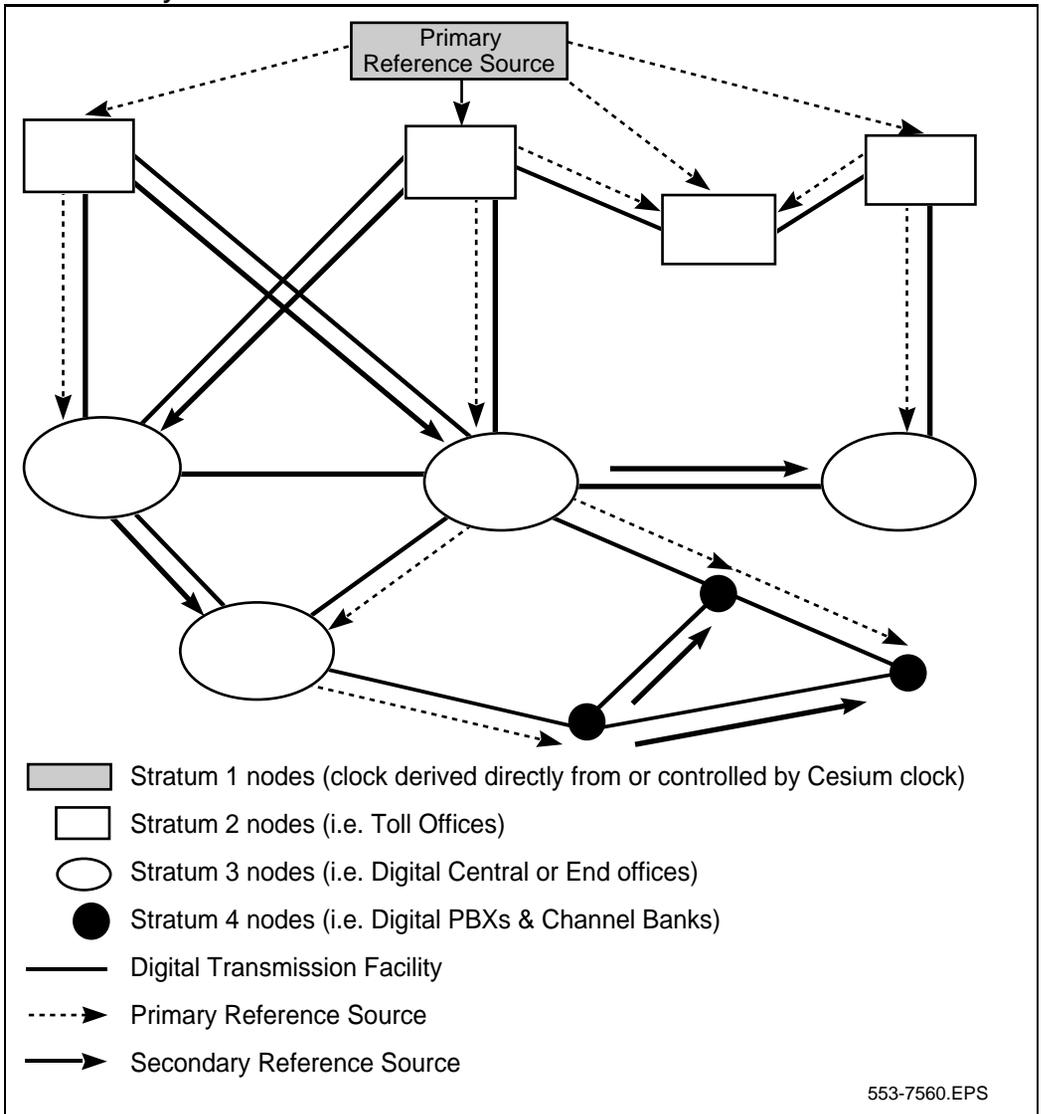

Stratum levels

In a digital network, nodes are synchronized using a priority master/slave method. Digital nodes are ranked in Stratum levels 1 to 5. Each node is synchronized to the highest ranking node in its neighborhood with which it has a direct link. Refer to Table 58.

Table 58
Node categories and stratum levels

	Stratum 2	Stratum 3	Stratum 4
Accuracy	$\pm 1.6 \cdot 10^{-8}$ Hz	$\pm 4.6 \cdot 10^{-6}$ Hz	$\pm 3.2 \cdot 10^{-5}$ Hz
Holdover	$1 \cdot 10^{-10}$ per day	≤ 255 frame slips in 1st 24 hours	Not Required
Hardware Duplication	Required	Required (Note 1)	Not Required
MTIE During Rearrangement	MTIE ≤ 1 usec Phase Change Slope: ≤ 81 ns in any 1.326 msec	MTIE ≤ 1 usec Phase Change Slope: ≤ 81 ns in any 1.326 msec	No Requirement (Note 2)
Pull-in Range	$3.2 \cdot 10^{-8}$ Hz	$9.2 \cdot 10^{-6}$ Hz	$6.4 \cdot 10^{-5}$ Hz
Dedicated Timing Required	Required	Required	Not required

Note 1: Non-duplicated clock hardware that meets all other stratum 3 requirements is referred to as stratum 3ND.

Note 2: Stratum 4 clock hardware that meets MTIE requirements during rearrangements is referred to as 4E.

Frame slip

Digital signals must have accurate clock synchronization for data to be interleaved into or extracted from the appropriate timeslot during multiplexing and demultiplexing operations. A Frame Slip is defined (for 2 Mb links) as the repetition of, or deletion of the 256 data bits of a CEPT frame due to a sufficiently large discrepancy in the read and write rates at the buffer (clocks aren't operating at exactly the same speed).

When data bits are written into (added to) a buffer at a slightly *higher* rate than that at which they are being read (emptied), sooner or later the buffer overflows. This is a slip-frame deletion.

In the opposite situation, when data bits are written (added) into a buffer at slightly *lower* rate than that at which they are being read (emptied), eventually the buffer runs dry or underflows. This is also a slip-frame repetition.

A 1.5 Mb PRI contains a buffer large enough to hold about 2 full DS-1 frames ($193 \times 2 = 386$). A 2 Mb PRI contains a buffer large enough to contain 2 full frames ($256 \times 2 = 512$ bits). The buffer is normally kept half full (1 frame).

Slippage has impact on the data being transferred, as is shown in Table 59. All of the degradations shown in the table can be controlled or avoided with proper clock synchronization.

Table 59
Performance Impact of one slip on service type

Service	Potential Impact
Encrypted Text	Encryption key must be resent.
Video	Freeze frame for several seconds. Loud pop on audio.
Digital Data	Deletion or repetition of Data. Possible Misframe.
Facsimile	Deletion of 4-8 scan lines. Drop Call.
Voice Band Data	Transmission Errors for 0.01 to 2 s. Drop Call.
Voice	Possible Click


Guidelines

Some key points to keep in mind when designing Network Synchronization:

- Where possible, the Master Clock Source should always be from a Node Category/Stratum with higher clock accuracy, that is, a PBX connected to the Central Office (CO.) The CO is the Master and the PBX is the Slave.
- The source should not be in free-run itself (providing its own clock) unless it is operating in a fully independent network where the source acts as a Master (see “Plesiosynchronous operation” on page 217.)
- When connecting two PBXs together (no CO connections), the most reliable PBX should be the Master. Reliability here refers to Dual CPU/Dual Clock, battery back-up or stratum level of the clock controller.
- Avoid timing loops. A timing loop occurs when a clock using as its reference frequency a signal that it itself traceable to the output of that clock. The formation of such a closed timing loop leads to frequency instability and is not permitted. Timing loops are sometimes unavoidable on the secondary clock reference source.
- Ensure all CO/PBX links used as clock references have a traceable path back to the same stratum 1 clock source.


While it is beyond the scope of this discussion to provide detailed Network Synchronization, the following examples illustrate some of the basic concepts to achieve stable clocking.

Figure 64
Example 1, Isolated Private Network

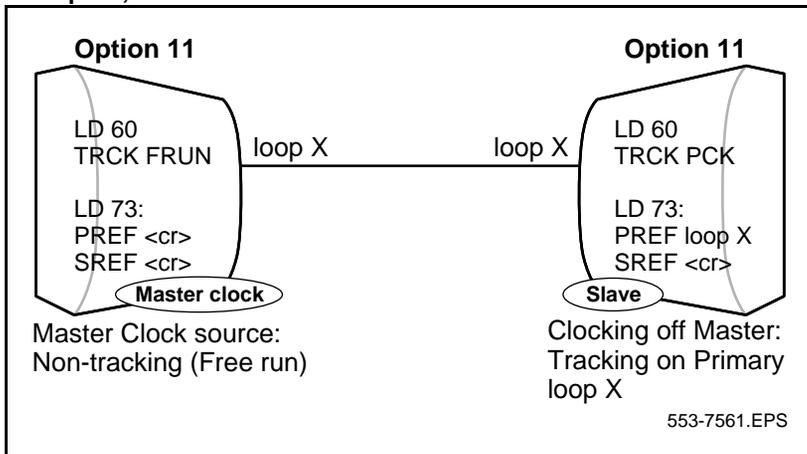


In this example, there is no digital connection to the Central Office.

Figure 65
Example 2, Isolated Private Network with Secondary Reference Clock

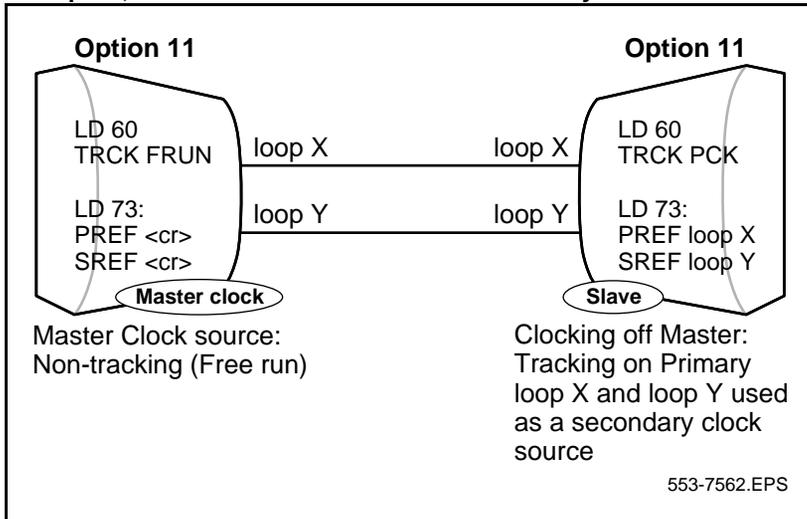


In this example, there is no digital connection to the Central Office. For tie lines between PBXs facilitated by a central office, clocking is derived from the PBX, not the CO. When a second Digital loop is available, it can be used as a Secondary Clock source in case the Primary Source fails.

Figure 66
Example 3, Clocking Hierarchy referenced to a Public Network Master Clock

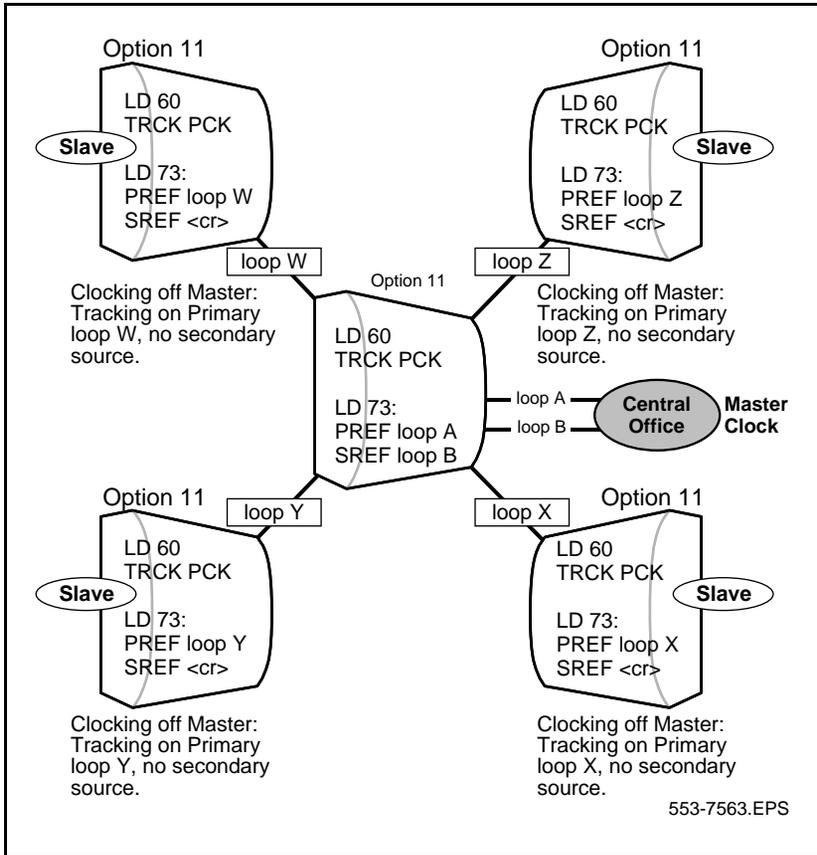

This is an example of a “STAR” arrangement— one Hub PBX is linked to the Central Office and all other PBXs are connected as slaves. When a second Digital loop from the Meridian 1 which forms the hub of this network becomes available, it can be used as a Secondary Clock Source in case the Primary Source fails.


Figure 67
Example 4, Alternate Clocking from the same CO

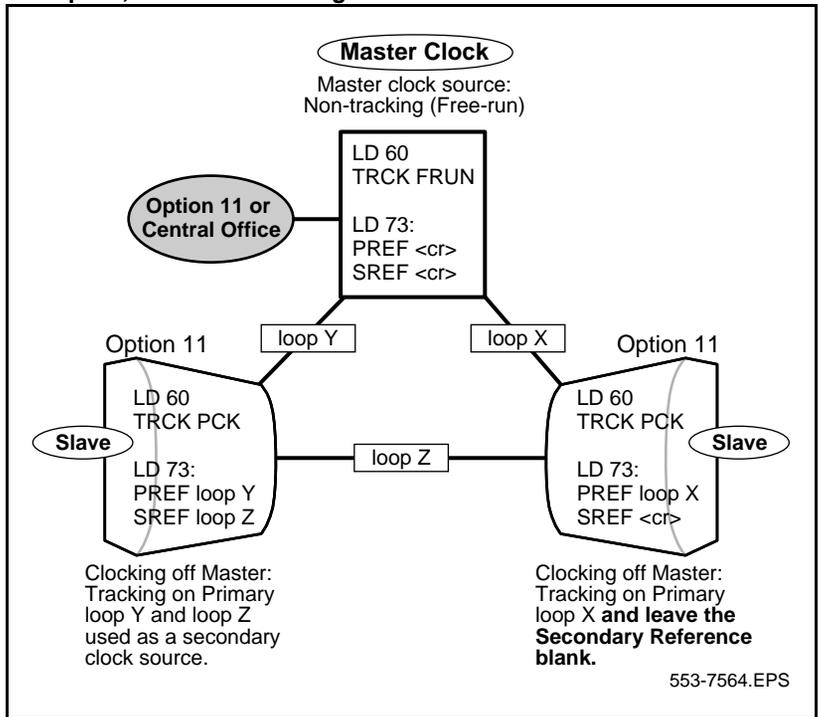

In this case, a digital connection to the Central Office may exist (i.e. Loops X and Y). When a second Digital loop from the CO or Master M-1 becomes available, it can be used as a Secondary Clock Source in case the Primary Source fails.

To avoid timing loops, in example 4-4 the most reliable slave system should not have a Secondary Clock Source (SREF= <cr>). In this example, this is illustrated by the node which supports loops X and Z.

Figure 68
Example 5, no digital connection to the CO

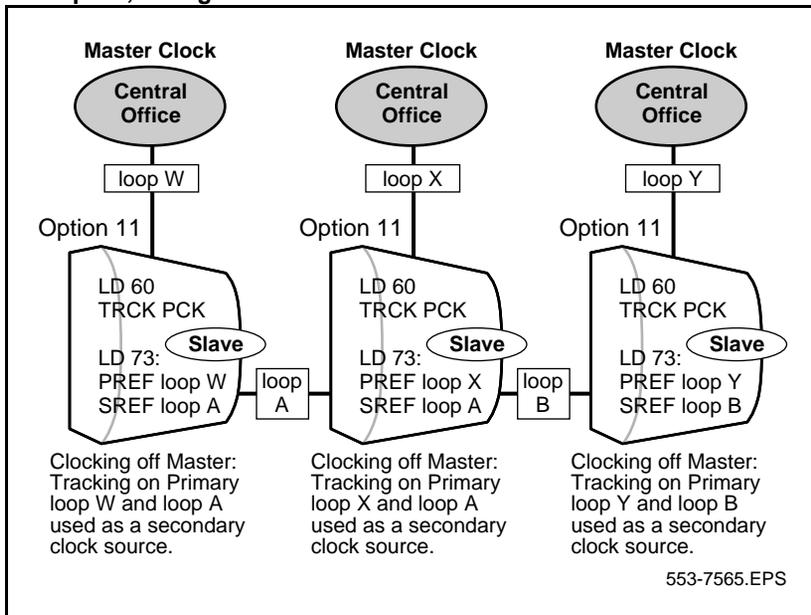


In this example, digital connections to the Central Office do exist. When a second Digital loop from the CO becomes available, it can be used as a Secondary Clock Source in case the Primary Source fails.

Slaves can track on each other as a secondary source since the chances of both links to the Central Offices going down at the same time are minimal (very unlikely).

All Central Offices must have a path back to the same stratum 1 source.


Figure 69
Example 6, Complex Isolated Private Network

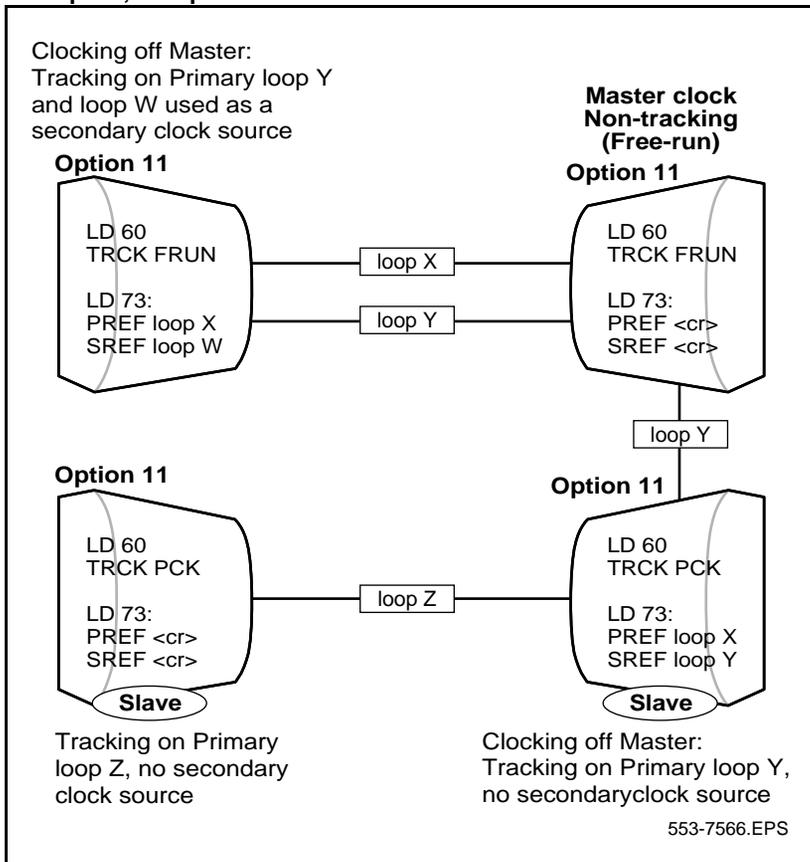

Digital connections to the Central Office do not exist in this example. If it does, the PBX connected to it will track off the CO and will in turn be used as a clock source to other nodes.

When a second Digital loop from the Master Meridian 1/SL-1 becomes available, it can be used as a Secondary Clock Source in case the Primary Source fails.

Figure 70
Example 7, Network Clocking with MUX

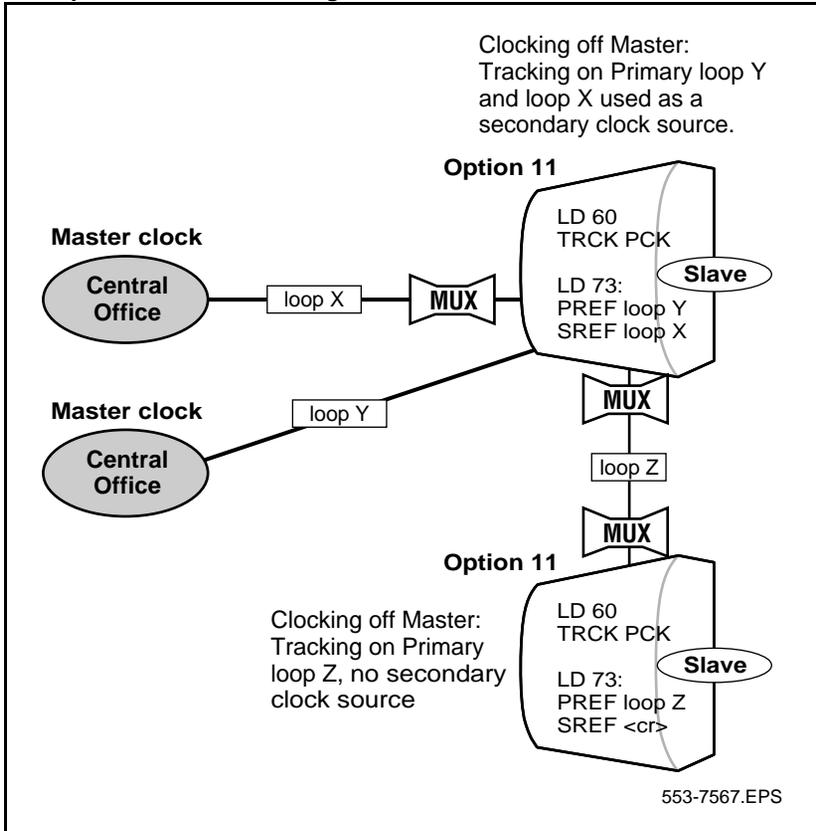

In this example, the direct connection to the CO (without a MUX) should be used as a primary clock reference since there is the least amount of hardware involved. The MUX must pass the clock and not generate its own clock; in other words, it must also be a slave (not Free Run). Synchronized clocking is required.

Modes of operation

There are two modes of operation, tracking mode and free run (non-tracking) mode.

Tracking mode

In tracking mode, the Primary Rate Interface (PRI) or Digital Trunk Interface (DTI) loop supplies an external clock reference to the on-board clock controller. Two PRI or DTI packs can operate in tracking mode, with one defined as the primary reference source for clock synchronization, the other defined as a secondary reference source. The secondary reference acts as a back-up to the primary reference.

Free run (non-tracking) mode

The clock synchronization for a PRI loop may operate in free-run mode if:

- the loop is not defined as the primary or secondary clock reference
- the primary and secondary references are disabled
- the primary and secondary references are in a local alarm state

Supported Clock Controllers

For Meridian 1 options 51C, 61C, and 81C, the following Clock Controllers are supported for both:

- QPC471
- QPC775

Note 1: The QPC775 Clock Controller is currently not available for U.S. markets. It is available for only the Canadian and international markets

Note 2: The QPC471 and QPC775 Clock Controllers cannot be mixed in one system.

Note 3: Vintage H of the QPC471 Clock Controller is required for Meridian 1 options 51C, 61C, and 81C.

Note 4: For EuroISDN applications, an for use in international markets, vintage QPC77E is required.

The Meridian 1 option 11C supports a single on-board Clock Controller daughterboard, the NTAK20, located on either:

- the NTRB21 1.5 Mb DTI/PRI card
- the NTAK09 1.5 DTI/PRI card
- the NTAK10 2 Mb DTI card
- the NTAK79 2 Mb PRI card
- the NTBK50 2 Mb PRI card

The Clock Controller circuitry synchronizes the Option 11C to an external reference clock and generates and distributes the clock to the system. This enables the Option 11C to function either as a slave to an external clock or as a clocking master.

Note: When configuring ISL over analogue trunks, clock controllers are not required.

Installation procedures

This section provides procedures on how to install a Clock Controller on Meridian 1 options 51C, 61C, and 81C.

CAUTION



Do not deviate from the procedures described in this section, as deviation may stop call processing.

Determine slots and shelves

The Clock Controller card installation site varies from system to system. Table 60 shows the systems, the shelves used, and the available slot or slots.

Table 60
Clock Controller shelves and slots

System	Shelf	Slot(s)
51C, 61C	NT6D39 CPU/NET	9
81C	CORE/NET	9

Set switches

Before installing a Clock Controller, set the switches as shown in Tables 61 and 62. Table 61 displays the settings for different vintages of the QPC471. Table 62 shows the settings for the QPC775.

Table 61
Clock Controller switch settings for QPC471 vintage H

System	SW1	SW2	SW4
51C, 61C	on on on on	off off off off	off on * *
Cable length between the J3 faceplate connectors:			
0-4.3 m (0-14 ft.)			off off
4.6-6.1m (15-50 ft.)			off on
6.4-10.1m (21-33 ft.)			on off
10.4-15.2 m (34-50 ft.)			on on
• If there is only one Clock Controller card in the system, set to OFF. If there are two Clock Controller cards, set to match the cable length between the J3 faceplate connectors. Determine the total cable length (no single cable can exceed 25 ft.) between the J3 connectors. Both cards must have the same setting.			

Table 62
Clock Controller switch settings for QPC775

System	SW2	SW3	SW4
51C, 61C	ON	OFF	ON
81C	OFF	OFF	ON

Start the Clock Controller

The Clock Controller, when first enabled, is in free run mode. It stays in this mode for several minutes before being switched to tracking mode. Manual mode setting is possible via LD 60.

The QPC471 vintage H begin tracking within 5 minutes.

Clock Controller commands

During the installation procedure you will use some of the Clock Controller commands available in LD 60. In the list of commands below, “x” refers to the Clock Controller number: 0 for the card associated with CPU 0, 1 for the card associated with CPU 1.

- DIS CC x: Disable system Clock Controller x
- DSCK loop: Disable clock for specified loop
- DSYL loop: Disable yellow alarm processing for loop
- ENCK loop: Enable clock for specified loop
- ENL CC x: Enable system Clock Controller x
- ENYL loop: Enable yellow alarm processing for loop
- EREF: Enable automatic switchover of system clocks
- SSCK x: Obtain status of system clock x
- SWCK: Switch system clock between active and standby
- TRCK aaa: Set Clock Controller track where aaa can be PCK (the primary DTI/PRI reference), SCLK (the secondary DTI/PRI reference), or FRUN (free running)

Install or replace a Clock Controller on option 51C, 61C half group

Task summary list

The following is a summary of the tasks in this section:

- 1 Install a Clock Controller on option 51C, 61C half group

Use Procedure 20 to install a Clock Controller on a Meridian 1 option 51C, 61C half group.

Procedure 20

Install a Clock Controller on option 51C, 61C half group

- 1 Unpack and inspect circuit pack.
- 2 Determine the cabinet and shelf location. Refer to Table 60.
- 3 Set the ENL/DIS toggle switch to DIS (disable).

- 4 If replacing an Clock Controller, do the following:
 - Perform a status check on the clock with the SSCK command in LD 60. The new controller should have the same status.
 - Disable the old card using LD 60.
Note 1: Do not disable an active clock or a clock associated with an active CPU
 - Note 2:** ERR20 messages may be generated. These can usually be ignored. However, excessive clock switching should be avoided, especially when counters are near the maintenance or out-of-service thresholds. Excessive switching could generate threshold-exceeded messages or cause the PRI to be automatically disabled. Check the counters in LD 60. If necessary, reset the counters using the RCNT command.
 - Set the old card's faceplate ENL/DIS switch to DIS.
 - Disconnect cables from the old Clock Controller card and remove the card from the shelf.
 - Note:** The Clock Controller status display in this mode indicates NO UART (no universal async receiver transmitter). Do not perform a clock status check when receiving this code.
- 5 Install the new Clock Controller in the selected slot.
- 6 Connect the cables to the Clock Controller.
 - Connect the primary reference to J2.
 - If applicable, connect the secondary reference to J1.
- 7 Set the faceplate ENL/DIS switch to ENL (enable).
- 8 Enable the Clock Controller by entering ENL CCx in LD 60.
- 9 Set the error detection thresholds and clock synchronization control in LD 73. (Optional if replacing card; required with new installation.)
- 10 To track on a primary or secondary reference clock, use LD 60. Use the following command:
 - TRCK PCK (for primary)
 - SCLK (for secondary)
 - FRUN (for free-run)
- 11 Issue the SSCK command to check controller status.

Install or replace a Clock Controller on option 51C, 61C half group

Task summary list

The following is a summary of the tasks in this section:

- 1 Install a Clock Controller option 51C, 61C single group

Use Procedure 21 to install a Clock Controller on a Meridian 1 option 51C, 61C half group.

Procedure 21

Install a Clock Controller option 51C, 61C single group

- 1 Unpack and inspect circuit pack.
- 2 Determine the cabinet and shelf location. Refer to Table 60.
- 3 Set the ENL/DIS toggle switch to DIS (disable).
- 4 If replacing an Clock Controller, do the following:
 - Perform a status check on the clock with the SSCK command in LD 60. The new controller should have the same status.
 - Disable the old card using LD 60.

Note 1: Do not disable an active clock or a clock associated with an active CPU

Note 2: ERR20 messages may be generated. These can usually be ignored. However, excessive clock switching should be avoided, especially when counters are near the maintenance or out-of-service thresholds. Excessive switching could generate threshold-exceeded messages or cause the PRI to be automatically disabled. Check the counters in LD 60. If necessary, reset the counters using the RCNT command.

- Set the old card's faceplate ENL/DIS switch to DIS.
- Disconnect the cables from the old Clock Controller card and remove the card from the shelf.

Note: The Clock Controller status display in this mode indicates NO UART (no universal async receiver transmitter). Do not perform a clock status check when receiving this code.

- 5 If the 3PE switches have not been modified to recognize the Clock Controller card, adjust them. Refer to Tables 61 and 62.
- 6 Set faceplate ENL/DIS switch to DIS.
- 7 Install Clock Controller in the selected slot.
- 8 Run and connect cables
 - Connect the primary reference to J2.
 - If available, connect the secondary reference to J1.
 - Connect the cable between the two clocks to J3 on each controller card.
- 9 Set the faceplate ENL/DIS switch to ENL.
- 10 Enable the Clock Controller by entering ENL CC x in LD 60.
- 11 Set the error detection thresholds and clock synchronization controls in LD 73. (Optional with card replacement; required with new installation.)
- 12 To track on a primary or secondary reference clock, use LD 60. Use the following command:
 - TRCK PCK (for primary)
 - SCLK (for secondary)
 - FRUN (for free-run)
- 13 Issue the status check command, SSCK.
- 14 (Optional) Activate the new Clock Controller with the LD 60 SWCK command.
- 15 Repeat, if necessary, for the second Clock Controller.

Install or replace a Clock Controller on option 81C

Task summary list

The following is a summary of the tasks in this section:

1 Install a Clock Controller on option 81C

Use Procedure 22 to install a Clock Controller on a Meridian 1 option 81C.

Procedure 22

Install a Clock Controller on option 81C

- 1 Unpack and inspect circuit pack.
- 2 Determine the cabinet and shelf location. Refer to Table 60.
- 3 Set the ENL/DIS toggle switch to DIS (disable).
- 4 If replacing an Clock Controller, do the following:
 - Perform a status check on the clock with the SCK command in LD 60. The new controller should have the same status.
 - Disable the old card using LD 60.

Note 1: Do not disable an active clock or a clock associated with an active CPU

Note 2: ERR20 messages may be generated. These can usually be ignored. However, excessive clock switching should be avoided, especially when counters are near the maintenance or out-of-service thresholds. Excessive switching could generate threshold-exceeded messages or cause the PRI to be automatically disabled. Check the counters in LD 60. If necessary, reset the counters using the RCNT command.

- Set the old card's faceplate ENL/DIS switch to DIS.
 - Disconnect the cables from the old Clock Controller card and remove it from the shelf.
- 5 Install the new Clock Controller in the selected slot.
 - 6 Run and connect the cables

- Connect the primary reference to J2.
 - If available, connect the secondary reference to J1.
 - Connect the cable from J3 on each controller card to the junctor group connector, QPC417.
- 7 Set the faceplate ENL/DIS switch to ENL.
 - 8 Execute the ENL CC X command in LD 60. The faceplate LED should go to the OFF state.
 - 9 Enable the Clock Controller by entering ENL CC x in LD 60.
 - 10 Set the error detection thresholds and clock synchronization controls in LD 73. (Optional if replacing card; required with new installation.)
 - 11 To track on a primary or secondary reference clock, use LD 60. The command follows:
 - TRCK PCK (for primary)
 - SCLK (for secondary)
 - FRUN (for free-run)
 - 12 Issue the status check command, SSCK.
 - 13 (Optional) Activate the newly installed Clock Controller with the LD 60 SWCK command.
 - 14 Repeat, if necessary, for the second Clock Controller.

ISL installation

Content list

The following are the topics in this section:

- [ISL configurations 240](#)
- [DCHI switch settings 240](#)
- [MSDL switch settings 243](#)
- [Shared mode 244](#)
- [Dedicated mode using leased line 245](#)
- [Dedicated mode using dial-up modem 246](#)
- [Install a modem for ISL applications 246](#)
- [Dedicated mode using PRI/DTI trunks 250](#)
- [QMT11 switch settings 252](#)
- [QMT8 switch settings 253](#)
- [QMT21C switch settings 253](#)
- [ISL installation 254](#)
- [Install ISL in dedicated mode \(digital and analog\) 254](#)
- [Install ISL in shared mode 255](#)

ISL configurations

The ISDN Signaling Link (ISL) is used on Meridian 1 PRI/DTI connections. The ISDN Signaling Link (ISL) feature operates in two modes, shared and dedicated.

Shared mode

The DCHI supports ISDN PRI signaling for both PRI and ISL trunks.

Dedicated mode

In this mode, the DCHI supports ISL trunks using ISDN PRI signaling. The D-channel communicates with the far end using a dedicated leased line, dial-up modem, or DTI trunk.

DCHI switch settings

For ISL functions, use the following switch settings for the J2 port:

- RS-232 for 19.2 Kbps and below
- HS (RS-422) for speeds above 19.2 Kbps
- External clock (in Overlay 17) provided by modem, ADM, or ASIM, otherwise DCHI will be running at 64 Kbps
- DTE device configuration

Figure 71 shows the ISL high-speed programming jumper settings for the NT6D11AB, NT6D11AE DCHI, and Figure 72 shows the ISL low-speed programming jumper settings for the NT6D11AB, NT6D11AE/AF DCHI.

Figure 71
NT6D11AB, NT6D11AD DCHI with ISL high-speed programming jumper settings


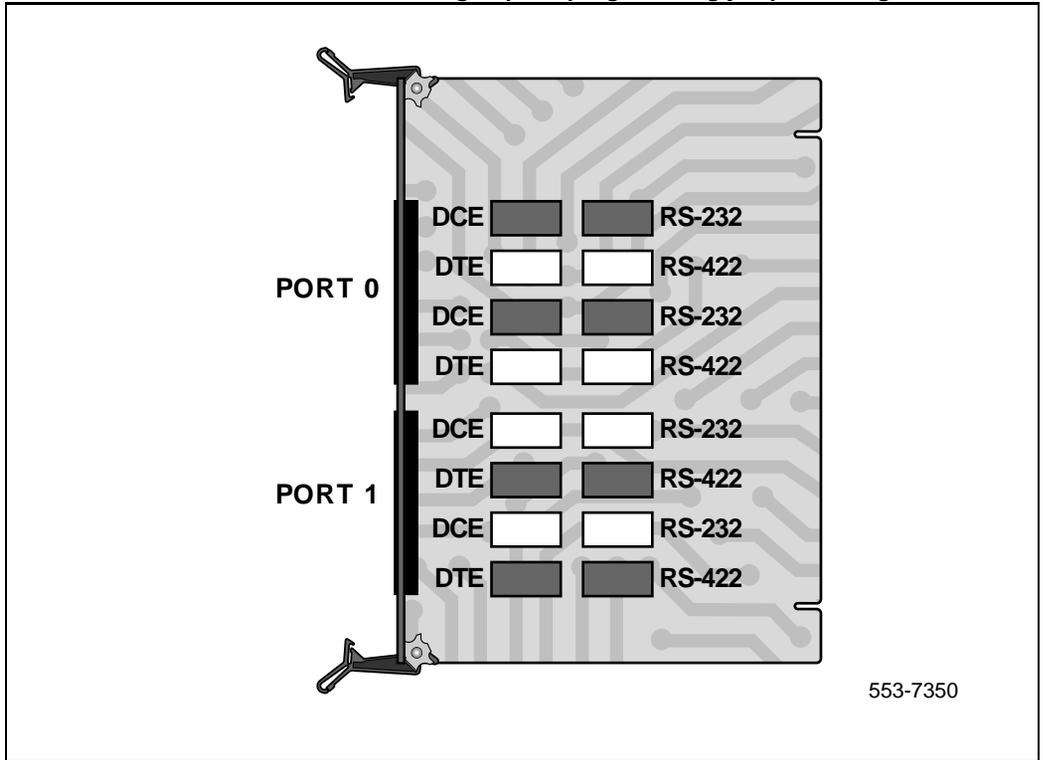


Figure 72
NT6D11AB, NT6D11AD DCHI with ISL low-speed programming jumper settings

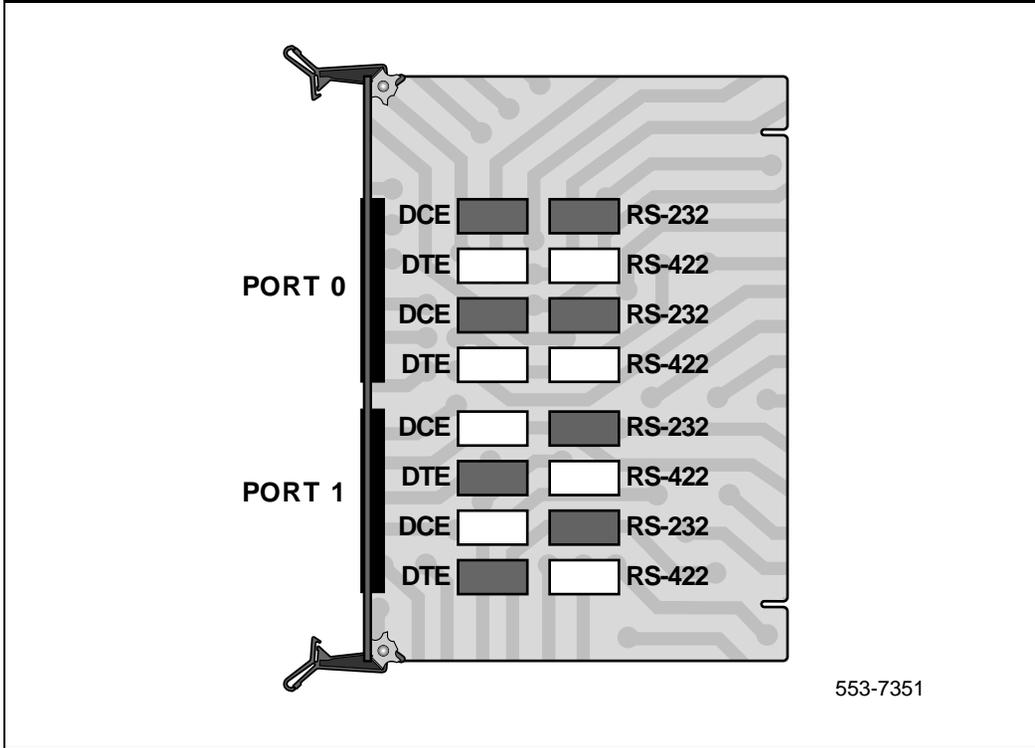


553-7351

MSDL switch settings

For ISL functions, use the following switch settings.

- DTE for high speed programming;
- RS-232 for 19.2 Kbps and below;
- External clock (in LD17) provided by modem, ADM, or ASIM, HSDM otherwise DCH runs at 64 Kbps. Refer to Figure 73.

Figure 73
MSDL/ISL settings

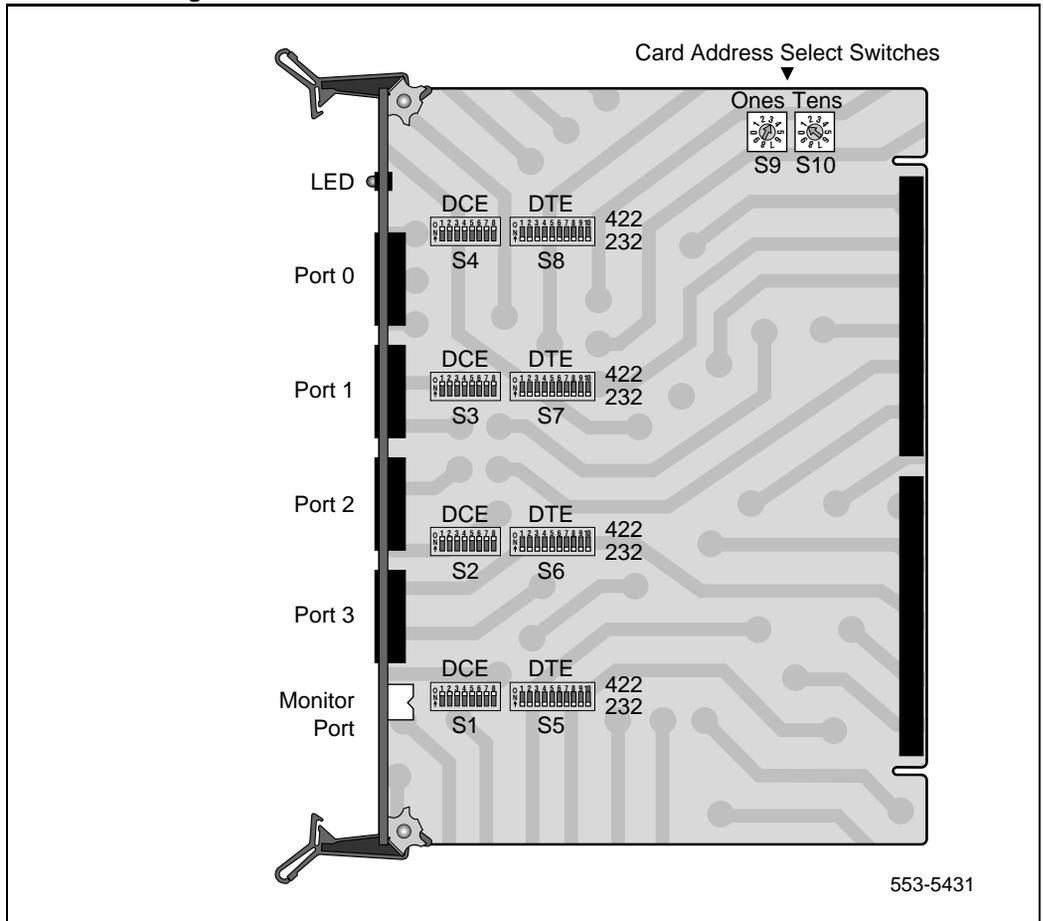


Shared mode

In shared mode, the D-channel is provided by the DCHI or MSDL card and PRI. The hardware configuration is basically the same as the ISDN PRI D-channel. See Figure 74.

Shared mode is established through service change in LD17, prompt USR, with the response SHA.

In the shared mode, the DCH can share signaling for no more than 382 (T1) or 480 (E1) trunks, including digital and analog.

Figure 74
ISL in shared mode

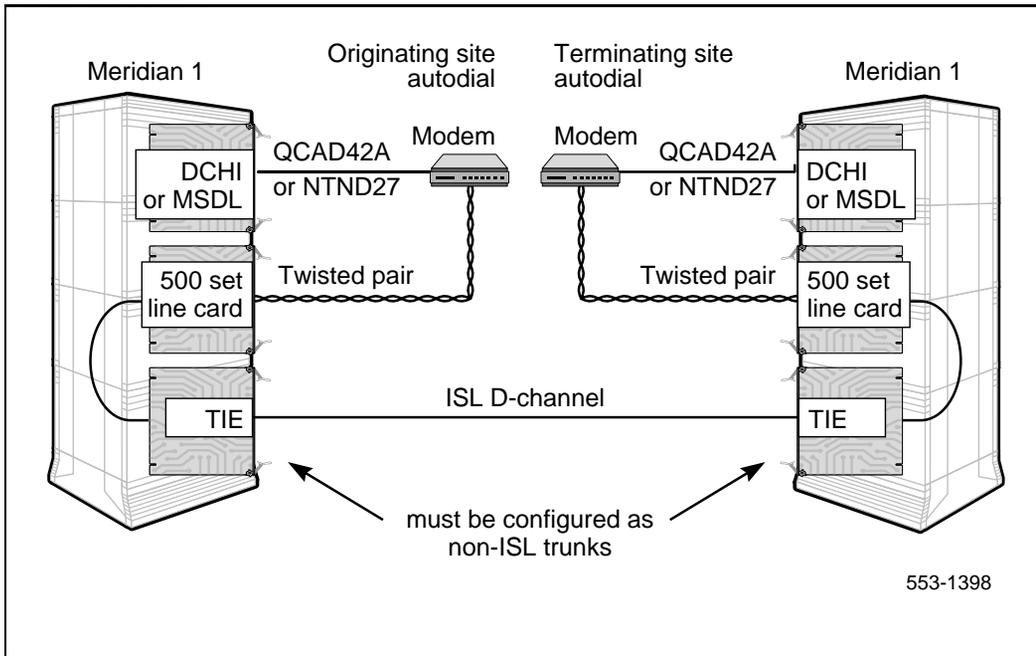


Dedicated mode using leased line

In this configuration, the D-channel connects the DCHI or MSDL to a modem which communicates with a far-end modem over a dedicated leased line. See Figure 75. A 2400 baud D-channel can support signaling for approximately 382 (T1) or 480 (E1) trunks without non-call associated messages.

Both modems should be set in the synchronous mode.

Figure 75
ISL dedicated mode, using leased line

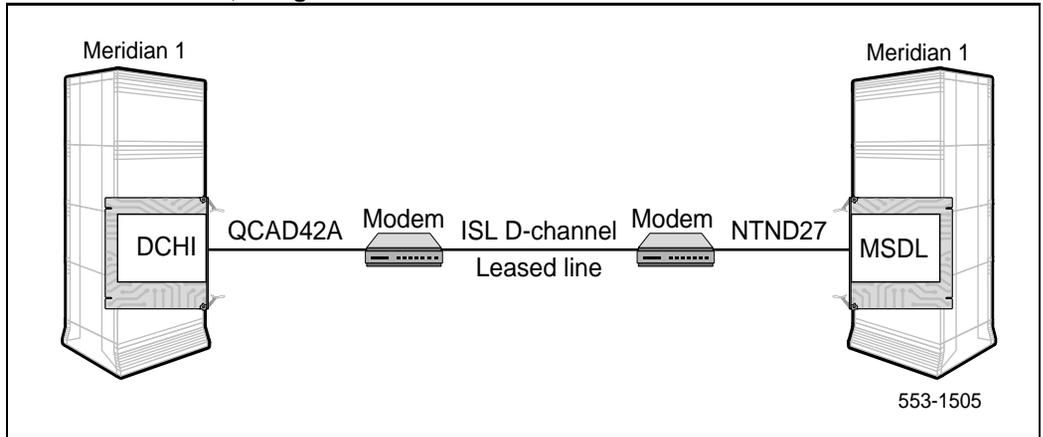

Dedicated mode using dial-up modem


In this configuration, the DCHI or MSDL is connected to a modem which is connected to a 500 set line card. See Figure 77. The call is connected to the far end through the 500 set-to-TIE trunk path.

To set up the D-channel, program the modem at one end in the auto-dial mode, so it automatically initiates a call to the other end at power up. The auto-dial DN must be coordinated with personnel at the far end switch.

Install a modem for ISL applications

The modem software and hardware must be installed sequentially. The modem software must be defined before the hardware connection between the modem and Meridian 1 can be made. Within the software installation, either the auto-dial or the auto-answer software can be set up first. Figure 76 shows the hardware configuration between two Meridian 1 PBXs and their corresponding modems.

Figure 76
ISL dedicated mode: using dial-up Hayes Smartmodem 2400

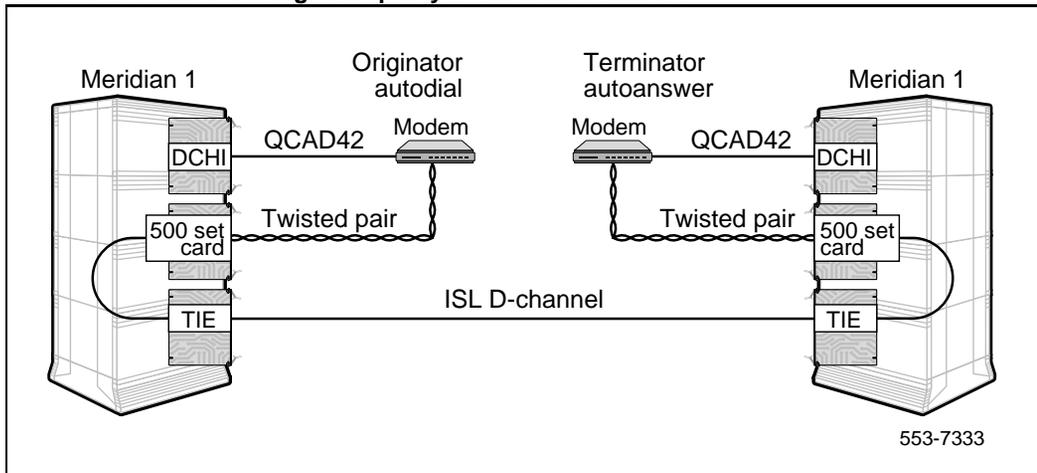

Examples of parameters used for actual auto-answer and auto-dial sites are shown in the following tables (note that the Hayes Smartmodem has been used.) Table 63 shows the active and stored profiles of the auto-dial site (or the originating modem). Table 64 shows the active and stored profiles of the auto-answer site (or the terminating modem). The Hayes Smartmodem User's Guide contains explanations of the parameters used in Table 63 and Table 64.

After the software parameters have been set up, the JP1 jumpers behind the front faceplate of the Hayes Smartmodem must be dumb strapped on both modems. Then see the Hayes Smartmodem Getting Started Guide to set up the hardware between the Meridian 1 and the modem.


Table 63
Active and stored profiles of the autodial or originating modem

Active profile:
B1 E0 L2 M1 Q1 V1 X4 Y0 &C1 &D0 &G0 &J0 &L0 &P0 &Q2 &R0 &S0 &X0 &Y0 S00:000 S01:000 S02:043 S03:013 S04:010 S05:008 S06:002 S07:030 S08:002 S09:006 S10:014 S12:050 S14:ACH S16:00H S18:000 S21:20H S22:76H S23:15H S25:005 S26:001 S27:42H
Stored profile 0:
B1 E0 L2 M1 Q1 V1 X4 Y0 &C1 &D0 &G0 &J0 &L0 &P0 &Q2 &R0 &S0 &X0 S00:000 S14:ACH S18:000 S21:20H S22:76H S23:17H S25:005 S26:001 S27:42H
Stored profile 1:
B1 E1 L2 M1 Q0 V1 X4 Y0 &C0 &D0 &G0 &J0 &L0 &P0 &Q0 &R0 &S0 &X0 S00:00 S14:AAH S18:000 S21:00H S22:76H S23:17H S25:005 S26:001 S27:40H
Telephone numbers:
&Z0=ATDT7414011 &Z1= &Z2= &Z3=

Table 64
Active and stored profiles of the auto answer or terminating modem

<p>Active profile:</p>
<p>B1 E0 L2 M1 Q1 V1 X4 Y0 &C1 &D2 &G0 &J0 &L0 &P0 &Q1 &R0 &S1 &X2 &Y0 S00:001 S01:000 S02:043 S03:013 S04:010 S05:008 S06:002 S07:030 S08:002 S09:006 S10:014 S12:050 S14:ACH S16:00H S18:000 S21:70H S22:76H S23:15H S25:005 S26:001 S27:61H</p>
<p>Stored profile 0:</p>
<p>B1 E0 L2 M1 Q1 V1 X4 Y0 &C1 &D2 &G0 &J0 &L0 &P0 &Q1 &R0 &S1 &X2 S00:001 S14:ACH S18:000 S21:70H S22:76H S23:17H S25:005 S26:001 S27:61H</p>
<p>Stored profile 1:</p>
<p>B1 E1 L2 M1 Q0 V1 X4 Y0 &C0 &D0 &G0 &J0 &L0 &P0 &Q0 &R0 &S0 &X0 S00:000 S14:AAH S18:000 S21:00H S22:76H S23:17H S25:005 S26:001 S27:40H</p>
<p>Telephone numbers:</p>
<p>&Z0= &Z1= &Z2= &Z3=</p>

Figure 77
ISL dedicated mode, using dial-up Hayes Smartmodem 2400

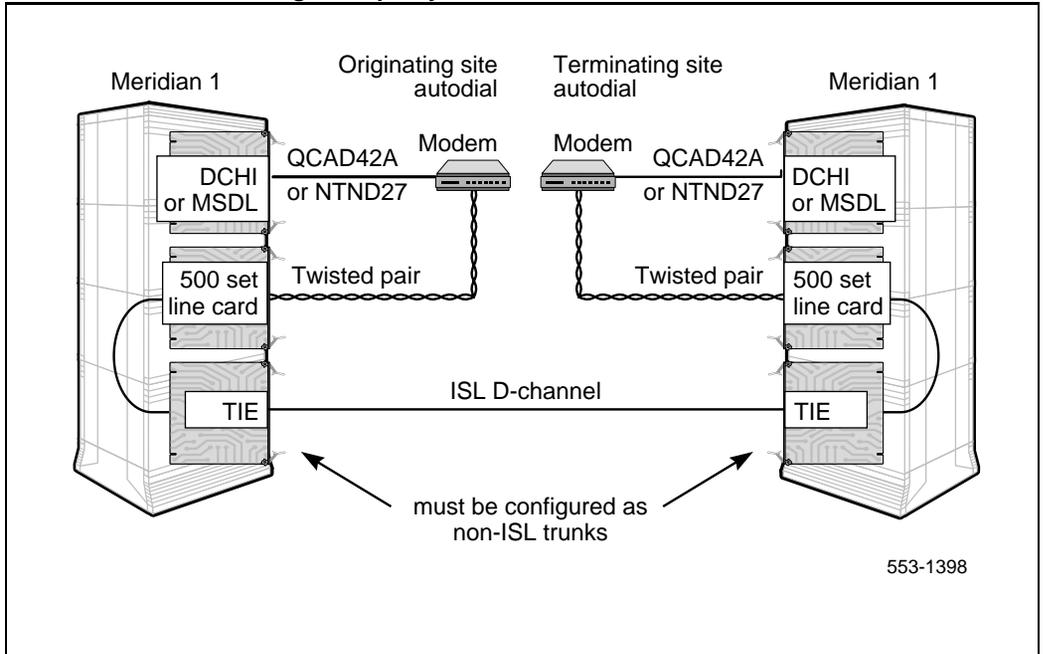

Dedicated mode using PRI/DTI trunks

In this configuration, the DCHI or MSDL is connected to an High Speed Data Module (HSDM) or Asynchronous/Synchronous Interface Module (ASIM). See Figure 78. The HSDM or ASIM is connected to a Data Line Card (DLC). The call is then connected to the far end through the DLC to DTI trunk path.


To establish the D-channel in this configuration, set up the HSDM or ASIM at one end in hot line mode. The hot line DN must be coordinated with personnel at the far end, then programmed in LD11. The preprogrammed hot line DN is dialed by the Meridian 1. If the call cannot be established, the Meridian 1 continues to dial the hot line number continuously until the call is connected.

Set the HSDM or ASIM must be in synchronous mode. A data rate of 9.6 Kbps is recommended because it provides internal error detection and correction. The following data rates are also supported: 1.2 Kbps, 2.4 Kbps, 3.6 Kbps, 4.8 Kbps, 7.2 Kbps, 14.4 Kbps, 19.2 Kbps, 38.4 Kbps, and 56 Kbps for ASIM. The High Speed Data Module (HSDM) supports 64 Kbps.

Note 1: This configuration is the least reliable due to the lockup problems inherent in Smart Modems from power splices and noisy lines. To increase the reliability on this configuration, a constant power source can be used when powering the modems. Also ensure that the TIE lines meet data grade specifications.

Note 2: Nortel Networks takes no responsibility for ISL D-channel outages due to modem lockup.

Figure 78
ISL dedicated mode: using PRI/DTI trunk

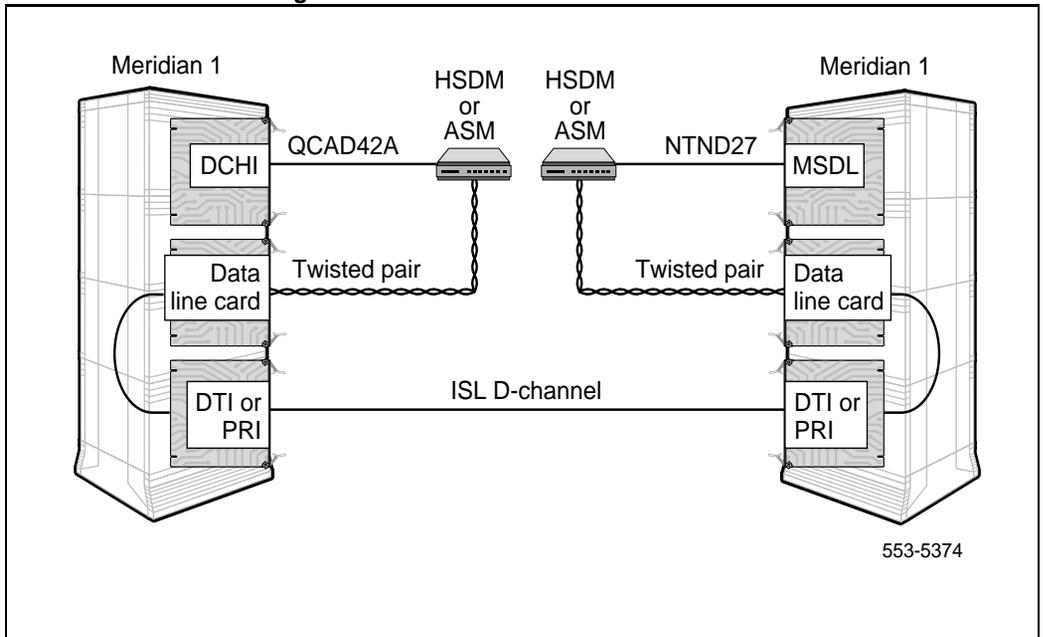

QMT11 switch settings

If using the QMT11 ASIM, set the dip switches, located on top of the unit under the flip-up, as follows:

- Hotline, On; See Note 1.
- Forced DTR, On; See Note 2.
- FDX (full duplex), On
- SYNC, On
- INTernal CLK, On
- Modem/Network, Modem
- Auto Answer, On
- Loopback, Off

Note 1: Set only one side of the interface to originate the hot line.

Note 2: Forced Data Terminal Ready (DTR) automatically reinitiates a dropped hot line call.

QMT8 switch settings

If the QMT8 Asynchronous Data Module (ADM) is used, set the switches as follows:

Switch 1:	Switch 3:	Switch 4:
set to zeros (no VFDN)	1 not used	1 on
	2 not used	2 on (hot line*)
	3 FDX (full duplex)	3 off (DTR-data terminal ready-required)
	4 modem	4 on (synchronous)
	5 internal clock	U5 and U7 must be jumpered
	6 no echo	
	7 auto answer	
	8 off (no loopback)	* Only one side of the interface should be set to originate the hot line.

QMT21C switch settings

If using the QMT21 HSDM, set the dip switches, located on top of the unit under the flip-up, as follows.

- Hotline, On; See Note 1.
- Forced DTR, On; See Note 2.
- FDX (full duplex), On
- SYNC, On
- INTernal CLK, On
- Modem/Network, Modem
- Auto Answer, On
- Loopback, Off

Note 1: Set only one side of the interface to originate the hot line.

Note 2: Forced Data Terminal Ready (DTR) automatically reinitiates a dropped hot line call.

ISL installation

Use Procedure 23 to install ISL in dedicated mode. Use Procedure 24 to install ISL in shared mode.

Modem paths must have individual configurations: route data blocks, trunks, and routes.

Install ISL in dedicated mode (digital and analog)

Task summary list

The following is a summary of the tasks in this section:

1 Install ISL in dedicated mode

DTI or PRI should already be up and running.

Procedure 23

Install ISL in dedicated mode

- 1 In LD17, configure ISL for dedicated mode.
USR = ISLD
ISLM = Number of trunks handled by this D-channel (1-382)
- 2 In LD16, configure the Route Data Block to map out the software parameters for these trunks.
- 3 Install the modem with leased line functionality.
- 4 In LD14, reassign old trunks to the routes just built in LD16.
- 5 In LD16, out the old DTI route. A separate Route Data Block should be built for Leased Line, or to accommodate the dialing plan for a dedicated modem.

Install ISL in shared mode

Task summary list

The following is a summary of the tasks in this section:

- 1 Install ISL in shared mode

DTI or PRI should already be up and running.

Procedure 24

Install ISL in shared mode

- 1 In LD14, remove the PRI trunks.
- 2 In LD17, configure ISL for dedicated mode.
USR = SHA
ISLM = Number of trunks handled by this D-channel (1-382)
- 3 In LD16, build a PRI route data block. This is the same route you just removed in step 1.
ISDN = YES
- 4 In LD16 build another route data block to correspond to the IAS routes.
- 5 In LD14, assign trunks to the newly configured routes.

Echo canceller installation

Content list

The following are the topics in this section:

- [Introduction 257](#)
- [Echo canceller operating parameters 257](#)
- [Echo canceller initialization procedures 258](#)
- [PRI to Echo canceller pin assignments 259](#)
- [Electromagnetic Interference 259](#)

Introduction

Echo cancellers are required only in cases where satellite transmission is being used. The echo canceller detects the length of the loop, and cancels out transmission reflections (which result in audible echoes of voices on satellite-carried calls).

Echo canceller operating parameters

The operational parameters of the echo canceller must be:

- Data transfer rate: 4800 baud
- System unit number: 1
- Display time-out: active
- Failures before alarm: 3

Echo canceller initialization procedures

Each of the 24 channels on the echo canceller must be initialized as shown here:

- Bypass: OFF
- Off-hook: ON
- Cancellor only: OFF
- H reset: OFF
- H hold: OFF

PRI to Echo canceller pin assignments

The echo canceller is controlled by an RS-232 port on the PRI circuit pack. The following tables give the echo canceller pin assignments, operating parameters and initialization procedures.

See Table 65 for PRI-to-Echo canceller pin assignments; refer to Figure 79 for a PRI-to-Echo-canceller cabling schematic.


Table 65
PRI-to-Echo canceller – pin assignments

Signal	PRI pin	Echo canceller pin	EIA RS-232-C circuit designator
TXD (Transmitted Data)	5	2	BA
RXD (Received Data)	2	3	BB
RTS (Request to Send)	—	4	CC
CTS (Clear to Send)	—	5	CB
Common Return (signal ground)	10	7	AB
DCD (received line signal detector)	1	8	CF
DTR (data terminal ready)	4	20	CD

Electromagnetic Interference

The electromagnetic interference (EMI) filter assembly for PRI is PO643763. The Meridian 1 meets FCC Part 15, Subpart J, Class A requirements regarding EMI. In order to accomplish this, the SDI cables must exit the cabinet through EMI filters on the I/O panel. This procedure depends on the Meridian 1 cabinet type

Figure 79
PRI to echo canceller cabling

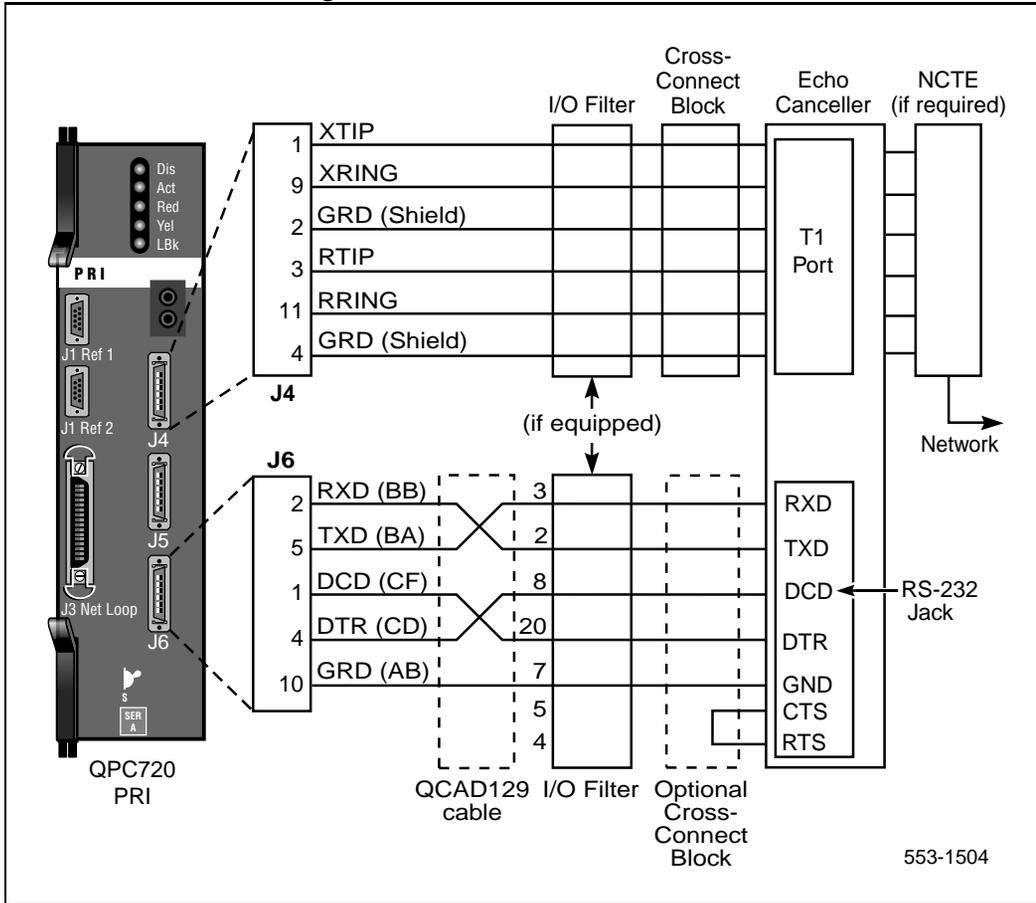

Non-standard cables

Content list

The following are the topics in this section:

- [Introduction](#) 262
- [NT5K40AA, NT5K41AA, NT5K86AA](#) 262
- [NT8D7206, NT8D7207](#) 263
- [QCAD128](#) 264
- [QCAD129](#) 265
- [QCAD133](#) 266
- [NT8D7205](#) 267
- [QCAD328](#) 268
- [NT8D74 Clock Controller to InterGroup cable](#) 269
- [NT8D75 Clock Controller to Clock Controller cable](#) 269
- [NT8D79 PRI/DTI to Clock Controller cable](#) 269
- [NT8D83 PRI/DTI to I/O cable](#) 270
- [NT8D85 Network to PE cable](#) 270
- [NT8D86 Network to I/O cable](#) 271
- [NT8D97AX PRI/DTI I/O to MDF cable](#) 271
- [NT9J93AD PRI/DTI Echo Cancellor to I/O cable](#) 271
- [NTND26 PRI to MSDL cables](#) 271

- [NTND27 MSDL to I/O panel cables 271](#)
- [NTND98 PRI to I/O panel cables 272](#)

Introduction

This section provides information required to build Meridian 1 systems cables of non-standard lengths for ISDN PRI applications.

NT5K40AA, NT5K41AA, NT5K86AA

These cables are used to transport the 2Mb digital signal from the faceplate connector on the PRI card to the Line Terminating Equipment interface.

- Standard lengths:
 - NT5K40AA - 4 m (13 ft.)
 - NT5K41AA - 8 m (26 ft.)
 - NT5K86AA - 12m (39 ft.)
- Construction - 75 ohm dual co-axial type with solid inner conductor and braided shield.
- J1 Connector - 15-pin, male, subminiature D with jack-screws
- J2 Connector - 75 ohm BNC crimp plug
- J3 Connector - 75 ohm BNC crimp plug

Table 66
NT5K40AA, NT5K41AA, NT5K86AA wire list

From (pack end)	To (I/O end)	Signal
J1-1	J2 Inner Conductor	XTIP (transmit)
J1-9	J2 Shield	XRING (transmit)
J1-3	J3 Inner Conductor	RTIP (receive)
J1-11	J3 Shield	RRING (receive)
J1-9	J3 Shield	FRAME GROUND

NT8D7206, NT8D7207

This cable is used to transport the 2Mb/s digital signal from the PRI pack to the I/O assembly located at the cabinet bulkhead.

- Standard length -
3.05 m (10 ft.) for SL-1 system options 51, 61, 71, NT, XT
- Construction - 24 AWG, stranded foil-shielded twisted pairs
- P1 Connector (Pack end) - 9-pin, male, subminiature D, with jack-screws
- P2 Connector (I/O Panel end) - 9-pin, male, subminiature D, with jack-screws

Table 67
NT8D7206, NT8D7207 wire list

Color	From (pack end)	To (I/O end)	Signal
White	P1-1	P2-6	XTIP (transmit)
Black	P1-9	P2-7	XRING (transmit)
Green Shield	nc	P2-CASE P2-9	GROUND
Red	P1-3	P2-2	RTIP (receive)
Black	P1-11	P2-3	RRING (receive)
Red Shield	nc	P2-CASE P2-5	GROUND

QCAD128

This cable transports the T1 signal from the PRI pack to the I/O panel.

- Standard length - 10 ft. (3.05 m)
- Construction - 15-conductor ribbon, 28 AWG (0.321 mm), stranded
- P1 Connector - 15-pin, male, subminiature D, with jack-screws
- P2 Connector - 15-pin, male, subminiature D, with jack-screws

See Table 68.

Table 68
QCAD128 wire list

From	To	Signal
P1-1	P2-1	XTIP (transmit tip) to telephone company
P1-2	P2-2	GND (ground)
P1-3	P2-3	RTIP (receive tip) from telephone company
P1-4	P2-4	GND (ground)
P1-5	P2-5	
P1-6	P2-6	
P1-7	P2-7	
P1-8	P2-8	
P1-9	P2-9	XRING (transmit ring) to telephone company
P1-10	P2-10	
P1-11	P2-11	RRING (receive ring) from telephone company
P1-12	P2-12	
P1-13	P2-13	
P1-14	P2-14	
P1-15	P2-15	

QCAD129

This cable is used to connect the RS-232-C interface between an echo canceller and the PRI pack.

- Standard length - 2.1 m (7 ft.)
- Construction - 22 AWG (0.644 mm), stranded
- P1 Connector - 15-pin, male, subminiature D, with jack-screws
- P2 connector - 25-pin, male, subminiature D, with jack-screws

Table 69
QCAD129 wire list

PRI Signal	From	To	Echo Canceller Signal
DCD	P1-1	P2-20	DTR
RXD	P1-2	P2-2	TXD
DTR	P1-4	P2-8	DCD
TXD	P1-5	P2-3	RXD
GND	P1-10	P2-7	GND
RTS	P1-12	P2-4	
CTS	P1-9	P2-5	
TPENB (Test Port Enable Bar)	P1-15	nc	

QCAD133

For cabinets **with** an I/O filter assembly, this cable transports the T1 signal from the I/O filter to the Network Channel Terminating Equipment (NCTE) telephone company interface. See Table 70.

For cabinets **without** an I/O filter assembly, this cable transports the T1 signal from the QPC720 PRI pack to the NCTE telephone company interface.

- Standard length - 50 ft (15.3 m)
- Construction - Individually foil-shielded, twisted pairs, 24 AWG (0.511 mm), stranded
- P1 Connector - 15-pin, female, subminiature D with jack-screws
- P2 Connector - 15-pin, male, subminiature D, with slide-latch (optional spring-latch loose-packed with cable assembly)

Table 70
QCAD133 wire list

Color	From	To	PRI signal
WHITE	P1-1	P2-1	XTIP (transmit tip) to telephone company
BLACK	P1-9	P2-9	XRING (transmit ring) to telephone company
GRN SHLD	P1-2	nc	GND (ground)
RED	P1-3	P2-3	RTIP (receive tip) from telephone company
BLACK	P1-11	P2-11	RRING (receive ring) from telephone company
RED SHLD	P1-4	nc	GND (ground)

NT8D7205

This cable is used to transport the 2Mb digital signal from the I/O panel at the cabinet bulkhead to the Network Channel Terminating Equipment (NCTE) telephone company interface.

- Standard length - 15.3 m (50 ft)
- Construction - Individually foil-shielded, twisted pairs, 24 AWG (0.511 mm), stranded
- P1 Connector - 9-pin, female, subminiature D with jack-screws
- P2 Connector - 9-pin, male, subminiature D, with jack screws

Table 71
NT8D7205 wire list

Color	From (pack end)	To (I/O end)	Signal
White	P1-6	P2-6	XTIP (transmit)
Black	P1-7	P2-7	XRING (transmit)
Green Shield	P1-9	nc	GROUND
Red	P1-2	P2-2	RTIP (receive)
Black	P1-3	P2-3	RRING (receive)
Red Shield	P1-5	nc	GROUND

QCAD328

This cable is used to connect the PRI pack to the D-channel interface card, either the QPC757 or NT6D11AB DCHI. There are two types of QCAD328 cables: QCAD328A and QCAD328B.

- QCAD328A - 1.8 m (6 ft)
- QCAD328B - 5.5 m (18 ft)
- QCAD328C - 10.67 m (35 ft)
- QCAD328D - 15.24 m (50 ft)
- Construction - 24 AWG (0.511 mm), stranded
- P1 Connector - 25-pin male, subminiature D
- P2 Connector - 15-pin male, subminiature D

Table 72
QCAD328 wire list

From	To	Signal
P1-2	P2-2	SDA+
P1-13	P2-10	SDB-
P1-20	P2-15	TR
P1-15	P2-9	STA+
P1-14	P2-11	STB-
P1-3	P2-4	RDA+
P1-16	P2-12	RDB-
P1-17	P2-5	RTA+
P1-12	P2-13	RTB-
P1-8	P2-8	RR
P1-5	P1-8	CS
P1-7	P1-1	SG
P1-1	P2-1	GND

NT8D74 Clock Controller to InterGroup cable

This cable connects the QPC471 Clock Controller card to the NT8D36 InterGroup Module.

This cable is available in the following lengths:

- NT8D74AC 1.2 m (4 ft)
- NT8D74AD 1.8 m (6 ft)
- NT8D74AE 2.4 m (8 ft)
- NT8D74AF 3 m (10 ft)
(QCAD110B)
- NT8D74AJ 4.8 m (16 ft)

NT8D75 Clock Controller to Clock Controller cable

This cable interconnects QPC471 Clock Controller cards.

This cable is available in the following lengths:

- NT8D75AC 1.2 m (4 ft)
- NT8D75AD 1.8 m (6 ft)
- QCAD125 3 m (10 ft)

NT8D79 PRI/DTI to Clock Controller cable

This cable connects the PRI/DTI card to the QPC471 Clock Controller card.

This cable is available in the following lengths:

- NT8D79AB 0.6 m (2 ft)
- NT8D79AC 1.2 m (4 ft)
- NT8D79AD 1.8 m (6 ft)
- NT8D79AE 2.4 m (8 ft)
- NT8D79AF 3 m (10 ft)
(QCAD130)

NT8D83 PRI/DTI to I/O cable

This cable connects the PRI/DTI card (T1 port) to the I/O connector panel.

This cable is available in the following lengths:

- NT8D83AC 1.2 m (4 ft)
- NT8D83AD 1.8 m (6 ft)

NT8D85 Network to PE cable

This cable connects the following:

- QPC581 CMA card to QPC581 CMA card in dual CPU configuration
- QPC414 Network card to PRI/DTI card
- QPC414 Network card to QPC659 Dual Loop Peripheral Buffer card (for internal cabling only)
- QPC659 Dual Loop Peripheral Buffer card to QPC659 Dual Loop Peripheral Buffer card when connecting two NT8D13 PE Modules together

This cable is available in the following lengths:

- NT8D85AB 0.6 m (2 ft)
- NT8D85AC 1.2 m (4 ft)
- NT8D85AZ 1.5 m (5 ft)
- NT8D85AD 1.8 m (6 ft)
- NT8D85AE 2.4 m (8 ft)
- NT8D85AF 3 m (10 ft)
- NT8D85AJ 4.8 m (16 ft)
- NT8D85AL 6 m (20 ft)
- NT8D85AP 7.6 m (25 ft)
- NT8D85AV 13.7 m (45 ft)

NT8D86 Network to I/O cable

This cable connects the following to the I/O connector panel:

- QPC414 Network card
- PRI/DTI card
- QPC659 Dual Loop Peripheral Buffer card
- NT8D47 RPE

This cable is available in the following lengths:

- NT8D86AC 1.5 m (5 ft)
- NT8D86AD 1.8 m (6 ft)

NT8D97AX PRI/DTI I/O to MDF cable

This cable connects the PRI/DTI card to the MDF through the I/O connector panel. It is 15.2 m (50 ft) long.

NT9J93AD PRI/DTI Echo Canceller to I/O cable

This cable connects the PRI/DTI Echo Canceller port to the I/O connector panel. It is 1.8 m (6 ft) long.

NTND26 PRI to MSDL cables

These cables connect the MSDL card to the PRI cards.

- NTND26AA 6 feet
- NTND26AB 18 feet
- NTND26AC 35 feet
- NTND26AD 50 feet

NTND27 MSDL to I/O panel cables

These cables connect the MSDL card to the I/O panel.

- NTND27 6 ft

NTND98 PRI to I/O panel cables

These cables connect the PRI card to the I/O panel.

- NTND98 6 ft

Meridian 1
ISDN PRI
Installation

Copyright © 1991– 2000 Nortel Networks
All Rights Reserved

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules, and the radio interference regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

SL-1 and Meridian 1 are trademarks of Nortel Networks.

Publication number: 553-2901-201

Document release: Standard 6.00

Date: April 2000

Printed in Canada

NORTEL
NETWORKS

How the world shares ideas.