
Nortel Communication Server 1000

Nortel Communication Server 1000 Release 4.5

Communication Server 1000M and Meridian 1

Large System Planning and Engineering

Document Number: 553-3021-120

Document Release: Standard 9.00

Date: May 2007

Copyright © 2007 Nortel Networks. All rights reserved.
Produced in Canada

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

Nortel, Nortel (Logo), the Globemark, SL-1, Meridian 1, and Succession are trademarks of Nortel Networks.

Revision history

May 2007

Standard 9.00. This document is up-issued to update system capacity information to address CR Q01615240-04.

April 2007

Standard 8.00. This document is up-issued to revise CSQI call registers, QSDI paddle boards, and Class A regulatory information.

December 2006

Standard 7.00. This document is up-issued to update Signaling Server memory requirements and include fiber optic safety warnings.

October 2006

Standard 6.00. This document is up-issued to include CR Q01320592 information regarding 61C CP PII call registers in table 45 and table 48.

February 2006

Standard 5.00. This document is up-issued to include SIP CTI / TR 87 information from the new Nortel Converged Office Implementation Guide (553-3001-025).

January 2006

Standard 4.00. This document is up-issued with corrections related to CS 1000 Release 4.5 content (see safety specifications note on [page 47](#)).

August 2005

Standard 3.00. This document is up-issued to support Communication Server 1000 Release 4.5. This document also contains changes made based on Nortel input, including a new chapter on data network planning for VoIP.

September 2004

Standard 2.00. This document is up-issued for Communication Server 1000 Release 4.0. It includes new material on the Small Candeo DC power system and new features.

October 2003

Standard 1.00. This document is a new NTP for Succession 3.0. It was created to support a restructuring of the Documentation Library, which resulted in the merging of multiple legacy NTPs. This new document consolidates information previously contained in the following legacy documents, now retired:

- *Installation Planning* (553-3001-120)
- *Capacity Engineering* (553-3001-149)
- *System Engineering* (553-3001-151)
- *Power Engineering* (553-3001-152)

Contents

Contents	5
List of procedures	13
Finding the latest updates on the Nortel web site	15
How to get help	17
About this document	19
Subject	19
Applicable systems	20
Intended audience	21
Conventions	21
NTP feedback	22
Related information	23
Overview	25
Contents	25
Introduction	25
Engineering a new system	26
Engineering a system upgrade	26
Other resources	29

Data network planning for VoIP	31
Contents	31
Introduction	31
Data network planning for VoIP	32
100BaseTx IP connectivity	35
Regulatory information	37
Contents	37
System approval	37
Electromagnetic compatibility	38
Notice for United States installations	40
Notice for Canadian installations	43
Canadian and US network connections	44
Notice for International installations	46
System equipment	49
Contents	49
Introduction	49
Universal Equipment Modules	51
Common Equipment (Core)	58
Signaling Server	62
Network equipment	64
Peripheral Equipment	78
Terminal equipment	83
Power equipment	87
Ongoing configuration	90
Module configuration	93
Contents	93
Introduction	93
NT4N41 Core/Network Module	94

NT8D35 Network Module	97
NT8D37 Intelligent Peripheral Equipment Module	99
Power and grounding	103
Contents	103
Introduction	103
Grounding	104
Power systems	112
AC power	113
DC power	120
Reserve power	129
Candeo DC power system	137
NT4N49AA 4-Feed PDU	155
Power consumption	162
Power requirements for IP Phones	164
Heat dissipation	164
Calculating system power requirements	165
System upgrades	166
Selecting proper wire size	169
Contents	169
Introduction	169
Typical wire values	169
Metric conversion	171
Calculating wire size	171
Sense lead wire size	173
Input wire size	173
Preparing a system installation plan	175
Contents	175
Introduction	176

Creating an installation plan	177
Fire, security, and safety requirements	179
Equipment room requirements	182
Grounding and power requirements	191
Cable requirements	215
Preparing a floor plan	218
Estimating floor loading	222
Creating a building cable plan	223
Preparing for delivery	228
Preparing for installation	229
Design parameters	231
Contents	231
Introduction	231
System parameters	232
Customer parameters	232
Console and telephone parameters	233
Trunk and route parameters	234
ACD feature parameters	236
Special feature parameters	237
Hardware and capacity parameters	239
Memory-related parameters	240
System capacities	243
Contents	243
Introduction	243
Memory size	244
Mass storage	265
Physical capacity	266
Network traffic	280
Real-time capacity	295

Signaling Server	301
Software configuration capacities	308
CS 1000M capacities	308
Zone/IP Telephony node engineering	310
Resource calculations	323
Contents	323
Introduction	323
Resource calculation parameters	324
System calls	329
Real-time calculations	334
DSP/Media Card calculations	343
Virtual Trunk calculations	350
Signaling Server algorithm	352
Reducing imbalances (second round of algorithm calculations)	372
Illustrative engineering example	376
Application engineering	391
Contents	391
Introduction	391
Converged Desktop	392
Multi-purpose Serial Data Link	401
Microsoft Live Communications Server users	404
Meridian Mail	443
CallPilot engineering	445
Call Center	446
ELAN subnet engineering	453
CLASS network engineering	453
Configuration parameters	458

Provisioning	459
Contents	459
Introduction	460
Step 1: Define and forecast growth	461
Step 2: Estimate CCS per terminal	462
Step 3: Calculate number of trunks required	467
Step 4: Calculate line, trunk, and console load	468
Step 5: Calculate Digitone receiver requirements	469
Step 6: Calculate total system load	475
Step 7: Calculate number of network loops required	475
Step 8: Calculate number of network groups required	477
Step 9: Calculate number of IPE cards required	479
Step 10: Calculate number of IPE modules required	480
Step 11: Provision conference/TDS loops	480
Step 12: Assign equipment and prepare equipment summary	480
 Appendix A: Product compatibility for CS 1000 Release 4.5 software	 481
 Appendix B: Worksheets	 493
List of worksheets	493
Introduction	494
 Appendix C: Protected memory requirements ..	 541
Contents	541
Introduction	541
Protected Memory for Phone Sets: Detail	541
 Appendix D: Reference tables	 551
List of tables	551
Trunk traffic – Erlang B with P.01 Grade-of-Service	552
Trunk traffic – Poisson 1% blocking	554

Trunk traffic – Poisson 2% blocking	556
Digitone receiver requirements – Model 1	558
Digitone receiver requirements – Model 2	559
Digitone receiver requirements – Model 3	560
Digitone receiver requirements – Model 4	561
Digitone receiver load capacity – 6 to 15 second holding time	562
Digitone receiver load capacity – 16 to 25 second holding time	565
Digitone receiver requirements – Poisson 0.1% blocking	568
Conference and TDS loop requirements	570
Digitone receiver provisioning	571
Appendix E: Glossary	575

List of procedures

Procedure 1	
Estimating MFR requirements	450
Procedure 2	
Detailed calculation – Method 1	471
Procedure 3	
Detailed calculation – Method 1	472
Procedure 4	
Determining DTR requirements	473
Procedure 5	
Determining DTR requirements	474

Finding the latest updates on the Nortel web site

The content of this documentation was current at the time the product was released. To check for updates to the latest documentation and software for CS 1000 Release 4.5, click one of the links below.

Latest Software	Takes you directly to the Nortel page for CS 1000 Release 4.5 software.
Latest Documentation	Takes you directly to the Nortel page for CS 1000 Release 4.5 documentation.

How to get help

This section explains how to get help for Nortel products and services.

Getting help from the Nortel Web site

The best way to get technical support for Nortel products is from the Nortel Technical Support Web site:

www.nortel.com/support

This site provides quick access to software, documentation, bulletins, and tools to address issues with Nortel products. More specifically, the site enables you to:

- download software, documentation, and product bulletins
- search the Technical Support Web site and the Nortel Knowledge Base for answers to technical issues
- sign up for automatic notification of new software and documentation for Nortel equipment
- open and manage technical support cases

Getting help over the telephone from a Nortel Solutions Center

If you don't find the information you require on the Nortel Technical Support Web site, and have a Nortel support contract, you can also get help over the phone from a Nortel Solutions Center.

In North America, call 1-800-4NORTEL (1-800-466-7835).

Outside North America, go to the following Web site to obtain the phone number for your region:

www.nortel.com/callus

Getting help from a specialist by using an Express Routing Code

To access some Nortel Technical Solutions Centers, you can use an Express Routing Code (ERC) to quickly route your call to a specialist in your Nortel product or service. To locate the ERC for your product or service, go to:

www.nortel.com/erc

Getting help through a Nortel distributor or reseller

If you purchased a service contract for your Nortel product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller.

About this document

This document is a global document. Contact your system supplier or your Nortel representative to verify that the hardware and software described are supported in your area.

Subject



WARNING

Before a Large System can be installed, a network assessment **must** be performed and the network must be VoIP-ready.

If the minimum VoIP network requirements are not met, the system will not operate properly.

For information on the minimum VoIP network requirements and converging a data network with VoIP, refer to *Converging the Data Network with VoIP* (553-3001-160).

This document provides guidelines for selecting a site, planning a site, and planning the system. It includes information on setting up the equipment area, establishing grounding and power, and meeting cabling requirements. If there is a conflict between information in this document and a local or national code, follow the code.

Note on legacy products and releases

This NTP contains information about systems, components, and features that are compatible with Nortel Communication Server 1000 Release 4.5

software. For more information on legacy products and releases, click the **Technical Documentation** link under **Support & Training** on the Nortel home page:

www.nortel.com

Applicable systems

This document applies to the following systems:

- Communication Server 1000M Half Group (CS 1000M HG)
- Communication Server 1000M Single Group (CS 1000M SG)
- Communication Server 1000M Multi Group (CS 1000M MG)
- Meridian 1 Option 51
- Meridian 1 PBX 51C
- Meridian 1 PBX 61C
- Meridian 1 Option 71
- Meridian 1 PBX 81
- Meridian 1 PBX 81C

Note: When upgrading software, memory upgrades may be required on the Signaling Server, the Call Server, or both.

System migration

When particular Meridian 1 systems are upgraded to run CS 1000 Release 4.5 software and configured to include a Signaling Server, they become CS 1000M systems. Table 1 lists each Meridian 1 system that supports an upgrade path to a CS 1000M system.

Table 1
Meridian 1 systems to CS 1000M systems (Part 1 of 2)

This Meridian 1 system...	Maps to this CS 1000M system
Meridian 1 PBX 51C	CS 1000M Half Group
Meridian 1 PBX 61C	CS 1000M Single Group

Table 1
Meridian 1 systems to CS 1000M systems (Part 2 of 2)

This Meridian 1 system...	Maps to this CS 1000M system
Meridian 1 PBX 81	CS 1000M Multi Group
Meridian 1 PBX 81C	CS 1000M Multi Group

For more information, see *Communication Server 1000M and Meridian 1: Large System Upgrade Procedures* (553-3021-258).

Intended audience

This document is intended for individuals responsible for engineering the switch. The engineer may be an employee of the end-user customer, a third party consultant, or a distributor.

Other persons who may be interested in this information, or find it useful, are Sales and Marketing, Service Managers, Account Managers, Field Support, Product Management, and Development.

Conventions

Terminology

The following systems are referred to generically as “Large System”:

- Communication Server 1000M Half Group (CS 1000M HG)
- Communication Server 1000M Single Group (CS 1000M SG)
- Communication Server 1000M Multi Group (CS 1000M MG)
- Meridian 1 Option 51
- Meridian 1 PBX 51C
- Meridian 1 PBX 61C
- Meridian 1 Option 71

- Meridian 1 PBX 81
- Meridian 1 PBX 81C

In North America, there are a number of branch circuit wiring methods recognized by the U.S. National Electrical Code (NEC) and the Canadian Electrical Code (CEC). Among them are:

- 208/120 V, three-phase, four-wire, “wye” service
- 240/120 V, three-phase, four-wire, “delta” service
- 240/120 V, single-phase, three-wire service

Sometimes, nomenclature is confusing. For example, the third method (240/120 V, single-phase, three-wire, service) is often referred to as 220/110, 230/115, 240/120, or 250/125 V. This is because, as a result of voltage drops, the nominal voltage varies from region to region, utility to utility, and even within the same distribution network. In addition, the ratings of the plugs and receptacles used are 250 and 125 V, although the nominal voltages are usually lower than this.

NTP feedback

Nortel strives to provide accurate documentation for our customers. However, if you feel there are errors or omissions in this document, your feedback is welcome.

Send comments via e-mail to gntsdoc@nortel.com or open a problem report via the normal procedures.

Please provide as much information as possible including the NTP number, standard version and date of the document, as well as the page, problem description, and any supporting documentation and capture files.

Related information

This section lists information sources that relate to this document.

NTPs

The following NTPs are referenced in this document:

- *Converging the Data Network with VoIP* (553-3001-160)
- *Dialing Plans: Description* (553-3001-183)
- *IP Peer Networking: Installation and Configuration* (553-3001-213)
- *Features and Services* (553-3001-306)
- *Software Input/Output: Administration* (553-3001-311)
- *Telephones and Consoles: Description, Installation, and Operation* (553-3001-367)
- *IP Phones: Description, Installation, and Operation* (553-3001-368)
- *Traffic Measurement: Formats and Output* (553-3001-450)
- *Communication Server 1000M and Meridian 1: Large System Overview* (553-3021-010)
- *Communication Server 1000M and Meridian 1: Large System Installation and Configuration* (553-3021-210)*Communication Server 1000M and Meridian 1: Large System Upgrade Procedures* (553-3021-258)
- Candeo Power System User Guide (P0914425)
- Candeo Power System Installation Guide (P0914426)
- Candeo SP 48300 Power System AP6C55AA User Manual (P7000154)
- Candeo SP 48300 Power System AP6C55AA Installation Manual (P7000289)

Online

To access Nortel documentation online, click the **Technical Documentation** link under **Support & Training** on the Nortel home page:

www.nortel.com

CD-ROM

To obtain Nortel documentation on CD-ROM, contact your Nortel customer representative.

Overview

Contents

This section contains information on the following topics:

Introduction	25
Engineering a new system.	26
Engineering a system upgrade.	26
Other resources	29

Introduction



WARNING

Before a Large System can be installed, a network assessment **must** be performed and the network must be VoIP-ready.

If the minimum VoIP network requirements are not met, the system will not operate properly.

For information on the minimum VoIP network requirements and converging a data network with VoIP, refer to *Converging the Data Network with VoIP* (553-3001-160).

A switch must be engineered upon initial installation, during upgrades, and when traffic loads change significantly or increase beyond the bounds

anticipated when the switch was last engineered. A properly engineered switch is one in which all components work within their capacity limits during the busy hour.

This document does not discuss major features, such as Automatic Call Distribution (ACD) or Network Automatic Call Distribution (NACD), and auxiliary processors and their applications, such as CallPilot. Guidelines for feature and auxiliary platform engineering are given in documents relating to the specific applications involved. Sufficient information is given in this document to determine and account for the impact of such features and applications upon the capacities of the system itself.

Engineering a new system

Figure 1 on [page 27](#) illustrates a typical process for installing a new system. The agent expected to perform each step of the process is listed to the right of the block. The highlighted block is the subject of this document. It is further illustrated in Figure 2 on [page 28](#).

Engineering a system upgrade

In cases of major upgrades or if current resource usage levels are not known, it is recommended that the complete engineering process be followed, as described in the previous section.

If minor changes are being made, the incremental capacity impacts can be calculated and added to the current resource usage levels. The resulting values can then be compared to the capacity chart to determine whether the corresponding capacity has been exceeded.

Figure 1
Engineering a new system


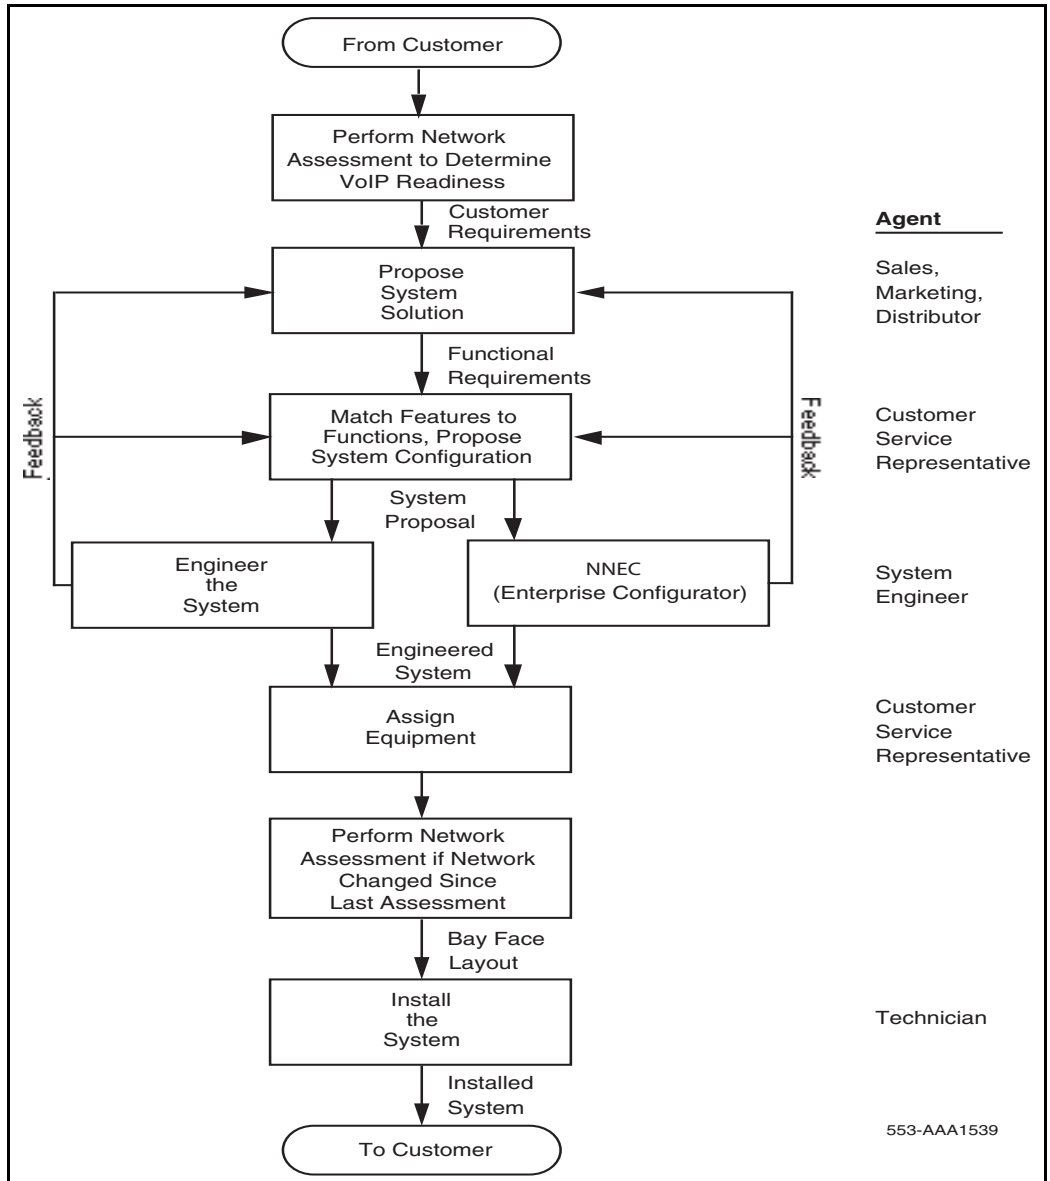


Figure 2
Engineering a new system

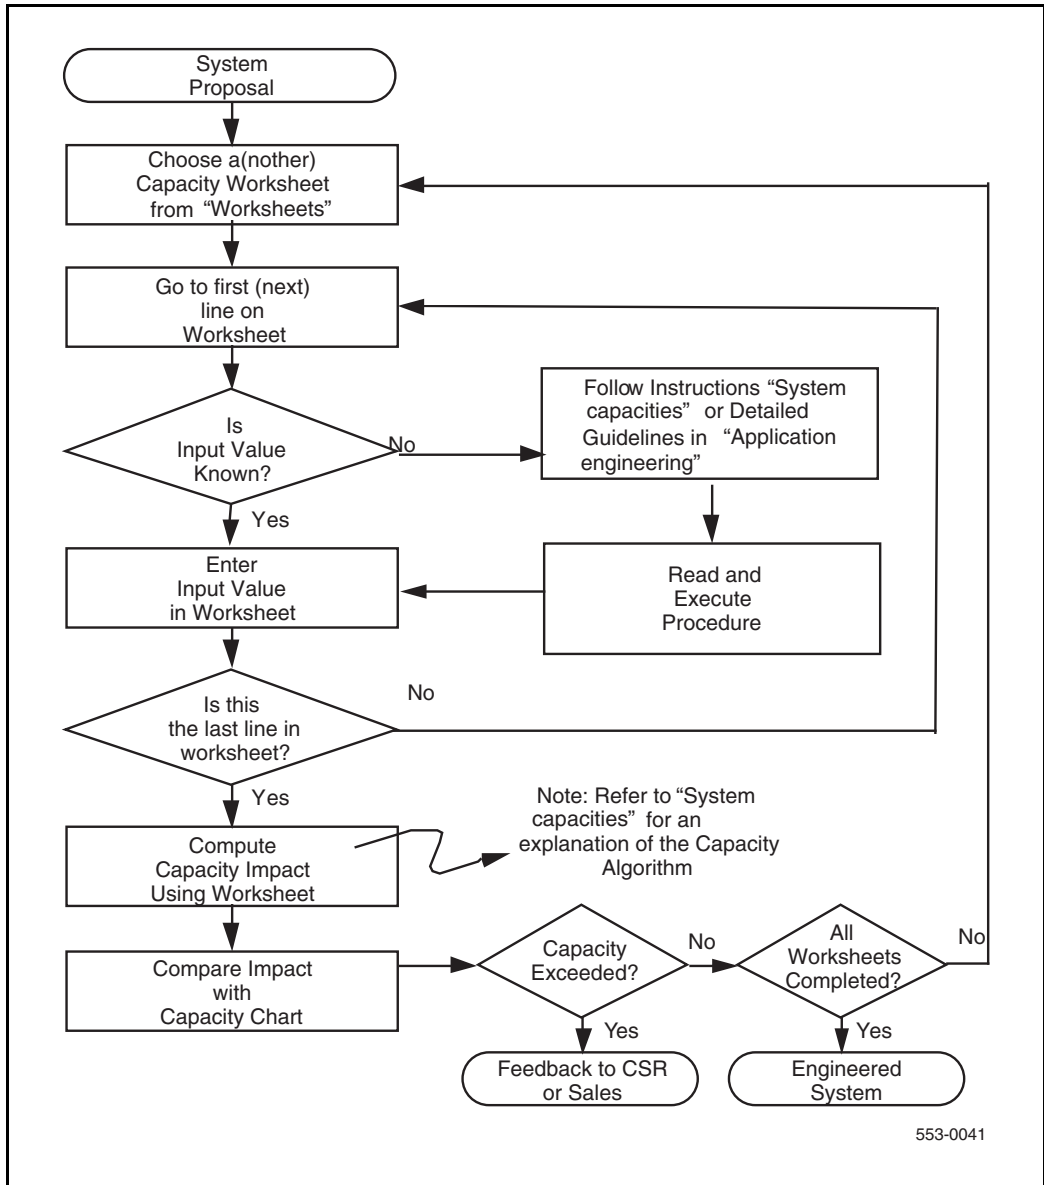

Other resources

This section briefly describes the tools available to assist the site engineer, sales person, and/or customer in engineering the switch. Differences between the tools, their platforms, and implementation and usage are described.

NNEC

The NNEC is a global engineering and quotation tool, available in both stand-alone and web-based versions. For users in North America and CALA, it replaces Meridian Configurator and 1-Up. For users in EMEA countries, it replaces NetPrice.

NNEC provides a simple “needs-based” provisioning model that allows for easy configuring and quoting. It supports CS 1000M and Meridian 1 new system sales and upgrades by analyzing input specifications for a digital PBX to produce a full range of pricing, engineering reports, and graphics. These reports include equipment lists, cabling reports, software matrix, engineering capacities, and pricing for currently available CS 1000M and Meridian 1 configurations. Graphics depict the engineered platform, showing how the shelves are populated with various cards as well as loop assignments.

NNEC runs on the user’s Windows-based or MacOS personal computer. It uses standard browser and Microsoft Office applications. For details on computer system requirements and for user instructions, refer to the Nortel web site.

NNEC implements the algorithms specified in this document for real time, memory, and physical capacities. It is the official tool for determining whether a proposed configuration will meet the customer’s capacity requirements.

Where applicable, in this document, references are made to the NNEC inputs that correspond to parameters being described.

Data network planning for VoIP

Contents

This section contains information on the following topics:

Introduction	31
Data network planning for VoIP	32
100BaseTx IP connectivity	35

Introduction



WARNING

Before a Large System can be installed, a network assessment **must** be performed and the network must be VoIP-ready.

If the minimum VoIP network requirements are not met, the system will not operate properly.

For information on the minimum VoIP network requirements and converging a data network with VoIP, refer to *Converging the Data Network with VoIP* (553-3001-160).

The data network's infrastructure, engineering, and configuration are critical to achieve satisfactory IP Telephony voice quality. A technical understanding of data networking and Voice over IP (VoIP) is essential for optimal performance of the Large System.

Refer to *Converging the Data Network with VoIP* (553-3001-160) for detailed information about network requirements. These requirements are critical to the system Quality of Service (QOS).

Data network planning for VoIP

Consider the following when planning the network:

- system network requirements (for ELAN and TLAN subnets)
- basic data network requirements for Call Server to Media Gateway connections
 - jitter
 - bandwidth
 - LAN recommendations
- basic data network requirements for IP Phones
 - bandwidth
- power requirements for IP Phones

Evaluating the existing data infrastructure

Evaluate existing data infrastructures (LAN and WAN) to confirm their suitability for VoIP deployment. In some cases, VoIP deployment requires additional bandwidth, improved performance, and increased availability.

To evaluate voice performance requirements, review device inventory, network design, and baseline information. Links and devices must have sufficient capacity to support additional voice traffic. It may be necessary to upgrade links that have high peak or busy hour utilization.

When analyzing the network environment, target devices with the following characteristics:

- high CPU utilization
- high backplane utilization
- high memory utilization

- queuing drops
- buffer misses for additional inspection
- potential upgrade

Peak utilization characteristics in the baseline are valuable in determining potential voice quality issues.

To evaluate availability requirements for the VoIP network, review network topology, feature capabilities, and protocol implementations. Measure redundancy capabilities of the network against availability goals with the network design recommended for IP Telephony.

Evaluate overall network capacity to ensure that the network meets overall capacity requirements. Overall capacity requirements must not impact existing network and application requirements. Evaluate the network baseline in terms of the impact on VoIP requirements.

To ensure that both IP Telephony and existing network requirements are met, it may be necessary to add one or more of the following: memory, bandwidth, features.

Planning deployment of a Large System on a data network

To deploy the Large System on a data network, consider the following details and refer to *Converging the Data Network with VoIP* (553-3001-160):

- VoIP technology
 - H.323 protocols
 - VoIP concepts and protocols
 - RTP
 - Codecs including G.711 and G.729
- data network architecture
 - TCP/IP
 - IP subnetting
 - routing protocols including EIGRP, OSPF, RIP, and BGP

- data services and peripherals
 - DNS
 - DHCP
 - TFTP
 - WEB server
 - QOS

QOS planning

An IP network must be engineered and provisioned to achieve high voice quality performance. QOS policies must be implemented network-wide so that voice packets receive consistent and proper treatment as they travel across the network.

IP networks that treat all packets identically are called “best-effort networks”. In a best-effort network, traffic can experience different amounts of delay, jitter, and loss at any time. This can produce problems such as speech breakup, speech clipping, pops and clicks, and echo. A best-effort network does not guarantee that bandwidth is available at any given time. Use QOS mechanisms to ensure bandwidth is available at all times, and to maintain consistent, acceptable levels of loss, delay, and jitter.

For planning details for QOS, see *Converging the Data Network with VoIP* (553-3001-160).

Core network planning

There are three networks in the Large System IP Telephony network design:

- 1 Call Server to Media Gateway network
- 2 ELAN (Management LAN) subnet
- 3 TLAN (Voice LAN) subnet

Note: The ELAN (or Embedded LAN) subnet isolates critical telephony signaling between the Call Server and the other components.. The TLAN (or Telephony LAN) subnet carries telephony/voice/signaling traffic and connects to the customer network and the rest of the world.

100BaseTx IP connectivity

Between the Call Server and the Media Gateway, the CS 1000 systems support 100BaseTx IP point-to-point connectivity or campus data network connectivity. Campus data network connectivity is provided through IP daughterboards in the Call Server and the Media Gateway.

To satisfy voice quality requirements, adhere to applicable engineering guidelines. Refer to *Converging the Data Network with VoIP* (553-3001-160) for details. Contact the local Data Administrator to obtain specific IP information.

Campus network system requirements

The following campus network requirements are necessary:

- The ELAN subnet and the TLAN subnet must be separate.
- ELAN subnet applications must be on the same subnet. This includes the Voice Gateway Media Cards, which must be on the same ELAN subnet.
- Voice Gateway Media Cards in the same node must be on the same TLAN subnet.
- Use of the VLAN concept is a practical way to maintain the same subnet for remote locations.

Refer to *Converging the Data Network with VoIP* (553-3001-160) for information on basic data network/LAN requirements for Call Server to Media Gateway connections:

- Packet Delay Variation (PDV) jitter buffer
- bandwidth planning
- LAN recommendations for Excellent Voice Quality
- monitoring IP link voice quality of service
- basic data network requirements for IP Phones
 - bandwidth requirements
 - bandwidth planning

Media conversion devices

Third-party media conversion devices can extend the range of the 100BaseTx and convert it to fiber. Use caution when extending the length of cable used in the point-to-point configuration. Do not exceed the specified round trip delay parameters.

Regulatory information

Contents

This section contains information on the following topics:

System approval	37
Electromagnetic compatibility	38
Notice for United States installations	40
Notice for Canadian installations	43
Canadian and US network connections	44
Notice for International installations	46

System approval

The Large System has approvals to be sold in many global markets. Regulatory labels on the back of system equipment contain national and international regulatory information.

Note: Some physical components in systems may have been marketed under different names in the past. Previous naming conventions utilizing the terms *Succession 1000* and *CSE 1000* have been harmonized to use the term *Communication Server 1000*. Similarly, previous naming conventions utilizing the terms *Meridian* and *Option* have been harmonized to use the term *Meridian 1 PBX*. Product names based on earlier naming conventions may still appear in some system documentation and on the system regulatory labels. From the point of view of regulatory standards compliance, the physical equipment is unchanged. As such, all the instructions and warnings in the regulatory sections of this document apply to the Communication Server 1000M, Communication Server 1000S, and Communication Server 1000E systems, as well as the Meridian, Succession 1000, and CSE 1000 systems.

Note: In order to comply with Regulatory Requirements, all components, (Including doors, covers, side panels, inter-cabinet spacers, ferrites, EMI gaskets, shielded cables, etc.,) must be in place and operative while the system is in service.

Electromagnetic compatibility



CAUTION

In a domestic environment, the system can cause radio interference. In this case, the user could be required to take adequate measures.

Note: If a Signaling Server is added to a previously CISPR Class B system (previously used in some specific countries), the system is now compliant to Class A.

Table 2 lists the Electromagnetic Compatibility (EMC) specifications for the system.

Table 2
EMC specifications for Class A devices (Part 1 of 2)

Jurisdiction	Standard	Description
United States	FCC CFR 47 Part 15	FCC Rules for Radio Frequency Devices (see Note 1)
Canada	ICES-003	Interference-Causing Equipment Standard: Digital Apparatus
Europe	EN 55022/ CISPR 22	Information technology equipment — Radio disturbance characteristics — Limits and methods of measurement (see Note 2)
	EN 55024	Information technology equipment — Immunity characteristics — Limits and methods of measurement
	EN 61000-3-2	Limits for harmonic current emissions (equipment input current ≤ 16 A per phase)
	EN 61000-3-3	Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current ≤ 16 A
Australia	CISPR 22/ AS/NZS 3548	Limits and methods of measurement of radio disturbance characteristics of information technology equipment (see Note 2)

Table 2
EMC specifications for Class A devices (Part 2 of 2)

Jurisdiction	Standard	Description
Korea	KN22	Information technology equipment — Radio disturbance characteristics — Limits and methods of measurement
	KN24	Information technology equipment — Immunity characteristics — Limits and methods of measurement
Taiwan	CNS 13438	Limits and methods of measurement of radio disturbance characteristics of information technology equipment
<p>Note 1a: FCC CFR 47 Part 15.21 statement: “Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.”</p> <p>Note 1b: The user should not make changes or modifications not expressly approved by Nortel. Any such changes could void the user's authority to operate the equipment.</p>		
<p>Note 2: EN 55022/CISPR 22 statement: “WARNING This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.”</p>		

Notice for United States installations

The system complies with Part 68 of the United States Federal Communications Commission (FCC) rules. A label containing the FCC registration number and Ringer Equivalence Number (REN) for the equipment is on the back of the pedestal unit in each switching equipment column. If requested, you must provide this information to the telephone company.

Regulatory labels include:

- FCC registration: AB6CAN-61117-MF-E
- FCC registration: AB6CAN-61116-PF-E
- FCC registration: AB6CAN-18924-KF-E
- Service code: 9.0F, 6.0P
- Ringer equivalence (REN): 2.7A

The FCC regulation label includes the REN. This number represents the electrical load applied to your telephone line after you plug the system into the wall jack. The telephone line for your premises does not operate correctly if the total ringer load exceeds the capabilities of the telephone company's Central Office (CO) equipment. If too many ringers connect to the line, there may not be enough energy to ring your system. If the ringer load exceeds the system's capabilities, you can have problems dialing telephone numbers.

For more information about the total REN permitted for your telephone line, contact your local telephone company. However, as a guideline, a total REN of five should support normal operation of your equipment.

If your system equipment causes harm to the telephone network, the telephone company can temporarily discontinue your service. The telephone company can ask you to disconnect the equipment from the network until the problem is corrected and you are sure the equipment is working correctly. If possible, the telephone company notifies you before they disconnect the equipment. You are notified of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that can affect the correct operation of your equipment. If the telephone company does make changes, they will give you advance notice. With advance notice, it is possible for you to make arrangements to maintain uninterrupted service.

If you experience trouble with your system equipment, contact your authorized distributor or service center.

You cannot use the equipment on public coin service provided by the telephone company. Connection to party line service is subject to state tariffs.

Contact the state public utility commission, public service commission, or corporation commission for information.

The equipment can provide access to interstate providers of operator services through the use of Equal Access codes. Failure to provide Equal Access capabilities is a violation of the Telephone Operator Consumer Services Improvement Act of 1990 and Part 68 of the FCC Rules.

Hearing aid compatibility

All proprietary telephones used with the system meet with the requirements of FCC Part 68 Rule 68.316 for hearing aid compatibility.

FCC compliance: Registered equipment for Direct Inward Dial calls

Equipment registered for Direct Inward Dial (DID) calls must provide proper answer supervision. Failure to meet this requirement is a violation of part 68 of the FCC's rules.

The definition of correct answer supervision is as follows:

- DID equipment returns answer supervision to the Central Office when DID calls are:
 - answered by the called telephone
 - answered by the attendant
 - routed to a recorded announcement that can be administered by the user
 - routed to a dial prompt
- DID equipment returns answer supervision on all DID calls forwarded to the Central Office. Exceptions are permitted if a call is not answered, a busy tone is received, or a reorder tone is received.

Radio and TV interference

The system complies with Part 15 of the FCC rules in the United States of America. Operation is subject to the following two conditions:

- 1** The system must not cause harmful interference.
- 2** The system must accept any interference received, including interference that can cause undesirable operation.

You can determine the presence of interference by placing a telephone call while monitoring. If the system causes interference to radio or television reception, try to correct the interference by moving the receiving TV or radio antenna if this can be done safely. Then move the TV or radio in relation to the telephone equipment.

If necessary, ask a qualified radio or television technician or supplier for additional information. You can refer to the document “How to Identify and Resolve Radio-TV Interference”, prepared by the Federal Communications Commission. This document is available from:

U.S. Government Printing Office
Washington DC 20402

Notice for Canadian installations

Industry Canada uses a label to identify certified equipment. Certification indicates that the equipment meets certain operations, safety, and protection requirements for telecommunications networks. Industry Canada does not guarantee that the equipment will operate to the user’s satisfaction.


The Load Number (LN) assigned to each terminal device is the percentage of the total load that can be connected to a telephone loop using the device. This number prevents overload. The termination on a loop can have any combination of devices, provided that the total of the Load Numbers does not exceed 100. An alphabetical suffix is also defined in the Load Number for the appropriate ringing type (A or B), if necessary. For example, LN = 20 A indicates a Load Number of 20 and an “A” type ringer.

Before you install any equipment, make sure that it can connect to the facilities of the local telecommunications company. Install the equipment

using acceptable methods of connection. In some cases, a certified connector assembly (telephone extension cord) can extend the company’s inside wiring associated with a single line individual service. Understand that compliance with the above conditions does not always prevent degradation of service.


Repairs to certified equipment must be made by an authorized Canadian maintenance facility designated by the supplier. If you make repairs or modifications to this equipment, or if the equipment malfunctions, the telephone company can ask you to disconnect the equipment.

Make sure that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, connect together. This precaution is for the users’ protection, and is very important in rural areas.



DANGER OF ELECTRIC SHOCK

The system frame ground of each unit must be tied to a reliable building ground reference.



DANGER OF ELECTRIC SHOCK

Do not attempt to make electrical ground connections yourself. Contact your local electrical inspection authority or electrician to make electrical ground connections.

Radio and TV interference

The system does not exceed Class A limits for radio noise emissions from digital apparatus, as set out in the radio interference regulations of Industry Canada (ICES-003).

Canadian and US network connections

Table 3 contains information that must be given to the local telephone company when ordering standard network interface jacks for the system.

Table 3 includes columns for system port identification, Facility Interface Code (FIC), Service Order Code (SOC), Uniform Service Order Code (USOC) jack identification, and associated Nortel equipment part numbers.

Table 3
Network connection specifications (Part 1 of 2)

Ports	Facility Interface Code	Service Order Code	REN	Network jacks	Manufacturer network interface port designation
MTS/WATS					
2-Wire, LSA, L-S (2-Wire, Local Switched Access, Loop-Start)	02LS2	9.0F	2.7A	RJ21X CA21X*	NT8D14
2-Wire, LSA, G-S (2-Wire, Local Switched Access, Ground-Start)	02GS2	9.0F	2.7A	RJ21X CA21X*	NT8D14
2-Wire, LSA, R-B (2-Wire, Local Switched Access, Reverse-Battery)	02RV2-T	9.0F	0.0B	RJ21X CA21X*	NT8D14
1.544 Mbps OSI, SF	04DU9-BN	6.0P	N/A	RJ48 CA48*	NTRB21
1.544 Mbps OSI, SF	04DU9-KN	6.0P	N/A	RJ48 CA48*	NTRB21
Analog PL facilities					
8-port OPX line	OL13C	9.0F	N/A	RJ21X	NT1R20
E&M TIE Trunk (TIE line, lossless, 2-wire type 1 E&M)	TL11M	9.0F	N/A	RJ2EX CA2EX*	NT8D15
* RJ with CA for Canada					

Table 3
Network connection specifications (Part 2 of 2)

Ports	Facility Interface Code	Service Order Code	REN	Network jacks	Manufacturer network interface port designation
E&M 4-Wire DRTT (TIE line, lossless, dial repeating, 4-wire type 1 E&M)	TL31M	9.0F	N/A	RJ2GX CA2GX*	NT8D15
E&M 4-Wire DRTT (TIE line, lossless, dial repeating, 4-wire type 2 E&M)	TL32M	9.0F	N/A	RJ2HX CA2HX*	NT8D15
Digital					
1.544 Mbps superframe	04DU9-BN	6.0P	N/A	N/A	NT5D12
1.544 Mbps extended superframe	04DU9-KN	6.0P	N/A	N/A	NT5D12
* RJ with CA for Canada					

Notice for International installations

If there is not enough planning or technical information available for your country of operation, contact your regional distributor or authority.

European compliance information

The system meets the following European technical regulations: CTR 1, CTR 2, CTR 3, CTR 4, CTR 6, CTR 10, CTR 12, CTR 13, CTR 15, CTR 17, CTR 22, CTR 24, and the I-ETS 300 131.

Supported interfaces

Analog interfaces are approved based on national or European specifications.
Digital interfaces are approved based on European specifications.

Safety specifications

The system meets the following European safety specifications: EN 60825, EN 60950, and EN 41003.

Note: AC-powered CS 1000M systems and Meridian 1 Large Systems are not designed to meet the above specifications and are not approved for sale in Europe, Middle East, and Africa regions.



Class 1 LED device

System equipment

Contents

This section contains information on the following topics:

Introduction	49
Universal Equipment Modules	51
Common Equipment (Core)	58
Signaling Server	62
Network equipment	64
Peripheral Equipment	78
Terminal equipment	83
Power equipment	87
Ongoing configuration	90

Introduction


This section gives a high-level description of system architecture, emphasizing components of the CS 1000M and Meridian 1 that have capacity limitations or impacts. The hardware of these systems is divided into six functional areas:

- 1 Common Equipment (Core) – Provides the processor control, software execution, and memory functions of the system.
- 2 Common Equipment (Network) – Performs switching functions between the processor and Peripheral Equipment cards.

- 3 Peripheral Equipment – Provides the interface between the network and connected devices, including terminal equipment and trunks.
- 4 Terminal equipment – Includes telephones and attendant consoles (and may include equipment such as data terminals, printers, and modems).
- 5 Power equipment – Provides the electrical voltages required for system operation, and cooling and sensor equipment for system protection.
- 6 Auxiliary equipment – Includes separate computing platforms that provide additional functionality which interfaces with and sometimes controls the activities of the switch's main processor.

Note: As shown in Figure 3 on [page 50](#), the network interface function is generally considered a subset of the Common Equipment functions.

Figure 3
Basic system architecture

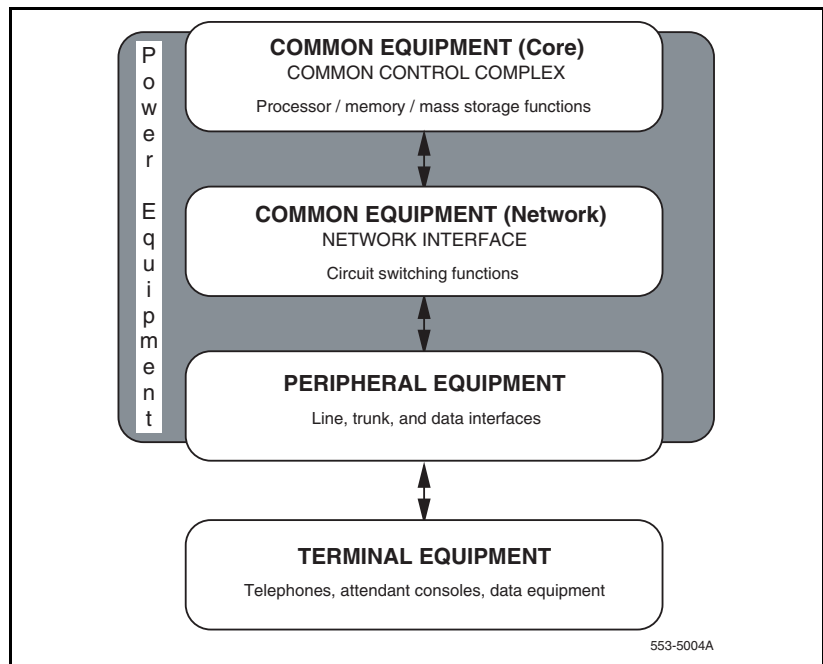

This section provides guidelines for system configuration. The worksheets referenced in this section can be found in Appendix B: “Worksheets” on [page 493](#).

Universal Equipment Modules

Universal Equipment Modules (UEM) are the building blocks of the communications system. Each UEM is a self-contained unit with power, a card cage, I/O panels, and cable routing channels. It is a generic case containing sets of equipment used in system operations (see Figure 4 on [page 52](#)).

UEMs are stacked in columns

UEMs are stacked in columns, up to four modules high. Within a column, the levels are referred to as tiers. The UEMs are numbered 0 to 3 from the bottom up (see Figure 4 on [page 52](#)). Cables connect cards in the same module, between two modules, and between cards and the I/O panel in the same module.

Column components


Each column contains a pedestal base, a top cap, and up to four modules.

Pedestals

Each column sits on a pedestal. The pedestal contains power, cooling, and monitoring equipment.

- A Power Distribution Unit (PDU) in the back of the pedestal supplies either AC or DC power to the column.
- A System Monitor checks the column’s cooling and power systems.
- A blower unit (accessible from the front of the pedestal) forces air up through the modules to cool the circuit cards.

Figure 4
Universal Equipment Modules

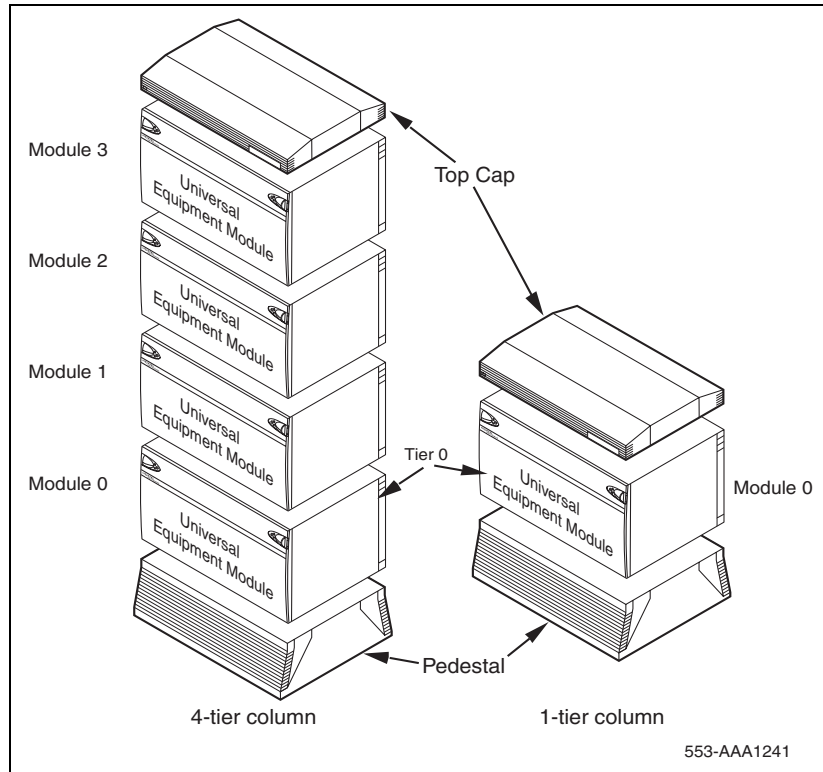

Top Caps

A top cap is mounted on the top module of each column. It contains:

- Air exhaust grills in the cap that release air from the blowers in the pedestal.
- A heat sensor that monitors the temperature of the column.
- A red LED in the front of the cap's exhaust grill that lights if the system overheats or if a power outage occurs.
- Ladder racks for routing cables can also be fitted to the top caps.

Modules

Up to four modules can be included in a column. The modules can include:

- NT4N41 CompactPCI[®] (cCPI) Core/Network Module – required for all Large Systems
- NT8D35 Network Module – required for Meridian 1 PBX 81C and CS 1000M MG
- NT8D37 Intelligent Peripheral Equipment (IPE) Module – required for all Large Systems

Columns are grouped in rows


A system can have one column or multiple columns. Columns are attached in rows. Column 0 is always the column containing the “Core/Net 0” module. Column 1 is placed to the left of Column 0 and ALWAYS contains the “Core/Net 1” module.

Column 0 and Column 1 are placed at the far left of the row (front view). Column numbering continues to the right of Core 0 (see Figure 5 on [page 54](#)).

Additional rows are configured with the lowest numbered column on the far left and the highest numbered column on the far right (front view).

For compliance with electromagnetic interference/radio frequency interference (EMI/RFI) standards, spacer kits are provided to interconnect the columns in a multiple-column system.

Figure 5
Example of Large System column row

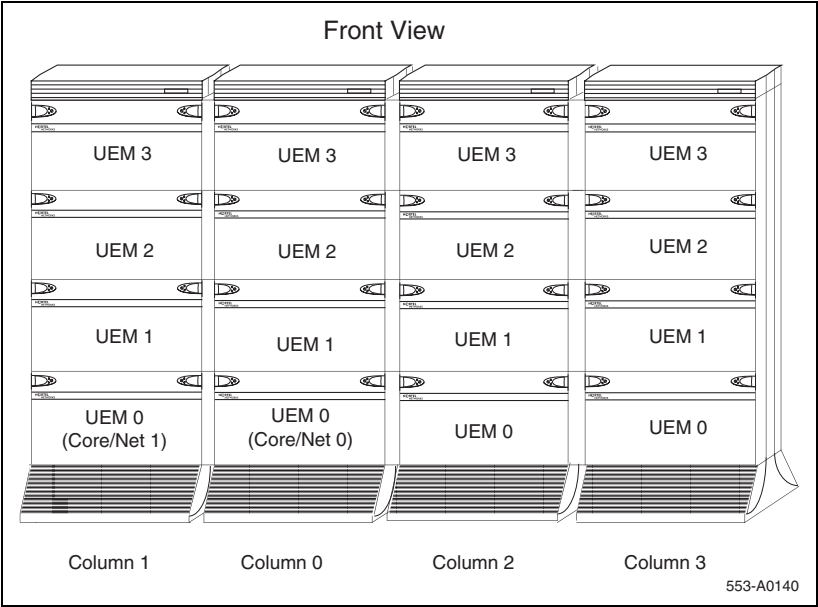


Note: Modules containing the Core Processor (CP) equipment should always be placed in the first two tiers of system columns.

UEMs are identified by function

Each UEM contains a specialized set of equipment to digitalize, process, and route phone calls and voice messages (see Figure 6 on [page 55](#)).

Figure 6
UEMs identified by function

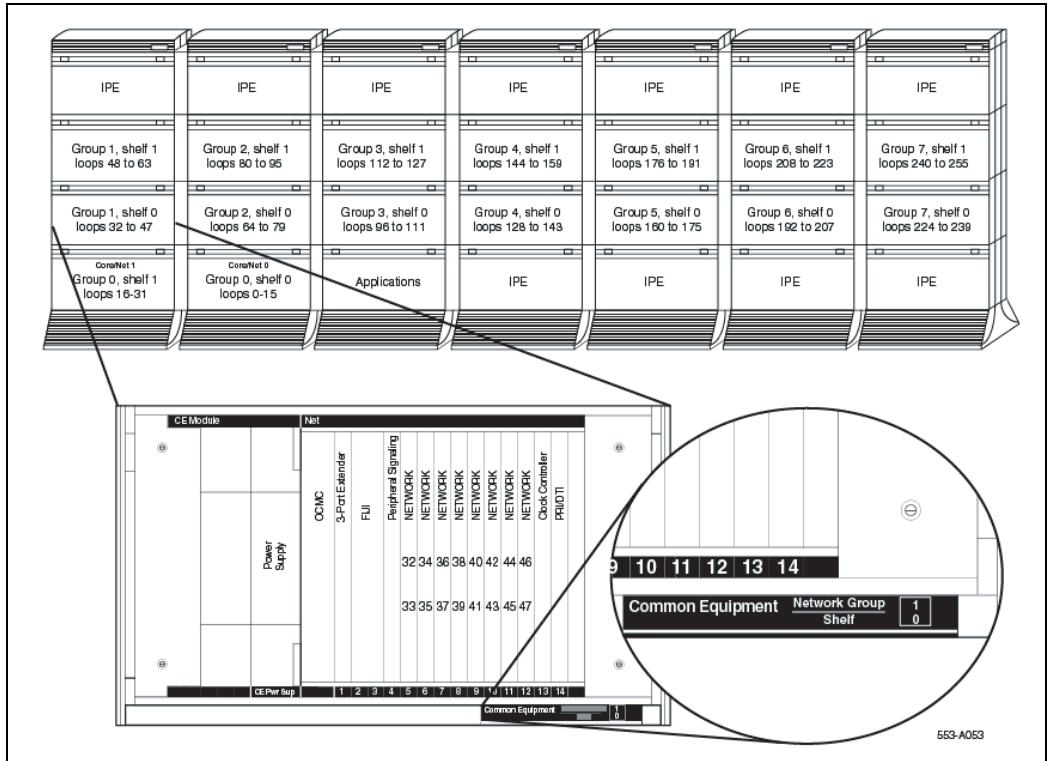

Card cage

Inside each UEM is a metal card cage. This card cage holds the circuit cards, power card, and related equipment for that module. UEMs are named for the function of that card cage.


Card cages are bolted inside the UEM case. Card cages can be removed and replaced for repairs or upgrades.

Core/Network module

Meridian 1 Large Systems feature the NT4N41 Core/Network module. The Core/Network module provides a unified hardware platform for single group and multi-group configurations. The NT4N41 Core/Network module supports:

- an integrated cPCI shelf
- NT4N48 System Utility card that incorporates the functionality of the System Utility Transition card, LCD display, and the security device holder
- a fanout panel (see Figure 7 on [page 57](#)) to provide connectivity to the network shelf
- upgrades from single group to multi-group configurations (requiring a new keycode file and any additional hardware necessary for a multi-group system)

Figure 7
NT4N41 Core/Network shelf fanout panel (backplane)

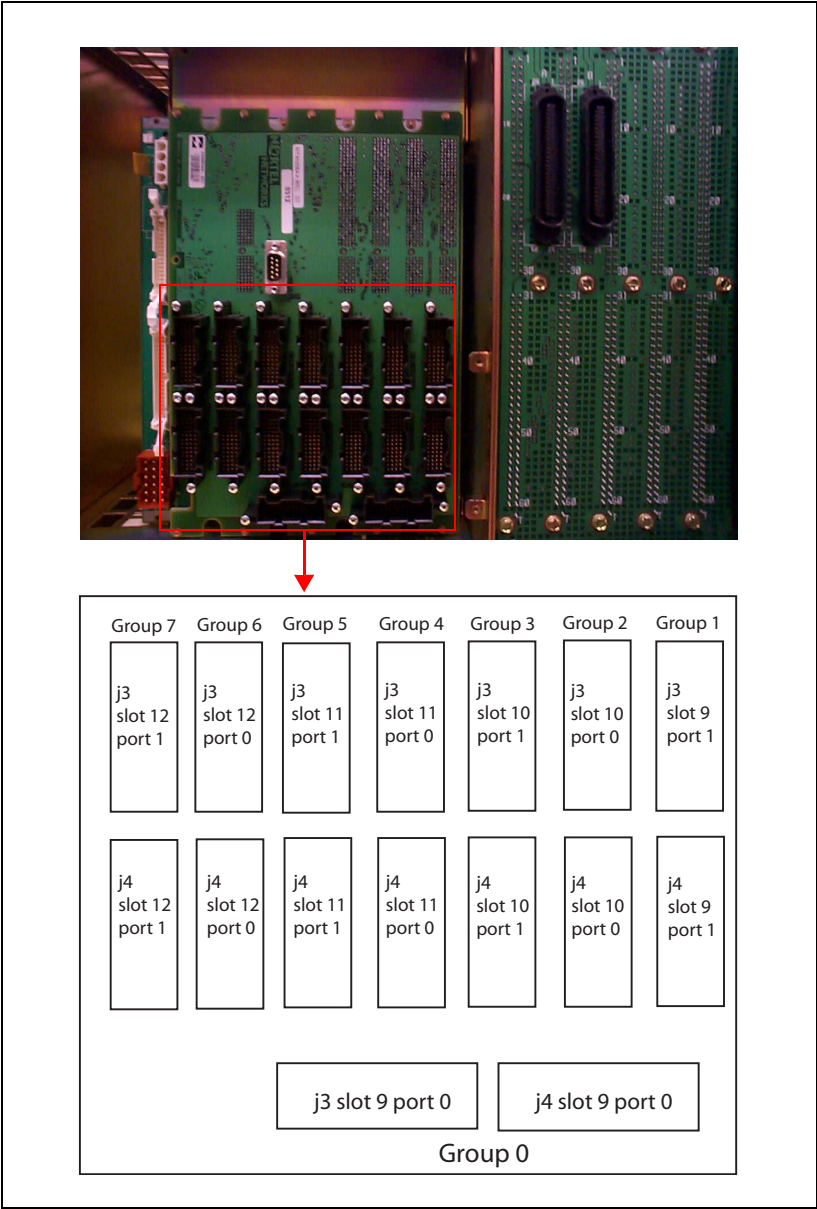

Common Equipment (Core)

The central processor is the common control complex of any system. It executes the sequences that process voice and data connections, monitor call activity, and perform system administration and maintenance.

The processor communicates with the network interface over a common control bus that carries the flow of information.

The common control complex consists of:

- cPCI-based design compatible with the CP PII chassis
- Intel Pentium M processor
- Two Compact Flash (CF) sockets: one on-board and one hot swappable on the faceplate
- CP PIV processor card with 512MB of DRAM memory

Core Processor (CP)

At system power-up, stored instructions are executed by the CP to begin the process of loading programs from the system's Compact Flash (FMD) card into memory. The program's first activity is to read in the site's configuration database from the FMD. Once the system loading and initialization process is complete, the program enters its normal operational state.

During normal operation, the CP performs control and switching sequences required for call processing, system administration, and maintenance. It also processes input/output messages, which provide interfaces to auxiliary processors and the system administrator. The CP is capable of executing a limited number of these instructions in a given time period. This number depends on the processing power of the CP.

System memory

The CP PIV pack has an on-board PC BIOS stored in 1MB of Flash memory. The PC BIOS is used for initial configuration, but is then superseded by the VxWorks operating system for configuration parameters.

The CP PIV processor pack can support 2 GB of DDR DRAM memory in one of 2 DIMM memory sockets. Initially the pack will be shipped with 512MB.

System software and customer data is stored on board on a 1GB Compact Flash card that acts as an ATA hard drive. The software is loaded from the Compact Flash (FMD) into DRAM memory prior to code execution.

On the NT4N39 (CP PIV), DRAM is divided into six functional areas:

- 1** Unprotected data store (UDATA) — holds constantly changing, unprotected data (such as call registers, call connection, and traffic data) required during call processing.
- 2** Protected data store (PDATA or office data) — holds protected customer-specific information (such as trunk configuration and speed call data).
- 3** Program store — holds call processing programs, input/output procedures, programmed features and options (such as conference and call transfer), and diagnostic and maintenance programs.
- 4** OS heap— an area from which features can allocate memory during run time by means of VxWorks memory allocation function calls. Heap users are features that are relatively self-contained and have taken advantage of the VxWorks C/C++ development environment. They include QSIG, message-based buffering, Taurus, MMIH, SMP.
- 5** Patching area.
- 6** Miscellaneous fixed OS requirements.

Refer to “Memory size” on [page 244](#) for the minimum memory requirements for CS 1000 Release 4.5.

Input/output interfaces

With the NT6D80 Multi-purpose Serial Data Link (MSDL) Cards, a maximum of 64 I/O ports are supported (there are 4 ports per card; up to 16 cards can be configured). However, the maximum number of AML ports supported remains at 16.

Several types of I/O ports are available, each with its own unique protocol and bandwidth characteristics. The bandwidth of an I/O port may constrain the amount of information that can be exchanged over that link.


Network Modules

The modules for each network group must be located together (see Figure 8 on [page 61](#)):

- The two Core/Network modules are side by side in the bottom tier (Tier 0) of Column 0 and Column 1.
- For the additional network groups, the two modules that house each full network group are one on top of the other in the middle two tiers, with the module for Shelf 0 on the bottom.
- Place the first additional network group (Group 1) in Column 1; place the next network group (Group 2) in Column 0; place additional network groups in sequence to the right of the CP columns.

Figure 8 on [page 61](#) shows a Meridian 1 PBX 81C. This Large System provides the first network group (Group 0) in the two Core/Network Modules.

Figure 8
Meridian 1 PBX 81C with network groups

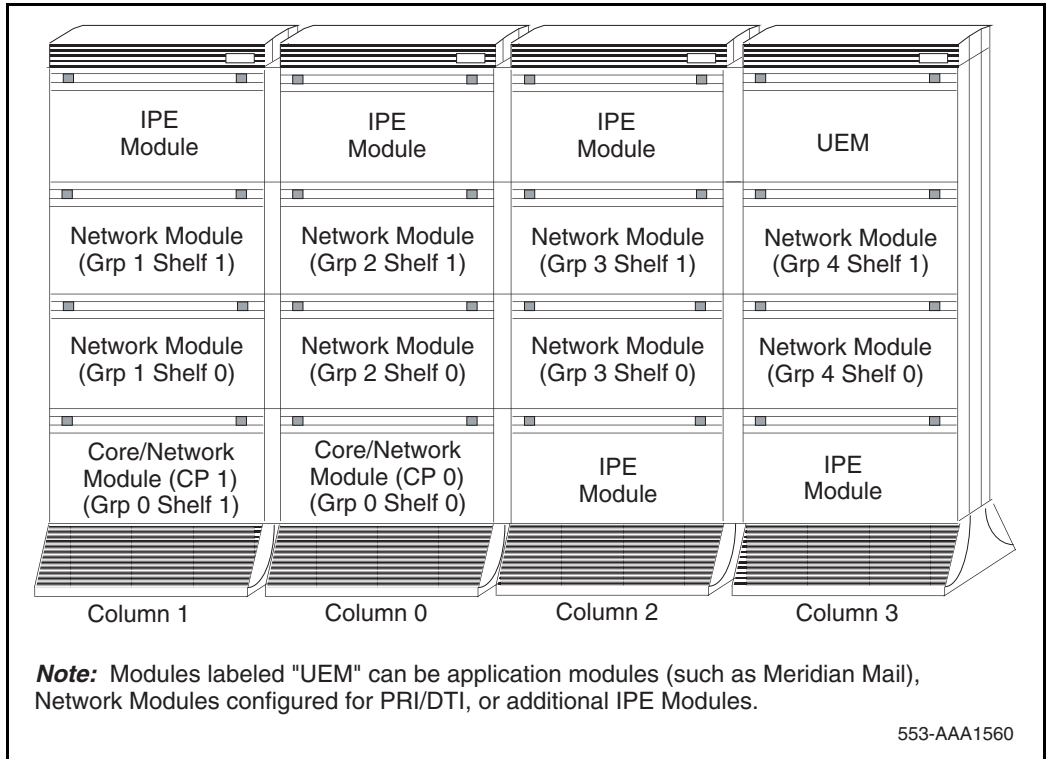

Fiber Network Fabric

Fiber Network Fabric uses Fiber Junctor Interface (FIJI) cards connected with fiber-optic cable to form a Dual Ring Fiber Network. This network provides complete non-blocking communication between up to eight network groups, eliminating the incidence of busy signals for calls switched between groups.

IPE Modules

The distance allowed between a network card and the Peripheral Equipment module it serves is limited to a maximum network cable length of 13.7 m

(45 ft). A Peripheral Equipment module can be placed anywhere in the system, as long as it is within the range of the network cable.

Signaling Server

CS 1000M systems use a Signaling Server. The Signaling Server is an industry-standard, PC-based server that provides a central processor to drive H.323 and Session Initiation Protocol (SIP) signaling for IP Phones and IP Peer Networking. It provides signaling interfaces to the IP network using software components that operate on the VxWorks™ real-time operating system.


The Signaling Server performs the following functions:

- Acts as an H.323 Gatekeeper and a SIP Redirect Server.
- Runs the H.323 Gateway (for Virtual Trunks).
- Runs the SIP Gateway (for Virtual Trunks).
- Acts as a Terminal Proxy Server (TPS).
- Acts as a Network Connection Service (NCS)
- Acts as an Application Server for the Personal Directory, Callers List, and Redial List features
- Acts as a web server for Element Manager.

The Signaling Server has both an ELAN and a TLAN network interface. The Signaling Server communicates with the Call Server through the ELAN network interface.

The Signaling Server is mounted in a 19-inch rack (see Figure 9). The Signaling Server can be installed in a load-sharing redundant configuration for higher scalability and reliability.

Figure 9
CS 1000M Large System

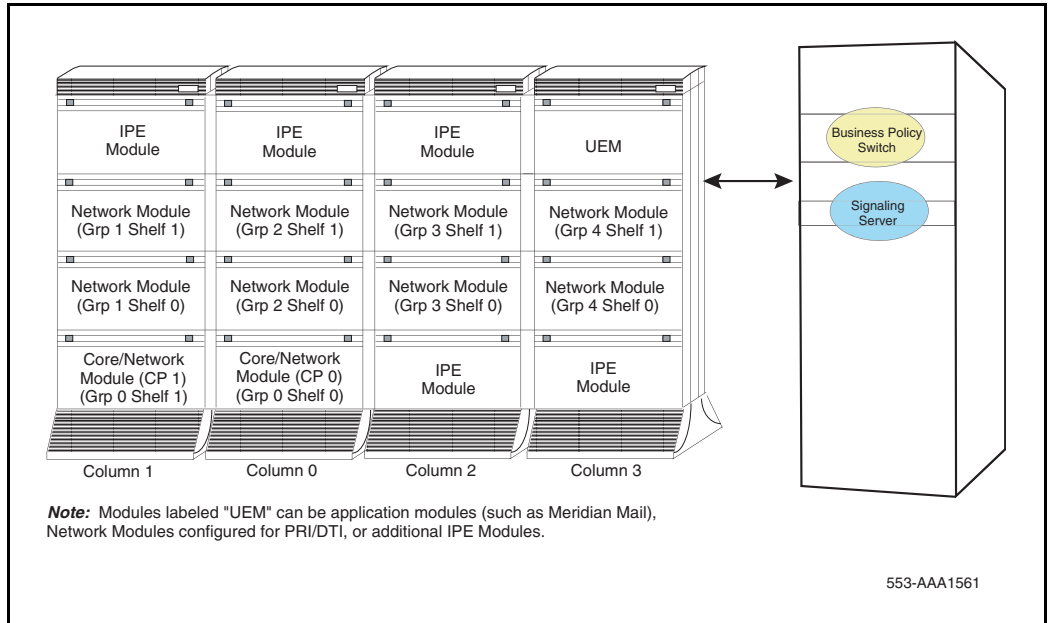

The following software components operate on the Signaling Server:

- Terminal Proxy Server (TPS)
- H.323 Gateway (Virtual Trunk)
- SIP Gateway (Virtual Trunk)
- Network Routing Service (NRS)
 - H.323 Gatekeeper, including Network Connection Server (NCS)
 - SIP Redirect Server
 - Network Connection Server
- CS 1000 Element Manager web server
- Application Server for the Personal Directory, Callers List, Redial List features

All the software elements can coexist on one Signaling Server or reside individually on separate Signaling Servers, depending on traffic and redundancy requirements for each element.

For descriptions of each element's function and engineering requirements, see Table 61 on [page 301](#). For detailed Signaling Server engineering rules and guidelines, see "Signaling Server algorithm" on [page 352](#). For more information about H.323 and SIP Trunking, refer to *IP Peer Networking: Installation and Configuration* (553-3001-213).

Network equipment

The network is a collection of paths over which voice and data information can be transmitted. A CS 1000M or Meridian 1 network is digital, meaning that the voice and data information is encoded in digital form for transmission. These digital signals are multiplexed together on a physical entity called a *loop*. Each path, or *channel*, on a loop is identified by its *timeslot*, which signifies the order in which the data is placed on the loop during the multiplexing operation.

Loops transmit voice, data, and signaling information over bidirectional paths between the network and peripheral ports (that is, two channels are allocated for each conversation, one in each direction). The network is designed so that any terminal can be connected, through proper assignment of timeslots, to any other (functionally compatible) terminal on the system. The technology used is called *space switching* and *Time Division Multiplexing* (TDM).

The use of transmission channels in the switch is known as *traffic*. Traffic is generated by terminals (telephones and trunks). The traffic capacity of each loop or superloop is a function of the number of timeslots available and the blocking level that the user is willing to accept. *Blocking* is the probability that a caller will not be able to complete a call because there is no timeslot available at the particular time it is needed. The higher the traffic, the higher the blocking. A typical acceptable level of network blocking is P.01, which means 1% of all calls (1 in 100) will be blocked, on the average.

Network cards

Network cards are the physical devices that digitally transmit voice and data signals. Network switching also requires service loops (such as conference and Tone and Digit Switch [TDS] loops), which provide call progress tones and outpulsing.

The following cards provide basic network switching control.

- The NT8D04 Superloop Network card provides switching for four loops grouped together in an entity called a superloop.
- The NT5D12 Digital Trunk card provides switching for two DTI/PRI loops and takes one network slot.
- The NT5D97 Digital Trunk card provides switching for two DTI2/PRI2 loops and takes one network slot.

cCNI configuration

In the NT4N41 Core/Network Module, port 0 on the 4N65 Core to Network Interface (cCNI) card supports a half-group. This half-group does not have to be Group 0, although in a new system it is normally configured as Group 0. Communication between the cCNI and 3PE cards for Group 0 is accomplished through the backplane; no cable is required.

There are two ports on each cCNI card. Additional cCNI cards are added when additional network groups are required.

Table 4 on [page 66](#) shows the default (factory) cCNI port assignments. Each cCNI card provides ports for two network groups. Connections are made from the backplane of the Core/Network modules.

Network group configuration is flexible. Any cCNI port may support any given network group. However, for ease of maintenance, associate network groups and cCNI ports in a logical sequence. Refer to Table 4 on [page 66](#) for

a typical cCNI port assignment and the associated network group. Port 0 of the cCNI and the 3PE card are hardwired at the module’s backplane.

Table 4
Typical cCNI configurations

cCNI card slot/port	Network group supported
cCNI 9/Port 0	Group 0
cCNI 9/Port 1	Group 1
cCNI 10/Port 0	Group 2
cCNI 10/Port 1	Group 3
cCNI 11/Port 0	Group 4
cCNI 11/Port 1	Group 5
cCNI 12/Port 0	Group 6
cCNI 12/Port 1	Group 7
Note: You do not have to configure both ports on a cCNI card.	

The NT4N41 Core/Network Module is also used in the CS 1000M SG/ Meridian 1 PBX 61C. Again, port 0 is dedicated to Group 0, and the cCNI card must be installed in slot 9. Port 1 is not used because the CS 1000M SG/ Meridian 1 PBX 61C is a single-group system.

Network configuration

Network switching cards digitally transmit voice and data signals. Network switching also requires service loops (such as conference and TDS loops), which provide call progress tones and outputpulsing. The NT8D04 Superloop Network card provides four loops per card. These are grouped together in an entity called a superloop.

On most systems, network loops are organized into groups.

- A half-group system (CS 1000M HG) provides up to 16 loops.
- A full-group system (CS 1000M SG) provides up to 32 loops.


- A multiple-group system (CS 1000M MG) with IGS provides up to 160 loops.
- A multiple-group system (CS 1000M MG) with the Fiber Network Fabric (FNF) feature provides up to 256 loops.

Superloop network configurations

By combining four network loops, the superloop network card makes 120 traffic timeslots available to IPE cards. The increased bandwidth and larger pool of timeslots provided by a superloop increases network traffic capacity for each 120-timeslot bundle by 25% (at a P.01 Grade-of-Service).

The NT8D37 IPE Module is divided into segments of four card slots numbered 0-3 (see Figure 10 on [page 68](#)). Segment 0 consists of slots 0-3, segment 1 consists of slots 4-7, segment 2 consists of slots 8-11, and segment 3 consists of slots 12-15. A superloop can be assigned from one to eight IPE segments.

Figure 10
Superloop segments in the IPE Module

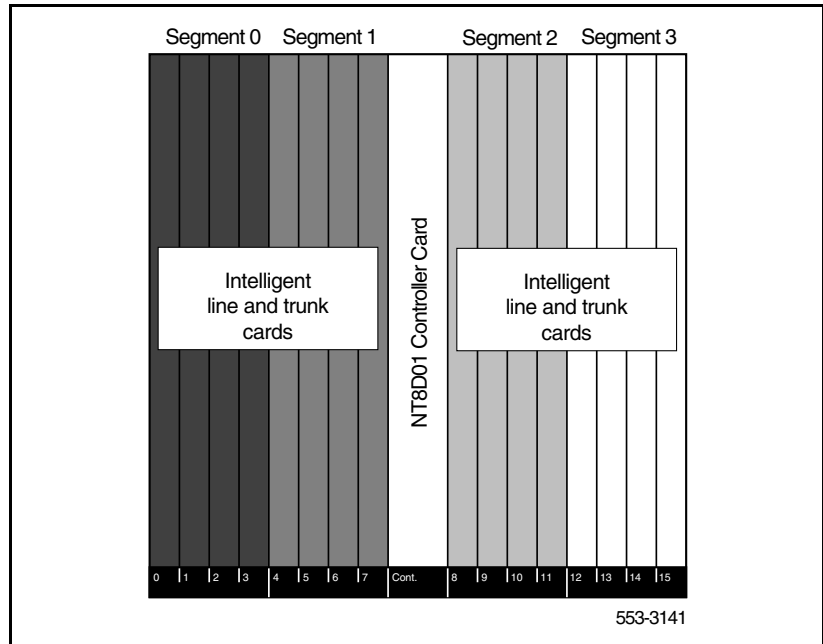

A superloop is made up of NT8D04 Superloop Network cards, NT8D01 cards, and from one to eight IPE segments. The NT8D01BC Controller-4 card interfaces with up to four superloop network cards. The NT8D01BD Controller-2 card interfaces with up to two superloop network cards.

The following superloop-to-segment configurations are supported:


- One segment per superloop ([p. 69](#))
- Two segments per superloop ([p. 70](#))
- Four segments per superloop ([p. 71](#))
- Eight segments per superloop ([p. 72](#))
- One segment per superloop/three segments per another superloop ([p. 73](#))
- Two segments per superloop/six segments per another superloop ([p. 74](#))

One segment per superloop

A configuration of one segment per superloop requires four superloop network cards and one NT8D01 Controller-4 card (see Figure 11 on [page 69](#)).

If the segment is equipped with digital line cards that have all 16 voice and all 16 data terminal numbers (TNs) provisioned, this configuration provides a virtual non-blocking environment (120 traffic timeslots to 128 TNs).

Figure 11
One segment per superloop

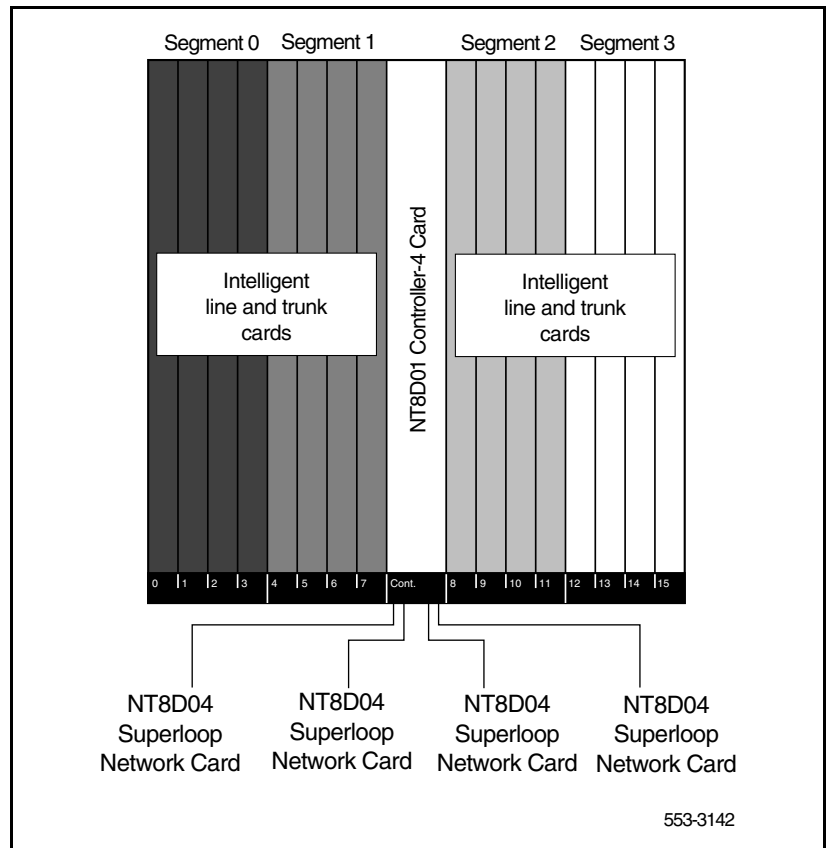


Two segments per superloop

A configuration of two segments per superloop requires two superloop network cards and one NT8D01 Controller-2 card (see Figure 12).

If the segments are equipped with analog line cards and trunk cards, this configuration provides a virtual non-blocking environment (120 traffic timeslots to 32-128 TNs).

If half of the data TNs on digital line cards are enabled, this configuration still provides a low concentration of TNs to timeslots (120 traffic timeslots to 196 TNs) and a very low probability of blocking.

Figure 12
Two segments per superloop

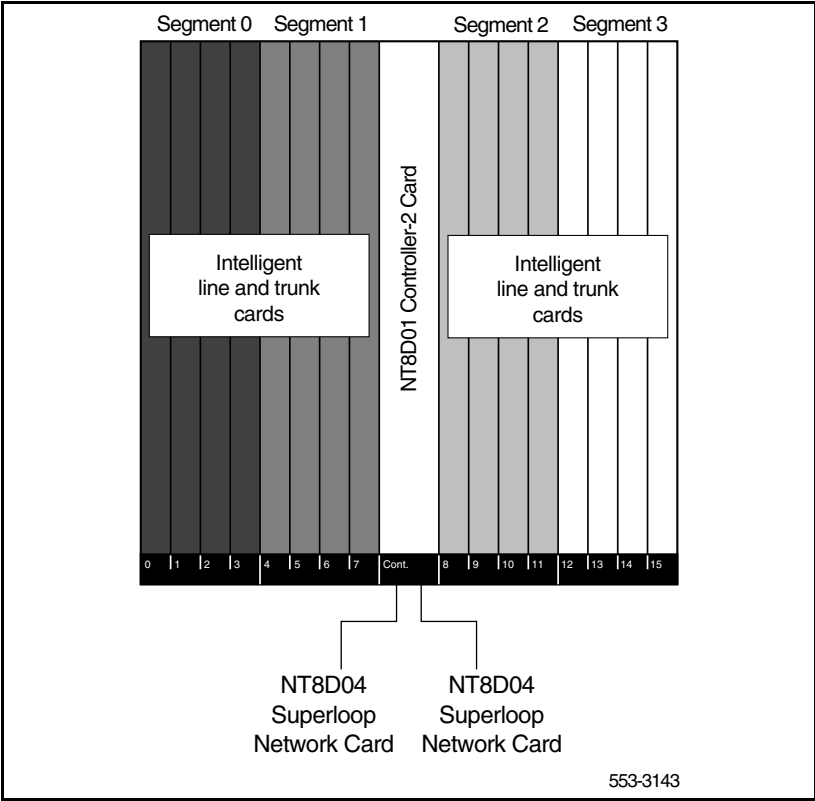


Four segments per superloop

A configuration of four segments per superloop requires one superloop network card and one NT8D01 Controller-2 card (see Figure 13).

If the segments are equipped with analog line cards and trunk cards, this configuration provides a medium concentration environment (120 traffic timeslots to 64-256 TNs).

If half of the data TNs on digital line cards are enabled, this configuration provides a concentration of 120 traffic timeslots to 384 TNs.

Figure 13
Four segments per superloop

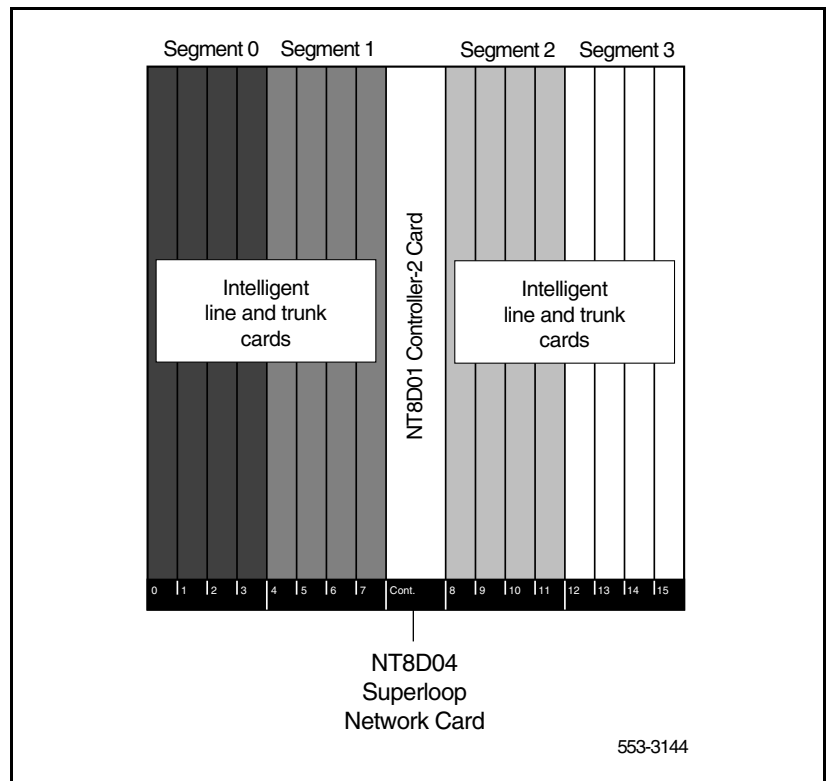


Eight segments per superloop

A configuration of eight segments per superloop requires one superloop network card and two NT8D01 Controller-2 cards (see Figure 14).

If the segments are equipped with analog line cards and trunk cards, this configuration provides a high concentration environment (120 traffic timeslots to 128-512 TNs).

If half of the data TNs on digital line cards are enabled, this configuration provides a concentration of 120 traffic timeslots to 768 TNs.

Figure 14
Eight segments per superloop

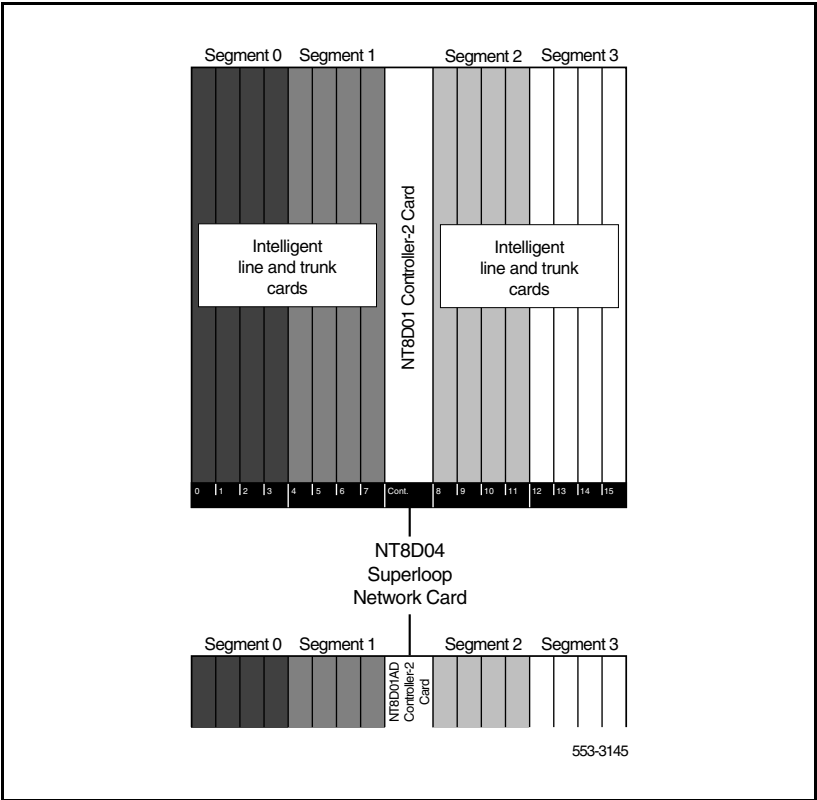


One segment per superloop/three segments per another superloop

A configuration of one segment per superloop/three segments per another superloop requires two superloop network cards and one NT8D01 Controller-2 card (see Figure 15).

This configuration provides:

- a virtual non-blocking environment (120 traffic timeslots to 128 TNs) for the single segment served by the first superloop
- a medium concentration of TNs to timeslots for the three segments assigned to the additional superloop

Figure 15
One segment per superloop/three segments per superloop

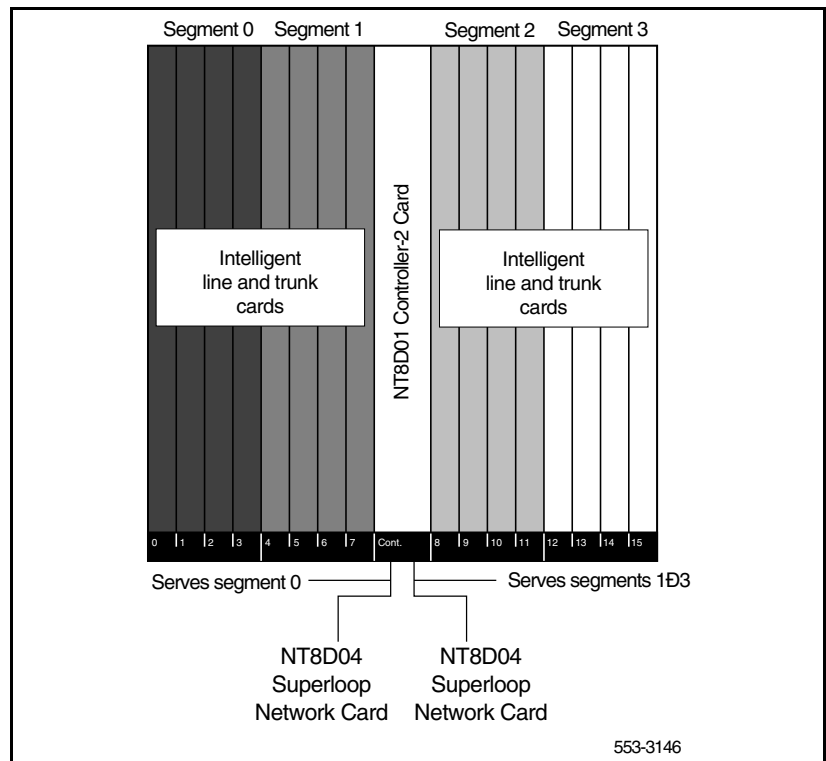


Two segments per superloop/six segments per another superloop

A configuration of two segments per superloop/six segments per another superloop requires two superloop network cards and two NT8D01 Controller-2 Ccards (see Figure 16 on [page 75](#)).

This configuration provides:

- a virtual non-blocking environment for the two segments served by the first superloop (or a very low concentration of TNs to timeslots if some data TNs are enabled)
- a medium concentration of TNs to timeslots for the six segments assigned to the additional superloop


Figure 16
Two segments per superloop/six segments per superloop

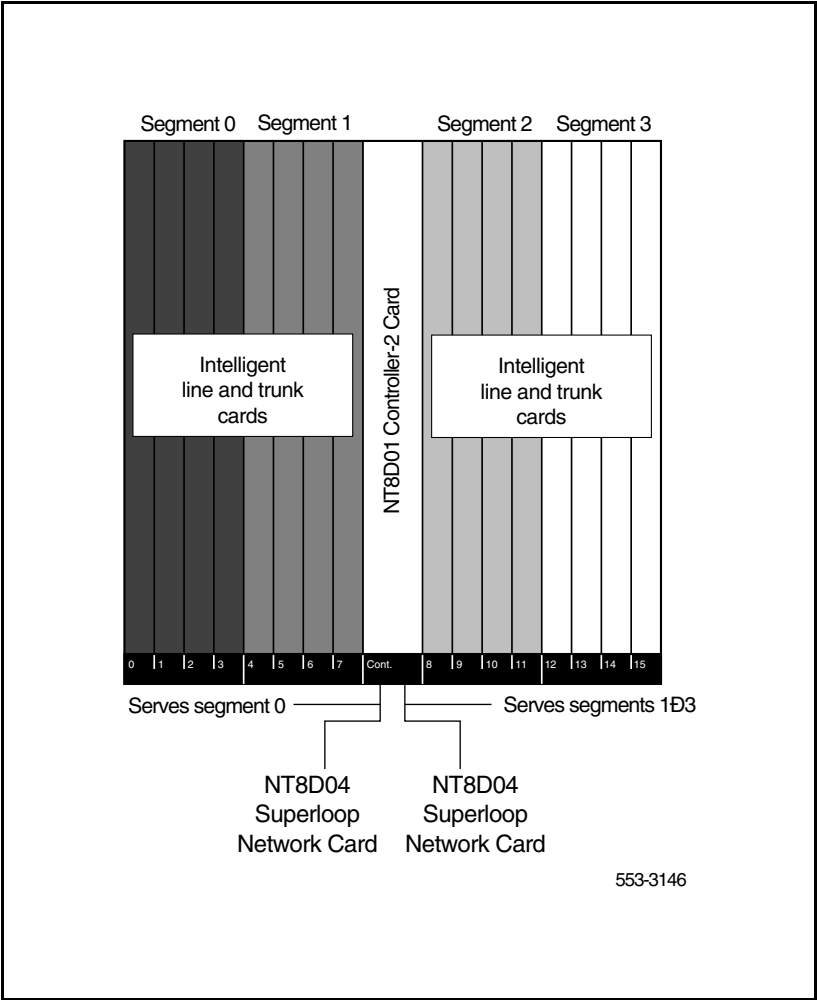

Traffic configuration

The traffic distribution when considering individual customer or system traffic is shown in Figure 17.

Figure 17
Traffic distribution

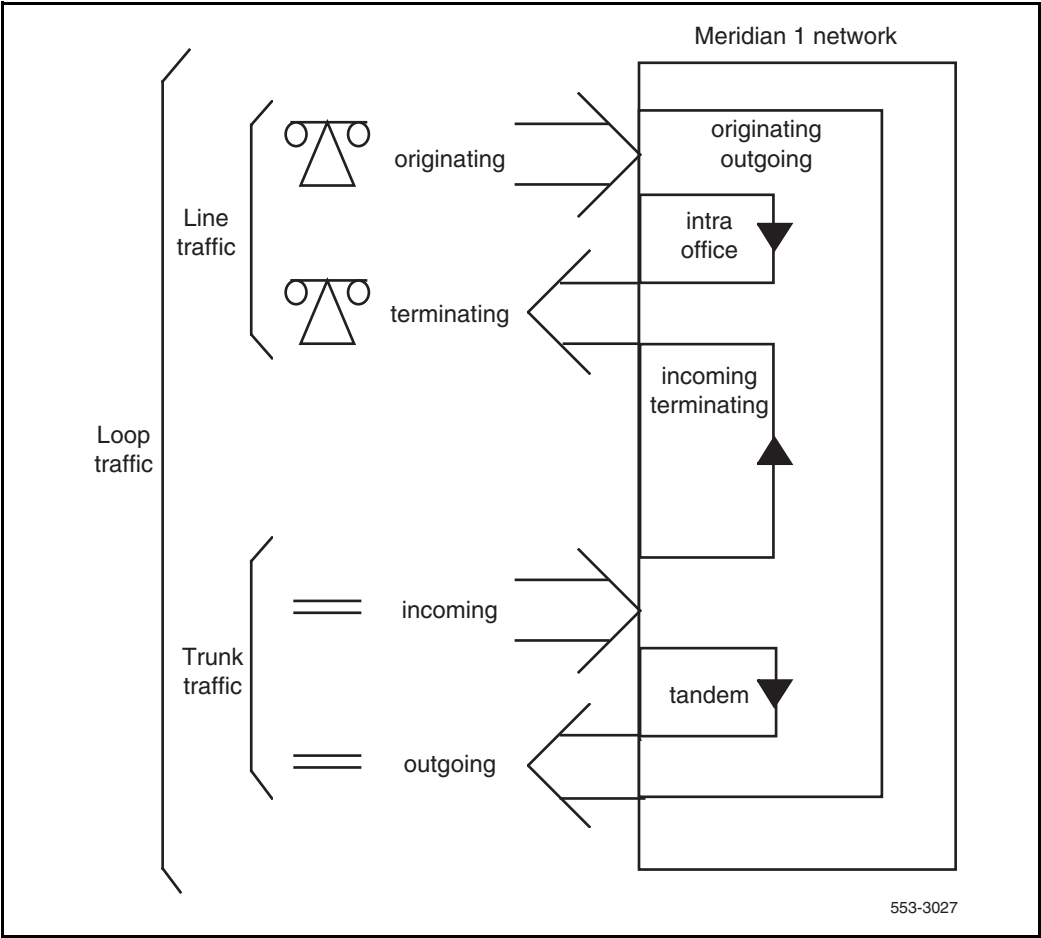

Network loop traffic

Typically, initial equipment is configured at an 85% utilization level to leave room for expansion. The traffic level per network loop depends on whether or not the Peripheral Equipment uses Digitone equipment:

- 3500 centi-call seconds (CCS) is the capacity of a fully loaded superloop
- 2975 CCS is 85% utilized
- Digitone traffic is a part of the capacity

Partitioning

The CS 1000M and Meridian 1 Large System can be configured as a partitioned or non-partitioned system when it serves more than one customer.

A partitioned system dedicates each customer and the customer's associated lines and trunks to actual partitioned segments of the system in terms of loops and modules. Consoles and Digitone receivers are normally spread over all loops and modules in a partitioned system.

In a non-partitioned system, all customers, trunks, lines, consoles, and Digitone receivers are spread over all loops and modules. A non-partitioned system provides the following advantages:

- Fewer traffic loops are required.
- Fewer Peripheral Equipment (IPE) modules and cards are required.
- System call-carrying capacity is more easily achieved and maintained.
- Customers are distributed evenly over the loops.
- Load balancing is more easily accomplished.

Network loop assignment

When assigning the loop number in systems equipped with two Network Modules, distribute the load evenly across both modules. Record the loops used in Worksheet 1: Load balancing on [page 495](#).

Distribute the total number of IPE Modules over the total number of voice and data loops. Normally, one IPE Module is assigned to a superloop. However,

one IPE Module can be assigned from one to as many as four superloops, depending on the concentration of TN-to-timeslot ratio.

Peripheral Equipment

Peripheral Equipment refers to the hardware devices that connect ports (lines and trunks) to the network (loops). Since most ports have analog voice channels and the network is digital, Peripheral Equipment cards must convert the signals received from ports from analog to digital.

A process called pulse code modulation (PCM) is used to convert analog signals to digital signals before switching is performed by the network. This conversion method samples the amplitude of the analog signal at a rate of twice the highest signal frequency, then converts the amplitude into a series of coded pulses. For telecommunications, the PCM-sampling frequency standard is 8 kHz.

Compressing-expanding (companding) PCM is a standard technique for using 8-bit words to efficiently represent the range of voice and data signals. Two standards for companding, A-Law and μ -Law, are recognized worldwide.

Intelligent Peripheral Equipment (IPE) conforms to both standards. The standard is selected through software. IPE cards are supported by NT8D04 Superloop Network card loops. IPE cards are housed in the NT8D37 IPE Module.

Intelligent Peripheral Equipment includes:

- controller cards, which provide timing and control sequences and monitoring capabilities
- analog and digital line and trunk cards, which provide interfaces to equipment outside the modules (such as telephones, data terminals, and trunks)
- lineside T1 (NT5D11) and lineside E1 (NT5D33) cards

Table 5 on [page 79](#) lists the IPE cards and the number of terminations each supports.

Each equipment card contributes traffic to the network. The traffic required by a Peripheral Equipment card is the sum of the traffic generated by the ports (telephones or trunks) serviced by the card. The traffic requirements of all Peripheral Equipment cards provisioned on a particular network loop must match the traffic capacity of that loop.

Table 5
Intelligent Peripheral Equipment

Intelligent Peripheral Equipment cards	Number of terminations
Controller cards: – NT8D01 Controller-4 card – NT8D01 Controller-2 card	N/A N/A
Line cards: – NT8D02 Digital Line card – NT8D09 Analog Message Waiting Line card	16 to 32 16
Trunk cards: – NT8D14 Enhanced Universal Trunk card – NT8D15 E&M Trunk card	8 4
Note: Terminal number (TN) density per segment is 16 to 128 TNs, with 64 to 512 TNs per IPE Module. The maximum TN density assumes all slots are equipped with NT8D02 Digital Line cards with 16 voice and 16 data TNs provisioned. A typical mix of line and trunk cards yields a nominal density of 64 TNs per segment, 256 TNs per IPE Module.	

IPE configuration

As described in “Superloop network configurations” on [page 67](#), an IPE Module is divided into segments of four card slots that are assigned to superloops. A superloop combines four regular network loops to make 120 traffic timeslots available to the IPE cards. There can be from one to eight segments in a superloop, in a number of configurations. Each configuration is selected based on system traffic requirements and the specific IPE cards used.

Preferably, a superloop should be configured to serve an even number of segments. Assign full traffic and IPE cards to one superloop before assigning the next superloop. However, there may be empty IPE slots associated with a superloop if the superloop is not assigned to exact multiples of eight cards. As the system grows, more IPE cards can be added to that superloop.

The total number of ringing generators required in a system can be minimized by consolidating analog line cards in as few IPE Modules as possible. However, for traffic and reliability purposes, the analog line cards must not fill more than three-fourths of the IPE Module.

Voice Gateway Media Cards should be configured in IPE segments engineered to be non-blocking. CallPilot should be configured in IPE segments engineered to be non-blocking.

Distributing Media Cards

Distribute a maximum of 3 Media Cards (32-port) per superloop ($3 \times 32 = 96$, which leaves 24 timeslots for another card).

Distribute a maximum of 15 Media Cards (8-port) per superloop ($15 \times 8 = 120$, leaving no other circuits available).

Distributing IPE cards

Use Worksheet 2: Circuit card distribution on [page 496](#) to determine the total number of each type of IPE card (line, trunk, Digitone receiver [DTR]) for each IPE Module.

Use Worksheet 3: Multiple appearance group assignments on [page 497](#) and Worksheet 4: Station load balancing on [page 498](#) to determine the number of multiple appearance groups (MAGs) assigned to each loop (use Worksheet 5: Multiple appearance group record on [page 499](#) as a MAG record sheet). Distribute MAGs evenly over all the loops.

Do not assign MAGs that call each other frequently to the same loop; assign them to the same network group to reduce intergroup calls in multiple network group systems. If possible, avoid MAGs of more than ten.

Within a multiple network group system, assign users that call each other frequently to the same network group. Similarly, assign trunk groups that are used primarily by certain groups of users to the same network group as those users.

Card slot priority

Input messages from card slots 0 and 1 in each IPE Module are directed to a high-priority input buffer. The input messages from the remaining slots are directed to a low-priority input buffer. To minimize input buffer delay on signals from devices in high-priority card slots, the system processes the low-priority input buffer only when the high-priority buffer and 500-type telephone output buffers are empty. This mechanism is important only for types of trunks that require critical timing.

Class of Service priority

Selected telephones and trunks can be assigned a high-priority Class of Service that allows their requests for dial tone to be processed first. The fewer the telephones and trunks assigned as high priority, the better the service will be during heavy load conditions.

Card slot assignment for trunks

The recommended card slot assignment for trunks is as follows:

- Always assign automatic inward and outward dial trunks to card slots 0 and 1.
- If possible, assign delay dial, wink start, and DTMF-type trunks to a high-priority card slot. Other types of trunks can be assigned to high-priority card slots to avoid glare, but can also be assigned to low-priority card slots (2 through 10).
- To minimize the number of high-priority input messages during pulsing, do not assign trunks using 10 or 20 pps (incoming) to a high-priority card slot unless necessary.

Card slot assignment for attendant consoles

Do not assign attendant consoles to a high-priority card slot. Too many high-priority messages from attendant consoles assigned to these card slots can result in delays in output messages to attendant consoles, telephones, and

trunks. Always assign attendant consoles to card slots 2 through 10. Do not assign a large number of attendant consoles to the same network loop, since buffer overflow may result.

Card slot assignment for analog (500/2500-type) telephones

The 500/2500-type telephones can be assigned to any card slot. However, assigning a 500/2500-type telephone to a high-priority card slot can cause input messages to delay output buffer processing during pulsing.

Card slot assignment for Voice Gateway Media Cards

Voice Gateway Media Cards can be assigned to any slot. The slot should be in a non-blocking segment. Refer to “Voice Gateway Media Cards” on [page 239](#) for the cabinet and superloop capacities for Voice Gateway Media Cards.

Card slot assignment for CallPilot MGate/CallPilot 201i

CallPilot MGate or CallPilot 201i can be assigned to any slot. The slot should be in a blocking segment.

Assigning card slots

Use Worksheet 6: Circuit card to module assignment on [page 500](#) to assign cards to slots in all Peripheral Equipment modules. Calculate the average load after all cards of a particular type have been assigned. Total the load and keep a running total. This method prevents the need to interchange cards at the end of the process because of load imbalance.

Assign cards in the order listed below:

- 1** Assign cards requiring a high-priority slot.

Note: For IPE Modules, both card slots 0 and 1 are reserved for high-priority signaling.

- 2** Assign cards for high-usage trunks, such as central office (CO) trunks.
- 3** Assign cards for low-usage trunks, such as paging and dictation.
- 4** Assign cards for attendant consoles.
- 5** Assign DTR cards.

- 6 Assign cards for telephones associated with MAGs.
- 7 Assign remaining cards. On a system that has a high density of Digitone telephones, assign the least number of analog line (500/2500-type telephone) cards to loops that have DTRs assigned.
Note: Distribute loops and Conference/TDS cards evenly across network modules and groups.
- 8 Calculate the total load per module.
- 9 Calculate the total load per loop.
- 10 If required, rearrange card assignments to balance the load.

Assigning terminal numbers

Once the cards are assigned, the individual units on each card can be assigned. Use Worksheet 7: Terminal number assignment on [page 501](#) to record the terminal number (TN) assignments. TN 0000 cannot be used on superloop 0. Therefore, assign loop 0 to an NT8D17 Conference/TDS card.

Terminal equipment

CS 1000M and Meridian 1 Large Systems support a wide range of telephones, including multiple-line and single-line telephones, as well as digital telephones with key and display functions and data transmission capabilities. A range of options for attendant call processing and message center applications is also available. In addition, a number of add-on devices are available to extend and enhance the features of telephones and consoles. Add-on devices include key/lamp modules, lamp field arrays, handsets, and handsfree units.

Digital telephones

In digital telephones, analog-to-digital conversion takes place in the telephone itself, rather than in the associated peripheral line card. This eliminates attenuation, distortion, and noise generated over telephone lines. Signaling and control functions are also handled digitally. Time compression multiplexing (TCM) is used to integrate the voice, data, and signaling information over a single pair of telephone wires.

For applications where data communications are required, digital telephones offer an integrated data option that provides simultaneous voice and data communications over single-pair wiring to a port on a digital line card.

The following digital telephones are supported:

- M2006 single-line telephone
- M2008/M2008HF standard business telephone
- M2216 Automatic Call Distribution (ACD) telephone
- M2317 intelligent telephone
- M2616 performance-plus telephone
- M3110 telephone
- M3310 telephone
- M3820 telephone
- M3901 telephone
- M3902 telephone
- M3903 telephone
- M3904 telephone
- M3905 telephone
- M8000 telephone
- M8009 telephone
- M8314 telephone
- M8417 telephone

Refer to *Telephones and Consoles: Description, Installation, and Operation* (553-3001-367) for digital telephone details.

IP telephones

IP Phone 2001

The IP Phone 2001 brings voice and data to the desktop environment and connects directly to the LAN through the Ethernet connection. Similar in appearance and functionality to the IP Phone 2002, the IP Phone 2001 has a smaller display and fewer feature keys.

IP Phone 2002

The IP Phone 2002 brings voice and data to the desktop environment and connects directly to the LAN through the Ethernet connection. Similar in appearance and functionality to the IP Phone 2004, the IP Phone 2002 has a smaller display and fewer feature keys.

IP Phone 2004

The IP Phone 2004 brings voice and data to the desktop environment and connects directly to the LAN through the Ethernet connection. The IP Phone 2004 translates voice into data packets for transport using Internet Protocol (IP). A Dynamic Host Configuration Protocol (DHCP) server can be used to provide information that enables the IP Phone 2004 network connection and connection to the Media Card. The IP Phone 2004 uses the enterprise IP network to communicate with the Call Server.

IP Phone 2007

The IP Phone 2007 brings voice and data to the desktop environment and connects directly to the LAN through the Ethernet connection. The IP Phone 2007 translates voice into data packets for transport using IP. A Dynamic Host Configuration Protocol (DHCP) server can be used to provide information that enables the IP Phone 2007 network connection, and connection to the Voice Gateway Media Card. The IP Phone 2007 uses the IP network to communicate with the Call Server.

IP Phone Key Expansion Module (KEM)

The Nortel IP Phone Key Expansion Module (KEM) is a hardware component that connects to IP Phone 2002 and IP Phone 2004 and provides additional line appearances and feature keys. Up to two IP Phone KEMs can be connected to an IP Phone 2002 or IP Phone 2004. With two IP Phone KEMs connected, the IP Phone can have up to 48Line/feature keys.

IP Softphone 2050

The IP Softphone 2050 is a Windows-based application that enables voice to make your computer a powerful tool. The IP Softphone 2050 provides most of the attributes and features of the IP Phone 2004. The IP Softphone 2050 operates on PCs running Windows 98, Windows 98 SE, Windows 2000 Professional, Windows XP Pro, and Windows XP Home.

Mobile Voice Client 2050

Mobile Voice Client (MVC) 2050 adds wireless IP Phone services to the convenience of Personal Digital Assistants (PDAs). MVC 2050 functions like an IP Softphone 2050. However, MVC 2050 cannot be used as an Agent or Supervisor in Call Center Portal applications. MVC 2050 uses UNISlim-based software to provide real-time voice communication over a WLAN to PDAs.

WLAN Handset 2210 and 2211

The WLAN Handset 2210 and WLAN Handset 2211 are almost identical in features and functions. The WLAN Handsets appear to the Terminal Proxy Server (TPS) as an IP Phone 2004; therefore the WLAN Handsets support most of the IP Phone 2004 features.

IP Audio Conference Phone 2033

The IP Audio Conference Phone 2033 brings voice to the audio conference environment by connecting directly to a Local Area Network (LAN) through an Ethernet connection.

For more detailed information on IP Telephones, see *IP Phones: Description, Installation, and Operation* (553-3001-368).

Attendant consoles

Attendant consoles (M2250) provide high-volume call processing. Indicators and a 4 × 40 liquid crystal display provide information required for processing calls and personalizing call answering. Loop keys and Incoming Call Identification (ICI) keys allow the attendant to handle calls in sequence or to prioritize answering for specific trunk groups. An optional busy lamp field provides the attendant with user status.

Meridian attendant consoles support attendant message center options. The attendant console can be connected to a personal computer to provide electronic directory, dial-by-name, and text messaging functions. All call processing features can be accessed using the computer keyboard.

The Attendant PC application software allows you to perform attendant console and call processing functions on a computer workstation using a mouse pointing device or keyboard within a Windows 95, Windows 98, Windows 2000, or Windows NT operating system environment.

Power equipment

The CS 1000M and Meridian 1 provide a modular power distribution architecture.

Each column includes:

- a system monitor that provides:
 - power, cooling, and general system monitoring capabilities
 - error and status reporting down to the specific column and module
- circuit breaker protection
- a cooling system with forced air impellers that automatically adjust velocity to meet the cooling requirements of the CS 1000M and Meridian 1 systems
- backup capabilities

Each module includes:

- individual power supply unit with shut-off (switch or breaker) protection
- universal quick-connect power wiring harness, which distributes input voltages and monitor signals to the power supply

All options are available in both AC-powered and DC-powered versions. The selection of an AC- or DC-powered system is determined primarily by reserve power requirements and existing power equipment at the installation site.


Although AC-powered and DC-powered systems have different internal power components, the internal architecture is virtually identical. AC- and DC-powered systems differ primarily in the external power components.

AC power

AC-powered systems require no external power components and can plug directly into commercial AC (utility) power. AC-powered systems are especially suitable for applications that do not require reserve power. They are also recommended for small to medium-sized systems that require reserve power with backup times ranging from 15 minutes to 4 hours.

If reserve power is required with an AC-powered system, an Uninterruptible Power Supply (UPS), along with its associated batteries (either internal or external to the unit), is installed in series with the AC power source (see Figure 18 on [page 89](#)). AC-powered systems that do not require long-term backup can benefit from a UPS with short-term backup because the UPS typically provides power conditioning during normal operation, as well as reserve power during short outages or blowouts.

Figure 18
External AC power architecture with reserve power

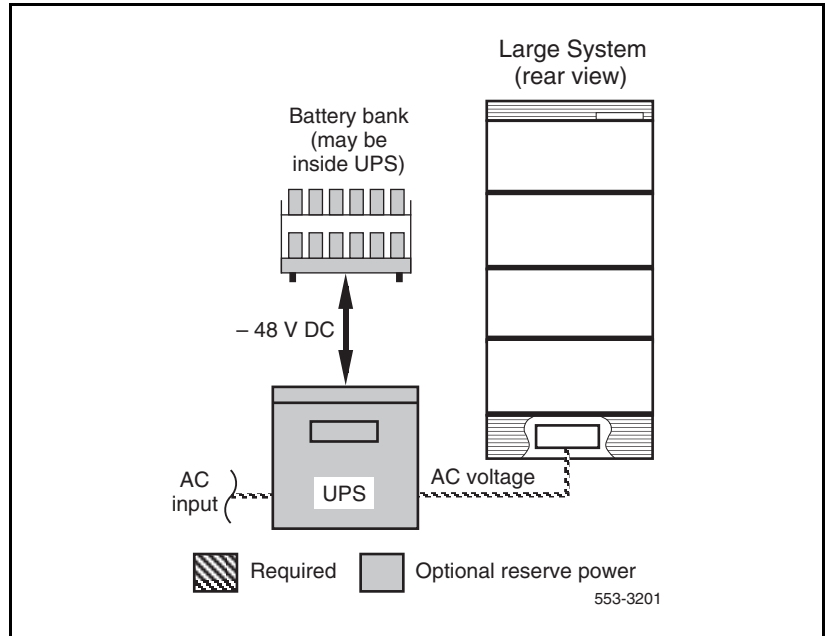


DC power

Candeo DC-powered systems are available as complete systems, with external power equipment provided by Nortel. These systems can also be equipped for customer-provided external power.

DC-powered systems always require external rectifiers to convert commercial AC power into the standard -48 V DC required within the system (see Figure 19 on [page 90](#)). Batteries are generally used with DC-powered systems, as the traditional telecommunications powering method is for the rectifiers to continuously charge a bank of batteries, while the system power “floats” in parallel on the battery voltage. However, batteries are required only if reserve power is needed.

Figure 19
External DC power architecture with reserve power

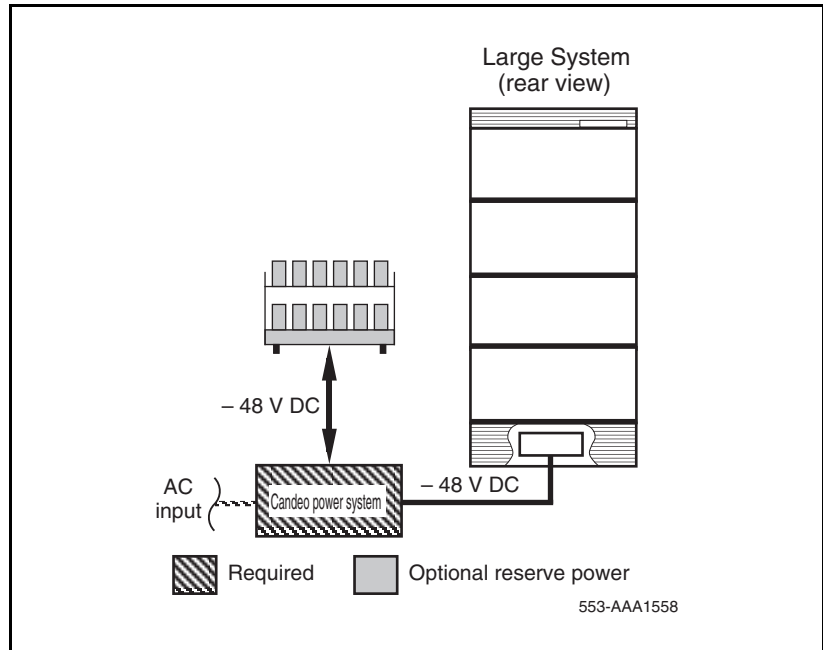

Ongoing configuration

Ongoing assignment plan

Use the initial assignment records to complete an assignment plan for each equipped network loop in the system (see “System assignment plan” on [page 502](#)). Assignments for future trunks, MAG stations, consoles, and DTR requirements can be developed for each loop according to this profile.

Cutover study

Once the system is placed in service, perform a cutover study. Use the results of this study to update the loop profiles and create a new assignment plan. Ongoing assignments must follow the new assignment plan until the first customer busy-season trunking study. At that time, loop threshold

measurements are configured so that at least one of the predominant busy hours would produce a CCS load output.

Threshold study

From the threshold study printout, update the loop profile and develop a new assignment plan. At this time, it is advisable to estimate the system capacity for growth. If the growth capacity is sufficient to last beyond the next annual threshold study, assignments can continue in accordance with the assignment plan. If the growth capacity is insufficient, plans must be made to order and install new equipment (loops or modules). The projected implementation date is generally controlled by physical capacity and tracked by total working physical terminations.

Equipment relief

When additional equipment is installed, concentrate assignments on the new loop or modules until the first threshold study. At that time, update the loop profile and develop a new loading plan. Any time a loop exceeds 2975 CCS (based on an 85% traffic level), that loop must be suspended from future assignments. If a loop encounters service problems, it must be suspended and sufficient load removed to restore service to an acceptable level.

Assignment records

The following printouts are available from the system. The printouts and the worksheets should be used to assist in maintaining assignment records.

- List of trunk route members
- List of TN blocks
- List of unused card positions
- List of unused units
- Directory number (DN) to TN matrix

Refer to *Features and Services* (553-3001-306) for information on obtaining and manipulating data in the system.

Module configuration

Contents

This section contains information on the following topics:

Introduction	93
NT4N41 Core/Network Module	94
NT8D35 Network Module	97
NT8D37 Intelligent Peripheral Equipment Module	99

Introduction

There are three types of modules:

- [NT4N41 Core/Network Module \(p. 94\)](#)
- [NT8D35 Network Module \(p. 97\)](#)
- [NT8D37 Intelligent Peripheral Equipment Module \(p. 99\)](#)

Each type of module is available in AC-powered and DC-powered versions.

AC-powered modules generally require a module power distribution unit (MPDU) to provide circuit breakers for the power supplies. DC-powered modules do not require an MPDU because a switch on each power supply performs the same function as the MPDU circuit breakers.

The figures in this section show a typical configuration for each module. (DC power supplies are shown in these examples.)

NT4N41 Core/Network Module

This module provides common control and network interface functions in the CS 1000M and Meridian 1 Large Systems. With CS 1000M MG and Meridian 1 PBX 81C, two Core/Network modules are installed side by side. With CS 1000M SG and Meridian 1 PBX 61C, the modules are stacked or installed side by side.

The NT4N41 module contains the NT4N40 card cage, which is divided into two distinct sides: the Core side and the Net side.

Core side

The Core side of the module houses the CPU. These circuit cards process calls, manage network resources, store system memory, maintain the user database, and monitor the health of the system. These circuit cards also provide administration interfaces through a terminal, modem, or LAN.

Core cards and slot assignments are:

- slots c9-c12: NT4N65 Core to Network Interface (cCNI) card. Since each cCNI card can connect to two Network groups, each Core is connected to a minimum of two groups and a maximum of eight groups. The number of cCNI cards in a system depends on the number of Network groups in that system.

Note 1: Each new base system contains one NT4N65 cCNI card per Core/Network Module. The cCNI card is located in slot c9. A P0605337 cPCI Card Slot Filler Panel must be installed to cover slots c10 to c12 if they do not contain cCNIs.

Note 2: In the NT4N41 Core/Network Module, port 0 on the NT4N65 cCNI card in slot c9 must be configured as Group 0. Communication between the cCNI and 3PE cards for Group 0 is accomplished through the NT4N29 cable. Only one cCNI card is required for Group 0.

- slots c13-c14: P0605337 cPCI Card Slot Filler Panel.
- slot c15: NT4N48 System Utility card.
- slot CP: NT4N39AA Call Processor card (512 MByte memory).

Net side

The Net side of the module supports one or two Conference/Tone and Digit Switch (TDS) cards, one or more QPC414 Enhanced Network (ENET) cards (to support Meridian Mail or older DTI/PRI cards), one Peripheral Signaling card, one 3-Port Extender card, up to three Superloop cards, and, where slots permit, any Input/Output-type card, such as the MSDL.

Net cards and slot assignments are:

- slot 0: NT8D17 Conference/TDS card.
- slot 1: NT8D17 Conference/TDS card or NT5D12 Dual DTI/PRI 1.544 Mbps (DDP) card or NT5D97 Dual DTI2/PRI2 2.048 Mbps (DDP2) card or QPC414 ENET card used only to support Meridian Mail.
- slots 2-7: NT8D04 Superloop Network (SNET) card or Input/Output (I/O)-type cards.
- slots 8-9 (CS 1000M MG and Meridian 1 PBX 81C): NTRB33 Fiber Junctor Interface (FIJI) card.
- slots 8-9 (CS 1000M SG and Meridian 1 PBX 61C): NTRB53 Clock Controller in slot 9; slot 8 is spare or can be used for any I/O card, such as MSDL.
- slot 10: QPC43R Peripheral Signaling card
- slot 11: QPC441 3-Port Extender card

Note: In CS 1000M SG and Meridian 1 PBX 61C systems, the NTRB53 Clock Controller card goes in the NT4N41 Core/Network Module (in slot 9). In CS 1000M MG and Meridian 1 PBX 81C systems, the Clock Controller goes in the NT8D35 Network Module.

Figure 20
NT4N41 Core/Network Module (for CS 1000M SG/Meridian 1 PBX 61C CP PIV)


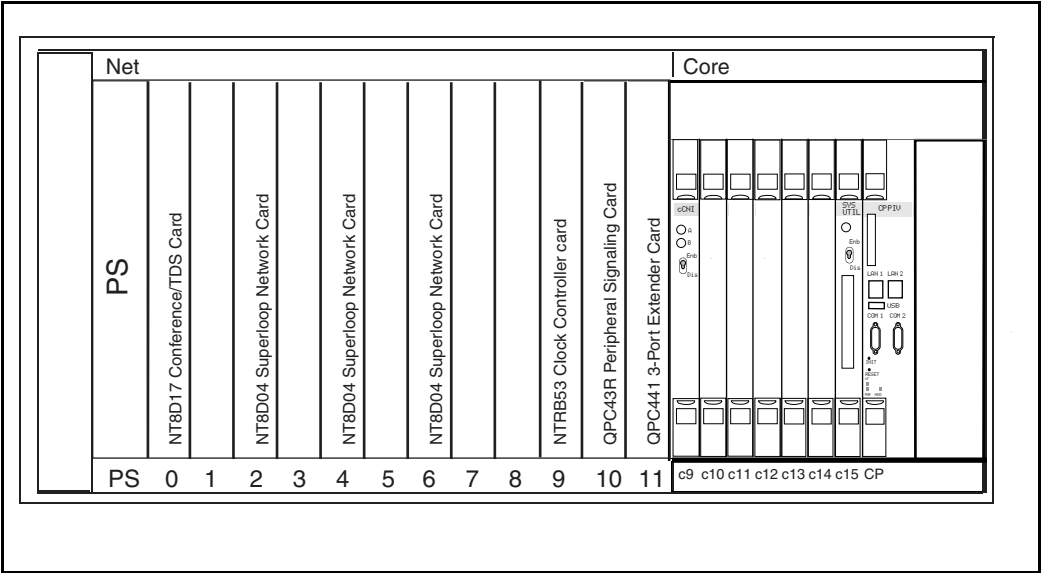


Figure 21
NT4N41 Core/Network Module (for CS 1000M MG/Meridian 1 PBX 81C CP PIV)

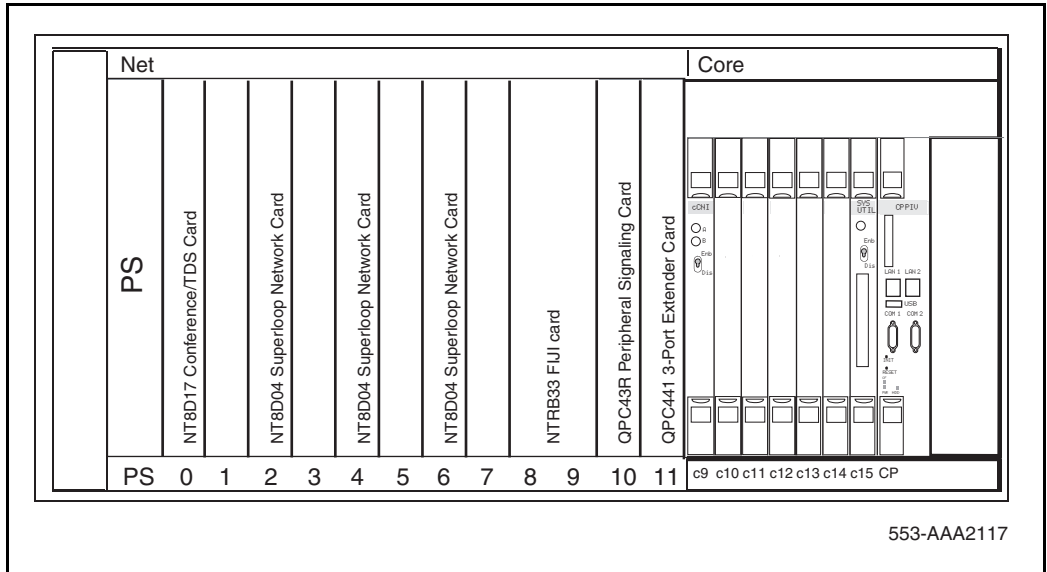

NT8D35 Network Module

The Network Module houses up to three NT8D04 Superloop cards, one NT8D17 Conference/TDS card, and one of the following cards residing next to the NT8D17 Conference/TDS card: NT5D12 1.544 Mbps DDP card, NT5D97 2.048 Mbps DDP2 card, or QPC414 ENET card.


The network cards are cabled to the Intelligent Peripheral Equipment Controller card in IPE Modules. In a typical configuration, one Conference/TDS card is configured in the module, leaving 14 voice/data loops available. Two Network Modules are required to make a full network group of 32 loops. A maximum of 16 Network Modules (8 network groups) can be configured in an FNF-based CS 1000M MG or Meridian 1 PBX 81C.

This module provides 15 card slots for the following network interface cards:

- between PS and slot 1: NTRE39 Optical Cable Management Card (OCMC)

- slot 1: QPC441 3PE card
- slots 2-3: NTRB33 Fiber Junctor Interface (FIJI) card
- slot 4: QPC43 Peripheral Signaling card
- slots 5-12:
 - NT1P61 Fiber Superloop Network card
 - NT8D04 Superloop Network card
 - NT8D17 Conference/TDS card
 - PRI/DTI card
 - SDI-type card
 - MSDL card
 - MISP card
 - For the Meridian 1 PBX 61C, a Clock Controller is required in slot 9.
- slot 13: Clock Controller for Meridian 1 PBX 81C
- slots 13-14: PRI/DTI card or SDI-type card (slot 13 only)
- slot 15: not used

Figure 22
NT8D35 Network Module

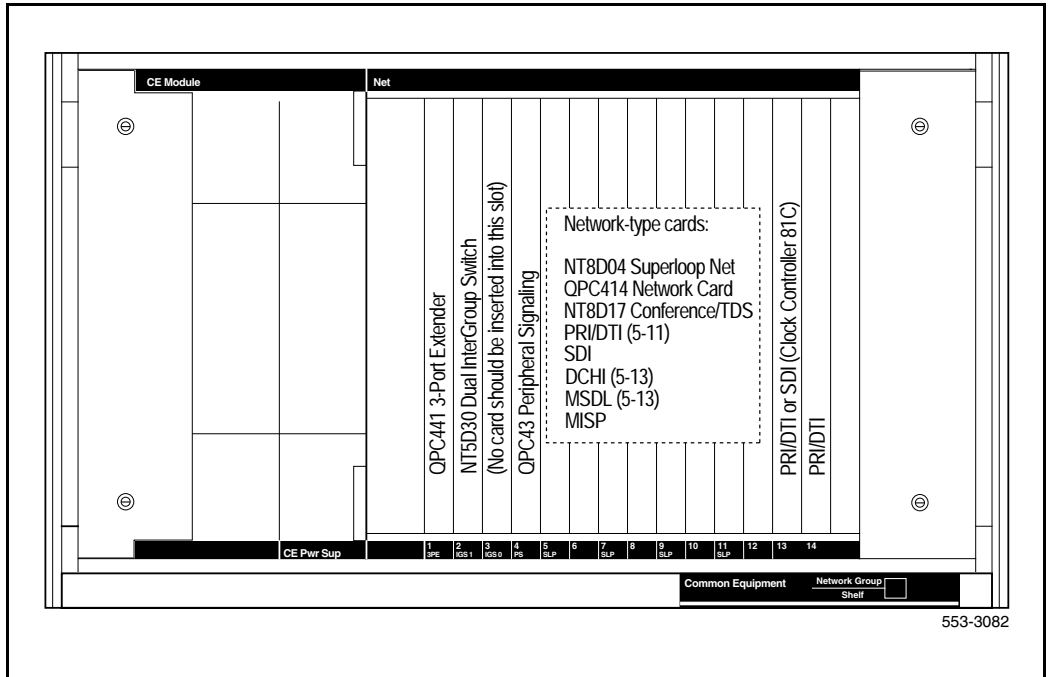

553-3082

NT8D37 Intelligent Peripheral Equipment Module

This module can be used in all systems.

The IPE Module houses one NT8D01 Controller card or one NT1P62 Fiber Peripheral Controller card and up to 16 IPE cards (such as line and trunk cards), supporting up to 512 terminal numbers (256 voice and 256 data). The controller card is cabled to the NT8D04 Superloop Network card.

The controller card must be installed in the card slot labeled Cont (for controller). The other slots can house any IPE card (see Figure 23 on [page 101](#)).

Note: When the backplane is configured for 16 cables (NT8D37 vintages BA and EC), the NT7D16 Data Access Card (DAC) can be installed in any IPE slot. If the backplane is configured for 12 cables (NT8D37 vintages AA and DC), you must install the DAC in slots 0, 4, 8, or 12 because only those slots are fully cabled for 24 pairs.

The IPE Module supports universal card slots for flexible configurations of trunk/line, application cards, and Media Cards.

Application cards

The supported application cards are:


- Meridian Integrated Recorded Announcement
- Meridian Integrated Conference Bridge
- Meridian Integrated Personal Call Director
- Meridian Integrated Voice Service
- Meridian Integrated Call Assistant
- Voice Gateway Media Card
- Call Pilot MGate

Line-side Peripheral cards

Supported line-side Peripheral cards are:

- LSI1
- LSE1

Figure 23
NT8D37 IPE Module

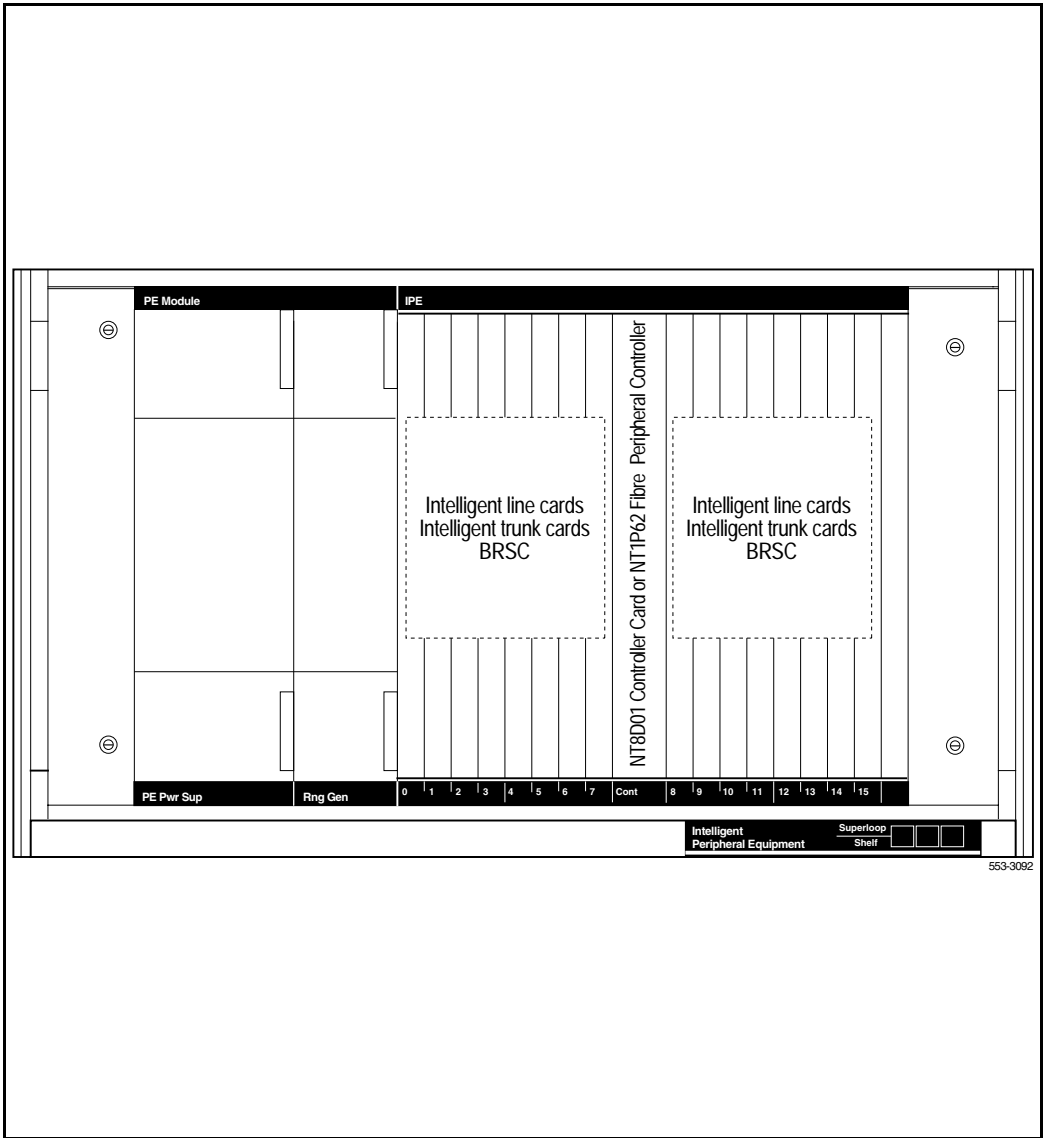

Power and grounding

Contents

This section contains information on the following topics:

Introduction	103
Grounding	104
Power systems	112
AC power	113
DC power	120
Reserve power	129
Candeo DC power system	137
NT4N49AA 4-Feed PDU	155
Power consumption	162
Power requirements for IP Phones	164
Heat dissipation	164
Calculating system power requirements	165
System upgrades	166

Introduction

Large Systems can be powered by either AC power or DC power. This chapter describes:

- grounding requirements for all systems
- the power and reserve power systems that are available

- power consumption of Large System components, in order to calculate system power requirements

Grounding

Proper grounding is essential for trouble-free system operation and the safety of personnel.

Grounding Recommendations for CS 1000M Large Systems

To ensure electrical system grounding integrity, follow the isolated ground topology for all CS 1000M Large System equipment implementations. Isolated ground provides the best method for avoiding the introduction of ground noise to the system from other external equipment.

When isolated ground topology is not possible, an alternative grounding method may be used if it provides the required Meridian 1 / Succession Single Point Ground (SPG) reference. The SPG source must be the AC Equipment Ground (ACEG) bus located inside the CS 1000M service panel. Service panel grounding facilities must be properly referenced to an acceptable AC grounding source, which provides a low noise, low impedance path.

Installations that have elected not to deploy an isolated ground methodology will be noted during Nortel system audits. Locations experiencing system operational performance difficulties attributed to ground noise or improper grounding methods will be required to rectify the issue.

Single Point Grounding

The Single Point Ground (SPG), otherwise known as the Star—IBN (Isolated Bonding Network), is the standard for the system. The SPG of a system is the point at which an IBN is bonded to ground. Physically, the system SPG is usually implemented as a copper busbar. See Figure 24 on [page 105](#).


Any of the following busbars can be used as system SPG:

- Building principal ground (BPG), typically in single-floor buildings
- Floor ground bar (FGB), typically in multi-floor buildings

- Dedicated SPG bar bonded to the building grounding system
- A section of the battery return (BR) bar of the power plant

The various subsystems (such as groups of frames or equipment) of an IBN system can be configured as individual SPG entities, connected in a star configuration to the system SPG (star IBN).

Figure 24
Single point grounding

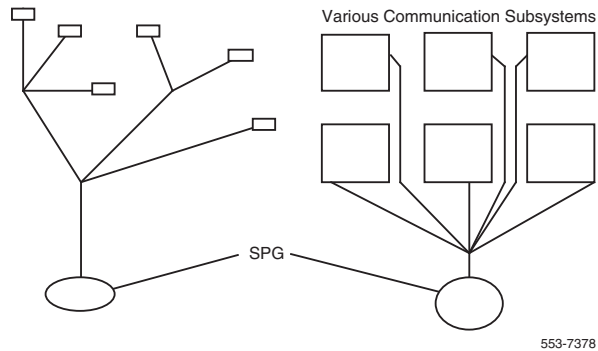

SPG requirements

SPG requirements are divided into the following major categories:

- Safety
- Protection
- EMC
- Installation and maintenance considerations
- Powering

Safety

To ensure a safe working environment for trained company personnel, the customer premises grounding system must be able to dissipate surge energies (such as lighting strikes on the outside plant). In addition, the grounding

system must be designed to ensure that fuses or breakers operate to disrupt any excessive current flow caused by a power fault.

Protection

A proper ground is essential for system protection equipment. This includes grounding for outside plant cable shields and protectors, as well as the grounds associated with framework, battery, and logic references.

EMC

Grounding must be considered at all times to ensure good Electromagnetic Compatibility (EMC), emission and susceptibility performance.

Installation and maintenance considerations

If included as part of the initial electrical installation for the customer premises, a grounding system is cost effective to install and maintain. Adding a grounding system after the initial installation is complete can be difficult and costly.

Powering

When planning the grounding system, consider the powering options for the equipment. Look at whether the equipment is backed up with batteries or a UPS. The grounding and powering of all equipment associated with the telecommunications system should be considered as one large system.

Types of grounding

The system has several different grounds and signal returns that are generally referred to as grounds. The types of grounds include:

- Safety (personal hazard) ground (see [page 107](#))
- Logic return (see [page 110](#))
- Battery return (for DC systems)

Figure 25 on [page 108](#) and Figure 26 on [page 109](#) illustrate examples of power and ground connections in several AC system configurations.

Safety (personal hazard) ground

If conduit is used to connect AC power from a service panel to the pedestal, it must contain an insulated ground wire (green) that is #6 AWG or larger size. If a cord-and-plug connection is used, a separate safety ground must be provided.

The safety ground is required to reduce the risk of electric shock to personnel and avoid system malfunctions under the following conditions:

- contacts between telephone wire and AC current elsewhere in the building while the AC input cord is unplugged
- lightning transients when the cord is unplugged
- stray grounds during normal operation

The safety ground, also known as frame ground or chassis ground, must be an insulated wire #6 AWG or larger, and must connect to both the pedestal safety ground lugs and the service panel ground bus. In all systems, one 30 A circuit is required for each column. Isolation, as required by NEC 250-74 and 384-27 (exception 1), is preferred.

An SPG is an isolated ground (IG) bus or AC equipment ground (ACEG) bus in the service panel or transformer. It may also be a separate external bus bar that connects at a single point to the service panel or transformer. Figure 25 on [page 108](#) and Figure 26 on [page 109](#) show an isolated ACEG as the SPG.

Depending on the distance between columns (and cabinets in upgraded systems) and the service panel, the safety ground wiring may be daisy-chained or run independently from each column (or each row) to the ACEG. Figure 25 on [page 108](#) and Figure 26 on [page 109](#) show safety ground wiring in daisy-chain configurations.

To implement the SPG, follow these guidelines:

- 1 All ground conductors must comply with local electrical codes and be terminated in a manner that is permanent, resulting in low impedance connections.
- 2 All terminations should be readily accessible for inspection and maintenance.

- 3 A grounding conductor must be continuous, with no splices or junctions.
- 4 The insulated grounding wire size must comply with the National Electric Code (NEC) Sections 250-94, 250-95, and 310-15.
- 5 Conductors must be insulated against contact with foreign (non-AC) grounds.
- 6 Grounding conductors must be no-load type and carry no current under normal operating conditions.
- 7 The use of building steel as an integral part of the ground system is not recommended.

Figure 25
AC power – multiple-column distribution ACEG


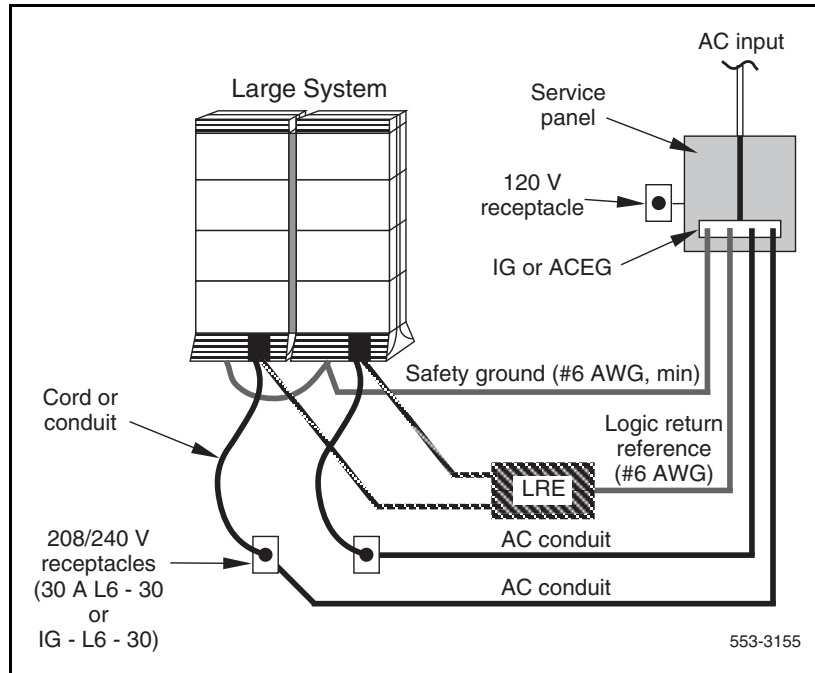


Figure 26
AC power – multiple-row distribution ACEG

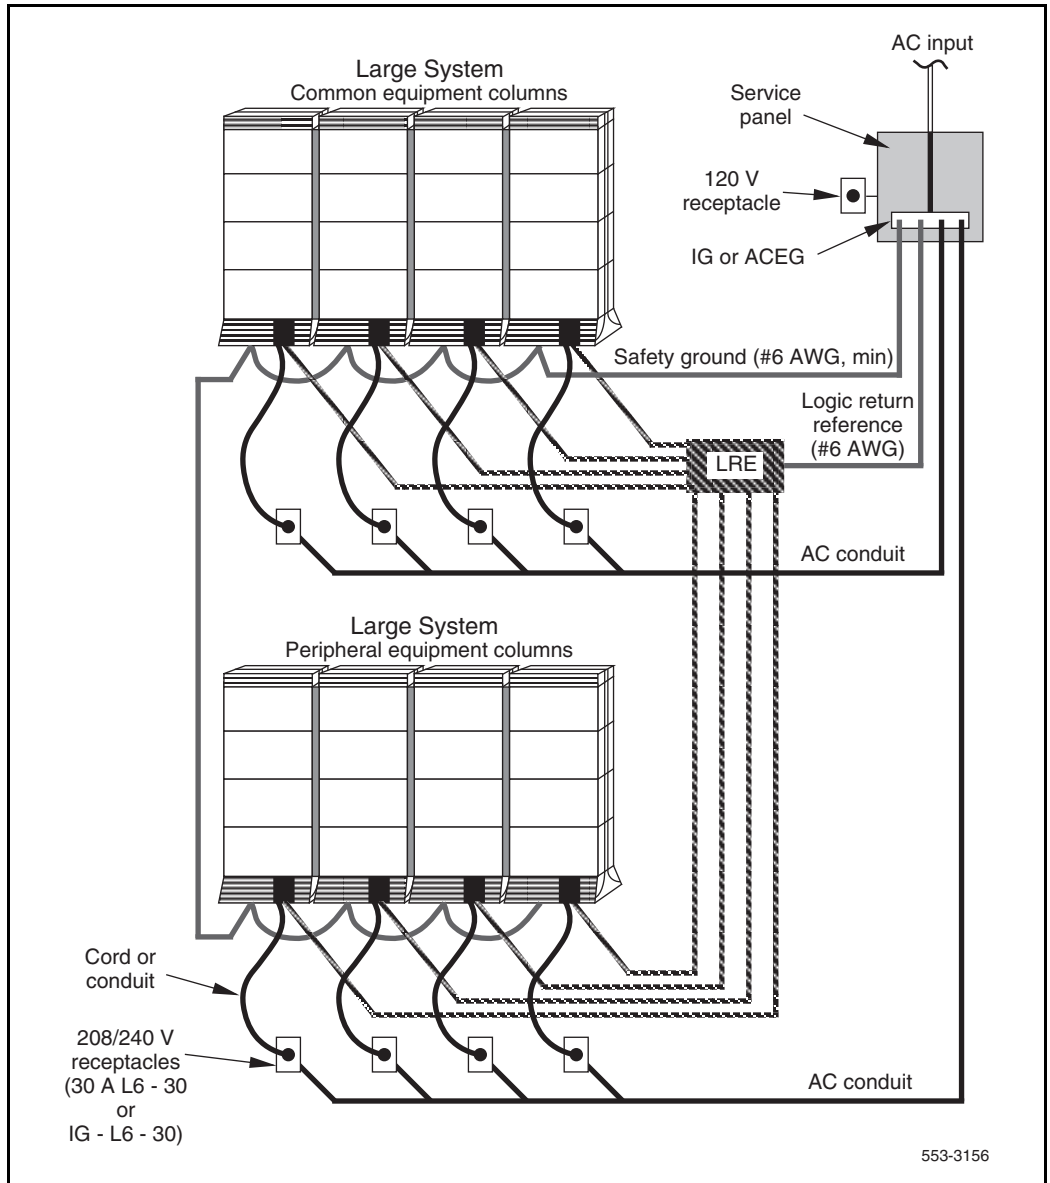

Logic return

A logic return equalizer (LRE) is a separate bus bar (such as an NT6D5303 or NT6D5304) used to join logic return wires at a common point. A #6 AWG conductor connects the LRE to the ACEG in the service panel. With multiple columns, the LRE is typically located in a nearby rack, in an overhead trough, or under a raised floor. The LRE must be insulated from the AC-grounded support structure. Figure 25 on [page 108](#) and Figure 26 on [page 109](#) show the use of an LRE in multi-column configurations.

The LRE is a consolidation point for all the logic return grounds. It is connected to the ACEG, which is located within the system's dedicated AC panel. The isolated ground bus within the dedicated AC service panel serves as the "system" SPG. The dedicated AC service panel should be supplied from the building's principal ground source, usually a transformer located within the building. It is at this point that the neutral-to-ground bond is performed. The live, neutral, and grounding conductors are supplied, all together within a single conduit, from the building's principal ground source to the dedicated AC service panel. The dedicated AC panel should service all the communication equipment and any logically interconnected devices (such as modems, TTYs, multiplexers, etc.). This ensures that all equipment has the same ground reference.


Identifying good grounds

The main ground consists of rods or plates. It is considered a good ground when the resistance of the rods or plates to ground is as low as practical. A recognized industrial standard is 4 ohms.

Usually a visual inspection will suffice to ensure that the connection of the ground conductor to the main ground is soundly made. It is possible to verify the quality of the ground by using a three-terminal tester. Figure 27 on [page 111](#) illustrates this procedure.

Refer to the three-terminal tester manufacturer's handbook for testing instructions.

Figure 27
Three-terminal testing

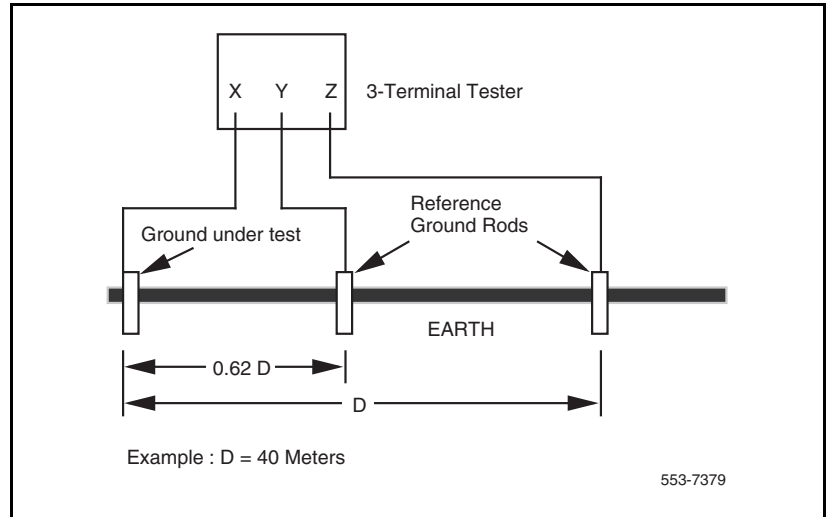

Circuit protection

RS-232 port protection

RS-232 type interfaces are susceptible to induced lightning damage when hardwired lines are run building to building. As little as 25 V can cause damage. Typically only pins 2 (send), 3 (receive), and 7 (signal ground) are connected end-to-end via twisted, shielded pairs.

Although the RS-232 specification supports only 15 m (50 ft) of operation, many applications successfully pass data at much longer distances. However, problems arise when different grounds are used at the two ends of the cable. Grounding at both ends will cause a ground loop current to flow in the shield due to the fact that each ground point will most likely be at a different potential. This current flow will induce a voltage onto the signal or data lines, resulting in erroneous data or fault conditions.

To prevent the creation of a current loop, the shield must only be grounded at one end. In general, this grounding takes place at the system end. SDI ports must be connected to the I/O panel at the rear of the switch. RS-232 cables

should then be connected to the I/O panel. RS-232 cables should never be connected directly to the connector on the SDI pack.

A modem or isolator must be installed for all RS-232 devices not connected to the ACEG.

Off-premises line protection

All voice and data lines that run externally from the building containing the system must have proper line protection. The cable sheath must be connected to the SPG.

Power service panel

Power service panels must meet the following requirements or be modified when used for the system:

- 1 Panels should be located in the equipment room.
- 2 No lights, air conditioners, heaters, generators, or motors may be connected to this service panel.

Power systems

Large Systems feature a modular power distribution architecture. As part of the modular design, the power system provides:

- a pedestal-mounted power distribution unit providing input voltage (AC or DC) to each module and protection from current overload
- power supplies in each module
- a universal quick-connect power wiring harness that carries the power and monitor signals to the power supplies in each module
- modular backup capabilities on a per column basis

The terms “AC system” and “DC system” refer to the type of power brought into the pedestal and distributed within the system to the module power supplies. Figures 28, 29, and 31 starting on [page 114](#) show the basic power distribution for AC and DC systems. All system options are available in both AC power and DC power versions.

To understand the system power architecture, consider the distinction between the “internal” and “external” power components.

Internal power components

Internal power components are contained within the system itself. They form an integral part of the power subsystem. They include the power distribution unit (PDU) in the pedestal, the power wiring harness, and the module power supplies.

Although the PDU and module power supplies differ in AC- and DC-powered systems, power distribution is similar: power is input to the pedestal and distributed to individual power supplies in each module. In AC-powered systems, the module power supplies convert the AC voltage to several usable DC voltages; in DC-powered systems, the module power supplies convert the DC voltage to several usable DC voltages. Except for the power components and the power wiring harness, all other functional elements within the system (such as card cages, backplanes, circuit cards, and system monitor) are identical in both AC and DC systems.

External power components

External power components are outside the system columns. If reserve power is not required, AC-powered systems have no external components; AC systems plug directly into the commercial AC power source. If an Uninterruptible Power Supply (UPS) is installed for reserve power, it is considered an external power component. All DC systems are powered by rectifiers that are external to the system.

AC power

AC-powered systems require no external power components and can plug directly into the commercial utility power source (see Figure 28 on [page 114](#)). AC powering requires a single conversion from the AC input voltage to the DC voltages required by the system. Power supplies in each module perform this conversion.

AC-powered systems are well-suited for applications that do not require reserve power. They are also recommended for small to medium-sized (two

columns or less) systems that require reserve power with backup times ranging from 15 minutes to 8 hours.

If reserve power is required with an AC-powered system, a UPS is installed in series with the AC power source (see Figure 29 on [page 115](#)). AC-powered systems that do not require long-term backup can benefit from a UPS with short-term backup. A UPS can provide power conditioning during normal operation, including protection against sags, brownouts, and other low-voltage transient conditions that cause most power disturbances.

Figure 28
AC-powered system


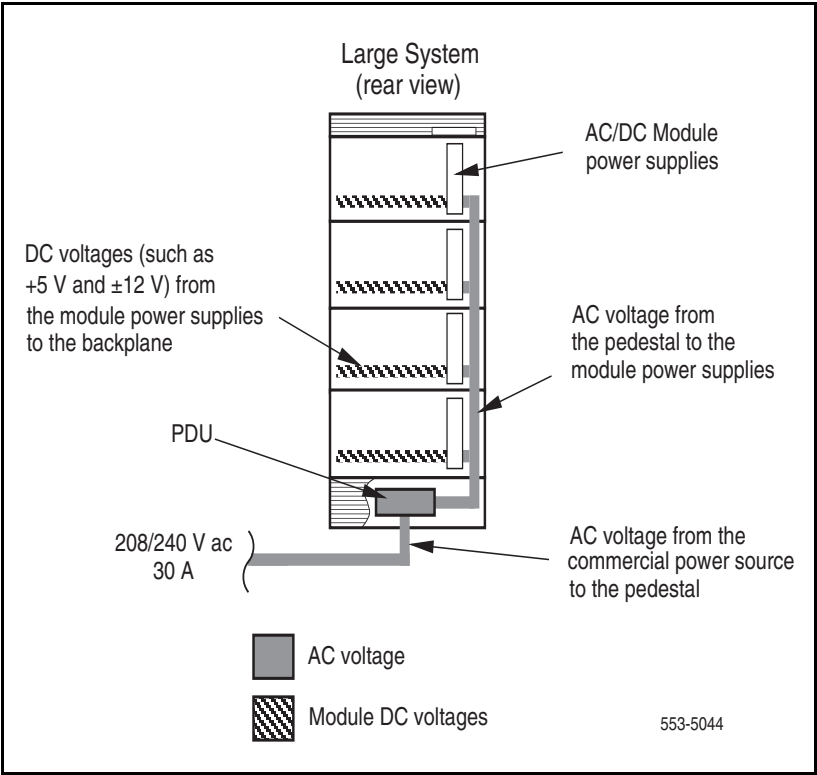


Figure 29
AC-powered system with reserve power

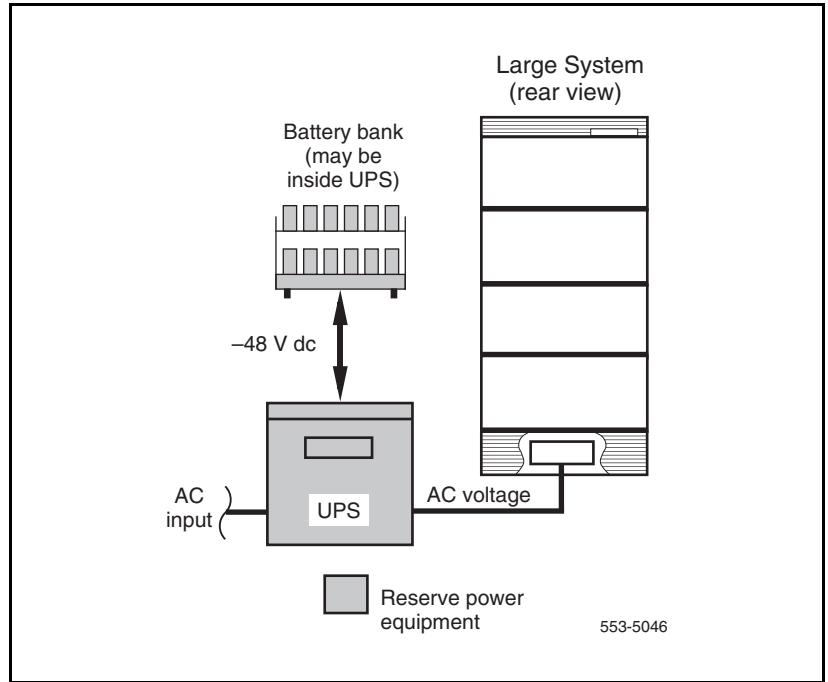

AC power input specifications

AC power supplies operate from a nominal input of 208 to 240 volts AC, single-phase. While the actual input range of the AC power supplies is 180–280 V, no restrapping the power supplies is required if the input line voltage is within 208–240 V.

AC-powered systems require one IG-L6-30 or L6-30 receptacle for each column within 2.4 m (8 ft) of the column's pedestal. Each column comes equipped with one 30 A cord and plug.

Note: Do not use ground fault circuit interrupt (GFCI) devices on AC power circuits.

As an alternative to using the power cord and plug, AC input to the PDU may be wired directly. Use #10 AWG conductors routed through 1.9-cm (3/4-in.) conduit. Connect the conductors to the input terminals on the field wiring terminal block in the PDU for a 240 V AC input, as indicated in Table 6.

Table 6
AC input connections

AC input conductor	PDU terminal
Hot – Phase I	L1
Hot – Phase II	L2
Safety Ground	GND

All AC input power wiring must contain a separate safety ground conductor (green wire). Nortel strongly recommends a dedicated AC supply that runs uninterrupted from the building primary source to a dedicated equipment room service panel.

Note: Follow all applicable electrical codes if the AC input is wired directly to the PDU.

If reserve power is used, install the UPS, along with its associated batteries (which may be internal or external to the unit), in series with the commercial power source. The system then plugs into the UPS (see Figure 29 on [page 115](#)). Consult the UPS manufacturer for requirements of the UPS power input receptacle.


AC internal power distribution

Figure 30 on [page 117](#) shows the elements of the AC internal power system. Components of the distribution system include the power distribution unit (PDU), module-to-module power harness, module power distribution unit (MPDU), MPDU-to-backplane power harness, and module power supply.

Input power wiring connects to the field wiring terminal block in the back of the PDU. The output power harness connects the field terminal block to the first module. The module-to-module harness distributes power to the MPDU in each successive module. The MPDU-to-backplane harness distributes

power from the MPDU to the module power supply and ringing generator, if equipped. The module power supply converts the AC voltage to the DC voltages required by the circuit cards in the module.

Figure 30
AC internal power distribution (rear of column)

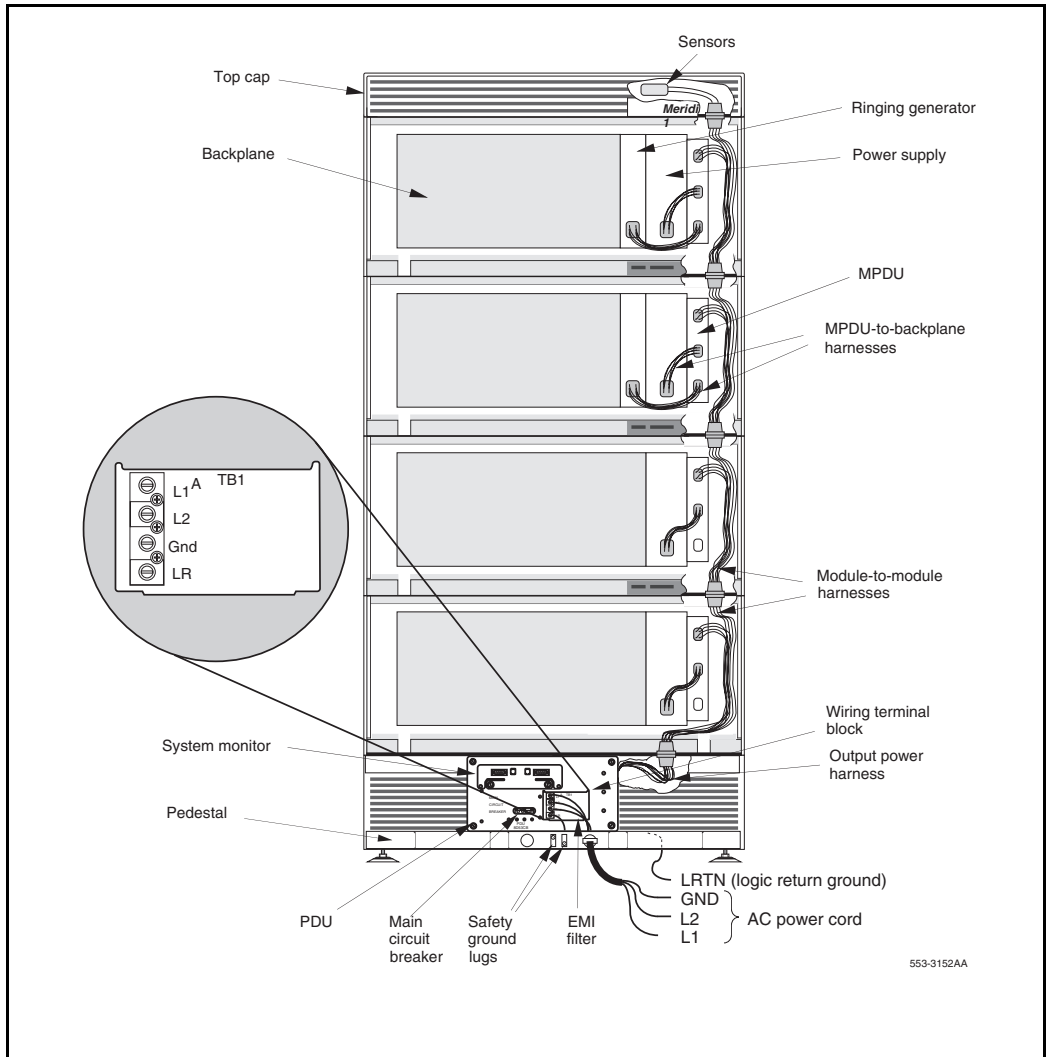

Power distribution unit (PDU)

Located in the rear of the pedestal, the PDU serves several functions, but primarily it serves as a power distribution point for the entire column. The field wiring terminal block provides the connection point for the AC input wiring. The electromagnetic interference (EMI) filter (required for regulatory compliance) keeps EMI from radiating outside the confines of the column. The circuit breaker, which is the main circuit breaker for all modules in the column, protects the column if there is a current or thermal overload. The internal terminal block provides a distribution point for power output wiring to the modules. The power/signal harness (not shown in Figure 30 on [page 117](#)) provides power and signal interconnections for the blower unit and system monitor. The system monitor power supply provides +5 V power to the system monitor even when the main circuit breaker is off. The output power harness relays power from the pedestal to the module(s) above it.

Note: The system monitor is housed in the PDU. The system monitor is powered by a small AC power supply, which is not connected to the circuit breaker for the column.

Intermodule harnesses

Several power harnesses conduct the input voltage throughout the column (see Figure 30 on [page 117](#)). The module-to-module harness connects to the MPDU in each module and to the module above. The MPDU-to-backplane harness distributes power from the MPDU to the module power supply and ringing generator, if equipped, through backplane power connectors.

Module power distribution unit (MPDU)

An MPDU provides the circuit breakers that provide current protection at the module level, so only a faulty module is shut down while others remain

functional. Table 7 on [page 119](#) lists the MPDUs, power supplies, and compatible modules.

Table 7
MPDU, power supply, and module compatibility

MPDU	Power supply	Module
NT8D56AA	NT8D29	NT4N41BB Core/Network
NT8D57AA	NT8D06 PE NT8D21 (ring generator)	NT8D37 IPE

Module power supplies

In each module, input voltage is carried through the backplane harness to the module power supply, where it is converted to the voltages required by the circuit cards in the module. Table 7 lists the compatibility between module, MPDUs, and each power supply.

Table 8 lists the output voltages and currents for AC module power supplies.

Table 8
Output voltages and currents for AC power supplies

Module	Output volts (V AC)	Output amperes (A)	Output volts/ volt-amperes (V AC/VA) (see Note)	Output frequency (Hz)
NT8D06 PE Power Supply	+5.1 +8.5 +10.0 −10.0 +15.0 −15.0 −48.0	28.00 4.00 0.50 0.50 17.00 15.00 7.70	—	—
NT8D21 Ringing Generator	−150.0 +70.0 +80.0 +86.0	0.20 0.127 0.111 0.103	70/8 80/8 86/8	25/50 25/50 20/25
NT8D29 Power Supply	+5.1 +3.3 +12.0 −12.0	60.00 5.00 2.50 1.00	—	—
Note: Volt-amperes (VA) is for the ringing power.				

DC power

DC power systems deliver DC to the pedestal of the system. AC-powered systems accept AC at the pedestal and distribute AC to the power supplies located in each module.

DC-powered systems require an external DC power plant consisting of rectifiers (also called *chargers* or *AC/DC converters*) and power distribution and control equipment. The external rectifiers connect directly to a commercial AC power source (see Figure 29 on [page 115](#)). DC-powered systems require a double conversion: the rectifiers convert the AC voltage to

–48 V DC, which is distributed by the PDU in the pedestal to the power supplies in the modules. The power supplies convert –48 V DC to other DC voltages required in each module.

Batteries are generally used with DC-powered systems because the traditional method for powering telecommunications uses rectifiers to continuously charge a bank of batteries, while the system power “floats” in parallel with the battery voltage. However, batteries are only used if reserve power is needed. Figure 32 on [page 123](#) shows a Candeo system with reserve power equipment.

Complete systems — including DC power plants — can be provided by Nortel. Systems can also be configured to connect to an existing power plant provided by the customer.

Consider DC systems for the following:

- most Large Systems (any system larger than two columns)
- most systems with long-term reserve power requirements (usually eight hours or more)
- when the customer site has an existing DC power plant or batteries available

Figure 31
DC-powered system


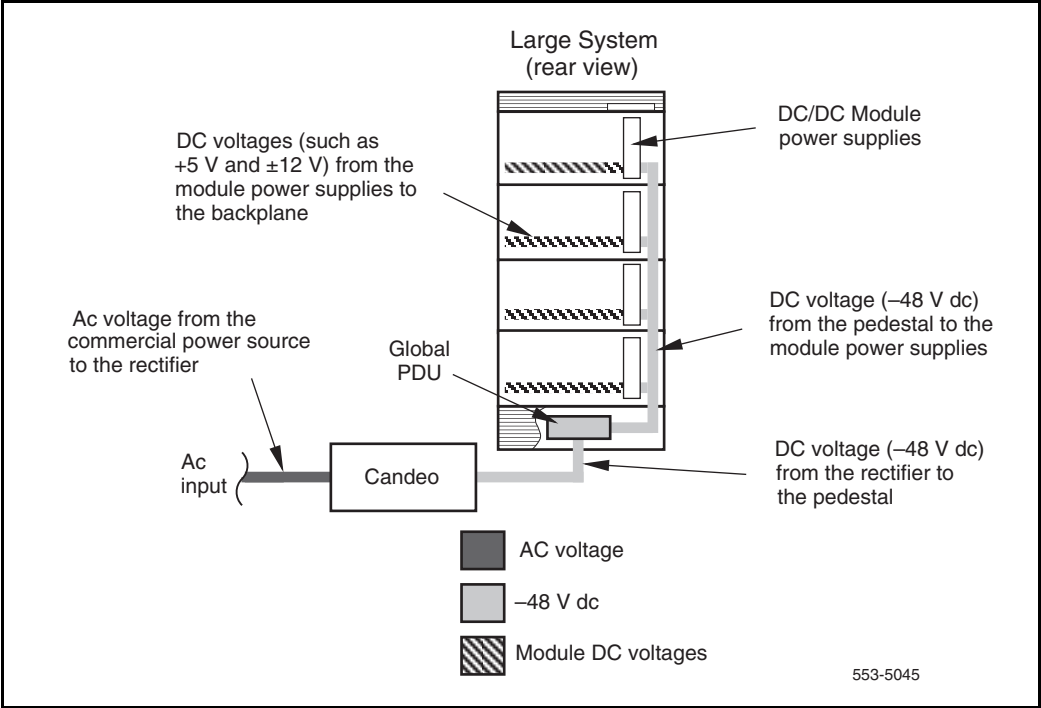


Figure 32
DC-powered system with reserve power

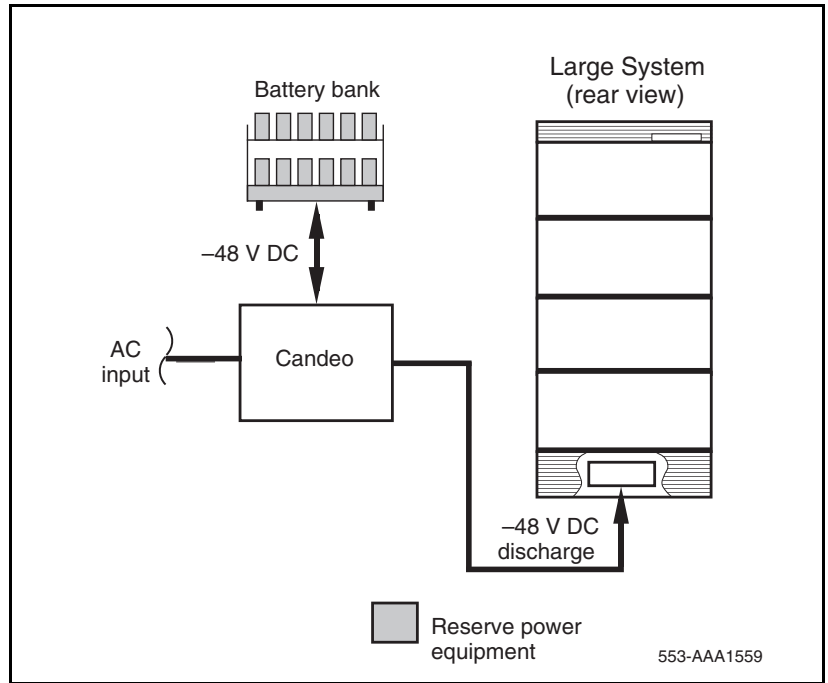

The DC power system must be able to provide the required current and operate within the specifications listed in Table 9. For additional battery voltage requirements, see Table 13 on [page 135](#).

Table 9
Input specifications – DC power system

Input	Pedestal	Battery
Maximum range	–42 to –56.5 V	–42 to –56.5 V
Expected nominal (24 stationary cells)	—	–52.08 V
Expected nominal (23 sealed cells)	—	–51.75 V
Expected nominal (24 sealed cells)	—	–54.00 V
Noise (max C msg)	—	22 dBrnC (See Note)
Note: Without battery, C msg (max) is 32 dBrnC.		

Input power specifications

DC power plants require one separate AC input per rectifier, within 1.8 m (6 ft) of the rectifier. The number and type of rectifiers used determine the total requirements for commercial AC power input.


Note 1: Do not confuse the output rating of the rectifiers in DC amps with input requirements in AC amps.

Internal power distribution

Power distribution in the DC-powered system (see Figure 33 on [page 125](#)) consists of the NT4N49AA PDU, the module-to-module power harness, the module-to-backplane power harness, and the module power supply.

DC power cables connect to the field wiring terminal block, where an output power harness carries the input voltage to the first module. Module-to-module harnesses distribute DC voltage to successive modules. Module-to-backplane harnesses distribute DC voltage to the module power supply and ringing generator, if equipped. In each module, the module power supply converts the DC input voltage to the several DC voltages required by the circuit cards in the module.

Figure 33
DC internal power distribution (rear of column)

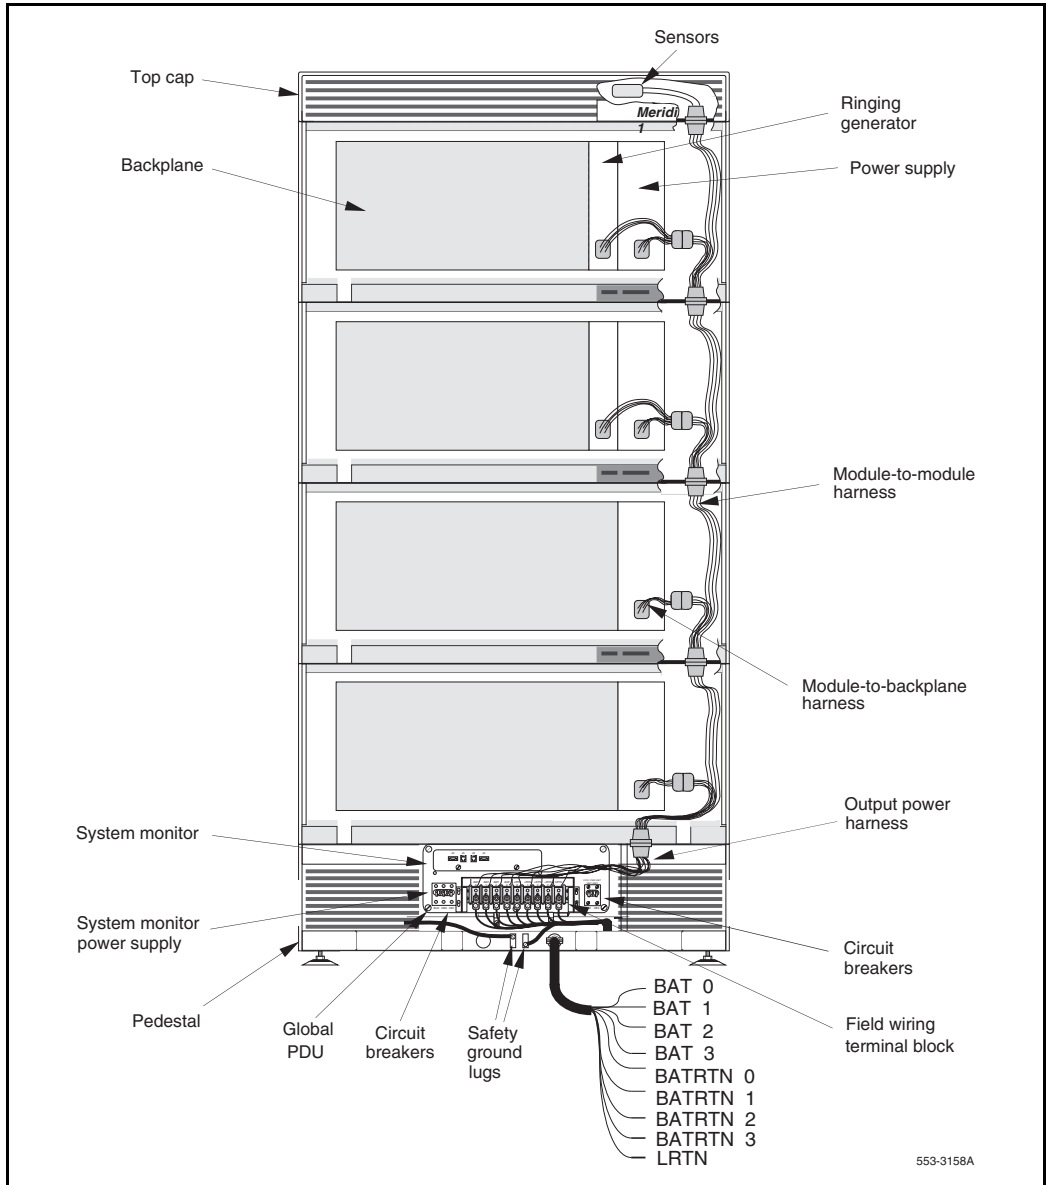

Power distribution unit

The NT4N49AA PDU, located in the rear of each pedestal, distributes power to the entire column. The PDU provides a common distribution point for the input voltage. The output power harness connects the pedestal to the first module. Individual wiring harnesses carry the current to each successive module. The power/signal harness (not shown in Figure 33) provides power and signal connections between the blower unit and system monitor.

In the event of a current overload, one of four circuit breakers located in the PDU protects each module. A fifth circuit breaker provides protection for the whole column in the event of a thermal overload. The system monitor power supply provides +5 V power to the system monitor (even when the PDU circuit breakers are off).

Refer to “NT4N49AA 4-Feed PDU” on [page 155](#) for additional information.

Intermodule harnesses

Several power harnesses conduct the input voltage throughout the column. The module-to-module harness consists of the module connector, which distributes power to the module or modules above it, and the backplane connector, which distributes power through the module-to-backplane harness to each module power supply.

Module power supplies

In each module, –48 V is received through the module-to-backplane distribution harness and converted by the module power supply to the necessary voltages for the individual module. There is an on/off switch on each power supply for safe operation and easy maintenance.

There are three DC module power supplies:

- 1** The NT6D40 PE Power Supply provides power to circuit cards and talk battery to lines and trunks.
- 2** The NT6D41 CE Power Supply provides power to circuit cards.
- 3** The NT6D42 Ringing Generator provides –150 or –100 V DC message waiting lamp voltages for 500/2500-type telephones. It can provide ringing power to 48 ringers simultaneously.

Table 10 lists power supply compatibility. Table 11 on [page 127](#) lists the output voltage and currents for DC power supplies.

Table 10
Power supply and module compatibility

Power supply	DC Module
NT6D40 PE	NT8D37 IPE
NT6D41 CE	NT8D35 Network
NT6D42 ring generator	NT8D37 IPE

Table 11
Output voltages and currents for DC power supplies

Power supply	Output volts	Output amperes (A)	Output volts/ volt-amperes (V AC/VA) (Note)	Output frequency (Hz)
NT6D41 CE Power Supply	+5.1 +12.0 -12.0	60.00 3.50 1.00	—	—
NT6D42 Ringing Generator	-100.0 -150.0 70.0 80.0 86.0	0.20 0.20 0.127 0.111 0.103	70/16 75/16 80/16 86/16	20/25/50 20/25/50 20/25/50
Note: Volt-amperes (VA) is for the ringing power.				

External power distribution

A variety of rectifiers and distribution equipment can be used to supply external DC power. Existing customer equipment can be used or a system that Nortel either supplies or recommends, such as the Small or Large Candeco. The Small Candeco is appropriate for Single Group or Multi Group systems that do not require more than 300 A, while the Large Candeco is suitable for larger systems. In all cases, equipment for rectification and distribution is required, while reserve batteries are optional.

For installation procedures, see *Communication Server 1000M and Meridian 1: Large System Installation and Configuration* (553-3021-210).

Figure 34
Front view of a 300 A Candeo SP 48300 power system



Reserve power

Reserve power is available for both AC and DC systems. When selecting reserve power equipment, consider the following:

- future system growth
- the maximum time backup power is required
- existing power system capacity
- the space and thermal environment (air conditioning)
- other equipment, such as lights and alarm systems

Reserve power for AC systems is provided by UPS units, installed in a series with the commercial power source.

DC systems use the traditional telecommunications powering method: external rectifiers (AC/DC converters) continuously charge a bank of batteries while the system power “floats” in parallel on the battery voltage.

AC reserve power

A UPS generally consists of a combination battery charger (AC/DC converter) and inverter (DC/AC converter), along with associated batteries. The batteries may be internal or external to the UPS. A UPS is not a standby power source, but an on-line unit with no output interruption when the AC power is interrupted.

There are a number of UPS vendors and systems available. Factors to consider when choosing a UPS include:

- input voltage and frequency range
- output voltage and current capacity
- number and type of output receptacles
- regulatory and safety agency approvals
- efficiency and performance considerations
- alarm and status indications
- battery recharge time

- the maximum time backup power is required
- existing batteries or other power equipment available at the site
- future system growth

UPS sizing

To determine UPS sizing, first calculate the total power requirements of the column (or columns) supported by the UPS, as described in “Calculating system power requirements” on [page 165](#). Convert the real power in watts (W) to complex or “apparent” power in volt-amperes (VA) by dividing the real power by the typical system power factor of 0.6. Then size the UPS in terms of its rating in VA (or kVA). For AC-powered systems, NNEC calculates the system power consumption in both watts and volt-amperes.

$$VA = \frac{W}{0.6}$$

To determine the sizing and provisioning of UPS batteries, follow the instructions provided by the UPS manufacturer. A general approach is to take the total system power in watts, divide by the UPS inverter efficiency, and convert to battery current drain by dividing by the nominal discharge voltage of the battery string. Then determine the battery requirements in ampere-hours (A-hrs) by multiplying the battery current drain by the required reserve power operating time.

$$Ahr = \left(\frac{W_{total}}{V_{dischg}} \right) T_{reserve}$$

UPS interfacing

A UPS must meet the following requirements in order to be used with a system:

- 1 The UPS specifications must meet the commercial power specifications of the system:
 - a nominal output voltage range of 208–240 V AC, with a total input range of 180–250 V AC
 - b nominal frequency of 50–60 Hz, with a total range of 47–63 Hz

- c Total Harmonic Distortion (THD) of 5%, with 3% on any single harmonic, of the AC sine wave
- 2 The UPS must be able to handle non-linear loads (the AC module power supplies are a switched-mode design) and have a current crest ratio of 3.0 or greater.
- 3 The UPS must be UL listed and certified under FCC Part 15, Subpart J as a Class A device.
- 4 The UPS must have a 30 A, 250 V locking power receptacle (L6-30) for each column to be powered.
- 5 The UPS must meet ANSI standard C62.41 and IEEE standard 587-1980, class A and B, for transient surge suppression.

Note: It is convenient for the UPS to have one or more 120 V power outlets (5-15R) for auxiliary devices that must have backup power, such as the Power Failure Transfer Unit (PFTU) power supply.

UPS installation

When installing a UPS, follow the vendor's instructions carefully.

Note: UPS installation can be complex. Nortel recommends taking advantage of vendor training programs.

Nortel recommends installing a bypass switch during the initial UPS wiring (if the switch function is not inherently a part of the UPS itself). The UPS bypass switch allows the system to run directly from the commercial power source while the UPS is taken off-line during installation, service, or battery maintenance.




CAUTION

Damage to Equipment

Take care when connecting battery cables to the UPS. Connecting battery cables backward can result in severe damage to the UPS.

Figure 35 shows a general block diagram of a UPS installation and associated wiring.

Figure 35
AC reserve power configuration

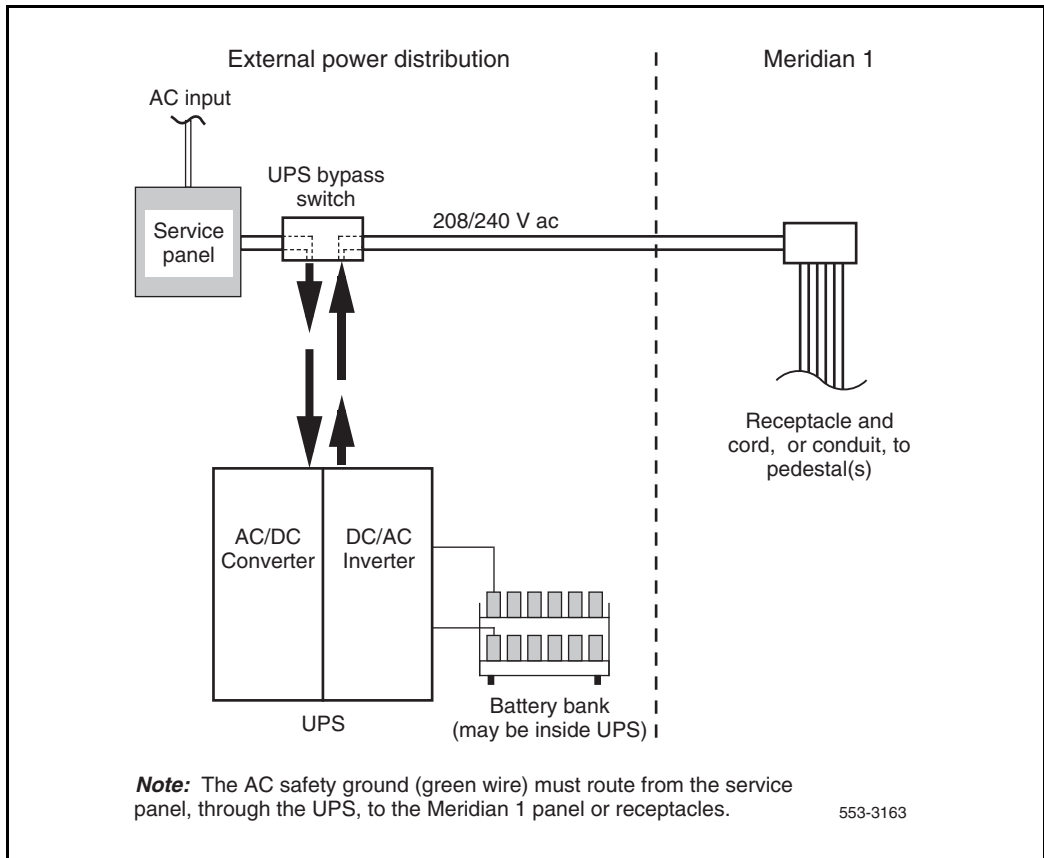

Power conditioning

The term “power conditioner” refers to a wide variety of power protection or power quality improvement devices, such as low-pass filters, surge arrestors, line voltage regulators, and isolation transformers. Most of these devices can help prevent power line spikes and surges, and some isolation transformers can provide good noise rejection.

Although most power conditioning devices do not provide energy storage for undervoltage conditions, they can help prevent surges and other overvoltage conditions that can cause permanent damage to equipment.

When choosing UPS protection and power conditioning equipment, remember that over 90% of power disturbances in the US are undervoltage conditions such as sags and outages. When there are US power disturbances:

- 87% are power sags; 90% of these last 0.53 seconds or less
- 7.4% are impulses or spikes lasting less than 100 microseconds
- 4.7% are longer-term power failure; 90% of these last 4.2 hours or less, 75% last 40 minutes or less, and 50% last 38 seconds or less
- 0.7% are surges lasting more than 100 microseconds

Low-voltage transients occur most frequently and may cause temporary loss of operation. High-voltage transients occur much less often, but can cause damage to equipment as well as loss of operation.

Carefully consider the type of power line protection needed for the installation under consideration. A power conditioner can help provide overvoltage protection, but a UPS can provide both overvoltage and undervoltage protection, though usually at a higher price.

Alarm monitoring

Nortel offers a UPS-to-system monitor interface cable for each of the product lines that have been tested for system compatibility. The system monitor interface is not supported for other vendors. Table 12 on [page 134](#) lists the UPS-to-system monitor alarm cables that are available. UPS systems are not offered by or available through Nortel, but can be purchased directly from vendors or through authorized distributors.

The alarm interface consists of:

- an “Inverter On” signal to indicate that the commercial power is interrupted and the UPS alone is supplying power to the system
- a “Summary Alarm” signal to indicate a fault or alarm condition at the UPS

Table 12
UPS-to-system monitor alarm cables

UPS vendor	Order Code	Quantity
Alpha Technologies	NT8D46AU	One per UPS
Best Power Technology	NT8D46AJ	One per UPS
Exide Electronics	NT8D46AQ	One per UPS

DC reserve power

Reserve power for DC systems is provided by adding batteries to the external power distribution system. Calculate reserve battery capacity as described in “UPS sizing” on [page 130](#). This determines the total ampere-hour requirements of the batteries. (See also “Calculating system power requirements” on [page 165](#).)

To comply with safety requirements, read and fully understand the following documents before working with any battery systems:

- OSHA “Material Safety Data Sheet.” This must be posted to meet OSHA requirements. This document outlines safe reserve battery handling procedures.
- National Electric Code 645-10. This document outlines requirements for the installation of AC and DC power kill switches to battery systems in certain environments.

Current requirements

The DC current required for battery reserves is based on the total system power requirement. For new installations, you can determine power and battery requirements from data provided by Nortel. For existing installations, see “Calculating system power requirements” on [page 165](#) for information on calculating current required for battery reserves.

Batteries

The reserve battery capacity required depends on the system line size (load), the time the reserve supply must last in the event of a power failure, and the

battery end voltage. Refer to Table 13 for reserve battery float voltage and equalization voltage guidelines. These voltages must never be more negative than -56.5 V.

Table 13
Battery requirements

Battery configuration	Float voltage (V)		Equalize voltage (V)	
	Cell	Bank	Cell	Bank
24 stationary cells	-2.17	-52.08	-2.25	-54.00
23 sealed cells	-2.25	-51.75	-2.35	-54.05
24 sealed cells	-2.25	-54.00	-2.35	-56.40

Lead-calcium/absolyte batteries

Battery package provisioning is based on the number of ampere-hours required. Since battery package ampere-hour ratings are generally given at an 8-hour discharge rate, adjustment factors are required to determine the required battery package. Table 14 lists adjustment factors for lead-calcium and absolyte batteries. These factors are based on the discharge rates of the

respective battery types from a specific supplier. Discharge characteristics may vary by manufacturer.

Table 14
Adjustment factors for lead-calcium and absolyte batteries

Reserve hours	Lead-calcium factor	(Sealed) Absolyte factor
1	3.0	1.8
2	4.0	3.1
3	5.0	4.2
4	5.9	5.2
Note: If a system requires more than 10 hours of backup, the factor is linear. For example, if 15 hours are required, the factor is 15.		
5	6.9	6.2
6	7.7	7.1
7	8.5	7.8
8	9.3	8.5
9	10.1	9.4
10	10.9	10.2

Calculate battery requirement using this formula:

$$Ahr = I_L \times F_{adj}$$

where:

Ahr = battery requirement in ampere-hours

I_L = system load, in amps

F_{adj} = appropriate adjustment factor from Table 14

When using lead-calcium or sealed batteries, calculate battery recharge time

using this formula:

$$T = \frac{Ahr \times 1.15}{I_{RO} - I_L}$$

where:

- T = battery recharge time
- Ahr = battery capacity in ampere-hours
- I_L = total system load, in amps
- I_{RO} = total rectifier output, in amps

Other battery considerations are:

- Not all sealed cells require equalization, but equalization voltage can be used for fast charging. Use a battery end voltage of 44 V when choosing battery banks.
- Use these electrical noise limitations for a battery bank:
 - 20 mV rms maximum ripple
 - 32 dBrnC maximum noise
- CEMF cells are not recommended because the noise they generate is unacceptable.

Candeo DC power system

The Candeo platform provides a simple, quick to deploy, and easy to operate power solution. Based upon modular building blocks (rectifiers, System Manager, DC distribution, and battery connection modules), the system is designed to power -48 V DC applications. The Candeo platform can be expanded by adding rectifiers, battery connection modules, frames, and distribution modules.

There are two types of Candeo systems:

- Large Candeo, which uses 50 A rectifiers and has a capacity of 1000 A.
- Small Candeo (SP48300), which uses 30 A rectifiers and has a capacity of 300 A.

Note: The Candeo power systems and associated rectifiers are not compatible with any Nortel power systems, such as the MFA150. For example, you cannot mix a Small Candeo system with an MFA150 or earlier power system.

Both Large and Small Candeo systems provide “plug and walk-away” installation and setup. The platform can be reconfigured or expanded while it remains online. Installation and maintenance benefits include:

- fully front accessible
- (for Large Candeo) shelfless rectifiers
- automatic alarms and rectifier configuration settings
- no inter-module wiring
- all hot-insertable modules
- all internal bussing
- fully insulated environment
- high efficiency
- IP ready for simplified internet connectivity
- HTML-based graphical user interface
- automated web-based maintenance and comprehensive on-screen troubleshooting
- remote access via modem or Ethernet, permitting remote operation of the power system
- intelligent backbone simultaneously carrying DC power, alarm information, and data signals
- built-in temperature compensation
- built-in charge current limiting
- EMI FCC class B or CISPR class B for systems up to 1000 A (50 kW)

Note 1: The Candeo DC power plant is considered “external” power equipment because it is not housed in Large System columns.

Note 2: The Large Candeo system generally requires one input receptacle for each rectifier, within 1.8 m (6 ft) of each rectifier. The commercial power receptacles required are determined by the number and type of rectifiers used.

Note 3: The Small Candeo system requires two 30 A feeds for each rectifier shelf, with each shelf supporting five or six rectifiers.

In a single frame configuration, a Candeo system can power a complete range of medium-sized applications.

- *Large Candeo:* Built around the shelfless Candeo Rectifier 50/48, this system operates from any voltage between 80 V AC to 300 V AC (single phase). When configured with 50 A Candeo rectifiers, the system delivers up to 500 A from a single 42-inch (1050 mm) frame and up to 1000 A from a single 84-inch (2100 mm) frame.
- *Small Candeo:* Built around the Candeo Rectifier 30/48, this system operates from any voltage between 75 V AC to 310 V AC (single phase). When configured with 30 A Candeo rectifiers, the system delivers up to 150 A from a single rectifier shelf and up to 300 A from a system equipped with a supplementary rectifier shelf. The Small Candeo system comes in 51-inch (1275 mm) and 84-inch (2100 mm) versions.

More detailed information is supplied in the following Candeo power system manuals, which are included with the system:

- *Candeo Power System User Guide* (P0914425)
- *Candeo Power System Installation Guide* (P0914426)
- *Candeo SP 48300 Power System AP6C55AA User Manual* (P7000154)
- *Candeo SP 48300 Power System AP6C55AA Installation Manual* (P7000289)

Large Candeo modules

The Candeo platform uses a combination of modules or building blocks to deliver custom configurations. The modules include:

- 1 Rectifier 50/48 Module
- 2 System Manager Module
- 3 Distribution 500 Module

Rectifier 50/48 Module

The shelfless Rectifier 50/48 provides up to 50 A (2 750 W) of -48 V DC power. Designed to operate at a nominal input voltage of 208/240 V AC, the rectifier will also operate over an input range of 80 V AC to 300 V AC (45 to 65 Hz) at reduced output power. The rectifier delivers full output power when operating in environments ranging between 0 and 50 degrees Celsius.

Rectifier features include:

- High power density – 4.3 W /in³
- High efficiency (> 92%)
- Shelfless design
- Hot insertable
- Tool-less rectifier installation
- 100% tool-less maintenance strategy
- Ultra-low total harmonic distortion (THD) < 5%
- Temperature-controlled cooling fans
- Mean time before failure (MTBF) > 250 000
- Zone 4 seismic
- Compliant with global standards (FCC part 15 class B, UL 1950, CSA 22.2#950, CE, VDE, IEC 950, and CISPR22 class B)

System Manager Module

The System Manager is the main control element of the Large Candeo system. The System Manager's local and remote system management capabilities provide total control over the power system.

System Manager Module features include:

- Automatic set-up
- Single point of adjustment
- User-friendly interface
- Rapid troubleshooting
- Real-time updates
- Extensive data reporting
- Inventory mapping
- Battery management functions: temperature compensation, discharge tests, charge control, equalize, load shedding and rectifier sequential start
- Alarm and statistical history
- Built in remote access using any web browser
- System cloning
- Integrated system management facilities through several interfaces, including RS-232 and RS-485 serial data ports and programmable dry-C contacts
- Optional modem

Distribution 500 Module

The Large Candeo's Distribution 500 module provides the DC distribution connectivity for a capacity of 500 A. The module plugs in the system anywhere when greater distribution capacity is required. The module can accommodate a wide variety of distribution elements, including single and double pole circuit breakers as well as GMTX type fuses.

Distribution Module features include:

- Wide selection of distribution elements:
 - up to twenty, 1 to 100 A single pole circuit breakers
 - or up to ten, 100 to 150 A double pole circuit breakers
 - or up to six, 50 A capacity blocks, each providing 10 positions for (0-10 A) GMTX fuses
 - up to 20 fuse holders
 - or any mix of the above elements
- Completely modular
- No pre-set limits to the number of distribution modules
- Tool-less additions or upgrades
- Hot-insertable
- Front access
- Fully insulated environment
- No configuration required
- Troubleshooter alarm indicators
- System capacity monitoring

Additional information is available in the following Candeo Power System manuals:

- Candeo Power System User guide (P0914425)
- Candeo Power System Installation Guide (P0914426)

Large Candeo sample configurations

Example configuration #1

- 42" Frame with battery kit, LVD and distribution 500 (with 20 breaker positions).
- 17 mid trip breakers (30 A), one GMTX fuse block (takes up 3 breaker positions).
- System monitor.
- Up to 10 rectifiers (500 A capacity).

Example configuration #2

- 42" Frame with battery kit, LVD and distribution 500 (with 20 breaker positions). 17 mid trip breakers (30 A), one GMTX fuse block (takes up 3 breaker positions).
- Additional distribution 500 (with 20 breaker positions). 11 mid trip breakers (30 A), three GMTX fuse blocks (takes up 3 breaker positions per block).
- System monitor.
- Up to 6 rectifiers (300 A capacity).

Example configuration #3

- 84" Frame with battery kit, LVD and distribution 500 (with 20 breaker positions). 20 mid trip breakers (30 A).
- 2nd 84" Frame with battery kit, LVD and distribution 500 (with 20 breaker positions). 11 mid trip breakers (30 A), three GMTX fuse blocks (takes up 3 breaker positions per block).
- Additional distribution 500 (with 20 breaker positions), 10 mid trip breakers (30 A).
- System monitor.
- Up to 10 rectifiers (500 A capacity) in frame one, up to 10 rectifiers (500 A capacity) in frame two.
- One interframe DC link bar kit.

Small Candeo modules

The Candeo platform uses a combination of modules or building blocks to deliver custom configurations. The modules include:

- Rectifier 30/48 ([p. 144](#))
- Power shelves ([p. 144](#))
- System Manager SP ([p. 145](#))
- Distribution 300 panel ([p. 146](#))

Rectifier 30/48

The Rectifier –48 V DC, 1500 W is a switch-mode rectifier that converts the single-phase AC source at the input into an isolated, filtered, and regulated DC power output (up to 30 A) used to feed the loads and to charge a positive grounded battery. These rectifiers are of the plug-in type to facilitate their installation, maintenance, replacement, and repair. Each rectifier is equipped with a cooling fan that is field replaceable.

Designed to operate at a nominal input voltage of 110/120 or 208/240 V AC, the rectifier will also operate over an input range of 75 V AC to 310 V AC (45 to 65 Hz) at reduced output power. The rectifier delivers full output power when operating in environments ranging between -40 and 55 degrees Celsius.

The rectifier requires no adjustments. Under normal operation, operating parameters of the rectifiers in a system, such as float voltage and boost voltage, are entirely configured and controlled by the System Manager SP.

Power shelves

The Candeo SP48300 can have either one or two power shelves. The initial power shelf provides five rectifier positions and one system manager position, while the supplementary power shelf has six rectifier positions and an optional AC interface box for front access applications. Each rectifier position provides interconnection points for the AC input, the DC output, and the control and alarm data bus (CAN protocol).

The total output capacity of the system is 300 A. The output capacity of the initial shelf is 150 A (five rectifiers delivering 30 A each). The output capacity of the supplementary shelf is 180 A. The system provides N+1

redundancy, but the extra rectifier is always operational and load shares with the other N rectifiers if they are operating normally.

System Manager SP

The System Manager SP is the advanced controller available with the Candeco SP power systems. The operational features of the System Manager SP are as follows:

- graphical LCD screen
- local alarm display by means of LED indicators
- eight programmable alarm outputs (dry-C contacts), with Minor, Major, and Observation being the factory defaults for outputs 1, 2, and 3
- eight programmable alarm inputs
- several processed alarms
- alarms and events history files
- alarm management
- built-in web server
- Ethernet (LAN) and modem (RS-232) access
- four levels of access security (one hardware and four passwords)
- battery database
- temperature compensation
- voltage boost (equalize)
- battery discharge test
- charge control
- delivered DC power calculation
- CAN protocol communication with up to 30 modules
- maintenance of an inventory of the units in the system
- field replaceable without interruption of the rectifiers
- remote or local access (PSTN, GSM, EEM, TCP/IP, SNMP)
- local Graphical User Interface (GUI)

- remote GUI with multilanguage compatibility
- Slave and Master functionality

Distribution 300 panel

The Candeo SP48300 can have either one or two distribution panels. Each distribution panel can support 300 A. The panels are used to connect small and medium capacity distribution loads. They can accommodate a wide variety of distribution hardware in various configurations.

The initial distribution panel supports 18 load feeds and 8 battery feeds, together with Battery Low Voltage Detection (BLVD). The supplementary distribution panel supports an additional 26 load feeds.

Both the initial (main) and supplementary distribution panels provide local fuse and/or circuit breaker alarm indication by means of a red LED indicator.

In addition to providing protection and connecting points for the battery and battery return cables for the loads, the initial distribution panel provides:

- a connecting point for the system's main battery return reference (BRR) cable
- connecting points for the busbar links to bridge the supplementary distribution panel, if provided
- connecting points for the bridge cables for a field-installed supplementary rectifier shelf, if provided
- connecting points for the interface with the outside world (alarms inputs and outputs, etc.)
- an LVD contactor inhibit switch

Battery enclosure for EMEA countries


For EMEA countries, if backup batteries are used, a battery enclosure is required. Individual batteries are Hawker Energy SBS 60 Valve Regulated Lead Acid (VRLA), 12 V DC nominal voltage, with a capacity of 50.8 Ah. They are available in battery modules containing four batteries each (A0669283 Battery Module). Install the modules in the N0003344 Battery Enclosure, an enclosed shelf for use in Candeo racks. Each battery shelf can accommodate two modules, for a total of eight batteries.

Small Candeo sample configurations

A basic 120 A system (see Figure 36 on [page 147](#)):

- initial power shelf equipped with a System Manager SP and five 1500 W rectifiers (N+1)
- initial distribution and battery connection panel with 18 plug-in positions for load protection devices and eight positions for battery protection devices

Figure 36
Basic 120 A Small Candeo configuration

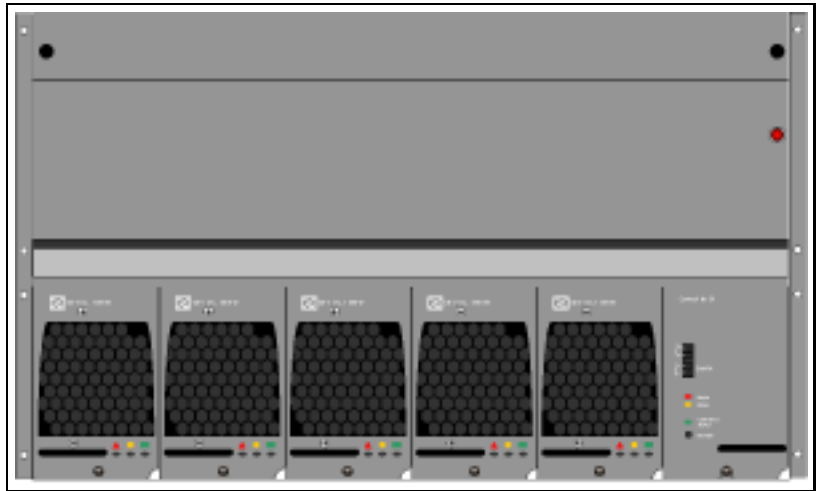

Example configuration #2

A 300 A system:


- initial power shelf equipped with a System Manager SP and five 1500 W rectifiers
- supplementary power shelf equipped with six rectifiers
- initial distribution and battery connection panel with 18 plug-in positions for load protection devices and eight positions for battery protection devices

Example configuration #3

A 300 A system (see Figure 37 on [page 149](#)):

- initial power shelf equipped with a System Manager SP and five 1500 W rectifiers
- supplementary power shelf equipped with six rectifiers
- initial distribution and battery connection panel with 18 plug-in positions for load protection devices and eight positions for battery protection devices
- supplementary distribution panel with 26 plug-in positions for load protection devices

Figure 37
Small Candeo 300 A system with supplementary distribution panel

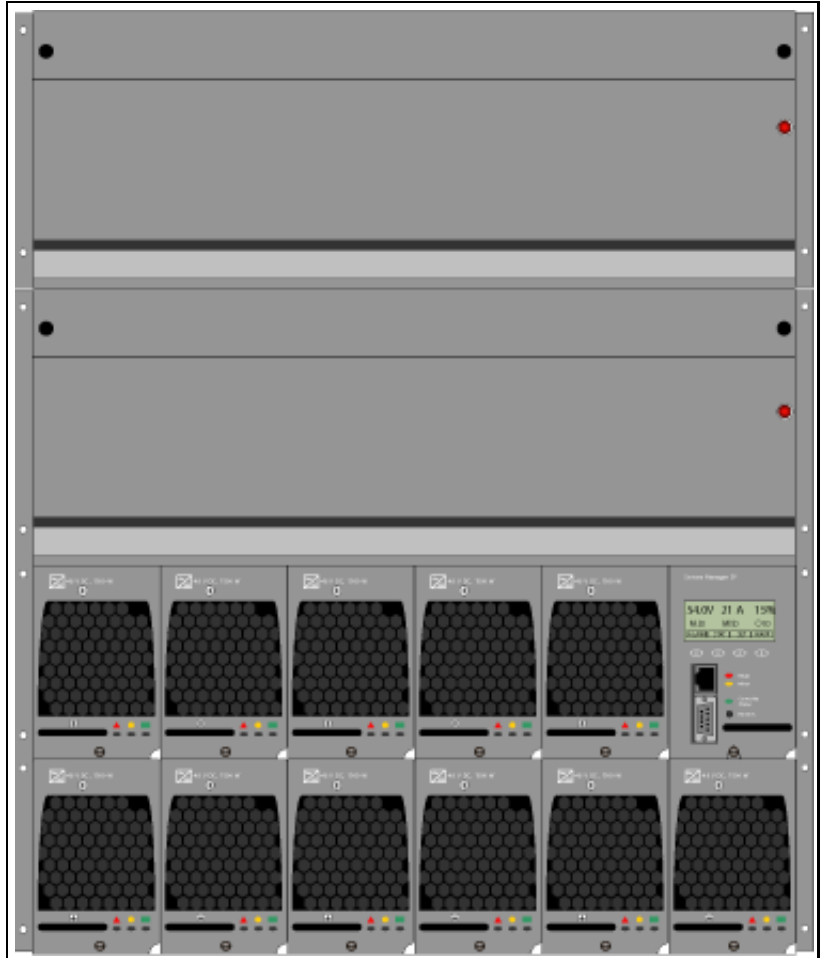

Installation reference guide

The Candeo system is easy to install. For detailed instructions, refer to *Candeo Power Systems Installation Manual AP6C75* (P0914426) for the Large Candeo system, or *Candeo SP 48300 Power System AP6C55AA*

Installation Manual (P7000289) for the Small Candeo system. The installation manuals cover the following topics.

Large Candeo

- 1** Site Preparation – Overview, tools and test equipment, precautions, and receiving materials.
- 2** Locating and Erecting Frames – Locating and installing the frame on various floor types and consideration for earthquake anchoring. Included also are procedures for isolating the frame for ISG (isolated system ground).
- 3** Cabling and Connecting – Basic rules, connecting AC to rectifiers, connecting DC cables from batteries, connecting DC loads and miscellaneous cabling. This section details all grounding for frame as well as battery return connections. Under connecting the DC load cables details on wiring and installing the load clips, fuse blocks and breakers are detailed. Miscellaneous cables details remote sensing to batteries, input ports and alarm connections, communication port connections to connect to RS-232, Ethernet or external modem.
- 4** Startup and Adjustment Procedures – The Candeo system comes pre configured with the Distribution 500 and Battery Connection Kit installed. In this section the rectifiers are added and the system is powered up and will go through a self test. At this point, see Chapter 5 “Configuring and Operating the Candeo Power System” in the user manual (UM6C75).
- 5** End of Job Routines and Turnover – This section covers end of job routines such as designating circuits, numbering frames, installing the top cover, optional doors and turn over to the customer.

Small Candeo

- 1** Preparation – Overview, tools and test equipment, precautions, and receiving materials.
- 2** Locating the system – Mounting the power system shelves in existing facilities and bridging the supplementary distribution panel, if furnished, to the initial distribution panel.

- 3 Cabling and connecting – Basic rules, specifications for connecting lugs, torque values for bolted lug to busbar connections, cabling layouts, and procedures for cabling and connecting the ground leads, AC supplies for the rectifiers, DC load cables, miscellaneous cables, and final connections at the batteries.
- 4 Startup and adjustment procedures – Installation of the rectifiers in the power shelves and initial startup, testing, and adjustment of the power system. Candeo SP 48300 power systems make use of a microprocessor-based controller, which controls the settings for the rectifiers. There are no hardware-based adjustments for the System Manager SP, but there are other configuration steps required. Refer to the chapter “Configuring and operating the system” in the user manual (P7000154).
- 5 End of job routines and turnover – End-of-job routines include designating frame numbers, rectifiers, and distribution circuits, and touching up damaged and/or scratched painted surfaces, then turning over the system to the customer.

Configuration reference guide

The Candeo system is easy to configure. For detailed instructions, refer to Candeo Power System User manual UC6C75 (P0914425) for the Large Candeo system, or *Candeo SP 48300 Power System AP6C55AA User Manual* (P7000154) for the Small Candeo system. The installation manuals cover the following topics.

Large Candeo

- 1 Overview of the Candeo Power System
- 2 System Description and Specifications
- 3 System Engineering
- 4 Configuring and Operating the Candeo Power System
- 5 Maintenance
- 6 Troubleshooting
- 7 Replacement Parts

8 Abbreviations and Acronyms

9 Technical Service Assistance

Small Candeo

1 Introduction – description of the system, equipment applications, and configurations

2 Specifications

3 Functional description

4 Configuring and operating the system

5 Communicating with the System Manager SP

6 Maintenance – routine maintenance, troubleshooting, replacement and addition of components

7 Recommended replacement parts

8 List of terms

9 Technical service assistance

Figure 38
Ground and logic return distribution – Large and Small Candeo power systems


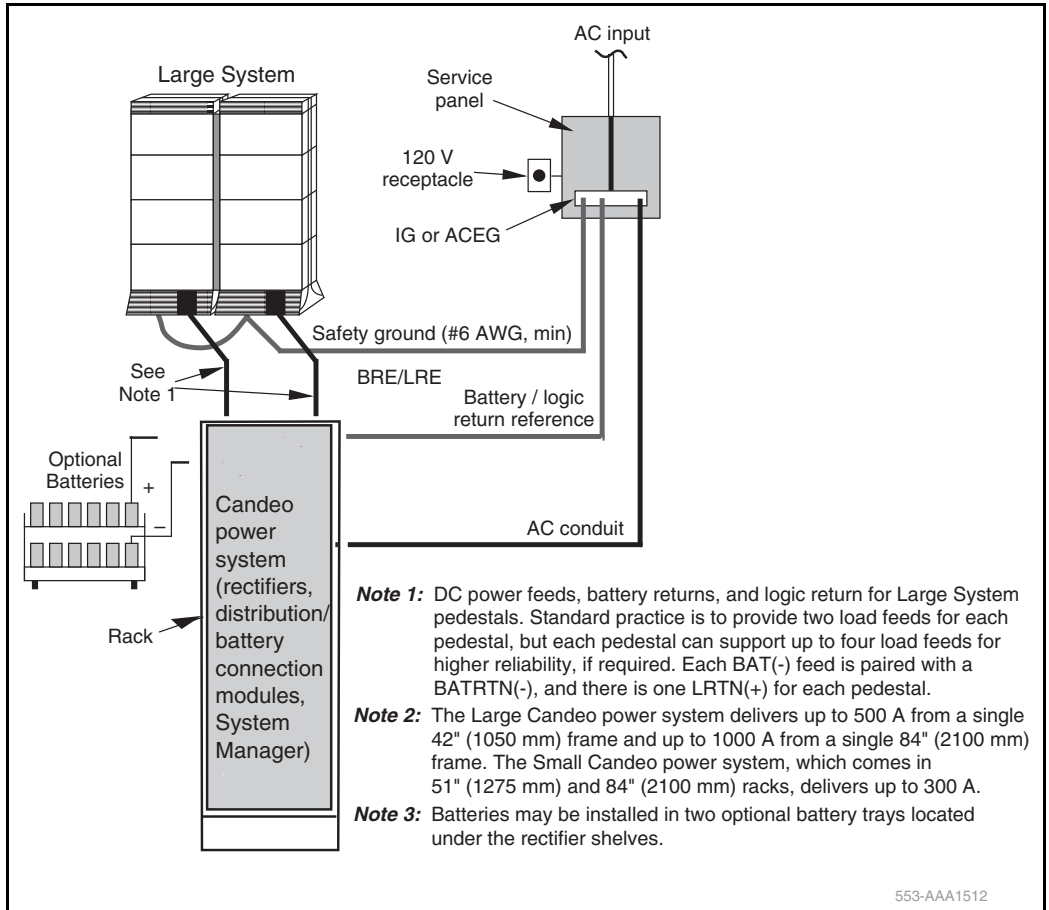



Figure 39
DC power – multiple-column distribution with Large Candeo

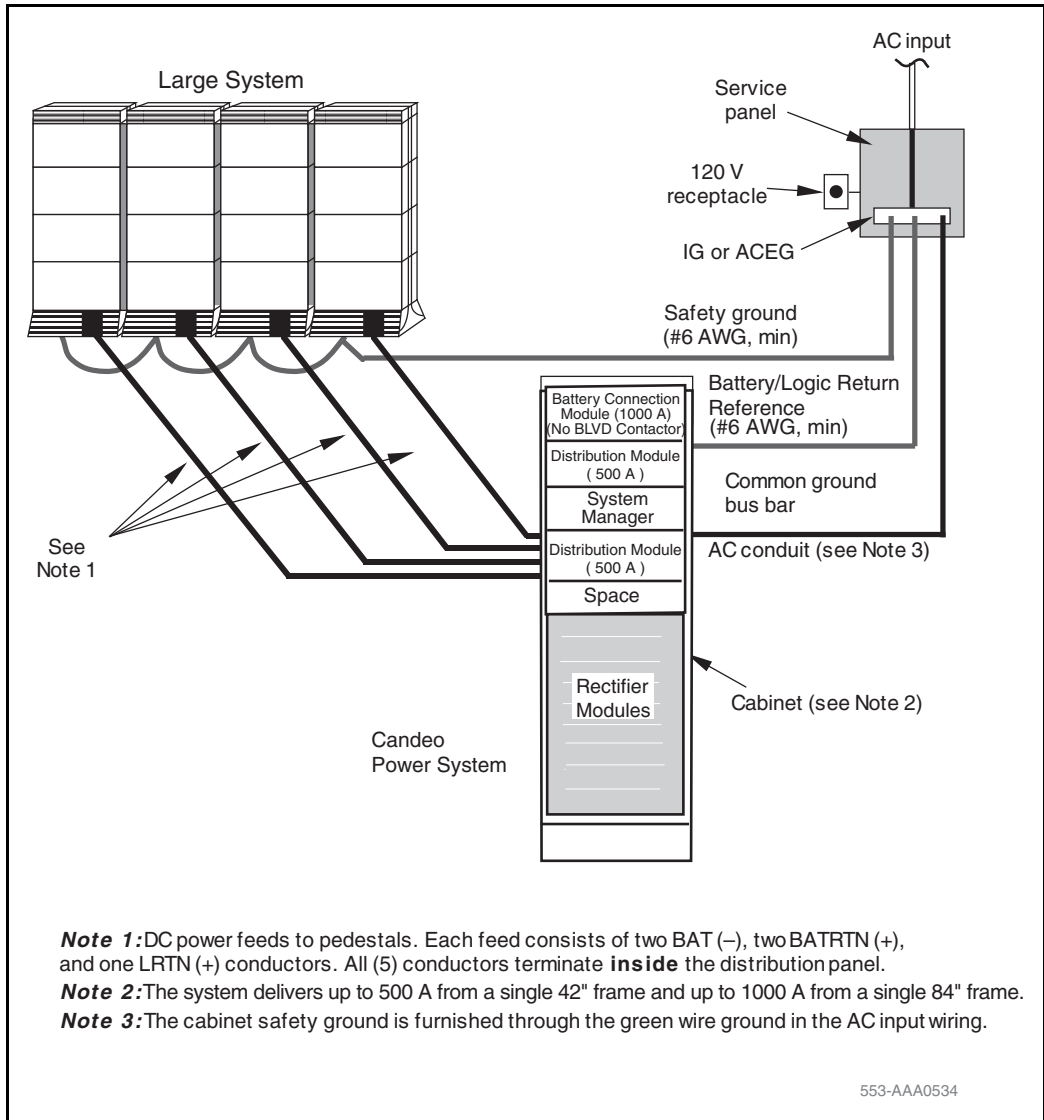

NT4N49AA 4-Feed PDU

The NT4N49AA 4-Feed PDU supports independent power feeds to each of four modules in a stack if required. However, in a typical installation where independent power feeds are not required, two jumper wires are provided to jumper adjacent battery leads. When the jumper wires are used, the four-wire PDU effectively provides the same “shared” power configuration provided by the existing DC PDU. Therefore, the new PDU is backward compatible and can replace an existing PDU unit in a stack if required.

Figure 40
Standard two-feed wiring

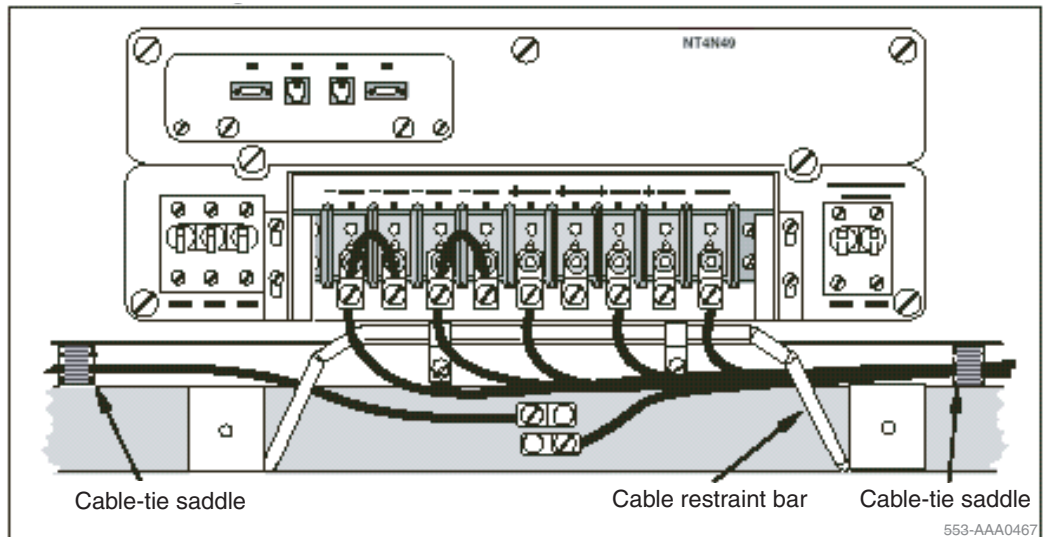


The NT4N49AA DC PDU:

- Supports four input circuits, implemented through the following terminal configuration:
 - four (negative) battery leads
 - four return leads
 - logic return lead
- Is fully backward compatible with the existing PDU it is replacing.
- Supports independent power feeds to each of four modules.

The four breakers (one for each module) in the existing DC PDU (NT4N50AA) are rated at 18 A each. The same breakers in the 4-feed PDU are rated at 28 A.

Figure 41
Optional 4-feed wiring

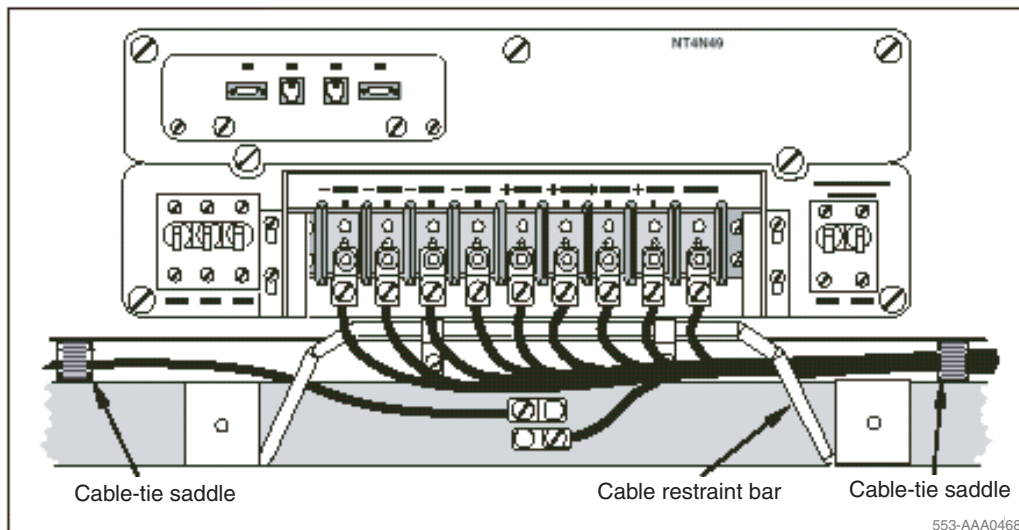

PDU Connections

A readily accessible disconnect device for input power is required.




CAUTION

Damage to Equipment

DC power for the pedestal must be provided with circuit protection of 30 A for each feed (– BAT 0, – BAT 1, – BAT 2 and – BAT 3 (see Figure 42 on [page 157](#)).

Circuit breakers must be located next to each other and labeled to show that both must be shut off to remove all power to the system.

Figure 42
PDU circuit protection

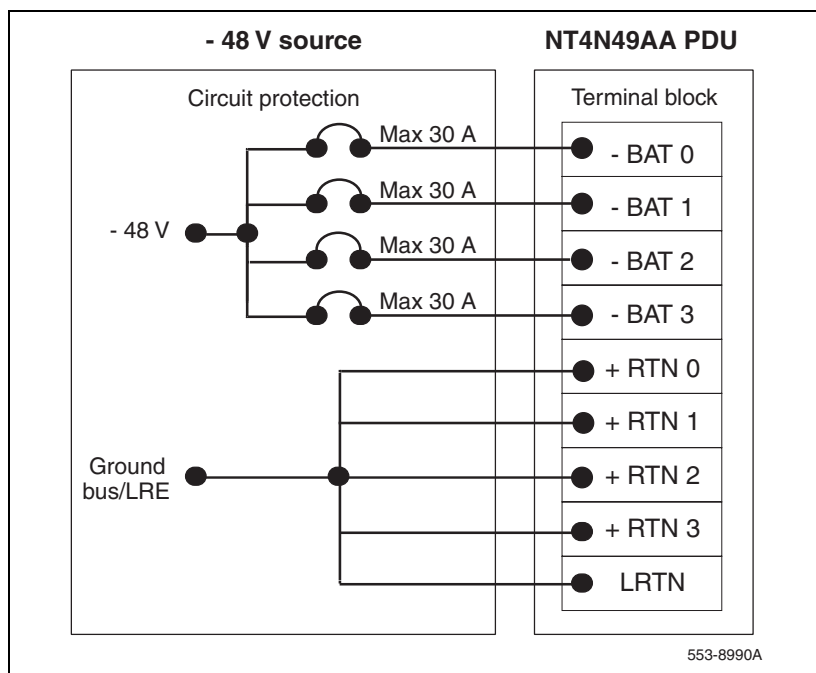

A maximum loop drop of two volts is allowed between the pedestal, or junction box, and the external power equipment. See Table 15 for allowable wire sizes. See “Selecting proper wire size” on [page 169](#) for detailed information on calculating wire size.

Table 15
Wire gauge requirements with two 30 A feeds (five wires)


Length	#8 AWG	#6 AWG	Single #4 AWG	Double #4 AWG
0–3 m (10 ft)	Yes	Yes	Yes	Yes
3–6 m (20 ft)	Yes	Yes	Yes	Yes
6–9 m (30 ft)	Yes	Yes	Yes	Yes
9–12 m (40 ft)	Yes	Yes	Yes	Yes
12–15 m (50 ft)	Yes	Yes	Yes	Yes
15–18 m (60 ft)	No	Yes	Yes	Yes
18–21 m (70 ft)	No	Yes	Yes	Yes
21–24 m (80 ft)	No	Yes	Yes	Yes
24–27 m (90 ft)	No	No	Yes	Yes
27–30 m (100 ft)	No	No	Yes	Yes
30–60 m (200 ft)	No	No	No	Yes
over 60 m (200 ft)	No	No	No	No
<p>Note 1: Two 30 A feeds are typically adequate for a column with four modules (five wires total — two 30 A feed pairs plus logic return).</p> <p>Note 2: If dual conduit is used, the wires must be run in battery/battery return pairs, with one pair in one conduit and the other pair, plus logic return, in the other conduit.</p> <p>Legend: Yes: Wire size is adequate for the distance. No: Wire size has too high a voltage drop and is inadequate for the distance.</p>				

The following equipment is located in the rear of each pedestal in Large System columns (see Figure 43):

- 1 The PDU distributes power to the entire column.
- 2 The field wiring terminal provides the connection point for wiring brought into the pedestal.
- 3 A circuit breaker is provided for each module in the column and for the blower unit.

All column circuit breakers will trip if a column thermal overload is detected or a DC power low-voltage condition is sensed. The system monitor checks the column temperature, cooling system status, and system voltage status, and controls alarms and line transfer states accordingly.

Figure 43
DC power equipment in the rear of the pedestal — NT4N49AA PDU

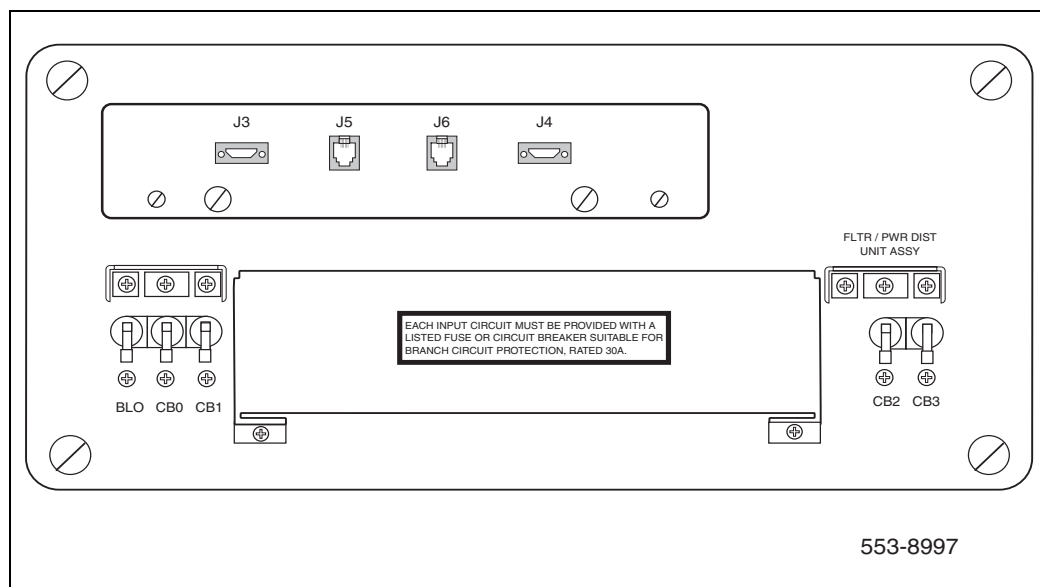

With the NT4N49AA PDU, the safety ground/protective earth wires and all wiring to the terminal block in the PDU must be neatly routed within the cable-tie saddles and under the cable restraint bar at the base of the pedestal (see Figure 44 on [page 160](#)). This ensures that there is room to install the PDU cover, safety cover, and rear grill.

Conduit is not required with the NT4N49AA PDU. However, 1-1/4 or 3/4 in. conduit can be used if local codes or individual installations require it. Conduit can be routed down through the column from overhead racks or up through the floor. Conduit clamps and the hardware to fasten the conduit are provided in the pedestal. If the NT7D0902 Rear Mount Conduit Kit is used, conduit can enter from the rear of the column (above the floor).

Figure 44
Cable routing in the rear of the pedestal – NT4N49AA PDU


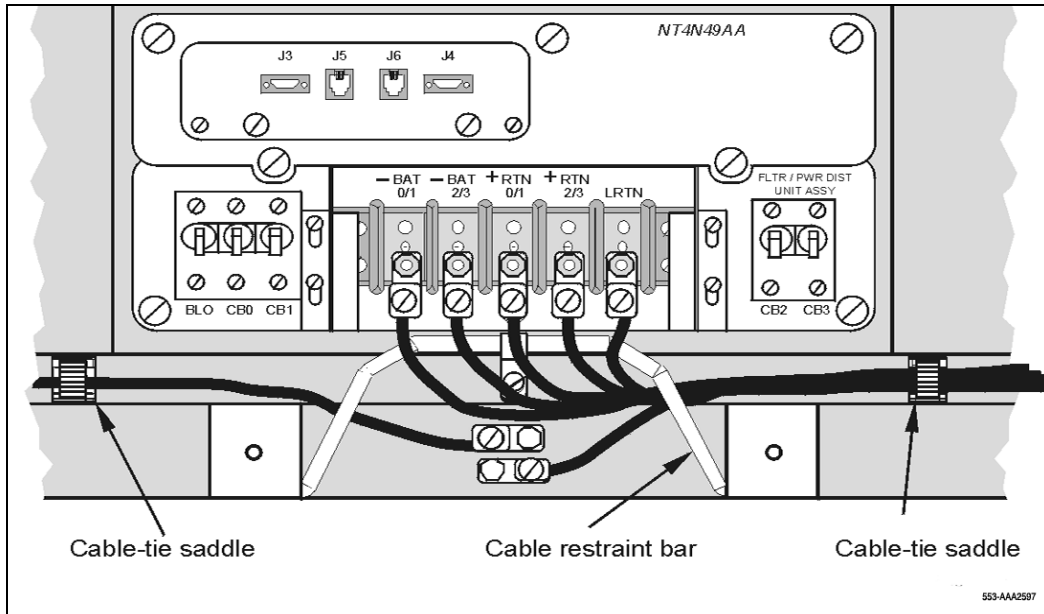


Figure 45
PDU to Candeo connections

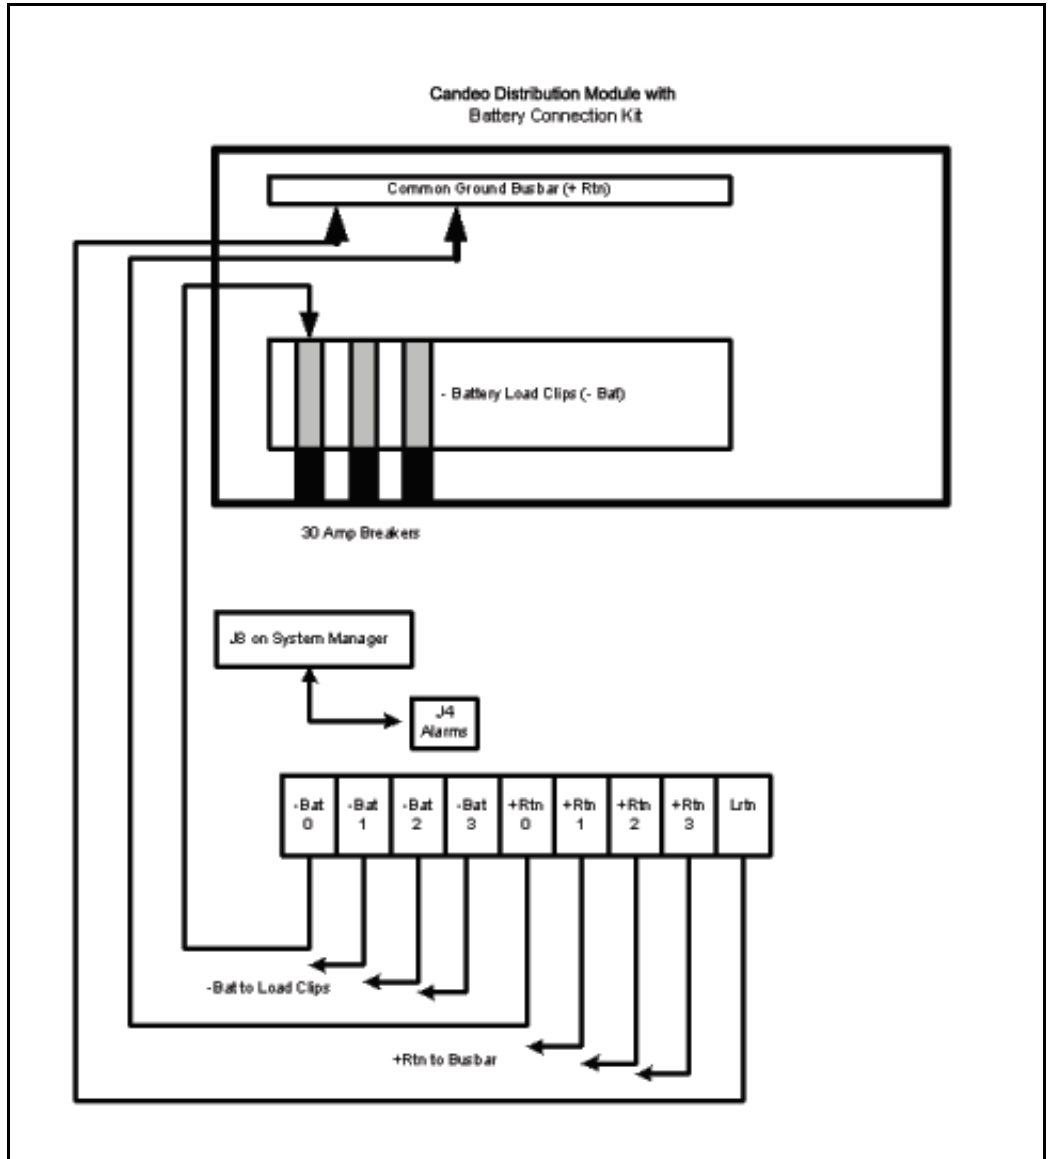

Power consumption

Before you can calculate the total power requirements for your system configuration, you must have consumption figures for each component within the system:

- IPE cards -- see Table 16 on [page 163](#)
- Modules -- see Table 17 on [page 164](#)

Electrical load varies with traffic load. The following assumptions have been made for the power consumption figures in Tables 16 and 17:

- 50% of digital and analog lines active (18 CCS)
- 75% of trunks active (30 CCS)

The power consumption of digital line cards does not vary greatly with traffic, as it may with analog line cards.

These figures also take into account the average efficiency of the module power supplies.

In general, however, the power consumption figures specified in Tables 16 and 17 are maximum ratings under worst case conditions. Using these figures

may result in over-engineering the requirements for UPS. Take power measurements in order to more accurately assess the UPS requirement.

Table 16
Power consumption – IPE cards

Circuit card	Power consumption (watts)
NT5K02 Flexible Analog Line card	26
NT5K17 Direct Dialing Inward card	29
NT5K19 DC5/AC15/RAN/Paging Trunk card	29
NT1P62 Fiber Controller card	26
NT7R52 Remote Carrier Interface	26
NT8D01 Controller card-4	26
NT8D01 Controller Card-4 (SMT)	26
NT8D01 Controller Card-2	26
NT8D02 Digital Line card	25
NT8D03 Analog Line card	26
NT8D09 Analog Message Waiting Line card	26
NT8D14 Universal Trunk card	28
NT8D15 E&M Trunk card	29
NT8D16 Digitone Receiver card	6
NTDU40/41 Media Card	30
NT1R20 Off-Premise Station Line card	YTD

Table 17 shows power consumption data for each fully configured module. Use this data to calculate rectifier and reserve power (battery).

Table 17
Module power consumption

Module	Power consumption (watts)
NT4N41 Core/Net Module	53.5
NT8D35 Network Module	240
NT8D37 IPE Module	460
Pedestal (with blower unit)	50

Power requirements for IP Phones

IP Phones require 16 V AC, 500 mA that is supplied by a local transformer. The appropriate transformer depends on the line voltage, which is different for each country. IP Phones also accommodate 48 V DC power.

IP Phones can be powered over the LAN by a Layer 2 switch such as the BayStack 460. For more information about power over the LAN, refer to *Converging the Data Network with VoIP* (553-3001-160).

Heat dissipation

Large Systems are equipped with cooling systems and do not have heat dissipation problems under normal applications.

To calculate cooling requirements, consider only power dissipation from the modules.

Btu (thermal load) = total power dissipation × 3.41
For air conditioning purposes, 1 ton = 1200 Btu

Calculating system power requirements

Add the power consumption (in watts) of all equipped modules in order to calculate system power.

The method for calculating system power is based on the number of modules and columns in the system, regardless of how many cards are initially equipped. The method ensures that the external power supply provides adequate capacity, under all conditions and all possible growth scenarios, for the modules installed.

Using a system power consumption worksheet (Worksheet 9: System power consumption on [page 503](#)), enter the quantity of each type of module, multiply by the power consumption per module, and then sum the individual module totals to obtain the total real power consumed by the system.

To calculate the current drain, divide the total real power consumption by the nominal input voltage. This gives the system current drain, or load in amperes. The worksheet shows nominal voltages of 208 (AC) input and 52 (DC) output. To calculate current drain for voltages other than those given in the worksheet, divide the total real power consumption by the desired voltage (such as 240 V AC or 54 V DC).

To calculate complex or apparent power (such as for AC wire and panel size or the UPS rating for AC reserve power), divide the total real power in watts by the efficiency (typically 0.6) to obtain the complex power in volt-amperes (see Worksheet 9: System power consumption on [page 503](#)).

Power requirements for upgrades

If you are upgrading an installed system, you can determine the total power consumption of the installed system in several ways. Two methods are listed below (the first method is more accurate than the second):

- 1 Measure current drain for the complete installation under actual operating conditions over at least a two-week period. Determine peak current drain from these measurements.
- 2 Measure idle (or near idle) current drain for the complete installation. Estimate peak current drain by multiplying the number of idle amperes by 1.5.

When you add or upgrade equipment, use either of these methods to determine existing current drain/power consumption. Use the guidelines in this document to determine the added power consumption.

The existing power plant may have to be replaced or its capacity may have to be increased to accommodate added equipment. Be sure to provide sufficient capacity to accommodate future growth.

System upgrades

Both AC- and DC-powered system upgrade packages are available, although most of the module-level upgrades will be DC.

- Consider an AC upgrade if the existing system is not using reserve power. If reserve power is later desired, one or more Uninterruptible Power Supply (UPS) units can be added.
- If the existing system already has battery backup, or if there is an existing DC power plant or excess rectifier capacity, a DC upgrade package is usually chosen. For DC upgrades, there are several approaches to system powering:
 - An existing external DC power plant may be used as is, or expanded if necessary, to power both the existing equipment and the new equipment.
 - A new external DC power plant, such as the Large or Small Candeo, may be purchased and installed to power both existing and new equipment.

Note: For all DC upgrades, carefully measure or calculate the system load of all equipment to make sure that the chosen power system will have enough capacity.

- Consider each upgrade case individually, taking into account the existing equipment, space available at the site, and customer preferences.

Powering upgraded systems from existing rectifiers

With CS 1000 Release 4.5, upgrades are available in module configurations only. The addition of one or more modules to an existing system requires careful planning.

In centralized power systems in a power cabinet or bay, rectifiers and additional power cabinets or bays may be added as required. If batteries are part of the upgraded system or a centralized power scheme is to be used, rectifier compatibility must be considered. In general, the preferred solution for upgrading power is to install or expand an external DC power plant, such as the Large or Small Candeo.

For detailed information on system upgrades, refer to *Communication Server 1000M and Meridian 1: Large System Upgrade Procedures* (553-3021-258).

Selecting proper wire size

Contents

This section contains information on the following topics:

Introduction	169
Typical wire values	169
Metric conversion	171
Calculating wire size	171
Sense lead wire size.	173
Input wire size	173

Introduction

This section provides guidelines for determining wire gauges to connect a pedestal to a rectifier, DC distribution panel, or other external power equipment.

Typical wire values

Table 18 on [page 170](#) lists typical wire sizes in AWG and circular mils for a given maximum current. Table 19 on [page 170](#) lists maximum allowable voltage drops for DC power system conductors.

Table 18
Wire characteristics

Wire gauge (AWG)	Circular mils	Maximum amperes
4	41 750	90
6	26 250	65
8	16 510	50
10	10 380	35
12	6530	25

Note 1: Maximum amperage is affected by many factors, including temperature and insulation. Consult a wire handbook for precise tables.

Note 2: Although gauges smaller than 8 AWG are shown in this table for reference, it is not recommended that sizes smaller than 8 AWG be used for any of the conductors listed in Table 19.

Table 19
Maximum allowable voltage drops

Conductor	From	To	Allowable voltage drop (max)
– Battery	Pedestal	– Distribution discharge	1.00
+ Battery return	Pedestal	+ Distribution ground	1.00
– Battery	Distribution	– Battery terminal	0.25
+ Battery return	Distribution	+ Battery terminal	0.25
– Battery	Rectifier	– Distribution charge	0.50
+ Battery return	Rectifier	+ Distribution ground	0.50

Note: “Distribution” means the DC power distribution panel (box).

Metric conversion

AWG measurements are not directly related to European Industry standard metric measurements. The following table provides guidance when converting from the AWG system to the metric system for the most commonly used power and ground conductor cables.

Table 20
Metric wire conversion

AWG Number	Industry standard Nominal (sq mm)	Resistance at 20 deg.C. (Ohm/100m)
2	35	0.05
4	25	0.08
6	16	0.13
8	10	0.20
10	6	0.33
12	4	0.63
14	2.5	1.00
16	1.5	1.40
18	1	2.00
20	0.75	2.90
22	0.5	4.60

Calculating wire size

Using the maximum current in a conductor, determine the length that the conductor must be to meet the required maximum voltage drop. When you

know the current, distance, and allowable voltage drop for a specific conductor, calculate the minimum wire size using the following formula:

$$CM = \frac{11.1 \times I \times D}{V}$$

where:

- CM = wire size required in circular mils
- I = current in amperes (use the maximum expected)
- D = distance in feet (to convert meters to feet, divide by 0.3048)
- V = maximum allowable voltage drop



CAUTION

Although the voltage drops listed in Table 19 on [page 170](#) are the maximum drops allowed, the insulation and temperature rating versus current often dictates a wire size that creates smaller voltage drops on short lengths. After using the formula, check the wire tables to make sure the temperature rise is acceptable.

The following examples show wire size calculations using the formula given above.

Example 1

A battery or battery return conductor from a DC distribution panel to a pedestal is 11.0 m (36 ft) long and must carry a maximum of 30 A with voltage drop of no more than 1 V:

$$CM = \frac{11.1 \times 30 \times 36}{1} = 11,988$$

Choosing a standard gauge equal to or larger than this wire size requires #8 AWG, which has a cross-section of 16 510 circular mils.

Example 2

A battery or battery return conductor from a DC distribution panel to the battery is 7.6 m (25 ft) long and must carry a maximum of 35 A:

$$CM = \frac{11.1 \times 35 \times 25}{0.25} = 38850$$

Choosing a standard gauge equal to or larger than this wire size requires #4 AWG, which has a cross-section of 41 740 circular mils.

Sense lead wire size

When sense leads are required, the loop resistance of the wire used to connect the \pm sense terminals at the rectifiers or DC distribution panel to the \pm terminals of the batteries must not exceed 2.5 ohms.

Input wire size

Table 21 on [page 174](#) provides a means for determining the size of wire used to connect the distribution box and the pedestal. A maximum total voltage drop of two volts is allowed between the pedestal and the external power equipment. Table 21 lists cable sizes that give acceptable voltage drops for a given cable length, and those that do not..

Table 21
Pedestal wire gauge requirements with two 30 A feeds (five wires)

Length	#8 AWG	#6 AWG	Single #4 AWG	Double #4 AWG
0–3 m (10 ft)	Yes	Yes	Yes	Yes
3–6 m (20 ft)	Yes	Yes	Yes	Yes
6–9 m (30 ft)	Yes	Yes	Yes	Yes
9–12 m (40 ft)	Yes	Yes	Yes	Yes
12–15 m (50 ft)	Yes	Yes	Yes	Yes
15–18 m (60 ft)	No	Yes	Yes	Yes
18–21 m (70 ft)	No	Yes	Yes	Yes
21–24 m (80 ft)	No	Yes	Yes	Yes
24–27 m (90 ft)	No	No	Yes	Yes
27–30 m (100 ft)	No	No	Yes	Yes
30–60 m (200 ft)	No	No	No	Yes
over 60 m (200 ft)	No	No	No	No
<p>Note: Two 30 A feeds are typically adequate for a column with four modules (five wires total — two 30 A feed pairs, BAT(–) and BATRTN(+), plus logic return LRTN(+).</p> <p>Legend: Yes: Wire size is adequate for the distance. No: Wire size has too high a voltage drop and is inadequate for the distance.</p>				

Preparing a system installation plan

Contents

This section contains information on the following topics:

Introduction	176
Creating an installation plan	177
Fire, security, and safety requirements	179
Equipment room requirements	182
Grounding and power requirements	191
Cable requirements	215
Preparing a floor plan	218
Estimating floor loading	222
Creating a building cable plan.	223
Preparing for delivery	228
Preparing for installation.	229

Introduction



WARNING

Before a Large System can be installed, a network assessment **must** be performed and the network must be VoIP-ready.

If the minimum VoIP network requirements are not met, the system will not operate properly.

For information on the minimum VoIP network requirements and converging a data network with VoIP, refer to *Converging the Data Network with VoIP* (553-3001-160).

Planning for system installation affects the installation cost, as well as operation and maintenance, and can have an overall effect on system performance. Consider the following requirements (in addition to local and national building and electrical codes) when you plan a system installation.

Select and evaluate sites according to the requirements in this document and the following criteria:

- Space:
 - The site must provide adequate space for unpacking, installation, operation, potential expansion, service, and storage. The site must provide space for sufficient cooling. You may need additional space for a maintenance and technician area.
- Location:
 - The location should be convenient for equipment delivery and close to related work areas. You must consider the location of related equipment (such as the distribution frame and batteries) and the cable limitations when selecting the site.
- Grounding and power:
 - Proper grounding and sufficient power facilities must be available.

- Structural integrity:
 - The floor must be strong enough to support anticipated loads and, if applicable, the ceiling must be able to support overhead cable racks.

Creating an installation plan

To assist with the development of the installation plan, create an Installation Outline and a Milestone Chart.

Installation outline

Use Table 22 on [page 178](#) as a guide for preparing a detailed installation plan.

Table 22
Installation plan outline

Procedure	Requirements
Researching site requirements	<div><div>—</div>Determine fire, security, and safety requirements</div> <div><div>—</div>Determine equipment room requirements</div> <div><div>—</div>Determine grounding and power requirements</div> <div><div>—</div>Determine cable requirements</div>
Planning the site	<div><div>—</div>Prepare a floor plan</div> <div><div>—</div>Estimate floor loading</div> <div><div>—</div>Prepare the building cabling plan</div>
Preparing for delivery and installation	<div><div>—</div>Prepare for delivery</div> <div><div>—</div>Prepare for installation</div>

Milestone chart

Planning and monitoring site preparation activities is easier when you use a milestone chart. A milestone chart is a general site planning schedule showing the sequence of activities necessary to complete a job.

Table 23 on [page 179](#) lists typical activities included in a milestone chart. For a complex site, you must create a more detailed chart.

Table 23
Milestone chart

Task	Action
1	Select the site.
2	Plan fire prevention and safety features.
3	Plan the equipment room layout.
4	Plan grounding and power.
5	Plan cable routes and terminations.
6	Plan and start any renovations to the equipment room.
7	Continue site construction and renovation tasks.
8	Install grounding, power, air conditioning, and heating.
9	Install special rigging, such as overhead cable racks and distribution frame equipment, as required.
10	Test site wiring to ensure that minimum requirements are met.
11	Complete construction and ensure that grounding and power are in place.
12	Test air conditioning and heating systems.
13	Make equipment delivery arrangements.
14	Complete equipment room inspection, identifying and resolving any delivery constraints.

When you prepare a milestone chart, consider not only individual operations, but the overall installation schedule. The milestone chart should show the necessary operations in order and may assign a start and end date for each activity.

Fire, security, and safety requirements

Building, fire, and safety codes establish the degree of protection required for an installation. Additional information is available from the National Fire Protection Association (NFPA) in “Standard for the Protection of Electronic Computer/Data Processing Equipment” (NFPA 75) and “National Electrical Code (NEC)” (NFPA 70).

Fire protection and prevention

Expertise is required to properly locate and install:

- 1 Sprinkler heads
- 2 Fire and smoke sensing devices
- 3 Other fire extinguishing equipment

During the planning stage, consult local codes, experts, insurance underwriters, and local building authorities.

You can implement some fire precautions when an equipment area is constructed. For example, extend walls from floor to ceiling, and construct walls, floor, and dropped ceiling of noncombustible material.

If the structural floor is made from combustible materials, cover it with a noncombustible covering and remove all debris between the raised and permanent floors before the system is installed. If there are power connections beneath a raised floor, use waterproof electrical receptacles and connectors.

You can install shatterproof windows and sprinklers outside and above the windows to keep fire from spreading from an adjacent room or building. The roof or floor above the equipment area must be watertight. Design ducts and plumbing for air-conditioning systems to keep fire, heat, and smoke from spreading from one part of a building to another. Install smoke detectors in all appropriate places.

Regularly check services such as steam, water, and power, and inspect pipes for excess condensation, leaks, or corrosion.

Fire extinguishing systems

In most cases, carbon dioxide or water sprinkler systems are the recommended fire extinguishing systems.

Dry-pipe water sprinklers are strongly recommended. This type of system interrupts power to the room and opens a master valve that fills the overhead sprinklers.

Carbon dioxide systems are also effective in containing a fire, but they quickly exhaust the oxygen supply. If you use a carbon dioxide system, you must install an alarm to warn site personnel when carbon dioxide is released. For health and safety reasons, employees must be evacuated within 30 seconds of the release.

**DANGER**

Nortel does not recommend using Halon or any other fire extinguishing system that is not described above.

Security precautions

You may need to extend and improve existing building security to provide adequate protection for the equipment. For example, you can install safeguards such as tamper proof keylock door controls and electrically taped glass doors and windows that can tie into an alarm system. You can also install a monitoring unit using closed-circuit television.

Note: Electric locks, such as push button access code or card reader locks, are not recommended unless you provide a battery backup or a key override.

Protect critical data, such as business records, by storing backups well away from the equipment room. A regular updating program is highly recommended.

Safety procedures and training

Company personnel should be taught how to respond to emergencies; some companies designate trained individuals as security members. Training can include when and how to evacuate personnel and records, notify the fire department, shut off all electrical power, and handle fire extinguishers properly.

In addition, install temperature and humidity monitoring devices (both visual and audible alarm signals) in equipment and storage rooms so people can respond quickly to an emergency.

Occupational noise exposure

If employees are subjected to noise levels exceeding local standards (for example, the levels listed in 1910.5 of the Occupational Safety and Health Administration (OSHA) Standards), initiate administrative and engineering controls. If these controls do not reduce sound levels effectively, provide protective equipment.

Note: The acoustic noise generated by a column ranges from 45 dBA to 60 dBA (decibels “A”-weighted).

Equipment room requirements

The environment for the system (and for storing spare parts) can influence system performance and reliability. Temperature, humidity, and other environmental factors, such as static electricity, must be controlled to meet system operating requirements.

Space requirements

Space and equipment layout requirements differ with each installation. When you plan the site, consider the following requirements:

- Primary storage
- Secondary storage
- Maintenance and technician space

Primary storage

The floor area required for a system depends on the number of columns, the length-to-width ratio of the area, and the location of walls, partitions, windows, and doors. To determine the exact layout required, prepare a detailed floor plan after regarding all of the requirements in this chapter.

Although operating needs determine the general location of terminal devices, these devices must not be located beyond the maximum distances defined for their interface cards. Wall jacks and outlets must be provided for all devices located in the equipment room.

Secondary storage

Provide space in the equipment area for storing disks, printer paper, printouts, and daily reports. A secure storage room for spare parts is recommended.

Whenever possible, maintain the same environmental conditions in the equipment room and storage areas. If it is not possible to maintain the environment of the storage area exactly the same as the environment of the operating equipment, give stored materials time to adjust to the equipment room environment before using them.

Maintenance and technician space

You can use the maintenance and technician area as an online work center and a place to store tools, test equipment, system documents, and spare parts. The area should have good lighting and convenient access to the system.

Typical items in a maintenance and technician area include:


- Shelves for instruction books
- Spare parts storage room
- Paper storage area
- Locking cabinet or storage area for backup disks
- Table or desk
- Terminal, printer, or equivalent device

During regular system operation, a terminal, or a modem, or both must be connected permanently to the system to provide a constant I/O interface. You can use more than one terminal or modem. Plan for surface space, power outlets, and the availability of the terminals/modems before installation.

Temperature and humidity control

Frequent and extended system operation above recommended temperature limits can degrade system reliability. Low humidity can increase static electricity build-up, while high humidity can affect the performance of disks and printers.

Take temperature readings 76 cm (30 in.) from the front of the system. Table 24 shows system operating requirements.



DANGER

Damage to Equipment

Do not expose equipment to absolute temperature limits for more than 72 hours. Do not place heat sources (such as floor heaters) near the equipment.

Table 24
Operating environment

Equipment	Temperature and humidity considerations
Large System	Recommended: <ul style="list-style-type: none">— 15° to 30°C (59° to 86°F)— RH 20% to 55%, non-condensing Absolute: <ul style="list-style-type: none">— 10° to 45°C (50° to 113°F)— RH 20% to 80%, non-condensing— temperature change less than 10°C (18°F) per hour
Telephones	Absolute: <ul style="list-style-type: none">— 0° to 50°C (32° to 122°F)— RH 20% to 80%, non-condensing
Other terminal devices (such as personal computers, data sets, and printers)	Refer to the specific documentation or manufacturer's guidelines

If you operate the system within recommended temperature limits, there are no thermal restrictions on any equipment. If you operate the system above

recommended limits (it must remain within absolute limits), be sure to locate disk drive units in one of the lower two modules in a column.

Follow the specifications listed in Table 25 to store or transport equipment.

Table 25
Storage environment

Equipment	Temperature/humidity considerations
Large System (without disk drive units)	<ul style="list-style-type: none"> — -50° to 70°C (-58° to 158°F) — RH 5% to 95%, non-condensing
Telephones	<ul style="list-style-type: none"> — -50° to 70°C (-58° to 158°F) — RH 5% to 95%, non-condensing
RMD (Compact Flash)	<ul style="list-style-type: none"> — -25° to -70°C (-13° to -94°F) — RH 20% to 80%, non-condensing
Media Gateways	<ul style="list-style-type: none"> — -50° to 70°C (-58° to 158°F) — RH 5% to 95%, non-condensing
Other terminal devices	Refer to the specific Nortel publication or the manufacturer's guidelines
Note: Temperature changes must be less than 30° C (54° F) per hour for storage and during transportation.	

Air conditioning guidelines

Use the following guidelines to estimate air conditioning requirements. Exact requirements must be determined by a qualified air conditioning engineer.

- 1 The air conditioning system in equipment areas must handle:
 - a the heat produced by the equipment, room personnel, and lighting; and,
 - b the heat that comes through walls, windows, floors, and ceilings.

- 2 A stable ambient operating temperature of approximately 22 degrees C (72 degrees F) is recommended. The temperature differential in the equipment room must not exceed ± 3.0 degrees C (± 5 degrees F).

Note: For systems with reserve power equipment, consult the manufacturer's specifications for recommended operating temperatures.

- 3 Heat dissipation from a system is estimated in BTUs per hour (Btu/hr). You can estimate the amount of air conditioning required at a rate of one ton of refrigeration for every 12 000 Btu/hr of heat generated in the equipment area plus one ton for each 500 sq ft of floor space.

Note: Each person in the equipment room generates 600 Btu/hr.

**CAUTION****Damage to Equipment**

Because digital systems require constant power (even if the system is idle), they generate heat continuously. Air conditioning requirements must be met at all times.

- 4 Table 26 on [page 187](#) shows the maximum power dissipation in the form of heat for each module. The measurements are the same for AC- and DC-powered modules.

Table 26
Heat dissipation – modules

Module	Heat dissipation	
	Watts	Btu/hr
NT4N41 Core/Network	360	1230
NT8D35 Network	240	820
NT8D37 Intelligent Peripheral Equipment	460	1569
Signaling Server	125	
Note: Thermal load (Btu/hr) = total power dissipation (watts) × 3.41		

5 Table 27 shows the maximum heat dissipation for DC-power rectifiers supported by Nortel.

Table 27
Heat dissipation – rectifiers

Rectifier	Heat dissipation	
	Watts	Btu/hr
NT5C06 25 A	130	444
NT6D52 30 A	175	600
A0354954 100 A	580	1980
Small Candeo (SP48300) 30 A	120	409
Large Candeo (50 A)	200	682
MFA150 25 A	150	512
Note 1: Thermal load (Btu/hr) = total power dissipation (watts) × 3.41		

Other environmental factors

In addition to temperature and humidity, many environmental factors must be controlled in equipment areas. The environmental factors that must be controlled include:

- Static electricity
- Vibration
- Electromagnetic and radio frequency interference (EMI/RFI)
- Dust
- Lighting
- Earthquake bracing
- Structural features

Static electricity

Electronic circuits are extremely sensitive to static discharge. Static discharge can damage circuitry permanently, interrupt system operation, and cause lost data.

Static electricity can be caused by physical vibration, friction, and the separation of materials. Other common causes of static electricity build-up are low humidity, certain types of carpeting, the wax on equipment room floors, and plastic-soled shoes. The human body is the most common collector of static electricity. A combination of plastic-soled shoes, certain flooring materials, and low humidity can cause body charges in excess of 15 kV.

Note: IEEE Standard 142 recommends that flooring resistance be more than 25 000 ohms and less than 1 million megohms, measured by two electrodes 0.91 m (3 ft) apart on the floor. Each electrode must weigh 2.2 kg (5 lb) and have a dry flat contact area of 6.35 cm (2.5 in.) in diameter.

Antistatic wrist straps, sprays, and mats are available. Nortel recommends at least using an antistatic wrist strap whenever you work on equipment.

Vibration

Vibration can cause the slow deterioration of mechanical parts and, if severe, can cause serious disk errors. Avoid structure-borne vibration and consequent noise transferred to the equipment room. Raised floors must have extra support jacks at strategic places to prevent the transmission of vibration.

Limit vibration in an office environment to a frequency range of 0.5–200 Hz and a G-force magnitude of 0.1 G (in accordance with the Bellcore “Network Equipment Building Systems Generic Equipment Requirements” specification TR-EOP-000063).

Electromagnetic and radio frequency interference

Sources of electromagnetic and EMI/RFI located close to equipment can cause problems with system operation. Common EMI/RFI sources known to disturb system operation include:

- Thunderstorms, static electricity, and high-voltage power lines

- Radar, broadcast stations, and mobile communications
- Power tools, appliances (such as vacuum cleaners), and office business machines (such as copiers)
- Industrial machines and ultrasonic cleaners
- Vehicle ignition, arc welders, and dielectric heaters
- Dimmer switches

Dust

Accumulated dust and dirt can degrade system reliability and performance. Dust and dirt can:

- Scratch the contacts on circuit cards causing intermittent failures
- Have conductive contents that increase static electricity in the environment
- Cause components to operate at higher temperatures

Average dust density for an office environment must be 0.00014 g/m³ or better. False ceilings and tiled floors help maintain dust density requirements.

Lighting

Lighting illumination of 50 to 75 footcandles measured 76 cm (30 in.) above the equipment room floor is recommended. Avoid direct sunlight in the equipment room to prevent malfunctions by devices with light sensors (such as disk units).

Lighting must not be powered from the equipment room service panel. For large system installations, consider provisions for emergency lighting in the equipment room.

Earthquake bracing

Earthquake (seismic) bracing is required or should be considered in some locations. See *Communication Server 1000M and Meridian 1: Large System Installation and Configuration* (553-3021-210) for detailed instructions on installing earthquake bracing.

Structural features

Use sealed concrete, vinyl, or mastic tile for flooring and ensure that it meets the floor loading requirements described later in this document. Avoid using sprayed ceilings or walls.

Grounding and power requirements

This section describes isolated and non-isolated ground topologies, commercial power source, auxiliary power, and power failure transfer unit (PFTU) requirements. If there is a conflict between information in this chapter and a local or national code, follow the code.

Grounding



DANGER OF ELECTRIC SHOCK

If you fail to follow grounding procedures, the installation can be unsafe for personnel, unprotected from lightning or power transients, subject to service interruptions, and subject to degraded performance.

Power and ground must originate from the supply service (equipment room service panel or transformer), where the ground conductor and the neutral conductor connect and are referenced to the main building ground. All power feeds should contain a separate safety conductor (green wire).



IMPORTANT!

Do not use the main building ground directly as the ground reference for the system.

The equipment service panel must be located in the equipment room. This service panel must not service lighting, air conditioning, heating, generators, or motors. Nortel strongly recommends that supply conductors be dedicated and uninterrupted from a building primary source to the dedicated equipment room service panel.

Power is supplied to the service panel by a power transformer. The transformer typically provides secondary voltages of 208/120 V three-phase four-wire “wye” service, 240/120 V single-phase four-wire “delta” service, or 240/120 V single-phase three-wire service. Collectively, these secondary voltages are referred to as “nominal 208/240 V AC” throughout system documentation.

A dedicated power transformer for the system and associated auxiliary and telephone operating company interface equipment is preferred; however, a shared transformer or distribution is acceptable. (Figures 46 through 49 starting on [page 198](#) illustrate the differences between dedicated and shared distribution.)



WARNING

Do not use ground fault circuit interrupt (GFCI) devices on system AC power feeds

Single point ground (SPG)

The system requires a single point ground (SPG) topology for all equipment and all associated auxiliary equipment.

The system has several types of grounds and several types of signal returns that are generally referred to as “grounds.”

- In AC systems, there is a logic return (LR or LRTN) and a green wire frame ground, called the AC equipment ground (ACEG), that is typically part of the input power cord.
- In DC systems, there is a logic return (LR or LRTN) and a battery return (RTN), as well as an AC equipment ground (ACEG) green wire on the input to the rectifier(s).

- All systems must have an external hardwired frame ground connection (also called the personal hazard safety ground). The frame ground is connected internally to the ACEG green wire, but because it is hardwired it ensures that the equipment has a ground connection even if the system is “unplugged.”
- External Communications wiring that meet the requirements as stipulated in NEC Article 800-30 FPN 4 require the use of lightning protection. The cable sheaths, and protection grounds must be installed per NEC Article 800 - 33, and Article 800 - 40 (b).

For SPG topology, each of these grounds from each of the columns, must terminate at a single connection point before attaching to the actual ground reference at the service panel or transformer. Physically, the SPG is usually a copper bar or plate (referred to as a “bus”). In its simplest form, the SPG (the single connection point) can be an isolated ground bus or ACEG bus in the service panel or transformer.

In some conditions, a logic return equalizing (LRE) bus is needed. Multiple-column systems, for example, often require an LRE bus as a ground connection point. The LRE serves as the point where the logic return (LR or LRTN) wires from different columns are consolidated before connecting to the SPG.

Two LRE assemblies are available from Nortel:

- NT6D5304 Ground Bus/LRE – Small (provides up to nine connections); typically used with AC-powered systems
- NT6D5303 Ground Bus/LRE – Large (provides up to 48 connections); typically used with DC-powered systems

SPG requirements

Follow these requirements for the SPG:

- All ground conductors must be identified according to local codes and terminated permanently.
- Terminations must be accessible for inspection and maintenance during the life of the installation.

- All grounding conductors must be continuous, with no splices or junctions, tagged “Do not remove or disconnect,” and insulated against contact with foreign grounds.
- Grounding conductors must be no load, non-current-carrying cables, under normal operating conditions.
- The ground interface, in a steel-framed building, must have a single connecting reference, located at the service panel, to the building steel on the same floor as the system (or within one floor).

Note: Nortel does not recommend the use of building steel as an integral part of the ground system. The building steel is a reference point only.

The DC resistance of the system ground conductor, which runs from the system to the main building ground, must be as close to zero as possible. The maximum total resistance on all runs within the building must not exceed 0.5 ohms.

All voice and data lines that run outside to the building, leaving or entering the system, must have fault protectors that connect directly to an approved ground. Fault protectors provide protection from external faults and transients on data lines. Refer to the 800 section of the NEC Handbook, 1996 edition or later, for what constitutes an approved ground.

To meet system requirements for an SPG:

- Installation must adhere to the SPG requirements.
- The building ground must meet country-specific regulations (example: in the U.S., the National Electrical Code (NEC) regulations must be followed, and in Canada, the Canadian Electrical Code (CEC)).
- Use the proper wire size for the system ground reference conductor.

Isolated and non-isolated ground

You can install the system with an isolated or non-isolated ground topology. Nortel strongly recommends using an isolated ground for grounding system integrity. Use non-isolated ground systems only where they are required by code.

In an isolated ground system, the dedicated isolated ground bus bar in the service panel serves as the ground window. It is used for all AC safety grounds and logic returns. It also accommodates a conductor that references the (+) battery bus in DC systems.

In addition, one or more isolated LREs can be located outside of the service panel, but they must connect to ground exclusively through the isolated ground bus.

Isolated IG-L6-20 or IG-L6-30 orange receptacles are used with an isolated ground system. All ground wiring for isolated ground receptacles must terminate on the dedicated isolated ground bus according to applicable codes.

In a non-isolated ground system, the ACEG connects to the metal panel, and any associated conduit can also contact various structural metal. Because this ground alone is not adequate for the system, a dedicated ground conductor connected to the main building ground is used for the main ground window to terminate logic returns and reference the (+) battery bus. Frame grounds connect to the ACEG.

Non-isolated L6-20 or L6-30 brown receptacles are used with a non-isolated ground system.

Note: For more detailed information on receptacles, see “Commercial power source” on [page 202](#).

All circuit breakers must be clearly labeled in both isolated and non-isolated ground AC panels.

Figures 46 through 49 starting on [page 198](#) illustrate the differences between (a) dedicated and shared distribution, and (b) isolated and non-isolated ground systems.

The following notes apply to Figures 46 through 49.

Note 4: Run the ground conductor in the same conduit with the phase and neutral conductors. Use the appropriate NEC table to determine the correct wire size.

Note 5: Use of an isolation transformer is recommended. Locate it as close as possible to the AC panel.

Note 6: You must bond the Ground electrode conductor to a recognized ground, such as a vertical ground riser or a building principal ground. Keep it at a low impedance and do not run it in a conduit. Ground in accordance with the NEC/CEC guidelines.

Note 7: This conductor may not be smaller than number 6 AWG.

Note 8: Locate the dedicated equipment service panel in the equipment room.

Note 9: Amperage level depends on the equipment being fed; refer to the *Communication Server 1000M and Meridian 1: Large System Installation and Configuration* (553-3021-210).

Note 10: For AC systems, this goes to the Logic Return Equalizer (may not be required where enough terminations exist on the IG bus). For DC systems, this goes to the DC ground reference.

Note 11: Bond Telco/OSP shields, bonds, and protection at an approved reference per NEC Article 800 and CEC Article 10-1000, and Appendix B 36-310 (9). Do not bond them at the LRE or Service Panel.

Note 12: It is required that all 120 VAC service drops in the equipment room have IG-type receptacles. Each receptacle must have an individual hot, neutral, and IG ground conductor run in the same conduit (NEC 250-74 Exception 4, CEC 10-906(8)). Some local codes require an additional bonding lead to bond the outlet box back to the frame panel.

Note 13: Label circuits at both ends in accordance with NEC 110-2/CEC guidelines. Identify NEMA numbers for IG-type receptacles at the panel and outlet as follows:

- 120V @ 15A = IG.5.15
- 208V @ 20A = IG.L6.20
- 208V @ 30A = IG.L6.30

Note 14: In Canada, it may be required that the IG ground bus be bonded to the panel frame.

Note 15: Refer to “Auxiliary power” on [page 208](#) for more information.

Note 16: An alternate earthing electrode, if required, must be installed at a minimum of 1.8 m (6 ft) from the building earth reference.

Note 17: If you use PVC conduit, a dirty grounding conductor may be required.

Note 18: Label circuits at both ends in accordance with NEC 110-2/CEC guidelines. Identify NEMA numbers for non IG-type receptacles at the panel and outlet as follows:

- 120V @ 15A = 5.15
- 208V @ 20A = L6.20
- 208V @ 30A = L6.30

Dedicated transformer in an isolated ground system

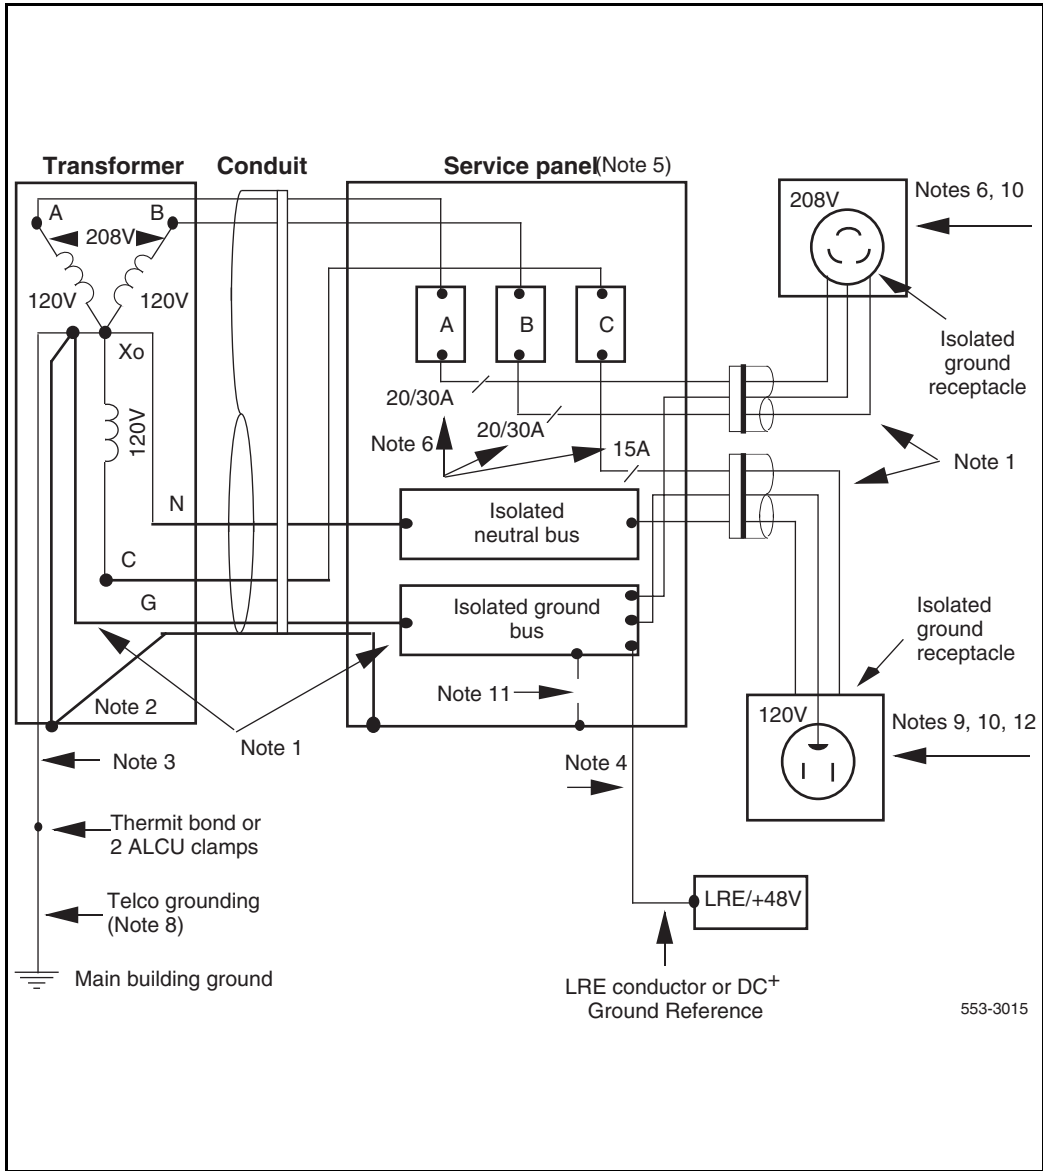


Figure 47
Dedicated transformer in a non-isolated ground system

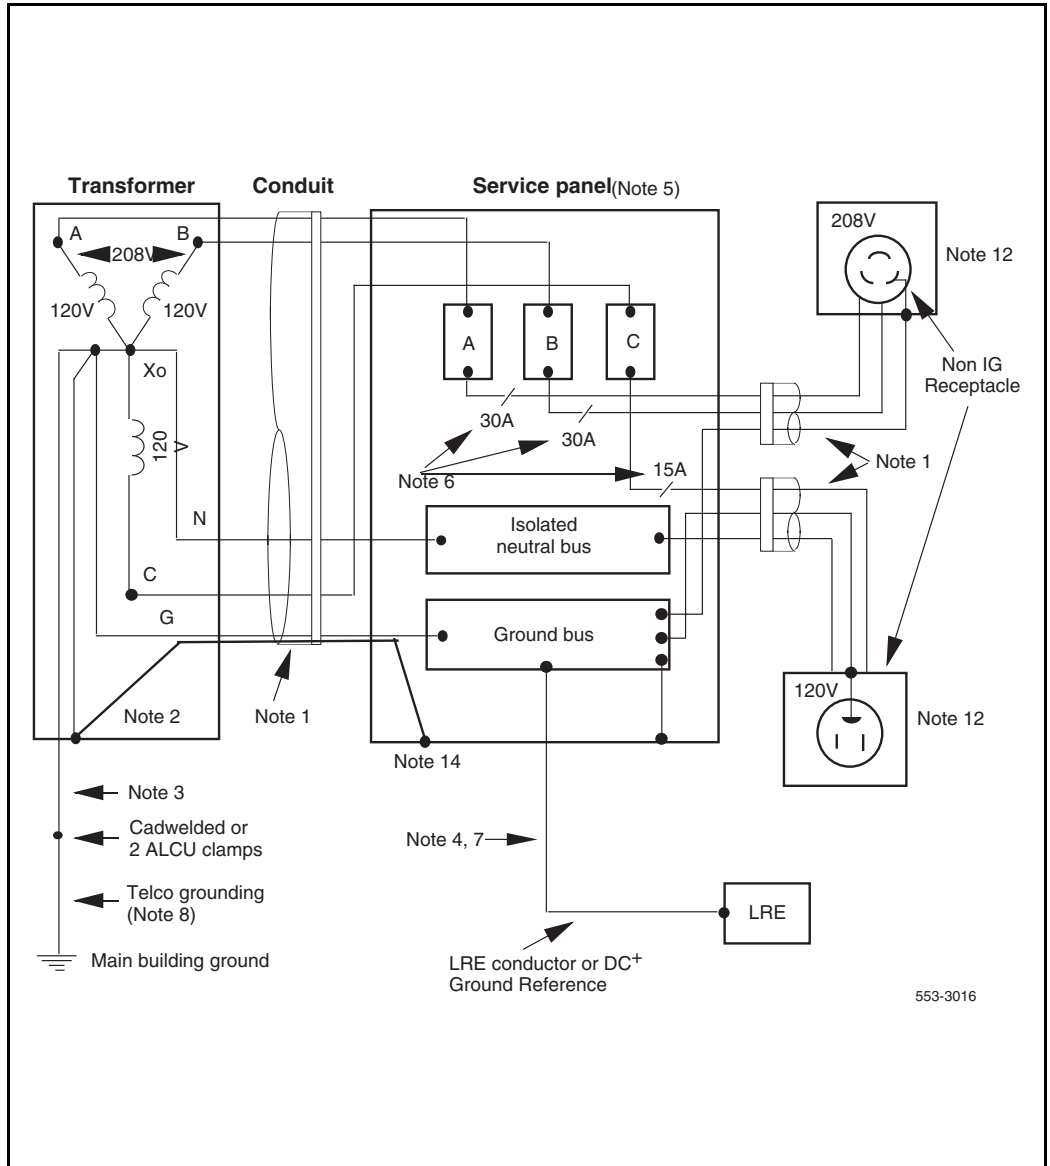


Figure 48
Shared distribution in an isolated ground system


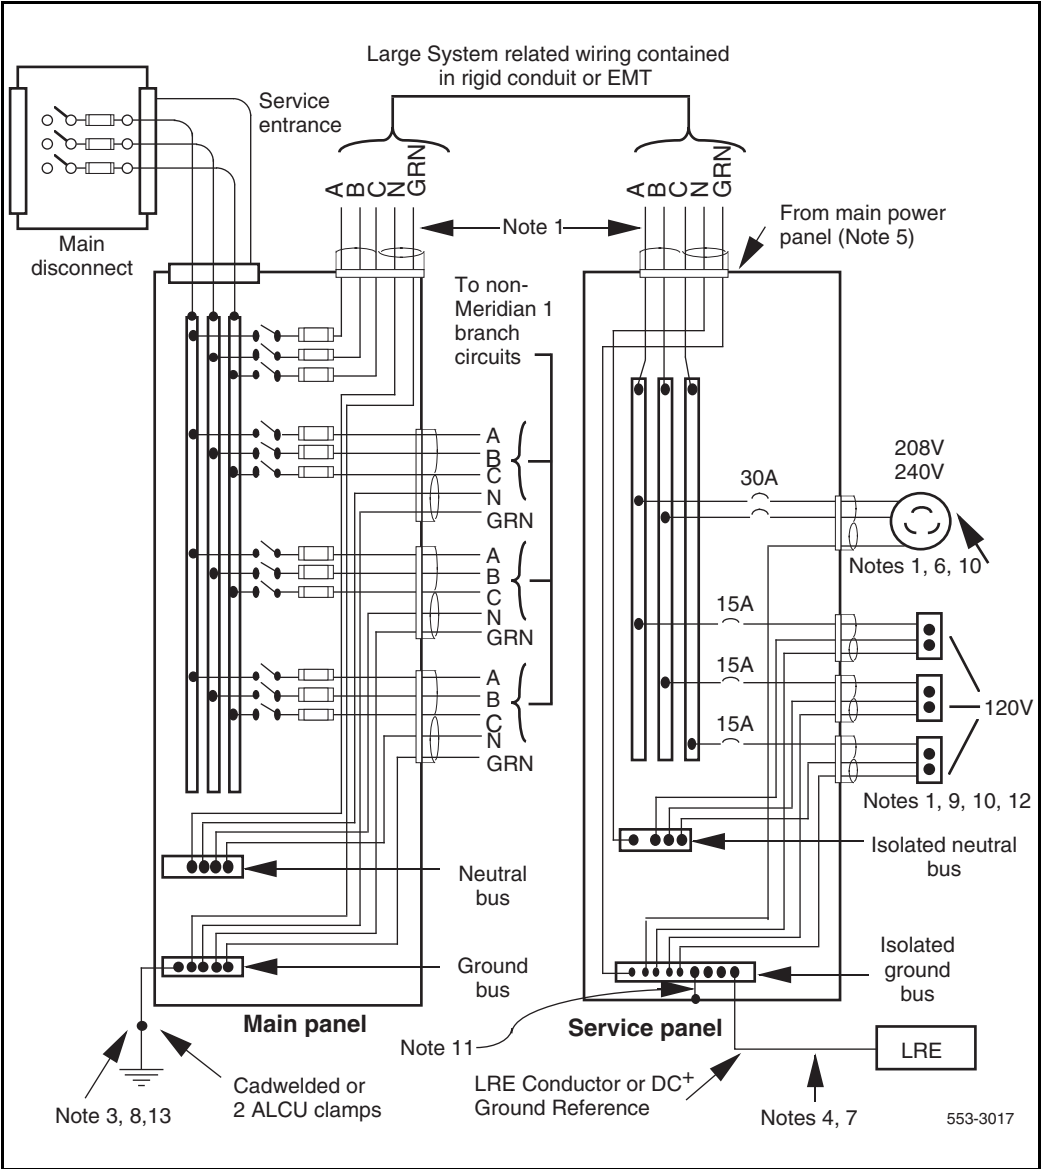


Figure 49
Shared distribution in a non-isolated ground system

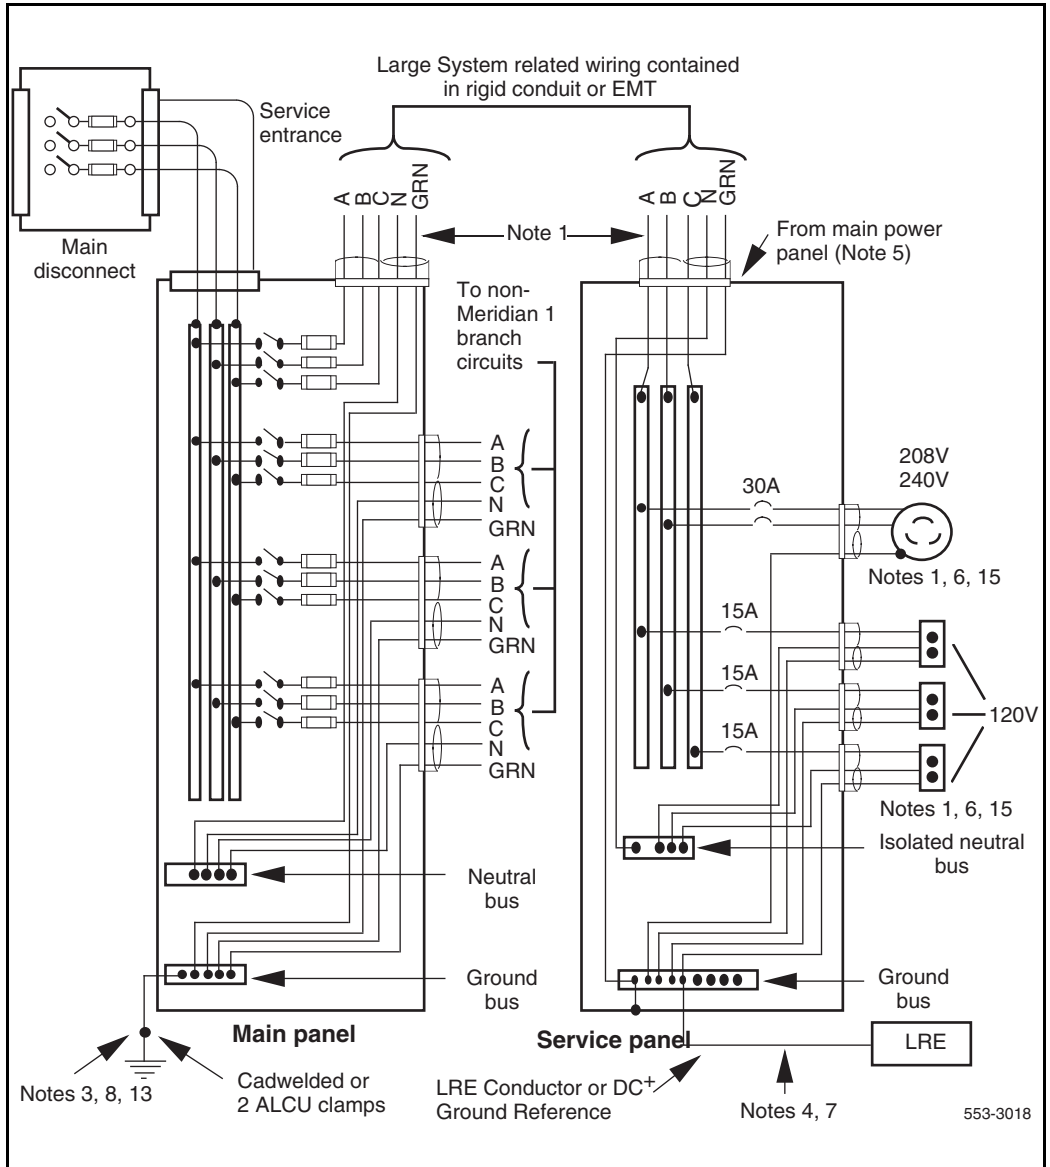

Commercial power source

The commercial power source is the main AC utility power feed, which is required for both AC- or DC-powered systems. For AC systems, this power source connects directly to the system. For DC systems, this power source connects to the rectifiers, which convert the AC voltage to –48 V DC voltage for distribution to the system.

In North America, the power supplied can be either 208 V AC or 240 V AC nominal. Three-phase power is not required, but single power feeds from alternate phases (phase-to-phase wiring) are normal practice where three-phase power is available.

Table 28 lists the input power required from the commercial power source for AC-powered systems. As shown, any voltage in the range of 180 V to 250 V is acceptable.

Table 28
AC input specifications for AC-powered systems

Input	Minimum	Nominal	Maximum
Voltage (V AC) at pedestal	180	208/240	250
Frequency (Hz)	47	50/60	63
Note: Distortion on voltage sine wave: 5% total harmonic distortion (THD), 3% any single harmonic.			

Table 29 on [page 203](#) shows the transient tolerance for abnormally high- and low-line conditions for module power supplies in AC-powered systems. When subjected to these transients, the power supplies continue to maintain their outputs within their specified operating limits. Spikes and notches are defined in terms of 0.5 and 0.25 cycle power disturbances. Surges and sags

tend to be temporary changes in the nominal AC voltage, sometimes over several 60 Hz cycles.

Table 29
Transient tolerance for AC-powered systems

Transient	Amplitude	Duration
High-voltage conditions:		
Spikes	815 V AC	up to 4.16 ms
	408 to 815 V AC	4.17 to 8.33 ms
Surges	288 V AC	8.34 to 50 ms
	276 V AC	51 to 500 ms
Low-voltage conditions:		
Notches	0 V	up to 4.16 ms
	0 to 206 V	4.17 to 8.33 ms
Sags	146 V	8.34 to 50 ms
	166 V	51 to 500 ms
Note: All transients are applied at the peak of the AC waveform.		

The specifications in Table 29 are derived from NEC and various telephone operating company specifications. These specifications are based on power disturbances that have been measured or observed, or that can be expected to commonly occur. Therefore, these specifications for transient tolerance are the minimum requirements that the equipment must meet.

The “hold-up” time specification for an AC module power supply is 20 ms at full load, when measured at the peak of the input voltage waveform and with nominal input of 208 V AC. Hold-up time is the time from the removal of the AC input voltage to the time when any one output voltage drops below its specified operating limit. At less than full load, the hold-up time is greater.

Note: The hold-up specification exceeds the low-voltage transient specifications listed in Table 29 above.

Table 30 lists the input power required from the commercial power source for the rectifiers used with DC-powered systems. All AC input voltage is continuous over the range from minimum to maximum (no straps) except for the A0354954 100 A rectifier, which has strap options for 208 and 240V AC.

Table 30
AC input specifications for DC-power rectifiers (Part 1 of 2)

Rectifier	Minimum	Nominal	Maximum
NT5C06 (MFA 150) 25 A:			
— Voltage at rectifier	176 V AC	208/240 V AC	264 V AC
— Frequency	47 Hz	50/60 Hz	63 Hz
NT6D52 (NT7D12) 30 A:			
— Voltage at rectifier	110 V AC	110 V AC	129 V AC
— Voltage at rectifier	220 V AC	220 V AC	250 V AC
— Frequency	47 Hz	50/60 Hz	63 Hz
A0354954 (Lorain) 100 A:			
— Voltage at rectifier/ 208 V strap	184 V AC	208 V AC	220 V AC
— Voltage at rectifier/ 240 V strap	212 V AC	240 V AC	264 V AC
— Frequency	57 Hz	60 Hz	63 Hz
Note: Distortion on voltage sine wave: 5% total harmonic distortion, 3% any single harmonic.			

Table 30
AC input specifications for DC-power rectifiers (Part 2 of 2)

Rectifier	Minimum	Nominal	Maximum
A0522819 (Small Candeo SP48300) 30 A:			
— Voltage at rectifier	75 V AC	110 V AC	290 V AC
— Voltage at rectifier	75 V AC	220 V AC	290 V AC
— Frequency	45 Hz	50/60 Hz	65 Hz
B0262270 (Large Candeo) 50 A:			
— Voltage at rectifier	80 V AC	208 V AC	295 V AC
— Voltage at rectifier	80 V AC	240 V AC	295 V AC
— Frequency	45 Hz	50/60 Hz	65 Hz
Note: Distortion on voltage sine wave: 5% total harmonic distortion, 3% any single harmonic.			

Table 31 lists the National Electrical Manufacturer's Association (NEMA) numbers for acceptable commercial power service receptacles.

Table 31
Service receptacle requirements (Part 1 of 2)

Receptacles	Isolated	Non-isolated	Used with
208/240 V at 20 A	IG-L6-20	L6-20	NT6D52 rectifier
208/240 V at 30 A	IG-L6-30	L6-30	AC systems

Table 31
Service receptacle requirements (Part 2 of 2)

Receptacles	Isolated	Non-isolated	Used with
208/240 V at 30 A		hardwired	NT5C03 rectifier
			A0354954 rectifier
			NT5C07 rectifier
			NT5C06 rectifier (MFA 150)
			B0262270 (Large Candeo)
			A0522819 (Small Candeo)

Cabling and connecting the AC supplies for Small Candeo systems

Each power shelf requires two AC feeds, one for rectifiers 1, 3, and 5, and one for rectifiers 2 and 4, as well as rectifier 6 on the supplementary power shelf.

Each group of rectifiers can be connected in one of the following ways:

- phase-to-phase to a 120/240 V single-phase or 120/208 V three-phase AC source, in which case the recommended size for the circuit breaker at the AC distribution panel is 30 A, two-pole
- phase-to-neutral to a 220/380 V or 230/400 V or 240/415 V three-phase AC source, in which case the recommended size for the circuit breaker at the AC distribution panel is 30 A, single-pole
- phase-to-neutral to a 120/240 V single-phase or 120/208 V three-phase AC source, in which case the recommended size for the circuit breaker at the AC distribution panel is 30 A, single-pole

Note 1: When operated from a 110/120 V AC source, the rectifier's output is limited to 60% of the nominal 30 A rating.

Note 2: When a three-phase AC source is being used, it is preferable to distribute the rectifiers evenly among the three phases.

Cabling and connecting the AC supplies for Large Candeco systems

Each 50 A rectifier requires its own AC feed.

The rectifiers can be connected in one of the following ways:

- phase-to-phase to a 120/240 V single-phase or 120/208 V three-phase AC source, in which case the recommended AC supply circuit breaker is 30 A, two-pole
- phase-to-neutral to a 220/380 V or 230/400 V or 240/415 V three-phase AC source, in which case the recommended AC supply circuit breaker is 30 A, single-pole

Note: When a three-phase AC source is being used, it is preferable to distribute the rectifiers evenly among the three phases.

Power conditioning

The term “power conditioner” refers to a variety of power protection or power quality improvement devices, such as low-pass filters, surge arrestors, line voltage regulators, and isolation transformers. Some of these devices reduce noise on the commercial power feed, and others help prevent power line spikes and surges. Many uninterruptible power supply (UPS) systems, in addition to providing reserve power for AC-powered systems, provide conditioning and protection during normal operation.

If the quality of the commercial power meets the specifications listed in this document, you do not need power conditioning equipment. If you want protection beyond the transient specifications listed, supplemental power devices can be helpful. However, carefully evaluate the specifications for the power protection equipment to be sure the equipment provides the type of protection that you want.

Power conditioning equipment of any sort is not a substitute for proper system grounding. As emphasized throughout this document, an SPG topology must be maintained for the system and all directly connected switchroom equipment. If you use supplemental protection equipment, you must install it in series with the commercial power feed to the system, without altering the overall grounding scheme.

Auxiliary power

Terminal devices located in the equipment room require local power. Power for these devices must be wired and fused independently from all other receptacles, labeled at the service panel (to prevent unauthorized power interruption), and referenced to the same interface point on the building system ground as the service panel ground.

Auxiliary power in the equipment room can be supplied by isolated or non-isolated service receptacles, but the receptacles must match the grounding for the system. In other words, if the system has an isolated ground topology, the receptacles must also be isolated. You can use the A0367916 Auxiliary –48 V Power Supply as a general purpose power supply for terminal devices (as well as supplying power to PFTUs). All 120 V circuits in the equipment room must have individual hot, neutral, and ground conductors.

If auxiliary equipment using an RS-232 interface is too remote to be powered from the service panel, a modem or fiber link is required for ground isolation. Failure to provide this isolation defeats the SPG required by the system.

Existing powering and grounding on some sites can make it difficult to ensure that the local power grounding is referenced to the same potential as the system ground. In addition, local power grounding can form part of a common grounding network that is subject to noise from external sources. Under these conditions, where locally powered terminals and equipment connect directly to the system through DC-coupled links sharing a common ground, incidental ground loops can form and inject noise into the system.

Where you suspect ground related problems, and you have eliminated other sources of the problem, isolate the auxiliary equipment from the system. The best way to do this depends on the individual installation and local practices, but a few possibilities are listed here:

- Connect the auxiliary equipment to the system through an opto coupler isolation device.
- Connect the auxiliary equipment to the system through fiber-optic links.

- Use teletypewriters (TTYs) configured in the 20 mA loop current mode (such as current loop adapters).
- Use isolation modems configured back-to-back. (Do not reference modems on the system side to the AC ground.)

Isolated service receptacles

For auxiliary power receptacles in isolated ground systems, use 120 V, 60 Hz, 15 A, individually fused, isolated ground receptacles terminating on non-locking type IG-5-15 receptacles (such as Hubbell, Cat. No. IG-5262, 2-pole, 3-wire, orange duplex receptacles). Use a green conductor for extending the safety ground, and wire it according to the isolated ground specifications. (This requirement is based on safety concerns and exceeds NEC and CEC requirements.)

Outlets must comply with NEC 250-74 Exception 4. Route grounding conductors with the phase conductors (NEC 300-20). All ground wiring must terminate on the dedicated isolated ground bus according to applicable codes (NEC 384-27).

Non-isolated service receptacles

For auxiliary power receptacles in non-isolated ground systems, use 120 V, 60 Hz, 15 A, individually fused receptacles terminating on non-locking type 5-15 receptacles.

Power options

Two power options are available:

- 1 AC-powered systems with or without reserve (backup) power
- 2 DC-powered systems with or without reserve (backup) power

In any configuration, you can route power connections to the system through the floor or along overhead racks.

AC-powered systems

In an AC-powered system, commercial power voltage is brought directly into the power distribution unit (PDU) in the pedestal. If reserve power is required, install an uninterruptible power source (UPS), along with its

associated batteries (which may be internal or external to the unit), in series with the AC power source.

Note: Refer to the manufacturer's specifications for details on the storage and operating environment, especially temperature and humidity ranges, required for proper UPS operation.

AC module power supplies operate at a nominal 208/240 V. The actual input range of AC power supply is 180 to 250 V, so restrapping the power supplies is unnecessary for either 208 V or 240 V power feeds. The 208 V wiring can plug into a 240 V system and vice-versa.

AC-powered systems without reserve power require one input receptacle per column, within 2.4 m (8 ft) of each column's pedestal.

As an alternative to using the power cord and plug, input to the PDU can be wired directly. In this case, #10 AWG conductors routed through 0.75 in. conduit is generally used. The leads connect to the L1, L2, and GND terminations on the field wiring terminal block on the PDU.

Systems that use reserve power plug into the UPS that in turn plugs into the commercial power source. Consult the UPS manufacturer for the receptacle requirements.

DC-powered systems

The external DC power system, generally referred to as the power plant, consists mainly of rectifiers and distribution equipment, and can include batteries for reserve power. DC-powered systems connect to the commercial power source through the rectifiers, which provide –48 V DC to the PDU in the pedestal.

A customer-provided power plant can be used with all DC-powered systems. Refer to the manufacturer's specifications for the power plant requirements.

DC-powered systems – UK systems

The DC-powered system for UK systems operates at a nominal –48V DC. Modules in a column are fed DC power from the power distribution unit (PDU) in the Pedestal. The Pedestal is powered from an external DC power plant.

Each power system is comprised of a master cabinet 8B/2R and up to a maximum of three slave cabinets.

For the UK, where the NT6C38 M-Power DC power system has been widely used, the Small Candeo (SP48300) power system is now the preferred solution.

Reserve power equipment room

If the reserve power equipment is located in a separate room then that room must meet the following conditions.

- 1 Well-ventilated and operating at optimum temperature; specific gravity readings are based on 25 degrees C (77 degrees F)
- 2 Located within the recommended proximity to the system
- 3 Equipped with protective equipment (such as goggles, face shields, acid-resistant gloves, protective aprons, water for rinsing eyes/skin, and bicarbonate of soda)
- 4 Well-secured
- 5 Accessible (the doorway must not be blocked)
- 6 Meet all floor loading requirements and the noise levels required by OSHA standards 1910.5 (or local standards)

Note: For detailed instructions on battery usage, see ANSI/IEEE Standard 450-1987: “Maintenance, Testing and Replacement of Large Storage Batteries.”

Power Failure Transfer Unit

A0355200 Power Failure Transfer Units (PFTUs) provide emergency telephone service during commercial power outages or certain system malfunctions. Each PFTU supports up to eight designated telephones that bypass the system and connect the designated telephones directly to the central office (CO) during power failures when activated by the system monitor or when activated manually.

A PFTU always requires a –48 V DC input and a positive return (ground):

- For AC-powered systems:
 - Without reserve power, a separate A0367916 Power Supply –48 V is required. (Up to six PFTUs can be supported by one power supply.) The auxiliary power supply is equipped with a 120 V AC input cord and plug that connects to a properly wired and grounded auxiliary receptacle.
 - With an UPS for reserve power, the auxiliary power supply plugs into an auxiliary 120 V AC output on the UPS.
- For DC-powered systems:
 - A PFTU can be powered from a separately fused auxiliary –48 V feed from the external power system. For this purpose, the Small and Large Candeo power systems are equipped with spare fuse positions, which can support 0.25 A to 10.0 A fuses.
 - A separate A0367916 Auxiliary –48 V Power Supply can also be used to power PFTUs in a DC-powered system.

Table 32 provides input power requirements for the PFTU and input and output specifications for the auxiliary power supply.

Table 32
Equipment specifications

Equipment	Input power requirements	Output specifications
PFTU	–40 to –56 V DC 170 mA	—
Auxiliary power supply	90 to 130 V AC at 57 to 63 Hz	–48 V DC, ± 15% at 1.25 A

The PFTU is a wall-mount unit. The auxiliary power supply can be mounted on the floor or wall. PFTU and auxiliary power supply dimensions are given in Table 33.

Table 33
PFTU and auxiliary power supply dimensions

Equipment	Width		Length		Height		Weight	
	cm	in.	cm	in.	cm	in.	cm	in.
PFTU	12.1	4.75	34.3	13.5	4.1	1.6	1.5	3.3
Auxiliary power supply	12.7	5.00	16.7	6.6	6.4	2.5	1.0	2.2

QUA6 Power Fail Transfer Unit

The QUA6 Power Fail Transfer Unit provides emergency telephone service during commercial power outages or certain system malfunctions. Each QUA6 PFTU supports up to five designated telephones. The PFTU bypasses the system and connects the designated telephones directly to the central office during power failures, when activated by the system monitor, or when activated manually.

Input requirements


The PFTU requires a –48 V DC input and a positive return (ground). The PFTU is powered from a separately fused auxiliary –48V feed from the external power system.

Input requirement: QUA6 PFTU:–42 to –56 V DC at 150 mA nominal

Dimensions and weight

The QUA6 PFTU is a wall-mounted unit and weighs 2 lbs (0.8 kg). The dimensions of the unit are shown in Figure 50 on [page 214](#).

Figure 50
QUA6 PFTU dimensions

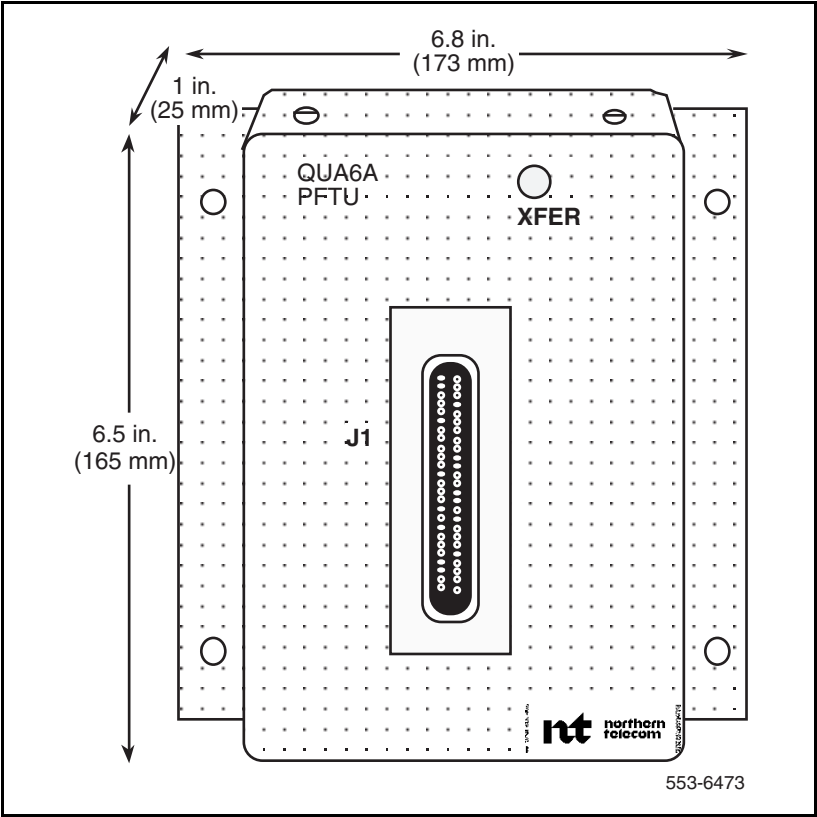

Cable requirements

This section describes the types of cable used in the system. It also provides some cabling guidelines.

Cable types

The system uses the following major types of wiring:

- 25-pair main distribution frame (MDF) cables:
These cables carry voice and data information between modules and the distribution frame. One end of the cable must be equipped with a 25-pair female connector that terminates on the module input/output (I/O) panel. The other end of the cable terminates on the MDF block.
- Interface cables:
Interface, or I/O, cables are typically 25-conductor interfaced through RS-232-C connectors. These cables are used to connect data units to printers, host computers, and modems.
- Twisted-pair shielded and non-shielded cables:
These cables interconnect the trip power monitoring connections between power interface units and the MDF. Typically, a #22 AWG, stranded (Belden type 8408-2 conductor or equivalent) shielded cable is used for trip connections and to connect the system to Power Cabinets. All other connections are serviced by non-shielded, #22 AWG stranded cable.
- Twisted-pair telephone cables:
These cables carry analog voice and digitized voice and data information between distribution frames and terminal devices throughout the building. They connect to 8-pin modular jacks located within 2.4 m (8 ft) of each device.

Note: Consider cable length requirements and limitations for both initial installation and later growth when you plan a system.

System cabling

This section contains information on:

- 1 Power and ground cables
- 2 Module cable routing
- 3 Network to Peripheral Equipment cabling

Power and ground cables

For AC-powered systems, a 2.7 m (9 ft), 3-conductor line cord is supplied, except in areas where conduit is required.

For DC-powered systems equipped with an NT7D10 PDU, wiring is generally run through conduit. For systems equipped with an NT7D67CA PDU, conduit is not required. However, conduit may be used, if preferred or required by local code or practices, and attached to the pedestal at any of three locations. (Rear access is provided by the NT7D0902 Rear Mount Conduit Kit.)

Metallic conduit is used primarily to contain electromagnetic emissions. Where conduit is used, it must provide an end-to-end enclosure for the power wiring.

Note: Metal ducts and raceways usually do not provide electromagnetic containment; they can be used with, but not in place of, conduit.

Module cable routing

Because the cable troughs and spaces on the sides of each module are within the EMI shielding of the system, unshielded cables can be routed in those areas. The corner vertical channels in the rear of the module are outside of the EMI shield. Cables routed in the vertical channels must be shielded, and must enter and exit the EMI-shielded area through I/O panels and adapters.

As space permits, you can route cables in the following ways:

- Horizontally in the cable troughs at the front, rear, and sides of the module

Note: In a DC-powered module, because there is no module power distribution unit (MPDU), there is room to route cables horizontally from front to rear on the left side (front view) of the module.

- Vertically on the sides of the module
- Vertically in the corner channels in the rear of the module (shielded cables only)



CAUTION

Loss of Data

You must route cables as perpendicular as possible to any nearby power cables. Avoid routing cables near power cables if alternate routing is available. (At the rear of the module, cables routed between the I/O panel and the rear cover can be parallel to the power cables because the panel provides EMI shielding.)

Network to Peripheral Equipment cabling

Cabling between the network and Peripheral Equipment runs from the faceplate of an NT8D04 Superloop Network Card to the backplane connectors for an NT8D01 Controller Card in an intelligent Peripheral Equipment (IPE) Module.

Cable access

The customer is responsible for supplying all access for station, feeder, and riser cabling. This includes (where necessary):

- Conduit
- Floor boring
- Wall boring
- Access into hung ceilings

Preparing a floor plan

Prepare a detailed floor plan for each site. The floor plan must indicate the size and location of:

- The system columns and modules, including planned expansion areas
- The main distribution frame (MDF)
- The service panel
- System terminal, printer, or other terminal devices (such as modems)
- External power equipment (such as rectifiers)
- Any cable racks
- PTFUs and auxiliary power supplies (if either are equipped)
- Space for additional equipment, such as reserve power equipment or auxiliary processors

Follow these guidelines when you plan the equipment room layout:

- The minimum acceptable distance between equipment aisles is 76 cm (30 in.)
- The minimum acceptable distance between the end of the column and walls, and between rows, is 91.4 cm (3 ft)
- The minimum acceptable ceiling height is 243.8 cm (8 ft) or greater



IMPORTANT!

According to the National Fire Code, equipment must be at least 30.5 cm (12 in.) from a sprinkler head. If a system is four modules high with a cable rack, do not place the equipment directly under any sprinkler heads.

When building or upgrading multiple-group systems, you must consider network expansion in the floor plan because network group modules must be collocated. There are several ways to expand the system. One way is to provide space for additional network groups to the left of the CPU modules, and additional Peripheral Equipment (IPE or PE) to the right. Another way is to add Peripheral Equipment modules in a separate row of columns.

Equipment dimensions appear in Table 34. Figures 51 and 52 starting on [page 220](#) illustrate sample equipment room floor plans. These samples may vary from your floor plan, depending on your system needs and the size and arrangement of your equipment room.

Table 34
Equipment dimensions

Equipment	Width		Depth		Height	
	cm	in.	cm	in.	cm	in.
Pedestal	81.3	32.0	66.0	26.0	25.4	10.0
Top cap	81.3	32.0	55.9	22.0	10.2	4.0
Module	81.3	32.0	55.9	22.0	43.2	17.0
One-module column	81.3	32.0	66.0	26.0	78.7	31.0
Two-module column	81.3	32.0	66.0	26.0	121.9	48.0
Three-module column	81.3	32.0	66.0	26.0	165.1	65.0
Four-module column	81.3	32.0	66.0	26.0	208.3	82.0
Note: Note: Multiple-column systems require a 7.6 cm (3 in.) spacer between each column for cable routing and to provide EMI shielding.						

Figure 51
CS 1000M HG or CS 1000M SG equipment room floor plan


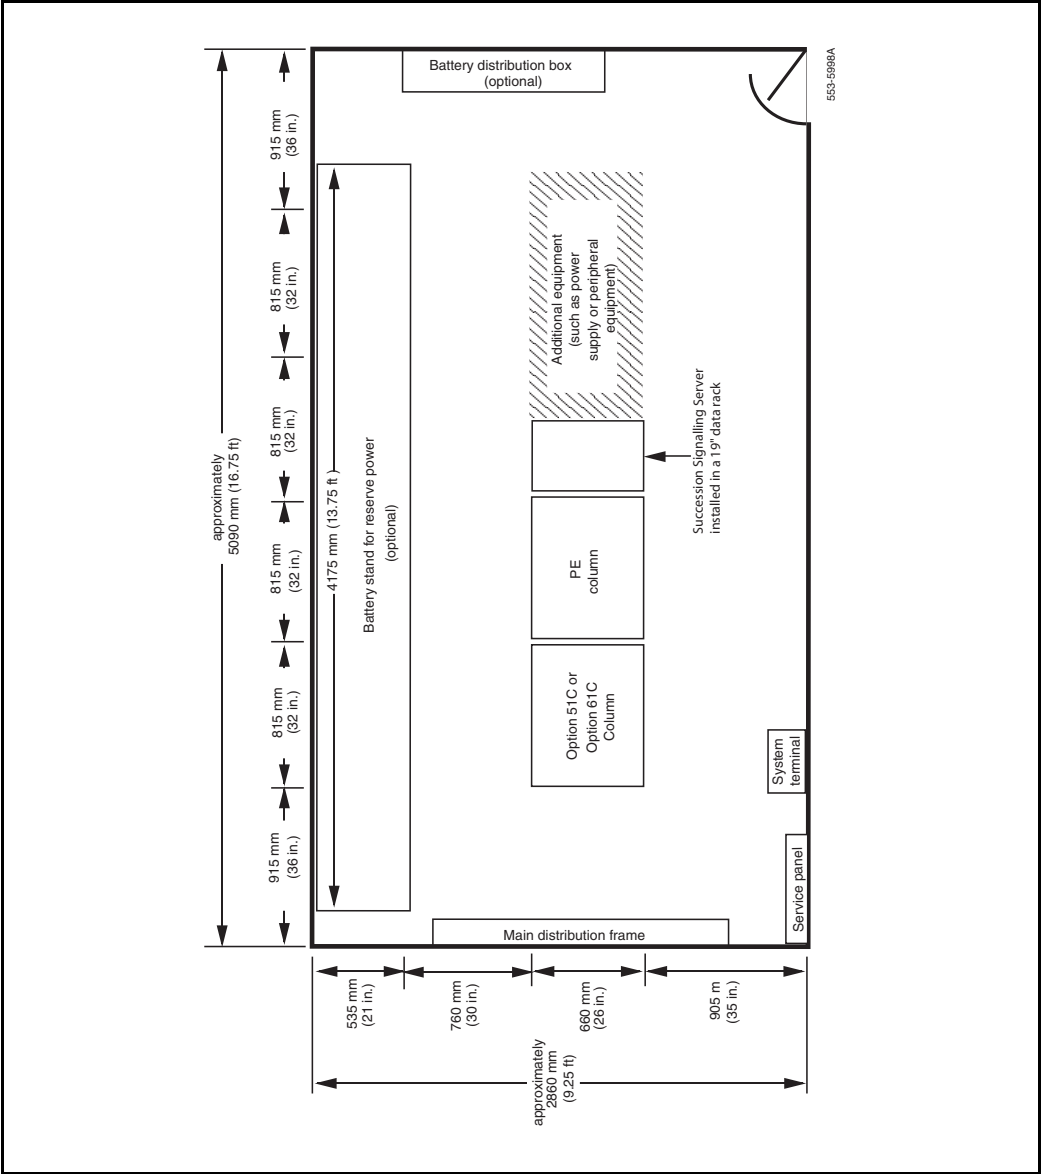


Figure 52
Meridian 1 PBX 81C CP PIV equipment room floor plan

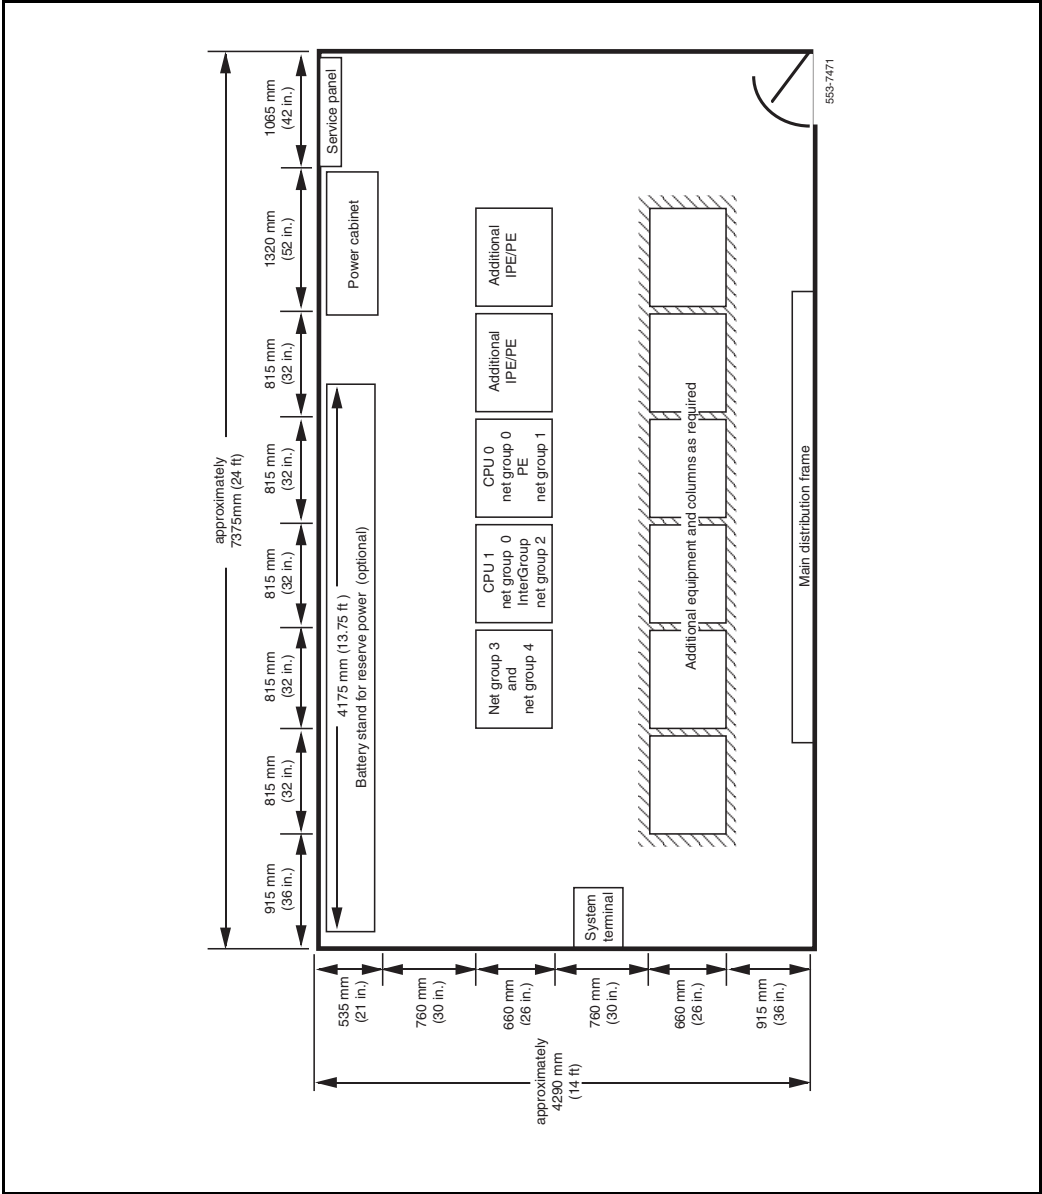

Estimating floor loading

You must estimate floor loading to plan module distribution. “Floor loading” is the weight of the system divided by the occupied floor area. “Point loading” is the local pressure exerted by the feet of the system on the floor.

Table 35 gives system weights. Table 36 on [page 223](#) lists floor load estimates, and assumes fully loaded columns complete with pedestal, maximum circuit card configurations, power supplies, and cables.

Table 35
Equipment weights

Equipment	Weight empty		Weight full	
	kg	lbs	kg	lbs
Pedestal	18.1	40	31.7	70
Top cap	6.8	15	6.8	15
Module	22.7	50	58.9	130
One-module column	N/A	N/A	97.5	215
Two-module column	N/A	N/A	156.5	345
Three-module column	N/A	N/A	215.4	475
Four-module column	N/A	N/A	274.4	605

Table 36
Floor loading estimates

Number of modules	Floor load		Point load	
	lbs/ft2	kPa	lbs/ft2	kPa
One	38.1	1.8	11.0	75.8
Two	60.3	2.8	17.3	119.0
Three	82.4	3.9	23.7	163.4
Four	104.6	5.0	30.0	206.8
<p>Note: The numbers under “Floor load (lbs/ft2) and kPa” are based on a floor area of 0.52 sq m (5.64 sq ft) for the system. These numbers do not include the weight of the optional overhead cable rack. The numbers under “Point Load (lbs/in2) and (kPa)” are based on distributing the system weight among four feet, each with an area of 317 sq mm (4.91 sq in.); these numbers do not reflect the use of optional casters.</p>				

Creating a building cable plan

To create a building cable plan, complete the following tasks.

- 1 Show the routing of all wiring, the location and wiring requirements of each terminal device connected to the system, and any other relevant information about the device.
- 2 Show the location of distribution frames, conduits and access points, and power outlets.
- 3 Identify the ownership of existing building wire if it is to be used.
- 4 Perform a random sampling of in-place wiring to ensure that it meets specifications for high-speed lines. All wiring carrying high-speed data must pass a verification test as part of the installation procedures.
- 5 Identify the location of conduits and floor ducts. If telephone cable is run in conduit then that conduit can not be used for any other wiring.
- 6 Identify the location of all main and intermediate distribution points.

- 7 Provide three pairs of telephone wire from a distribution frame to a nearby telephone jack for each terminal device. Modular jacks must be within 2.0 m (8 ft) of the device.
- 8 Provide a 16-pair (or 25-pair) cable equipped with an Amphenol-type connector for each attendant console.
- 9 Divide the building cable plan into zones. Zones are typically the termination point of conduits throughout the office. Identify each zone on the building cable plan with a letter or number, and assign a block of numbers to each zone. Figure 53 on [page 226](#) illustrates zoning.

Note: Be sure to leave room for expansion.

Wire routing

To plan wire routing, establish the start and end point of each cable relative to the location of the terminal devices in the building, then examine the construction of the office to determine the best wiring routes. Consider the following guidelines when performing this task.

- Floors:
 - In the open, wires can run along baseboard, ceiling moldings, or door and window casings. For the safety of employees, never run wire across the top of the floor.
 - When concealed, wires can run inside floor conduits that travel between distribution frames and jacks. (Under-carpet cable is not recommended.)
- Ceilings:

National and local building codes specify the types of telephone wire that you can run in each type of ceiling. Local building codes take precedence.
- Walls:

Cables that run vertically should, when possible, run inside a wall, pole, or similar facility for vertical wire drops. Cables that run horizontally cannot be blind-fed through walls.

- Between floors:
Locate distribution frames as closely to one another as possible. Local coding laws specify whether or not a licensed contractor is required if conduit is installed.
- EMI:
Data degradation may occur if wires travel near strong EMI sources. See “Electromagnetic and radio frequency interference” on [page 189](#) for a description of common interference sources.

Termination points

Once you have determined the wire routing, establish termination points. Cables can terminate at:

- 1** the MDF (typically in the equipment room)
- 2** intermediate distribution frames, typically on each floor in telephone utility closets
- 3** wall jacks to terminal boxes, typically located near the terminal device

At the distribution frame (also called the cross-connect terminal), house cables terminate on the vertical side of the two-sided frame and cross connect to equipment that is typically located on the horizontal. If you use a color field scheme, house cables typically terminate in the blue field and the equipment terminates on the purple (U.S.A.) or white (Canada) field.

In all cases, clearly designate the block where the cables terminate with the cable location information and the cable pair assignments. Keep a log book (cable record) of termination information. See Figure 54 on [page 227](#) for an example.

Figure 53
Building cable zones

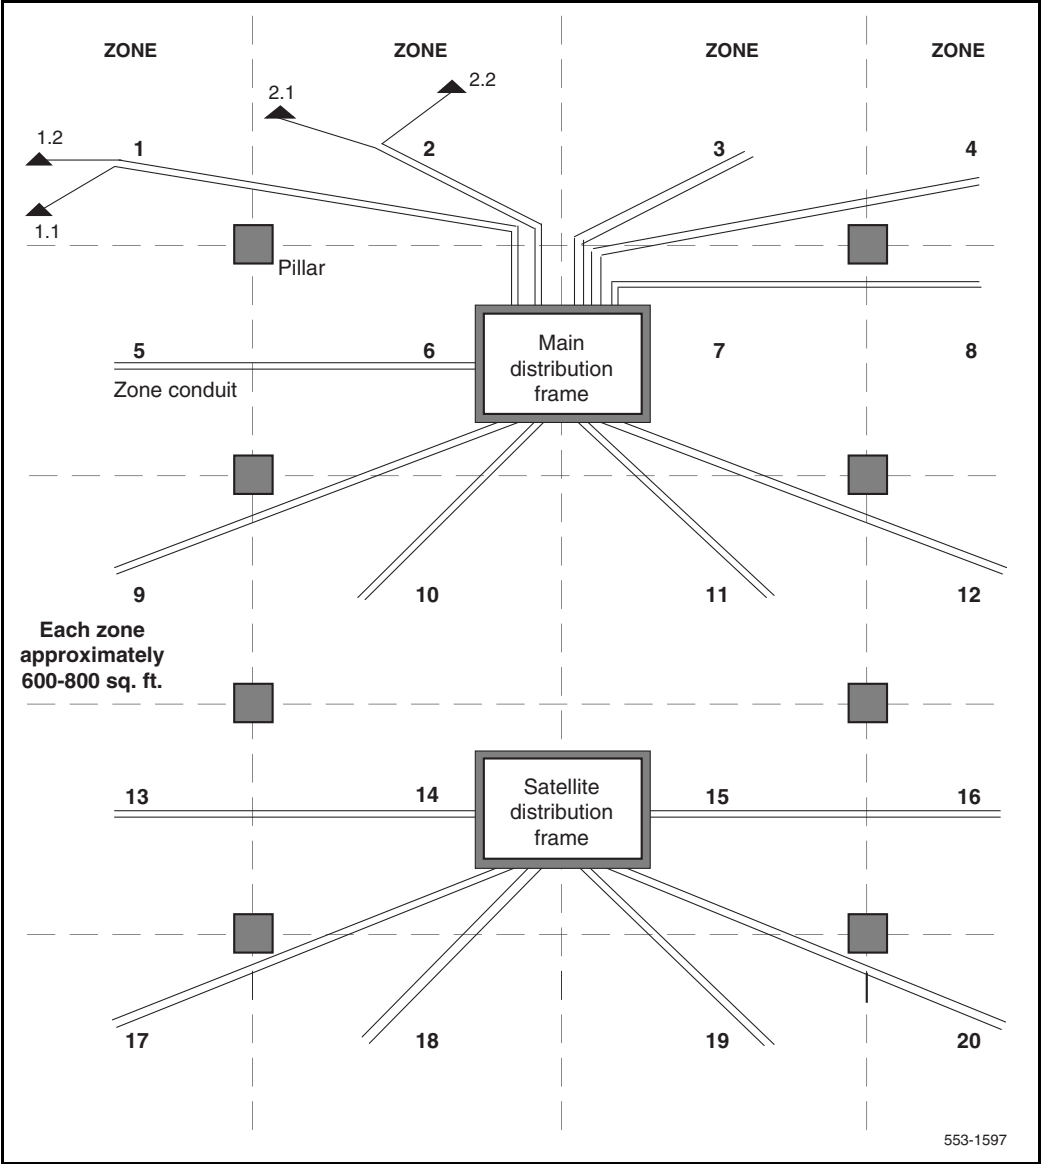


Figure 54
Sample cable record

CABLE RECORD

Customer _____

Location _____

Cable _____ Binder _____ Page _____ of _____

DN	TN				NAME	FEATURES / REMARKS	TERMINAL DEVICE	BLOCKS		COLOR
	M	S	C	U				DF	HOUSE	
										W BL
										W OR
										W GR
										W BR
										W SL
										R BL
										R OR
										R GR
										R BR
										R SL
										BK BL
										BK OR
										BK GR
										BK BR
										BK SL
										Y BL
										Y OR
										Y GR
										Y BR
										Y SL
										V BL
										V OR
										V GR
										V BR
										V SL

553-1595

Preparing for delivery

When preparing for equipment delivery, answer these questions.

- 1 Has a request been made for equipment delivery?
- 2 Are transportation arrangements to the premises completed?
- 3 Is a list of all ordered equipment available on site?
- 4 Is help needed and available for preparing the equipment room?
- 5 Are unloading and unpacking facilities and tools available?
- 6 Is help needed and available for delivery?

Note: Plan to unload equipment as close to the final installation area as possible for an easier, and perhaps safer, installation.

Conducting pre-installation inspections

Obtain any appropriate sign-offs before the site is ready for equipment delivery and installation. Sign-offs can include regulatory items such as electrical inspections, air conditioning inspections, and cable plan approval. In addition, an overall equipment room inspection and a building cable inspection should be performed before installation.

Inspect the equipment room to verify that all physical and environmental requirements are met, system grounding and power equipment is installed and tested, and the equipment layout is marked on the floor.

Inspect the building cable to verify that sufficient distribution frames are provided, conduits or floor ducts to terminal locations are installed, terminal jacks are installed, and sufficient wiring is on hand.

Assessing the delivery route

Before the system is delivered, examine and measure the route from the receiving area to the installation area. (See Table 34 on [page 219](#) for dimensions.)

These factors must be considered:

- 1 Size and security of unloading and storage areas
- 2 Availability and capacity of elevators
- 3 Number and size of aisles and doors on the route
- 4 Restrictions, such as bends or obstructions, in halls or at doors
- 5 Floor loading capacity of unloading, storage, and equipment room areas
- 6 Number of steps and stairways

Note: A four-module column is shipped in two segments. One shipping pallet carries the pedestal and three modules. Another shipping pallet carries the fourth module and top cap.

Preparing for installation

The installation plan, work orders, and appropriate documentation should be on hand at the time of installation.

Reviewing the installation plan

The installation plan can consist of the equipment room floor plan, the building cable plan, and an installation and test sequence chart.

The equipment room floor plan should show:

- System columns and modules, including planned expansion areas
- Main distribution frame
- Service panel
- System terminal, printer, or other terminal devices
- External power equipment (such as rectifiers)
- Cable racks
- PFTUs and auxiliary power supplies (if either are equipped)
- Additional equipment such as reserve power equipment or auxiliary processors

The building cable plan should show:

- Cable routing and designation information
- Location of each terminal device
- Type of cable or wiring required for each terminal device
- Location of all distribution frames and system and terminal cross-connect assignments
- Location of conduits and floor ducts, including access points
- Location of power outlets for terminal devices

An installation and test sequence (ITS) chart shows typical installation tasks, the sequence of the tasks, and task start and duration information.

Reviewing the work orders

The work order can include:

- Detailed listing of the equipment ordered
- Terminal Number (TN) assignments
- Directory Number (DN) assignments for each terminal device
- Office Data Administration System (ODAS) designators for each terminal device (if the software package is equipped)
- Features available to each telephone and data set
- Administration database entries for telephone and data set features

Reviewing the documentation

Instructions for unloading and unpacking system equipment and a full set of standard Nortel Technical Publications (NTPs), are delivered with each system.

Design parameters

Contents

This section contains information on the following topics:

Introduction	231
System parameters	232
Customer parameters	232
Console and telephone parameters	233
Trunk and route parameters	234
ACD feature parameters	236
Special feature parameters	237
Hardware and capacity parameters	239
Memory-related parameters	240

Introduction

This section describes sets of design parameters that set an upper boundary on certain system capacities. Changes to these parameters generally require a revision to the software and are constrained by other basic capacities such as memory and traffic or system load. The design parameters are set to provide the best possible balance between limits.

System parameters

Table 37 on [page 232](#) lists system parameters and provides their maximum values.

Table 37
System parameters

System parameters	Maximum value	Comments
Customers	100	
Display messages for background terminal	255	
Input/output ports (e.g., TTYs, printers)	16	Each MSDL counts as one device; a history file counts as one device.
AML/CSL links	16	With MSDL.
TNs	65 536	Software design limit. Actual number of TNs will be constrained by physical capacity, real time, memory, and License limits.

Customer parameters

Table 38 lists customer parameters and their maximum values.

Table 38
Customer parameters

Customer parameters	Maximum value	Comments
Tenants	512	
Dial Intercom Groups	2046	
Members per Dial Intercom Group	100	
Ringing Number Pickup groups	4095	Call Pickup Group 0 = no pickup group

Table 38
Customer parameters

Customer parameters	Maximum value	Comments
Listed Directory Numbers (direct inward dialing only)	6	
DISA DNs	240	

Console and telephone parameters

Table 39 lists console and telephone-related parameters and their maximum values.

Table 39
Console and telephone related parameters (Part 1 of 2)

Console/telephone parameters	Maximum value	Comments
Consoles per customer	63	
Lamp field arrays per customer	1	May be repeated once on another console.
Lamps per array (all numbers must be consecutive)	150	
Feature keys per attendant console: – M2250	20	
Incoming call indicators per console	20	
Trunk group busy indicators per console: – M2250	20	
Additional key/lamp strips: – console – telephones	2 6	

Table 39
Console and telephone related parameters (Part 2 of 2)

Console/telephone parameters	Maximum value	Comments
Add on modules: – M3904 Key Expansion Module (KEM) – IP Phone 2002 KEM – IP Phone 2004 KEM	2 1 one-page KEM 2 one-page KEM or 1 two-page KEM	
Protect bcs block length	512	

Trunk and route parameters

Table 40 lists trunk and network-related parameters and their maximum values.

Table 40
Trunk and network-related parameters (Part 1 of 2)

Trunk/network parameters	Maximum value	Comments
Trunk routes per customer	512	
Members per trunk route	510	
RAN trunks per RAN route	10	
Trunk access restriction groups	32	
Locations in an ESN network	1000 or 16 000	1000 without ESN Location Code Expansion package (400), 16 000 with the package.
Basic authorization codes	4096	
Length of basic authcode	14 digits	
Network authorization codes	20 000	ESN networks.
Length of network authcode	7 digits	Fixed length defined per customer.

Table 40
Trunk and network-related parameters (Part 2 of 2)

Trunk/network parameters	Maximum value	Comments
NCOS:		
– CDP	3	
– BARS/NFCR	7	
– NARS/NSIG/AUTOVON	15	
Route lists:		
– CDP	32	
– BARS	128	
– NARS	256	
Route list entries	64	
NFCR trees	255	New Flexible Code Restriction.
IDC trees	255	Incoming DID Digit Conversion.
ISDN D-channels	64	With MSDL.
ISDN B-channels per D-channel	382	16 T1s with a D-channel and backup D-channel, subject to members per trunk route limitations and physical limitations.
	359	15 T1s with a single D-channel, subject to members per trunk route limitations and physical limitations.

ACD feature parameters

Table 41 lists ACD feature parameters and their maximum values.

Table 41
ACD feature parameters

ACD parameters	Maximum value	Comments
ACD DN's and CDNs per customer	- 1000 (CP PII, CP PIV) - 240 (CP3, CP4, SSC)	The ACD-E package required, otherwise the limit is 240.
Agent positions per DN	- 1200 (Large systems) - 120 (Small systems - SSC)	Real-time and physical capacity constraints can limit this further.
Agent priorities	48	
Agent IDs per customer	9999	
Agents logged in at one time per system	9999	Real-time constraints may limit this further.
AST DN's per telephone	2	
Number of ACD-ADS customers	5	
Terminals and printers on CCR	8	
Links per VASID	1	

Special feature parameters

Table 42 lists non-ACD feature parameters and their maximum values.

Table 42
Non-ACD feature parameters (Part 1 of 2)

Feature parameters	Maximum value	Comments
Speed call lists per system	8191	The number of speed call lists and the number of DNs per speed call list can be limited by the amount of available memory on the system (protected and unprotected data store).
Number of DNs in speed call list	1000	
Multiple appearances of the same directory number (MADN)	30*	Limited by watchdog timer. *See Steps in a hunting group.
Steps in a hunting group	30*	Marketing objective, limited by watchdog timer. *In combination with MADN, each hunt step with more than 16 appearances is counted as two, so the maximum combination of MADN and hunt steps is 30 MADN and 15 hunt steps.
Number of Call Party Name Display names defined	Variable	Limited by the number of DNs defined and available space in the protected data store.
CPND length: – SL-1 protocol – ISDN protocol	27 24	– Software design limit. – Display IE limitation (DMS switches have a display IE limit of 15).
AWU calls in 5 minutes	500	Marketing objective, constrained by ring generator.

Table 42
Non-ACD feature parameters (Part 2 of 2)

Feature parameters	Maximum value	Comments
Group Call Feature: – Groups per customer – Stations per group	64 10	
BRI application: – Protocol parameter set groups per system – Terminal service profiles (per DSL) DSLs – LTIDs	16 32 000 640 000	– Software design limit; actual number is constrained by the number of TNs in the system. – Each DSL occupies 2 TNs. Software design limit; each DSL can have a max of 20 LTIDs. The max number of LTIDs is limited by the number of DSLs, memory, and real time.

Hardware and capacity parameters

The software design limits are not typically the binding constraints. The number of items of a particular type is usually determined by a combination of loop and slot constraints (if the item requires loops) or by slot constraints alone.

Table 43 lists hardware and capacity parameters and their maximum values.

Table 43
Physical capacity/hardware-related parameters

Physical capacity/hardware parameters	Maximum value (loops)	Comments
XCT cards	64	Provides TDS, CONF, and MFS functionality; requires 2 loops (TDS and MFS share timeslots on one loop, CONF uses the other loop).
Total service and terminal loops: – CS 1000M HG/SG/PBX 61C –CS 1000M MG/PBX 81C (FNF, 8 groups)	32 256	Each XNET card requires 4 loops. Each MISP card requires 2 loops.
Digitone receivers	255	Software design limit.
Multifrequency receivers	255	Software design limit.
Tone detectors	255	Software design limit.

Voice Gateway Media Cards

A Voice Gateway Media Card is any Media Card running the IP Line application.

Voice Gateway Media Cards can be assigned to any slot. The slot should be in a non-blocking segment.

Table 44
Voice Gateway Media Card capacity

Parameter	Capacity
Meridian 1 PBX 61C or Meridian 1 PBX 81C	<ul style="list-style-type: none"> — 10 cards in each IPE cabinet — no more than 3 cards per superloop

Memory-related parameters

Table 45 lists memory-related parameters and their maximum values.

Table 45
Memory-related parameters (Part 1 of 3)

Parameter	Values
Low-priority input buffers <ul style="list-style-type: none"> — (CP PIV recommended default) 	96 – 5000 (3500)
High-priority input buffers <ul style="list-style-type: none"> — (CP PIV recommended default) 	16 – 5000 (3500)
Input buffer size (words)	4
Analog (500/2500-type) telephone, trunk and digital telephone output buffers <ul style="list-style-type: none"> — (recommended default) 	16 – 5000 (2000)
Message length (words)	4
D-channel input buffer size (bytes)	261
D-channel output buffer size (bytes)	266

Table 45
Memory-related parameters (Part 2 of 3)

Parameter	Values
TTY input buffer size (characters)	512
TTY output buffer size (characters)	2048
Number of call registers	26 – 50 000
— recommended default	2000/4000/10 000
— 61C / 81C, CP PII, CP PIV with five or fewer groups expected maximum	20 000
— 61C / 81C, CP PII, CP PIV with six to eight groups expected maximum	25 000
Call registers assigned to AUX	26–255
Number of AML msg call registers	20 – the minimum of 25% of total call registers or 255 (default 25)
Call registers for CSL input queues (CSQI)	Maximum 25% of total call regis- ters or 4095 (default 20)
Call registers for CSL/AML output queues (CSQO)	Maximum 25% of total call regis- ters or 4095 (default 20)
Auxiliary input queue	20 – the minimum of 25% of total call registers or 255 (default 20)
Auxiliary output queue	20 – the minimum of 25% of total call registers or 255 (default 20)

Table 45
Memory-related parameters (Part 3 of 3)

Parameter	Values
History file buffer length (characters)	0 – 65 535
<p>Note 1: In a system with Meridian Mail, CallPilot, AML, and Symposium, add the number of CSQI and CSQO to the Call Register (CR) requirement obtained from feature impact calculations.</p> <p>Note 2: The buffer estimates were based on relatively conservative scenarios, which should cover most practical applications in the field. However, most models deal with “average traffic”. When traffic spikes occur, buffers can overflow. In these cases, raise the buffer size, depending on the availability of CRs. The maximum number of buffers allowed for CSQI and CSQO is 25% of NCR.</p>	

Buffer limits

The buffer limit is the maximum number of CRs that can be used for that particular function out of the total CR pool. If the designated limit is larger than needed and there are still spare CRs, the unused CRs will not be tied up by this specific function. Therefore, there is little penalty for overstating the buffer size limit, as long as the limit is within the number of CRs available to the system.

The values provided in Table 45 indicate the relative requirements for various buffers. They are the minimum buffer size needed to cover most applications under the constraint of tight memory availability. When increasing buffer sizes, make the increases proportional to the values in Table 45. This guideline applies in all cases except CSQI/CSQO, which is relatively independent of other buffers and can be increased without affecting others.

For example, with a Large System Call Center using many applications (such as CallPilot), it would be advisable to set the CSQI/CSQO to a high value (up to 25% of the number of call registers).

System capacities

Contents

This section contains information on the following topics:

Introduction	243
Memory size	244
Mass storage	265
Physical capacity	266
Network traffic	280
Real-time capacity	295
Signaling Server	301
Software configuration capacities	308
CS 1000M capacities	308
Zone/IP Telephony node engineering	310

Introduction

This chapter describes the system's primary capacity categories. For each category, this chapter:

- identifies the units in which the capacity is measured
- details the primary physical and functional elements affecting the capacity
- describes actions that can be used to engineer the capacity

“Resource calculations” on [page 323](#) provides the algorithms for engineering the system within the capacity limits. In some cases, applications such as Call Center require detailed engineering. These applications are discussed in “Application engineering” on [page 391](#).

The worksheets in Appendix B: “Worksheets” on [page 493](#) implement the algorithms.

Memory size

Large Systems with NT5D10 or NT5D03 CP (“CP3” or “CP4”) cards employ a Motorola 68060 CP. This CP uses a separate Flash EPROM memory for program store and a DRAM for data store. Large systems with a Pentium processor (CP PII or CP PIV) use DRAM for both program store and data store.

The following memory configurations are available:

1 NT5D10 or NT5D03 CP card:

- Four SIMMs of EPROM for storing code. These SIMMs must all be the same size – either 8 MB or 16 MB.
- Four SIMMs of DRAM for storing data. Each SIMM can be any of the following sizes: 2 MB, 4 MB, 8 MB, 16 MB, or 32 MB.

Note: See Table 46 on [page 245](#) for minimum required memory configuration.

2 NT4N64 CP PII card:

- Single memory slot that can use either a 128 MB or a 256 MB DIMM.

Note: CS 1000M requires 256 MB

3 NT4N39AA CP PIV card:

- CP PIV can support 2 DIMM slots for up to 2GB of memory; however,
- CP PIV Pack ships with 512MB of DRAM

Table 46 shows the minimum amount of memory required for CS 1000 Release 4.5 software.

Table 46
CS 1000 Release 4.5 memory requirements

System	Flash memory required	DRAM memory required	Total memory
With 68060 (CP3) or 68060E (CP4) processors*			
CS 1000M SG/PBX 51C/61C	64 MB	64 MB	128 MB
CS 1000M MG/PBX 81/81C (with or without Fiber Network Fabric)	64 MB	96 MB	160 MB
With Pentium CP PII processors			
CS 1000M SG/PBX 61C CP PII	N/A	256 MB	256 MB
CS 1000M MG/PBX 81/81C CP PII (with or without Fiber Network Fabric)	N/A	256 MB	256 MB
With Pentium CP PIV processors			
CS 1000M SG/PBX 61C CP PIV	N/A	512 MB	512 MB
CS 1000M MG/PBX 81C CP PIV	N/A	512 MB	512 MB
**“CP3” means with NT5D10 and “CP4” means with NT5D03.			

Table 47 shows the maximum amount of memory that the processors can support.

Table 47
Maximum memory sizes (MB)

Processor	EPROM	DRAM
CP3 or CP4	64 MB	128 MB
CPP PII	N/A	256 MB
CPP PIV	N/A	2 GB

Table 48 gives the maximum call register count recommended for CS 1000 Release 4.5 software, so that the system's memory requirements do not exceed the processor's memory capacity.

Note: Sites experiencing memory shortages during an upgrade should check that the call register counts are within the bounds set by this table. Also check that the machine meets the minimum memory requirements listed in Table 46 on [page 245](#).

Table 48
Recommended maximum call register counts

System	Recommended call register count	Memory required (SL-1 words)	Memory required (MByte)
CS 1000M SG/Meridian 1 PBX 61C CP PII CP PIV	20 000	4 540 000	17.319
CS 1000M MG Meridian 1 PBX 81C CP PII CP PIV > 5 groups	25 000	5 675 000	21.648
Note: Call registers are 227 SL-1 words long. One SL-1 word is 4 bytes.			

Memory engineering

The data store consists of both protected and unprotected database information. Tables 49 on [page 248](#) and 51 on [page 256](#) describe the

information stored in each area and how to determine the values for input to Worksheet 22: “Memory size” on [page 526](#).

The calculations described in Tables 49 and 51 include references to memory store per item. Table 50 on [page 253](#) provides the memory store per item in protected data store. Table 52 on [page 262](#) provides the memory store per item in unprotected data store. These values are also referred to as the PDS factors and UDS factors, respectively.

The PDS and UDS factors in Tables 50 and 52 are based on assumptions about typical configurations, feature usage, and traffic patterns. The assumptions are specified in Tables 49 and 51, as they become relevant. Refer to Appendix C: “Protected memory requirements” on [page 541](#) for detailed calculations in cases where those assumptions may not apply.

Protected data store

Table 49 describes the protected data store (PDS) area.

Table 49
Protected data store (Part 1 of 5)

Item	Calculation*
<p>Telephones:</p> <ul style="list-style-type: none"> - 500/2500-type - ACD - M2006/2008 - 2216/2616 - M2317 - M3900 - IP Phones 200x - IP Softphones 2050 - Consoles - Add-on Modules - Templates - Attendants <p>Assumptions</p> <p>Average number of:</p> <ul style="list-style-type: none"> • Features defined per 500/2500-type telephone = 8 • 500/2500-type telephones sharing the same template = 10 • Digital telephones sharing the same template = 2 • Non-key features per digital telephone = 4 	<p>Number of items × memory store per item</p>
Data Service (DS)/VMS access TNs	<p>(Number of CallPilot ports + Number of data only ports) × memory store per DS/VMS access TN</p>
<p>*Refer to Table 50 on page 253 for the memory store per item (PDS factor).</p>	

Table 49
Protected data store (Part 2 of 5)

Item	Calculation*
Office Data Administration (ODAS)	(Number of CallPilot ports + Number of data ports only + Total number of telephones + Number of analog trunks) × memory store for ODAS
Customers	Constant term + (Number of customers × memory store per customer)
Directory Number (DN) translator Assumptions <ul style="list-style-type: none"> The two lowest levels in the DN tree have average rate of 8 digits. The rest of the DN tree has a structure that provides the lowest possible digit rate for upper levels. 	$(5.8 \times \text{Number of DNs}) + 2 \times (2 \times \text{Number of ACD DNs}) + (\text{Number of ACD positions} + \text{Number of DISA DNs}) + (\text{memory store per console} \times \text{Number of consoles}) + \text{Number of dial intercom groups}$
Dial Intercom Group (DIG) translator	Maximum number of DIGs + $2 \times (\text{number of DIGs} + \text{Total number of the telephones within DIGs})$
Direct Inward System Access (DISA)	Number of DISA DNs × memory store per DISA DN
Authorization Code Assumption <ul style="list-style-type: none"> The length of the authorization code is in the range of 4 through 7 	$(\text{Number of customers} \times \text{memory store per customer}) + (1.47 \times \text{Number of authorization codes})$
Speed Call	$(\text{Maximum number of Speed Call lists} + \text{Number of Speed Call lists}) \times (3 + 0.26 \times \text{Average number of entries per list} \times \text{DN size})$
*Refer to Table 50 on page 253 for the memory store per item (PDS factor).	

Table 49
Protected data store (Part 3 of 5)

Item	Calculation*
Analog trunks	Number of analog trunks × memory store per analog trunk
Trunk Route	Constant term + (Number of trunk routes × memory store per trunk route)
Network	(Number of groups × memory store per group) + (Number of local loops × memory store per local loop) + (Number of remote loops × memory store per remote loop)
DTR, TDS, MF sender, Conference, Tone Detector	(Number of DTRs × memory store per DTR) + (Number of TDSs × memory store per TDS) + (Number of MF senders × memory store per MF sender) + (Number of conference cards × memory store per conference card) + (Number of TDETs × memory store per TDET)
Virtual Trunks	(Number of D-channels × memory store per D-channel) + (Number of Virtual Trunks × memory store per Virtual Trunk)
ISDN PRI/PRI2	(Number of D-channels × memory store per D-channel) + (Number of PRI trunks + Number of ISL trunks)
ISDN DTI/DTI2/JDMI	(Number of DTI loops × memory store per DTI loop) + (Number of DTI2 loops × memory store per DTI2 loop)
History file	Size for history file buffer
*Refer to Table 50 on page 253 for the memory store per item (PDS factor).	

Table 49
Protected data store (Part 4 of 5)

Item	Calculation*
Basic Alternate Route Selection/Network Alternate Route Selection (BARS/NARS) Assumptions <ul style="list-style-type: none"> The length of any code = 3 The typical structure of the tree for every code (in terms of digit rate) is the following: <ul style="list-style-type: none"> 10-10-10... for SPN code 8 -10-10... for NXX/LOC code 6-2-10-8-10... for NPA code 	$5684 + (31.21 \times \text{number of NPA Codes}) + (1.06 \times \text{Number of NXX Codes}) + (1.06 \times (\text{Number of LOC Codes}) + (\text{Number of SPN Codes}) + (2 \times \text{Number of FCAS Tables}))$
ISDN Basic Rate Interface (BRI)	$(\text{Number of MISP boards} \times \text{memory store per MISP board}) + (\text{Number of DSLs} \times \text{memory store per DSL}) + (\text{Number of TSPs} \times \text{memory store per TSP}) + (\text{Number of BRI DNs} \times \text{memory store per BRI DN})$
Coordinated Dialing Plan (CDP)	$\text{Constant term} + (3 \times \text{Number of steering codes}) + (8 \times \text{Number of route lists}) + (3 \times \text{Total number of entries in route lists})$
Call Party Name Display (CPND)	$\text{Number of trunk routes} + \text{Number of consoles} + \text{Number of ACD DNs} + \text{Number of digital telephone DNs} + \text{Number of Names} \times (5 + \text{Average length of name}) + (\text{Number of 1-digit DIG groups} \times 11) + (\text{Number of 2-digit DIG groups} \times 101)$
*Refer to Table 50 on page 253 for the memory store per item (PDS factor).	

Table 49
Protected data store (Part 5 of 5)

Item	Calculation*
<p>Feature Group D (FGD) Automatic Number Identification (ANI) Database</p> <p>Assumptions</p> <ul style="list-style-type: none"> • All Numbering Plan Area (NPA) codes designated for BARS/NARS are used for ANI also. • One NPA block for every fifty NPA codes. • Five NXX blocks for each NPA block. • Twenty SUB blocks for each NXX block. 	$(3 \times \text{Number of NPA Codes}) + (658 \times \text{Number of NPA codes})$
Automatic Call Distribution (ACD)/Network ACD (NACD)	$(\text{Number of ACD DNs} \times \text{memory store per ACD DN}) + (\text{Number of NACD DNs} \times \text{memory store per NACD DN}) + (\text{Number of ACD positions} \times \text{memory store per ACD position}) + (\text{Number of ACD agents}) + (11 \times \text{Number of customers})$
System overhead	Memory store for system overhead
*Refer to Table 50 on page 253 for the memory store per item (PDS factor).	

Table 50 lists the memory store per item (PDS factor) used in calculating PDS requirements.

Table 50
PDS factors (units in SL-1 words) (Part 1 of 3)

Feature	Units
System overhead	32 768
500/2500-type telephones*	58
CLASS telephones	58
M2006/2008 telephones*	105
M2216/2616 telephones*	115
M2317 telephones*	131
M3900 telephones	131
ACD telephones	16
IP Phones 200x	115
IP Softphones 2050	115
Add-on modules	32
Templates	16
Consoles	236
DS/VMS Access TNs	14.5
ISDN BRI:	
— MISP cards	542
— DSLs	153
— TSPs	180
— BRI DNs	47
* See “Protected Memory for Phone Sets: Detail” on page 541 .	

Table 50
PDS factors (units in SL-1 words) (Part 2 of 3)

Feature	Units
Analog trunks	54
Virtual Trunks	54
Trunk routes:	
— Constant term	1024
— Trunk routes	238
ISDN PRI/PRI2/ISL:	
— D-channels	137
ISDN DTI/DTI2/JDMI:	
— DTI loops	70
— DTI2 loops	153
DISA DN's	18
Network:	
— Groups	49
— Local loops	91
— Remote loops	95
ODAS	3
* See "Protected Memory for Phone Sets: Detail" on page 541 .	

Table 50
PDS factors (units in SL-1 words) (Part 3 of 3)

Feature	Units
Customers:	
— Constant term	1000
— Customers	502
Tone and Digit Switch	2
MF Sender	2
Conference card	2
Digitone receiver	12
Tone Detector	3
DN Translator (Consoles)	125
Author. Code (Custom.)	199
FGD ANI Database:	
— Constant term	43
— NPA Codes	547
CDP (Constant Term)	637
ACD/NACD:	
— ACD DNs	92
— NACD DNs	174 src 115 dest
— ACD Positions	30
* See “Protected Memory for Phone Sets: Detail” on page 541 .	

Unprotected data store

Table 51 describes the unprotected data store (UDS) area.

Table 51
 Unprotected data store (Part 1 of 6)

Item	Calculation
Telephones (every type except BRI telephones)	Number of items × memory store per item where: memory store per item depends on the telephone type. For example: Number of 2500 telephones × memory store per 2500 telephone Number of telephones with display × memory store per display
BRI telephones	Constant term + (memory store per MISP × Number of MISPs) + (memory store per DSL × Number of DSLs) + (memory store per BRI line card × Number of BRI line cards) where: MISP = Multi-purpose ISDN Signaling Processor DSL = Digital Subscriber Loop

Table 51
Unprotected data store (Part 2 of 6)

Item	Calculation
<p>Analog trunks:</p> <ul style="list-style-type: none"> Paging trunks, RAN trunks, Add-on Data Module (ADM), RLA trunks, other analog trunks 	<p>Number of paging trunks × memory store per paging trunk</p> <p>Number of other analog trunks × memory store per other analog trunk</p> <p>and so on</p> <p>(Number of other analog trunks = Total number of analog trunks – Number of paging trunks – Number of RAN trunks – Number of ADMs – Number of RLAs)</p>
Trunks (Call Detail Recording [CDR])	Total number of trunks × memory store per trunk
BRI trunks	Number of BRI trunks × memory store per BRI trunk
Trunk routes	<p>(Number of trunk routes × memory store per trunk route) + (Total number of trunks ÷ 16)</p> <p>Note: Round up the division result.</p>
DTI/DTI2/JDMI	<p>Number of DTI loops × memory store per DTI loop</p> <p>Number of DTI2 loops × memory store per DTI2 loop</p>

Table 51
Unprotected data store (Part 3 of 6)

Item	Calculation
ISDN PRI/PRI2/ISL <ul style="list-style-type: none"> • PRI • PRI2 	<p>(Number of D-channels × memory store per PRI D-channel) + (Number of output request buffers × memory store per output request buffer) + (2 × [Number of PRI trunks + Number of ISL trunks])</p> <p>(Number of D-channels × memory store per PRI2 D-channel) + (Number of output request buffers × memory store per output request buffer) + (2 × [Number of PRI2 trunks + Number of ISL trunks])</p>
I/O ports	<p>(Number of TTYs × memory store per TTY) + (Number of CDR links × memory store per CDR link) + (Number of HS links × memory store per HS link) + (Number of APL links × memory store per APL link) + (Number of PMS links × memory store per PMS link) + (Number of Other links × memory store per Other link)</p>
Other items (features): <ul style="list-style-type: none"> • Local loops, remote loops, secondary tapes, customer, TDS, MF sender, Conference card, DTR, Tone Detector, attendant, Peripheral Signaling card, LPIB, HPIB, background terminal, MSDL card 	<p>Number of items × memory store per item</p> <p>Note: The size of High Priority Input Buffer = Number of Groups × 32.</p>
PBXOB and BCSOB	<p>Number of Peripheral Signaling Cards × 640</p>

Table 51
Unprotected data store (Part 4 of 6)

Item	Calculation
DS/VMS access TNs	Memory store per DS/VMS TN × (Number of CallPilot ports + Number of data only ports)
Application Module Link (AML)	Constant term + (Number of AMLs × memory store per AML)
Automatic Call Distribution (ACD): <ul style="list-style-type: none"> Without ACD-C package With ACD-C package 	(Number of ACD DNs × 298) + (Number of ACD positions × 34) Additional memory size: (Number of ACD-C routes × 46) + (Number of ACD-C positions × 42) + [(Number of ACD-C DNs + Number of control directory numbers) × 80] + [(Number of ACD-C trunks + Number of ACD-C CRTs) × 30] + (Number of customers with ACD-C package × 240)
NARS/BARS/Coordinated Dialing Plan (CDP) Assumption: <ul style="list-style-type: none"> If NTRF package is equipped, then Off Hook Queuing (OHQ) is also equipped 	(Memory store per customer × Number of customers) + 2 × ([Number of route lists × memory store per route list] + [Number of routes with OHQ × memory store per route] + [Number of NCOS defined × memory store per NCOS])

Table 51
Unprotected data store (Part 5 of 6)

Item	Calculation
<p>Call registers</p> <p>Assumptions:</p> <ul style="list-style-type: none"> • Call Register Traffic Factor = 1.865 • The formula for calculating the recommended number of call registers depends on traffic load for the system. • 28 CCS per ACD trunk 	<p>Call Registers memory size = Recommended number of call registers × memory store per call register</p> <p>Snacd = (Number of calls overflowed to all target ACD DN's × 2.25) – (Number of calls overflowed to local target ACD DN's × 1.8) (= 0 if the system is not a source node)</p> <p>Tnacd = 0.2 × Number of expected calls overflowed from source (= 0 if the system is not a target node)</p> <p>ISDN CCS = PRI CCS + BRI CCS</p> <ul style="list-style-type: none"> • ISDN penetration factor: $p = \text{ISDN CCS} \div \text{Total Voice Loop Traffic}$ • ISDN factor: $(1 - p)^2 + [4 \times (1 - p)] \times p + (3 \times p^2)$

Table 51
Unprotected data store (Part 6 of 6)

Item	Calculation
If Total Voice Traffic > 3000 CCS, then:	Recommended number of call registers = $(0.04 \times \text{Total Voice Traffic}) + (0.18 \times \text{Number of ACD incoming trunks}) + [(Snacd + Tnacd) \times 0.03 \times \text{ISDN factor}]$
If Total Voice Traffic \leq 3000 CCS, then:	Recommended number of call registers = $[(\text{Number of system equipped ports} - \text{Number of ACD incoming trunks} - \text{Number of ACD agent telephones}) \times 0.94] + \{(\text{Number of ACD incoming trunks} + [(Snacd + Tnacd) \times 0.03]) \times \text{ISDN factor}\}$
System overhead	Memory store for system overhead

Table 52 lists the memory store per item (UDS factor) used in calculating UDS requirements.

Table 52
UDS factors (units in SL-1 words) (Part 1 of 3)

Feature	Units
System overhead	32 768
500/2500-type telephones	43.5
M2006/2008 telephones	89
M2216/2616 telephones	120
M2317 telephones	111.25
M3900 telephones	130
IP Phones 200x	120
IP Softphones 2050	96
Consoles	141
Add-on modules	24
Displays	2
DS/VMS access TNs	16.5
ISDN BRI telephones:	
— Constant term	298
— MISP cards	2270
— DSLs	264
— BRI line cards	96

Table 52
UDS factors (units in SL-1 words) (Part 2 of 3)

Feature	Units
Analog trunks:	
— RAN trunks	74
Broadcast RAN trunks	
— RLA Trunks	46
— AUTOVON Trunks	164
— ADM	172
— Other Analog Trunks	161
Virtual Trunks	161
Trunk routes	416
BRI trunks	148
Virtual Trunk D-Channel (DCIP)	850
DTI/DTI2 JDMI:	
— DTI loops	109
— DTI2 loops	97
PRI/PRI2:	
— D-channels (PRI)	836
— D-channels (PRI2)	850

Table 52
UDS factors (units in SL-1 words) (Part 3 of 3)

Feature	Units
I/O ports:	
— I/O ports (total)	2085
— CDR links	128
— HS links	143
— APL links	311
— PMS links	130
— Other links	512
Local loops	69
Remote loops	93
Customers	243
Tone and Digit Switch	59
MF Sender	59
Conference cards	191
Digitone receiver	12
Tone Detector	13
PS cards	59
Background terminals	96
MSDL cards	1395
AML (CSL):	
— Constant term	147
— AML Links	510
Call Registers	227

Mass storage

Software installation and database backups are handled differently with the new CP PIV card.

CP PII Software Installation

For CP PII software installation, software is loaded to hard disk via an external medium and then SYSLOAD is performed from the hard disk. The software uploading medium is a CD-ROM. The customer database is loaded to the hard disk from a separate floppy disk, which can be rewritten via a “backup” operation or stored to hard disk via a “restore” operation (LD 43). CP3, CP4 and CP PII use floppy disks for backup.

The hard disk is formatted into three separate 305MB partitions regardless of its actual physical size.

The IODU/C and MMDU provide software delivery by CD-ROM. The methodology for software installation and feature expansion is based on keycodes. IODU/C and MMDU delivers software through a CD-ROM. A 1.44 MByte floppy disk supplies the keycodes. This replaces the (large) stack of floppy disks required to install software in the past.

CP PIV Software Installation

CP PIV software is stored on an internal 1GB Compact Flash (CF) that acts as an ATA drive, which is then partitioned into three 305MB partitions. The software is loaded from this drive at start up into DRAM memory to operate.

The software is initially installed onto the system through a faceplate accessible CF (RMD). This is typically a 512MB Card. An installation program will copy the software, keycodes, and customer configuration database onto the on-board CF.

The faceplate CF slot can also be used for customer database backups. Typically, a 64MB card would be installed in this slot to accept backups.

CP PIV uses a face-plate CF for backup. This enables CP PIV to archive several databases while CP PII can only archive one. Table 53 on [page 266](#) shows the amount of space required on the external media. Space

requirements are the same, per database, for each media type. Data compression occurs with the floppy disk, but not for the flash device on the CP PIV. These are conservative but realistic estimates; that is, not all sites with the given machine type will have databases as large as shown. Data is automatically compressed before a copy of the system's database is written to floppy disk. This greatly reduces the size of the database and the number of floppy disks required.

Table 53
Projected floppy disk and CF space requirements for SL-1 customer data (MByte)

System	RIs 25	CS 1000 Release 4.0	CS 1000 Release 4.5
Meridian 1 PBX 51C	0.53	0.56	0.63
Meridian 1 PBX 61C, Meridian 1 PBX 61C CP PII, CP PIV, CS 1000M SG	0.88	0.93	1.04
Meridian 1 PBX 81C, Meridian 1 PBX 81C CP PII, CP PIV, CS 1000M MG <= 5 group system	2.46	2.60	2.92
Meridian 1 PBX 81C, Meridian 1 PBX 81C CP PII, CP PIV, CS 1000M MG 6-8 group system	3.93	4.17	4.69

Physical capacity

Resource constraints consist primarily of loop and card slot limitations at the network shelf. From practical experience, running out of PE shelves is rare, particularly for Call Center applications.

This section provides information to calculate physical requirements and capacity considerations for:

- loops (see [page 267](#))

- card slots (see [page 271](#))
- signaling and data links (see [page 276](#))

Loop constraints

The maximum number of loops in a network group is 32, including service loops. For practical applications, the number of traffic loops is usually limited to 28, reserving two loops each for TDS and Conference.

Estimate loop requirements separately for the following categories:

- Non-Automatic Call Distribution (non-ACD) telephones and analog trunks (N_0) ([page 267](#))
- Agent sets and ACD analog trunks (N_1) ([page 268](#))
- DTI/PRI trunks (N_2) ([page 269](#))
- Loops for CallPilot, Music (MUS), Music Broadcast, and Meridian Mail (MM) applications (N_3) ([page 270](#))
- Media Card (N_4) ([page 271](#))

Note on notation

In the calculations that follow, $[]^+$ means use the next higher integer, or “round up.”

For example, $[4]^+ = 4$ and $[3.1]^+ = 4$.

This document simplifies notations by omitting the “+” at the upper right corner of the bracket. Therefore, $[x]$ means round up x to the next higher integer.

Non-Automatic Call Distribution (non-ACD) telephones and analog trunks

Treat non-ACD telephones and trunks differently from ACD applications for estimating loop requirements. Non-ACD telephone and trunk circuits are equipped in the PE shelf and do not use slots in the Network shelf. Therefore, they are not included in the Network Module Card Slots Calculation.

If there is any doubt about potentially running out of PE slots for a given application (for example, Hotel/Motel environment), review the PE slots to

check possible card slot limitations. Since this is a rare occurrence, a calculation procedure is not provided.

For Call Center applications, due to high centi-call seconds (CCS) on circuits (agents or trunks), there is no need to be concerned about physical slot constraints on the PE shelf since real time will be the limiting resource.

When Primary Rate Interface (PRI) trunks are involved in non-ACD applications, they should be treated just like ACD PRI trunks and included in the calculations for both loop and card slot requirements.

The following procedure applies for general and Call Center applications. For IPE XNET loops:

$$\text{Number of loops for non-ACD set and trunk traffic} = N_{0x} = \frac{[(\text{No. of sets} \times 6 + \text{No. of non-ACD trunks} \times 26) \div 875]}{1}$$

The above calculations account for blocking XNET loops.

The default values of 6 CCS per set and 26 CCS per trunk can be replaced by actual numbers for a particular site if they are given. Note that the default trunk traffic assumed for non-ACD application is lower than that of an ACD trunk (28 CCS). The 875 CCS per loop in IPE is derived from superloop capacity of 3500 CCS divided by 4 to obtain the average CCS per loop.

Agent sets and ACD analog trunks

When the system serves as a Call Center, it will most likely be equipped with more trunks than agent telephones (lines). The reason for having a higher number of trunks is that there are calls in the queue that engage trunk circuits but not ACD agents until they are served. In addition, in a Network Automatic Call Distribution (NACD) application, the overflowed calls continue to occupy trunks without the service of agents at the source node. The trunk-to-agent ratio may change if a service requires a long post-call processing time from an agent. In that case, reduce CCS per agent to reflect the actual agent service times associated with actual calls to the call processor (CP).

Traffic at agent telephones is conservatively assumed to be 33 CCS and 18.3 (= $33 \times 100 \div 180$) calls per agent in the busy hour as a default in

examples. For applications with long post-call processing time, default values of 18 CCS and 10 calls per agent are perhaps more appropriate.

Based on the standard system engineering rules, a loop can handle 660 CCS and a superloop can handle 3500 CCS. When an agent is loaded to 33 CCS, a loop can equip 20 agents ($= 660 \div 33$) and a superloop 106 ($= 3500 \div 33$); both numbers are less than their respective number of timeslots (30 for loop, 120 for superloop). Thus, normal network engineering rules do not apply in a Call Center environment, because the “infinite traffic source” assumption in the Erlang model is violated.

Ignore the traffic model here. Instead, use the rule of equipping 30 agents per loop and 120 agents per superloop for a non-blocking connection. The superloop was created to take advantage of the traffic theory that a bigger server group is more efficient than a smaller one. This is no longer true in a non-blocking application, so any superloop can be replaced by four loops without capacity impact. To get the equivalent number of superloops, divide the required number of loops by four.

To calculate loop requirements, treat an agent supervisor telephone like an agent telephone. However, reduce the call intensity of the agent supervisor set for real-time calculations.

The following is the procedure for calculating loop requirements. Let the number of agent telephones be L_1 , the number of supervisor telephones be L_2 , the number of ACD analog trunks be T_A , and the number of Recorded Announcement (RAN) trunks be T_R :

Number of non-blocking loops for agent telephones, supervisor telephones, and ACD analog trunks = $N_1 = [(L_1 + L_2 + T_A + T_R) \div 30]$

DTI/PRI trunks

At an average of 28 CCS per trunk, a loop of 660 CCS can equip 23 ($= 660 \div 28$) trunks. It is more practical to equip 24 trunks per PRI/DTI loop as a rule, rather than doing traffic calculations.

The equations for trunk loop calculation are as follows. Let T_D be the number of DTI trunks and T_P be the number of PRI trunks:

Number of loops for DTI trunks, $N_{2D} = [T_D \div 24]$

Number of loops for PRI trunks, $N_{2P} = [(T_P + 2) \div 24]$

Number of loops for digital trunks, $N_2 = N_{2D} + N_{2P}$

When a back-up D-channel is not needed, the term $(T_P + 2)$ in the equation for PRI trunks can be replaced by $(T_P + 1)$.

When the number of analog trunks is small (say, 15 or less), it may be included in the N_0 calculation to save loop and slot requirements.

Techniques for reducing the number of card slots required are illustrated in engineering examples for small systems, where physical slots are scarce.

For the international version of PRI, change the number of ports from 24 to 30 in the above calculations. The rest of the engineering procedure is unchanged.

Loops for CallPilot, Music (MUS), Music Broadcast, and Meridian Mail (MM) applications

Music is provided by broadcasting a music source to a Conference loop. Therefore, a maximum of 30 users can listen to music at one time, which is sufficient for most applications. If not, an additional Conference loop must be provided for each additional set of 30 simultaneous music users.

Music Broadcast requires any Music trunk and an external music source or a Nortel Integrated Recorded Announcer card (NTAG36). Integrated Recorded Announcer has the capability to provide audio input for external music. A Conference loop is not required for Music Broadcast.

CallPilot ports are interfaced with a loop to provide voice channels for messaging. Each set of 24 ports in the CallPilot interfaces with one loop. The Conference loop connects to one half of the Conference/TDS card. A second Conference loop, if needed, takes another card and card slot, because it cannot be separated from the TDS loop.

The network to interface Meridian Mail must be an ENET. The Meridian Mail Module takes up a whole shelf, normally underneath the CE/PE or CP module. Therefore, it does not impact the available card slots in the Network Module.

The procedure to calculate the number of loops required for applications is as follows:

$$N_{31} = \text{Music ports} \div 30$$

$$N_{32} = \text{CallPilot ports for CallPilot or Meridian Mail} \div 24$$

$$\text{Number of loops for applications, } N_3 = N_{31} + N_{32}$$

Media Card

The 32-port Media Card is a function of IP phones and gateway traffic from TDM to LAN/WAN. To calculate N_4 , the number of loops required for Media Cards, refer to “Gateway channels traffic engineering” on [page 291](#).

Physical limits in loops

To calculate N_L , the total number of network loops required in the system, sum the loop requirements previously calculated for agent telephones and ACD analog trunks, digital trunks, applications, and Media Cards:

$$N_L = N_1 + N_2 + N_3 + N_4$$

Card slots

Calculating the number and assignment of cards and, relatedly, modules can be an iterative procedure, because of specific capacity and usage requirements.

- “Card slot usage and requirements” on [page 272](#)
- “Card slot assignment rules” on [page 273](#)
- “Physical slots available to Large System platforms” on [page 274](#)
- “I/O device requirements” on [page 275](#)
- “Card slot calculation algorithm” on [page 276](#)

Card slot usage and requirements

Table 54 summarizes the physical capacities of Large System modules and cards.

Table 54
Physical characteristics of Network cards and modules

Name of card/ module	No. of loops	Card slots	No. of ports/ cards	Comments
NT8D04 Superloop Network card	4	1		Take all 4 loops in two adjacent slots
NT8D17 Conference/TDS	2	1		One (1) card per network module, not separable
NT5D12 DDP card	2	1	2	Needed for PRI/DTI T1s
NT5D97 DDP2 card	2	1	2	Needed for PRI/DTI E1s
QPC414	2	1		Required for Meridian Mail ports, QPC720 DTI/PRI loops
SDI (QPC841)		1	4	For MMax (HSL), CDR
MSDL/MISP		1	4	Provides SDI, ESDI and DCHI functions
NT5D21 Core/ Network Module	8	9		Single group system; CC & extra SDI slot in CE
NT8D35 Network Module		8		Multi group system; extra space for single group system
NT4N41	16	9		CPCI Core/Network Card Cage AC/DC for single group and multi group systems

Table 55 summarizes the module requirements for various system types.

Table 55
System modules

System	Modules	
	Quantity	Type
CS 1000M HG, Meridian 1 PBX 51C	1	NT5D21 Core/Network Module
CS 1000M SG/Meridian 1 PBX 61C	2	NT5D21 Core/Network Module
CS 1000M SG/Meridian 1 PBX 61C CP PII	2	NT4N41 Core/Network Module
Meridian 1 PBX 81C	2	NT5D21 Core/Network Module
CS 1000M MG/Meridian 1 PBX 81C CP PII	2	NT4N46 Core/Network Modules or
	2	NT4N41 Core/Network Module
<i>Note:</i> This table is for comparison purposes with legacy products. Only the NTN41 Core/Network Module is currently available.		

Card slot assignment rules

The following considerations apply when calculating card slot requirements:

- 1 The NT5D12 occupies a single network shelf slot. It provides an interface to the 1.5 Mbps external digital line, either directly or through an office repeater, Line Terminating Unit (LTU), or Channel Service Unit (CSU). The NT5D12 integrates the functionality of two QPC472 DTI/QPC720 PRI cards.
- 2 A DCHI port is required for PRI. This port can be provided by a DCHI card (with one other port for SDI) or MSDL card (with three additional ports for other functions).
- 3 A Clock Controller (CC) card is required for PRI or DTI. It has its own dedicated slot on either Core/Network Module of the Meridian 1 PBX 61C, or the CE Module of the Meridian 1 PBX 81C.

- 4 A Superloop Network card takes one card slot but, because of address limitations, its adjacent slot cannot be used by any card that requires network loops, such as the Conference/TDS card or the QPC414 Network card. The slot next to a Superloop Network card can equip only non-network cards (such as ESDI, MSDL).
- 5 For the Meridian 1 PBX 61C, a Clock Controller is required in slot 9.

Physical slots available to Large System platforms

A Large System network group has 32 loops.

- Each loop has 30 channels.
- Four loops constitute a superloop of 120 channels, with a traffic capacity of 3500 CCS.

CS 1000M SG, Meridian 1 PBX 61C

The two NT4N41 Core/Network Modules each have eight card slots for Network and I/O cards. In addition to these slots, there is a fixed slot for a Clock Controller card and an SDI card. It is assumed that one NT8D17 Conference/TDS card is equipped for each Core/Network Module. Without considering applications, the 14 card slots can support 28 traffic loops or 6 superloops.

When H.323 Trunks (Peer H.323 Gateway Trunk) or Session Initiation Protocol Trunks (SIP trunks) are configured on a logic superloop in a CS 1000M SG system, no hardware is required. A superloop of 128 channels can be configured for up to 1024 Virtual Trunks.

CS 1000M MG, Meridian 1 PBX 81C

The NT4N41 Core/Network Modules have eight card slots for Network and I/O cards. It is assumed that one NT8D17 Conference/TDS card is equipped for each Core/Network Module. Without considering applications, the 14 card slots can support 28 traffic loops. Additional groups are added for expansion. This configuration consists of a minimum of 2 groups, which contain 28 card slots and can support 56 traffic loops.

The NT8D04 Superloop Network card or NT1P61 Fiber Superloop Network card provides four network loops grouped as one superloop. One superloop

can serve up to two NT8D37 IPE Modules. Each superloop provides 120 timeslots and has a traffic capacity of 3500 CCS.

Note that since there are eight card slots in an NT8D35 module, a maximum of three NT8D04 Superloop Network cards, or 12 loops, can be equipped per module if there is also a Conference/TDS card. This leaves one slot available for the NT5D12 DDP or NT5D97 DDP2 cards, and three slots for I/O cards.

When H.323 trunks or SIP trunks are configured on a logic superloop in a CS 1000M MG system, no hardware is required. A superloop of 128 channels can be configured for up to 1024 Virtual Trunks.

FNF is used to interconnect networks, the maximum size of the system is eight groups with no intergroup junctor blocking.

I/O device requirements

Most advanced features on the system are controlled by auxiliary processors, which communicate with the system CP on routing and other instructions. Since I/O cards compete with network cards for slot space in a network shelf, they are crucial in deciding whether a given system is able to provide all necessary ports and features. Table 56 on [page 279](#) summarizes information required to calculate the number of I/O cards needed as an input to the card slot calculation worksheet (see “Card slot calculation algorithm” on [page 276](#) and “Physical capacity” on [page 516](#)).

Certain other applications, such as data, may require interface to I/O ports. However, this section considers only applications that apply in the context of a Call Center.

Once the applications for a given site are known, calculate the required number of I/O ports. Depending on the type of I/O cards provided, determine the number of card slots required.

The system has a maximum of 64 I/O practising MSDL. This constraint may need to be considered for large systems with many application features. For smaller systems, the card slot constraint is a concern, but not the maximum number of I/O addresses.

For CS 1000M SG, MG, and Meridian 1 PBX 61C, the ELAN network for the AML/ML interface with a data rate at 10/100 Mbps. Its interface to the system is through an Ethernet connection, and the communication message is an emulation of AML message. The messages from the ELAN network interface continue to interface through CSQI and CSQO, the input/output buffer for AML.

Card slot calculation algorithm

The rules described in this section are summaries of earlier sections. Apply these rules in developing the card slot calculation worksheet (see “Physical capacity” on [page 516](#)).

- 1 Determine Conference/TDS card requirements: one card per Network Module or 14 loops (including virtual loops).
- 2 Determine MUSic loop card: one Conference/TDS card per music loop.
- 3 Broadcast RAN does not require CON/Music loop. It broadcasts announcement to waiting calls directly.
- 4 Each Media Card interfaces with one loop. Each card provides transcoding between 32 TDM channels and 32 DSP channels.
- 5 Clock Controller slot: put in a zero in this space.
- 6 Calculate XNET card slots: sum up all XNET loops and divide by 4 to get the card slots required.
- 7 I/O card slot: the number of slots next to XNET cards that are usable only for I/O cards, regardless of whether needed or not.
- 8 The sum of the total card slots above should not exceed 16 for CS 1000M SG and Meridian 1 PBX 61C CP PIV.

The algorithm described in this section is implemented in the card slot calculation worksheet.

Signaling and data links

Two categories of signaling and data links are discussed in this section:

- 1 “Physical links” on [page 277](#)
- 2 “Functional links” on [page 278](#)

Physical links

There are three types of physical links to consider:

- Serial Data Interface (SDI) ([p. 277](#))
- Multi-purpose Serial Data Link and Multi-purpose ISDN Signaling Processor (MSDL/MISP) ([p. 277](#))
- Embedded Local Area Network (ELAN) ([p. 277](#))

Serial Data Interface (SDI)

The SDI is an asynchronous port, providing input access to the system from an OA&M terminal and printing out maintenance messages, traffic reports, and Call Detail Recording (CDR) records to a TTY or tape module. An SDI card has four ports. An MSDL card has four ports for a combination of interfaces.

Multi-purpose Serial Data Link and Multi-purpose ISDN Signaling Processor (MSDL/MISP)

An MSDL card has four ports providing a combination of SDI, ESDI, and DCHI functions. Using MSDL cards, the number of I/O ports in the system can reach 64. If older I/O cards are used, the maximum number per system is 16. The data rate of each port of an MSDL card is dependent on the function it provides. The maximum rate is 64 000 bps for D-channel applications, but lower for other applications.

Embedded Local Area Network (ELAN)

The system can communicate with a Host by Ethernet connection through a Network Interface Card (NIC). AML messages are embedded in the communication protocols, and they continue to interface with the system through CSQI and CSQO queues.

The data rate that can be set at the NIC port is a function of the system CPU type. For CP3 and CP4, only 10T (10 Mbps) half duplex is allowed. For CP PIV, the rate can be 10/100/1000MB auto negotiate, half duplex or full duplex.

Functional links

For each of the following functions, the type of link and resulting capacity are given.

High Speed Link (HSL)

The HSL is an asynchronous link, used for the system CP to communicate with the MAX module via an SDI port. Prior to MAX 8, the HSL bandwidth was 9600. With MAX 8 and later, 19 200 baud is available.

Application Module Link (AML)

AML is a synchronous link between the system and an Application Module (AM) through the ESDI port. The data rate of the link can be one of the following rates: 300, 1.2 KByte, 2.4 KByte, 4.8 KByte, 9.6 KByte, or 19.2 kbps. The standard setup between the system and an AM is the 19.2 kbps link.

Command and Status Link (CSL)

The CSL is the version of AML specifically used for the communications between the system and the Meridian Mail (MM) system. It has some MM-specific messages. The interface is through an ESDI port. For Meridian Mail 1 through Meridian Mail 9, the CSL link rate was 4800 baud. Beginning with Meridian Mail 10, the link rate is 9600 baud.

OA&M

The system uses an SDI port to connect to a computer (TTY) to receive maintenance commands or to print traffic reports, maintenance messages, or CDR records.

ISDN Signaling Link (ISL)

An ISL provides common channel signaling for an ISDN application without PRI trunks. An analog trunk with modems at the originating switch and the terminating switch can be used as an ISL to transmit ISDN messages between these two remote systems. The interface for an ISL is an ESDI port. The maximum data rate for the link is 19.2 kbps.

D-channel

A PRI interface consists of 23 B-channels and one D-channel. The D-channel at 64 kbps rate is used for signaling. A D-channel interfaces with the system through a DCHI card or a DCHI port on an MSDL. A D-channel on a BRI telephone is a 16 kbps link that is multiplexed to make a 64 kbps channel.

Property Management System Interface (PMSI)

The PMSI allows the system to interface directly to a customer-provided PMS through an SDI port. It is primarily used in Hotel/Motel environments to allow updates of the room status database either from the check-in counter or a guest room. The enhanced PMSI allows retransmission of output messages from the system to a PMS. The maximum baud rate for this asynchronous port is 9600.

Table 56 summarizes the above functional links and interfaces and provides information required to calculate the number of I/O cards needed as an input to the card slot calculations.

Table 56
I/O interface for applications (Part 1 of 2)

Application	Type of link/ network interface	Type of port	Sync or async
AML (associated telephone)	AML	ESDI	Sync
Symposium	ELAN	Ethernet	Sync
CallPilot	ELAN	Ethernet	Sync
CDR	RS232 C	SDI	Async
Host Enhanced Routing	AML	ESDI	Sync
Host Enhanced Voice Processing	CSL & AML	ESDI	Sync
ISL	Modem	ESDI	Sync
Note: An ESDI card has two ports; an SDI card has two ports; a DCHI card has one DCHI port and one SDI port; an MSDL card has four combination ports.			

Table 56
I/O interface for applications (Part 2 of 2)

Application	Type of link/ network interface	Type of port	Sync or async
Interactive Voice Response	CSL	ESDI	Sync
Meridian Mail	CSL	ESDI	Sync
Meridian MAX	HSL	SDI	Async
Meridian 911	AML	ESDI	sync
Property Management System Interface (PMSI)	PMSI Link	SDI	Async
NACD (PRI)	64 kB D-channel	DCHI	Sync
TTY (OA&M)	RS232 C	SDI	Async
Note: An ESDI card has two ports; an SDI card has two ports; a DCHI card has one DCHI port and one SDI port; an MSDL card has four combination ports.			

Network traffic

Traffic is a measure of the time a circuit is occupied. On the system, the circuit normally consists of a path from the telephone or trunk to its line card to a loop through the network to another loop, and on to another line or trunk card attached to the terminating telephone or trunk.

This section discusses the following traffic considerations:

- “Loops and superloops” on [page 281](#)
- “Intelligent Peripheral Equipment (IPE)” on [page 282](#)
- “Lines and trunks” on [page 282](#)
- “Groups” on [page 285](#)
- “Service loops and circuits” on [page 285](#)

- “Traffic capacity of Voice Gateway Media Cards” on [page 289](#)
- “Traffic capacity engineering algorithms” on [page 292](#)

Terminology

Basic traffic terms used in this section are:

- **ATTEMPT** – any effort on the part of a traffic source to seize a circuit/channel/timeslot
- **CALL** – any actual engagement or seizure of a circuit or channel by two parties
- **CALLING RATE** – the number of calls per line per busy hour (Calls/Line)
- **BUSY HOUR** – the continuous 60-minute period of day having the highest traffic usage, usually beginning on the hour or half-hour
- **HOLDING TIME** – the length of time during which a call engages a traffic path or channel
- **TRAFFIC** – the total occupied time of circuits or channels, generally expressed in CCS or Erlangs (CCS = a circuit occupied 100 seconds; Erlang = a circuit occupied one hour)
- **BLOCKING** – attempts not accepted by the system due to unavailability of the resource
- **OFFERED traffic** = **CARRIED traffic** + **BLOCKED traffic**
- **Traffic load in CCS** = $\text{Number of calls} \times \text{AHT} \div 100$ (where AHT = average holding time)
- **Network CCS** = Total CCS handled by the switching network
or
CCS offered to the network by stations, trunks, attendants, Digitone receivers, conference circuits, and special features

Loops and superloops

The number of loops needed in the system can be calculated from lines, trunks, and traffic requirements such as average holding time (AHT) and CCS. This section describes the algorithms for these computations, which are

incorporated into the traffic worksheet in “Network loop traffic capacity” on [page 515](#).

In the worksheet, the number of lines and trunks are given as inputs. In order to arrive at the number of trunks needed to meet the necessary GoS, the Poisson P.01 table is typically used. This table can also be used for other circuits requiring P.01 GoS, such as RAN trunks. For the Poisson P.01 table, refer to “Trunk traffic – Erlang B with P.01 Grade-of-Service” on [page 552](#).

Superloop capacity

Each superloop can carry 3500 CCS of combined station, trunk, attendant console, and Digitone traffic during an average busy season busy hour (ABSBH).

Loop capacity is subject to the Grade-of-Service (GoS) described under “Grade-of-Service” on [page 293](#).

Intelligent Peripheral Equipment (IPE)


By combining four network loops, the superloop network card (NT8D04) makes 120 timeslots available to IPE cards. Compared with regular network loops, the increased bandwidth and larger pool of timeslots increase network traffic capacity for each 120-timeslot bundle by 25% (at a P.01 GoS). The recommended traffic capacity for an IPE superloop is 3500 CCS, which meets all GoS requirements for network blocking. For non-blocking applications, a superloop can be equipped up to 120 lines or trunks, and each circuit can carry up to 36 CCS.

Lines and trunks

The relationship between lines and trunks is relevant for calculating loop requirements. Figures 55 and 56 show how traffic parcels on a loop can be broken up.

Figure 55 on [page 283](#) represents traffic in a Meridian 1 TDM-based environment. For additional information, refer to “Peripheral Equipment” on [page 78](#).

Figure 55
Traffic calls — TDM only

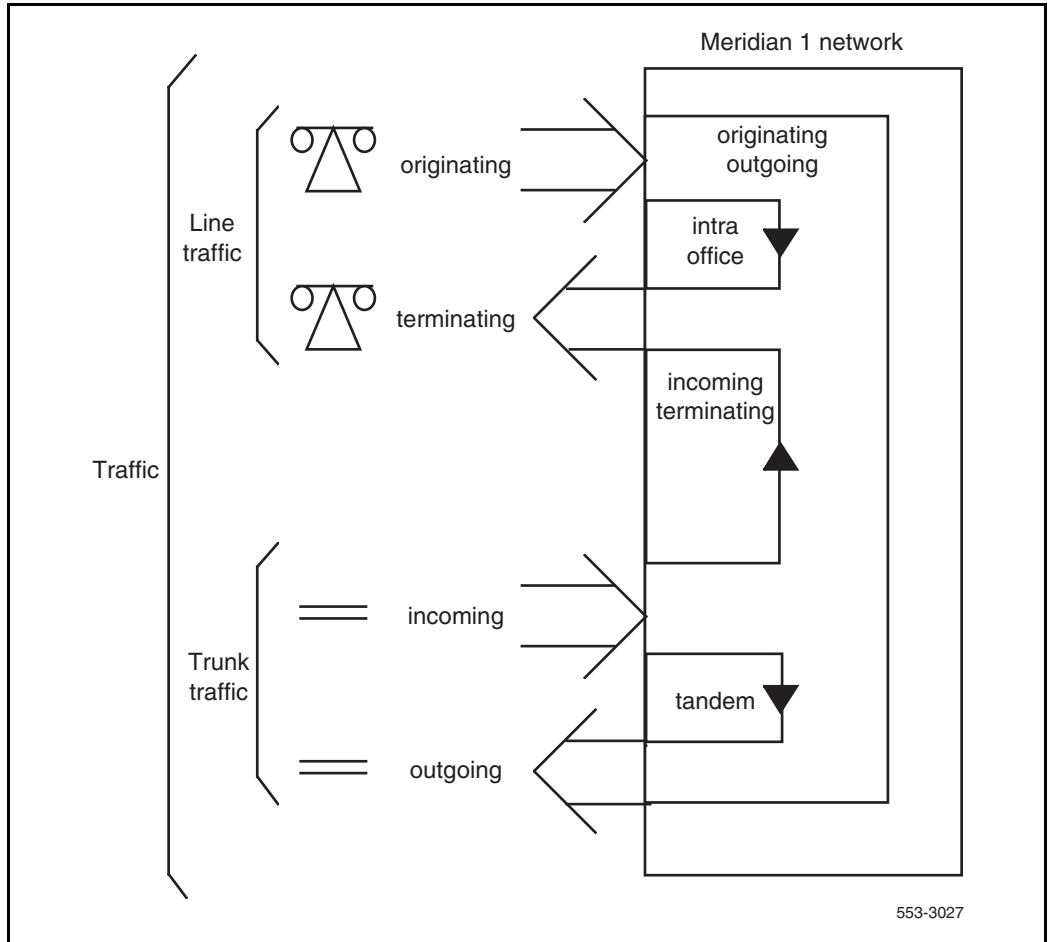

Voice over IP traffic

In the context of Voice over IP (VoIP) application, the lines include IP Phones and the trunks include IP Peer H.323 Virtual Trunks and SIP Virtual Trunks. The ratio of IP calls to the total line calls, and the ratio of H.323 and SIP Virtual Trunks calls to the total trunk calls, are required parameters. The split of TDM traffic to IP/Virtual Trunks (VT) becomes

important, since resources such as Digital Signal Processor (DSP) in Media Cards and H.323 or SIP Virtual Trunks are affected by traffic distribution.

Figure 56 is a representation of the traffic flow for different types of calls. Each connection is denoted by a line. Only lines crossing the DSP line require a DSP port. For example, TDM to TDM connections require no DSP, and neither do IP to IP or IP to VT.

Figure 56
CS 1000M system call types

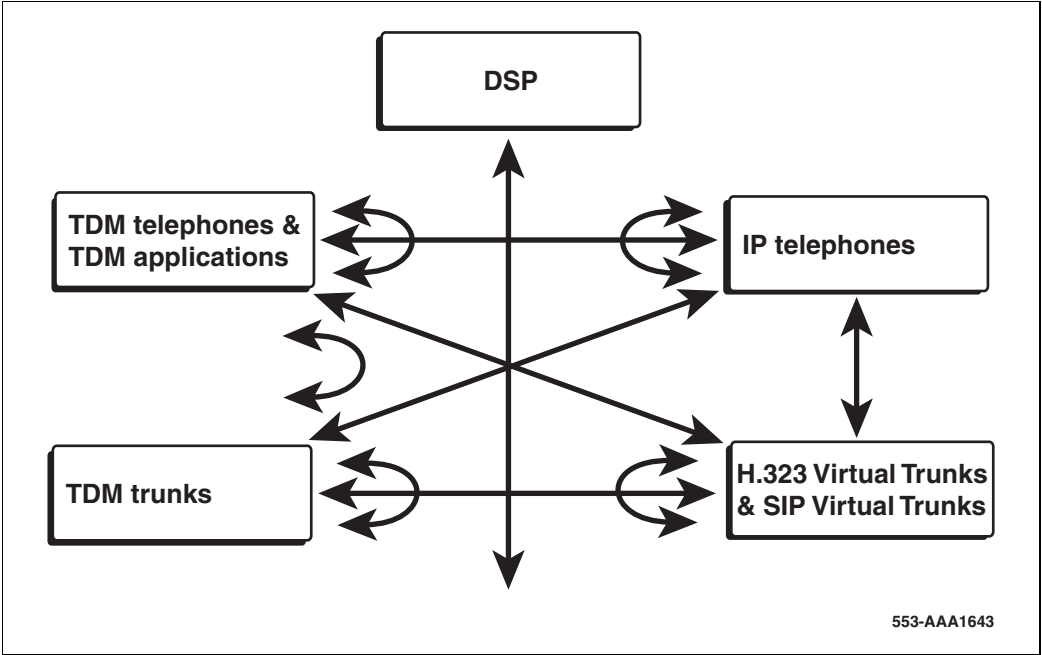


Table 57 lists the resources required for each type of connection.

Table 57
Connection type resources required

Connection Type	Resources
TDM to IP, IP to TDM	DSP
TDM to VT, VT to TDM	DSP and VT
IP to IP	no DSP
IP to VT or VT to IP	VT
TDM to TDM telephone or trunk calls	no DSP nor VT

Refer to “Resource calculations” on [page 323](#) for the algorithms to calculate the required resources.

Groups

A network group is comprised of two network modules of 16 loops each, for a total of 32 loops. The maximum size of a system expanded with Fiber Network Fabric (FNF) is 8 groups or 256 loops.

There are two types of loops:

- Terminal loops provide channels for general traffic.
- Service loops provide tones and service functions.

The number of groups in a system is determined by the number of terminal loops and service loops required (see “Card slot usage and requirements” on [page 272](#)).

Service loops and circuits

Service circuits are required in call processing to provide specific functions to satisfy the requirements of a given application. They are system resources. Service circuits consume system resources, such as physical space, real time, memory, and so on.

This section describes the traffic characteristics, calculation algorithms, and impact on other system resources of the following types of service circuits:

- TDS ([p. 286](#))
- Conference ([p. 286](#))
- Broadcast circuits ([p. 287](#))
- DTR ([p. 288](#))

TDS

The Tone and Digit Switch (TDS) loop provides dial tone, busy tone, overflow tone, ringing tone, audible ringback tone, DP or dual tone multifrequency (DTMF) outpulsing, and miscellaneous tones. All these tones are provided through the maximum 30 timeslots in the TDS loop.

In other words, the maximum number of simultaneous users of tone circuits is 30, whether it be 30 of one tone or a combination of many different types of tones. One TDS loop is normally recommended for each Network Module or half network group of 14 traffic loops. Additional TDS loops may be added if needed, but this is rare.

Conference

The Conference (CON) loop is a part of the dual loop NT8D17 Conference/TDS card. It provides circuits for 3-way or 6-way conferences. It can also broadcast music from a source to a maximum of 30 users simultaneously. In addition, a CON loop also provides temporary hold for a variety of features, chief among them, the End to End Signaling. One CON loop is normally recommended for each half network group or 14 traffic loops.

Music

Music can be provided through conferencing a caller to a MUS source. Therefore, a CON loop is required for the Music on Hold feature. Each set of 30 simultaneous music users will require a CON loop, thus a Conference/TDS card, since these two service loops are not separable. For a small system, music users can share a conference loop with other applications. However, this is not a common practice in Call Center applications.

Use the following formula to calculate MUS traffic:

$$\text{MUS CCS} = \text{Number of ACD calls using MUS} \times \text{MUS HT} \div 100$$

A segment of music typically runs from 40 seconds to 60 seconds. If the average for a specific application is not known, use a default of 60 seconds. After CCS is obtained, estimate the MUS port requirement from a Poisson P.01 table or a delay table (such as DTR table) matching the holding time of a MUS segment (see “Reference tables” on [page 551](#)).

Broadcast circuits

The Nortel Integrated Recorded Announcer (Recorded Announcer) card provides either 8 or 16 ports to support Music, Recorded Announcement (RAN), and Automatic Wake Up.

Music

Music Broadcast requires any Music trunk and an external music source or a Recorded Announcer card. The Recorded Announcer has the capability to provide audio input for external music. A CON loop is not required for Music Broadcast.

RAN

RAN trunks are located on eight-port trunk cards on PE shelves just like regular trunk circuits. They provide voice messages to waiting calls. RAN trunks are also needed to provide music to conference loops for music on hold.

Each RAN trunk is connected to one ACD call at a time, for the duration of the RAN message. Different RAN sources require different RAN trunk routes. If the first RAN is different from the second RAN, they need different RAN trunk routes. However, if the same message is to be used, the first RAN and second RAN can use the same route.

Use the following formula to calculate RAN traffic:

$$\text{RAN CCS} = \text{Number of ACD calls using RAN} \times \text{RAN HT} \div 100$$

A RAN message typically runs from 20 seconds to 40 seconds. If the average for a specific application is not known, use a default of 30 seconds. After

RAN CCS is obtained, estimate RAN trunk requirements from a Poisson P.01 table or a delay table (such as DTR table) matching the holding time of a RAN message.

DTR

A Digitone receiver (DTR) serves features involving 2500 telephones or Digitone trunks. DTRs are system-wide resources and should be distributed evenly over all network loops.

There are a number of features that require DTRs. General assumptions for DTR traffic calculations are:

- DTR traffic is inflated by 30% to cover unsuccessful dialing attempts.
- Call holding time used in intraoffice and outgoing call calculations is 135 seconds if actual values are unknown.
- DTR holding times are 6.2 and 14.1 seconds for intraoffice and outgoing calls, respectively.
- The number of incoming calls and outgoing calls are assumed to be equal if actual values are not specified.

The major DTR traffic sources and their calculation procedures are as follows:

1 Calculate intraoffice DTR traffic:

$$\text{Intraoffice} = 100 \times \text{DTR station traffic (CCS)} \div \text{AHT} \times (R \div 2)$$

(Recall that R is the intraoffice ratio.)

2 Calculate outgoing DTR traffic:

$$\text{Outgoing} = 100 \times \text{DTR station traffic (CCS)} \div \text{AHT} \times (1 - R \div 2)$$

3 Calculate direct inward dial (DID) DTR traffic:

$$\text{DID calls} = \text{DID DTR trunk traffic (CCS)} \times 100 \div \text{AHT}$$

4 Calculate total DTR traffic:

$$\text{Total} = [(1.3 \times 6.2 \times \text{intra}) + (1.3 \times 14.1 \times \text{outgoing calls}) + (2.5 \times \text{DID calls})] \div 100$$

5 See “Digitone receiver load capacity – 6 to 15 second holding time” on [page 562](#) to determine the number of DTRs required. Note that a weighted average for holding times should be used.

Traffic capacity of Voice Gateway Media Cards

The number of IP Phones and IP Softphones is determined by the engineering of real-time usage, traffic capacity, network loop usage, and IPE slot usage.

Note 1: If a Media Card 32-port card or a Media Card 8-port card is running IP Line software, it is known as a Voice Gateway Media Card.

Note 2: The Voice Gateway Media Cards in a Large System support IP Phones type 2001, 2002, and 2004 and the IP Softphone 2050. In this section, the term “IP Phones” will be used to refer generically to all these IP telephones.

Each Media Card 32-port card has 32 ports, which are used for establishing a voice connection between IP Phones and non-IP Phones. To configure a system as non-blocking (as is typically the case for ACD configurations), ensure that only 32 IP Phones are registered on each card.

Each Media Card 8-port card has 8 ports, which are used for establishing a voice connection between IP Phones and non-IP Phones. To configure a system as non-blocking (as is typically the case for ACD configurations), ensure that only 8 IP Phones are registered on each card.

A registered telephone is not synonymous with a configured telephone. When a telephone is registered, it is as if the telephone is plugged in. When the telephone de-registers, it is as though the telephone is unplugged. Registration consists of two steps:

- 1** Verifying that the user’s TN is valid and has not yet been registered.
- 2** Associating the TN on the system.

If an IP Phone is unplugged, it is automatically unregistered after a predetermined time-out.

Voice Gateway Media Cards in a system are pooled by customer number, are assigned dynamically, and are allocated preferentially by matching bandwidth management zones.

Note 1: The average number of Busy Hour Call Attempts (BHCA) must not exceed 1200 per Voice Gateway Media Card.

Note 2: The capacity of a 32-port Media Card at P.01 GoS = 794 CCS.

Refer to the following three examples for further clarification.

Example 1

One hundred fifty (150) IP Phones with “typical” business usage of 600 call seconds per hour (6 CCS) for each telephone on average (for example, 5 calls of 120 seconds duration per hour):

- $150 \times 6 \text{ CCS} = 900 \text{ CCS}$
- Two Media Card 32-port cards are required.

Two Media Card 32-port cards support up to 1738 CCS.

Example 2

Five hundred (500) IP Phones with “heavy” business usage of 12 CCS for each telephone on average (for example, 6-7 calls of 180 seconds duration every hour):

- $500 \times 12 \text{ CCS} = 6000 \text{ CCS}$
- Six Media Card 32-port cards are required.

Six Media Card 32-port cards support up to 6013 CCS

Example 3

Forty-eight (48) Call Center Agents with an allocation of 36 CCS for each telephone:

- $48 \text{ ports required} \div 32 \text{ ports for each Media Card 32-port card} = 2 \text{ Media Card 32-port cards}$ (1.5 must be rounded up to 2)
- Two Media Card 32-port cards are required.

Note: For Call Center Agents, it is recommended that one port be provisioned for each agent.

Gateway channels traffic engineering

Configure no more than four Voice Gateway Media Cards on each superloop to eliminate the possibility of blocking because of insufficient timeslots (for example, 4 Voice Gateway Media Cards \times 32 ports = 128 timeslots). Use Table 58 to determine the number of Voice Gateway Media Cards required to maintain the recommended capacity.

Table 58
Voice Gateway Media Card recommendations based on CCS capacity
(Part 1 of 2)

Number of cards	Media Card 8-port card CCS capacity	Media Card 32-port card CCS capacity
1	113	794
2	319	1822
3	550	2891
4	794	3982
5	1044	5083
<p>Note 1: CCS is the number of hundred call seconds per hour.</p> <p>Note 2: The IP Phone blocking probability is P.01.</p> <p>Note 3: If the number of Media Card 32-port cards exceeds 6, or the number of Media Card 8-port cards exceeds 24, use the following formula to estimate capacity: $(\text{CCS} \div 6192) \times 192$</p>		

Table 58
Voice Gateway Media Card recommendations based on CCS capacity
(Part 2 of 2)

Number of cards	Media Card 8-port card CCS capacity	Media Card 32-port card CCS capacity
6	1300	6192
7	1559	(see Note 3)
8	1822	(see Note 3)
9	2088	(see Note 3)
10	2354	(see Note 3)
12	2891	(see Note 3)
16	3982	(see Note 3)
20	5083	(see Note 3)
24	6192 (see Note 3)	(see Note 3)
<p>Note 1: CCS is the number of hundred call seconds per hour.</p> <p>Note 2: The IP Phone blocking probability is P.01.</p> <p>Note 3: If the number of Media Card 32-port cards exceeds 6, or the number of Media Card 8-port cards exceeds 24, use the following formula to estimate capacity: $(CCS \div 6192) \times 192$</p>		

Traffic capacity engineering algorithms

Traffic capacities of subsystems in the system are estimated based on statistical models that approximate the way a call is handled in that subsystem.

When inputs to the algorithm are lines, trunks, average holding time (AHT), and traffic load (CCS), the algorithms can be used to determine the number of loops and system size.

Alternatively, when the loop traffic capacity is known for a given configuration, the algorithms can be used to determine the traffic level allowed at the line and trunk level while meeting GoS requirements.

Grade-of-Service

In a broad sense, the Grade-of-Service (GoS) encompasses everything a telephone user perceives as the quality of services rendered. This includes:

- frequency of connection on first attempt
- speed of connection
- accuracy of connection
- average speed of answer by an operator
- quality of transmission

In the context of the system capacity engineering, the primary GoS measures are blocking probability and average delay.

Based on the EIA Subcommittee TR-41.1 Traffic Considerations for PBX Systems, the following GoS requirements must be met:

- 1 Dial tone delay is not greater than 3 seconds for more than 1.5% of call originations.
- 2 The probability of network blocking is 0.01 or less on line-to-line, line-to-trunk, or trunk-to-line connections.
- 3 Blocking for ringing circuits is 0.001 or less.
- 4 Post-dialing delay is less than 1.5 seconds on all calls.

Any connection in the system involves two loops, one originating and one terminating. In an intergroup connection of a multi-group system, it also involves an intergroup junctor, which can also incur blocking. Each stage of connection is engineered to meet 0.0033 GoS. Therefore, overall network blocking in the system is less than 0.01, regardless of whether the call is a line or trunk call, or an intra- or intergroup call.

Note: There is no intergroup blocking for the eight-group network with fiber junctors.

Traffic models

Table 59 summarizes the traffic models that are used in various subsystem engineering procedures.

Table 59
Traffic models

Model	Assumptions	Service criteria	Applicability
Erlang B	Infinite sources (ratio of traffic sources to circuits > 5:1)	Blocked calls cleared (no queueing)	Loop, ringing circuit blocking
Erlang C	Infinite sources	Blocked calls delayed Infinite queue	Dial tone delay, I/O buffers, Digitone, RAN trunks
Poisson	Infinite sources	Blocked calls held for a fixed length	Incoming/outgoing trunks, Digitone, Call Registers, RAN trunks

Typically, the GoS for line-side traffic is based on Erlang B (or Erlang Loss formula) at P.01 GoS. When there is no resource available to process a call entering the system, the call is blocked out of the system. Therefore, the correct model to calculate the call's blocking probability is a "blocked call cleared" model, which is the basis of Erlang B.

When a call is already in the system and seeking a resource (trunk) to go out, the usual model to estimate trunk requirements is based on the Poisson formula. The reasons are:

- The Poisson model is more conservative than Erlang B (in that it projects a higher number of circuits to meet the same GoS). This reflects trunking requirements more accurately, since alternative routing (or routing tables) for outgoing trunk processing tends to increase loading on the trunk group.
- General telephony practice is to provide a better GoS for calls already using system resources (such as tones, digit dialing, and timeslots). Incomplete calls inefficiently waste partial resources. With more trunk circuits equipped, the probability of incomplete calls is lower.

Real-time capacity

Real-time capacity (load) refers to the ability of the Call Server to process instructions resulting from calls in accordance with service criteria.

Existing systems can use methods based on traffic data in order to determine Rated Call Capacity and current utilization levels. Refer to *Traffic Measurement: Formats and Output* (553-3001-450) for a description of the TFS004 call capacity report and for information on interpreting TFS004 output.

If a new switch is being configured, equivalent basic calls must be calculated in order to estimate the processor loading of a proposed configuration.

Equivalent Basic Calls

An Equivalent Basic Call (EBC) is a measure of the real time required to process a basic call. A basic call is defined as a simple, unfeatured call between two 2500-type telephones on the same switch using a four-digit dialing plan. The terminating telephone is allowed to ring three times, then is answered, waits approximately two seconds, and hangs up. The originating telephone then hangs up as well.

When the capacity of a switch is stated in EBC, it is independent of such variables as configuration, feature mix, and usage patterns. It still varies from release to release, and between processors. However, since it is independent of other factors, it is a good way to compare the relative call processing capability of different machines running the same software release.

Table 60 gives the rated capacities of the Call Server processors in Large Systems operating CS 1000 Release 4.5.

Table 60
Real-time capacity (EBC) by system (with CS 1000 Release 4.5 software)

System	Capacity
CS 1000M/Meridian 1 PBX with NT5D10 CP card ("CP3")	72 000
CS 1000M/Meridian 1 PBX with NT5D03 CP card ("CP4")	100 800
CS 1000M/Meridian 1 PBX with CP PII	315 000
CS 1000M/Meridian 1 PBX with CP PIV	1 006 000

Feature impact

Every feature that is applied to a call increases the CP real time consumed by that call. These impacts can be measured and added incrementally to the cost of a basic call to determine the cost of a featured call. This is the basis of the algorithm used by NNEC to determine the rated capacity of a proposed switch configuration.

The incremental impact of a feature, expressed in EBC, is called the real-time factor for that feature. Real-time factors are computed by measuring the incremental real time for the feature in milliseconds, and dividing by the call service time of a basic call.

Each call is modeled as a basic call plus feature increments. For example, an incoming call from a DID trunk terminating on a digital telephone with incoming CDR is modeled as a basic call plus a real-time increment for incoming DID plus an increment for digital telephones plus an increment for incoming CDR.

A second factor is required to determine the overall impact of a feature on a switch. This is the penetration factor. The penetration factor is simply the proportion of calls in the system that invoke the feature.

The real-time impact, in EBC, of a feature on the system is computed as follows:

$$(\text{Calls}) \times (\text{penetration factor}) \times (\text{real-time factor})$$

The sum of the impacts of all features, plus the number of calls, is the real-time load on the system, in EBC.

For penetration and real-time factors and for the detailed EBC calculations, refer to “System calls” on [page 329](#) and “Real-time calculations” on [page 334](#).

Call Server real-time calculations

The system EBC divided by the processor’s rated capacity (see Table 60 on [page 296](#)) yields the fraction for processor utilization. This determines whether the proposed system will handle the load. If the projected real-time load is larger than the system capacity, a processor upgrade is needed.

Traffic peaking of 30% has been incorporated in the derivation of rated capacity. In other words, at 100% rated capacity, the absolute loading of the processor is 70%. Users should not adjust the rated capacity, but the loading percentage can reach 100% and the system will still function well. However, to preserve spare capacity for growth and extra traffic peaking, initial engineering of any site at full 100% loading is not recommended. A more typical initial load is about 85%.

If the configuration is an upgrade to an existing switch, in addition to calculating the new load as described above, users must also factor in CPU utilization data from a current traffic report TFS004. Users apply a formula to convert the existing processor usage to the equivalent loading on the new (and presumably faster) CPU.

I/O impact

There are two types of I/O interface allowed at the system: the synchronous data link and asynchronous data link. ESDI and DCHI cards provide interface to synchronous links, and an SDI card provides interface to asynchronous links. The MISP/MSDL card can provide both.

At the I/O interface, the system CP processes an interrupt from SDI port per character while processing an ESDI/DCHI interrupt per message (multiple characters). As a result, the average real-time overhead is significantly higher in processing messages from an SDI port than from an ESDI port. MSDL, however, provides a ring buffer.

Auxiliary processors

Interactions with auxiliary processors also have real-time impacts on the system CP depending on the number and length of messages exchanged. Several applications are described in “Application engineering” on [page 391](#).

Real-time algorithm

As described above, calculating the real-time usage of a configuration requires information on the number of busy hour call attempts and the penetration factors of each feature.

Busy hour calls

If the switch is already running, the number of busy hour calls or call load can be determined from the traffic printout TFS004. The second field of this report (after the header) contains a peg count of CP Attempts. Examine a period of several days (a full week, if possible) to determine the maximum number of CP attempts experienced. This number varies with season, as well. The relevant number is the average of the highest ten values from the busiest four-week period of the year. An estimate will do, based on current observations, if this data is not available.

If the switch is not accessible and call load is not known or estimated from external knowledge, call load can be computed. For this purpose, assumptions about the usage characteristics of telephones and trunks must be made. Refer to Table 65 on [page 324](#) for a description of the parameters that are required and default values, if applicable.

Telephones

As the primary traffic source to the system, telephones have a unique real-time impact on the system. For the major types listed below, the number of telephones of each type must be given, and the CCS and AHT must be estimated. In some cases it may be necessary to separate a single type into

low-usage and high-usage categories. For example, a typical office environment with analog telephones may have a small call center with agents on analog telephones. A typical low-usage default value is 6 CCS. A typical high-usage default value is 28 CCS.

The principal types of telephones include:

- Analog: 500/2500-type, message waiting 500, message waiting 2500, and CLASS telephones
- Digital: M2000 series Meridian Modular Telephone, voice and/or data ports
- Consoles
- IP Phone 2001, IP Phone 2002, IP Phone 2004, and IP Phone 2007
- IP Softphone 2050

Trunks

Depending on the type of trunk and application involved, trunks can either be traffic sources, which generate calls to the system, or resources that satisfy traffic demands. Default trunk CCS in an office environment is 26 CCS. Call Center applications may require the default to be as high as 28 to 33 CCS.

Voice

Analog:

- CO
- DID
- WATS
- FX
- CCSA
- TIE E&M
- TIE Loop Start

Digital:

- DTI: number given in terms of links, each of which provides 24 trunks under the North American standard
- PRI: number given in terms of links, each of which provides 23B+D under the North American standard
- European varieties of PRI: VNS, DASS, DPNSS, QSIG, ETSI PRI DID

H.323 Virtual Trunk

An IP Peer H.323 Virtual Trunk identified with a trunk route which is not associated with a physical hardware card.

SIP Virtual Trunk

A Session Initiation Protocol (SIP) Virtual Trunk identified with a trunk route which is not associated with a physical hardware card.

Data

- Sync/Async CP
- Async Modem Pool
- Sync/Async Modem Pool
- Sync/Async Data
- Async Data Lines

RAN

The default value for AHT_{RAN} is 30 seconds.

Music

The default value for AHT_{MUSIC} is 60 seconds.

Signaling Server

The following software components operate on the Signaling Server:

- Terminal Proxy Server (TPS)
- H.323 Gateway (Virtual Trunk)
- SIP Gateway (Virtual Trunk)
- Network Routing Service (NRS)
- CS 1000 Element Manager web server

All the software elements can coexist on one Signaling Server or reside individually on separate Signaling Servers, depending on traffic and redundancy requirements for each element.

A Signaling Server can also function as an application server for the Personal Directory, Callers List, and Redial List applications and Password administration. See “Application server for Personal Directory, Callers List, and Redial List” on [page 306](#).

Table 61 describes the function and engineering requirements of each element. For detailed Signaling Server engineering rules and guidelines see “Signaling Server algorithm” on [page 352](#).

Table 61
Elements in Signaling Server (Part 1 of 5)

Element	Function and engineering requirements
Terminal Proxy Server (TPS)	<ul style="list-style-type: none"> — The TPS handles initial signaling exchanges between an IP Phone and the Signaling Server. — The TPS supports a maximum of 5000 IP Phones on each Signaling Server. — The TPS manages the firmware for the IP Phones that are registered to it. Accordingly, the TPS also manages the updating of the firmware for those IP Phones. — The redundancy of TPS is N+1. Therefore, one extra Signaling Server can be provided to cover TPS functions from N other servers.

Table 61
Elements in Signaling Server (Part 2 of 5)

Element	Function and engineering requirements
H.323 Gateway (Virtual Trunk)	<ul style="list-style-type: none"> — The IP Peer H.323 Gateway trunk, or H.323 Virtual Trunk, provides the function of a trunk route without a physical presence in the hardware. The H.323 Gateway supports direct, end-to-end voice paths using Virtual Trunks. — The H.323 Signaling software (Virtual Trunk) provides the industry-standard H.323 signaling interface to H.323 Gateways. It supports both en bloc and overlap signaling. This software uses an H.323 Gatekeeper to resolve addressing for systems at different sites. — The H.323 Gateway supports up to 1200 H.323 Virtual Trunks per Signaling Server, assuming a combination of incoming and outgoing H.323 calls (see “Maximum number of SIP and H.323 Virtual Trunks” on page 305). Beyond that, a second Signaling Server is required. <p>Note 1: At least 768 MByte of memory is required on the Signaling Server to obtain 1200 H.323 Virtual Trunks. If the Signaling Server has less than 768 MByte of memory, then a maximum of 382 Virtual Trunks can be configured.</p> <p>Note 2: If H.245 tunneling is not enabled, then a maximum of 900 H.323 Virtual Trunks can be supported on a Signaling Server equipped with at least 768 MByte of memory.</p> <ul style="list-style-type: none"> — The redundancy mode of the H.323 Gateway is $2 \times N$. Two H.323 Gateways handling the same route can provide redundancy for each other, but not for other routes.

Table 61
Elements in Signaling Server (Part 3 of 5)

Element	Function and engineering requirements
SIP Gateway (Virtual Trunk)	<ul style="list-style-type: none">— The SIP Gateway trunk, or SIP Virtual Trunk, provides a direct media path between users in the CS 1000M domain and users in the SIP domain.— The SIP trunking software functions as:<ul style="list-style-type: none">– a SIP User Agent– a signaling gateway for all IP Phones— The SIP Gateway supports a maximum of 1800 SIP Virtual Trunks (see “Maximum number of SIP and H.323 Virtual Trunks” on page 305).— The redundancy mode of the SIP Gateway is $2 \times N$. Two SIP Gateways handling the same route can provide redundancy for each other, but not for other routes.

Table 61
Elements in Signaling Server (Part 4 of 5)

Element	Function and engineering requirements
Network Routing Service (NRS)	<ul style="list-style-type: none"> — The NRS has three components: <ul style="list-style-type: none"> – H.323 Gatekeeper – SIP Redirect Server – Network Connection Service (NCS) — The NRS must reside on the Leader Signaling Server. In a redundant configuration, the NRS is configured as Primary, Alternate, or Failsafe (if required). — The NRS software limit for the combined total number of endpoints and routing entries is 20 000. The limit for the total number of endpoints is 5000 (up to 5000 SIP and up to 2000 H.323 endpoints). — The redundancy of the NRS is in a mode of $2 \times N$. An alternate NRS can serve only the NRS it is duplicating.
<ul style="list-style-type: none"> • H.323 Gatekeeper 	<ul style="list-style-type: none"> — All systems in the network register to the H.323 Gatekeeper, which provides telephone number to IP address resolution. — The capacity of the H.323 Gatekeeper is limited by the endpoints it serves and the number of entries at each endpoint. — Potential hardware limits are the Signaling Server processing power and memory limits. — Since the Gatekeeper is a network resource, its capacity is a function of the network configuration and network traffic (IP calls). Some basic network information is required to engineer a Gatekeeper.
<ul style="list-style-type: none"> • SIP Redirect Server 	<ul style="list-style-type: none"> — The SIP Redirect Server provides telephone number to IP address resolution. It uses a Gateway Location Service to match a fully qualified telephone number with a range of Directory Numbers (DN) and uses a SIP gateway to access that range of DNs.
<ul style="list-style-type: none"> • Network Connection Service (NCS) 	<ul style="list-style-type: none"> — The NCS provides an interface to the TPS, enabling the TPS to query the NRS using the UNISTim protocol. The NCS is required to support the Media Gateway 1000B, Virtual Office, and Geographic Redundancy features.

Table 61
Elements in Signaling Server (Part 5 of 5)

Element	Function and engineering requirements
Element Manager	— Has a negligible impact on capacity and can reside with any other element.
Note: The feasibility of combining the Terminal Proxy Server, H.323 Gateway, SIP Gateway, and Network Routing Service on a Signaling Server is determined by traffic associated with each element and the required redundancy of each function.	

Maximum number of SIP and H.323 Virtual Trunks

The maximum number of SIP and H.323 channels available on each Signaling Server depends on the number of available File Descriptors (FD) for Virtual Trunks. The maximum number of FDs for Virtual Trunks is 1800.

- Each SIP call uses one FD.
- Each incoming H.323 call uses two FD.
- Each outgoing H.323 call uses one FD.

When no more FDs are available (available FD = 0), new channels added on the Call Server will not be able to register on the Signaling Server.

Each Signaling Server supports up to 1800 Virtual Trunks. The maximum number of SIP and H.323 trunks will depend on traffic patterns, both the split between SIP and H.323 calls and the split between incoming and outgoing

H.323 calls. Table 62 gives examples of the maximum number of Virtual Trunks supported for different configurations.

Table 62
Maximum number of Virtual Trunks, per Signaling Server

SIP	H.323*			Total Virtual Trunks
	Incoming	Outgoing	Total H.323	
1800	0	0	0	1800
0	600	600	1200	1200
0	900	0	900	900
600	0	1200	1200	1800
600	300	600	900	1500
*Assumes H.245 tunneling enabled.				

The formula to calculate the maximum number of Virtual Trunks is:

$$(\text{Num_of_SIP} \times 1 \text{ FD}) + (\text{Num_of_Incoming_H323} \times 2 \text{ FD}) + (\text{Num_of_Outgoing_H323} \times 1 \text{ FD}) \leq \text{Max_Num_of_FDs}$$

where Max_Num_of_FDs = 1800

Impact of H.245 tunneling

By default, H.245 tunneling is on. Unless there is a specific reason to disable tunneling, such as for maintenance, it should always be on. When tunneling is off, the handling capacity of the Signaling Server is reduced to a maximum of 900 H.323 Virtual Trunks.

Application server for Personal Directory, Callers List, and Redial List

The database for the Personal Directory, Callers List, and Redial List features for IP Phones must be located on one Signaling Server. The applications cannot be divided: all users in a system will either have the combined

Personal Directory, Callers List, and Redial List features or no feature at all. The Signaling Server can support a database for up to 9000 users.

- **Personal Directory:** Stores up to 100 entries per user of user names and DNs.
- **Callers List:** Stores up to 100 entries per user of caller ID information and most recent call time.
- **Redial List:** Stores up to 20 entries per user of dialed DNs and received Call Party Name Display with time and date.

The Signaling Server requires a minimum of 512 MByte of memory in order to support the Personal Directory, Callers List, and Redial List applications.

If the system size is relatively small, in terms of number of users as well as calling rates, one Signaling Server can serve both database and normal Signaling Server functions. With the Personal Directory, Callers List, and Redial List database co-resident with other applications (TPS, H.323/SIP Gateways, NRS, Element Manager), a Signaling Server with 512 MByte of memory can serve up to 1000 IP users and 382 Virtual Trunks. For larger systems, one additional Signaling Server, on top of the normal requirement for handling signaling traffic, will be required for the Personal Directory, Callers List, and Redial List features.

The amount of memory required to support the Personal Directory, Callers List, and Redial List applications on the Signaling Server depends on the number of IP users and the configuration. Table 63 shows the memory requirements.

Table 63
Signaling Server memory requirements for the Personal Directory, Callers List, and Redial List features

Personal Directory, Callers List, and Redial List configuration	Number of IP users	Number of Virtual Trunks	Required memory
Co-resident with other applications	<= 1000	<= 382	512 MByte
Stand-alone	1000 – 8000	N/A	512 MByte
Stand-alone	8000 – 9000	N/A	1 Gbyte

Note: When using more than 1000 IP Clients, the PDS server must be a single ISP1100 server running the PDS service only, as described in *IP Line: Description, Installation, and Operation* (553-3001-365).

There is no redundancy for the Signaling Server dedicated to the Personal Directory, Callers List, and Redial List database. If that Signaling Server fails, the system will lose those applications. However, the other Signaling Servers will continue to function normally without the Personal Directory, Callers List, and Redial List features.

Software configuration capacities

The tables in “Design parameters” on [page 231](#) provide maximum configuration capacities for applicable system and feature parameters. A system may not be able to simultaneously accommodate all of the maximum values listed because of system limitations on the real time, memory, or traffic capacity.

IP Telephony node maximums

The maximum number of Voice Gateway Media Cards per node is 30. When more than 30 Voice Gateway Media Cards are needed on a single CS 1000M Large System, use multiple nodes. The maximum number of Signaling Servers and Voice Gateway Media Cards combined within a node is 35.

CS 1000M capacities

Since IP telephony consumes more processing than TDM, the total number of telephones that a particular platform can support depends on the type of traffic as well as the physical capacity and applications of a specific configuration.

Table 64 summarizes the capacities of CS 1000M Large Systems. Values in each cell indicate the total number of telephones that can be supported in a particular configuration. These values are calculated from the point of view of call server processing capacity, not from the point of view of physical card slot capacity.

Note: Values in each cell are exclusive, not additive.

Table 64
CS 1000M Large System traffic capacities summary

Call server	Platform name	Total number of telephones			
		Pure TDM (no trunking)	IP telephones with access to PSTN	Pure IP (no access to PSTN)	Mixed TDM and IP telephones
CP3/CP4	CS 1000M HG	1000	1000	2000	500 TDM 500 IP
CP3/CP4	CS 1000M SG	2000	2000	3000	1000 TDM 1000 IP
CP3/CP4	CS 1000M MG	4000	3000	3000	2500 TDM 1000 IP
CP PII, CP PIV	CS 1000M SG	2000	3000	5000	1000 TDM 2000 IP
CP PII, CP PIV	CS 1000M MG	16 000	15 000	15 000	8000 TDM 5000 IP 10 000 TDM 4000 IP 12 000 TDM 3000 IP

Note 1: Values in each column reflect the total telephones for a configuration. These are absolute limits for pure TDM and pure IP. For mixed TDM and IP, values are for typical configurations. Applications and calling patterns impact call server capacity. NNEC and NTPs are used to calculate practical values preconfiguration. Values beyond these limits must be engineered.

Note 2: Requires using Signaling Servers for TPS.

Note 3: IP telephones with access to PSTN and the mixed configurations assume 8-15% digital trunking to PSTN and no applications.

Zone/IP Telephony node engineering

Zone/IP Telephony Node engineering is a network function which controls network response to traffic demands and other stimuli, such as network failures. This engineering encompasses:

- traffic management through control of routing functions
- capacity managements through control of network design
- traffic measurement and modeling
- network modeling (example: load balancing, scalability, reliability, redundancy)

Zone node engineering

A network zone is a logical grouping of CS 1000S and CS 1000M systems with IP Peer H.323 Gateways, IP Line 3.0, IP Trunk 3.01 (and later), and/or third-party gateways or endpoints.

Network zones can have geographical significance; for instance, a company could configure one network zone for its east coast offices, and one network zone for its west coast offices.

Routing (SIP/H.323) Zones

In a SIP/H.323 network, each NRS controls one SIP/H.323 zone. Each zone can consist of many SIP/H.323 endpoints. If a call terminates beyond the call originator's own zone, the Redirect Server or H.323 Gatekeeper of the called party's zone provides the endpoint information to set up the connection.

Network Bandwidth Management

To optimize IP Line traffic bandwidth use between different locations, the IP Line network is divided into zones, representing different topographical areas of the network. All IP Phones and IP Line ports are assigned a zone number indicating the zone to which they belong. When a call is made, the codecs that are used vary depending on the zone(s) in which the caller and receiver are located.


By default, when a zone is created in LD 117:

- codecs are selected to optimize voice quality (BQ - Best Quality) for connections between units in the same zone
- codecs are selected to optimize voice quality (BB - Best Bandwidth) for connections between units in different zones

Each zone can be configured to:

- optimize either voice quality (BQ) or bandwidth usage (BB) for calls between users in that zone
- optimize either voice quality or bandwidth usage within a zone and all traffic going out of a zone

Figure 57
Bandwidth management example

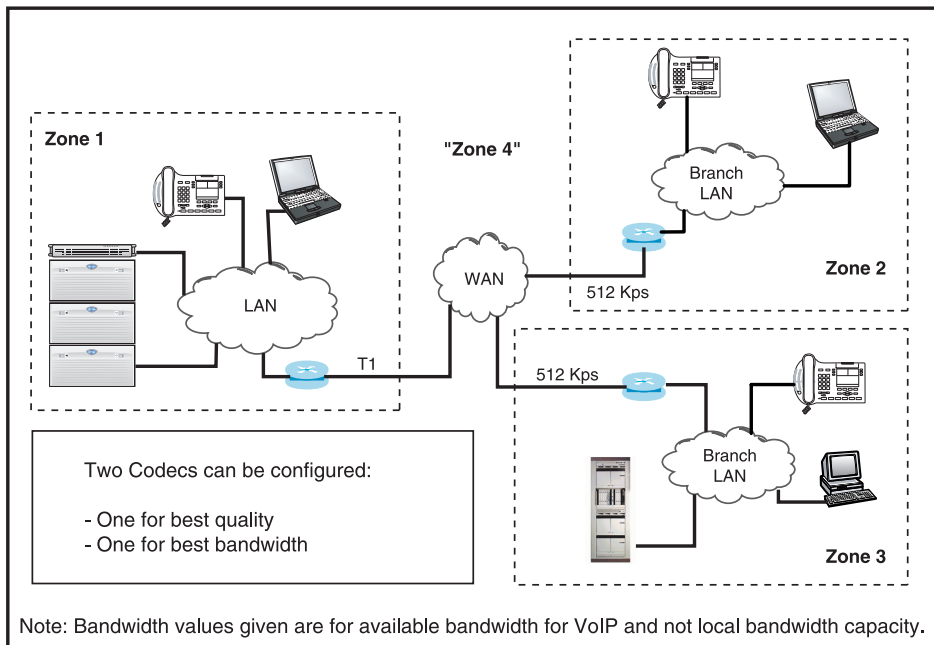

CS 1000 provides support for bandwidth management on a network-wide basis so that voice quality can be managed between multiple Call Servers using IP Peer Networking in certain scenarios.

The Network Bandwidth Management feature allows bandwidth zones to be configured on a network basis so that codec selection and bandwidth allocation software can identify whether IP Phones or gateways are physically co-located (in the same bandwidth zone) even though they are controlled by different Call Servers.

An IP Peer network is divided into different bandwidth management zones. Each IP Phone, Virtual Trunk, or Voice Gateway DSP channel is assigned to a bandwidth management zone. All IP Phones, Virtual Trunks, or Voice Gateway DSP channels in a bandwidth management zone:

- share the same IP bandwidth management policies
- are geographically near each other
- are all in the same time zone
- are all in the same PSTN dialing plan

A bandwidth management zone is assigned to each Virtual Trunk and Voice Gateway DSP Channel in LD 14. It is assigned in the same way as the ZONE for an IP Phone in LD 11. This zone enables the trunk to send a setup message, with a codec list selected according to the Best Bandwidth (BB) or Best Quality (BQ) criteria for that zone.

For dialing plan purposes, all telephones in the same zone can be treated identically. Each IP Phone is assigned to a zone during configuration and different zone numbers are assigned to different MG 1000 systems.

Customer zones

It is possible to divide a customer within a system into different zones; however, it is more common to assign one zone to one system and one customer.

Private/shared zones

The IP phones configured in shared zones use DSP resources configured in shared zones. If all of the shared zones' gateway channels are used, the caller receives an overflow tone and the call is blocked. The order of channel selection for the gateway channels is:

- 1** a channel from same zone as IP Phone is configured
- 2** any available channel from the shared zones' channels

New zone types introduced by IPL 3.0. DSP channels and configured in a private zone are only used by IP Phones that have also been configured for that private zone.

If more DSP resources are required by these IP phones than what is currently available in the zone, DSPs from other zones are used. However, IP Phones configured in shared zones cannot use private zone channels. The order of selection for the gateway channels is:

- 1 a channel from same private zone as IP Phone is configured
- 2 any available channel from the pool of shared zones' channels

Zones and branch office locations

Bandwidth zones can be configured on a network basis if MG 1000B IP Phones are controlled by a main office Call Server. In this configuration, all TDM devices (such as digital and analog 500/2500-type telephones and trunks to the local PSTN) are under the control of the MG 1000B SSC.

In this case, calls from IP Phones to these TDM devices do not use any LAN/WAN (Interzone) bandwidth for media and should, therefore, use the Intrazone algorithms for bandwidth allocation and codec selection policy. Network Bandwidth Management provides a mechanism to identify this configuration and adjust the algorithms accordingly. Once all bandwidth is used, any additional calls are blocked.

To implement this feature, the Virtual Private Network Identifier (VPNI) prompt exists in LD 15. This enables the bandwidth management feature and expands the number of bandwidth zones beyond the current maximum of 256. When VPNI is set to its default value of 0, Network Bandwidth Management is disabled.

Relationship Between Zones and subnets

IP Phones and Voice Gateway Media Cards gateway ports are assigned to zones based on the bandwidth management requirements of the particular installation. Devices in different subnets must traverse a router to communicate, and can reside on different ends of a WAN facility. When IP Phones and gateway ports are in different subnets, the network facilities

between them must be examined to determine if placing the separated devices in different zones is warranted.

It is not necessary to always assign different zones. For instance, there can be different subnets within a LAN interconnected by router(s) with sufficient bandwidth. The IP Phones and gateway channels spread across them could all reside in a single zone. However, if there is a WAN facility with limited bandwidth between two subnets, the devices on the opposite ends should be placed in different zones so the bandwidth across the WAN can be managed.

For remote users such as telecommuters, bandwidth management is not normally a consideration because only one IP Phone is present at the remote location. It can be convenient to allocate zones for users with similar connection speeds. In that case, set both the interzone and intrazone codec to Best Bandwidth (BB).

IP Telephony Node

An IP Telephony node is defined as a collection of Signaling Servers and/or Voice Gateway Media Cards. Each node in a network with one or more call servers has a unique Node ID. This Node ID has an integer value. A node has only one Leader Signaling Server or Leader Voice Gateway Media Card. All the other Signaling Servers, Voice Gateway Media Cards are defined as Followers.

A node does not by necessity need a Signaling Server or Media Card. A node can be either all Signaling Servers (a practical maximum of 5, with an actual maximum of 35), or all Media Cards (a maximum of 30), or both (a maximum of a total of 35 elements).

The TPS uses the Node ID and Node IP address for IP set registration. SIP/H.323 Gateways use Node IP address, as well as NRS Manager in case of Gateways being static endpoints.

The Node ID of SIP/H.323 Gateway has to be entered in the Route Data Block in Overlay 16 on Call Server side. The NRS does not use the Node ID or the Node IP address. A call server supports multiple nodes.

TPS

One node can have one Signaling Server that acts as a Leader or TPS master, and within the same node there can be multiple Signaling Servers acting as Followers. The IP Phones are distributed between the Signaling Servers (load-sharing). The Node number is programmed into the IP set.

It is possible to have TPS configured Signaling Servers running in more than one node. In this case, the sets are configured to the node to which they must register.

Voice Gateway Media Card is a term used to encompass the Media Card 32-port line card, Media Card 8-port line card, and ITG-P 24-port line card. These cards plug into an Intelligent Peripheral Equipment (IPE) shelf in the Meridian 1 and CS 1000M systems, and into a Media Gateway 1000S and Media Gateway 1000S Expander in the CS 1000S system. They also plug into MG 1000E for the CS 1000E systems.

In IP Line 4.0, the LTPS executes on the Signaling Server and the voice gateway executes on the Voice Gateway Media Cards. All IP Phones register with the Signaling Server. The Voice Gateway Media Cards only provide access to the voice gateway. When present, the Signaling Server is the node leader and acts as a Master for the node.

The H.323 Gateway runs on the Leader Signaling Server. The maximum capacity for a standalone H.323 Gateway Signaling Server is 1200 H.323 virtual trunks.

In a case where the number of H.323 virtual trunks is greater than 382, the H.323 Gateway cannot co-reside with any application. In this case, a standalone Signaling Server is required to run the H.323 Gateway application on its Leader Signaling Server in a new node. Different customers require different H.323 Gateways (separate nodes).

A single Signaling Server can support multiple routes, with all the routes on a single Signaling Server (on a node) configured to use same node ID and same D channel.

The SIP Gateway runs on the Leader Signaling Server. The maximum capacity for a standalone SIP Gateway Signaling Server is 1800 SIP virtual trunks.

In a case where the number of SIP virtual trunks is greater than 382, the SIP Gateway cannot co-reside with any application. In this case, a standalone Signaling Server is required to run SIP Gateway application on its Leader Signaling Server in a new node.

Different customers require different SIP Gateways (separate nodes). A single Signaling Server can support multiple routes, with all the routes on a single Signaling Server (on a node) configured to use same node ID and same D channel.

From a Signaling Server configuration point of view, PD/RL/CL can reside on Leader or Follower Signaling Server. There is no relationship between PD and nodes, and it is possible to run PD on any Signaling Server. When PD is standalone, it is recommended that the PD be placed in its own node as the Leader to simplify the organization of devices and their presentation in EM.

It is also recommended to run NRS on the Leader Signaling Server. There is no limitation in the NRS software to run NRS application on the Signaling Server Follower. However, since the installation of the Signaling Server Follower does not allow the NRS configuration, the NRS must be configured after the installation procedure.

In case of Signaling Server applications running co-res, when the number of IP Phones is greater than 1000, and the number of virtual trunks is greater than 382, a separate Signaling Server is required to run the NRS application on its Leader Signaling Server.

Since a single NRS is required for the whole network, the recommendation is to configure NRS on a separate node. The alternate recommendation for NRS is to run on the Signaling Server Leader, and configure on a separate customer site.

Node Redundancy

Signaling Server redundancy ensures that telephony services can withstand single hardware and network failures. It also provides a load-sharing basis for

the Terminal Proxy Server (TPS) and an alternate route for the SIP and H.323 Gateway software. When planning survivability strategies for the Signaling Server, one or more additional Signaling Servers should be included in the plan.

One Signaling Server is a Leader Signaling Server that acts as the primary, or master, TPS. The other Signaling Server is a Follower Signaling Server that acts as a secondary, redundant TPS. The NRS, H.323/SIP Gateways must reside on the Leader Signaling Server.

The redundancy of TPS is $N+M$. Therefore, extra Signaling Server(s) can be provided to cover TPS functions from N other servers. With a redundant Load Sharing Signaling Server:

- One or more Signaling Server(s) can be configured in a normal configuration.
- The redundant Signaling Server(s) must be configured in the same TPS node as the Signaling Servers they are protecting.
- If any of the Signaling Servers fails, sets that were registered to the failed Signaling server register to the remaining Signaling servers in the same node.
- If all Signaling servers in a node running TPS fail and the node has Voice Media Gateway Cards configured, one of the Voice Gateway Media Cards is elected to be the node Master and the other cards will be followers. IP sets will register to these Voice Media Gateway Cards up to 128 sets per card.

In a case where no backup Signaling Server exists:

- If there is no backup Signaling Server, and the primary Signaling Server fails, one of the Voice Gateway Media Cards is elected to be the node Master.
- The IP Phones then register to the Voice Gateway Media Cards.

The redundancy of VGMCs is $N+M$. The limit of 30 VGMCs per node does not impact redundancy. If the DSPs on the VGMC are configured in a shared zone, then they are accessible by all applications.

In a multi-customer situation, the individual DSP channels on the card can be assigned to any customer and they cannot be shared between customer. Redundancy must be calculated on an individual customer basis.

The redundancy mode of the H.323 Gateway is either 1:1 or 1+ M. In the 1:1 configuration one operational Gateway, and one in idle state, ready to take over. Two H.323 Gateways handling the same route can provide redundancy for each other, but not for other routes.

In the 1 + M configuration, M additional Signaling Servers are provided as leaders in their own node, and each of these 1 + M Signaling Servers support trunks routes that are in the same route list. To balance the load they have the same cost factor.

The 1 + M configuration provides performance improvement over the 1:1 configuration because fewer resources are lost in a single failure and the redundant routes are immediately available to carry traffic. The 1+ M configuration does bear the cost of additional virtual trunk licenses.

The redundancy of H.323 Gateway is provided within a node. The Primary Gateway runs on the (redundant) Signaling Server Leader on the Signaling Server Follower. The same rules apply for SIP as for H.323 Gateway.

There is a single PD/RL/CL application that must be located on a single Signaling Server. The applications cannot be divided: all IP clients in a system will either have the combined Personal Directory, Callers List, and Redial List features, or no feature at all. There is no active redundant PD/RL/CL application. A backup and restore function is provided to preserve customer data and load it into a new Signaling Server. Failure of PD/RL/CL Signaling server does not impact call processing.

In a redundant configuration, the NRS is configured as Primary, Alternate, or Failsafe. Although a network requires only one (Primary) NRS, Nortel recommends that an Alternate NRS, and Failsafe NRS, be configured in the network. The Failsafe NRS is, by default, running on SIP/H.323 Gateway.

Multi-Node configuration

In the event that an application goes beyond its capacity, a separate node is required. There is no known limit to the number of nodes supported by a

single call server. The practical limit based on what could be configured and the number of unique nodes required is relatively small, so there is no scaling limit imposed by the number of nodes on a single call server. In the event that a customer needs more than 30 VGMC cards, a separate node must be configured.

A Signaling Server with Co-Res application can support up to 1000 sets and 382 virtual trunks and Virtual Trunks and NRS applications must run on a Leader Signaling Server. In a situation where these numbers are exceeded, a separate node is required to run H.323/SIP Gateways, PD/RL/CL, or NRS applications.

If a customer requires more than 1800 SIP trunks or 1200 H.323 virtual trunks, a separate node is required in order to run H.323/SIP Gateway applications. This is due to a restriction that a node can have only one Leader Signaling Server.

In multi-customer configuration, it is required to create a separate node for virtual trunks Gateways (SIP/H.323). Multi-customer configurations require separate DSP channels; however, these channels can be on the same Voice Media Gateway Card.

Preferred performance

In the event that a performance criteria must be met, a separate node creation may be required to accommodate those requirements.

Example 1

The following example explains a possible configuration between two Meridian 1/CS 1000M switches to achieve both resiliency in the IP network, and load balancing.

Meridian 1/CS 1000M switch A has two IP Trunk 3.01 (and later) nodes, A1 and A2, for the destination NPA 613. A Route List Block (RLB) is created in order to have two route entries (one for each IP Trunk 3.01 (and later) node).

If the trunks of node A1 are all in use, or node A1 is down, call traffic is routed to node A2. This provides resiliency by preventing failure of a single IP Trunk 3.01 (and later) node (for example, DCH failure or Leader subnet fails)

from completely eliminating VoIP service for a Meridian 1/CS 1000M system.

It is desirable to distribute calls to multiple nodes at a remote destination Meridian 1/CS 1000M. The configuration of multiple dialing plan entries at the local IP Trunk 3.01 (and later) node allows routing based on the dialed digits.

For example, Meridian 1/CS 1000M switch B node B1 has two entries for NPA 408 and 4085, which point to nodes A1 and A2 of Meridian 1/CS 1000M switch A, respectively. Calls from B1 with dialed digits 408-5xx-xxxx are routed to the IP Trunk 3.01 (and later) node A1 while all other 408-xxx-xxxx calls are routed to IP Trunk 3.01 (and later) node A2.

Example 2

In order to speed up IP sets registration, a separate node may be created with a SS running TPS application, that would handle high priority phones, and speed up their registration.

Branch office - node relationship

A node is not split between branches.

Limits of a single node

The number of VGMCs and Signaling Servers combined in a node is limited to 35, without exceeding the limitations of each element type. The maximum number of VGMCs per node is 30 while the maximum number of Signaling Servers per node is 35.

Statistics, error, or log files relative to a node

All statistics, error and log files are for a single node, and are available through Element Manager. There are no summary reports or statistics for multiple nodes.

Node management

Node management is performed through Element Manager.

IP address requirements

Each card within a node has two IP addresses:

- 1** TLAN network interface and for the Meridian 1, CS 1000S
- 2** CS 1000M ELAN network interface

Each node has one Node IP address on the TLAN subnet that is dynamically assigned to the connection server on the node Master. The Internet Telephone uses the Node IP address during the registration process. All CS 1000 ELAN network interface IP addresses must be on the same subnet as the system Call Server ELAN network interface IP address.

For more information on Zone/IP Telephony node engineering, refer to the following NTPs:

- *Converging the Data Network with VoIP* (553-3001-160)
- *Branch Office: Installation and Configuration* (553-3001-214)
- *IP Trunk: Description, Installation, and Operation* (553-3001-363)
- *IP Line: Description, Installation, and Operation* (553-3001-365)

Resource calculations

Contents

This section contains information on the following topics:

Introduction	323
Resource calculation parameters	324
System calls	329
Real-time calculations	334
DSP/Media Card calculations	343
Virtual Trunk calculations	350
Signaling Server algorithm	352
Reducing imbalances (second round of algorithm calculations)	372
Illustrative engineering example	376

Introduction

This chapter describes the algorithms implemented by the NNEC tool in order to calculate the resources required by the system.

In many cases, the calculations require user inputs that are the result of pre-engineering performed in accordance with the capacities and guidelines described in “System capacities” on [page 243](#) and “Application engineering” on [page 391](#).

Note: When a proposed new system will be equipped with more ports than the initial configuration will actually use, treat the two sets of input data like two separate configurations. Run each set of data through the algorithm and then compare results. For a viable solution, both sets of calculation results must be within the capacities of the proposed system.

Resource calculation parameters

Table 65 on [page 324](#) describes the major parameters used in the Voice over IP (VoIP) calculations. Some are user input and others are calculated.

Table 65
Major parameters for VoIP resource calculations (Part 1 of 5)

Parameter	Description	Equation	Default value
TDM telephone CCS (L_{TDM})	Sum of all digital and analog telephone and line-side T1/E1 ports, in CCS	(Number of digital telephones + Number of analog telephones + Number of line-side T1/E1 ports) \times CCS per telephone	CCS per telephone: 5
IP set CCS (L_{IP}) (See Note 3 at end of table.)	Sum of all IP and IP ACD agent telephones, in CCS	[(Number of IP telephones – Number of IP ACD agents) \times CCS per IP telephone] + (Number of IP agent telephones \times CCS per agent)	CCS per telephone: 5
MDECT telephone CCS (L_{DECT})	Sum of all MDECT mobile telephones, in CCS	Number of MDECT telephones \times CCS per telephone	CCS per telephone: 5
Total line CCS (L_{CCS})	Sum of all TDM, IP, and MDECT telephone CCS	TDM telephone CCS (L_{TDM}) + IP telephone CCS (L_{IP}) + MDECT telephone CCS (L_{DECT})	

Table 65
Major parameters for VoIP resource calculations (Part 2 of 5)

Parameter	Description	Equation	Default value
TDM trunk CCS (T_{TDM})	Sum of all analog and digital trunks, in CCS	(Number of analog trunks + Number of digital trunks) \times CCS per trunk	CCS per set: 26
Converged Desktop ratio (r_{DTP})	Of the total number of telephones, the portion that have the Converged Desktop feature	(Number of telephones with Converged Desktop) \div (Total number of telephones)	
Converged Desktop CCS (V_{DCCS}) (See Note 2 after the table.)	Converged Desktop CCS calculated as a percentage of total line CCS	Total line CCS (L_{CCS}) \times Converged Desktop ratio (r_{DTP})	
SIP CTI TR/87 ratio r_{MO}	Of the total number of sets, the portion that have the SIP CTI/TR87 feature	Number of sets with SIP CTI/TR87 feature \div Total number of sets	
H.323 Virtual Trunk CCS (HVT_{CCS})	Sum of all H.323 Virtual Trunks, in CCS	Number of H.323 Virtual Trunks (VT_{323}) \times CCS per VT_{323}	
SIP Virtual Trunk CCS (SVT_{CCS})	Sum of all SIP Virtual Trunks, in CCS	Number of SIP Virtual Trunks (VT_{SIP}) \times CCS per VT_{SIP}	
H.323 Virtual Trunk ratio (v_H)	Of total Virtual Trunk CCS, the portion that are H.323 Virtual Trunks	$H.323 \text{ Virtual Trunk CCS } (HVT_{CCS}) \div [H.323 \text{ Virtual Trunk CCS } (HVT_{CCS}) + \text{SIP Virtual Trunk CCS } (SVT_{CCS})]$	

Table 65
Major parameters for VoIP resource calculations (Part 3 of 5)

Parameter	Description	Equation	Default value
SIP Virtual Trunk ratio (v_s)	Of total Virtual Trunk CCS, the portion that are SIP Virtual Trunks	$\text{SIP Virtual Trunk CCS (SVT}_{\text{CCS}}) \div [\text{H.323 Virtual Trunk CCS (HVT}_{\text{CCS}}) + \text{SIP Virtual Trunk CCS (SVT}_{\text{CCS}})]$	
Virtual Trunk CCS (VT_{CCS})	Sum of H.323 Virtual Trunk CCS and SIP Virtual Trunk CCS	$\text{H.323 Virtual Trunk CCS (HVT}_{\text{CCS}}) + \text{SIP Virtual Trunk CCS (SVT}_{\text{CCS}})$	
Total trunk CCS (T_{TCCS})	Sum of all Virtual Trunk CCS and TDM trunk CCS	$\text{Virtual Trunk CCS (VT}_{\text{CCS}}) + \text{TDM trunk CCS (T}_{\text{TDM}})$	
Local CallPilot CCS (CP1) (See Note 4 after the table.)	CallPilot calls within the local node, calculated from number of local CallPilot ports	$\text{Local CallPilot ports} \times \text{CCS per port (CP1}_{\text{CCS}})$	
Network CallPilot CCS (CP2) (See Note 4 after the table.)	Network CallPilot calls to the local node, calculated from number of network CallPilot ports	$\text{Network CallPilot ports} \times \text{CCS per port (CP2}_{\text{CCS}})$	
IP ratio (P) (See Note 3 after the table.)	Of total line CCS, the portion that are from IP telephones	$\text{IP telephone CCS (L}_{\text{IP}}) \div \text{Total line CCS (L}_{\text{CCS}})$	
Virtual Trunk ratio (V) (See Note 3 after the table.)	Of total trunk CCS, the portion that are from Virtual Trunk access ports	$\text{Virtual Trunk CCS (VT}_{\text{CCS}}) \div \text{Total trunk CCS (T}_{\text{TCCS}})$	
Total system CCS (T_{CCS})	Sum of all line and trunk CCS	$\text{Total line CCS (L}_{\text{CCS}}) + \text{Total trunk CCS (T}_{\text{TCCS}})$	

Table 65
Major parameters for VoIP resource calculations (Part 4 of 5)

Parameter	Description	Equation	Default value
Intraoffice ratio (R_I)	Of the total number of calls, the portion that are telephone-to-telephone calls		0.30
Tandem ratio (R_T) (See Note 5 after the table.)	Of the total number of calls, the portion that are trunk-to-trunk calls		0.05
Incoming ratio (I)	Of the total number of calls, the portion that are trunk-to-telephone calls		0.40
Outgoing ratio (O)	Of the total number of calls, the portion that are telephone-to-trunk calls		
Average holding time (AHT_{XX})	Average holding time for different call types: Telephone-to-telephone (AHT_{SS}) Trunk-to-telephone (AHT_{TS}) — also used for ACD agents (AHT_{AGT}) Telephone-to-trunk (AHT_{ST}) Trunk-to-trunk (AHT_{TT})		60 sec 150 sec 150 sec 180 sec
Weighted average holding time (WAHT)		$(R_I \times AHT_{SS}) + (R_T \times AHT_{TT}) + (I \times AHT_{TS}) + (O \times AHT_{ST})$	
Total calls (T_{CALL})	Total system calls per hour	$0.5 \times T_{CCS} \times 100 \div WAHT$	

Table 65
Major parameters for VoIP resource calculations (Part 5 of 5)

Parameter	Description	Equation	Default value
Intraoffice calls (C_{SS})	Number of telephone-to-telephone calls	$R_I \times T_{CALL}$	
Tandem calls (C_{TT})	Number of trunk-to-trunk calls	$R_T \times T_{CALL}$	
Originating/outgoing calls (C_{ST})	Number of telephone-to-trunk calls	$O \times T_{CALL}$	
Terminating/incoming calls (C_{TS})	Number of trunk-to-telephone calls	$I \times T_{CALL}$	
DSP calls (C_{DSP})	Number of calls involving DSP		
Virtual Trunk calls (C_{VT})	Number of calls involving Virtual Trunks		
Conference loop ratio (r_{Con})	Ratio of conference loops to traffic loops	$(\text{Number of conference loops}) \div (\text{Total number of loops})$	0.07

Note 1: In order to use the system traffic equations, all line-side T1/E1 and PRI trunks must be converted to number of ports. To convert T1 to ports: number of cards x 24. To convert E1 to ports: number of cards x 30.

Note 2: Converged Desktop traffic is part of the SIP Virtual Trunk traffic. The parameter value V_{DCCS} must be less than the capacity of the number of SIP ports (VT_{SIP}).

Note 3: A site is considered to be a call center when the proportion of ACD agent telephones exceeds 15% of the total telephones in the system. For call centers, ACD agent calls are included in the calculations for Call Server usage. However, they are initially excluded from the calculations for DSP and Virtual Trunk resources. After the DSP and Virtual Trunk resources have been calculated for non-ACD (reduced) traffic, the resources required to support the non-blocking ACD application (one DSP port for each ACD agent) are added back in to the results, in order to obtain the total system DSP and Virtual Trunk requirements. The IP ratio (P) is modified for the non-ACD part of the calculation: $P' = (L_{IP \text{ without ACD}}) / (L_{TDM \text{ without ACD}} + L_{IP \text{ without ACD}} + L_{DECT})$. The Virtual Trunk ratio (V) remains unchanged. The default traffic value for ACD agent telephones (TDM and IP) is 33 CCS per telephone.

Note 4: CallPilot message traffic is embedded in total line traffic. To calculate the real-time impact on the Call Server, CallPilot ports are converted to calls. Only CallPilot ports serving the local node (CP1) and handling network traffic (CP2) have a real-time impact on the Call Server.

Note 5: The tandem ratio should be kept at a relatively small number for a typical enterprise application, except when the switch serves as a tandem node in a network.

System calls

The total number of calls the system must be engineered to handle is given by:

$$\text{Total calls } (T_{\text{CALL}}) = 0.5 \times T_{\text{CCS}} \times 100 \div \text{WAHT}$$

where weighted average holding time (WAHT) is given by:

$$\text{WAHT} = (R_I \times \text{AHT}_{\text{SS}}) + (R_T \times \text{AHT}_{\text{TT}}) + (I \times \text{AHT}_{\text{TS}}) + (O \times \text{AHT}_{\text{ST}})$$

and where AHT is the average holding time of a call in seconds. The subscript indicates where the call initiated from and terminates on, with S = set (telephone) and T = trunk. For example, AHT_{ST} denotes that the call initiated from a telephone and terminates on a trunk.

Traffic equations and penetration factors

Total system calls comprise four different types of traffic:

- 1 Intraoffice calls (C_{SS}) (telephone-to-telephone) (page 330)
- 2 Tandem calls (C_{TT}) (trunk-to-trunk) (page 331)
- 3 Originating/outgoing calls (C_{ST}) (telephone-to-trunk) (page 332)
- 4 Terminating/incoming calls (C_{TS}) (trunk-to-telephone) (page 333)

- 1 Intraoffice calls (C_{SS})

$$= \text{Total calls } (T_{CALL}) \times \text{Intraoffice ratio } (R_I)$$

This parcel can be further broken down to three types:

- a Intraoffice IP to IP calls (C_{2IP})

$$= C_{SS} \times P^2 \text{ (require no DSP, no VT)}$$

$$pf1 = C_{SS} \times P^2 \div T_{CALL} = R_I \times P^2$$

pf1 is the penetration factor for the intraoffice IP to IP calls

- b Intraoffice IP to TDM telephone calls (C_{1IP})

$$= C_{SS} \times 2 \times P \times (1 - P) \text{ (require DSP)}$$

$$pf2 = C_{SS} \times 2 \times P \times (1 - P) \div T_{CALL} = 2 \times R_I \times P \times (1 - P)$$

pf2 is the penetration factor for the intraoffice IP to TDM telephone calls

- c Intraoffice TDM telephone to TDM telephone calls (C_{NoIP})

$$= C_{SS} \times (1 - P)^2 \text{ (require no DSP, no VT)}$$

$$pf3 = C_{SS} \times (1 - P)^2 \div T_{CALL} = R_I \times (1 - P)^2$$

pf3 is the penetration factor for the intraoffice TDM to TDM calls

2 Tandem calls (C_{TT})

$$= \text{Total calls} \times \text{Tandem ratio} = T_{CALL} \times R_T$$

The tandem calls can be further broken down into:

- a** Tandem VT to TDM trunk calls (C_{T1VT})
 $= 2 \times \text{Tandem VT calls} \times (1 - V)$
 $= 2 \times C_{TT} \times V \times (1 - V)$ (require DSP and VT)

$$pf4 = 2 \times C_{TT} \times V \times (1 - V) \div T_{CALL} = 2 \times R_T \times V \times (1 - V)$$

- b** Tandem TDM trunk to TDM trunk calls (C_{T2NoVT})
 $= C_{TT} \times (1 - V)^2$ (require no DSP, no VT)

$$pf5 = C_{TT} \times (1 - V)^2 \div T_{CALL} = R_T \times (1 - V)^2$$

- c** Tandem VT (H.323) to VT (SIP) calls (C_{T2HS})
 $= C_{TT} \times V^2 \times v_H \times v_S \times 2 \times 2$ (require VT)

$$pf6 = 4 \times C_{TT} \times V^2 \times v_H \times v_S \div T_{CALL} = 4 \times R_T \times V^2 \times v_H \times v_S$$

where v_H is the fraction of H.323 trunks to total VTs, and v_S is the fraction of SIP trunks to total VTs.

Note: If there is only one type of VT (either v_H or $v_S = 0$), the connection is handled at the Network Routing Service and no calls are offered to the Call Server. In this case, $pf6 = 0$.

3 Originating/outgoing calls (C_{ST})

$$= \text{Total calls} \times \text{Outgoing ratio} = T_{CALL} \times O$$

Originating/outgoing calls can be further broken down into:

a IP to VT calls (C_{STIV})

$$= C_{ST} \times (\text{fraction of IP calls}) \times V$$

$$= C_{ST} \times P \times V \text{ (require VT)}$$

$$pf7 = C_{ST} \times P \times V \div T_{CALL} = O \times P \times V$$

b IP to TDM trunk calls (C_{STID})

$$= C_{ST} \times (\text{IP calls}) \times (1 - V)$$

$$= C_{ST} \times P \times (1 - V) \text{ (require DSP)}$$

$$pf8 = C_{ST} \times P \times (1 - V) \div T_{CALL} = O \times P \times (1 - V)$$

c TDM telephone to VT calls (C_{STDV})

$$= C_{ST} \times (1 - \text{fraction of IP calls}) \times V$$

$$= C_{ST} \times (1 - P) \times V \text{ (require DSP, VT)}$$

$$pf9 = C_{ST} \times (1 - P) \times V \div T_{CALL} = O \times (1 - P) \times V$$

d TDM telephone to TDM trunk calls (C_{STDID})

$$= C_{ST} \times (1 - \text{fraction of IP calls}) \times (1 - V)$$

$$= C_{ST} \times (1 - P) \times (1 - V) \text{ (require no DSP, no VT)}$$

$$pf10 = C_{ST} \times (1 - P) \times (1 - V) \div T_{CALL} = O \times (1 - P) \times (1 - V)$$

4 Terminating/incoming calls (C_{TS})

$$= \text{Total calls} \times \text{Incoming ratio} = T_{CALL} \times I$$

Terminating/incoming calls can be further broken down into:

a VT to TDM telephone calls (C_{TSVD})

$$= C_{TS} \times V \times (1 - \text{fraction of IP calls})$$

$$= C_{TS} \times V \times (1 - P) \text{ (require DSP, VT)}$$

$$pf11 = C_{TS} \times V \times (1 - P) \div T_{CALL} = I \times V \times (1 - P)$$

b VT to IP telephone calls (C_{TSVI})

$$= C_{TS} \times V \times (\text{fraction of IP calls})$$

$$= C_{TS} \times V \times P \text{ (require VT)}$$

$$pf12 = C_{TS} \times V \times P \div T_{CALL} = I \times V \times P$$

c TDM trunk to IP telephone calls (C_{TSDI})

$$= C_{TS} \times (1 - V) \times (\text{fraction of IP calls})$$

$$= C_{TS} \times (1 - V) \times P \text{ (require DSP)}$$

$$pf13 = C_{TS} \times (1 - V) \times P \div T_{CALL} = I \times (1 - V) \times P$$

d TDM trunk to TDM telephone calls (C_{TSDD})

$$= C_{TS} \times (1 - V) \times (1 - \text{fraction of IP calls})$$

$$= C_{TS} \times (1 - V) \times (1 - P) \text{ (require no DSP, no VT)}$$

$$pf14 = C_{TS} \times (1 - V) \times (1 - P) \div T_{CALL} = I \times (1 - V) \times (1 - P)$$

Resource use equations

The following equations, summing different types of traffic, are used to calculate the required TPS, DSP, and Virtual Trunk resources.

- Calls involving at least one IP Phone and therefore using TPS:

$$C_{IP} = C_{2IP} + C_{1IP} + C_{STIV} + C_{STID} + C_{TSVI} + C_{TSDI}$$

- Calls that require DSP resources:

$$C_{DSP} = C_{1IP} + C_{T1VT} + C_{STID} + C_{STDV} + C_{TSVD} + C_{TSDI}$$

- Calls that require Virtual Trunk resources:

$$C_{VT} = C_{T1VT} + C_{T2HS} + C_{STIV} + C_{STDV} + C_{TSVD} + C_{TSVI}$$

- Calls that require H.323 Virtual Trunks:

$$HC_{VT} = C_{VT} \times v_H$$

- Calls that require SIP Virtual Trunks

$$SC_{VT} = C_{VT} \times v_S$$

Real-time calculations

This section describes the following real-time calculations:

- “Call Server utilization” on [page 337](#)
- “Application and feature EBCs” on [page 337](#)
- “Call Server real time” on [page 339](#)
- “CPU real-time conversion for upgrades” on [page 339](#)

The real time required to process a basic 2500-type telephone to 2500-type telephone call is an Equivalent Basic Call (EBC), the unit used to measure other, more complicated feature calls. Every feature call can be converted to EBCs by using its real-time factor (RTF).

$$RTF = (\text{Real time of a feature call in ms} \div \text{Real time of a basic call}) - 1$$

There are a total of 14 major combinations of telephone and trunk types of calls in the system. The real-time factor of each call type is denoted by f_i ($i =$

1 to 14). In addition, there are standard real-time factors for applications and features. Table 66 provides the real-time factors.

Table 66
Real-time factors (Part 1 of 2)

Type of call	Real-time factor
Intraoffice calls:	
IP telephone to IP telephone (f_1)	0.50
IP telephone to TDM telephone (f_2)	1.70
TDM telephone to TDM telephone (f_3)	0.03
Tandem calls:	
Virtual Trunk to TDM trunk (f_4)	2.09
TDM trunk to TDM trunk (f_5)	2.09
H.323 Virtual Trunk to SIP Virtual Trunk (f_6)	1.93
Originating/outgoing calls:	
IP telephone to Virtual Trunk (f_7)	2.27
IP telephone to TDM trunk (f_8)	2.42
TDM telephone to Virtual Trunk (f_9)	2.02
TDM telephone to TDM trunk (f_{10})	1.27
Terminating/incoming calls:	
Virtual Trunk to TDM telephone (f_{11})	1.46
Virtual Trunk to IP telephone (f_{12})	1.60
TDM trunk to IP telephone (f_{13})	2.00
TDM trunk to TDM telephone (f_{14})	1.20

Table 66
Real-time factors (Part 2 of 2)

Type of call	Real-time factor
Application/feature calls:	
ACD agent without Symposium (f_{ACD})	0.13
Symposium (f_{SYM})	5.70
CallPilot (f_{CP})	1.70
Nortel Integrated Conference Bridge (f_{MICB})	1.59
Nortel Integrated Recorded Announcer (f_{MIRAN})	0.63
Nortel Integrated Call Assistant (f_{MICA})	0.57
Nortel Hospitality Integrated Voice Service (f_{MIVS})	0.57
Nortel Integrated Call Director (f_{MIPCD})	0.63
BRI ports (f_{BRI})	0.12
MDECT telephone (f_{DECT})	4.25
Intraoffice CDR (f_{ICDR})	0.44
Incoming CDR (f_{CCDR})	0.32
Outgoing CDR (f_{OCDR})	0.32
Tandem CDR (f_{TAN})	0.44
CPND factor (f_{CPND})	0.20
Converged Desktop factor (f_{DTP})	2.33
Microsoft Office factor (f_{MO})	2.33
Error term – minor feature overhead (f_{OVRH})	0.25

The real-time factor adjusts for the fact that a feature call generally requires more real time to process than a basic call. The impact on the system is a function of the frequency with which the feature call appears during the busy hour. The penetration factor of a feature is the ratio of that type of feature call to the overall system calls. Refer to “Traffic equations and penetration

factors” on [page 330](#) for the equations to calculate penetration factors for the 14 major call types.

The real-time factors and penetration factors are used to generate the real-time multiplier (RTM), which in turn is used to calculate the overall system EBC.

The real-time multiplier is given by:

$$\text{RTM} = 1 + \text{Error_term} + \sum_i (\text{Real-time factor } f_i \times \text{Penetration factor } pfi)$$

The Error_term accounts for features such as call transfer, three-way conference, call-forward-no-answer, and others that are hard to single out to calculate real-time impact. The Error_term is usually assigned the value 0.25.

Call Server utilization

System real-time EBC = (Total system calls × Real-time multiplier) +
Application and feature EBCs
= ($T_{\text{CALL}} \times \text{RTM}$) + Application and feature EBCs

Application and feature EBCs

Table 67 lists the equations to calculate the EBC impacts of individual applications and features. The total application and feature EBC impact,

which is included in the system real-time EBC calculation, is the sum of these application and feature EBCs.

Table 67
Application and feature EBC (Part 1 of 2)s

Type	Calculation
ACD	<p>ACD agents without Symposium + ACD agents with Symposium</p> <p>where</p> $\text{ACD agents without Symposium} = (1 - \% \text{ Symposium}) \times f_{\text{ACD}} \times (\text{Number of IP ACD agents} + \text{number of TDM agents}) \times \text{CCS per agent} \times 100 \div \text{AHT}_{\text{AGT}}$ <p>and</p> <p>ACD agents with Symposium is user input. (If unknown, assume all ACD agent calls are with Symposium.)</p>
Symposium	$\% \text{ Symposium} \times f_{\text{SYM}} \times (\text{Number of IP ACD agents} + \text{number of TDM agents}) \times \text{CCS per agent} \times 100 \div \text{AHT}_{\text{AGT}}$
CallPilot	$(\text{Number of Local CallPilot ports} + \text{number of Network CallPilot ports}) \times \text{CCS} \times 100 \div \text{AHT}_{\text{CP}} \times f_{\text{CP}}$
Internal CDR	$C_{\text{SS}} \times f_{\text{ICDR}}$
Incoming CDR	$C_{\text{TS}} \times f_{\text{CCDR}}$
Outgoing CDR	$C_{\text{ST}} \times f_{\text{OCDR}}$
Tandem CDR	$C_{\text{TT}} \times f_{\text{TCDR}}$
Integrated Conference Bridge	$\text{Number of Integrated Conference Bridge ports} \times \text{CCS} \times 100 \div \text{AHT}_{\text{MICB}} \times f_{\text{MICB}}$
Integrated Recorded Announcer	$\text{Number of Integrated Recorded Announcer ports} \times \text{CCS} \times 100 \div \text{AHT}_{\text{MIRAN}} \times f_{\text{MIRAN}}$
Integrated Call Director	$\text{Number of Integrated Call Director ports} \times \text{CCS} \times 100 \div \text{AHT}_{\text{MIPCD}} \times f_{\text{MIPCD}}$
Integrated Call Announcer	$\text{Number of Integrated Call Announcer ports} \times \text{CCS} \times 100 \div \text{AHT}_{\text{MICA}} \times f_{\text{MICA}}$

Table 67
Application and feature EBC (Part 2 of 2)s

Type	Calculation
Hospitality Integrated Voice Services	Number of Hospitality Integrated Voice Services ports \times CCS \times 100 \div $AHT_{MIVS} \times f_{MIVS}$
BRI	# BRI ports \times CCS \times 100 \div $AHT_{BRI} \times f_{BRI}$
MDECT	$L_{DECT} \times 100 \div WAHT \times f_{DECT}$
CPND	$(C_{1IP} + C_{NoIP} + C_{TSVD} + C_{TSDD}) \times f_{CPND}$
Converged Desktop (CD)	$(C_{SS} \times 0.1 + C_{TT} + C_{ST} + C_{TS}) \times r_{DTP} \times f_{DTP}$
SIP CTI/TR87 (MO)	$(C_{SS} \times 0.1 + C_{TT} + C_{ST} + C_{TS}) \times r_{MO} \times f_{MO}$

Call Server real time

Compare the system EBC with the Meridian 1/CS 1000M CPU rated capacity to determine the processor utilization.

CPU utilization = System real-time EBC \div Rated capacity of processor
 (\times 100 to get a percentage)

Refer to Table 60 on [page 296](#) for the rated capacities of Large System processors.

CPU real-time conversion for upgrades

When upgrading an existing switch, CPU engineering must provide a certain level of spare capacity in order to ensure that the upgrade will be able to handle both the existing site and the new additions. Real-time calculations must include the existing load as well as the new load.

The CPU utilization data from a current traffic report TFS004 provides the existing load. The existing load is then converted to the equivalent loading on the new (and presumably faster) CPU. The final loading on the new processor is the sum of the usual real-time calculations for the new load and the converted existing load. It must be less than or equal to 100% of the rated capacity for the new processor.

Use the following formula to convert the existing processor usage to the new processor equivalent:

$$\text{CRTU} = (\text{RTU}/100) \times [1 + (\text{SWRC} \div 100)] \times \text{CPTU}$$

where:

CRTU = CPU loading from the existing switch converted to an equivalent load on the new processor, in percent.

RTU = Current CPU usage, in percent (from the TFS004 report of the existing switch).

SWRC = Software release degradation factor, in percent.
Since every new release is enhanced with new features and capabilities, the processing power of the existing CPU is degraded to some extent (typically 10-20%) by the newer release.

CPTU = Capacity ratio of the existing CPU to the new CPU.
The ratio is always less than 1 (unless the same CPU is used, in which case it is equal to 1).

If $\text{CRTU} > \text{CPTU}$, set $\text{CRTU} = \text{CPTU}$.

Since the capacity ratio is the maximum load the old CPU can offer to the new one, the converted CPU load from the existing processor cannot be greater than the capacity ratio.

Table 68 lists the software release degradation factors for supported software upgrades.

Table 68
Software release degradation factors (SWRC)

From/To (%)	Degradation factor (%)		
	To Succession 3.0 Software	To CS 1000 Release 4.5	To CS 1000 Release 4.5
Rls 18	151	164	188
Rls 19	139	151	174
Rls 20B	96	106	125
Rls 21B	78	87	104
Rls 22	53	61	75
Rls 23	42	49	62
Rls 23C	38	39	58
Rls 24B	12	18	28
Rls 25B	3	8	18
SR2	1	6	16
SR3	–	5	14
SR4	–	–	9

Table 69 gives capacity ratio values for supported processor upgrades.

Table 69
Ratio of existing processor capacity to new processor capacity (CPTU)

From CPU type	EBC ratio			
	To CP3	To CP4	To CP PII	To CP PIV
CP1	0.45	0.32	0.11	0.05
CP2	0.75	0.54	0.18	0.08
CP3	1.00	0.72	0.23	0.10
CP4	–	1.00	0.33	0.13
CP PII	–	–	1.00	0.42
CP PIV	–	–	–	1.00

Example

To convert the loading of a Rls 22 switch equipped with CP2 processor to a CS 1000 Release 4.5 system equipped with CP PIV processor, where the TFS004 reading is 80%:

$$\text{SWRC} = 55 \text{ and } \text{CPTU} = 0.08$$

$$\text{CRTU} = (80/100) \times [1 + (55 \div 100)] \times 0.08 = 0.099$$

$$\text{Since } \text{CRTU} > \text{CPTU}, \text{ let } \text{CRTU} = \text{CPTU} = 0.08 \text{ (8\%).}$$

The converted number (8%) is added to the results of the real-time calculations for the new load to obtain the final loading of the new processor handling both the existing configuration and new additions.

DSP/Media Card calculations

DSP resources are provided by Media Cards. The total DSP/Media Card requirement is the sum of DSP requirements for various functions, which are calculated separately.

- DSP ports for TDS/Conference ([p. 344](#))
- DSP ports for general traffic ([p. 346](#))
- DSP ports for major applications ([p. 347](#))
- Special ACD treatment for non-blocking access to DSP ports ([p. 348](#))
- Total DSP requirements ([p. 349](#))
 - General configuration (ACD agent telephones < 15% of total telephones) ([p. 349](#))
 - Call center application (ACD agent telephones > 15% of total telephones) ([p. 349](#))

For reasons explained in the “System capacities” chapter (see “Traffic capacity engineering algorithms” on [page 292](#)), the Erlang B model is used to calculate DSP port requirements.

For Media Card 32-port cards, the DSP port requirement must be calculated in increments of 32. Table 70 provides Erlang B and Poisson values for P.01 Grade-of-Service (GoS) in 32-port increments. The DSP resource required to handle the offered traffic is the number of ports corresponding to the first Erlang B CCS capacity greater than the calculated traffic value. The

Poisson values are used to calculate Virtual Trunk requirements (see “Virtual Trunk calculations” on [page 350](#)).

Table 70
Erlang B and Poisson values, in 32-port increments

Erlang B with P.01 GoS		Poisson with P.01 GoS	
Number of DSP ports	CCS	Number of Virtual Trunk access ports	CCS
32	794	32	732
64	1822	64	1687
96	2891	96	2689
128	3982	128	3713
160	5083	160	4754
192	6192	192	5804

To obtain the exact number of DSP ports required, use the following formula. Round up to the next integer if the result is a fraction.

$$\text{Number of DSP ports} = (\text{Calculated CCS} \div (\text{CCS from Table 70}) \times (\text{Number of DSP ports for table CCS}))$$

For example, a calculated value of 2430 CCS requires 81 DSP ports to provide a P.01 GoS ($2430 \div 2891 \times 96 = 81$). Note that, for Media Card 32-port cards, this implies the use of 3 Media Cards, or 96 ports.

DSP ports for TDS/Conference

In Large Systems, the dual-function TDS/Conference card provides Tone and Digit Switch (TDS) tone services as well as conference circuits.

TDS provides tones to TDM lines and trunks, while IP Phones generate their own tones. Therefore, the demand for TDS services is reduced proportional to any increase in the number of IP Phones in the system. The

recommendation of two TDS/Conference cards per network is valid for estimating the service circuit requirement.

A DSP channel is required for each IP Phone joining a conference call. The more IP Phones in the system, the higher the demand for DSP channels to access the conference feature.

Applications are another source of demand for the conference feature. Conference usage for Integrated Conference Bridge is treated separately, as part of the calculations for application ports. For other applications, on the assumption that each network group is equipped with two TDS/Conference cards, the default is two conference loops, with a total of 60 channels, per network group. If a particular application requires a different number of conference ports, use the specific number.

The equation to calculate the number of DSP ports the system requires for Conference is:

Equation 1

$$\text{Number of DSP ports for Conference} = (\text{Total number of telephones}) \times P \times r_{\text{Con}} \times 0.4$$

where r_{Con} is the ratio of conference loops to traffic loops. The default value of r_{Con} is 0.07 because, for each network group, there are assumed to be 2 conference loops and 28 traffic loops ($r_{\text{Con}} = 2 \div 28 = 0.07$). The default value of r_{Con} can be changed if circumstances warrant.

Since ports generally have light traffic while channels have heavy traffic, the factor 0.4 is applied in Equation 1 to take account of the high concentration of telephones to channels and adjust for the ratio of ports to channels.

Note that the number of DSP ports for Conference is directly proportional to the system's IP ratio (P).

DSP ports for general traffic

There are three steps to calculate the number of DSP ports required for general traffic:

- 1 Calculate the number of calls that require DSP resources.

DSP calls (C_{DSP}) = Intraoffice IP-TDM telephone calls (C_{IIP}) + Tandem VT-TDM trunk calls (C_{T1VT}) + IP-TDM trunk calls (C_{STID}) + TDM telephone-VT calls (C_{STDV}) VT-TDM telephone calls (C_{TSVD}) + TDM-IP telephone calls (C_{TSDI})

$$= C_{\text{IIP}} + C_{\text{T1VT}} + C_{\text{STID}} + C_{\text{STDV}} + C_{\text{TSVD}} + C_{\text{TSDI}}$$

For sites where the proportion of ACD agent telephones is less than 15% of the total telephones in the system, C_{DSP} includes all general traffic seeking DSP service.

Sites where the proportion of ACD agent telephones exceeds 15% of the total telephones in the system are considered to be call centers. For call centers, C_{DSP} is a reduced total that excludes ACD CCS. See “Special ACD treatment for non-blocking access to DSP ports” on [page 348](#) and Note 3 on [page 329](#).

- 2 Convert DSP calls to CCS.

$$\text{DSP CCS} = C_{\text{DSP}} \times \text{WAHT} \div 100$$

- 3 Using the Erlang B table for P.01 GoS (see Table 70 on [page 344](#)), find the corresponding number of DSP ports required.

Equation 2

Number of DSP ports for general traffic = Required number of ports for DSP CCS from Erlang B table

DSP ports for major applications

For most applications, use the following rules:

- For a pure IP system, provide one DSP port for each application port.
- For a mixed IP and TDM system, calculate the DSP port requirement by multiplying the number of application ports by the fraction of IP calls in the system (the IP ratio, P).

Table 71 provides the equations to calculate the number of DSP ports required for each application.

Table 71
DSP port requirements for applications

Application or port type	Calculation
Integrated Recorded Announcer	Number of Integrated Recorded Announcer ports \times P
Integrated Conference Bridge	Number of Integrated Conference Bridge ports \times P
Integrated Call Director	Number of Integrated Call Director ports \times P
Integrated Call Assistant	Number of Integrated Call Assistant ports \times P
Hospitality Integrated Voice Service	Number of Hospitality Integrated Voice Service ports \times P
BRI	Number of SILC ports \times P = Number of BRI users $\times 2 \times$ P
CallPilot ports	(Number of local CallPilot ports \times P) + (Number of network CallPilot ports \times P) (see Note)
Agent Greeting ports	Number of Agent Greeting ports \times P
Note: CallPilot calls served by another node are treated as trunk traffic and are not included in DSP calculations for this node.	

Equation 3

Number of DSP ports for applications = DSP for Integrated Recorded Announcer + DSP for Integrated Conference Bridge + ... + DSP for Agent Greeting ports

Special ACD treatment for non-blocking access to DSP ports

The following section applies for call centers, which are defined as sites where the number of ACD agent telephones exceeds 15% of the total telephones in the system.

Since both Erlang B and Poisson models assume a high ratio of traffic sources to circuits, using the standard estimate of 36 CCS per agent to calculate DSP requirements for a specified GoS tends to result in over-provisioning. For this reason, rather use the fixed rule of one DSP port for each ACD agent telephone requiring a DSP resource, in order to provide non-blocking access between an ACD agent telephone and a DSP. ACD agent telephones require DSP resources only when calls are coming from TDM trunks to IP agent telephones or from Virtual Trunks to TDM agent telephones.

In general, Media Cards are system resources that are available to all traffic sources, including ACD agent telephones and regular phones. Zoning control is the only way to provide non-blocking access to DSP ports for ACD agent telephones only. In a multiple-zone network, each zone is controlled by the Network Routing Service (NRS). When a zone is designated as a private zone for a specific group of ACD agent telephones, service requests from outside the protected zone to a designated group of DSP resources are denied.

Assuming that zoning control has been established and that a group of Media Cards can be reserved for the exclusive use of ACD agents, recalculate the number of DSP ports required for general traffic excluding ACD agent CCS, and then add in DSP ports required for the ACD agent telephones. The steps are as follows:

- 1 Calculate system CCS excluding ACD agents. Since system CCS is two-way traffic, the traffic associated with both incoming and outgoing trunks terminating on ACD agents must be removed:
$$\text{Reduced system CCS} = \text{Total system CCS (T}_{\text{CCS}}) - [2 \times (\text{Number of ACD agent telephones}) \times \text{CCS/agent}]$$
- 2 Recalculate the intraoffice ratio (R_I), IP ratio (P), Virtual Trunk ratio (V), and other ratios to reflect the new distribution of call types without ACD traffic. (See Table 65 on [page 324](#) for the equations to calculate the ratios. See also Note 3 on [page 329](#).)

- 3 Use the reduced system CCS and new ratios to calculate calls requiring DSP and Virtual Trunk resources. (See “Traffic equations and penetration factors” on [page 330](#) for the detailed calculations for the different call types.)
- 4 Convert DSP calls to CCS.

$$\text{DSP CCS} = C_{\text{DSP}} \times \text{WAHT} \div 100$$
- 5 Using the Erlang B table for P.01 GoS (see Table 70 on [page 344](#)), find the corresponding number of DSP ports required (for general traffic without ACD agents).

Equation 2a

Number of DSP ports for general traffic = Required number of ports for DSP CCS from Erlang B table

- 6 Calculate the DSP requirement for ACD agent telephones. A DSP port is needed only when calls are coming from TDM trunks (ratio $1 - V$) to IP agent telephones or from Virtual Trunks (ratio V) to TDM agent telephones.

Equation 4

Number of DSP ports = (Number of IP ACD agent telephones) \times ($1 - V$)
 + (Number of TDM ACD agent telephones) $\times V$

Total DSP requirements**General configuration (ACD agent telephones < 15% of total telephones)**

Total number of DSP ports = Equation 1 ([p. 345](#)) + Equation 2 ([p. 346](#)) + Equation 3 ([p. 347](#))

Call center application (ACD agent telephones > 15% of total telephones)

Total number of DSP ports = Equation 1 ([p. 345](#)) + Equation 2a ([p. 349](#)) + Equation 3 ([p. 347](#)) + Equation 4 ([p. 349](#))

Virtual Trunk calculations

For reasons explained in the “System capacities” chapter (see “Traffic capacity engineering algorithms” on [page 292](#)), the Poisson model is used to calculate trunk requirements.

Table 70 on [page 344](#) provides Poisson values for P.01 GoS in 32-port increments. The Virtual Trunk resource required to handle the offered traffic is the number of access ports corresponding to the first Poisson CCS capacity greater than the calculated traffic value.

To obtain the exact number of access ports required, use the following formula. Round up to the next integer if the result is a fraction.

$$\text{Number of access ports} = (\text{Calculated CCS}) \div (\text{CCS from Table 70}) \times (\text{Number of access ports for table CCS})$$

Perform the following steps to calculate the number of access ports required:

- 1 Estimate the Virtual Trunk requirement by adding together all the calls that require the service of access ports.

Virtual Trunk calls (C_{VT}) = Tandem VT-TDM trunk calls (C_{T1VT}) + IP-VT calls (C_{STIV}) + TDM telephone-VT calls (C_{STDV}) + VT-TDM telephone calls (C_{TSVD}) + VT-IP telephone calls (C_{TSVI}) + H.323-SIP VT calls (C_{T2HS})

$$= C_{T1VT} + C_{STIV} + C_{STDV} + C_{TSVD} + C_{TSVI} + C_{T2HS}$$

For sites where the proportion of ACD agent telephones is less than 15% of the total telephones in the system, C_{VT} includes all general traffic seeking an access port.

Sites where the proportion of ACD agent telephones exceeds 15% of the total telephones in the system are considered to be call centers. For call centers, C_{VT} is a reduced total that excludes ACD CCS. See “Special ACD treatment for non-blocking access to DSP ports” on [page 348](#) and Note 3 on [page 329](#).

- 2 Convert Virtual Trunk calls to CCS.

$$\text{Virtual Trunk CCS (VT}_{\text{CCS}}) = C_{\text{VT}} \times \text{WAHT} \div 100$$

- 3 For call centers, since the calculated Virtual Trunk calls exclude ACD traffic, restore ACD traffic so that the final number of Virtual Trunks will be sufficient to handle both general and ACD traffic.

$$\text{Final Virtual Trunk CCS} = (\text{Calculated VT}_{\text{CCS}} \text{ without ACD}) + [(\text{Number of IP ACD agent telephones}) + (\text{Number of TDM ACD agent telephones})] \times V \times (\text{CCS per ACD agent}) \div (\text{CCS per trunk})$$

where:

default CCS per ACD agent = 33 CCS

default CCS per trunk = 28 CCS

The expanded Virtual Trunk CCS is inflated by the ratio of 33/28 to reflect the fact that more Virtual Trunks are needed to carry each agent CCS. This is because the traffic levels engineered for ACD agents and Virtual Trunks are different.

- 4 Use the SIP and H.323 ratios to determine how the Virtual Trunk access ports will be allocated to the two groups.

$$\text{SIP Virtual Trunk CCS (SVT}_{\text{CCS}}) = \text{VT}_{\text{CCS}} \times v_{\text{S}}$$

$$\text{H.323 Virtual Trunk CCS (HVT}_{\text{CCS}}) = \text{VT}_{\text{CCS}} \times v_{\text{H}}$$

- 5 Using the Poisson table for P.01 GoS (see Table 70 on [page 344](#) or “Trunk traffic – Erlang B with P.01 Grade-of-Service” on [page 552](#)), find the corresponding number of SIP and H.323 access ports required.

Note: Although a Virtual Trunk does not need the physical presence of a superloop, it does utilize a logical superloop. A superloop of 128 timeslots can support 1024 Virtual Trunk channels.

Reducing Virtual Trunk imbalances

The final value for calculated Virtual Trunks and its split into SIP and H.323 may be different from initial user input. If the gap between user input and the calculated result is less than 20%, use either number (although the larger number is preferred). If the gap is bigger, the configuration is not balanced. It may be necessary to re-enter input data,

including other input parameters, and fine tune the configuration in order to narrow the gap. See “Reducing imbalances (second round of algorithm calculations)” on [page 372](#).

A discrepancy between calculated and input Virtual Trunks is significant because system resources such as DSP ports and Virtual Trunk licenses depend on the accuracy of the traffic split. Imbalanced Virtual Trunk traffic will render the resulting equipment recommendation unreliable.

For example, if the calculated number of Virtual Trunks is 80 but the original input value was 60, and the user decides to use the original input value of 60 to calculate bandwidth and Signaling Server requirements, the resulting system will likely provide service inferior to the normal expected P.01 GoS. On the other hand, if the user input was 80 and the calculated result is 60, it is up to the user to choose which number to use for further calculations for necessary resources, such as the LAN/WAN bandwidth requirement. Unless the configuration is constrained in some way, the larger of the two values (input number or calculated number) is always preferred.

Bandwidth requirement for access ports

The LAN/WAN bandwidth requirement is based directly on traffic. Therefore, it does not depend on the traffic model used nor on the number of Virtual Trunks (either input or calculated) used for other calculations.

Convert Virtual Trunk calls to erlangs:

$$\text{VT erlangs} = \text{VT}_{\text{CCS}} \div 36$$

Look up the VT erlangs number in a bandwidth table to find the corresponding bandwidth required to carry the Virtual Trunk traffic to other H.323 endpoints. Refer to *Converging the Data Network with VoIP* (553-3001-160) for the bandwidth table and for more information about calculating LAN/WAN bandwidth requirements.

Signaling Server algorithm

The Signaling Server algorithm in the NNEC tool determines the number of Signaling Servers required for a given configuration. The algorithm allows a

change in constants for Signaling Server platform or Signaling Server application software releases.

The software components that operate on the Signaling Server are the Network Routing Service (NRS), Terminal Proxy Server (TPS), IP Peer Gateways (H.323 and SIP), and Element Manager. Traffic and user requirements determine whether the software components share a Signaling Server or are served by stand-alone Signaling Servers.

For the applications, there are performance factors and software limit factors. The performance factors are determined through capacity analysis. The software limit factors are defined by the application. Element Manager can collocate with any of the other applications with negligible impact.

In order to calculate the number of Signaling Servers required to support a particular configuration, the algorithm first calculates the amount of Signaling Server resources required by each application, taking redundancy requirements into consideration. The calculation for each application is performed separately. Once the individual requirements are determined, the algorithm proceeds to evaluate sharing options. Then the results are summed to determine the total Signaling Server requirement.

In most cases, the individual calculations divide the configuration's requirement for an applicable parameter (endpoint, call, telephone, trunk) into the system limit for that parameter. The particular application's Signaling Server requirement is determined by the parameter with the largest proportional resource requirement, adjusted for redundancy.

Table 72 defines the variables used in the calculations.

Table 72
Signaling Server algorithm constant and variable definitions (Part 1 of 4)

Algorithm term	Description	Value	Notes
NRA	Network Routing Service (NRS) Alternate required	enter (see Note 2)	Yes or No.
NRC	NRS calls per hour	enter (see Note 2)	Two components (one local, one network): $NRC = NRC_0 + NRC_{NET}$
NRC_{HL}	NRS calls per hour	100 000 (see Note 1)	Hardware limit for Signaling Server.
NRD	NRS CDP + UDP entries	enter (see Note 2)	
NRD_1	NRS CDP + UDP entries limit	20 000 (see Note 4)	Software limit.
NRE	NRS endpoints	enter (see Note 2)	(= 0 if NRS, which is a network-wide resource, is not provisioned in this node)
NRE_1	NRS endpoints limit	5000 (see Note 4)	Software limit.
NRP	NRS product of endpoint and CDP/UDP entries	- (see Note 3)	Interim calculation.
NRP_{SL}	NRS product of endpoint and CDP/UDP entries	20 000 (see Note 4)	Software limit.
<p>Note 1: Constant in the formulas.</p> <p>Note 2: Variable to be entered into the formula.</p> <p>Note 3: Constant that will update with platform changes.</p> <p>Note 4: Constant that will update with system software releases.</p> <p>Note 5: Calculated result.</p>			

Table 72
Signaling Server algorithm constant and variable definitions (Part 2 of 4)

Algorithm term	Description	Value	Notes
GSA	SIP Gateway Alternate required	enter (see Note 2)	Yes or No.
GWA	H.323 Gateway Alternate required	enter (see Note 2)	Yes or No.
C _{IP}	IP Phones calls per hour	enter/ derived (see Note 2)	Busy Hour calls from all IP Phones.
IPC _{HL}	IP Phones calls per hour limit	15 000 (see Note 4)	Hardware limit.
IPL	IP Phones	enter (see Note 2)	
IPL _{DB}	IP telephone limit with Personal Directory, Callers List, and Redial List database	1000 (see Note 1)	IP Phone limit per Signaling Server reduced due to Personal Directory, Callers List, and Redial List database.
IPL _{SL}	IP Phones limit	5000 (see Note 4)	Software limit.
NRD _{HL}	NRS product of endpoint and CDP/UDP entries	20 000 (see Note 1)	Hardware limit.
<p>Note 1: Constant in the formulas.</p> <p>Note 2: Variable to be entered into the formula.</p> <p>Note 3: Constant that will update with platform changes.</p> <p>Note 4: Constant that will update with system software releases.</p> <p>Note 5: Calculated result.</p>			

Table 72
Signaling Server algorithm constant and variable definitions (Part 3 of 4)

Algorithm term	Description	Value	Notes
SSNR	NRS Signaling Server calculation	calc (see Note 5)	Real number requirement (e.g., 1.5) (= 0 if NRS is not provisioned in this node)
SSGW	NRS Signaling Server requirements	calc (see Note 5)	Whole number requirement including Alternate.
SSHR	H.323 Gateway Signaling Server calculation	calc (see Note 5)	Real number requirement (e.g., 1.5).
SSHW	H.323 Gateway Signaling Server requirements	calc (see Note 5)	Whole number requirement including Alternate.
SST	Total count of Signaling Servers required	calc (see Note 5)	
SSTR	TPS Signaling Server calculation	calc (see Note 5)	Real number requirement (e.g., 1.5).
SSTW	TPS Signaling Server requirements	calc (see Note 5)	Whole number requirement including Alternate.
TPSA	TPS N+1 redundancy required	enter (see Note 2)	Yes or No.
HVTC _{HL}	H.323 Gateway calls per hour limit	18 000 (see Note 4)	Hardware limit. $HVTC_{HL} = v_H \times C_{VT}$
<p>Note 1: Constant in the formulas.</p> <p>Note 2: Variable to be entered into the formula.</p> <p>Note 3: Constant that will update with platform changes.</p> <p>Note 4: Constant that will update with system software releases.</p> <p>Note 5: Calculated result.</p>			

Table 72
Signaling Server algorithm constant and variable definitions (Part 4 of 4)

Algorithm term	Description	Value	Notes
SVTC _{HL}	SIP Gateway calls per hour limit	27 000 (see Note 4)	Hardware limit. $SVTC_{HL} = v_S \times C_{VT}$
VT _{SIP}	SIP Gateway access ports per Signaling Server	1800 (see Note 4)	CPU limit.
VT ₃₂₃	H.323 Gateway access ports per Signaling Server	1200 (see Note 4)	CPU limit.
TR87	The aggregate number of SIP CTI TR/87 required based upon the MCS and LCS calculated. Index 28	enter (see Note 2)	
TR87CL	SIP CTI/TR87 clients	5000 (see Note 4)	CPU Limit
TR87A	SIP CTI/TR87 redundancy required	enter (see Note 2)	Yes or No
SSTR87W	SIP CTI/TR87 SS requirements	calc (see Note 5)	Whole number required including Alternate.
SSTR87	SIP CTI/TR87 calculation	calc (see Note 5)	Real number requirement.
<p>Note 1: Constant in the formulas.</p> <p>Note 2: Variable to be entered into the formula.</p> <p>Note 3: Constant that will update with platform changes.</p> <p>Note 4: Constant that will update with system software releases.</p> <p>Note 5: Calculated result.</p>			

Signaling Server calculations

All the Signaling Server software components can function either on shared or on stand-alone Signaling Servers. System traffic and user requirements (for alternate, redundant, or dedicated Signaling Servers) determine how many Signaling Servers will be required. The Signaling Server algorithm takes account of all these requirements by performing the following calculations in sequence:

- 1 Signaling Server for Personal Directory, Callers List, and Redial List database (SSDB) ([p. 358](#))
- 2 Network Routing Service calculation (SSNR) ([p. 359](#))
- 3 Terminal Proxy Server calculation (SSTR) ([p. 360](#))
- 4 H.323 Gateway calculation (SSHR) ([p. 361](#))
- 5 SIP Gateway calculation (SSSR) ([p. 361](#))
- 6 Signalling Server Total (SST) requirement summary ([p. 362](#))

- 1 **Signaling Server for Personal Directory, Callers List, and Redial List database (SSDB)**

Personal Directory, Callers List, and Redial List (PD/CL/RL) calculations assume that the database resides either on a stand-alone Signaling Server or on a Signaling Server shared with all the other applications. This assumption simplifies the engineering and provisioning rules.

SSDB = a if no PD/CL/RL feature
 = b if yes on feature, and sharing functions on
 Signaling Server
 = c if yes on feature, and a stand-alone database
 Signaling Server

2 Network Routing Service calculation (SSNR)

SSNR = larger of:

{

- a** $NRE \div NRE_l$ endpoints (software limit)
- b** $NRD \div NRD_l$ dial plan entries (software limit)
- c** $NRC \div NRC_{HL}$ calls per hour (hardware limit)

}

NRC can be a hardware, CPU, or memory limit. It includes local calls (NRC_0) and network Virtual Trunks (VT_{NET}) for this Network Routing Service.

NRC_0 is obtained from the main switch calculation.

$$NRC_{NET} = VT_{NET} \times (\text{CCS per VT}) \times 100 \div \text{WAHT} \div 2$$

$$NRC = NRC_0 + NRC_{NET}$$

The calculation for NRC_{NET} requires converting both VT_{323} and VT_{SIP} (from user input) to H.323 and SIP calls. The Signaling Server's capacity for handling SIP calls is different from its capacity for H.323 calls.

Therefore, H.323 calls are converted to SIP calls before the load on the Signaling Server is calculated.

Convert H.323 calls to SIP calls by using the ratio of the real-time factors for calls from IP telephones to SIP and H.323 Virtual Trunks:

$$f_{H/S} = (\text{H.323 call real time}) \div (\text{SIP call real time})$$

Equation (c) in the SSNR calculation becomes:

$$= [NRC_S + (f_{H/S} \times NRC_H)] \div NRC_{HLS}$$

where:

NRC_S = the sum of local and network SIP calls the NRS is handling

NRC_H = the sum of local and network H.323 calls the NRS is handling
 NRC_{HLS} = the Signaling Server's capacity for handling SIP calls

Equation (c) represents the loading of the Signaling Server for handling NRS calls. It is compared with equations (a) and (b) in order to determine the highest of all potential usages.

If the user wants the Network Routing Service in a dedicated Signaling Server, round up SSNR before proceeding with further calculations:

$SSNW = \text{ROUNDUP}(SSNR) \times NRA$ (= 2 if true; else = 1)
 where NRA = if Alternate NRS is needed.

3 Terminal Proxy Server calculation (SSTR)

SSTR = larger of:

- {
- a** If SSDB = a or c, no PD/CL/RL or sharing
 $IPL \div IPL_{SL}$ IP Phones limit
- b** If SSDB = b, with PD/CL/RL and sharing
 If $IPL \leq IPL_{DB}$,
 $IPL \div IPL_{DB}$
 If $IPL > IPL_{DB}$, database platform limit (1000 for
 $1 + [(IPL - IPL_{DB}) \div IPL_{SL}]$ the first Signaling Server)
- c** $IPC \div IPC_{HL}$ calls per hour limit
- }

If the user wants Terminal Proxy Server(s) in a dedicated Signaling Server, round up SSTR before proceeding with further calculations:

$SSTW = \text{ROUNDUP}(SSTR) + TPSA$ (= 1 if true; else = 0)
 where TPSA = if N+1 redundant TPS is needed.

4 H.323 Gateway calculation (SSHR)

SSHR = larger of:

{

a $HVT \div HVT_{SL}$ number of trunks (software limit)

b $C_{VT} \div HVT_{CHL}$ calls per hour (hardware limit)

}

If the user wants H.323 Gateway(s) in a dedicated Signaling Server, round up SSHR before proceeding with further calculations:

$SSHW = \text{ROUNDUP}(\text{SSHR}) \times \text{GWA}$ (= 2 if true; else = 1)

where GWA = if Alternate H.323 Gateway is needed.

5 SIP Gateway calculation (SSSR)

SSSR = larger of:

{

a $SVT \div SVT_{SL}$ number of trunks (software limit)

b $C_{VT} \div SVT_{CHL}$ calls per hour (hardware limit)

}

If the user wants SIP Gateway(s) in a dedicated Signaling Server, round up SSSR before proceeding with further calculations:

$SSSW = \text{ROUNDUP}(\text{SSSR}) \times \text{GSA}$ (= 2 if true; else = 1)

where GSA = if Alternate SIP Gateway is needed.

6 SIP CTI/TR87 Calculation

If SIP CTI TR87 feature is present:

$$\text{SSTR87} = \text{TR87} / \text{TR87CL} \quad \text{sw limit - number of clients}$$

If the user wants SIP CTI/TR87 in a dedicated signalling server, then round up SSTR87 before proceeding with further calculations.

$$\text{SSTR87W} = \text{ROUNDUP}(\text{SSTR87}) \times \text{TR87A} \quad (=2, \text{ if true; else } =1)$$

TR87A = If Alternate SIP CTI/TR87 needed.

7 Signalling Server Total (SST) requirement summary

The final calculation of SST will require picking the formula that suits the configuration and input by the user:

SST = evaluate in order,

- a** If $(\text{SSNR} + \text{SSTR} + \text{SSHR} + \text{SSSR87}) < 1$

$$\text{SST} = \text{ROUNDUP}(\text{SSNR} + \text{SSTR} + \text{SSHR} + \text{SSSR87}) + (1 \text{ if NRA, GWA, GSA, or TPSA true; else } 0) + (1 \text{ if SSDB} = c; \text{ else } 0)$$

If $\text{SSTR87} > 0$ AND $(\text{SSNR} > 0 \text{ OR } \text{SSDB} = b)$ then add a dedicated Signaling Server for SIP CT/TR87, for example:

$$\text{SST} = \text{SST} + \text{SSTR87W}$$

Note: A dedicated Signaling Server is required for SIP CTI/TR87 if NRS and PD/RL/CL are present.

OR

- b** If $(\text{SSTR} + \text{SSHR} + \text{SSSR} + \text{SSTR87}) < 1$ and $(\text{SSNR} + \text{SSTR} + \text{SSHR} + \text{SSSR}) > 1$

$$\text{SST} = \text{SSNW} + [\text{ROUNDUP}(\text{SSTR} + \text{SSHR} + \text{SSSR} + \text{SSTR87}) \times (2, \text{ if GWA, GSA, TPSA, or TR87A true; else } 1)] + (1, \text{ if SSDB} = c \text{ OR } \text{SSDB} = b \text{ and } \text{SSTR87} > 0; \text{ else } 0)$$

Note: A dedicated Signaling Server is required for SIP CTI/TR87 in the event that SSDB=b. A dedicated Signaling Server is required for PD/RL/CL in the event that SSDB=c.

OR

- c** If $(SSNR + SSHR + SSSR) < 1$ and $(SSNR + SSTR + SSHR + SSSR) > 1$

$SST = SSTRW + [\text{ROUNDUP}(SSNR + SSHR + SSSR) \times (2, \text{ if NRA, GWA, or GSA true; else } 1)] + (1, \text{ if SSDB} = c; \text{ else } 0)$

If $(IPL > 1000)$ OR $(SSTR + SSTR87) > 1$ then

$SST = SST + SSTR87W$

If $(IPL \leq 1000)$ AND $(SSTR + SSTR87) < 1$ AND (TPSA is No) AND (TR87A is Yes) then add an Alternate Signaling Server for SIP CTI TR87, for example:

$SST = SST + 1$

Note: A dedicated Signaling Server is required for SIP CTI/TR87 in the event that the number of IP users is greater than 1000, or TPS and SIP CTI/TR87 cannot co-reside.

OR

- d** If $(SSTR + SSNR + SSSR) < 1$ and $(SSNR + SSTR + SSHR + SSSR) > 1$

$SST = SSHW + [\text{ROUNDUP}(SSTR + SSNR + SSSR) \times (2, \text{ if NRA, GSA, or TPSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$

If $(SSHR + SSTR87) > 1$ then

$SST = SST + SSTR87W$

Note: A dedicated Signaling Server is required for SIP CTI/TR87 in the event that H.323 GW and SIP CTI/TR87 cannot co-reside.

If $(SSHR + SSTR87) < 1$ AND GWA = No AND TR87A = Yes then add an Alternate Signaling Server for SIP CTI TR87, for example:

$SST = SST + 1$

Note: H.323 GW and SIP CTI/TR87 can co-reside, but in the event that H.323 GW does not require an alternate Signaling Server, and SIP CTI/TR87 does, then an additional Signaling Server for SIP CTI/TR87 alternate is required.

OR

- e If $(SSTR + SSNR + SSHR) < 1$ and $(SSNR + SSTR + SSHR + SSSR) > 1$

$SST = SSSW + [\text{ROUNDUP}(SSTR + SSNR + SSHR) \times (2 \text{ if NRA, GWA, or TPSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$

If $(SSSR + SSTR87) > 1$ then

$SST = SST + SSTR87W$

Note: A dedicated Signaling Server is required for SIP CTI/TR87 in the event that the SIP Gateway requires a separate Signaling Server for virtual trunks.

If $(SSSR + SSTR87) < 1$ AND GSA = No AND TR87A = Yes, then add an Alternate Signaling Server for SIP CTI TR87, for example:

$SST = SST + 1$

Note: SIP Gateway and SIP CTI/TR87 can co-reside, but in the event that the SIP Gateway does not require an alternate, and SIP CTI/TR87 does, then an additional Signaling Server for SIP CTI/TR87 alternate is needed.

Note: When the process reaches this step, it means that $(SSGR + SSTR + SSHR + SSSR) > 1$, and there is no sharing of the three functions on one Signalling Server. The following procedure is designed to round up the two functions on one Signalling Server:

OR

- f** If $(SSNR + SSTR) < 1$ and $(SSHR + SSSR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$

$SST = [\text{ROUNDUP}(SSNR + SSTR) \times (2 \text{ if NRA or TPSA true; else } 1)] + [\text{ROUNDUP}(SSHR + SSSR) \times (2 \text{ if GWA or GSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$

If $(SSHR + SSSR + SSTR87) > 1$ then

$SST = SST + SSTR87W$

Note: A dedicated Signaling Server is required for SIP CTI/TR87 in the event that SIP CTI/TR87 cannot co-reside with the SIP and H.323 Gateways.

If $(SSHR + SSSR + SSTR87) < 1$ AND GSA = No AND GWA = No AND TR87A = Yes then add an Alternate Signaling Server for SIP CTI TR87, for example:

$SST = SST + 1$

Note: H.323 GW, SIP GW and SIP CTI/TR87 can co-reside, but in the event that the SIP and H.323 Gateways do not require an alternate Signaling Server, and SIP CTI/TR87 does, an additional Signaling Server for SIP CTI/TR87 alternate is required.

OR

- g** If $(SSNR + SSHR) < 1$ and $(SSTR + SSSR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$

$SST = [\text{ROUNDUP}(SSNR + SSHR) \times (2 \text{ if NRA or GWA true; else } 1)] + [\text{ROUNDUP}(SSTR + SSSR) \times (2 \text{ if TPSA or GSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$

If $(SSTR + SSSR + SSTR87) > 1$ then

$SST = SST + SSTR87W$

Note: A dedicated Signaling Server is required for SIP CTI/TR87 in the event that SIP CTI/TR87 cannot co-reside with TPS and SIP Gateways.

If $(IPL > 1000)$ AND If $(SSTR + SSSR + SSTR87) < 1$

$SST = SST + 1$

If $(SSTR + SSSR + SSTR87) < 1$ AND $GSA = \text{No}$ AND $TPSA = \text{No}$ AND $TR87A = \text{Yes}$ then add an Alternate Signaling Server for SIP CTI TR87, for example:

$SST = SST + 1$

Note: SIP Gateway, TPS and SIP CTI/TR87 can co-reside, but in the event that SIP Gateway and TPS do not require an alternate Signaling Server, and SIP CTI/TR87 does, then an additional Signaling Server for SIP CTI/TR87 alternate is necessary.

OR

h If $(SSNR + SSSR) < 1$ and $(SSTR + SSHR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$

$SST = [\text{ROUNDUP}(SSNR + SSSR) \times (2 \text{ if NRA or GSA true; else } 1)] + [\text{ROUNDUP}(SSTR + SSHR) \times (2 \text{ if TPSA or GWA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$

Note: Another potential combination of loads on the Signaling Server is that only one pair of functions can share a Server, but the remaining functions are too close to full load on a Signaling Server to share.

If $(SSTR + SSHR + SSTR87) > 1$ then

$SST = SST + SSTR87W$

Note: A dedicated Signaling Server is required for SIP CTI/TR87 in the event that SIP CTI/TR87 cannot co-reside with TPS and H.323 Gateway.

If $(IPL > 1000)$ AND If $(SSTR + SSHR + SSTR87) < 1$

$SST = SST + 1$

If $(SSTR + SSHR + SSTR87) < 1$ AND GWA = No AND TPSA = No AND TR87A = Yes then add an Alternate Signaling Server for SIP CTI TR87, for example:

$SST = SST + 1$

Note: H.323 Gateway, TPS, and SIP CTI/TR87 can co-reside, but in the event that H.323 Gateway and TPS do not require an alternate Signaling Server, and SIP CTI/TR87 does, then an additional Signaling Server for SIP CTI/TR87 alternate is needed

OR

i If $(SSTR + SSHR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$

$SST = [\text{ROUNDUP}(SSNR) \times (2 \text{ if NRA true; else } 1)] + [\text{ROUNDUP}(SSSR) \times (2 \text{ if GSA true; else } 1)] + [\text{ROUNDUP}(SSTR + SSHR) \times (2 \text{ if TPSA or GWA true; else } 1)] + (1 \text{ if SSDB = c; else } 0)$

If $(SSTR + SSHR + SSTR87) > 1$ then

$SST = SST + SSTR87W$

Note: A dedicated Signaling Server is required for SIP CTI/TR87 in the event that SIP CTI/TR87 cannot co-reside with TPS and H.323 Gateways.

If $(IPL > 1000)$ AND If $(SSTR + SSHR + SSTR87) < 1$

$SST = SST + 1$

If $(SSTR + SSHR + SSTR87) < 1$ AND GWA = No AND TPSA = No AND TR87A = Yes then add an Alternate Signaling Server for SIP CTI TR87, for example:

$SST = SST + 1$

OR

- j** If $(SSNR + SSTR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$
- $$SST = [\text{ROUNDUP}(SSHR) \times (2 \text{ if GWA true; else } 1)] +$$
- $$[\text{ROUNDUP}(SSSR) \times (2 \text{ if GSA true; else } 1)] + [\text{ROUNDUP}(SSNR$$
- $$+ SSTR) \times (2 \text{ if NRA or TPSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$$
- $$SST = SST + SSTR87W$$

Note: A dedicated Signaling Server is required for SIP CTI/TR87. SIP CTI/TR87 cannot co-reside with the NRS.

OR

- k** If $(SSNR + SSHR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$
- $$SST = [\text{ROUNDUP}(SSTR) + (1 \text{ if TPSA true; else } 0)] +$$
- $$[\text{ROUNDUP}(SSSR) \times (2 \text{ if GSA true; else } 1)] + [\text{ROUNDUP}(SSNR$$
- $$+ SSHR) \times (2 \text{ if NRA or GWA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$$
- $$SST = SST + SSTR87W$$

Note: A dedicated Signaling Server is required for SIP CTI/TR87. SIP CTI/TR87 cannot co-reside with the NRS.

OR

- l** If $(SSNR + SSSR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$
- $$SST = [\text{ROUNDUP}(SSTR) + (1 \text{ if TPSA true; else } 0)] +$$
- $$[\text{ROUNDUP}(SSHR) \times (2 \text{ if GWA true; else } 1)] +$$
- $$[\text{ROUNDUP}(SSNR + SSSR) \times (2 \text{ if NRA or GSA true; else } 1)] + (1$$
- $$\text{if SSDB} = c; \text{ else } 0)$$
- $$SST = SST + SSTR87W$$

Note: A dedicated Signaling Server is required for SIP CTI/TR87. SIP CTI/TR87 cannot co-reside with the NRS.

OR

- m** If $(SSTR + SSSR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$
- $$SST = [\text{ROUNDUP}(SSNR) \times (2 \text{ if NRA true; else } 1)] +$$
- $$[\text{ROUNDUP}(SSHR) \times (2 \text{ if GWA true; else } 1)] +$$

$$[\text{ROUNDUP}(\text{SSTR} + \text{SSSR}) \times (2 \text{ if TPSA or GSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$$

If $(\text{SSTR} + \text{SSSR} + \text{SSTR87}) > 1$ then

$$\text{SST} = \text{SST} + \text{SSTR87W}$$

Note: A dedicated Signaling Server is required for SIP CTI/TR87 in the event that SIP CTI/TR87 cannot co-reside with TPS and SIP Gateways.

If $(\text{IPL} > 1000)$ AND If $(\text{SSTR} + \text{SSSR} + \text{SSTR87}) < 1$

$$\text{SST} = \text{SST} + 1$$

If $(\text{SSTR} + \text{SSSR} + \text{SSTR87}) < 1$ AND GSA = No AND TPSA = No AND TR87A = Yes, then add an Alternate Signaling Server for SIP CTI TR87, for example:

$$\text{SST} = \text{SST} + 1$$

OR

n If $(\text{SSHR} + \text{SSSR}) < 1$ and $(\text{SSGR} + \text{SSTR} + \text{SSHR} + \text{SSSR}) > 1$

$$\begin{aligned} \text{SST} = & [\text{ROUNDUP}(\text{SSNR}) \times (2 \text{ if NRA true; else } 1)] + \\ & \text{ROUNDUP}(\text{SSTR}) + (1 \text{ if TPSA true; else } 0) + \\ & [\text{ROUNDUP}(\text{SSHR} + \text{SSSR}) \times (2 \text{ if GWA or GSA true; else } 1)] + \\ & (1 \text{ if SSDB} = c; \text{ else } 0) \end{aligned}$$

If $(\text{SSHR} + \text{SSSR} + \text{SSTR87}) > 1$ then

$$\text{SST} = \text{SST} + \text{SSTR87W}$$

Note: A dedicated Signaling Server is required for SIP CTI/TR87 in the event that SIP CTI/TR87 cannot co-reside with H.323 and SIP Gateways.

If $(SSHR + SSSR + SSTR87) < 1$ AND GSA = No AND GWA = No AND TR87A = Yes then add an Alternate Signaling Server for SIP CTI TR87, i.e.

$$SST = SST + 1$$

If the scenario has not fallen into any of the above 14 cases, it is not possible to share Signaling Server functions. Use the following equation to calculate the total Signaling Server requirement:

$$SST = \text{ROUNDUP}(SSNW + SSTW + SSHW + SSSW + SSTR87W) + (1 \text{ if } SSDB = c; \text{ else } 0)$$

Note: Add an additional Signaling Server to the result from the above calculations if the PD/CL/RL database is on a stand alone Signaling Server.

where:

$$SSNW = SSNR(\text{ROUNDUP if dedicated}) + [\text{ROUNDUP}(SSNR) \times (1 \text{ if } NRA \text{ true; else } 0)]$$

$$SSTW = SSTR(\text{ROUNDUP if dedicated}) + (1 \text{ if } TPSA \text{ true; else } 0)$$

$$SSHW = SSHR(\text{ROUNDUP if dedicated}) + [\text{ROUNDUP}(SSHR) \times (1 \text{ if } GWA \text{ true; else } 0)]$$

$$SSSW = SSSR(\text{ROUNDUP if dedicated}) + [\text{ROUNDUP}(SSSR) \times (1 \text{ if } GSA \text{ true; else } 0)]$$

Note: SSXR in the above equations is rounded up before SSXW is calculated. Note that the total SST is the sum of SSXW defined above—not those defined under each individual function.

Note: It is possible that the sum of two or three functions will be greater than 1, but their fractional parts may still be able to share a Signaling Server with the last function's fraction. In order to avoid overstating an individual function's needs and over-provisioning the total requirement, round off the Signaling Server requirement to a higher integer only after the fraction portion of all functions has been summed.

Refer to “Signaling Server calculation” on [page 386](#) for a numerical example illustrating the algorithm.

Maximum number of Failsafe Network Routing Services

This algorithm defines the maximum number of Failsafe Network Routing Services (RSF) that can be configured. The maximum RSF is limited by the Primary Network Routing Service (RSP) configuration.

$$\begin{aligned} &\text{RSF is less than or equal to RSPE} \\ &\text{RSF} = (\text{RDE}_L \div \text{RSPE}) \times [\text{FR} - (\text{RFR}_S \text{ or } \text{RFR}_C)] \times (\text{DDR} \div 24) \times (\text{RSP}_C) \end{aligned}$$

Simplified formulas:

$$\begin{aligned} \text{RSF} &= (16\,000 \div \text{RSPE}) \text{ for stand-alone Network Routing Service} \\ \text{RSF} &= (10\,000 \div \text{RSPE}) \text{ for collocated Network Routing Service} \end{aligned}$$

Table 73 defines the terms used in the calculations.

Table 73
RSF algorithm constant and variable definitions (Part 1 of 2)

Algorithm term	Description	Value	Notes
DDR	Dynamic Data Resynch	24 (see Note 3)	In one day, the minimum number of synchronizations of dynamic data from Active RD to a RSF.
FR	FTP Resource	10 (see Note 4)	Software limit.
<p>Note 1: Constant in the formulas.</p> <p>Note 2: Variable to be entered into the formula.</p> <p>Note 3: Constant that will update with platform changes.</p> <p>Note 4: Constant that will update with system software releases.</p> <p>Note 5: Calculated result.</p>			

Table 73
RSF algorithm constant and variable definitions (Part 2 of 2)

Algorithm term	Description	Value	Notes
RDE _L	NRS endpoints limit	5000 (see Note 4)	Software limit.
RSF	Maximum Failsafe NRS allowed	calc (see Note 5)	
RSP _C	RSP CPU performance	1.0 (see Note 3)	PIII 700 MHz; 512 MByte; 20 GByte
RSPE	RSP endpoints	enter (see Note 2)	
RFR _C	Reserved FTP Resource Collocated	5 (see Note 4)	Software limit. RSP shares Signaling Server with other applications, such as TPS. Reserve 3 for other applications.
RFR _S	Reserved FTP Resource Standalone	2 (see Note 4)	Software limit. RSP is only application on Signaling Server. Reserve 1 for Static updates and 1 spare.

Note 1: Constant in the formulas.

Note 2: Variable to be entered into the formula.

Note 3: Constant that will update with platform changes.

Note 4: Constant that will update with system software releases.

Note 5: Calculated result.

Reducing imbalances (second round of algorithm calculations)

Input data may not be consistent. For example, there may be a high intraoffice ratio in a call center, or few trunks but a high interoffice ratio. In these cases, the resulting calculations in the NNEC tool will generate a warning message

indicating traffic imbalance. The user may want to change the input data and rerun the calculation.

There are two types of imbalances that may occur

- Virtual Trunks ([p. 373](#))
- Line and trunk traffic ([p. 374](#))

Virtual Trunks

When the VT number input by the user differs significantly from the calculated VT number (more than 20% difference), the NNEC tool will use the calculated number and rerun the algorithm to obtain a newer VT number. If the resulting VT number is not stable (in other words, after each rerun, a new calculated VT number is obtained), the program will repeat the calculation cycle up to six times. This recalculation looping is built into the NNEC and occurs automatically, with no user action required. At the end of the recalculation cycle, the user has the choice of using the original input VT number or the final calculated VT number in the configuration.

The user inputs about the number of H.323 Virtual Trunks and SIP Virtual Trunks are a function of other parameters in the system. For example, the number of Virtual Trunks required will be affected by the total number of trunks in the system and by intraoffice/incoming ratios: Virtual Trunks and TDM trunks cannot carry a high volume of trunk traffic if the system is characterized as carrying mostly intraoffice calls. If pre-engineering has not provided consistent ratios and CCS, the VT input numbers will tend to diverge from the calculated results based on input trunking ratios.

Use the following formula to calculate the VT CCS to compare against user input, in order to determine the size of the deviation. Note that for this consistency check, H.323 VT CCS and SIP VT CCS are separated out from the VT total by using the user input ratio of H.323 to SIP.

$$HVT = C_{VT} \times v_H \times WAHT \div 100$$

$$SVT = C_{VT} \times v_S \times WAHT \div 100$$

The respective difference between HVT and HVT_{CCS} , and between SVT and SVT_{CCS} , is the deviation between input data and calculated value.

After the automatic NNEC recalculations, if the discrepancy between the input VT number and the final calculated number is still significant (more than 20%), follow the recommendations for reducing line and trunk traffic imbalance (see “Line and trunk traffic” on [page 374](#)). Adjusting the number of Virtual Trunks and trunk CCS alone, without changing the intraoffice ratio or its derivatives, may never get to a balanced configuration.

Line and trunk traffic

At the end of the algorithm calculation, if the line and trunk CCS are significantly imbalanced (more than 20% difference), the NNEC tool will generate a warning message. The user can choose whether to change input data and rerun the calculation to have a better balanced system. The recalculation loop starts from the point of entering configuration inputs at the GUI.

Use the following formula to obtain the calculated line CCS to compare against user input, in order to determine the size of the deviation.

$$\text{Calculated line CCS (L}_{\text{CCS}}) = (C_{\text{SS}} + C_{\text{ST}} + C_{\text{TS}}) \times \text{WAHT} \div 100$$

The difference between L_{CCS} and LC_{CCS} is the imbalanced line CCS.

Similarly, use the following formula to obtain the calculated trunk CCS to compare against user input, in order to determine the size of the deviation.

$$\text{Calculated total trunk CCS (T}_{\text{CCS}}) = (C_{\text{TT}} + C_{\text{ST}} + C_{\text{TS}}) \times \text{WAHT} \div 100$$

The difference between T_{CCS} and TC_{CCS} is the imbalanced trunk CCS.

Because the calculated CCS factor in traffic ratios, line and trunk CCS can be significantly imbalanced if these ratios are inconsistent. For example, if the intraoffice, incoming, and outgoing ratios are based on contradictory assumptions, the calculated line CCS may be much higher than the number of trunks can absorb.

Table 74 provides tips for users to modify input data so as to steer the algorithm in the right direction. The desired configuration for the input data

is when the input numbers for Virtual Trunks, line CCS, and trunk CCS are close to their calculated values (less than 20% difference).

Table 74
Tips to reduce traffic imbalances

When this happens...	Try this...
Line traffic too high	<ul style="list-style-type: none">• Reduce CCS per telephone or number of telephones.• Increase the intraoffice ratio.
Trunk traffic too high	<ul style="list-style-type: none">• Reduce CCS per trunk or number of trunks.• Reduce the intraoffice ratio.• Increase the tandem ratio (if justified; changing the incoming/outgoing ratio will have no impact on line/trunk traffic imbalance).
Need to change input VT number because other input data has changed	<ul style="list-style-type: none">• If changing the input VT number is not an option, keep it and change only the number of TDM trunks.• If the input VT number is not a committed value, use the VT number from the previous run.• When input traffic data is changed, expect the resulting VT number to change accordingly. Modify line data or trunk data one at a time to see the trend of convergence. Otherwise, it is hard to know which variable is most responsible for converging to the desired result.

Illustrative engineering example

The following numerical example is for a general business/office model.

Assumptions

The example uses the following values for key parameters.

Note: These parameter values are typical for systems in operation, but the values for the ratios are not the defaults.

- Intraoffice ratio (R_I): 0.25
- Tandem ratio (R_T): 0.03
- Incoming ratio (I): 0.60
- Outgoing ratio (O): 0.12

In fraction of calls, the above ratios add up to 1.

- $AHT_{SS} = 60$ [average hold time (AHT) for telephone to telephone ($_{SS}$)]
- $AHT_{TS} = 150$ [AHT for trunk to telephone ($_{TS}$)]
- $AHT_{ST} = 150$ [AHT for telephone to trunk ($_{ST}$)]
- $AHT_{TT} = 180$ [AHT for trunk to trunk ($_{TT}$)]

Given configuration

A CS 1000M Large System with the following configuration data:

- 1200 digital and analog telephones at 5 CCS/telephone
 - including 170 ACD agents with digital telephones at 33 CCS/agent
- 1600 IP telephones at 5 CCS/IP telephone
 - including 50 IP ACD agent telephones at 33 CCS/IP agent telephone
- 200 MDECT mobile phones at 5 CCS/telephone
- 650 trunks
 - including 68 Virtual Trunks (240 H.323 and 120 SIP) at 28 CCS/trunk
(The numbers for H.323 and SIP Virtual Trunks are input from user response to a GUI request in the NNEC.)

- Network Virtual Trunks served by this Gatekeeper: 800
(This is another input from the user interface.)
- CallPilot ports at 26 CCS/CP port
 - 36 local CallPilot ports
 - 24 network CallPilot ports (input from user interface)
- Other traffic-insensitive, preselected application ports that require DSP channels and real-time feature overhead. The DSP required for IP Phones to access these special applications is proportional to the percentage of IP calls in the system.
 - Agent greeting ports: 4
 - Integrated Conference Bridge ports: 16 (HT = 1800)
 - Integrated Recorded Announcer ports: 12 (HT = 90)
 - Integrated Call Assistant ports: 8 (HT = 180)
 - Hospitality Integrated Voice Service ports: 8 (HT = 90)
 - Integrated Call Director ports: 12 (HT = 60)
 - BRI users: 8 (HT = 180)
 - MDECT mobile telephones: 200 (HT = WAHT)
- Features with processing overhead but no hardware ports:
 - CPND percentage: 20% of TDM telephone calls
 - Converged Desktop percentage: 5% of the following calls:
(intraoffice calls \times 0.1) + incoming calls + outgoing calls + tandem calls
 - Intraoffice CDR: No (could be yes, but not typical)
 - Incoming CDR: Yes
 - Outgoing CDR: Yes
 - Tandem CDR: Yes
 - Symposium-processed ACD calls: 90%
 - ACD calls without Symposium: 10%

Real-time factors are based on Table 66 on [page 335](#).

Calculations

Note: The calculations in this example were performed by spreadsheet. Some rounding off may have occurred.

- The ACD agent to total telephone ratio = $(50 + 170) \div (1200 + 1600 + 200)$
 $= 0.073$
This ratio is less than the 15% threshold, so the site is not considered a call center. All ACD traffic will be included in call distribution calculations. Refer to “DSP ports for general traffic” on [page 346](#) for more information.
- TDM telephones CCS = $[(1200 - 170) \times 5] + (170 \times 33) + (200 \times 5)$
 $= 11\,760$ CCS
- IP telephones CCS = $[(1600 - 50) \times 5] + (50 \times 33) = 9400$ CCS
- Fraction of IP calls (P) = $1600 \div (1200 + 1600 + 200) = 0.53$
- Weighted average holding time (WAHT)
 $= (60 \times 0.25) + (150 \times 0.60) + (150 \times 0.12) + (180 \times 0.03) = 128$ seconds
- Total line CCS (L_{CCS}) = $11\,760 + 9400 = 21\,160$
- 650 trunks at 28 CCS per trunk:
Fraction of Virtual Trunks (V) = $360 \div 650 = 0.55$
Virtual Trunk traffic (VT_{CCS}) = $360 \times 28 = 10\,080$
TDM trunk CCS (T_{TDM}) = $(650 - 360) \times 28 = 8120$
 $v_H = 240 \div (120 + 240) = 0.67$
 $v_S = 120 \div (120 + 240) = 0.33$

Total trunk CCS (T_{TCCS}) = $10\,080 + 8120 = 18\,200$
- Total CCS (T_{CCS}) = $21\,160 + 18\,200 = 39\,360$
- Total calls (T_{CALL}) = $0.5 \times T_{CCS} \times 100 \div WAHT$
 $= 0.5 \times 39\,360 \times 100 \div 128 = 15\,375$

- The system calls are comprised of four different types of traffic: Intraoffice calls (telephone-to-telephone) (C_{SS}); Tandem calls (trunk-to-trunk) (C_{TT}); Originating/Outgoing calls (telephone-to-trunk) (C_{ST}); Terminating/Incoming calls (trunk-to-telephone) (C_{TS}).

$$\begin{aligned} \mathbf{1} \quad \text{Intraoffice calls } (C_{SS}) &= T_{CALL} \times R_I \\ &= 15\,375 \times 0.25 = 3844 \end{aligned}$$

$$\begin{aligned} \mathbf{a} \quad \text{Intraoffice IP to IP calls } (C_{2IP}) &= C_{SS} \times P^2 \\ &= 3844 \times 0.44 \times 0.44 = 759 \\ &\text{(require no DSP, no VT)} \\ pf1 &= 759 \div 15\,375 = 0.05 \end{aligned}$$

$$\begin{aligned} \mathbf{b} \quad \text{Intraoffice IP to TDM calls } (C_{1IP}) &= C_{SS} \times 2 \times P \times (1 - P) \\ &= 3844 \times 2 \times 0.44 \times (1 - 0.44) = 1898 \\ &\text{(require DSP)} \\ pf2 &= 1898 \div 15\,375 = 0.12 \end{aligned}$$

$$\begin{aligned} \mathbf{c} \quad \text{Intraoffice TDM to TDM } (C_{NoIP}) &= C_{SS} \times (1 - P)^2 \\ &= 3844 \times (1 - 0.44) \times (1 - 0.44) = 1187 \\ &\text{(require no DSP, no VT)} \\ pf3 &= 1187 \div 15\,375 = 0.08 \end{aligned}$$

$$\begin{aligned} \mathbf{2} \quad \text{Tandem calls } (C_{TT}) &= T_{CALL} \times R_T \\ &= 15\,375 \times 0.03 = 461 \text{ calls} \end{aligned}$$

$$\begin{aligned} \mathbf{a} \quad \text{Tandem VT to TDM calls } (C_{T1VT}) &= 2 \times C_{TT} \times V \times (1 - V) \\ &= 2 \times 461 \times 0.55 \times (1 - 0.55) = 228 \\ &\text{(require DSP and VT)} \\ pf4 &= 228 \div 15\,375 = 0.01 \end{aligned}$$

$$\begin{aligned} \mathbf{b} \quad \text{Tandem TDM to TDM calls } (C_{T2NoVT}) &= C_{TT} \times (1 - V) \times (1 - V) \\ &= 461 \times (1 - 0.55) \times (1 - 0.55) = 92 \\ &\text{(require no DSP, no VT)} \\ pf5 &= 92 \div 15\,375 = 0.01 \end{aligned}$$

$$\begin{aligned} \mathbf{c} \quad \text{Tandem VT (H.323) to VT (SIP) calls } (C_{T2HS}) &= C_{TT} \times V^2 \times v_H \times v_S \times 2 \times 2 \\ &= 461 \times 0.55 \times 0.55 \times 0.67 \times 0.33 \times 4 = 126 \\ &\text{(require no DSP, VT)} \\ pf6 &= 126 \div 15\,375 = 0.008 \end{aligned}$$

- 3 Originating/outgoing calls (C_{ST}) = $T_{CALL} \times O$
 $= 15\,375 \times 0.12 = 1845$ calls
 - a IP to VT calls (C_{STDI}) = $C_{ST} \times P \times V$
 $= 1845 \times 0.44 \times 0.55 = 454$
 (require VT)
 $pf7 = 454 \div 15\,375 = 0.03$
 - b IP to TDM calls (C_{STID}) = $C_{ST} \times P \times (1 - V)$
 $= 1845 \times 0.44 \times (1 - 0.55) = 366$
 (require DSP)
 $pf8 = 366 \div 15\,375 = 0.02$
 - c TDM to VT calls (C_{STDV}) = $C_{ST} \times (1 - P) \times (V)$
 $= 1845 \times (1 - 0.44) \times 0.55 = 568$
 (require DSP, VT)
 $pf9 = 568 \div 15\,375 = 0.04$
 - d TDM to TDM calls (C_{STDD}) = $C_{ST} \times (1 - P) \times (1 - V)$
 $= 1845 \times (1 - 0.44) \times (1 - 0.55) = 457$
 (require no DSP, no VT)
 $pf10 = 457 \div 15\,375 = 0.03$
- 4 Terminating/incoming calls (C_{TS}) = $T_{CALL} \times I$
 $= 15\,375 \times 0.60 = 9225$ calls
 - a VT to TDM calls (C_{TSVD}) = $C_{TS} \times V \times (1 - P)$
 $= 9225 \times 0.55 \times (1 - 0.44) = 2840$
 (require DSP, VT)
 $pf11 = 2840 \div 15\,375 = 0.18$
 - b VT to IP calls (C_{TSVI}) = $C_{TS} \times V \times P$
 $= 9225 \times 0.55 \times 0.44 = 2270$
 (require VT)
 $pf12 = 2270 \div 15\,375 = 0.15$

- c TDM to IP calls (C_{TSDI}) = $C_{TS} \times (1 - V) \times P$
 $= 9225 \times (1 - 0.55) \times 0.44 = 1828$
 (require DSP)
 $pf13 = 1828 \div 15\,375 = 0.12$
- d TDM to TDM calls (C_{TSDD}) = $C_{TS} \times (1 - V) \times (1 - P)$
 $= 9225 \times (1 - 0.55) \times (1 - 0.44) = 2287$
 (require no DSP, no VT)
 $pf14 = 2287 \div 15\,375 = 0.15$

- From the above data, the real-time multiplier can be obtained:

Real-time multiplier per call

$$\begin{aligned}
 &= 1 + (f_1 \times pf1) + (f_2 \times pf2) + (f_3 \times pf3) + \dots + (f_{14} \times pf14) + \text{Error_term} \\
 &= 1 + (0.5 \times 0.05) + (1.7 \times 0.12) + (0.03 \times 0.08) + (2.09 \times 0.01) + \\
 &\quad (2.09 \times 0.01) + (1.93 \times 0.008) + (2.27 \times 0.03) + (2.42 \times 0.02) + \\
 &\quad (2.02 \times 0.04) + (1.27 \times 0.03) + (1.46 \times 0.18) + (1.6 \times 0.15) + \\
 &\quad (2.0 \times 0.12) + (1.2 \times 0.15) + 0.25 \\
 &= 2.70
 \end{aligned}$$

- Calls involving at least one IP Phone (will be needed for Gateway calculation):

$$C_{IP} = C_{2IP} + C_{1IP} + C_{STIV} + C_{STID} + C_{TSVI} + C_{TSDI} = 7574$$

- Calls that require DSP resources:

$$C_{DSP} = C_{1IP} + C_{T1VT} + C_{STID} + C_{STDV} + C_{TSVD} + C_{TSDI} = 7727$$

- Calls that require Virtual Trunk resources:

$$C_{VT} = C_{T1VT} + C_{T2HS} + C_{STIV} + C_{STDV} + C_{TSVD} + C_{TSVI} = 6485$$

Real-time calculation with major applications

- ACD agent calls without Symposium = $[(\text{Number of ACD agents}) \times \text{CCS/agent} \times 100 \div \text{AHT}_{TS}] \times 0.1 \times f_{ACD} = 484 \times 0.13 = 63$
- Symposium calls EBC = $[(\text{Number of agents}) \times \text{CCS/agent} \times 100 \div \text{AHT}_{TS}] \times 0.9 \times f_{sym} = 4840 \times 0.9 \times 5.7 = 24\,829$

- Calculate the impact of other major features and applications.

$$\text{Application EBC} = [(\text{Number of application ports}) \times \text{CCS per port} \times 100 \div \text{HT}] \times \text{real-time factor}$$

Table 75 summarizes the EBC calculations. For those applications requiring DSP resources, it also provides the results of DSP calculations for applications and features, for later use.

Table 75
Application and feature EBCs and DSP requirements (Part 1 of 2)

Application/ Feature	Number of ports	EBC*	Required DSP ports**	Comments
Integrated Conference Bridge	16	37	7.11	
Integrated Recorded Announcer	12	218	5.33	
Integrated Call Assistant	8	66	3.55	
Hospitality Integrated Voice Service	8	132	3.55	
Integrated Call Director	12	328	5.33	
BRI	8 × 2	9	7.11	
MDECT	200	3320		
Agent greeting	4		1.78	
CDR - incoming		2952		= 9225 × 0.32
CDR - outgoing		590		= 1845 × 0.32
CDR - tandem		203		= 461 × 0.44
CPND		1642		= (1898 + 1187 + 2840 + 2287) × 0.20, where terminating telephone is a TDM
*Application EBC = (Number of application ports × CCS per port × 100 ÷ HT) × real-time factor				
**Required DSP = Number of application ports × P				

Table 75
Application and feature EBCs and DSP requirements (Part 2 of 2)

Application/ Feature	Number of ports	EBC*	Required DSP ports**	Comments
Converged Desktop		1388		$= 0.05 \times 2.33 \times [(3844 \times 0.1) + 461 + 1845 + 9225]$
Basic ACD		63		
Symposium		25 003		
CallPilot		6474	26.65	
Total		42 426	61	
*Application EBC = (Number of application ports \times CCS per port \times 100 \div HT) \times real-time factor				
**Required DSP = Number of application ports \times P				

- Add the feature EBC to the system EBC to obtain an accurate estimate of the total CPU load:

$$\begin{aligned} \text{Total system real-time EBC} &= (\text{Total system calls} \times \text{real-time multiplier}) \\ &+ \text{Application EBC} \\ &= (15\,375 \times 2.70) + 42\,426 = 83\,939 \end{aligned}$$

New system real-time usage

Compare the total system EBC with the CPU rated capacity to determine the processor utilization.

$$\text{CPU utilization} = 83\,939 \div 315\,000 = 26.6\%$$

In this example, CPU utilization, including application and feature impact, is 26.6%. This loading indicates that the CPU can handle this configuration with ease and has plenty of spare capacity.

CPU real-time conversion for upgrades

If the configuration is an upgrade to an existing switch, in addition to the new load from the above calculation, the CPU utilization data from a current traffic report TFS004 is also required.

Assume this is an upgrade of a Release 22 switch with CP2 to CS 1000 Release 4.5 with CPP PII, when the TFS004 reading is 60%.

From Tables 68 and 69 on [page 342](#):

SWRC = 55

CPTU = 0.18

The calculation to convert the loading is:

$$\text{CRTU} = (60/100) \times [1 + (55 \div 100)] \times 0.18 = 0.167$$

Therefore, 16.7% of the new system CPU (CPP PII) must be reserved to handle calls of the existing site. The expected total CPU utilization will be 43.4% (= 26.7 + 16.7).

If the CRTU had worked out to be > 0.18, it would have been capped at 0.18, since that is the highest load expected of a site with CP2 when a new CPP PII processor is installed.

DSP calculation for Conference ports

The formula to calculate the DSP requirement for conference ports is based on the number of telephones in the system:

$$\begin{aligned} \text{DSP channels for conference ports} &= (\text{Number of TDM telephones} + \\ &\quad \text{Number of IP telephones} + \text{Number of MDECT telephones}) \times 0.028 \times P \\ &= 3000 \times 0.028 \times 0.44 = 37 \end{aligned}$$

DSP calculation without applications

$$\text{DSP calls (C}_{\text{DSP}}\text{)} = \text{C}_{\text{IIP}} + \text{C}_{\text{TIVT}} + \text{C}_{\text{STID}} + \text{C}_{\text{STDV}} + \text{C}_{\text{TSVD}} + \text{C}_{\text{TSDI}} = 7727$$

$$\text{DSP CCS} = \text{C}_{\text{DSP}} \times \text{WAHT} \div 100 = 7727 \times 128 \div 100 = 9891 \text{ CCS}$$

Refer to an Erlang B table (with P.01 GoS) to find the corresponding number of ports, or use the following formula:

$$\text{Number of DSP ports} = \text{DSP CCS} \div 6192 \times 192 = 307$$

DSP and Media Card calculations

$$\text{Total DSP ports} = \text{DSP for calls} + \text{Conference} + \text{Applications/features} = 307 + 37 + 61 = 405$$

$$\text{Number of 32-port Media Cards required} = 405 \div 32 = 13$$

$$\text{For an 8-port Media Card, number of Media Cards required} = 405 \div 8 = 51$$

Note: It is recommended to round up the Media Card calculation to an integer.

Virtual Trunk calculation

$$\text{VT calls (C}_{VT}\text{)} = \text{C}_{TIVT} + \text{C}_{T2HS} + \text{C}_{STIV} + \text{C}_{STDV} + \text{C}_{TSVD} + \text{C}_{TSVI} = 6485$$

$$\text{H.323 VT calls (HC}_{VT}\text{)} = \text{C}_{VT} \times v_H = 6485 \times 0.67 = 4345$$

$$\text{SIP VT calls (SC}_{VT}\text{)} = \text{C}_{VT} \times v_S = 6485 \times 0.33 = 2140$$

$$\text{VT CCS} = \text{C}_{VT} \times \text{WAHT} \div 100 = 6485 \times 128 \div 100 = 8310 \text{ CCS}$$

Refer to a Poisson table (with P.01 GoS) to find the corresponding number of trunks, or use the following formula:

$$\text{Number of Virtual Trunks} = \text{VT CCS} \div 5804 \times 192 = 275$$

$$\text{Number of H.323 Virtual Trunks} = 275 \times 0.67 = 184$$

$$\text{Number of SIP Virtual Trunks} = 275 \times 0.33 = 91$$

User input for number of Virtual Trunks was 360. Since this is greater than 275, it is the number that should be used for further resource calculation.

Signaling Server calculation

The following information was obtained from previous calculations or input data:

Number of IP Phones in the system = 1600
 Number of Virtual Trunks = 360 (H.323 = 240; SIP = 120)
 Calls involving at least one IP telephone (C_{IP}) = 7574
 Calls involving Virtual Trunks (C_{VT}) = GKC_0 = 6485

The following is additional user input to the NNEC tool:

Endpoints served by this Gatekeeper: 100
 NRS entries (CDP + UDP + ...): 1000
 Virtual Trunks from other endpoints served by this NRS: 800
 NRS alternate (NRA): Yes
 TPSA (TPS N+1 redundancy required): Yes
 H.323 Gateway alternate (GWA): Yes
 SIP Gateway alternate (GSA): Yes
 PD/CL/RL feature available to IP telephones: Yes
 Sharing database with other traffic: Yes

PD/CL/RL database calculation (SSDB)

SSDB = b

The PD/CL/RL feature is available and sharing is allowed.

Network Routing Service calculation

SSNR = larger of:

{
a $NRE \div NRE_1 = 100 \div 5000 = 0.02$ endpoints
b $NRD \div NRD_1 = 1000 \div 20\,000 = 0.05$ dial plan entries
c $NRC \div NRC_{HL}$ calls per hour
 }

NRC_0 is obtained from the main switch calculation.

$NRC_{NET} = VT_{NET} \times (CCS \text{ per } VT) \times 100 \div WAHT \div 2$

$$= 800 \times 28 \times 100 \div 128 \div 2 = 8750$$

$$\text{NRC} = \text{NRC}_0 + \text{NRC}_{\text{NET}}$$

$$f_{\text{H/S}} = (\text{H.323 call real time}) \div (\text{SIP call real time}) = 1800 \div 1200 = 1.5$$

$$\text{SIP calls} = 120 \times 28 \times 100 \div 128 = 2625$$

$$\text{H.323 calls} = 240 \times 28 \times 100 \div 128 = 5250$$

$$\text{NRC} \div \text{NRC}_{\text{HL}} = [(5250 \times 1.5) + 2625 + 8750] \div 100\,000 = 0.2$$

This represents the loading of the Signaling Server for handling NRS calls. Compared with the results of equations (a) and (b), 0.2 is the highest of all potential usages.

Since the user wants the NRS in a dedicated Signaling Server, round up SSNR before proceeding with further calculations:

$$\text{SSNW} = \text{ROUNDUP}(0.2) \times 2 = 2$$

Terminal Proxy Server calculation

SSTR = larger of:

{

b Since SSDB = b, with PD/CL/RL and sharing
and $\text{IPL}(1600) > \text{IPL}_{\text{DB}}(1000)$,
 $1 + [(\text{IPL} - 1000) \div \text{IPL}_{\text{SL}}] = 1 + (600 \div 5000) = 1.12$
(The database server can share the TPS function for 1600
IP telephones without the need for an additional Signaling Server.)

c $\text{IPC} \div \text{IPC}_{\text{HL}} = 7574 \div 15\,000 = 0.51$

}

The larger of the two values is 1.12.

Since the user wants the TPS in a dedicated Signaling Server, round up SSTR before proceeding with further calculations:

$$\text{SSTW} = \text{ROUNDUP}(1.12) + 1 = 3$$

H.323 Gateway calculation

SSHR = larger of:

{

a $HVT \div HVT_{SL} = 240 \div 1200 = 0.2$

b $C_{VT} \div HVT_{C_{HL}} = 4345 \div 18\,000 = 0.24$

}

The larger of the two values is 0.24.

Since the user wants the H.323 Gateway in a dedicated Signaling Server, round up SSHR before proceeding with further calculations:

$$SSHW = \text{ROUNDUP}(0.24) \times 2 = 2$$

5 SIP Gateway calculation (SSSR)

SSSR = larger of:

{

a $SVT \div SVT_{SL} = 120 \div 1800 = 0.07$

b $C_{VT} \div SVT_{C_{HL}} = 2092 \div 27\,000 = 0.08$

}

The larger of the two values is 0.08.

Since the user wants the SIP Gateway in a dedicated Signaling Server, round up SSSR before proceeding with further calculations:

$$SSSW = \text{ROUNDUP}(0.08) \times 2 = 2$$

Total Signaling Server requirement (SST)

The final calculation of SST requires picking the formula that suits the particular configuration and user input.

Since:

$$\text{SSNR} + \text{SSHR} + \text{SSSR} = 0.20 + 0.28 + 0.14 = 0.62 < 1 \text{ and}$$

$$\text{SSNR} + \text{SSTR} + \text{SSHR} + \text{SSSR} = 1.74 > 1$$

$$\text{SST} = \text{SSTW} + [\text{ROUNDUP}(\text{SSNR} + \text{SSHR} + \text{SSSR}) \times 2] + (0, \text{ since SSDB} = \text{b, not c})$$

$$= 3 + [\text{ROUNDUP}(0.62) \times 2] = 5$$

The required number of Signaling Servers for this configuration is 5. The server with the database for the PD/CL/RL feature is sharing processing with the TPS function that handles IP telephones.

LAN/WAN bandwidth calculation algorithm

The calculation for LAN/WAN bandwidth requirement is based on traffic directly. It does not depend on the traffic model used.

$$\text{VT traffic in erlangs} = [(240 + 120) \times 28] \div 36 = 280 \text{ erlangs}$$

Application engineering

Contents

This section contains information on the following topics:

Introduction	391
Converged Desktop	392
Multi-purpose Serial Data Link	401
Microsoft Live Communications Server users	404
Meridian Mail	443
CallPilot engineering	445
Call Center	446
ELAN subnet engineering	453
CLASS network engineering	453
Configuration parameters	458

Introduction

Certain applications have significant capacity impact and require engineering in order to operate properly from a capacity perspective. This section provides suggestions for engineering these applications.

For descriptions of the features and their functionality, refer to feature documentation in the Nortel Technical Publications.

Converged Desktop

The Converged Desktop is a TDM or IP telephone configured to access Multimedia Communication Server (MCS) 5100 multimedia applications through a Session Initiation Protocol (SIP) Virtual Trunk. A CS 1000M system equipped with a CP PIV processor has sufficient real-time capacity to support the Converged Desktop application on all telephones in the system.

SIP access port requirement

Every Converged Desktop call uses a SIP trunk for signaling during the ringing period. In addition, a certain percentage of calls will use the SIP trunk for voice traffic for the entire duration of the call. Therefore, the required number of SIP access ports depends on the number of Converged Desktop users and the percentage of voice calls using SIP trunks for conversation.

Personal Call Assistant requirement

The following types of calls to a Converged Desktop use the Personal Call Assistant (PCA) feature for the duration of ringing time:

- calls originating from an internal phone
- calls originating from any non-SIP trunk
- calls originating from a SIP trunk but not from an MCS 5100

The PCA requirement depends only on the number of Converged Desktop users. It is independent of the percentage of voice calls using SIP trunks for conversation.

Note: SIP Access Port and PCA Licenses are included with the purchase of MCS 5100 Converged Desktop telephones. Customers do not usually need to purchase incremental software licenses.

Calculating SIP access port and PCA requirements

Table 76 on [page 394](#) shows the required number of SIP access ports and PCAs for different levels of Converged Desktop usage, with P.01 Grade-of-Service (GoS).

The columns under “% voice traffic carried by SIP trunk” indicate the fraction of calls that will use a SIP trunk for conversation. A percentage of zero means that the SIP port is used only for signaling during the ringing period and is dropped from the connection once the call is answered.

To use the table, users must know (1) the number of Converged Desktop users and (2) the percentage of Converged Desktop users using SIP trunks to carry voice traffic. The readings below the percentage column are the number of SIP trunks and PCA ports required for a given number of Converged Desktop users.

The number of users shown in Table 76 increments by increasingly large amounts as the number of users increases. If you are calculating requirements for a number of users not shown in the table, use the following formula:

Inputs

- Total Number of Converged Desktop users required (MCS_CD_Users)
- Percentage of calls that will be answered on a soft client configured as a Converged Desktop (P_CD_SIP)
- Total Number of non-Converged desktop users required (MCS_Non_CD_Users)
- Number of Meet-Me Audio Conference ports configured on the MCS (MeetMe_Ports)

Calculations

- Traffic for CD = (MCS_CD_Users) x (CCS per user) x 10%
- Traffic for SIP ports = (MCS_Non_CD_Users) x (CCS per user) + (MCS_CD_Users x P_CD_SIP) x (CCS per user)
- Total SIP Traffic = (Traffic for CD) x (1 - P_CD_SIP) + (Traffic for SIP ports)
- Number of SIP ports = Poisson (Total SIP Traffic) at P.01 + MeetMe_Ports
- Number of MCS PCAs ports = Poisson (Traffic for CD) at P.01
- Number of ACD agents = Number of MCS PCAs ports

If detailed information about the network is not available, use the following formula to estimate the percentage of Converged Desktop users using SIP trunks to carry voice traffic, rounding up the result:

$$(\text{Number of SIP trunks}) \div [(\text{Number of SIP trunks}) + (\text{Number of H.323 trunks})]$$

Assumptions

- 1 The ringing period is 10% of the conversation time. (One ring is a 6-second cycle; the ringing period is usually 2–3 rings; average conversation time is 120–180 seconds.)
- 2 PCA holding time is equal to the length of the ringing period for each call. This is a conservative assumption, because it implies that every call needs a PCA.

Example

Two hundred Converged Desktop users with 0% SIP trunk conversation require 8 SIP access ports and 8 PCAs. If 20% use SIP for conversation, the requirements are 16 SIP access ports and 8 PCAs.

Table 76
SIP port and PCA requirements for Converged Desktop (with P.01 GoS) (Part 1 of 8)

# CD Users		% voice traffic carried by SIP trunk											
		0	5	10	15	20	25	30	35	40	45	50	100
25	SIP CCS	12.5	18.1	23.8	29.4	35.0	40.6	46.2	51.9	57.5	63.1	68.8	125.0
	SIP port	3	4	4	4	5	5	5	6	6	6	7	9
	PCA	3	3	3	3	3	3	3	3	3	3	3	3
Note: Voice users in CCS = 5 CCS per user. Ratio of ringing time to holding time = 0.1.													

Table 76
SIP port and PCA requirements for Converged Desktop (with P.01 GoS) (Part 2 of 8)

# CD Users		% voice traffic carried by SIP trunk											
		0	5	10	15	20	25	30	35	40	45	50	100
50	SIP CCS	25.0	36.2	47.5	58.8	70.0	81.2	92.5	103.8	115.0	126.2	137.5	250.0
	SIP port	4	5	6	6	7	7	8	8	9	9	10	15
	PCA	4	4	4	4	4	4	4	4	4	4	4	4
75	SIP CCS	37.5	54.4	71.2	88.1	105.0	121.9	138.8	155.6	172.5	189.4	206.2	375.0
	SIP port	5	6	7	8	8	9	10	11	11	12	13	19
	PCA	5	5	5	5	5	5	5	5	5	5	5	5
100	SIP CCS	50.0	72.5	95.0	117.5	140.0	162.5	185.0	207.5	230.0	252.5	275.0	500.0
	SIP port	6	7	8	9	10	11	12	13	14	15	16	24
	PCA	6	6	6	6	6	6	6	6	6	6	6	6
125	SIP CCS	62.5	90.6	118.8	146.9	175.0	203.1	231.2	259.4	287.5	315.6	343.8	625.0
	SIP port	6	8	9	10	12	13	14	15	16	17	18	29
	PCA	6	6	6	6	6	6	6	6	6	6	6	6
150	SIP CCS	75.0	108.8	142.5	176.2	210.0	243.8	277.5	311.2	345.0	378.8	412.5	750.0
	SIP port	7	9	10	12	13	14	16	17	18	20	21	33
	PCA	7	7	7	7	7	7	7	7	7	7	7	7
Note: Voice users in CCS = 5 CCS per user. Ratio of ringing time to holding time = 0.1.													

Table 76
SIP port and PCA requirements for Converged Desktop (with P.01 GoS) (Part 3 of 8)

# CD Users		% voice traffic carried by SIP trunk											
		0	5	10	15	20	25	30	35	40	45	50	100
175	SIP CCS	87.5	126.9	166.2	205.6	245.0	284.4	323.8	363.1	402.5	441.9	481.2	875.0
	SIP port	8	9	11	13	14	16	18	19	20	22	23	37
	PCA	8	8	8	8	8	8	8	8	8	8	8	8
200	SIP CCS	100.0	145.0	190.0	235.0	280.0	325.0	370.0	415.0	460.0	505.0	550.0	1000.0
	SIP port	8	10	12	14	16	18	19	21	23	24	26	42
	PCA	8	8	8	8	8	8	8	8	8	8	8	8
225	SIP CCS	112.5	163.1	213.8	264.4	315.0	365.6	416.2	466.9	517.5	568.1	618.8	1125.0
	SIP port	9	11	13	15	17	19	21	23	25	27	28	46
	PCA	9	9	9	9	9	9	9	9	9	9	9	9
250	SIP CCS	125.0	181.2	237.5	293.8	350.0	406.2	462.5	518.8	575.0	631.2	687.5	1250.0
	SIP port	9	12	14	16	19	21	23	25	27	29	31	50
	PCA	9	9	9	9	9	9	9	9	9	9	9	9
300	SIP CCS	150.0	217.5	285.0	352.5	420.0	487.5	555.0	622.5	690.0	757.5	825.0	1500.0
	SIP port	10	13	16	19	21	24	26	28	31	33	36	58
	PCA	10	10	10	10	10	10	10	10	10	10	10	10
Note: Voice users in CCS = 5 CCS per user. Ratio of ringing time to holding time = 0.1.													

Table 76
SIP port and PCA requirements for Converged Desktop (with P.01 GoS) (Part 4 of 8)

# CD Users		% voice traffic carried by SIP trunk											
		0	5	10	15	20	25	30	35	40	45	50	100
400	SIP CCS	200.0	290.0	380.0	470.0	560.0	650.0	740.0	830.0	920.0	1010.0	1100.0	2000.0
	SIP port	13	16	20	23	26	29	33	36	39	42	45	74
	PCA	13	13	13	13	13	13	13	13	13	13	13	13
500	SIP CCS	250.0	362.5	475.0	587.5	700.0	812.5	925.0	1037.5	1150.0	1262.5	1375.0	2500.0
	SIP port	15	19	23	27	31	35	39	43	47	50	54	90
	PCA	15	15	15	15	15	15	15	15	15	15	15	15
750	SIP CCS	375.0	543.8	712.5	881.2	1050.0	1218.8	1387.5	1556.2	1725.0	1893.8	2062.5	3750.0
	SIP port	19	26	32	37	43	49	54	60	65	71	76	129
	PCA	19	19	19	19	19	19	19	19	19	19	19	19
1000	SIP CCS	500.0	725.0	950.0	1175.0	1400.0	1625.0	1850.0	2075.0	2300.0	2525.0	2750.0	5000.0
	SIP port	24	32	40	47	55	62	69	77	84	91	98	168
	PCA	24	24	24	24	24	24	24	24	24	24	24	24
1250	SIP CCS	625.0	906.2	1187.5	1468.8	1750.0	2031.2	2312.5	2593.8	2875.0	3156.2	3437.5	6250.0
	SIP port	29	38	48	57	66	75	84	93	102	111	120	205
	PCA	29	29	29	29	29	29	29	29	29	29	29	29
Note: Voice users in CCS = 5 CCS per user. Ratio of ringing time to holding time = 0.1.													

Table 76

SIP port and PCA requirements for Converged Desktop (with P.01 GoS) (Part 5 of 8)

# CD Users		% voice traffic carried by SIP trunk											
		0	5	10	15	20	25	30	35	40	45	50	100
1500	SIP CCS	750.0	1087.5	1425.0	1762.5	2100.0	2437.5	2775.0	3112.5	3450.0	3787.5	4125.0	7500.0
	SIP port	33	44	56	67	78	88	99	109	120	130	141	243
	PCA	33	33	33	33	33	33	33	33	33	33	33	33
1750	SIP CCS	875.0	1268.8	1662.5	2056.2	2450.0	2843.8	3237.5	3631.2	4025.0	4418.8	4812.5	8750.0
	SIP port	37	51	63	76	89	101	113	126	138	150	162	280
	PCA	37	37	37	37	37	37	37	37	37	37	37	37
2000	SIP CCS	1000.0	1450.0	1900.0	2350.0	2800.0	3250.0	3700.0	4150.0	4600.0	5050.0	5500.0	10 000.0
	SIP port	42	56	71	85	100	114	128	142	155	169	183	318
	PCA	42	42	42	42	42	42	42	42	42	42	42	42
2500	SIP CCS	1250.0	1812.5	2375.0	2937.5	3500.0	4062.5	4625.0	5187.5	5750.0	6312.5	6875.0	12 500.0
	SIP port	50	68	86	104	121	139	156	173	190	207	224	392
	PCA	50	50	50	50	50	50	50	50	50	50	50	50
3000	SIP CCS	1500.0	2175.0	2850.0	3525.0	4200.0	4875.0	5550.0	6225.0	6900.0	7575.0	8250.0	15 000.0
	SIP port	58	80	101	122	143	164	184	205	225	245	266	465
	PCA	58	58	58	58	58	58	58	58	58	58	58	58
Note: Voice users in CCS = 5 CCS per user. Ratio of ringing time to holding time = 0.1.													

Table 76
SIP port and PCA requirements for Converged Desktop (with P.01 GoS) (Part 6 of 8)

# CD Users		% voice traffic carried by SIP trunk											
		0	5	10	15	20	25	30	35	40	45	50	100
3500	SIP CCS	1750.0	2537.5	3325.0	4112.5	4900.0	5687.5	6475.0	7262.5	8050.0	8837.5	9625.0	17 500.0
	SIP port	66	91	116	140	165	188	212	236	260	283	307	538
	PCA	66	66	66	66	66	66	66	66	66	66	66	66
4000	SIP CCS	2000.0	2900.0	3800.0	4700.0	5600.0	6500.0	7400.0	8300.0	9200.0	10 100.0	11 000.0	20 000.0
	SIP port	74	103	131	158	186	213	240	267	294	321	347	611
	PCA	74	74	74	74	74	74	74	74	74	74	74	74
4500	SIP CCS	2250.0	3262.5	4275.0	5287.5	6300.0	7312.5	8325.0	9337.5	10 350	11 362.5	12 375.0	22 500.0
	SIP port	82	114	145	176	207	237	268	298	328	358	388	684
	PCA	82	82	82	82	82	82	82	82	82	82	82	82
5000	SIP CCS	2500	3625	4750	5875	7000	8125	9250	10 375	11 500	12 625	13 750	25 000
	SIP port	90	125	160	194	228	262	295	329	362	395	428	757
	PCA	90	90	90	90	90	90	90	90	90	90	90	90
6000	SIP CCS	3000	4350	5700	7050	8400	9750	11 100	12 450	13 800	15 150	16 500	30 000
	SIP port	106	148	189	230	270	310	350	390	430	470	509	908
	PCA	106	106	106	106	106	106	106	106	106	106	106	106
Note: Voice users in CCS = 5 CCS per user. Ratio of ringing time to holding time = 0.1.													

Table 76

SIP port and PCA requirements for Converged Desktop (with P.01 GoS) (Part 7 of 8)

# CD Users		% voice traffic carried by SIP trunk											
		0	5	10	15	20	25	30	35	40	45	50	100
7000	SIP CCS	3500	5075	6650	8225	9800	11 375	12 950	14 525	16 100	17 675	19 250	35 000
	SIP port	121	170	218	265	312	358	405	451	497	543	589	1057
	PCA	121	121	121	121	121	121	121	121	121	121	121	121
8000	SIP CCS	4000	5800	7600	9400	11 200	13 000	14 800	16 600	18 400	20 200	22 000	40 000
	SIP port	137	192	246	300	353	406	459	512	565	617	669	1205
	PCA	137	137	137	137	137	137	137	137	137	137	137	137
9000	SIP CCS	4500	6525	8550	10 575	12 600	14 625	16 650	18 675	20 700	22 725	24 750	45 000
	SIP port	152	214	274	335	395	454	513	573	632	690	749	1354
	PCA	152	152	152	152	152	152	152	152	152	152	152	152
10 000	SIP CCS	5000	7250	9500	11 750	14 000	16 250	18 500	20 750	23 000	25 250	27 500	50 000
	SIP port	168	236	303	369	436	502	568	633	698	767	834	1502
	PCA	168	168	168	168	168	168	168	168	168	168	168	168
11 000	SIP CCS	5500	7975	10 450	12 925	15 400	17 875	20 350	22 825	25 300	27 775	30 250	55 000
	SIP port	183	257	331	404	477	549	621	693	769	842	916	1651
	PCA	183	183	183	183	183	183	183	183	183	183	183	183
Note: Voice users in CCS = 5 CCS per user. Ratio of ringing time to holding time = 0.1.													

Table 76
SIP port and PCA requirements for Converged Desktop (with P.01 GoS) (Part 8 of 8)

# CD Users		% voice traffic carried by SIP trunk											
		0	5	10	15	20	25	30	35	40	45	50	100
12 000	SIP CCS	6000	8700	11 400	14 100	16 800	19 500	22 200	24 900	27 600	30 300	33 000	60 000
	SIP port	198	279	359	439	518	597	675	754	837	917	997	1799
	PCA	198	198	198	198	198	198	198	198	198	198	198	198
13 000	SIP CCS	6500	9425	12 350	15 275	18 200	21 125	24 050	26 975	29 900	32 825	35 750	65 000
	SIP port	213	301	387	473	559	644	729	819	905	992	1079	1948
	PCA	213	213	213	213	213	213	213	213	213	213	213	213
14 000	SIP CCS	7000	10 150	13 300	16 450	19 600	22 750	25 900	29 050	32 200	35 350	38 500	70 000
	SIP port	228	322	415	508	600	691	787	880	974	1067	1161	2096
	PCA	228	228	228	228	228	228	228	228	228	228	228	228
15 000	SIP CCS	7500	10 875	14 250	17 625	21 000	24 375	27 750	31 125	34 500	37 875	41 250	75 000
	SIP port	243	344	443	542	640	738	842	942	1042	1142	1243	2245
	PCA	243	243	243	243	243	243	243	243	243	243	243	243
Note: Voice users in CCS = 5 CCS per user. Ratio of ringing time to holding time = 0.1.													

Multi-purpose Serial Data Link

Prior to the introduction of the Multi-purpose Serial Data Link (MSDL) card, a system could support a total of 16 I/O ports. Now, a system can support up to 16 MSDL cards, each of which can be flexibly configured to support combinations of D-channel (DCH), Application Module Link (AML),

Command Status Link (CSL), and Serial Data Interface (SDI) on 4 ports, for a total of 64 I/O ports.

This section provides guidelines to help the user engineer the MSDL. This section contains information on the following topics:

- “MSDL engineering considerations” on [page 402](#)
- “MSDL architecture” on [page 404](#)
- “D-channel” on [page 413](#)
- “Application Module Link (AML)” on [page 427](#)
- “Serial Data Interface (SDI)” on [page 430](#)
- “MSDL engineering procedure” on [page 433](#)
- “Examples” on [page 439](#)

MSDL engineering considerations

These engineering guidelines assume normal traffic consisting of valid call processing and administrative messages. Engineering rules cannot prevent a piece of equipment on the network from malfunctioning and generating spurious messages, which overload the MSDL. At this point the recovery mechanism becomes essential. The mechanism should be graceful, not requiring manual intervention, and should provide as much diagnostic information as possible, to help isolate the root cause of the problem. Refinements and improvements to the recovery mechanisms have been introduced over various software releases.

The D-channel expansion feature increases the number of I/O addresses allowable for D-channel application to 16 per network group and 256 per system. The number of non-D-channel applications is 16 per system (or 64 if all MSDLs are used).

The limit of 256 D-channels is a theoretical limit. Nortel recommends the following limits in practice:

- For office/commercial applications: In a fully equipped 8-group system, the optimal configuration in terms of port capacity and trunking percentage (15%) requires about 112 D-channels, assuming one D-channel per T1. The same optimal configuration can be reached with fewer D-channels in E1 applications.
- For Call Center applications: To achieve a trunk to agent ratio of 1.5:2400, deploy about 144 D-channels in T1 applications. The optimal configuration can be reached at 136 D-channels in E1 applications.

The current MSDL card is used for D-channel expansion. When configuring multiple D-channels on a card, strictly follow the MSDL engineering guidelines. As long as feature penetration is accounted for in the system real time engineering model, D-channel expansion has no direct impact on Core Processor (CP) capacity.

Engineering the MSDL requires an understanding of the end-to-end performance characteristics of the system. Outgoing messages originate from the system CP, are passed to the MSDL, and travel across the appropriate link to the destination. In equilibrium, or over a relatively long period of time (i.e. on the order of several minutes), the system cannot generate messages faster than the MSDL processor can process them, than the link can transmit them, or than the destination can process them. Otherwise, messages will build up at the bottleneck and will eventually be lost. The entity with the lowest capacity will be the system bottleneck. For very short periods of time, however, one or more entities may be able to send messages at a higher rate than the system bottleneck, since buffers are available to queue the excess messages. These periods are referred to as bursts. The length of the burst and the size of the burst that can be supported depend on the sizes of the buffers.

Thus, to properly engineer a system, two areas must be considered:

- Equilibrium or steady-state performance, which requires an analysis of the CP processing capacity of the various components of the system, along with link bandwidth. The equilibrium analysis assumes 30% peakedness, which is consistent with models for the system CP.
- Burst performance, which requires an analysis of the buffer utilization of the system.

MSDL architecture

The MSDL processor is a 68020 processor. The MSDL and system exchange messages using an SRAM and interrupt scheme. To prevent any one application from tying up buffer resources, a flow control mechanism is defined at the system and MSDL/MISP interface level. The flow control mechanism is based on the common window mechanism in which the number of messages outstanding in the transmit or receive direction per socket, or port, cannot exceed $T(K)$ or $R(K)$, respectively. In the transmit direction, for example, a message is considered outstanding from the time the SL-1 software writes it into the transmit ring until all processing of the message by the MSDL is completed. Currently $T(K)$ and $R(K)$ are both set at 30. Each application must queue messages if the flow control threshold is exceeded. Typically, the system task also has a buffer for messages.

An overload control threshold is also implemented in the incoming direction to protect the system CP from excess messages. To account for the new, faster processors, the thresholds have been changed so that MSDL304 is printed if 100 messages in 2 seconds is exceeded, MSDL305 is printed if 200 messages in 2 seconds is exceeded, and MSDL306 is printed and the card is disabled if 300 messages in 2 seconds is exceeded. In both cases Background Audit will bring the MSDL back up if no problems are found. The Port Overload Counter is introduced. If the incoming messages on a single port exceed 200 messages in 2 seconds, the port will be locked out, and an MSDL_port_overload message will be printed. Manual intervention is required to clear the overloaded port. This feature prevents a single port from locking up the whole MSDL card.

Several software tasks exist on the MSDL. Layer 1 message processing operates at the highest priority. If the link is noisy, Layer 1 processing may starve the Layer 2 and Layer 3 processing tasks, resulting in buffer overflows. If such a problem is suspected, the Protocol Log (PLOG) should be examined. PLOG reporting is requested in LD 96, as described in the *Software Input/Output: Administration* (553-3001-311).

Microsoft Live Communications Server users

The Nortel Converged Office feature combines the business-grade telephony of the Communication Server 1000 with the real-time multimedia communication and the remote call control provided by Microsoft® Office

Live Communications Server 2005 and Microsoft® Office Communicator 2005 products. Nortel Converged Office is defined by the following two components:

- **Remote Call Control with Session Initiation Protocol (SIP) Computer Telephone Integration (CTI) TR/87** provides full Microsoft® Office integration of telephony to control business grade telephony phones from within Microsoft® Office applications, as well as support for a standards-based CTI interface defined by the TR/87 protocol.
- **Telephony Gateway and Services** provides a basic SIP Telephony Gateway for connectivity between Private and Public Telephony networks and Live Communications Server 2005 clients.

Trunking

To handle the traffic between the CS 1000 and the Live Communications Server 2005, you must configure sufficient SIP trunks and Personal Call Assistants (PCAs). The number of additional SIP trunks needed is determined by:

The number of Office Communicator Users using the SIP Gateway feature multiplied by:

The percentage expected to be on the phone at any given time

For example, 100 Office Communicator SIP Gateway users x 10% on the phone at any given time = 10 additional SIP trunks.

The percentage of users on a phone is decided by standard practice and the environment involved (Call Center, Normal Office, and so on).

PCA trunks are required for each Office Communicator user using the “Twinning” (for SIP Gateway) feature.

Calculating SIP access port and PCA requirements

Table 77 defines the inputs used to calculate SIP access ports and PCA requirements.

Table 77
Inputs

Input	Description
TN_MO_Users	Total Number of Office Communicator users that will be using the SIP Access Ports for voice services
PCA_MO_Users	Number of Office Communicator users that will utilize Personal Call Assistant (PCA). The value entered is in addition to the number you indicate on the Software screen.
P_PCA_SIP	Percentage of PCA calls that will be using the soft client to answer

Calculations:

The following formulas are used to calculate traffic requirements:

Traffic for PCAs = (PCA_MO_Users) x (CCS per user) x (1 - P_PCA_SIP) x 10%

Traffic for SIP ports = (TN_MO_Users - PCA_MO_Users) x (CCS per user) + (PCA_MO_Users x P_PCA_SIP) x (CCS per user)

Total SIP Traffic = (Traffic for PCAs) + (Traffic for SIP ports)

Number of MO SIP ports = Poisson (Total SIP Traffic) at P.01 Grade of Service

* - MO = Microsoft® Office Communicator

Table 78 shows traffic in CCS and number of ports calculated based on Poisson formula at P.01 Grade of Service.

Table 78
Traffic figures (Part 1 of 4)

Traffic (CCS)	Traffic (Erlang)	#Ports
5	0.14	2
10	0.28	3
15	0.42	3
20	0.56	4
25	0.69	4
30	0.83	4
35	0.97	5
40	1.11	5
45	1.25	5
50	1.39	6
55	1.53	6
60	1.67	6
65	1.81	6
70	1.94	7
75	2.08	7
80	2.22	7
85	2.36	7
90	2.5	8
95	2.64	8
100	2.78	8

Table 78
Traffic figures (Part 2 of 4)

Traffic (CCS)	Traffic (Erlang)	#Ports
125	3.47	9
150	4.17	10
175	4.86	12
200	5.56	13
225	6.25	14
250	6.94	15
275	7.64	16
300	8.33	17
325	9.03	18
350	9.72	19
375	10.42	19
400	11.11	20
425	11.81	21
450	12.5	22
475	13.19	23
500	13.89	24
550	15.28	26
600	16.67	28
650	18.06	29
700	19.44	31
750	20.83	33
800	22.22	35

Table 78
Traffic figures (Part 3 of 4)

Traffic (CCS)	Traffic (Erlang)	#Ports
850	23.61	36
900	25	38
950	26.39	40
1000	27.78	42
1500	41.67	58
2000	55.56	74
2500	69.44	90
3000	83.33	106
3500	97.22	121
4000	111.11	137
4500	125	152
5000	138.89	168
6000	166.67	198
7000	194.44	228
8000	222.22	258
9000	250	288
10000	277.78	318
20000	555.56	611
30000	833.33	908
40000	1111.11	1205
50000	1388.89	1502

Table 78
Traffic figures (Part 4 of 4)

Traffic (CCS)	Traffic (Erlang)	#Ports
60000	1666.67	1799
70000	1944.44	2096

SIP CTI/TR87

When planning for capacity with SIP CTI services, there is a fundamental restriction that must be observed:

- For a single call server that supports multiple nodes, each with SIP CTI services enabled, multiple SIP CTI(TR/87) sessions can be established for a given DN through the same node—but not through different nodes.


To illustrate this restriction, consider the following high level example:

Client A sends a TR/87 SIP INVITE to Node 1 to monitor DN 1000. The TR/87 association is established. Client B then sends a TR/87 SIP INVITE to Node 1 (the same node) to monitor DN 1000. Both sessions are established successfully. As a result of this sequence, two TR/87 sessions exist for DN 1000 through node 1.

However, if client B attempts to send a TR/87 SIP INVITE to Node 2 (which has an AML link to the same call server as Node 1), the attempt to establish the TR/87 session will fail because the DN is already in use by client A's session through Node 1.

To solve this issue when planning for capacity, SIP routing must ensure that all TR/87 sessions for a given DN always terminate on the same node when there are multiple nodes for a single call server (see Figure 58 on [page 411](#)).

Figure 58
Capacity example

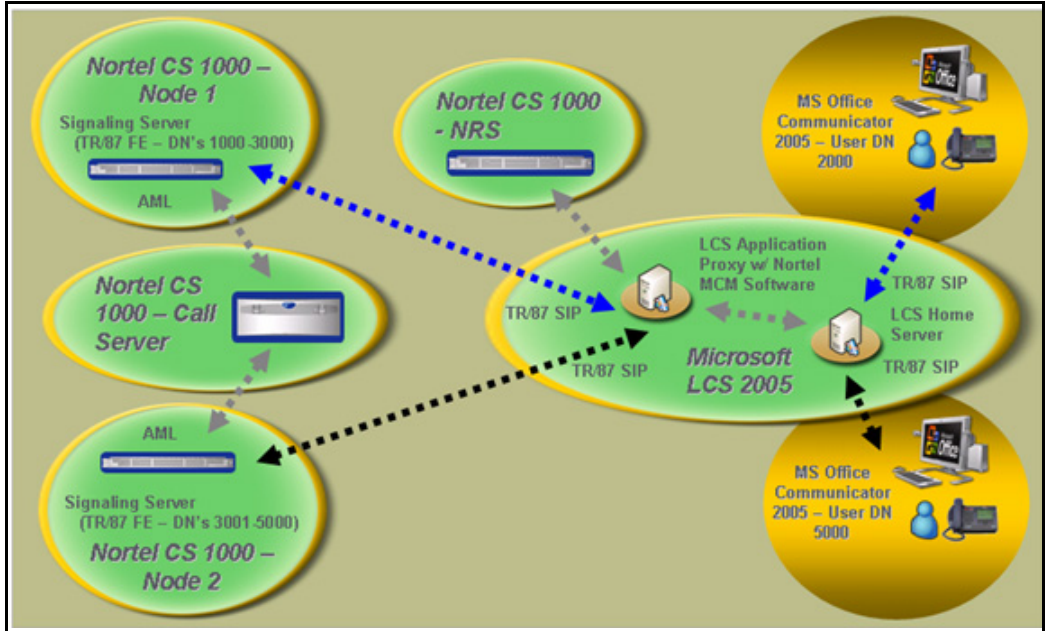

This situation may arise in cases where there is an expectation that a single user has multiple clients logged in simultaneously (for example, a client at home, a client in the office, and a mobile client all with TR/87 capability).

Impact on Signaling Server

The maximum number of SIP CTI/TR87 users on a single Signaling Server is 5000. While the Standard Signaling Server memory is 512MB, an upgrade to 1GB is required in the following scenarios:

- 1 SIP CTI/TR87 is co-resident with PD/RL/CL application
- 2 SIP CTI/TR87 is co-resident with H.323/SIP GW serving more than 200 ports, or co-resident with Terminal Proxy Server serving more than 1000 IP users.

Impact on Call Server

For different CPUs, the number of supported users is:

- SSC: 750 users
- CP3: 1500 users
- CP4: 2500 users
- CPP PII: 7000 users
- CPP PIV: 15000 users

MCM capacity

The Standard Performance Evaluation Corporation (SPEC) is a non-profit corporation formed to establish, maintain, and endorse a standardized set of relevant benchmarks that can be applied to the newest generation of high-performance computers.

Multimedia Convergence Manager (MCM) is a software component designed specifically for the Nortel Converged Office feature to ensure the proper interoperability between Microsoft® and Nortel systems with respect to protocols, users, and phone numbers managed within the Microsoft® Active Directory®.

MCM capacity numbers depend on the hardware platform this application runs on, and the unit used to identify the platform is SPECint.

A single MCM can support 15000 calls per hour (this is a projected value of 3000 users averaging 5 calls per hour - customers should check this with Windows Performance Monitor), per box, with a SPECint of 13.8.

Since MCM co-resides with Microsoft® Live Communications Server on different platforms, the formula for different hardware platforms is:

Number of calls per hour supported = (15000 x SPECint for a box) / 13.8

The SPECint for each box can be found at www.spec.org.

D-channel

For interfaces including NI-2, Q-SIG, and Euro-ISDN, Layer 3 processing is also performed on the MSDL, so the MSDL performs some functions previously performed by the system core processor, thus reducing the capacity on the MSDL. These interfaces will be referred to as R20+ interfaces. The steady state message rate allowable for D-channel messages is 29 msg/sec for R20+ interfaces.

The SL-1 software output queue for DCH messages is the Output Buffer (OTBF) which is user configurable for between 1 and 127 buffers in LD 17. This is a single system resource which is shared by all D-channels.

It is possible to define overload thresholds for R20+ interfaces on a per-D-channel basis. The ISDN_MCNT (ISDN message count), defined in LD 17, specifies the number of ISDN Layer 3 call control messages allowed per 5-second interval. Overload control thresholds can be set on a per D-channel basis, ranging from 60 to 350 messages in a 5 second window, with a default of 300 messages. If the overload control threshold is exceeded, DCH421 is output. When the message rate exceeds the threshold for two consecutive 5 second periods, overload control is invoked and new incoming call requests are rejected by the Layer 3 protocol control in the third 5 second time interval. Layer 3 will resume accepting new calls at the end of the third time interval. This flexibility allows the user to regulate the MSDL processing required by a specific R20+ DCH port. Note that the default value implies no overload control since 300 messages/5 seconds exceeds the rated capacity of 29 messages/second.

Primary Rate Interface network

Equilibrium analysis

A D-channel can be configured to support up to 383 B-channels (or 382 with a backup D-channel) on a T1 or 480 B-channels on an E1. The bandwidth available for messages is 64 kbps. Assumptions for a typical application are: 8 messages/call, 29 bytes/message, including 18 bytes of Layer 3 data and 11 bytes of Layer 2 overhead, 28 centi-call seconds (CCS)/trunk, and 180 second Average Hold Time (AHT)/call. The system capacity is derived from its call carrying capacity for 100% incoming Primary Rate Interface (PRI) calls.

Under the traffic assumptions described above, the MSDL is able to support basic call processing messages for 4 D-channels under normal operation (see Table 79 on [page 414](#)).

Table 79
Steady-state requirements and capacities per D-channel (outgoing and incoming)

System	Requirement msg/sec	System CP capacity msg/sec	MSDL capacity msg/sec	Link capacity msg/sec	Comment
68060 CP	13(T1)/16(E1)	161	87	212 input 212 output	Limited by traffic requirements
68060E CP	13(T1)/16(E1)	242	87	212 input 212 output	Limited by traffic requirements

Peak analysis

When there is a link re-start, STATUS messages are sent to all trunks with established calls. Since the SL-1 software task does not implement flow control on this mechanism, a burst of up to several hundred messages can be sent to the MSDL, exceeding MSDL flow control thresholds. When this happens, messages back up on the OTBF buffer, possibly resulting in buffer overflow, as indicated by DCH1030 messages. OTBF overflow is also possible after an initialization since a burst of messages is sent to each D-channel in the system, and the OTBF is a shared system resource.

The system capacity is significantly higher in this scenario than in the previous one because it is sending out D-channel messages which do not involve call processing. MSDL and Link capacities are also higher because, for equilibrium analysis, some capacity is reserved for peaking.

Table 80 on [page 415](#) illustrates the worst case scenario for a single D-channel. If the system sends messages at its peak rate, OTBF buffer overflow is possible. Also, once the messages are sent, a burst of responses

can be expected in the incoming direction, resulting in additional congestion at the MSDL.

Table 80
Peak requirements per D-channel (outgoing)

System	Burst Size	System capacity (msg/sec)	MSDL capacity (msg/sec)	Link capacity (msg/sec)	Comment
68060 CP	382(T1)/480(E1)	410	113	276 output	MSDL is bottleneck
68060E CP	382(T1)/480(E1)	615	113	276 output	MSDL is bottleneck

This situation also occurs when a backup D-channel becomes active, since STATUS messages are exchanged to resynchronize the link.

To reduce the possibility of this problem occurring, limit the number of B-channels supported by a D-channel, separate D-channels onto several MSDL cards so that message bursts are not being sent to four ports on the same MSDL after initialization, and increase the size of OTBF to the maximum value of 127.

The Status Enquiry Message Throttle is implemented. This feature applies only to system-to-system interface networks and allows the user to configure the number of Status Enquiry messages sent within 128 msec on a per D-channel basis. The parameter, SEMT, is configured in LD 17, and can range between 1 and 5. The default value is 1. Since this feature provides a flow control mechanism for Status Enquiry messages, the likelihood of buffer overload is reduced.

B-channel overload

In an ACD environment in which the number of ACD agents plus the maximum ACD queue length is considerably less than the number of B-channels available for incoming calls, a burst of incoming messages may impact the performance of the MSDL as well as the system via the following mechanism: Calls from the CO terminate on a specified ACD queue. When the destination is busy, the destination telephone is busy, or the ACD queue has reached its maximum limit of calls, the system immediately releases the

call. The CO immediately presents another call to the same destination, which is released immediately by the PBX.

The B-channel Overload Control feature is introduced to address this problem by delaying the release of an ISDN PRI call by a user-configurable time when the call encounters a busy condition. The delay in releasing the seized B-channel prevents a new call from being presented on the same B-channel, decreasing the incoming call rate. The timer BCOT is configured in LD 16, and falls in the range 0 to 4000 msec.

ISDN Signaling Link (ISL) network

In an ISL application, a modem is used to transmit ISDN signaling messages. Baud rates are user configurable at the standard RS232/RS422 rates: 300, 1200, 2400, 4800, 9600, and 19 200 bps (see Table 81). In this case, the modem baud rate constraint can be the limiting constraint. The messages/second that can be supported by the baud rates are given below, where the values allow for 30% peakedness.

The B-channels that can be supported assume the messaging required for a typical application as described in “Equilibrium analysis” on [page 413](#).

Table 81
ISL link capacities

Modem baud rate	Link capacity (msgs/sec)	B-channels that can be supported
300	1 input 1 output	46
1200	4 input 4 output	180
2400	7 input 7 output	316
4800	15 input 15 output	382(T1)/480(E1)
9600	29 input 29 output	382(T1)/480(E1)
19 200	58 input 58 output	382(T1)/480(E1)

For the baud rates listed in Table 81, the link will be the limiting constraint. The potential peak traffic problems described in “Peak analysis” on [page 414](#) apply here as well, to an even greater extent since the rate mismatch between the system and the system bottleneck, now the link instead of the MSDL, is greater. To minimize the risk, set the baud rate as high as possible.

Virtual Network Services (VNS) network

The concepts mentioned in ISL networks also applies to VNS networks. Up to 4000 VNS DNs (VDN) are supported.

D-channel bit rate

These guidelines provide the basis for engineering the NACD/VNS D-channel speed.

The bit rate load on the D-channel equals:

$$\begin{aligned} & \text{the amount of messages} \times \text{the octets per message} \\ & \times \text{the number of messages per second} \end{aligned}$$

For example, if Facility Message burst is opened with 25 calls in the queue then the Call Request queue size is greater than or equal to 25. The outgoing facility call request is 25 messages in one second. The incoming facility call request acknowledges 25 messages in the same second. The outgoing and incoming call requests total 50 messages.

In this example, the bit rate load on the D-channel equals:

$$\begin{aligned} & 50 \text{ messages} \times 70 \text{ octets} \times 8 \text{ bits/octet} \\ & = 28\,800 \text{ bits/second} \end{aligned}$$

Total bandwidth of a 9600 baud modem is approximately:

$$\begin{aligned} & 9600 \text{ baud} \times 2 \\ & = 19\,200 \text{ bits/second} \end{aligned}$$

With a total bandwidth of 19 200 bits/second and a bit rate load of 28 800 bits/second, the D-channel cannot handle the messaging. D-channel messaging will backlog.

If the customer is having problems networking calls during high traffic then the D-channel may be the cause (especially if the bandwidth is less than 2800 baud). If the D-channel messaging is delayed to the point where VNS call processing gets delayed, the calls will fail to network and many PRI/VNS/DCH messages will be output at both the source and target nodes.

NACD network

A Network ACD (NACD) network is difficult to engineer since performance depends on specific network configuration details including connectivity, routing tables, the number of nodes, the number of queues at each node, and calling patterns.

Diverting calls in NACD is controlled by Routing Tables with timers. Calls diverted by NACD can be answered by the Source ACD DN or any one of up to 20 Target ACD DNs. Each Target can have an individual timer defined, from 0 to 1800 seconds. By using ISDN D-channel messaging to queue Call Requests at remote Target ACD DNs, voice calls are not physically diverted until an idle agent is reserved for that call at the remote Target node.

It is recommended that the Routing Table be designed so that Call Requests cascade to the network with the timers staggered. The node that is most likely to have available agents should have the smallest timer value. Otherwise Call Requests will flood the network, resulting in inefficient use of network and real time resources.

An Active Target is available to accept NACD calls, while a Closed Target is closed to incoming calls. When calls in the Call Request queue exceed the Call Request Queue Size (CRQS) threshold, the status changes to Closed. A Status Exchange message is sent from the Target node to the Source ACD DNs indicating the new status. The Target ACD DN remains Closed to further network call requests until the number of calls in the queue is reduced by the Flow Control Threshold (FCTH).

Equilibrium analysis

At the source node, for each call queued to the network but not answered, 4 messages are exchanged. For each call queued to the network and answered, 11 messages are exchanged. Likewise, at the target node, a network call that is queued but not answered requires 4 messages while a call that is queued and answered requires 11 messages. Messages average 31 bytes.

From a single D-channel perspective, the most difficult network topology is a star network in which each agent node is connected to a tandem node (see Table 82). All messages to the other nodes are sent across the D-channel connected to the tandem node. As an example, consider a site with 2000 calls arriving locally during the busy hour. The timers in the Routing Table are staggered so that 1000 are answered locally without being queued to the network, 500 are answered locally after being queued to an average of two network target queues, and 500 are answered in the network after being

queued to an average of four network target queues. Meanwhile, 200 Logical Call Requests arrive from the network, of which 100 calls are answered.

Table 82
Steady-state requirements and capacities per D-channel with staggered timers
(outgoing and incoming)

System	Requirement (msg/sec)	Meridian 1 CP capacity (msg/sec)	MSDL capacity (msg/sec)	Link capacity (msg/sec)	Comment
68060 CP	5	161	87	212 input 212 output	Limited by traffic requirements
68060E CP	5	242	87	212 input 212 output	Limited by traffic requirements

For this same network, assume now that the timers in the Routing Table are not staggered; instead, Logical Call Requests are broadcast to the four target nodes in the network as soon as calls arrive at the local node. Also assume that a total of 4000 calls arrive elsewhere in the network, and are queued at local ACD DN's. Even if the calls are answered exactly where they were before, the number of messages exchanged will increase significantly, to the values provided in Table 83, using the following calculations:

- 1500 calls queued on 4 ACD DN's and not answered \times 4 msgs/call/DN
= 24 000 msgs
- 500 calls answered \times 11 msgs/call
= 5500 msgs
- 500 calls queued on 3 ACD DN's and not answered \times 4 msgs/call/DN
= 6000 msgs
- 3900 network calls queued on local DN and not answered \times 4 msgs/call
= 15 600 msgs
- 100 network calls answered \times 11 msgs/call
= 1100 msgs

- Total 52 200 msgs/hr
- $(52\,200 \text{ msgs/hr}) \div (3600 \text{ secs/hr}) = 14.5 \text{ msgs/sec}$

Table 83
Steady-state requirements and capacities per D-channel with immediate broadcast of Logical Call Requests (outgoing and incoming)

System	Requirement (msg/sec)	Meridian 1 CP capacity (msg/sec)	MSDL capacity (msg/sec)	Link capacity (msg/sec)	Comment
68060 CP	14.5	161	87	212 input 212 output	Limited by traffic requirements
68060E CP	14.5	242	87	212 input 212 output	Limited by traffic requirements

Peak analysis

When the CRQS threshold is reached, the target queue will broadcast messages to the source ACD DN's informing them that it will no longer accept calls. The size of this outgoing burst of messages depends on the number of source ACD DN's in the network.

Once the FCTH threshold is reached, another Status Exchange message is sent. At that point, Logical Call Request messages are sent by the Source ACD DN's. While the target queue has been closed, many calls may have queued at source ACD DN's, resulting in a burst of Logical Call Request messages once the DN becomes available.

Unlike the PRI network case, there is no specific worst case scenario for peakedness. The examples in Table 84 are based on a five-node network, where each node has three source ACD DN's.

Table 84
Peak requirements for NACD messages (outgoing and incoming)

System	Burst size		Meridian 1 capacity (msg/sec)	MSDL capacity (msg/sec)	Link capacity (msg/sec)		Comment
	Outgoing	Incoming			Output	Input	
68060 CP	12	40	410	113	258	258	MSDL is bottleneck
68060E CP	12	40	615	113	258	258	MSDL is bottleneck

If CRQS values are set high, many messages will be exchanged, with the network emulating a single virtual queue. If the CRQS values are lowered, fewer Call Requests will be sent across the network, however, average source delays may be increased. If FCTH levels are set too low, target nodes can ping pong between Active and Closed states, resulting in network congestion and excessive real time utilization. However, if FCTH levels are set too high, a target node may be inundated with Logical Call Request messages once it becomes available. CRQS is configurable for the range [0, 255] while FCTH is configurable for the range [10, 100]. Since the impact of these parameters is so configuration dependent, it is beyond the scope of this document to make recommendations on how to configure them. They should be determined as part of the custom network design process. Contact your local Nortel representative for network engineering services.

Impact of proper engineering of B-channels

In the NACD environment another problem arises when insufficient B-channels are configured across the network. When an agent becomes available, an Agent Free Notification message is sent to the source node. An ISDN Call Setup message is sent from the source node to the target node. Since no B-channel is available, the agent reservation timer expires, and an ISDN Cancellation Message is sent from the target node to the source node and an ISDN Cancellation Acknowledge message is sent from the source node to the target node. At this point, the agent is still free, so the process repeats until a trunk becomes available or the target closes. This scenario results in a significant amount of message passing.

Trunk requirements under Longest Idle Agent routing

Trunk requirements are usually calculated using the NACD engineering guidelines, whereby call loading for each queue at each site is estimated and used to calculate the required number of trunks between each pair of sites. However, when Longest Idle Agent (LIA) is used as the routing criterion, load estimation becomes difficult. Assuming that any agent can take any call and that agents have equal holding time characteristics, the following procedure provides a method to estimate the number of trunks required between pairs of sites.

Assumptions

- 1** All agents reside in one common pool and process calls at an equal rate (in other words, have a common average call service time).
- 2** An agent having the longest idle time occurs with equal probability among all of the agents during normal operation.
- 3** Agents appear as one large pool to incoming calls.

With these assumptions, under LIA, calls will be routed proportional to the number of active agents at each site.

Calculation steps

- 1 Note the number of active agents at each site (n_i) and the total number of active agents over all sites (N).
- 2 Calculate the proportion of active agents at each site:

$$p_i = n_i / N$$
- 3 For each incoming local call arrival stream to site i (A_i , expressed in CPH), calculate the calls routed from site i to site j :

$$C_{ij} = A_i \times p_j$$
- 4 Calculate the total calls routed (T , expressed in CPH) between each pair of sites:

$$T_{ij} = T_{ji} = C_{ij} + C_{ji}$$
- 5 Apply Erlang B to each T_{ij} , $i < j$, to get the number of required trunks between sites i and j (L_{ij}).

Erlang B requires the following parameters:

- a Grade-of-Service (GoS) — probability of a blocked call (in other words, no trunk available) — taken to be 0.01
- b Mean Call Service Time (usually in seconds)
- c number of calls per hour (CPH)

Refer to “Trunk traffic – Erlang B with P.01 Grade-of-Service” on [page 552](#) for values for Erlang B.

Parameter settings

The following are parameters that can be configured in LD 17 for Meridian 1 D-channels. They are listed with their input range and default value in brackets.

- 1 OTBF 1 - (32) - 127: Size of output buffer for DCH

This parameter configures how many output buffers are allocated for DCH messages outgoing from the Meridian 1 CP to the MSDL card. The more that are created, the deeper the buffering. Normally a message created in a buffer is sent to the MMIH (Meridian MSDL Interface Handler) and copied into the ring. If the ring is flow controlled, the

message occupies a buffer until it can be sent. For systems with extensive D-channel messaging, such as call centers using NACD, the parameter should be configured at 127. For other systems with moderate levels of D-channel messaging, OTBF should be configured at the smaller of the following two quantities: Total B-channels - ($30 \times$ MSDL cards with D-channels) or 127.

For example, if a system in a standard office environment is configured with 7 T1 spans, 2 D-channels which are located on two different MSDLs, and 2 back-up D-channels, the total number of B-channels is $(7 \times 24) - 4 = 164$. OTBF should be configured to be the smaller of $164 - (30 \times 2) = 104$ and 127 which is 104.

- 2** T200 2 - (3) - 40: Maximum time for acknowledgment of frame (units of 0.5 secs)

This timer defines how long the MSDL's Layer 2 LAPD will wait before it retransmits a frame. If it doesn't receive an acknowledgment from the far end for a given frame before this timer expires, it will retransmit a frame. Setting this value too low can cause unnecessary retransmissions. The default of 1.5 seconds is long enough for most land connections. Special connections, over radio, for instance, may require higher values.

- 3** T203 2 - (10) - 40: Link Idle Timer (units of seconds)

This timer defines how long the Layer 2 LAPD will wait without receiving any frames from the far end. If no frames are received for a period of T203 seconds, the Layer 2 will send a frame to the other side to check that the far end is still alive. The expiration of this timer causes the periodic "RR" or Receiver Ready to be sent across an idle link. Setting this value too low causes unnecessary traffic on an idle link. However, setting the value too high will delay the system from detecting that the far end has dropped the link and initiating the recovery process. The value should be higher than T200. It should also be coordinated with the far end so that one end does not use a small value while the other end uses a large value.

- 4** N200 1 - (3) - 8: Maximum Number of Retransmissions

This value defines how many times the Layer 2 will resend a frame if it doesn't receive an acknowledgment from the far end. Every time a frame is sent by Layer 2, it expects to receive an acknowledgment. If it does not receive the acknowledgment, it will retransmit the frame N200 times

before attempting link recovery action. The default (3) is a standard number of retransmissions and is enough for a good link to accommodate occasional noise on the link. If the link is bad, increasing N200 may keep the D-channel up longer, but in general this is not recommended.

5 N201 4 - (260): Maximum Number of Octets (bytes) in the Information Field

This value defines the maximum I-frame (Info frame) size. There is no reason to reduce the number from the default value unless the Meridian 1 is connected to a system that does not support the 260-byte I-frame.

6 K 1 - (7): Maximum number of outstanding frames

This value defines the window size used by the Layer 2 state machine. The default value of 7 means that the Layer 2 state machine will send up to 7 frames out to the link before it stops and requires an acknowledgment for at least one of the frames. A larger window allows for more efficient transmission. Ideally, the Layer 2 will receive an acknowledgment for a message before reaching the K value so that it can send a constant stream of messages. The disadvantage of a large K value is that more frames must be retransmitted if an acknowledgment is not received. The default value of 7 should be sufficient for all applications. The K value must be the same for both sides of the link.

7 ISDN_MCNT (ISDN Message Count) 60 - (300) - 350: Layer 3 call control messages per 5 second interval

It is possible to define overload thresholds for interfaces on a per-D-channel basis. This flexibility allows the user to regulate the MSDL processing required by a specific R20+ DCH port. The default value of 300 messages/5 seconds is equivalent to allowing a single port to utilize the full real time capacity of an MSDL. To limit the real time utilization of a single R20+ DCH port to $(1 \div n)$ of the real time capacity of the MSDL, for $n > 1$, set ISDN_MCNT to $(300 \div n) \times 1.2$ where the 1.2 factor accounts for the fact that peak periods on different ports are unlikely to occur simultaneously. For example, to limit a single port to 1/3 of the processing capacity of the MSDL, ISDN_MCNT is set to $(300 \div 3) \times 1.2 = 120$.

If the ISDN_MCNT threshold is exceeded for one 5 second period, error message DCH421 is printed. If the threshold is exceeded for two consecutive periods, incoming call requests arriving in the third 5 second interval are rejected by the MSDL Layer 3 software. At the end of the third 5 second interval, Layer 3 will resume accepting incoming call requests.

Application Module Link (AML)

The Application Module Link (AML) provides the connection between the system and the CCR, Meridian Link, or Meridian 911 module. The current maximum speed for the link is 19200 baud. CCR is the application addressed here because it is the one that results in the highest level of messaging. The amount of messaging involved depends on the complexity of call handling. Simple call handling results in approximately 10 messages per call, with an average of 45 bytes/message. Statistics messages are sent from the system to the CCR module every 4 seconds for ACD DN's referenced in the CCR variable table or scripts. Thus messaging levels depend not only on the number of calls handled but on the number of ACD DN's with statistics configured. *Current recommendations are that a system be limited to 80 ACD DN's with statistics.*

On the system, messages queue in the CSQI and CSQO buffers, command status queue input and output buffers, which are configurable in LD 17.

Equilibrium analysis

For equilibrium analysis, we focus on calls, and assume ten ACD DN's sending statistics messages. The system capacity assumes an inbound call center with simple CCR treatment on 100% of the calls, and Meridian MAX.

For Large Systems, the CCR module capacity is the system bottleneck (see Table 85 on [page 428](#)). Since there is no flow control or overload control available to protect the CCR module, it is essential that the system be engineered to ensure that the CCR module is not overloaded. Otherwise, link failures or other CCR performance problems may result. To engineer the

CCR module, refer to the *Meridian Link/Customer Controlled Routing Engineering Guide* (553-3211-520).

Table 85
Steady-state requirements and capacities per AML (outgoing and incoming)

System	System CP capacity (msg/sec)	MSDL capacity (msg/sec)	Link capacity (msg/sec)	CCR capacity msg/sec (167 module)	Comment
68060 CP	74	107	41 input 41 output	46	CCR bottleneck
68060E CP	111	107	41 input 41 output	46	CCR bottleneck

Peak analysis

Since message bursts are most likely to cause buffer overflow, we consider the system with 80 ACD DN's sending statistics messages every 4 seconds. Recall that this is the maximum recommended number for ACD DN's sending statistics. The system capacity is based on the real time required to process CCR statistics messages (see Table 86).

Table 86
Peak capacities for CCR statistics messages per AML (outgoing)

System	Burst size	System capacity (msg/sec)	MSDL capacity (msg/sec)	Link capacity (msg/sec)	CCR capacity msg/sec (167 module)	Comment
68060 CP	80	920	139	53	60	AML bottleneck
68060E CP	80	1380	139	53	60	AML bottleneck

In this scenario, the AML link is the bottleneck. Messages will begin to queue in the MSDL output buffers and possibly the CSQO buffers, if there are many ACD DN's sending statistics messages.

The AML link will disable if 10 consecutive messages do not receive a response within a 4-second window. The CSA105 message is normally output when this occurs. If a message arrives immediately after the statistics messages for the 80 ACD DN's are generated, it may be queued behind these 80 statistics messages. For 80 messages, processing time at the MSDL, queueing time for the AML, and processing time at the CCR module add up to approximately 3 seconds, so it is easy to understand how the 4 second threshold might be exceeded if the MSDL is also processing messages from other applications.

AML can be configured on the system ELAN network interface. In this configuration, the AML is no longer the bottleneck.

In Meridian Link applications, similar types of problems may occur when the host is too slow and becomes the system bottleneck.

Parameters

On the system side, AML messages are queued in the CSQI/CSQO buffers, which are shared with the CSL. The maximum configurable size of each is 25% of the number of call registers in the system or 4095. It is recommended that 68060 CP systems configure the CSQI and CSQO buffers to be 255. CSQO and CSQI sizes are configured in LD 17.

The flow control parameters MCNT and INTL for each AML are also configured in LD 17. This flow control mechanism limits the number of messages sent from the CCR to the system to MCNT [5.9999] in the time interval INTL [1.12] where INTL is measured in units of 5 seconds. When this threshold is violated for one interval, a warning message is sent to CCR requesting that it slow down. If the threshold is violated for two consecutive periods, CCR rejects all new calls back to the system where they will receive default treatment. No new calls will be accepted until the level of traffic is reduced to an acceptable level. If the threshold is exceeded for three consecutive periods, all inbound traffic will be lost. If inbound traffic continues, the link will fail.

Recommended settings for MCNT and INTL are listed in Table 87.

Table 87
Recommended AML flow control values

MCNT	INTL
230	1

This mechanism was originally designed to protect the system from overload. With the faster processors, this flow control threshold is now being used to control traffic levels at the CCR module.

Serial Data Interface (SDI)

An asynchronous serial data interface was provided on the MSDL card. Capabilities include interface to TTYs, printers, modems, and CRTs, High Speed Link (HSL) for ACD, Auxiliary Processor Link (APL) for ACD, ACD-C package displays and reports, and CDR TTYs. An SDI port is only configurable on Port 0 of an MSDL. Therefore, only one SDI port can be configured on an MSDL.

Normally, in the output direction, the SDI Application will pass any character received from the system to the Layer 1 Driver to be sent out over the interface. If XON/XOFF Handling is enabled for printing, the SDI Application will buffer up to 500 characters once an XOFF is received. The system is not aware that an XOFF has been received. After the buffer is full, if further output is received, the oldest data will be discarded. Output resumes when an XON is received or 1 minute has passed since the output was halted by an XOFF. At this point, the contents in the buffer will be emptied first, followed by output from the system. If any data has been discarded, an error message will be sent.

In the input direction, every character received by the Layer 1 Driver will be passed to the SDI Application. The SDI Application will echo any input character unless it is told not to by the system. In Line Editing Mode, the SDI Application will buffer a line of up to 80 characters which can be edited before being sent to the system.

Under certain conditions, control characters can cause messages to ping pong between a modem or printer and the system, resulting in MSDL305 or MSDL306 conditions. To avoid these situations, configure modems in dumb mode and disable printer flow control.

The system input buffer is the TTY input buffer which can store 512 characters. The system output buffer is the TTY output buffer which can store 2048 characters.

Call Detail Records (CDR)

CDR records are available in two formats: *FCDR=old* and *FCDR=new*. A typical record for the old format is 100 bytes long while a typical record for the new format is 213 bytes long (see Table 88). Due to the nature of the SDI interface, characters are output one at a time, resulting in 100 messages and 213 messages generated for *FCDR=old* and *FCDR=new*, respectively. Each message requires 10 bits. Based on real time measurements, the MSDL rated capacity for processing CDR messages is 16 631 messages/second.

Table 88
Link capacities for CDR application (outgoing)

Modem baud rate	Link capacity (msg/sec) (peak)	Calls/Hour for <i>FCDR=old</i>	Call/Hour for <i>FCDR=new</i>
300	30	831	390
1200	120	3323	1560
2400	240	6646	3120
4800	480	13 292	6241
9600	960	26 585	12 481
19 200	1920	53 169	24 962
38 400	3840	106 338	49 924

Note: Throughput capacity for the Quad SDI Paddle Board is the same as the MSDL when operating at the same baud rate. QSDI has a maximum operating baud rate of 9600 bps. Therefore, the maximum throughput for QSDI is 12481 (*FCDR=new*).

Equilibrium analysis

The system capacity for messages per second is conservatively based on the assumption of 100% outgoing calls with $FCDR=new$. Typically, CDR records are not generated for 100% of the calls (see Table 89).

Table 89
Steady state requirements for CDR application (outgoing)

System	System CP capacity (msg/sec)	MSDL capacity (msg/sec)	Link capacity (msg/sec)	Comment
68060 CP	2044	16 631	See Table 88 on page 431	19 200 baud recommended
68060E CP	3066	16 631	See Table 88 on page 431	38 400 baud recommended

Peak analysis

Since each character is sent as a separate message, every time a CDR record is sent, a traffic peak is generated. In Table 90, consider $FCDR=new$.

Table 90
Peak requirements for $FCDR=new$ (outgoing)

System	Burst size	System capacity (msg/sec)	MSDL capacity (msg/sec)	Link capacity (msg/sec)	Comment
68060 CP	213	3090	21 620	See Table 88 on page 431	38 400 baud recommended
68060E CP	213	4635	21 620	See Table 88 on page 431	38 400 baud recommended

MSDL real time capacity is not the bottleneck in this case. However, to prevent system buffers from building up, the recommended baud rate should be set. If a lower baud rate is chosen, assume that the CDR application will frequently be in a state of flow control. Note that this is true even if the steady state message rate is low, due to the nature of the SDI interface.

The burst sizes will be even greater if CDR is configured with queue records for incoming ACD calls.

MAT customers must upgrade to OTM to configure CS 1000 Release 4.5.

MSDL engineering procedure

It is important to engineer MSDLS in the context of engineering the entire system, as discussed in previous sections. Refer to *Traffic Measurement: Formats and Output* (553-3001-450) for additional information on real time engineering of the system. In all cases with a user configurable link rate, it is essential that the link be configured so that the rate is high enough to support steady state requirements and some peakedness. Otherwise these applications messages will occupy system buffers, increasing the chance of buffer overflow.

Table 91 on [page 434](#) is the high-level worksheet for analysis of MSDL capacity. The appropriate values can be derived from Table 92 on [page 435](#) through Table 97 on [page 439](#).

Table 91
MSDL engineering worksheet

Port	Application	Real Time required	Peak Buffer usage outgoing	Peak Buffer usage incoming
0				
1				
2				
3				
Total				

Assuming 30% peakedness for the applications, the total real time required should be less than 2 770 000 msec. The projected real time utilization of the MSDL is given by:

$$\text{MSDL_RTU} = \text{Total Real Time Required} \div 2\,770\,000$$

It is recommended that peak buffer usage be less than 60 in each direction. As the peak buffer usage increases over 60, the likelihood of an intermittent buffer full problem increases.

The following sections provide procedures for calculating the real time required on the MSDL for various applications. In any of these cases, if the calls/hour value is known, insert that value into Column A. Otherwise, follow the guidelines provided. Values in parentheses () are default values. For example, the default number of calls/hr/trunk is 15.6. The value in Column E should be inserted in the Real Time Required column of Table 91 on [page 434](#) and the appropriate Peak Buffer Usage values should be inserted in the corresponding Peak Buffer Usage columns of Table 91.

DCH applications

If several applications share a D-channel, the final real time requirements for the applications should be added and then entered in the appropriate entry in Table 92.

Table 92
MSDL real time requirements for D-channel applications

DCH	Calls/hr A	Msgs/call B	Msgs/hr C = A × B	Msec/msg D	Msec E = C × D
ISDN Network	trunks/DCH × calls/hr/trunk (15.6) = _____	8	_____	pre-R20: 8.8 R20+: 26.5	_____
NACD	NACD agents × calls/hr/agent (18.3) = _____	30	_____	pre-R20: 8.8	_____
NMS	NMS ports × calls/hr/port (65) = _____	10	_____	pre_R20: 8.8	_____
Note: For clarification of the terms “pre-R20” and “R20+,” refer to “D-channel” on page 413					

The calculations described for NACD provide a simplified approximation of a “typical” NACD network. If call flows can be predicted or estimated, they can be used to develop a more accurate model using the number of messages described in. When this is done, the msgs/hr is computed directly, so columns A and B are not used. See “Examples” on [page 439](#) for a detailed example of how this can be done.

If a live system is being modeled, add the “number of all incoming messages received on the D-channel” and the “number of all outgoing messages sent on the D-channel” field from a busy hour TFS009 report to derive the entry for

Column C. See *Traffic Measurement: Formats and Output* (553-3001-450) for details.

Table 93
MSDL peak buffer requirements for D-channel applications

DCH	Outgoing	Incoming
ISDN Network	Prior to R24: • B-channels ÷ DCH = _____ R24+: SEMT (1) × 8	Prior to R24: • B-channels ÷ DCH = _____ R24+: SEMT (1) × 8
NACD	Source ACD DNs + 5 = _____	Network congestion level: • Low: 10 • Medium: 20 • High: 30
NMS	10	10

In the case of an ISL D-channel, ensure that the baud rate of the connection is greater than

$$(C \text{ msgs/hr} \times 29 \text{ bytes/msg} \times 8 \text{ bits/byte}) \div 3600 \text{ sec/hr}$$

where C comes from column C in Table 92 on [page 435](#).

If the baud rate is too low to meet requirements, performance of the entire MSDL card may be jeopardized since 30 of the MSDL output buffers will be occupied with ISL D-channel messages and the real time spent processing these messages will increase due to additional flow control and queueing logic.

Depending on the application, it may be too conservative to engineer an MSDL for link restarts. In that case, the ISDN Network peak outgoing and incoming buffer requirements can be set at 15 for 68060 CP systems.

AML applications

If an existing system is being modeled, add the number of incoming messages, messages in the IMMSG category, and outgoing messages, messages in the OMMSG category, from a busy hour TFS008 report and enter the value in Column C. For a quick approximation of the number of incoming messages, add the number of messages of priority 1 to 4, as provided in TFS008. For more details, refer to *Traffic Measurement: Formats and Output* (553-3001-450).

Table 94
MSDL real time requirements for AML applications

AML	calls/hr A	msgs/call B	msgs/hr C = A × B	msec/msg D	msec E = C × D
CCR	agents × calls ÷ agent/hr (18.3) × % calls with CCR = _____	simple: 10 medium: 20 complex: 30	A × B + 900 ACD DNs w/ statistics = _____	7.2	_____
HER/AST	agents × calls ÷ agent/hr (18.3) × % calls with HER/ AST = _____	10	_____	7.2	_____
M911	M911 agents × calls ÷ agent/ hr (18.3) = _____	6	_____	7.2	_____
Meridian Mail voice mail	MM ports × calls/hr/port (65) = _____	10	_____	7.2	_____
Meridian Mail voice menu	agents × calls/agent/hr (120) = _____	10	_____	7.2	_____
Meridian Mail announcements	agents × calls/agent/hr (150) = _____	5	_____	7.2	_____

Table 95
MSDL peak buffer requirements for AML applications (Part 1 of 2)

AML	Outgoing	Incoming	Minimum Baud Rate
CCR	CDNs with statistics = _____	68060 CP: 20 68060E CP: 30	(msgs/hr × 45 bytes/msg × 8 bits/byte) ÷ (3600 sec/hr) = _____
HER/AST	68060 CP: 12 68060E CP: 18	68060 CP: 12 68060E CP: 18	(msgs/hr × 45 bytes/msg × 8 bits/byte) ÷ (3600 sec/hr) = _____

Table 95
MSDL peak buffer requirements for AML applications (Part 2 of 2)

AML	Outgoing	Incoming	Minimum Baud Rate
M911	68060 CP: 5 68060E CP: 8	68060 CP: 5 68060E CP: 8	$(\text{msgs/hr} \times 45 \text{ bytes/msg} \times 8 \text{ bits/byte}) \div (3600 \text{ sec/hr}) = \underline{\hspace{2cm}}$
Meridian Mail voice mail	68060 CP: 8 68060E CP: 12	68060 CP: 8 68060E CP: 12	$(\text{msgs/hr} \times 38.5 \text{ bytes/msg} \times 8 \text{ bits/byte}) \div (3600 \text{ sec/hr}) = \underline{\hspace{2cm}}$
Meridian Mail voice menu	68060 CP: 12 68060E CP: 18	68060 CP: 12 68060E CP: 18	$(\text{msgs/hr} \times 38.5 \text{ bytes/msg} \times 8 \text{ bits/byte}) \div (3600 \text{ sec/hr}) = \underline{\hspace{2cm}}$
Meridian Mail announcements	68060 CP: 15 68060E CP: 22	68060 CP: 15 68060E CP: 22	$(\text{msgs/hr} \times 38.5 \text{ bytes/msg} \times 8 \text{ bits/byte}) \div (3600 \text{ sec/hr}) = \underline{\hspace{2cm}}$

For Meridian Mail 1 through Meridian Mail 9, the CSL link was 4800 baud. Beginning with Meridian Mail 10, the link is 9600 baud. Meridian Mail 11 supports a maximum of 96 ports. Previous releases supported 48 ports.

SDI applications

In the HSL analysis, include live agents, automated agents, and Meridian Mail agents in the agent total. This will compensate for the assumption of simple calls, since transferred calls will generate additional MAX messages.

Table 96
MSDL real time requirements for SDI applications

SDI	calls/hr A	msgs/call B	msgs/hr C=A×B	msec/msg D	msec E=C×D
CDR	calls/hr with reports = _____	FCDR = old:100 FCDR = new: 213	_____	0.05	_____
HSL-Meridian MAX	agents × calls/agent/hr (18.3) = _____	5	_____	8.8	_____
TTY	NA	NA	15 000	0.05	_____

There are no traffic reports that provide information on the number of SDI messages directly. For CDR records, determine whether CDR is enabled for incoming, outgoing, and/or internal calls. The number of incoming, outgoing, internal, and tandem calls is available from TFC001. Tandem calls are considered both incoming and outgoing. Alternatively, the number of CDR records can be counted directly. MAX reports can also be counted directly.

Table 97
MSDL peak buffer requirements for SDI applications

SDI	Outgoing	Incoming	Minimum baud rate
CDR	<ul style="list-style-type: none"> 30 if baud rate is less than recommended in Table 88 on page 431 otherwise: <ul style="list-style-type: none"> 68060 CP: 20 68060E CP: 	1	$(\text{msgs/hr} \times 10 \text{ bits/msg}) \div (3600 \text{ sec/hr})$ $= \text{_____}$
HSL – Meridian MAX	<ul style="list-style-type: none"> Messages per call <ul style="list-style-type: none"> simple: 5 medium: 10 complex: 15 	1	$(\text{msgs/hr} \times 20 \text{ bytes/msg} \times 9 \text{ bits/byte}) \div (3600 \text{ sec/hr})$ $= \text{_____}$
TTY	10	10	


Examples

NACD network with CDR reports

Consider an NACD network with the topology given in Figure 59 on [page 440](#). The call flow is provided, where arrows indicate where calls enter the network and where they are answered.

Each node has a single ACD DN and calls are queued to the network target DNs as soon as they arrive.

Figure 59
NACD network

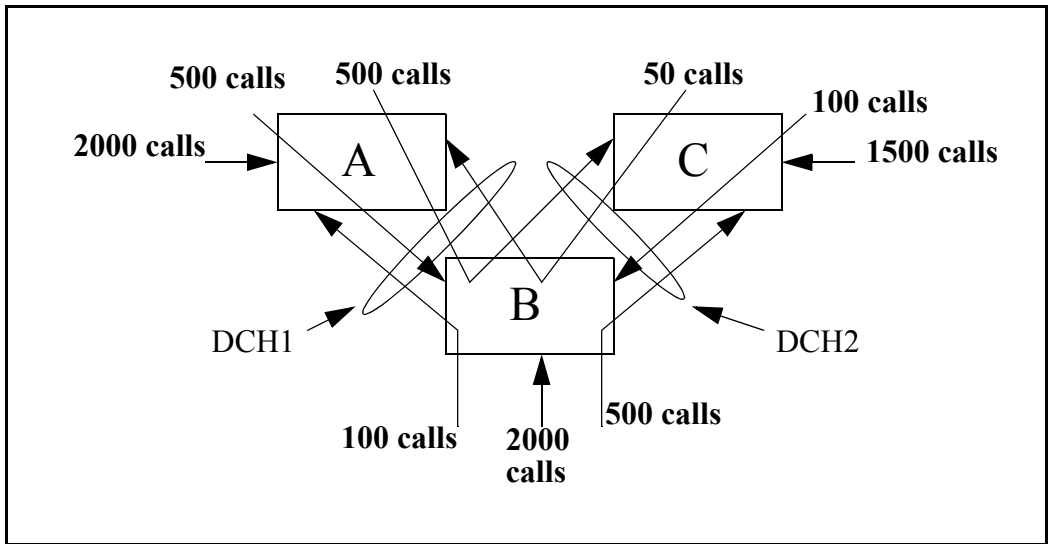

For this network, we wish to determine whether a single MSDL on Node B can support DCH1, DCH2, and an SDI port for CDR records on Port 0.

Since we have detailed call flow information, we can develop a messaging model for DCH1 and DCH2 (see Table 98).

Table 98
NACD Message Model

Originating Node	Total Queued	Queued and answered	Queued but not answered	Total messages	DCH1	DCH2
Node A to Node B	3000	500	2500	15 500	x	x
Node A to Node C	3000	500	2500	15 500	x	x
Node B to Node A	2600	100	2500	11 100	x	
Node B to Node C	2600	500	2100	13 900		x
Node C to Node A	1650	50	1600	6950	x	x
Node C to Node B	1650	100	1550	7300	x	x

The DCH1 and DCH2 columns indicate whether the messages should be included in the DCH1 and DCH2 message count, respectively. For each row, multiply the entry in the “Queued and answered” column by 11 messages and multiply the entry in the “Queued but not answered” column by 4 messages. The sum of these two values is provided in the “Total messages” column. By summing the rows which should be included for DCH1 and DCH2, we derive the total messages for DCH1: 56 350 msg/hr and DCH2: 59 150 msg/hr. Note that these messages do not include the impact of CRQS and FCTH which are beyond the scope of this analysis (see Table 92 on [page 435](#)).

Table 99
MSDL real time requirements for D-channel applications

DCH	calls/hr A	msgs/call B	msgs/hr C=AxB	msec/msg D	msec E=CxD
NACD DCH1	NA	NA	56 350	pre-R20: 8.8	495 880
NACD DCH2	NA	NA	59 150	pre-R20: 8.8	520 520

Assuming that no non-NACD calls are carried, Node B carries 3750 calls/hour.

Table 100
MSDL real time requirements for SDI applications

SDI	calls/hr A	msgs/call B	msgs/hr C=A×B	msec/ msg D	msec E=C×D
CDR	calls/hr with reports=3750	FCDR=old: 100 FCDR=new: 213	798 750 (FCDR=new)	0.05	39 938

The total MSDL requirements can then be computed:

Table 101
MSDL engineering worksheet

Port	Application	Real Time required	Peak Buffer usage outgoing	Peak Buffer usage incoming
0	CDR	39 938	10	1
1	DCH-NACD	495 880	7	10
2	DCH-NACD	520 520	7	10
3				
Total		1 056 338	24	21

The projected MSDL utilization is $1\,056\,338 \div 2\,770\,000 = 38\%$. Assuming low network congestion, incoming and outgoing peak buffer usage are below 60, so a single MSDL is able to support this configuration. However, due to the potentially high messaging impact of NACD, this MSDL should be re-engineered periodically to determine whether the call volumes or call flow patterns have changed.

Meridian Mail

Traffic calculations and capacity table

Refer to *Site and Installation Planning* (553-7011-200) for a detailed engineering of Meridian Mail (MM), including menu utilization, call duration, storage size, disk size, up requirements, and so on. However, for easy reference, a simplified table is extracted and included here (see Table 102).

Each Meridian Mail Module consists of 16 ports that interface with a DTI type of loop with 24 ports to provide voice channels. In other words, every 16 Meridian Mail ports interface with one loop of 30 timeslots.

As with other traffic calculations, the first step is to determine the average holding time of an MM call. This includes both the time the user is logged on to MM and the time callers are leaving messages for that user. A typical range is 30 to 60 seconds per user depending on the type of application.

The calling rate per MM registered user is about 10% of busy hour calls. For example, if a telephone generates or receives five calls per hour, the MM calls would be 0.5 per hour. If there are 2000 MM users in a switch with average holding time (AHT) of 60 seconds, its MM traffic would be:

$$\text{MM traffic in CCS} = 2000 \times 0.5 \times 60 \div 100 = 600 \text{ CCS}$$

From Table 102, approximately 23 MM ports are needed for this application.

Note that if complicated voice menus are involved for an application, the AHT needs to reflect that fact.

Table 102
Meridian Mail channel capacity (Part 1 of 2)

Number of channels	Capacity in CCS
4	54
8	157
12	273

Table 102
Meridian Mail channel capacity (Part 2 of 2)

Number of channels	Capacity in CCS
20	522
24	651
28	782
32	915
36	1049
40	1183
44	1318
48	1455
52	1592
56	1729
60	1867
64	2005
68	2143
72	2282
76	2421
80	2561
84	2700
88	2840
92	2980
96	3120

The main objective to present Meridian Mail engineering procedure here is to show how it fits into the overall Call Center engineering in the later section.

For a high level MM port requirements estimate, interpolation or extrapolation between entries is permitted.

The major MM parameter that impacts the real-time capacity of a co-located system is the type of signaling between the MM processor and the system CP. For locally generated MM calls, CSL and End to End signaling have significant capacity effects and have different real-time factors as shown in the real-time calculation worksheet.

There are many voice processing features offered with the Meridian Mail application, all of which present unique characteristics in MM usage. Each specific feature, with varying AHT, will impact the MM port requirement differently. This needs to be considered when engineering a specific MM application. The following are known applications of the MM feature: Voice Mail, Voice Menu, Voice Forms, Auto Attendant, Meridian Interactive Voice Response (MIVR), Host Enhanced Voice Processing (HEVP), Network Message Service, and Third Party Voice Messaging Systems.

CallPilot engineering

Refer to *CallPilot Planning and Engineering* (553-7101-101) for engineering details. The abbreviated procedure in this chapter is for system engineering where a rough estimate of CallPilot ports (or channels) is required.

The difference in Meridian Mail and CallPilot engineering is that in addition to voice channels, a CallPilot allows fax and speech-recognition media. As a measure of Digital Signal Processing (DSP) power, different media types require different Multimedia Processing Unit (MPU) quantities:

- One voice channel requires one MPU
- One fax channel requires two MPUs
- One speech-recognition channel requires four MPUs

A Multimedia Processing Card (MPC-8) is a credit-card sized PC card that resides in the CallPilot Server. Each MPC-8 has eight MPUs. The maximum number of MPUs in a CallPilot is 96. Any use of non-voice application will reduce the number of channels available for voice traffic.

For an IP source to access CallPilot, the codec must be set for G.711, since a non-standard proprietary codec is used in CallPilot, a multi-rate transcoding will render the resulting voice samples with very poor quality.

The default holding time for a voice channel user is 40 seconds in the CallPilot port engineering. Another resource to be estimated in CallPilot is storage size. This requires a complicated calculation and will not be covered here. Please refer to the *CallPilot Planning and Engineering* (553-7101-101) for details.

Once the CCS for each type of media is calculated, sum up the total and refer to capacity tables in the NTP MPU requirement based on the offered CCS traffic. If a precise calculation is not required, refer to Table 102 on [page 443](#) for capacity estimation. This table was calculated with Erlang C P.05 GoS. An alternative cited in *CallPilot Planning and Engineering* (553-7101-101) is Erlang B with P.02 GoS, which is slightly on the conservative side compared with the Erlang C model.

Call Center

The Call Center is an ACD switch, whose calls are mostly incoming or outgoing, with extensive applications features, such as CCR, HER, MIVR, HEVP. A port in the Call Center environment, either as an agent telephone or trunk, tends to be more heavily loaded than other types of applications.

Based on customer application requirements, such as calls processed in a busy hour, and feature suite such as RAN, Music, and IVR, the system capacity requirements can be calculated.

ACD

Automatic Call Distribution (ACD) is an optional feature available with the system. It is used by organizations where the calls received are for a service rather than a specific person.

For basic ACD, incoming calls are handled on a first-come, first-served basis and are distributed among the available agents. The agent that has been idle the longest is presented with the first call. This ensures an equitable distribution of incoming calls among agents.

The system is managed or supervised by supervisors who have access to the ACD information through a video display terminal. These supervisors deal with agent-customer transactions and the distribution of incoming calls among agents.

Many sophisticated control mechanisms have been built on the basic ACD features. Various packages of ACD features discussed in this NTP will have real-time impact on the system CP capacity.

ACD-C1 and C2 packages

ACD Management Reporting provides the ACD customer with timely and accurate statistics relevant to the ACD operation. These statistics form periodic printed reports and ongoing status displays so the customer can monitor changing ACD traffic loads and levels of service and implement corrective action where required.

The ACD-C1 package primarily provides status reporting of the system through a TTY terminal. To control and alter the configuration of the system, the ACD-C2 package is required; it provides the load management commands. The following is a partial list of functions of a supervisor position in the C2 package:

- Assign auto-terminating ACD trunk routes
- Assign priority status to ACD trunks
- Reassign ACD agent positions to other ACD DN's
- Set the timers and routes for first and second RAN
- Define the overflow thresholds
- Specify a night RAN route

ACD-D package

The ACD-D system is designed to serve customers whose ACD operation requires sophisticated management reporting and load management capabilities. It has an enhanced management display as the system is supplemented by an auxiliary data system. The system and the auxiliary processor are connected by data links through SDI ports for communications. Call processing and service management functions are split between the system and the auxiliary processor.

ACD-MAX

ACD-MAX offers a customer managerial control over the ACD operation by providing past performance reporting and current performance displays. It is connected through an SDI port to communicate with the system CP. The ACD-MAX feature makes the necessary calculations of data received from the system to produce ACD report data for current and past performance reports. Every 30 seconds, ACD-MAX takes the last 10 minutes of performance data and uses it to generate statistics for the current performance displays. The accumulated past performance report data is stored on disk every 30 minutes.

The impact of ACD-MAX calls in the capacity engineering will be in the real-time area only. The Meridian MAX is an AP version of the ACD-MAX which uses an AP module instead of an HP computer as an auxiliary processor. To estimate the impact of MAX on the system CP, both versions can be treated the same.

NACD

The majority of tasks in the engineering of Network ACD (NACD) involve the design of an NACD routing table and the engineering of overflow traffic. The process is too complex to be included here. The engineering procedure in this NTP is for single node capacity engineering, which accounts for the real-time impact of NACD calls on a switch either as a source node or remote target node. Therefore, the overall design of a network is not in the scope of this document.

MIVR

The Meridian Interactive Voice Response (MIVR) is a Meridian Mail application in which a third-party module (Voicetek™ machine) controls the operation of an MM through the 9600 baud ACCESS link. The communication between the system and MM continues to use the CSL. TLAN network interfaces required for the MIVR feature are MM ports.

Provisioning requirements ensure a balanced configuration among trunks, MIVR ports (or MM ports), and agents in the system's overall configuration. The provisioning requirements include the following recommendations.

- 1 Physically, the MIVR port is the same as the MM port, except that it is controlled by the MIVR application module through the 9600 baud ACCESS link (an asynchronous link). The provisioning of MIVR ports is a multiple of 24, just like MM ports. In MIVR release 1, with one ACCESS link, 48 MIVR ports are the maximum. In release 2, a second ACCESS link will be permitted, which can support another 16 MIVR ports.
- 2 The data link, CSL, which provides signaling between the system and Meridian Mail, is always a 4800 baud synchronous link.
- 3 The distribution of Holding Times (HTs) for MIVR ports are bimodal: one short HT for calls that are transferred to live agents; and, one long HT for calls that are served by the MIVR menu.
- 4 The long HT call occupies a trunk circuit just like any other ACD call. The short HT call has an incremental impact on trunk occupancy. The average HT of a trunk is equal to the sum of the MIVR HT and the agent HT. In other words, all transferred MIVR calls have an incremental impact on trunking requirements.
- 5 If the default short HT on the MIVR port is 15 seconds, the additional CCS to trunk can be estimated as follows:
$$\text{Incremental MIVR CCS to trunks} = \text{Transferred MIVR calls} \times 15 \div 100.$$

Host Enhanced Voice Processing

The Host Enhanced Voice Processing (HEVP) feature is similar to the MIVR except that the ACCESS link is replaced by a Meridian Mail link, and the voice processing is controlled by the Meridian Application Module instead of a Voicetek machine.

An HEVP call involves the AML to control a voice mail treatment; its real-time impact on the Meridian 1 is like a combined MM and AML call. HEVP real-time impact can be treated like the MIVR.

Meridian 911

The primary difference between the M911 application and other Application Module link related incoming ACD calls is the requirement of MF Receivers (MFR), which interpret digits received from CO through MF trunks for M911 calls.

Procedure 1

Estimating MFR requirements

- 1 Calculate the number of calls from MF trunks:

$$\begin{aligned} \text{M911 calls} &= \text{No. of MF trunks} \times 28 \times 100 \div 180 \\ &= 15.56 \times \text{No. of MF trunks.} \end{aligned}$$

where the default value of CCS for the trunk is 28 and the average holding time is 180 seconds. These numbers should be replaced by specific values at your site if they are available.

- 2 Calculate MFR traffic:

$$\text{MFR traffic in CCS} = \text{M911 calls} \times 6 \div 100$$

where the ANI digits of 8 were estimated conservatively to hold up a receiver for 6 seconds.

- 3 Refer to *Dialing Plans: Description* (553-3001-183) to find the requirements of MFRs. For the purpose of estimating MFR requirements, the DTR table can be applied. Read the number of DTRs (MFRs) corresponding to a CCS entry greater than the above calculated CCS value under the column of 6-second holding time. An abbreviated table is shown here for simple reference.

Table 103

MFR table with 6-second holding time

No. of MF receivers	2	4	6	8	10	15	20	25	30	35	40
Capacity in CCS	3	24	61	106	157	300	454	615	779	947	1117

End of Procedure

RAN and Music

The RAN trunk can be treated just like a normal trunk. The only potential capacity impact is for Large Systems that include RAN trunks in blocking or non-blocking calculations. The calculations determine the total number of loops or card slots required. Refer to “Service loops and circuits” on [page 285](#) to calculate RAN requirements.

Music in the system is provided by broadcasting a music source from a RAN trunk to a conference loop. Therefore, a maximum of 30 users can listen to music at one time. If this is not sufficient, an additional conference loop needs to be provided for each additional 30 simultaneous music users.

The conference loop connects to one half of the Conference/TDS card. The second conference loop, if needed, will take another card and card slot, because it cannot be separated from the TDS loop.

Music Broadcast requires any Music trunk and an external music source or a Meridian Integrated RAN (MIRAN) card (NTAG36). MIRAN has the capability to provide audio input for external music. A Conference loop is not required for Music Broadcast.

Symposium Call Center

Symposium is a Host Server that interfaces through an Ethernet to reach Meridian’s Network Interface Card to enable the system to provide advanced Call Center features to users. The NIC port can be set for many options, such as 10T (10 Mbps), or 100T (100 Mbps) data rate, half duplex or full duplex depending on processor capacity of the system. For CP3 and CP4 processors, only 10T with half duplex is allowed. For CP PIV, all options are available, including full duplex and 100T data rate. Although Internet Protocol (IP) is used for communications, the underlining message to Meridian input queue is still AML messages.

The customer can create simple to write script in Symposium to control processing of an arriving call which is eventually delivered to an agent queue after following various call processing rules, such as skill set of agent, call priority, length of waiting time, etc.

The impact of Symposium call center on the system is the complexity of call handling on the system call processor. Depending on the script used, the call processing can include giving RAN, Music and IVR which requires a voice processing system such as Meridian Mail or CallPilot be also provided.

From the system CPU's point of view, service functions provided by Symposium are similar to that available for CCR, or HEVP, the only difference is reflected by real time factor corresponding to each application type.

Symposium Call Center with IP phones and Virtual Trunks

When IP phones are used as ACD agent telephones, some special engineering rules are to be followed to engineer the system properly. Two new resources must be engineered:

- Digital Signaling Processing (DSP) channels (therefore, Media Cards)
- Virtual Trunks

The following four configurations demonstrate the application of different rules to accommodate different configurations.

1 New Pure IP System with IP telephones and VTs

In a pure IP system, if Signaling Processing and Gateway functions are provided, no DSP channels are needed for pure IP connections. The number of VTs provided must be equal to or more than the number of IP agent telephones depending on the queuing provisioning. Typically, trunks should exceed agents by 15-20%.

2 PRI trunks and IP agent telephones

One DSP channel per IP agent telephone. How many more PRI trunks than IP agent telephones depends on the queueing consideration.

3 Mixed PRI trunks and Virtual Trunks to IP agent telephones

For DSP channel calculation, consider only the number of PRI trunks and required IP agent telephones. The subset of VTs versus IP agents can be excluded. However, for bandwidth calculation, all traffic must be accounted for.

4 Mixed TDM and IP Call Center

When both PRI trunks and VTs carry traffic to agents with digital telephones and IP telephones, the first step is to determine whether there is a community of interests among PRI trunks and digital agent telephones. If so, their connections are preferred through the control of CDN, making codecs unnecessary in the call set up which reduces usage of DSP resources and maintains high QOS.

ELAN subnet engineering

The ELAN subnet is designed to handle messaging traffic between the system and its applications, such as Symposium and CallPilot. It is not meant to handle the function of the enterprise IP network which carries customer application traffic.

A 64 kbps link can handle messaging traffic of over 80 000 calls. The ELAN subnet, being an Ethernet subnet with a data rate of 10/100/1000 Mbps, is not a bottleneck in a Symposium/CallPilot configuration. However, certain engineering guidelines must be followed to avoid any performance problems:

- Settings on the Network Interface Card (NIC), the physical interface of the system to the ELAN subnet, must be properly configured in order to guarantee smooth operation. The CP PIV can handle half duplex or full duplex and 10/100/1000 Mbps data rate.
- It is important to set a consistent data rate for the NIC and application.

Certain remote maintenance applications, including Element Manager and Optivity Telephony Manager (OTM), may use the ELAN subnet to access the system from a remote location. Ensure no other enterprise IP network traffic is introduced.

CLASS network engineering

In a single-group network system, the network internal blocking is determined by the concentration ratio of equipped ports on Peripheral Equipment and the number of interfaced loops or superloops. Depending on traffic engineering, a non-blocking network is achievable.

Feature operation

A call originated from Telephone A (or Trunk A) seeks to terminate on a CLASS Telephone B. When B starts to ring, A hears ringback. A unit in CLASS Modem (CMOD) is assigned to collect originator's CND information and waits for the CND delivery interval. After the first ring at B, a silence period (deliver interval) ensues, and the CMOD unit begins to deliver CND information to the CLASS telephone.

The CND information of a traffic source (A) is a system information, which is obtained by the system when a call is originated. During the two-second ringing period of the CLASS Telephone B, A's CND is delivered to CMOD through SSD messages (using the signaling channel only). When the CND information is sent from CMOD to CLASS Telephone B, it is delivered through a voice path during the four-second silence cycle of Telephone B. The CMOD unit is held for a duration of six seconds.

If the Extended CLASS Modem Card (XCMC) IPE card, which provides up to 32 CMOD units, is located in the IPE of Group 0, the CMOD unit in the card receives CND data through the SSD messages and uses one of the voice channels of the intergroup junctor to deliver it to CLASS Telephone B in Group 1.

If the XCMC IPE card is located in Group 1, the system delivers SSD messages containing CND information to CMOD and then send it to Telephone B during the delivery interval through a voice path, which is an intra-group channel not involving an intergroup junctor.

When CMOD units and CLASS telephones are collocated in the same network group, there are no voice paths on the intergroup junctor required to deliver CND information; when they are equipped on different groups, intergroup juncctors must carry CND traffic. The resource allocation algorithm searches for a CMOD unit located in the same group as the terminating CLASS telephone first before it attempts to use a CMOD unit from a different group.

Note: The process continues to be valid. However, due to non-blocking on the fiber link, a multi-group system can be treated as a single group system, since intergroup blocking no longer exists.

Fiber Network Fabric

Multi-group networks are interconnected with fiber-optic rings. The OC-12 fabric has such a large capacity that all channels from expanded eight network groups can be interconnected without junctor blocking. Therefore, engineering of the CLASS feature is reduced to the equivalent of a single group case. The only engineering required is to find the required number of CMOD units from Table 104 to serve a given number of CLASS telephones. Capacity limit due to network group size can be ignored.

Table 104 is the CMOD capacity table. It provides the number of CMOD units required to serve a given number of CLASS telephones with the desired GoS (P.001). The required number of CMOD units must have a capacity range with an upper limit that is greater than the number of CLASS telephones equipped in a given configuration.

Table 104
CMOD Unit Capacity (Part 1 of 2)

CMOD Unit	CLASS Telephone	CMOD Unit	CLASS Telephone
1	1-2	33	2339-2436
2	3-7	34	2437-2535
3	8-27	35	2536-2635
4	28-59	36	2637-2735
5	60-100	37	2736-2835
6	101-150	38	2836-2936
7	151-206	39	2937-3037
8	207-267	40	3038-3139
9	268-332	41	3140-3241
10	333-401	42	3242-3344
11	402-473	43	3345-3447
12	474-548	44	3448-3550

Table 104
CMOD Unit Capacity (Part 2 of 2)

CMOD Unit	CLASS Telephone	CMOD Unit	CLASS Telephone
13	549-625	45	3551-3653
14	626-704	46	3654-3757
15	705-785	47	3768-3861
16	786-868	48	3862-3966
17	869-953	49	3967-4070
18	954-1039	50	4071-4175
19	1040-1126	51	4176-4281
20	1127-1214	52	4282-4386
21	1215-1298	53	4387-4492
22	1299-1388	54	4493-4598
23	1389-1480	55	4599-4704
24	1481-1572	56	4705-4811
25	1573-1665	57	4812-4918
26	1666-1759	58	4919-5025
27	1760-1854	59	5026-5132
28	1855-1949	60	5133-5239
29	1950-2046	61	5240-5347
30	2047-2142	62	5348-5455
31	2143-2240	63	5456-5563
32	2241-2338	64	5564-5671

Guidelines for non-Call Center applications

In a non-Call Center application, there is no significant number of agent telephones. Therefore, no agent telephone to regular telephone conversion is required.

Configurations following engineering rule (no reconfiguration required)

To avoid the need to reconfigure a switch to accommodate the CLASS feature, provide the number of CMOD units serving all CLASS telephones in the system (see Table 102).

Engineering example

One XCMC card serving a single-group system

No special engineering rule is needed for a Meridian 1 PBX 51C or a single-group system.

Refer to Table 104 on [page 455](#) to find the required number of CMOD units to serve the given CLASS sets. For example, to serve a Meridian 1 PBX 61C with 400 CLASS telephones, use Table 104 to find the number of CMOD units serving a range that includes 400 telephones. The result is 10 units, which can serve from 333 - 401 CLASS telephones.

Guidelines for Call Center applications

Configurations following engineering rules (no reconfiguration required)

The following engineering rules should be followed to avoid the need to reconfigure a switch to accommodate the CLASS feature for a call center environment.

- 1 Convert agent telephones to regular telephones:
1 agent CLASS telephone = 4 telephones (called equivalent telephones)
- 2 Calculate the total number of regular CLASS telephones and equivalent CLASS telephones and find the number of CMOD units required based on the capacity table (see Table 104 on [page 455](#)).

Engineering example

One XCMC card serving a single-group system

Refer to Table 104 on [page 455](#) for the number of CMOD units required to serve the given CLASS telephones. For example, to serve a Meridian 1 PBX 61C with 300 agent CLASS telephones, use Table 104 on [page 455](#) to find the CMOD units that can serve 1200 equivalent telephones (300×4). The result is 20 units.

Configuration parameters

Design parameters are constraints on the system established by design decisions and enforced by software checks. A complete list is provided in the Appendix, with default values, maximums and minimums, where applicable. Although defaults are provided in the factory installed database, the value of some of these parameters are configured manually, through the OA&M interface, to reflect the actual needs of the customer's application.

For guidelines on how to determine appropriate parameter values for call registers, I/O buffers, and so on, see "Mass storage" on [page 265](#).

Provisioning

Contents

This section contains information on the following topics:

Introduction	460
Step 1: Define and forecast growth	461
Step 2: Estimate CCS per terminal	462
Step 3: Calculate number of trunks required	467
Step 4: Calculate line, trunk, and console load	468
Step 5: Calculate Digitone receiver requirements	469
Step 6: Calculate total system load	475
Step 7: Calculate number of network loops required	475
Step 8: Calculate number of network groups required	477
Step 9: Calculate number of IPE cards required	479
Step 10: Calculate number of IPE modules required	480
Step 11: Provision conference/TDS loops	480
Step 12: Assign equipment and prepare equipment summary	480
Calculations with Authorization Code	472
Calculations with Centralized Attendant Service	473
Calculations with Charge Account for Call Detail Recording	473
Calculations with Direct Inward System Access	474

Introduction

To determine general equipment requirements, follow the provisioning steps in the order shown below. (These provisioning methods are based on a non-partitioned system.) Use the worksheets prepared in the previous chapter and the reference tables at the end of this document.

- Step 1: Define and forecast growth (p. 461)
- Step 2: Estimate CCS per terminal (p. 462)
- Step 3: Calculate number of trunks required (p. 467)
- Step 4: Calculate line, trunk, and console load (p. 468)
- Step 5: Calculate Digitone receiver requirements (p. 469)
- Step 6: Calculate total system load (p. 475)
- Step 7: Calculate number of network loops required (p. 475)
- Step 8: Calculate number of network groups required (p. 477)
- Step 9: Calculate number of IPE cards required (p. 479)
- Step 10: Calculate number of IPE modules required (p. 480)
- Step 11: Provision conference/TDS loops (p. 480)
- Step 12: Assign equipment and prepare equipment summary (p. 480)



IMPORTANT!

The values used in the examples in this chapter are for illustrative purposes only, and should not be interpreted as limits of the system capacity. The values must be adjusted to suit the application of a particular system. Consult your Nortel representative and use a configuration tool, such as Nortel Enterprise Configurator, to fully engineer a system.

Step 1: Define and forecast growth

The first step in provisioning a new system is to forecast the number of telephones required at two-year and five-year intervals.

The number of telephones required when the system is placed in service (cutover) is determined by the customer. If the customer is unable to provide a two-year and five-year growth forecast, then an estimate of annual personnel growth in percent is used to estimate the number of telephones required at the two-year and five-year intervals.

Example

A customer has 500 employees and needs 275 telephones to meet the system cutover. The customer projects an annual increase of 5% of employees based on future business expansion. The employee growth forecast is:

- $500 \text{ employees} \times 0.05 \text{ (percent growth)} = 25 \text{ additional employees at 1 year}$
- $525 \text{ employees} \times 0.05 = 27 \text{ additional employees at 2 years}$
- $552 \text{ employees} \times 0.05 = 28 \text{ additional employees at 3 years}$
- $580 \text{ employees} \times 0.05 = 29 \text{ additional employees at 4 years}$
- $609 \text{ employees} \times 0.05 = 31 \text{ additional employees at 5 years}$
- $640 \text{ employees} \times 0.05 = 32 \text{ additional employees at 6 years}$

The ratio of telephones to employees is $275 \div 500 = 0.55$. To determine the number of telephones required from cutover through a five-year interval, the number of employees required at cutover, one, two, three, four, and five years is multiplied by the ratio of telephones to employee (0.55).

- $500 \text{ employees} \times 0.55 = 275 \text{ telephones required at cutover}$
- $525 \text{ employees} \times 0.55 = 289 \text{ telephones required at 1 year}$
- $552 \text{ employees} \times 0.55 = 304 \text{ telephones required at 2 years}$
- $580 \text{ employees} \times 0.55 = 319 \text{ telephones required at 3 years}$
- $609 \text{ employees} \times 0.55 = 335 \text{ telephones required at 4 years}$
- $640 \text{ employees} \times 0.55 = 352 \text{ telephones required at 5 years}$

This customer requires 275 telephones at cutover, 304 telephones at two years, and 352 telephones at five years.

Each DN assigned to a telephone requires a TN. Determine the number of TNs required for each customer and enter this information in “Network loop balancing” on [page 507](#). Perform this calculation for cutover, two-year, and five-year intervals.

Step 2: Estimate CCS per terminal

Estimate the station and trunk centi-call seconds (CCS) per terminal (CCS/T) for the installation of a system using any one of the following methods:

- 1 Comparative method
- 2 Manual calculation
- 3 Default method

Comparative method

Select three existing systems that have a historical record of traffic study data. The criteria for choosing comparative systems are:

- 1 Similar line size (+25%)
- 2 Similar business (such as bank, hospital, insurance, manufacturing)
- 3 Similar locality (urban or rural)

Once similar systems have been selected, then their station, trunk, and intra-CCS/T are averaged. The averages are applied to calculate trunk requirements for the system being provisioned (see the example in Table 105 on [page 463](#)).

Table 105
Example of station, trunk, and intra-CCS/T averaging

	Customer A	Customer B	Customer C	Total	Average
Line size	200	250	150	600	200
Line CCS/T	4.35	4.75	3.50	12.60	4.20
Trunk CCS/T	2.60	3.00	2.00	7.60	2.53
Intra CCS/T	1.70	1.75	1.50	4.95	1.65

If only the trunk CCS/T is available, multiply the trunk CCS/T by 0.5 to determine the intra-CCS/T (assuming a normal traffic pattern of 33% incoming calls, 33% outgoing calls, and 33% intra-system calls). The trunk CCS/T and intra-CCS/T are then added to arrive at the line CCS/T (see the example in Table 106).

Table 106
Example of CCS/T averaging when only trunk CCS/T is known (Part 1 of 2)

Trunk type	Number of trunks	Grade-of-Service	Load in CCS	Number of terms	CCS/T
IP Peer Virtual Trunk	11	P.01	169	275	0.61
DID	16	P.01	294	234	1.20
CO	14	P.02	267	234	1.14
TIE	7	P.05	118	215	0.54
Paging	2	10 CCS/trunk	20	207	0.09
Out WATS	4	30 CCS/trunk	120	218	0.54
Note: The individual CCS/T per trunk group is not added to form the trunk CCS/T. The trunk CCS/T is the total trunk load divided by the total number of lines at cutover.					

Table 106
Example of CCS/T averaging when only trunk CCS/T is known (Part 2 of 2)

Trunk type	Number of trunks	Grade-of-Service	Load in CCS	Number of terms	CCS/T
FX	2	30 CCS/trunk	60	218	0.27
Private line	4	20 CCS/trunk	80	275	0.29
			Total: 1128		Total: 4.64
Note: The individual CCS/T per trunk group is not added to form the trunk CCS/T. The trunk CCS/T is the total trunk load divided by the total number of lines at cutover.					

From the preceding information, trunk CCS/T can be computed as follows:

$$\begin{aligned}
 \text{Trunk CCS/T} &= \text{total trunk load in CCS} \div (\text{number of lines}) \\
 &= 1128 \div 275 \\
 &= 4.1
 \end{aligned}$$

Assuming a 33% intra-calling ratio:

$$\begin{aligned}
 \text{Intra CCS/T} &= 4.1 \times 0.5 = 2.1, \\
 \text{and} \\
 \text{line CCS/T} &= 4.1 (\text{trunk CCS/T}) + 2.1 (\text{intra-CCS/T}) = 6.2
 \end{aligned}$$

Manual calculation

Normally, the customer can estimate the number of trunks required at cutover and specify the Grade-of-Service (GoS) to be maintained at two-year and five-year periods (see Table 107 on [page 465](#)). (If not, use the comparative method.)

The number of trunks can be read from the appropriate trunking table to select the estimated usage on the trunk group. The number of lines that are accessing the group at cutover are divided into the estimated usage. The result is the CCS/T, which can be used to estimate trunk requirements.

Example

- Line CCS/T = 6.2
- Trunk CCS/T = 4.1
- 2 consoles = 30 CCS

Table 107**Example of manual calculation of CCS/T**

Cutover	Line CCS = $275 \times 6.2 = 1705$ Trunk CCS = $275 \times 4.1 = 1128$ Subtotal = 2833 Console CCS = 30 Total system load = 2863
2 years	Line CCS = $304 \times 6.2 = 1885$ Trunk CCS = $304 \times 4.1 = 1247$ Subtotal = 3132 Console CCS = 30 Total system load = 3162
5 years	Line CCS = $352 \times 6.2 = 2183$ Trunk CCS = $352 \times 4.1 = 1444$ Subtotal = 3627 Console CCS = 30 Total system load = 3657

This method is used for each trunk group in the system, with the exception of small special services trunk groups (such as TIE, WATS, and FX trunks).

Normally, the customer will tolerate a lesser GoS on these trunk groups. Table 108 lists the estimated usage on special services trunks.

Table 108
Estimated load per trunk

Trunk type	CCS
IP Peer Virtual Trunk	30
TIE	30
Foreign exchange	30
Out WATS	30
In WATS	30
Paging	10
Dial dictation	10
Individual bus lines	20

Default method

Studies conducted estimate that the average line CCS/T is never greater than 5.5 in 90% of all businesses. If attempts to calculate the CCS/T using the comparative method or the manual calculation are not successful, the default of 5.5 line CCS/T can be used.

The network line usage is determined by multiplying the number of lines by 5.5 CCS/T. The total is then multiplied by 2 to incorporate the trunk CCS/T. However, when this method is used, the intra-CCS/T is added twice to the equation, and the result could be over provisioning if the intra-CCS/T is high.

Another difficulty experienced with this method is the inability to forecast individual trunk groups. The trunk and intra CCS/T are forecast as a sum group total. Examples of the default method and the manual calculation method are shown in Table 109 on [page 467](#) for comparison.

Example

- 275 stations at cutover
- 304 stations at two years
- 352 stations at five years

Cutover $275 \times 5.5 \text{ (CCS/T)} \times 2 = 3025 \text{ CCS total system load}$

Two-year $304 \times 5.5 \text{ (CCS/T)} \times 2 = 3344 \text{ CCS total system load}$

Five-year $352 \times 5.5 \text{ (CCS/T)} \times 2 = 3872 \text{ CCS total system load}$

Table 109**Default method and manual calculations analysis**

	Default method	Manual calculations	Difference
Cutover	3025	2863 CCS	162 CCS
Two years	3344	3162 CCS	182 CCS
Five years	3872	3657 CCS	215 CCS

Step 3: Calculate number of trunks required

Enter the values obtained through any of the three previous methods in “Growth forecast” on [page 504](#). Add the calculations to the worksheet. Once the trunk CCS/T is known and a GoS has been specified by the customer, the number of trunks required per trunk group to meet cutover, two-year, and five-year requirements is determined as shown in the following example.

Example

The customer requires a Poisson 1% blocking GoS (see “Trunk traffic – Erlang B with P.01 Grade-of-Service” on [page 552](#)). The estimated trunk CCS/T is 1.14 for a DID trunk group. With the cutover, two-year, and

five-year number of lines, the total trunk CCS is determined by multiplying the number of lines by the trunk CCS/T:

Cutover	$275 \text{ (lines)} \times 1.14 \text{ (trunk CCS/T)} = 313.5 \text{ CCS}$
Two-year	$304 \text{ (lines)} \times 1.14 \text{ (trunk CCS/T)} = 346.56 \text{ CCS}$
Five-year	$352 \text{ (lines)} \times 1.14 \text{ (trunk CCS/T)} = 401.28 \text{ CCS}$

Use “Digitone receiver requirements – Model 2” on [page 559](#) to determine the quantity of trunks required to meet the trunk CCS at cutover, two-year, and five-year intervals. In this case:

- 17 DID trunks are required at cutover
- 18 DID trunks are required in two years
- 21 DID trunk are required in five years

Note: For trunk traffic greater than 4427 CCS, allow 29.5 CCS/T.

Step 4: Calculate line, trunk, and console load

Once the quantity of trunks required has been estimated, enter the quantities in “Growth forecast” on [page 504](#) for cutover, two-year, and five-year intervals. This calculation must be performed for each trunk group to be equipped. The total trunk CCS/T is the sum of each individual trunk group CCS/T. This value is also entered in “Growth forecast” on [page 504](#).

Line load

Line load is calculated by multiplying the total number of TNs by the line CCS/T. The number of TNs is determined as follows:

- one TN for every DN assigned to one or more single-line telephones
- one TN for every multi-line telephone without data option
- two TNs for every multi-line telephone with data option

Trunk load

Trunk load is calculated by multiplying the total number of single- and multi-line TNs that have access to the trunk route by the CCS/T per trunk route.

Console load

Console load is calculated by multiplying the number of consoles by 30 CCS per console.

Step 5: Calculate Digitone receiver requirements

Once station and trunk requirements have been determined for the complete system, the DTR requirements can be calculated. The DTRs are shared by all customers in the system and must be distributed equally over all the network loops.

The tables “Digitone receiver requirements – Model 3” on [page 560](#) through “Digitone receiver load capacity – 16 to 25 second holding time” on [page 565](#) are based on models of traffic environments and can be applied to determine DTR needs in most cases. When the system being provisioned does not fall within the bounds of these models or is equipped with any special features, the detailed calculations must be performed for each feature and the number of DTRs must accommodate the highest result.

Special feature calculations include:

- Calculations with Authorization Code ([p. 472](#))
- Calculations with Centralized Attendant Service ([p. 473](#))
- Calculations with Charge Account for Call Detail Recording ([p. 473](#))
- Calculations with Direct Inward System Access ([p. 474](#))

From the appropriate reference table (“Digitone receiver requirements – Model 1” on [page 558](#) through to “Digitone receiver load capacity – 16 to 25 second holding time” on [page 565](#)), determine the number of DTRs required and the DTR load for cutover, two-year, and five-year intervals. Record this information in “Total load” on [page 505](#).

The following models are based on some common PBX traffic measurements.

Model 1

“Digitone receiver requirements – Model 3” on [page 560](#) is based on the following factors:

- 33% intraoffice calls, 33% incoming calls, and 33% outgoing calls
- 1.5% dial tone delay GoS
- No Digitone DID trunks or incoming Digitone TIE trunks

Model 2

“Digitone receiver requirements – Model 4” on [page 561](#) is based on the following factors:

- The same traffic pattern as Model 1
- Digitone DID trunks or incoming Digitone TIE trunks
- Poisson 0.1% blockage GoS

Model 3

“Digitone receiver load capacity – 6 to 15 second holding time” on [page 562](#) is based on the following factors:

- 15% intraoffice calls, 28% incoming calls, and 56% outgoing calls
- 1.5% dial tone delay GoS
- No Digitone DID trunks or incoming Digitone TIE trunks

Model 4

“Digitone receiver load capacity – 16 to 25 second holding time” on [page 565](#) is based on the following factors:

- the same traffic pattern as Model 3
- Digitone DID trunks or incoming Digitone TIE trunks
- Poisson 0.1% blockage GoS

Detailed calculation – Method 1

This method can be used when there are no incoming Digitone DID trunks and the following is assumed:

- Digitone receiver traffic is inflated by 30% to cover unsuccessful dialing attempts.
- Call holding time used in intraoffice and outgoing call calculations is 135 seconds if unknown.
- Digitone receiver holding times are 6.2 and 14.1 seconds for intraoffice and outgoing calls, respectively.
- Factor $(1 - R) \div 2$ in (1) outgoing (incoming calls and outgoing calls are equal). R is the intraoffice ratio.

Follow Procedure 2 to complete a detailed calculation using Method 1.

Procedure 2

Detailed calculation – Method 1

- 1 Calculate Digitone calls:

Intraoffice =

$100 \times \text{Digitone station traffic (CCS)} \div \text{call holding time} \times (R \div 2)$

Outgoing =

$100 \times \text{Digitone station traffic (CCS)} \div \text{call holding time} \times [(1 - R) \div 2]$

- 2 Calculate total DTR traffic:

$1.3 \times [(6.2 \times \text{Intra}) + (14.1 \times \text{Outgoing})] \div 100$

- 3 Calculate average holding time:

$(6.2 \times \text{intra}) + (14.1 \times \text{outgoing}) \div \text{intra calls} + \text{outgoing calls}$

- 4 See “Digitone receiver requirements – Poisson 0.1% blocking” on [page 568](#) or “Conference and TDS loop requirements” on [page 570](#) and use the answers from steps 2 and 3 to determine the number of DTRs required.

End of Procedure

Detailed calculation – Method 2

This method is used when incoming Digitone trunks are included in the system. This method uses the same assumptions as Method 1, with the DTR holding time assumed to be 2.5 seconds for a DID call.

Follow Procedure 3 to complete a detailed calculation using Method 2.

Procedure 3

Detailed calculation – Method 1

- 1 Calculate intraoffice and outgoing Digitone calls as shown in step 1 of Method 1:

$$\text{DID calls} = \frac{\text{DID Digitone trunk traffic (CCS)} \times 100}{\text{call holding time}}$$
- 2 Calculate total DTR traffic:

$$\frac{[(1.3 \times 6.2 \times \text{intra}) + (1.3 \times 14.1 \times \text{outgoing calls}) + (2.5 \times \text{DID calls})]}{100}$$
- 3 See Reference Table 10 on page 568 and use the answer from step 2 to determine the number of DTRs required.

End of Procedure

Calculations with Authorization Code

With Authorization Code, the DTR holding times change from 6.2 seconds to 19.6 seconds for intraoffice calls, and from 14.1 seconds to 27.5 seconds for outgoing calls.

Use the values in steps 2 and 3 of “Detailed calculation – Method 1” on [page 471](#) and step 2 of “Detailed calculation – Method 2” on [page 472](#) to calculate the DTR requirements for a system with the Authorization Code option.

It has been assumed that:

- 1 all Digitone intraoffice and outgoing calls require authorization;
- 2 the average number of special services prefix (SPRE) digits is two (the maximum is four);

- 3 the average number of Authorization Code digits is 10 (the range is 1 to 14 digits); and,
- 4 the average DTR holding time is 13.4 seconds.

Calculations with Centralized Attendant Service

This method determines the DTR requirements for the main location of a system equipped with the CAS option. It has been assumed that:

- 1 all attendant calls presented through release link trunks from a remote PBX require DTRs;
- 2 the average number of digits dialed is four; and,
- 3 the average DTR holding time is 6.2 seconds.

Procedure 4

Determining DTR requirements

- 1 Calculate the attendant calls from the remote PBX:
 $100 \times \text{attendant traffic from the remote (CCS)} \div \text{attendant work time (in seconds)}$
- 2 Add the attendant calls to the intraoffice calls calculated in step 1 of “Detailed calculation: Method 1” and proceed with the remaining calculations of Method 1.

End of Procedure

Calculations with Charge Account for Call Detail Recording

The DTR holding time for outgoing calls changes from 14.1 seconds to 20.8 seconds.

Apply this change to steps 2 and 3 of “Detailed calculation – Method 1” on [page 471](#) and step 3 of “Detailed calculation – Method 2” on [page 472](#) to determine the DTR requirements for a system with the Charge Account for CDR option.

It has been assumed that:

- 1 50% of Digitone outgoing calls require a charge account;
- 2 the average number of SPRE digits is two (maximum is four);
- 3 the average number of digits in the account number is 10 (the range is 2 to 23 digits); and,
- 4 the average DTR holding time is 13.4 seconds (see “Digitone receiver requirements – Poisson 0.1% blocking” on [page 568](#)).

Calculations with Direct Inward System Access

This method is used when a system is equipped with the DISA feature. It has been assumed that:

- 1 DISA calls come through DISA trunks or DID trunks;
- 2 75% of DISA calls require a security code;
- 3 the average number of digits in the security code is four (the range is one to eight); and,
- 4 the DISA DTR holding time is 6.2 seconds.

Procedure 5 Determining DTR requirements

- 1 Calculate the number of DISA calls:
 $100 \times \text{DISA traffic} \div \text{call holding time}$
- 2 Calculate the DISA DTR traffic:
 $6.2 \times \text{DISA calls} \div 100$
- 3 Add this traffic to step 2 of “Detailed calculation: Method 2” and proceed with the remaining calculations of Method 2.

End of Procedure

Step 6: Calculate total system load

Total the line, trunk, console, and DTR load for each customer to get the total load figure for each customer for cutover, two-year, and five-year intervals. Enter this figure in “Total load” on [page 505](#) and “Network loops” on [page 506](#).

Step 7: Calculate number of network loops required

The system network loop requirement is the total of all individual customer loops and superloops required. The number of network loops and superloops required is calculated for each customer for cutover, two-year, and five-year intervals. Network loops and superloops are provisioned at cutover based on the two-year loop requirement figure.

To determine the number of superloops required, first separate the traffic supported by QPC414 Network Cards: data line cards, RPE, and PRI/DTL. The remaining traffic (including DTR traffic) must be engineered for superloops.

Number of superloop network cards or number of superloops
= traffic to be handled by superloop network ÷ 2975

These figures are based on an 85% utilization level. Round the value obtained to the next higher number.

Non-blocking configuration with superloop network

For non-blocking applications (or a non-blocking part of the system), provide one superloop for every 120 TNs. Generally, each line or trunk is one TN, but an integrated voice and data line is two TNs (assuming the data port is configured). Application processors such as CallPilot and MICB require a TN for each port. Media Card requires 1 TN for each DSP port.

Blocking configuration with superloop network

For applications where blocking is allowed, one superloop can serve up to 512 lines (1024 TNs). The actual number of lines depends on the traffic requirement of the lines.

QPC414 Network Cards

The traffic carried by QPC414 Network Cards includes data, RPE, and PRI/DTI traffic (which includes both data and voice traffic).

Provide separate loops for RPE and PRI/DTI traffic. Based on 85% utilization, calculate the number of loops required as follows:

- 1 Number of loops
= traffic to be carried by QPC414 Network Cards \div 560
- 2 Number of QPC414 Network Cards
= number of loops \div 2

Note: Round the value obtained to the next higher number.

PRI/DTI cards

The PRI and DTI cards provide the interface between the system switch and T-1/DS-1 digital transmission trunks. Digital trunks are offered in a group of 24 trunks. Table 110 on [page 477](#) lists the number of PRI/DTI cards required when PRI/DTI traffic is known.

The Line-side E1 Interface card (LEI) is an IPE line card that provides a cost-effective, all-digital connection between E1 compatible terminal equipment (such as voice mail systems, voice response units, trading turrets, etc.) and the system. In this application it will provide 30 ports.

Note: The number of PRI/DTI loops is the same as the number of PRI/DTI cards.

Table 110
Number of cards required when PRI/DTI traffic is known

Number of cards	CCS for 24-port T1	CCS for 30-port E1
1	1-507	1-675
2	508-1201	676-1565
3	1202-1935	1566-2499
4	1936-2689	2500-3456
5	2690-3456	3457-4427
6	3457-4231	4428-5409
7	4232-5015	5410-6403
8	5016-5804	6404-7428

For non-blocking applications, the Ring Again feature must be provided since blocking may occur at the far end of the trunk.

The PRI/DTI cards can be installed in any module except IPE Modules. After all essential cards are configured, estimate the available slots for PRI/DTI.

Step 8: Calculate number of network groups required

Compute the number of network groups based on the total number of loops required (excluding conference/TDS loops). Record the network groups in “Network loop balancing” on [page 507](#). Use Table 111 on [page 478](#) and the following equation to find the number of network groups required:

$$\begin{aligned} &\text{Total number of loops} \\ &= (4 \times \text{the number of superloop network cards}) \\ &+ (2 \times \text{the number of QPC414 Network Cards}) \end{aligned}$$

Table 111
Number of network groups based on total number of loops required

Number of network groups	Number of loops
1	28
2	56
3	84
4	112
5	140
6	168
7	196
8	224
Note: Use “Network loops” on page 506 . Install a multiple-group system if the total number of loops required exceeds 28.	

Note: Based on the criteria above, installing a multiple group system initially is more cost-effective than converting to a multiple group system (from a single-group system) between the two-year and five-year intervals.

For CS 1000M MG and Meridian 1 PBX 81C CP PIV use Table 112 to calculate the number of NT6D65 or NTRB34 cCNI Cards needed to support the network groups.

Table 112
cCNI configurations (CS 1000M MG and Meridian 1 PBX 81C CP PIV)

Number of network groups supported	Required number of cCNI cards
1 (group 0)	1
2 (group 1)	1
3 (group 2)	2
4 (group 3)	2
5 (group 4)	3
6 (group 5)	3
7 (group 6)	4
8 (group 7)	4

Step 9: Calculate number of IPE cards required

In “IPE card calculations” on [page 508](#), enter the number of DTRs required (from “Total load” on [page 505](#)). Use a separate worksheet for cutover, two-year, and five-year intervals.

Using information from “Growth forecast” on [page 504](#), enter the number of single-line telephone TNs, multi-line telephone TNs, and trunk TNs required at cutover, two-year, and five-year intervals (for all customers) in “IPE card calculations” on [page 508](#).

Divide each entry by the number of TN assignments for each card, round up to the next higher figure, and total the number of cards required.

Calculate the number of IPE cards separately.

Step 10: Calculate number of IPE modules required

The number of Peripheral Equipment modules provided at cutover is based on the two-year estimate of Peripheral Equipment cards required and an 85% utilization level.

The maximum capacity of an IPE Module is 256 integrated voice and data or analog lines; however, a typical configuration includes a combination of lines, trunks, and DTRs, which provides up to 160 lines.

Divide the number of Peripheral Equipment cards required at two years by 8.5, round to the next higher number, and enter this value in “IPE card calculations” on [page 508](#).

To compute the number of Peripheral Equipment modules, divide the total number of line, trunk, and DTR cards required at two years by 13.6 and round to the next higher number. Enter this value in “IPE card calculations” on [page 508](#).

Calculate the number of IPE Modules required.

Step 11: Provision conference/TDS loops

Conference/TDS loops are provisioned according to the two-year figure for the number of network loops required. All systems must be equipped with a minimum of two conference and two TDS loops.

See Table 109 on [page 467](#) and Table 110 on [page 477](#) to determine conference/TDS loop requirements. Enter these figures in “Conference and TDS loop requirements” on [page 509](#).

Step 12: Assign equipment and prepare equipment summary

Use “Equipment summary” on [page 514](#) to record the equipment requirements for the complete system at cutover. Assign the equipment. The equipment summary may have to be updated as a result of assignment procedures. Use the finalized equipment summary to order the equipment for the system.

Appendix A: Product compatibility for CS 1000 Release 4.5 software

Table 113 lists Nortel product compatibility for CS 1000 Release 4.5 software.

Table 113
CS 1000 Release 4.5 compatibility (Part 1 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
Attendant Console					
PC Attendant Console	Supported	Supported	Supported	Supported	Not supported
Meridian Attendant PC software	Supported	Supported	Supported	Supported	Not supported
M2250 Attendant Console	Supported	Supported	Supported	Supported	Not supported
M2016S Digital Secure Sets					
M2016S Secure Set (NA Only)	Supported	Supported	Supported	Supported	Not supported
M3900 Sets					

Table 113
CS 1000 Release 4.5 compatibility (Part 2 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
M39xx	Supported	Supported	Supported	Supported	Not supported
System Management					
Optivity Telephony Manager (OTM)	OTM 2.2	OTM 2.2	OTM 2.2	OTM 2.2	Required for main office configuration only.
Telephony Manager	TM 3.0 (GA Sept '05)	TM 3.0 (GA Sept '05)	TM 3.0 (GA Sept '05)	TM 3.0 GA Sept '05)	Required for main office configuration only.
Element Manager	EM 4.5	EM 4.5	EM 4.5	EM 4.5	Required for main office configuration only.
Messaging					
CallPilot	1.07 with Service Update 4, 2.0, 2.02, SU03, 3.0	1.07 with Service Update 4, 2.0, 2.02, SU03, 3.0	2.0, 2.02, SU03, 3.0	1.07 with Service Update 4 2.0, 2.02 SU03, 3.0	Support of SRG IP users via main office only. Hardware not supported directly on SRG unit.
HMS 400	Supported	Supported	Supported	Not supported	Not supported
CallPilot Mini	1.5A, 1.5B, 1.5C (not supported on Large Systems)	Not supported	Not supported	1.5A, 1.5B, 1.5C	Support of SRG IP users via main office only. Hardware not supported directly on SRG unit.

Table 113

CS 1000 Release 4.5 compatibility (Part 3 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
Meridian Mail Modular Option EC	12.12-13.14	Not supported directly	Not supported directly	Not supported	Not supported
Meridian Mail Enhanced Card Option	12.12-13.14	Not supported directly	Not supported directly	12.12-13.14	Support of SRG IP users via main office only. Hardware not supported directly on SRG unit.
Meridian Mail reporter R2.x	NA	NA	NA	NA	
Companion					
Companion - Manufacture Discontinued new system packages, January 2003	3.xx -7.xx (7.xx required for Enhanced Capacity) Release 4.0 was the effective latest in EMEA.	Not supported	Not supported	Not supported	Not supported

Table 113
CS 1000 Release 4.5 compatibility (Part 4 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
IP Clients					
Meridian DECT (DMC4/DMC8 version)	451000.xx / 470001.xx – SW embedded on IPE card	451000.xx / 470001.xx – SW embedded on IPE card	Dect Mobility card NOT supported in the IP Media Gateway due to dependencies on E1/BRI interfaces for clocking sync. Can be supported in IP Peer Gateways. Will deliver Wireless capability with i2210.	451000.xx / 470001.xx – SW embedded on IPE card. Introducing Wireless Visitors.	Not supported
VoIP – 802.11 Wireless IP Gateway with Symbol	Application supported on ITG Pentium only 1.19 - Current 1.20 - Maintenance Up-issue (GA - Q2/04)	Application supported on ITG Pentium only.1.19 - Current, 1.20 - Maintenance Up-issue	Not supported	Not supported	Not supported
IP Phone 2210 / 2211	Supported	Supported	Supported	Supported	Supported
IP Phone 2001	Supported	Supported	Supported	Supported	Supported
IP Phone 2002	Supported	Supported	Supported	Supported	Supported
IP Phone 2004	Supported	Supported	Supported	Supported	Supported
Softphone 2050	Supported	Supported	Supported	Supported	Supported
Mobile Voice Client 2050	Supported	Supported	Supported	Supported	Supported

Table 113
CS 1000 Release 4.5 compatibility (Part 5 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
IP Phone 2033	Supported	Supported	Supported	Supported	Not supported
IP Phone ACD Set	Supported	Supported	Supported	Supported	Not supported
IP Phone 2006	GA date TBD	GA date TBD	GA date TBD	GA date TBD	Not supported
IP Phone 2007	GA date TBD	GA date TBD	GA date TBD	GA date TBD	Not supported
Remote Office Portfolio					
Remote Gateway 9150	1.4.1, 1.4.2, 1.5.2	1.4.1, 1.4.2, 1.5.2	Not supported	Not supported	Not supported
Remote Gateway 9110/ 9115/ IP Adaptor	1.4.1, 1.4.2, 1.5.2	1.4.1, 1.4.2, 1.5.2	Not supported	Not supported	Not supported
Meridian Home Office MHO-II	1.18	Not Supported	Not supported	Not supported	Not supported
Mini Carrier Remote	Supported	Not Supported	Not supported	Not supported	Not supported
Carrier Remote	Supported	Not Supported	Not supported	Not supported	Not supported
Fiber I	Supported	Not Supported	Not supported	Not supported	Not supported
Fiber II	Supported	Not Supported	Not supported	Not supported	Not supported
RPE (Remote Intelligent Peripheral Equipment)	Not supported	Not supported	Not supported	Not supported.	Not supported
Retired Call Center Applications					
Meridian MAX [any platform]	Not supported	Not supported	Not supported	Not supported.	Not supported

Table 113
CS 1000 Release 4.5 compatibility (Part 6 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
Network Administration Center [NAC]	Not supported	Not supported	Not supported	Not supported.	Not supported
Meridian Customer Controlled Routing [MCCR]	Not supported	Not supported	Not supported	Not supported.	Not supported
Meridian Link [Mlink]	Not supported	Not supported	Not supported.	Not supported.	Not supported
Symposium Link	Not supported	Not supported	Not supported	Not supported	Not supported
Symposium Desktop TAPI Service Provider for MCA (Meridian Communicator Adapter)	Not supported	Not supported	Not supported	Not supported	Not supported
Meridian Link & MCCR Co-residency	Not supported	Not supported	Not supported	Not supported	Not supported
Symposium Call Center and CTI Applications					
Symposium TAPI Service Provider	3.0	3.0	3.0	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.

Table 113
CS 1000 Release 4.5 compatibility (Part 7 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
Symposium Agent	2.3	2.3	2.3	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Symposium Agent Greeting	2.0	2.0	2.0	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Nortel Remote Agent Observe	1.0	1.0	1.0	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Meridian Link Services [MLS]	4.2, 5	4.2, 5	4.2, 5	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.

Table 113
CS 1000 Release 4.5 compatibility (Part 8 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
Symposium Express Call Center [SECC]	4.2	4.2	4.2	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Symposium Call Center Server [SCCS] incl. Symposium Web Client	4.2, 5	4.2, 5	4.2, 5	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Symposium Web Centre Portal [SWCP]	4.0	4.0	4.0	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
CTI.next (Nortel Communications Control Toolkit)	5.0	5.0	5.0	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Periphonics IVR Applications					

Table 113
CS 1000 Release 4.5 compatibility (Part 9 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
Periphonics IVR (VPS/is)	5.x	5.4.2	5.4.2	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Periphonics Integrated Package for Meridian Link (IPML) – VPS/is and MPS 100	2.0.4, 2.0.5	2.0.4, 2.0.5	2.0.4, 2.0.5	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Periphonics Multimedia Processing Server (MPS) 100	1.0	1.0	1.0	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Periphonics Multimedia Processing Server - MPS 500, MPS 1000	2.1	2.1	2.1	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.

Table 113
CS 1000 Release 4.5 compatibility (Part 10 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
Periphonics Integrated Package for Meridian Link (IPML) – MPS 500, MPS 1000	2.1	2.1	2.1	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Business Communication Manager					
Business Communications Manager	3.5, 3.6, 3.7	3.5, 3.6, 3.7	3.5, 3.6, 3.7	3.5, 3.6, 3.7, BCM50 R1.0	SRG505
MIXX Portfolio					
Integrated Call Assistant (MICA)	1.5	1.5	1.5	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Nortel Integrated Conference Bridge (NNICB)	2.1, 3.0x, 4.0	2.1, 3.0x, 4.0	2.1, 3.0x, 4.0	2.1, 3.0x, 4.0	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.

Table 113
CS 1000 Release 4.5 compatibility (Part 11 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
Integrated Recorded Announcement (MIRAN)	2.0.16 and above	2.0.16 and above	2.0.16 and above	2.0.16 and above	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Nortel Integrated Personal Call Director	1.0.3 and above, 2.0	1.0.3 and above, 2.0)	1.0.3 and above, 2.0)	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
Integrated Voice Services (MIVS)	1.17	1.17	1.17	Support of SBO IP users via Main Office only (Normal mode). HW not supported directly on SBO unit.	Support of SRG IP users via Main Office only (Normal mode). HW not supported directly on SRG unit.
MCS					
MCS 5100	2.0, 3.0, 3.5 when GA	2.0, 3.0, 3.5 when GA	3, 3.5 when GA	3, 3.5 when GA	Not applicable
CS 2x00					
CS 2000	SN06.2, SN07, SN08, SN09	SN06.2, SN07, SN08, SN09	SN06.2, SN07, SN08, SN09	SN06.2, SN07, SN08, SN09	Not applicable
CS 2100	SE06.2, SE07, SE08, SE09	SE06.2, SE07, SE08, SE09	SE06.2, SE07, SE08, SE09	SE06.2, SE07, SE08, SE09	Not applicable

Table 113
CS 1000 Release 4.5 compatibility (Part 12 of 12)

Auxiliary Processors	Meridian 1 Options 51C, 61C, 81, 81C; CS 1000M Chassis / Cabinet, CS 1000M HG, CS 1000M SG, CS 1000M MG	CS 1000S	CS 1000E	CS 1000B	Survivable Remote Gateway SRG1.0/ SRG505
<p>Note 1: In addition to the systems and application compatibility chart above, information at a card and shelf level can be found in the Compatibility Section of <i>Product Compatibility</i> (553-3001-156).</p> <p>Note 2: It is possible for a Main Office Call Server and MG 1000B to temporarily run different software releases, provided the Main Office is running CS 1000 Release 4.5. This allows customers to add a single additional MG 1000B for CS 1000 Release 4.5 without having to upgrade their entire network of MG 1000Bs.</p> <p>Note 3: Mixed software configuration between a CS 1000 Release 4.5 Main Office and a Release 2.0 MG 1000B must be temporary.</p> <p>Note 4: Mixed software configuration between a CS 1000 Release 4.5 Main Office and a Succession 3.0 MG 1000B can be indefinite.</p> <p>Note 5: In Normal mode, IP users use the feature set of the Main Office. In Local mode, IP users use the feature set of the MG 1000B. Analog or Digital users always use the feature set of the MG 1000B.</p>					

Appendix B: Worksheets

List of worksheets

Worksheet 1: Load balancing	495
Worksheet 2: Circuit card distribution	496
Worksheet 3: Multiple appearance group assignments.	497
Worksheet 4: Station load balancing.	498
Worksheet 5: Multiple appearance group record	499
Worksheet 6: Circuit card to module assignment	500
Worksheet 7: Terminal number assignment	501
Worksheet 8: System assignment plan	502
Worksheet 9: System power consumption	503
Worksheet 10: Growth forecast.	504
Worksheet 11: Total load	505
Worksheet 12: Network loops.	506
Worksheet 13: Network loop balancing	507
Worksheet 14: IPE card calculations	508
Worksheet 15: Conference and TDS loop requirements.	509
Worksheet 16: Media Card calculation.	510
Worksheet 17: Equipment summary.	514
Worksheet 18: Network loop traffic capacity	515
Worksheet 19: Physical capacity.	516
Worksheet 20: Signaling Server calculation.	518

Worksheet 21: Real time calculation	524
Worksheet 22: Memory size	526

Introduction

The worksheets in this appendix provide examples of information required to calculate power consumption, allocate circuit cards, and do traffic and equipment engineering. However, more detailed information is required to fully engineer a system. Consult your Nortel representative and use a configuration tool, such as NNEC, to fully engineer a system.

Each traffic and equipment engineering subsection contains a worksheet with which the system engineer can assess the total system impact of a given configuration on the specified capacity. These worksheets implement the algorithms described in “Resource calculations” on [page 323](#). The result of the worksheet is a number or set of numbers, in the units of the capacity being assessed. A simplified table of capacity limits is given to provide easy determination of feasibility and the size of system required.

Worksheet 1: Load balancing

LOAD BALANCING

CUSTOMER _____ DATE _____

One sheet for the complete system.

Total system load = _____ CCS

Voice loops required = _____

IPE/PE modules required = _____

Average CCS per module = $\frac{\text{Total system load CCS}}{\text{IPE modules required}}$ = _____ CCS

Average CCS per loop = $\frac{\text{Total system load CCS}}{\text{Voice loops required}}$ = _____ CCS

LOOP NUMBER	SHELVES ASSIGNED	CCS PER LOOP	CCS PER SHELF

553-5366

Worksheet 2: Circuit card distribution

CIRCUIT CARD DISTRIBUTION

CUSTOMER _____ DATE _____

One sheet for the complete system.

Divide the total number of a card type by the total number of IPE modules to arrive at a cards-per-module number.

CARD TYPE	QUANTITY	TOTAL IPE MODULES	CARDS PER MODULE

553-5367

Worksheet 3: Multiple appearance group assignments

MULTIPLE APPEARANCE GROUP (MAG) ASSIGNMENTS

CUSTOMER _____ DATE _____

One sheet for the complete system.

LOOP #	LOOP #	LOOP #	LOOP #	LOOP #
MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN
MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN
MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN
MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN
MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN	MAG # Single-line TN Multi-line TN
CARDS Single-line _____ Multi-line _____	CARDS Single-line _____ Multi-line _____	CARDS Single-line _____ Multi-line _____	CARDS Single-line _____ Multi-line _____	CARDS Single-line _____ Multi-line _____

553-4054

Worksheet 4: Station load balancing

STATION LOAD BALANCING

CUSTOMER_____
DATE _____

One sheet required for the complete system.

Total single-line TNs to be assigned

Less number of single-line TNs assigned to MAG

- _____

Equals number of single-line TNs not in MAG

= _____

Single-line TNs not in MAG

= _____

Number of single-line TNs not in MAG

Total IPE modules

Assigned per module

Total multi-line TNs to be assigned

Less number of multi-line TNs assigned to MAG

- _____

Equals number of multi-line TNs not in MAG

= _____

Multi-line TNs not in MAG

= _____

Number of multi-line TNs not in MAG

Total IPE modules

Assigned per module

553-5372

Worksheet 5: Multiple appearance group record

MULTIPLE APPEARANCE GROUP (MAG) RECORD

CUSTOMER _____ DATE _____

One worksheet per system.

MAG NUMBER	LOOP NUMBER	DN	STATUS DESIGNATOR	TELEPHONE TYPE	DEPT.

553-4059

Worksheet 6: Circuit card to module assignment

CIRCUIT CARD TO MODULE ASSIGNMENT

CUSTOMER
DATE

One table for each IPE shelf in the system.

															TOTAL CARDS	CCS LOAD	
LOOP # MODULE #																	
Position	1	2	3	4	5	6	7	8	9	10	11	12	13	14			15
Type																	
LOOP # MODULE #																	
Position	1	2	3	4	5	6	7	8	9	10	11	12	13	14			15
Type																	
LOOP # MODULE #																	
Position	1	2	3	4	5	6	7	8	9	10	11	12	13	14			15
Type																	
LOOP # MODULE #																	
Position	1	2	3	4	5	6	7	8	9	10	11	12	13	14			15
Type																	
LOOP # MODULE #																	
Position	1	2	3	4	5	6	7	8	9	10	11	12	13	14			15
Type																	

553-5369a

Worksheet 7: Terminal number assignment

TN ASSIGNMENT RECORD

CUSTOMER _____ DATE _____

LOOP # _____ MODULE # _____ GROUP # _____

CARD POS _____

CARD POS _____

CARD POS _____

CARD TYPE _____

CARD TYPE _____

CARD TYPE _____

UNIT	DN	RTMB	CUST
0			
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			

UNIT	DN	RTMB	CUST
0			
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			

UNIT	DN	RTMB	CUST
0			
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			

DN = Directory Number, RTMB = Route Member Number (trunks)

553-5368

Worksheet 8: System assignment plan

SYSTEM ASSIGNMENT PLAN
CUSTOMER _____ DATE _____
One sheet for each equipment voice loop.

LOOP #:

GROUP #:

Modules equipped

Trunks working

Trunks equipped

Consoles

DTRs

Single-line TNs

Multi-line TNs

MAGs assigned

Load capacity

RECOMMENDED ASSIGNMENT PLAN

553-5370

Worksheet 9: System power consumption

SYSTEM POWER CONSUMPTION WORKSHEET

Module	Quantity		Module power consumption		Total module power consumption
NT4N41	_____	X	53.5	=	_____
NT5D21	_____	X	260	=	_____
NT6D44	_____	X	240		_____
NT6D60	_____	X	260	=	_____
NT8D35	_____	X	240	=	_____
NT8D37	_____	X	460	=	_____
Pedestals	_____	X	50	=	_____
Total real power (watts)				=	_____

Current drain

AC system:

$$\frac{\text{(total real power)}}{\text{(nominal AC voltage)} \quad 208} = \text{_____ amperes, AC}$$

DC system:

$$\frac{\text{(total real power)}}{\text{(nominal AC voltage)} \quad 52} = \text{_____ amperes, DC}$$

Complex (or apparent power) (AC only):

$$\frac{\text{(total real power)}}{\text{(power factor)} \quad 0.6} = \text{_____ volt-amperes (VA)}$$

553-AAA1661

Worksheet 10: Growth forecast

GROWTH FORECAST

CUSTOMER _____

DATE _____

One sheet for each customer and one sheet for the system as a whole.

	CUTOVER	2-YR	5-YR	CCS/T
CONSOLES				
TELEPHONES:				
Single-line TNs				
Multi-line TNs				
TRUNKS:				
2-way				
1-way in				
1-way out				
IP Peer Virtual Trunks				
- SIP				
- H.323				
DID				
TIE				
CCSA				
InWATS				
OutWATS				
FX				
Private line				
Dial dictation				
Paging				
RAN				
AIOD (Automatic ID				
DTOutward Dialing)				
E&M 2W				
E&M 4W				

Line CCS/T _____

Total trunk CCS/T _____

Intra-CCS/T _____

553-AAA2159

Worksheet 11: Total load**LINE, TRUNK, AND CONSOLE USAGE**

CUSTOMER _____ DATE _____

One sheet for each customer for cutover, 2-year, and 5-year interval.

One sheet for the system cutover, 2-year, and 5-year interval.

LINE USAGE:

Single-line TNs _____ X _____ CCS/T = _____ CCS

Multi-line TNs _____ X _____ CCS/T = _____ CCS

TOTAL LINE LOAD = _____ CCS

TRUNK USAGE:

Trunk route	Number of TNs accessing route	CCS/T per trunk route	Total CCS load per trunk route	
_____	_____	X _____	= _____	CCS
_____	_____	X _____	= _____	CCS
_____	_____	X _____	= _____	CCS
_____	_____	X _____	= _____	CCS
_____	_____	X _____	= _____	CCS
_____	_____	X _____	= _____	CCS
_____	_____	X _____	= _____	CCS

TOTAL TRUNK LOAD = _____ CCS

CONSOLE USAGE:

Number of consoles _____ X 30 CCS = _____ TOTAL CONSOLE LOAD

DIGITONE RECEIVERS:

Table _____ Number of DTRs _____ TOTAL DTR LOAD _____ CCS

TOTAL LOAD _____ CCS

553-4042

Worksheet 12: Network loops

NETWORK LOOP CALCULATION

CUSTOMER _____ DATE _____

One sheet for each customer. One sheet for the complete system.

	Total load	CCS per load	Number of loops	Round to next highest number
Cutover	_____ ÷ _____	_____	= _____	_____
2-year	_____ ÷ _____	_____	= _____	_____
5-year	_____ ÷ _____	_____	= _____	_____

Number of network loops required at 2 years = _____

Number of network groups required at 2 years (use table below) = _____

Number of network groups	Maximum number of voice loops	Without Digitone trunks 744/560 CCS/loop	With Digitone trunks 720/540 CCS/loop
1	28	20 832 / 15 680	20 160 / 15 120
2	56	41 664 / 31 360	40 320 / 30 240
3	84	62 496 / 47 040	60 480 / 45 360
4	112	83 328 / 62 720	80 640 / 60 480
5	140	104 160 / 78 400	100 800 / 75 600
6	168	124 992 / 94 080	120 960 / 90 720
7	196	145 824 / 109 760	141 120 / 105 840
8	224	166 656 / 125 440	161 280 / 120 960

Note 1: The table above is based on an 85 percent utilization level.

For superloops, the *maximum* CCS/loop is 875 without Digitone trunks, 848 with Digitone trunks. Using the 85 percent utilization level, the CCS/loop is 744 without Digitone trunks, 720 with Digitone trunks.

For regular loops, the *maximum* CCS/loop is 660 without Digitone trunks, 560 with Digitone trunks. Using the 85 percent utilization level, the CCS/loop is 560 without Digitone trunks, 540 with Digitone trunks.

Note 2: At high traffic levels the CPU capacity needs to be calculated to determine whether there is sufficient capacity to process the given load.

553-AAA5361

Worksheet 13: Network loop balancing

BALANCING NETWORK LOOPS OVER NETWORK GROUPS
CUSTOMER _____ DATE _____
One sheet for the complete system.

CUSTOMER	NETWORK GROUP 0	NETWORK GROUP 1	NETWORK GROUP 2	NETWORK GROUP 3	NETWORK GROUP 4	NETWORK GROUP 5	NETWORK GROUP 6	NETWORK GROUP 7

553-AAA0359

Worksheet 15: Conference and TDS loop requirements

CONFERENCE AND TDS LOOP REQUIREMENTS

CUSTOMER _____ DATE _____

One sheet for the complete system.

CONFERENCE LOOP REQUIREMENTS:

Conference loops are provisioned according to the 2-year network loop requirements.

Conference loops required = _____

tone AND DIGIT LOOP REQUIREMENTS:

Tone and digit loops are provisioned according to the 2-year network loop requirements.

Tone and digit loops required = _____

553-4046

Worksheet 16: Media Card calculation

Input constants	Input configuration data
R_I – intraoffice calls ratio	Number of analog telephones
R_T – tandem calls ratio	Number of digital telephones
I – incoming calls to total calls ratio	Number of IP Phones
O – outgoing calls to total calls ratio	Number of DECT telephones
P – IP calls to total calls ratio	Number of SIP Virtual Trunks (estimated)
V – Virtual Trunk calls to total trunk calls ratio	Number of H.323 Virtual Trunks (estimated)
v_S – SIP Virtual Trunk calls to total Virtual Trunk calls ratio	
v_H – H.323 Virtual Trunk calls to total Virtual Trunk calls ratio	
r_{CON} – Conference loop to traffic loop ratio	
Hold time in seconds (AHT_{XX}) for telephone to telephone, trunk to trunk, telephone to trunk, trunk to telephone	

Worksheet 16a

Media Card calculation procedure (Part 1 of 3)

Item	Calculation formula
(1) TDM telephone CCS	= (Number of analog telephones + Number of digital telephones) × _____ CCS/telephone
(2) IP telephone CCS	= Number of IP telephones × _____ CCS/telephone
(3) DECT telephone CCS	= Number of DECT telephones × _____ CCS/telephone
(4) Total line CCS	= (1) + (2) + (3)

Worksheet 16a**Media Card calculation procedure (Part 2 of 3)**

Item	Calculation formula
(5) TDM trunk CCS	= Number of TDM trunks × ____ CCS/trunk
(6) SIP Virtual Trunk CCS	= Number of SIP Virtual Trunks × ____ CCS/trunk
(7) H.323 Virtual Trunk CCS	= Number of H.323 Virtual Trunks × ____ CCS/trunk
(8) Total trunk CCS	= (5) + (6) + (7)
(9) Total system CCS (T_{CCS})	= (4) + (8)
(10) Weighted average holding time (WAHT)	= $(R_I \times AHT_{SS}) + (R_T \times AHT_{TT}) + (I \times AHT_{TS}) + (O \times AHT_{ST})$
(11) Total calls (T_{CALL})	= $0.5 \times T_{CCS} \times 100 \div WAHT$
(12) Calls requiring DSP resources (C_{DSP})	= (a) + (b) + (c) + (d) + (e) + (f)
— (a) Intraoffice IP-TDM telephone calls	= $T_{CALL} \times R_I \times 2 \times P \times (1 - P)$
— (b) Tandem VT-TDM trunk calls	= $T_{CALL} \times R_T \times 2 \times V \times (1 - V)$
— (c) IP telephone to TDM trunk calls	= $T_{CALL} \times O \times P \times (1 - V)$
— (d) TDM telephone to VT calls	= $T_{CALL} \times O \times (1 - P) \times V$
— (e) VT trunk to TDM telephone calls	= $T_{CALL} \times I \times V \times (1 - P)$
— (f) TDM trunk to IP telephone calls	= $T_{CALL} \times I \times (1 - V) \times P$
(13) DSP CCS (CCS_{DSP})	= $C_{DSP} \times WAHT \div 100$
(14) Number of Media Cards required for general traffic	= $CCS_{DSP} \div 794$
(15) DSP channels for Conference	= Total number of telephones × P × r_{CON} × 0.4

Worksheet 16a
Media Card calculation procedure (Part 3 of 3)

Item	Calculation formula
(16) DSP channels for applications	= (a) + (b) + (c) + (d) + (e) + (f) + (g) + (h)
— (a) CallPilot	= Number of CallPilot ports × P
— (b) MIRAN	= Number of MIRAN ports × P
— (c) MICB	= Number of MICB ports × P
— (d) MIPCB	= Number of MIPCB ports × P
— (e) MICA	= Number of MICA ports × P
— (f) MIVS	= Number of MIVS ports × P
— (g) BRI	= Number of SILC cards × 16 × P
— (h) Agent greeting ports	= Number of Agent greeting ports × P
(17) Total DSP channels	= [(14) × 32] + (15) + (16)
(18) Total Media Cards	= Roundup((17) ÷ 32)

Worksheet 16b
Virtual Trunk calculation

Call type	Calculation formula
(1) Virtual Trunk calls (C_{VT})	(a) + (b) + (c) + (d) + (e) + (f)
— (a) Tandem VT to TDM trunk calls	$T_{CALL} \times R_T \times 2 \times V \times (1 - V)$
— (b) IP to VT calls	$T_{CALL} \times O \times P \times V$
— (c) TDM telephone to VT calls	$T_{CALL} \times O \times (1 - P) \times V$
— (d) VT to TDM telephone calls	$T_{CALL} \times I \times V \times (1 - P)$
— (e) VT to IP telephone calls	$T_{CALL} \times I \times V \times P$
— (f) Tandem VT (H.323) to VT (SIP) calls	$T_{CALL} \times R_T \times V^2 \times v_H \times v_S \times 2 \times 2$
(2) SIP Virtual Trunk calls	$C_{VT} \times v_S$
(3) H.323 Virtual Trunk calls	$C_{VT} \times v_H$
(4) Virtual Trunk CCS (CCS_{VT})	$C_{VT} \times WAHT \div 100$
(5) Number of Virtual Trunks	$\text{Roundup}(CCS_{VT} \div 794 \times 32)$
(6) Virtual Trunk traffic in erlangs	$\text{Roundup}(CCS_{VT} \div 36)$ use this for LAN/WAN bandwidth calculation
Note: If the calculated number of Virtual Trunks differs significantly from the original estimated number of Virtual Trunks (> 20%), Nortel recommends using the calculated Virtual Trunk number and repeating the calculation procedure to yield a more accurate number for required Media Cards and Virtual Trunks.	

Worksheet 17: Equipment summary

EQUIPMENT SUMMARY

CUSTOMER _____ DATE _____

One sheet for the complete system.

	QUANTITY	BASED ON
Line and trunk cards		Cutover
DTR loops		2 year
Unprotected memory cards		2 year
Protected memory cards		2 year
Conference loops		2 year
TDS loops		2 year
CPU's		Cutover
IPE modules		2 year
Network loops		2 year
(except conference and TDS)		
Network groups		2 year
Voice Gateway Media Cards		2 year
Signaling Servers		2 year
Application cards		2 year

553-AAA2160

Worksheet 18: Network loop traffic capacity

Column A		Column B (Loops)
TDS/CON Loops	One card (2 loops) per Network Module*	_____
BLOCKING:		
XNET Loop	Admin. Telephones _____ $\times 6 =$ _____ CCS	
	Non-ACD trunks + _____ $\times 26 =$ _____ CCS	
	Subtotal = _____ $\div 875 =$ _____ (N _{0x})	
NON_BLOCKING:		
XNET	Agent Telephones _____	
	Supervisor + _____	
	Telephones _____	
	ACD Analog and RAN Trunks _____	
	+ _____	
	Subtotal = _____ $\div 30 =$ _____ (N ₁)	
DTI Trunks	= _____ $\div 24 =$ _____ (N _{2d})	
PRI Trunks	_____	
	+ 2	
	= _____ $\div 24 =$ _____ (N _{2p})	
Music Ports	= _____ $\div 30 =$ _____ (N ₃₁)	
Applications	_____ $\div 24 =$ _____ (N ₃₂)	
Total loops (Sum of entries under column B)		= _____ (N _L)
Note: Round up all calculations to the next integer.		
*Iterative procedure may be needed if the number of network modules required was not correctly estimated at the outset.		
Conclusion:		
N _L <= 16 use CS 1000M HG/Meridian 1 PBX 51C		
16 < N _L <= 32 use CS 1000M SG/Meridian 1 PBX 61C/Meridian 1 PBX 61C CP PIV		
32 < N _L <= 160 use CS 1000M MG/Meridian 1 PBX 81C		
160 < N _L < 256 use CS 1000M MG//Meridian 1 PBX 81C CP PIV		

Worksheet 19: Physical capacity

The system type is determined by its required capacity. In general, for smaller systems (CS 1000M HG/Meridian 1 PBX 51C and CS 1000M SG/Meridian 1 PBX 61C/Meridian 1 PBX 61C CP PIV), the capacity limit is the number of loops (see Worksheet 18: "Network loop traffic capacity" on [page 515](#)), not the number of card slots.

Worksheet 19a

Card slot calculation (Part 1 of 2)

	Column A (Loop/card)	Column B (Slots)
TDS/CON	One/Network Module*	=_____
MUSic Loop	One TDS/CON provides one MUSic	=____(N ₃₁)
NT8D04 XNET	Blocking Loops _____(N _{0x}) Non-blocking Loops + _____(N ₁) Subtotal = _____ ÷ 4	=____(S _x)
NT5D12 DDP	2 DTI/PRI loops per slot	
NT5D97 DDP2	2 DTI2/PRI2 loops per slot	
NT6D80 MSDL	4 DCH ports or SDI ports per slot	
NT1P61 FNET	1 superloop per slot	
NT5D64 MCR	1 superloop per slot	
NTRB53 Clock Controller	1 slot per system	
I/O cards**	Must be $\geq S_x$	=_____
QPC720 DTI/PRI	= $2 \times N_2$, if no NT8D35 module; else = 0	=_____
Total # of card slots (sum of entries under column B)		=____(S _c)

Worksheet 19a**Card slot calculation (Part 2 of 2)**

Column A (Loop/card)	Column B (Slots)
Conclusion: $S_c \leq 7$ use CS 1000M HG/Meridian 1 PBX 51C $7 < S_c \leq 16$ use CS 1000M SG/Meridian 1 PBX 61C/Meridian 1 PBX 61C CP PIV $16 < S_c$ use CS 1000M MG/Meridian 1 PBX 81C/Meridian 1 PBX 81C CP PIV	
<p>Note: Round up all calculations to the next integer. Set negative loop numbers to zero.</p> <p>* Iterative procedure may be needed, if the number of modules to use was not clear at the outset.</p> <p>** Refer to Table 5 on page 79 to find the number of I/O cards needed for applications.</p>	

Worksheet 20: Signaling Server calculation

User input (modified if necessary from previous calculations)

Number of IP Phones in the system (IPL)	_____
Number of Virtual Trunks	_____
- Number of SIP Virtual Trunks	_____
- Number of H.323 Virtual Trunks	_____
Number of calls involving at least one IP telephone(C_{IP})	_____
Number of calls involving Virtual Trunks (C_{VT})	_____
Endpoints served by this NRS (NRE)	_____
Number of NRS entries (CDP + UDP + ...) (NRD)	_____
Virtual Trunks from other endpoints served by this NRS (VT_{NET})	_____
NRS alternate (NRA)	Yes/No
TPS redundancy required (TPSA)	Yes/No
H.323 Gateway alternate (GWA)	Yes/No
SIP Gateway alternate (GSA)	Yes/No
PD/CL/RL feature available to IP telephones	Yes/No
PD/CL/RL feature sharing database with other traffic	Yes/No

Worksheet 20
Signaling Server calculations (Part 1 of 5)

Item	Calculation
(1) Signaling Server for PD/CL/RL database (SSDB)	= a if no PD/CL/RL feature = b if yes on feature, and sharing functions = c if yes on feature, and a stand-alone database
(2) Network Routing Service calculation (SSNR)	= largest of 2(a), (b), or (c) = _____
(a) Endpoints	= NRS endpoints (NRE) ÷ NRS endpoints limit $(NRE_1) = NRE \div 5000$ = _____
(b) Dial plan entries	= Dial plan entries (NRD) ÷ NRS endpoints limit $(NRD_1) = NRD \div 20\,000$ = _____
(c) Calls per hour $NRC_{NET} = VT_{NET} \times (CCS \text{ per VT}) \times 100 \div WAHT \div 2 = \text{_____}$ $SIP \text{ calls} = (\text{Number of SIP Virtual Trunks}) \times (CCS \text{ per VT}) \times 100 \div WAHT = \text{_____}$ $H.323 \text{ calls} = (\text{Number of H.323 Virtual Trunks}) \times (CCS \text{ per VT}) \times 100 \div WAHT = \text{_____}$	= [Local calls (NRC_0) + Network calls (NRC_{NET})] ÷ NRS calls per hour limit (NRC_{HL}) $= [SIP \text{ calls} + (1.5 \times H.323 \text{ calls}) + NRC_{NET}] \div 100\,000$ = _____
Signaling Server requirement for NRS (SSNW) If NRS is in a dedicated Signaling Server, round up SSNR before proceeding.	= ROUNDUP(SSNR) × NRA (= 2 if true; else = 1) = _____

Worksheet 20
Signaling Server calculations (Part 2 of 5)

Item	Calculation
(3) Terminal Proxy Server calculation (SSTR)	= larger of 3(a), (b), or (c) = _____
(a) If SSDB = a or c	$= \text{IPL} \div \text{IPL}_{\text{SL}} = \text{IPL} \div 5000$ $= \underline{\hspace{2cm}}$
(b) If SSDB = b <ul style="list-style-type: none"> If $\text{IPL} \leq 1000$ If $\text{IPL} > 1000$ 	$= \text{IPL} \div \text{IPL}_{\text{DB}} = \text{IPL} \div 1000 = \underline{\hspace{2cm}}$ $= 1 + [(\text{IPL} - \text{IPL}_{\text{DB}}) \div \text{IPL}_{\text{SL}}]$ $= 1 + [(\text{IPL} - 1000) \div 5000] = \underline{\hspace{2cm}}$
(c) IP calls	$= \text{IPC} \div \text{IPC}_{\text{HL}} = \text{C}_{\text{IP}} \div 15\,000$ $= \underline{\hspace{2cm}}$
Signaling Server requirement for TPS (SSTW) If TPS is in a dedicated Signaling Server, round up SSTR before proceeding.	$= \text{ROUNDUP}(\text{SSTR}) + \text{TPSA} (= 1 \text{ if true; else } = 0)$ $= \underline{\hspace{2cm}}$
(4) H.323 Gateway calculation (SSHR)	= larger of 4(a) or (b) = _____
(a) H.323 Virtual Trunks	$= \text{HVT} \div \text{HVT}_{\text{SL}} = \text{HVT} \div 1200$ $= \underline{\hspace{2cm}}$
(b) H.323 calls	$= \text{C}_{\text{VT}} \div \text{HVTC}_{\text{HL}} = \text{C}_{\text{VT}} \div 18\,000$ $= \underline{\hspace{2cm}}$
Signaling Server requirement for H.323 Gateway (SSHW) If H.323 Gateway is in a dedicated Signaling Server, round up SSHR before proceeding.	$= \text{ROUNDUP}(\text{SSHR}) \times \text{GWA} (= 2 \text{ if true; else } = 1)$ $= \underline{\hspace{2cm}}$

Worksheet 20
Signaling Server calculations (Part 3 of 5)

Item	Calculation
(5) SIP Gateway calculation (SSSR)	= larger of 5(a) or (b) = _____
(a) SIP Virtual Trunks	$= SVT \div SVT_{SL} = SVT \div 1800$ $= \underline{\hspace{2cm}}$
(b) SIP calls	$= C_{VT} \div SVTC_{HL} = C_{VT} \div 27\,000$ $= \underline{\hspace{2cm}}$
Signaling Server requirement for SIP Gateway (SSSW) If SIP Gateway is in a dedicated Signaling Server, round up SSSR before proceeding.	$= \text{ROUNDUP}(\text{SSSR}) \times \text{GSA} \text{ (= 2 if true; else = 1)}$ $= \underline{\hspace{2cm}}$
(6) Total Signaling Server requirements (SST)	= evaluate in order,
(a) If $(\text{SSNR} + \text{SSTR} + \text{SSHR} + \text{SSSR}) < 1$	$= \text{ROUNDUP}(\text{SSNR} + \text{SSTR} + \text{SSHR} + \text{SSSR}) +$ $(1 \text{ if NRA, GWA, GSA, or TPSA true; else } 0) + (1 \text{ if SSDB = c; else } 0)$
(b) If $(\text{SSTR} + \text{SSHR} + \text{SSSR}) < 1$ and $(\text{SSNR} + \text{SSTR} + \text{SSHR} + \text{SSSR}) > 1$	$= \text{SSNW} + [\text{ROUNDUP}(\text{SSTR} + \text{SSHR} + \text{SSSR})$ $\times (2 \text{ if GWA, GSA, or TPSA true; else } 1)] + (1 \text{ if SSDB = c; else } 0)$
(c) If $(\text{SSNR} + \text{SSHR} + \text{SSSR}) < 1$ and $(\text{SSNR} + \text{SSTR} + \text{SSHR} + \text{SSSR}) > 1$	$= \text{SSTW} + [\text{ROUNDUP}(\text{SSNR} + \text{SSHR} + \text{SSSR})$ $\times (2 \text{ if NRA, GWA, or GSA true; else } 1)] + (1 \text{ if SSDB = c; else } 0)$
(d) If $(\text{SSTR} + \text{SSNR} + \text{SSSR}) < 1$ and $(\text{SSNR} + \text{SSTR} + \text{SSHR} + \text{SSSR}) > 1$	$= \text{SSHW} + [\text{ROUNDUP}(\text{SSTR} + \text{SSNR} + \text{SSSR})$ $\times (2 \text{ if NRA, GSA, or TPSA true; else } 1)] + (1 \text{ if SSDB = c; else } 0)$
(e) If $(\text{SSTR} + \text{SSNR} + \text{SSHR}) < 1$ and $(\text{SSNR} + \text{SSTR} + \text{SSHR} + \text{SSSR}) > 1$	$= \text{SSSW} + [\text{ROUNDUP}(\text{SSTR} + \text{SSNR} + \text{SSHR})$ $\times (2 \text{ if NRA, GWA, or TPSA true; else } 1)] + (1 \text{ if SSDB = c; else } 0)$

Worksheet 20
Signaling Server calculations (Part 4 of 5)

Item	Calculation
[If the process reaches this step, it means that $(SSGR + SSTR + SSHR + SSSR) > 1$ and also that there is no combination of three functions that can share one Signaling Server. The algorithm continues by evaluating whether there are combinations of two functions that can share a Signaling Server.]	
(f) If $(SSNR + SSTR) < 1$ and $(SSHR + SSSR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$	$= [\text{ROUNDUP}(SSNR + SSTR) \times (2 \text{ if NRA or TPSA true; else } 1)] + [\text{ROUNDUP}(SSHR + SSSR) \times (2 \text{ if GWA or GSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$
(g) If $(SSNR + SSHR) < 1$ and $(SSTR + SSSR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$	$= [\text{ROUNDUP}(SSNR + SSHR) \times (2 \text{ if NRA or GWA true; else } 1)] + [\text{ROUNDUP}(SSTR + SSSR) \times (2 \text{ if TPSA or GSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$
(h) If $(SSNR + SSSR) < 1$ and $(SSTR + SSHR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$	$= [\text{ROUNDUP}(SSNR + SSSR) \times (2 \text{ if NRA or GSA true; else } 1)] + [\text{ROUNDUP}(SSTR + SSHR) \times (2 \text{ if TPSA or GWA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$
(i) If $(SSTR + SSHR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$	$= [\text{ROUNDUP}(SSNR) \times (2 \text{ if NRA true; else } 1)] + [\text{ROUNDUP}(SSSR) \times (2 \text{ if GSA true; else } 1)] + [\text{ROUNDUP}(SSTR + SSHR) \times (2 \text{ if TPSA or GWA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$
(j) If $(SSNR + SSTR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$	$= [\text{ROUNDUP}(SSHR) \times (2 \text{ if GWA true; else } 1)] + [\text{ROUNDUP}(SSSR) \times (2 \text{ if GSA true; else } 1)] + [\text{ROUNDUP}(SSNR + SSTR) \times (2 \text{ if NRA or TPSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$
(k) If $(SSNR + SSHR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$	$= [\text{ROUNDUP}(SSTR) + (1 \text{ if TPSA true; else } 0)] + [\text{ROUNDUP}(SSSR) \times (2 \text{ if GSA true; else } 1)] + [\text{ROUNDUP}(SSNR + SSHR) \times (2 \text{ if NRA or GWA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$

Worksheet 20
Signaling Server calculations (Part 5 of 5)

Item	Calculation
(l) If $(SSNR + SSSR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$	$= [\text{ROUNDUP}(SSTR) + (1 \text{ if TPSA true; else } 0)] +$ $[\text{ROUNDUP}(SSHR) \times (2 \text{ if GWA true; else } 1)] +$ $[\text{ROUNDUP}(SSNR + SSSR) \times (2 \text{ if NRA or GSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$
(m) If $(SSTR + SSSR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$	$= [\text{ROUNDUP}(SSNR) \times (2 \text{ if NRA true; else } 1)] +$ $[\text{ROUNDUP}(SSHR) \times (2 \text{ if GWA true; else } 1)] +$ $[\text{ROUNDUP}(SSTR + SSSR) \times (2 \text{ if TPSA or GSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$
(n) If $(SSHR + SSSR) < 1$ and $(SSGR + SSTR + SSHR + SSSR) > 1$	$= [\text{ROUNDUP}(SSNR) \times (2 \text{ if NRA true; else } 1)] +$ $\text{ROUNDUP}(SSTR) + (1 \text{ if TPSA true; else } 0) +$ $[\text{ROUNDUP}(SSHR + SSSR) \times (2 \text{ if GWA or GSA true; else } 1)] + (1 \text{ if SSDB} = c; \text{ else } 0)$
If the scenario has not fallen into any of the above 14 cases, it is not possible to share Signaling Server functions. Use the following equation to calculate the total Signaling Server requirement (SST):	$= \text{ROUNDUP}(SSNW + SSTW + SSHW + SSSW)$ $+ (1 \text{ if SSDB} = c; \text{ else } 0)$ <p>where:</p> $SSNW = SSNR(\text{ROUNDUP if dedicated}) +$ $[\text{ROUNDUP}(SSNR) \times (1 \text{ if NRA true; else } 0)]$ $SSTW = SSTR(\text{ROUNDUP if dedicated}) + (1 \text{ if TPSA true; else } 0)$ $SSHW = SSHR(\text{ROUNDUP if dedicated}) +$ $[\text{ROUNDUP}(SSHR) \times (1 \text{ if GWA true; else } 0)]$ $SSSW = SSSR(\text{ROUNDUP if dedicated}) +$ $[\text{ROUNDUP}(SSSR) \times (1 \text{ if GSA true; else } 0)]$

Worksheet 21: Real time calculation

Worksheet 21

Real time calculation with IP/VT applications (Part 1 of 2)

Input constants	Input configuration data
From Worksheet for DSP calculation	
Total calls (TCALL)	$= 0.5 \times TCCS \times 100 \div WAHT$
Intraoffice IP-IP calls	$= TCALL \times R_I \times P^2$
Penetration factor pf1	$= R_I \times P^2$
Intraoffice IP-TDM calls	$= TCALL \times R_I \times 2 \times P \times (1 - P)$
Penetration factor pf2	$= R_I \times 2 \times P \times (1 - P)$
Intraoffice TDM-TDM calls	$= TCALL \times R_I \times (1 - P)^2$
Penetration factor pf3	$= R_I \times (1 - P)^2$
Tandem VT - TDM calls	$= TCALL \times R_T \times 2 \times V \times (1 - V)$
Penetration factor pf4	$= R_T \times 2 \times V \times (1 - V)$
Tandem TDM - TDM calls	$= TCALL \times R_T \times (1 - V)^2$
Penetration factor pf5	$= R_T \times (1 - V)^2$
IP telephone- VT calls	$= TCALL \times O \times P \times V$
Penetration factor pf6	$= O \times P \times V$
IP telephone- TDM calls	$= TCALL \times O \times P \times (1 - V)$
Penetration factor pf7	$= O \times P \times (1 - V)$
TDM telephone- VT calls	$= TCALL \times O \times (1 - P) \times V$
Penetration factor pf8	$= O \times (1 - P) \times V$
TDM telephone- TDM trunk calls	$= TCALL \times O \times (1 - P) \times (1 - V)$
Penetration factor pf9	$= O \times (1 - P) \times (1 - V)$

Worksheet 21**Real time calculation with IP/VT applications (Part 2 of 2)**

Input constants	Input configuration data
VT to TDM telephone calls	$= \text{TCALL} \times I \times V \times (1 - P)$
Penetration factor pf10	$= I \times V \times (1 - P)$
VT -IP telephone calls	$= \text{TCALL} \times I \times V \times P$
Penetration factor pf11	$= I \times V \times P$
TDM trunk - IP telephone calls	$= \text{TCALL} \times I \times (1 - V) \times P$
Penetration factor pf12	$= I \times (1 - V) \times P$
TDM trunk - TDM telephone calls	$= \text{TCALL} \times I \times (1 - V) \times (1 - P)$
Penetration factor pf13	$= I \times (1 - V) \times (1 - P)$
Weighted average penetration factor (PF)	$= (f1 \times pf1) + (f2 \times pf2) + \dots + (f12 \times pf12) + (f13 \times pf13)$
Error term (basic features: forward/transfer/conference /waiting)	0.2
Symposium real time impact (EBCsym)	$= \text{Symposium calls} \times 5.74$
CallPilot real time impact (EBCcp)	$= \text{CallPilot calls} \times 1.66$
System real time EBC (System EBC)	$= \text{TCALL} \times (1 + \text{PF} + \text{error term}) + \text{EBC}_{\text{SYM}} + \text{EBC}_{\text{CP}} + \text{EBC (other major applications)}$
CPU utilization in %	$= \text{System EBC} \div 1\,006\,000 \times 100$ for CP PIV
CP PIV, CPP, CP4, or CP3	or $= \text{System EBC} \div 315\,000 \times 100$ for CPP
	or $= \text{System EBC} \div 100\,800 \times 100$ for CP4
	or $= \text{System EBC} \div 72\,000 \times 100$ for CP3

Worksheet 22: Memory size

Software Release: _____

There are four steps required to evaluate memory requirements:

- 1 “PDS calculation” on [page 527](#)
- 2 “UDS calculation” on [page 533](#)
- 3 “Computing memory used” on [page 539](#)
- 4 “Determining whether system memory is adequate” on [page 539](#)

PDS calculation

Worksheet 22a

Memory size (in SL-1 words) (Part 1 of 6)

Feature	Usage	×	PDS factor*	=	Memory**
Fixed Address Globals	1	×	_____	=	_____
500/2500 telephones***		×	_____	=	_____
M2006 telephones***					
M2216/2616 telephones***					
M2317 telephones***					
M3900 telephones					
M3901 telephones					
M3902 telephones					
M3903 telephones					
ACD telephones					
Consoles					
Add-on Modules					
Templates					
Displays					
DS/VMS Access TNs:					
— Meridian Mail Ports					
— Data Only Ports					
*From Table 50 on page 253 .					
**One SL-1 data word uses 4 bytes of memory.					
***See "Protected Memory for Phone Sets: Detail" on page 541 .					

Worksheet 22a
Memory size (in SL-1 words) (Part 2 of 6)

Feature	Usage	x	PDS factor*	=	Memory**
ISDN BRI:					
— MISP cards					
— DSLs					
— TSPs		x	_____	=	_____
— BRI Line cards		x	_____	=	_____
— Analog trunks		x	_____	=	_____
Trunk Routes:					
— Constant term	1				
— Trunk routes					
ISDN PRI/PRI2/ISL:					
— D-channels					
— PRI trunks					
— ISL trunks					
ISDN DTI/DTI2/JDMI:					
— DTI Loops					
— DTI2 Loops					
DISA DN's		x	_____	=	_____
*From Table 50 on page 253 . **One SL-1 data word uses 4 bytes of memory. ***See "Protected Memory for Phone Sets: Detail" on page 541 .					

Worksheet 22a**Memory size (in SL-1 words) (Part 3 of 6)**

Feature	Usage	x	PDS factor*	=	Memory**
Network:					
— Groups		x	_____	=	_____
— Local Loops		x	_____	=	_____
— Remote loops		x	_____	=	_____
ODAS:					
— Meridian Mail Ports		x	_____	=	_____
— Data Only Ports		x	_____	=	_____
— Telephones (total number)		x	_____	=	_____
— Analog Trunks		x	_____	=	_____
Customers:					
— Constant Term	1	x		=	
— Number of Customers		x		=	
Tone and Digit Switch		x		=	
MF Sender		x		=	
Conference Card		x		=	
Digitone Receiver		x		=	
Tone Detector		x		=	
*From Table 50 on page 253 .					
**One SL-1 data word uses 4 bytes of memory.					
***See “Protected Memory for Phone Sets: Detail” on page 541 .					

Worksheet 22a
Memory size (in SL-1 words) (Part 4 of 6)

Feature	Usage	x	PDS factor*	=	Memory**
DN Translator:					
— DNs		x	5.8	=	_____
— ACD DNs		x	4	=	_____
— ACD Positions		x	2	=	_____
— DISA DNs		x	2	=	_____
— Consoles		x		=	_____
— Dial Intercom Groups		x	1	=	_____
DIG translator:					
— Maximum number of DIGs	_____	x	1	=	_____
— DIGs	_____	x	2	=	_____
— Number of Telephones within DIGs	_____	x	2	=	_____
Authorization Code:					
Constant Term	1	x	_____	=	_____
Authorization Codes		x	1.52	=	_____
History File	1	x		=	_____
FGD ANI Database:					
— Constant Term	1	x		=	_____
— NPA Codes		x		=	_____
*From Table 50 on page 253 .					
**One SL-1 data word uses 4 bytes of memory.					
***See "Protected Memory for Phone Sets: Detail" on page 541 .					

Worksheet 22a**Memory size (in SL-1 words) (Part 5 of 6)**

Feature	Usage	x	PDS factor*	=	Memory**
CDP:					
— Constant Term	1	x	_____	=	_____
— Steering Codes		x	3	=	_____
— Route lists		x	8	=	_____
— Number of Entries in Route Lists		x	3	=	_____
CPND:					
— Trunk Routes	_____	x	1	=	_____
— Consoles	_____	x	1	=	_____
— ACD DNs	_____	x	1	=	_____
— Digital Telephones DNs	_____	x	1	=	_____
— CPND Names	_____	x	20	=	_____
— 1 digit DIG Groups	_____	x	11	=	_____
— 2 digit DIG Groups	_____	x	101	=	_____
ACD/NACD:					
— ACD DNs		x		=	
— NACD DNs		x		=	
— ACD Positions		x		=	
— ACD Agents		x	1	=	_____
— Customers		x	11	=	_____
*From Table 50 on page 253 .					
**One SL-1 data word uses 4 bytes of memory.					
***See "Protected Memory for Phone Sets: Detail" on page 541 .					

Worksheet 22a
Memory size (in SL-1 words) (Part 6 of 6)

Feature	Usage	x	PDS factor*	=	Memory**
BARS/NARS:			5884		
— Constant term	1	x	31.21	=	_____
— NPA Codes	_____	x	1.06	=	_____
— NXX Codes	_____	x	1.06	=	_____
— LOC Codes	_____	x	1.06	=	_____
— SPN Codes	_____	x	2	=	_____
— FCAS Tables	_____	x		=	_____
Total PDS Impact (add up the Memory column) _____ SL-1 words					
*From Table 50 on page 253 .					
**One SL-1 data word uses 4 bytes of memory.					
***See “Protected Memory for Phone Sets: Detail” on page 541 .					

UDS calculation

Worksheet 22b

UDS calculation (Memory in SL-1 words) (Part 1 of 6)

Feature	Usage	x	UDS factor*	=	Memory**	Reference
Fixed Addr. Globals & OVL data	1	x		=		
500/2500-type telephones		x		=		
IP Phones		x		=		
IP Softphone 2050		x		=		
M2006/2008 telephones		x		=		
M2016/2216/2616 telephones		x		=		
M2317 telephones		x		=		
M3900		x		=		
M3901		x		=		
M3902		x		=		
M3903		x		=		
M3904		x		=		
Consoles		x		=		
Add-on-Modules		x		=		
Displays		x		=		
DS/VMS access TNs						
Meridian Mail Ports		x		=		
Data Only Ports		x		=		
<p>*From Table 52 on page 262.</p> <p>**One SL-1 data word uses 4 bytes of memory.</p> <p>***Use only the last line from the Call Registers Part. Call register count should still remain below the recommended maximum for the machine type and memory type configured.</p>						

Worksheet 22b
UDS calculation (Memory in SL-1 words) (Part 2 of 6)

Feature	Usage	x	UDS factor*	=	Memory**	Reference
ISDN BRI telephones:						
— Constant Term						
— MISP boards						
— DSLs	1					
Analog Trunks:						
— RAN Trunks		x		=		
— RLA Trunks		x		=		
— RLA Trunks		x		=		
— AUTOVON Trunks		x		=		
— ADM		x		=		
— Other Analog trunks		x		=		
Trunks (CDR)		x	9	=		
BRI Trunks		x		=		
Trunk Routes:						
— Trunk Routes		x		=		
— Trunks (total)		x	0.063	=		
DTI/DTI2/JDMI:						
— DTI Loops		x		=		
— DTI2 Loops		x		=		
<p>*From Table 52 on page 262.</p> <p>**One SL-1 data word uses 4 bytes of memory.</p> <p>***Use only the last line from the Call Registers Part. Call register count should still remain below the recommended maximum for the machine type and memory type configured.</p>						

Worksheet 22b**UDS calculation (Memory in SL-1 words) (Part 3 of 6)**

Feature	Usage	x	UDS factor*	=	Memory**	Reference
PRI/PRI2:						
— D-channels (PRI)		x		=		
— D-channels (PRI2)		x		=		
— Output Request Buffers		x	5	=		
— PRI Trunks		x	2	=		
— ISL Trunks			2	=		
Teletypes:						
— Teletypes (total)		x		=		
— CDR links		x		=		
— HS Links		x		=		
— APL Links		x		=		
— PMS Links		x		=		
— Other Links		x		=		
<p>*From Table 52 on page 262.</p> <p>**One SL-1 data word uses 4 bytes of memory.</p> <p>***Use only the last line from the Call Registers Part. Call register count should still remain below the recommended maximum for the machine type and memory type configured.</p>						

Worksheet 22b
UDS calculation (Memory in SL-1 words) (Part 4 of 6)

Feature	Usage	x	UDS factor*	=	Memory**	Reference
Local Loops						
Remote Loops						
Secondary Tapes						
Customers						
Tone and Digit Switch		x				
MF Sender		x				
Conference Cards		x		=		
Digitone receiver		x		=		
Tone Detector		x		=		
Attendants		x		=		
Peripheral Signaling cards		x		=		
Background Terminals		x		=		
MSDL Cards		x		=		
LPIB		x	4	=		
HPIB (number of Groups)		x	128	=		
PBXOB (number of PS Cards)		x	640	=		
BCSOB (number of PS Cards)		x	640			
AML:						
— Constant Term		x				
— AML Links	1	x		=		
<p>*From Table 52 on page 262.</p> <p>**One SL-1 data word uses 4 bytes of memory.</p> <p>***Use only the last line from the Call Registers Part. Call register count should still remain below the recommended maximum for the machine type and memory type configured.</p>						

Worksheet 22b**UDS calculation (Memory in SL-1 words) (Part 5 of 6)**

Feature	Usage	x	UDS factor*	=	Memory**	Reference
ACD:						
— ACD DN's		x	298	=		
— ACD Positions		x	34	=		
— ACD-C: (add'l memory)						
— ACD-C routes		x	46	=		
— ACD-C Positions		x	44	=		
— ACD-C DN's		x	80	=		
— ACD-C Customers		x	240	=		
— ACD-C Trunks		x	1	=		
— ACD CRT		x	30	=		
BARS/NARS/CDP:						
— Customers		x	216	=		
— Route Lists		x	90	=		
— Routes with OHQ		x	20	=		
— NCOS defined		x	24	=		
<p>*From Table 52 on page 262.</p> <p>**One SL-1 data word uses 4 bytes of memory.</p> <p>***Use only the last line from the Call Registers Part. Call register count should still remain below the recommended maximum for the machine type and memory type configured.</p>						

Worksheet 22b

UDS calculation (Memory in SL-1 words) (Part 6 of 6)

Feature	Usage	x	UDS factor*	=	Memory**	Reference
Call Registers:						
ISDN Fact						
Number of Calls Overflowed to all Target ACD DN's (A)						
Number of Calls Overflowed to Local Target DN's (B)		x	1	=		L
Number of expected Calls overflowed from source (C)		x	2.25	=		A
Snacd+Tnacd (= A + B + C)		x	-1.8	=		B
Number of CR's (Traffic >3000)		x	0.2	=		C
Total voice loop traffic (CCS)		x	1	=		D
ACD Inc. Trunks		x	0.04	=		E
Number of CR's (= (D+E+F)*L)		x	0.18	=		F
Number of CR's (Traffic <=3000)		x	1	=		G
System equipped ports		x	0.94	=		I
ACD Inc. Trunks		x	0.06	=		J
ACD Agent Telephones		x	-0.94	=		K
Number of CRs (= (D+I+J+ K)*L)						
***Memory for Call Registers		x	1	=		
Total PDS Impact (add up the Memory column) _____ SL-1 words						
<p>*From Table 52 on page 262.</p> <p>**One SL-1 data word uses 4 bytes of memory.</p> <p>***Use only the last line from the Call Registers Part. Call register count should still remain below the recommended maximum for the machine type and memory type configured.</p>						

Computing memory used

Worksheet 22c

Memory — used Large System with NT5D10, NT5D03, CP PII, CP PIV CP cards

Memory item	x	Factor	Operation	Reference
PDS words	x	pf bytes/word	+	Notes 1 and 2
UDS words	x	pf bytes/word	+	Note 3
Code MByte	x	1024 x 1024 bytes/MByte	+	Note 4, Note 6
Patching and OS overhead MByte	x	1024 x 1024 bytes/MByte	+	Note 4
OS dynamic heap MByte	x	1024 x 1024 bytes/MByte	+	Note 4
		Sum	_____bytes	
	x	1.10		Note 5

Note 1: PDS is protected data store, as computed using Worksheet 22a: “Memory size (in SL-1 words)” on [page 527](#).

Note 2: PF is the packing factor—the number of bytes of memory occupied by a single SL-1 data word. For PBX 61C/51C, pf = 4.

Note 3: UDS is unprotected data store, as computed using Worksheet 22b: “UDS calculation (Memory in SL-1 words)” on [page 533](#).

Note 4: These fields are taken from Worksheet 17: “Equipment summary” on [page 514](#) and Worksheet 19: “Physical capacity” on [page 516](#).

Note 5: A 10% margin is included to account for differences between releases and other variations too detailed for the scope of this document.

Note 6: For CP3/CP4 processors, compute DRAM used (EPROM is for code and is not affected by user; DRAM is for data) by performing all the calculations in the table except “Code”.

Determining whether system memory is adequate

Determine the amount of system memory by using Table 47 on [page 246](#). Convert this quantity to bytes (x 1 024 x 1 024). In order for the system to have adequate memory for its feature load, the following must be true:

$$\text{Available memory} - \text{Memory used} > 0$$

Appendix C: Protected memory requirements

Contents

This section contains information on the following topics:

Introduction	541
Protected Memory for Phone Sets: Detail	541

Introduction

The memory calculations described in “Memory-related parameters” on [page 240](#) and utilized in Worksheet 22: “Memory size” on [page 526](#) are based on assumptions about typical configurations, feature usage, and traffic patterns. This section provides the information required for detailed calculations in cases where those assumptions may not apply.

Protected Memory for Phone Sets: Detail

The protected data blocks for the various telephone types use varying amounts of memory according to what keys/features are configured on the telephone. The memory requirements shown in “Memory-related parameters” on [page 240](#) show only a “typical” (as determined by looking at a sampling of sites) size for the given telephone type. The tables below can be used to arrive at a precise memory requirement if the details of the feature configurations are known. The maximum size permitted for any telephone’s protected data block is 512 words.

PBX telephones

The size of the protected line block for PBX telephones is determined from the following (sizes are in SL-1 words):

Table 114
Size of protected line block for PBX telephones (Units in SL-1 words)

Feature	SL-1 Compool Variable(s)	Units
Basic Line Block	PPBXBLOCK (words 0-23)	24
Template Area	PBX_TEMPL_AREA (words 24-511 of PPBXBLOCK)	0-487
Card Block Component	1/4 PCARDBLOCK (= 10/4)	2.50

The key layout portion of the template requires:

$$(4 + nf) \div rs \text{ words}$$

where “nf” is the number of features defined for the telephone, and “rs” is the number of telephones sharing the same template.

In addition to the basic line block, each feature requires extra data space as follows (sizes are in SL-1 words):

Table 115**Data space requirements for PBX telephone features (units in SL-1 words) (Part 1 of 2)**

Feature	SL-1 Compool Variable(s) and/or comment	Units
ACD	P_ACD_KEY_DATA	17
Associate Set (AST)		2
Authcode	.AUTH_TEMPL_SIZE = .NAUT_MAX(6) * (((.AUTH_LEN_MAX(14) - 1)>>2) + 1)	6-24
Automatic Wakeup	HM_STRUCT	8
Call Forward Number	CFW_STRUC (4-24 digits/4)	1-8
Call Park	CALL_PARK_STRUC	2
Call Party Name Display	PBX_NAME_ENTRY	1
CFCT		2
CFNA/Hunting Number	CFNA_ENTRY	4
Dial Intercom Group	PBX_DIG_STRUC	2
DN	PBX_DN_STRUC	3
EFD DN	EFD_STRUC	4
EHT DN	EHT_STRUC	4
Enhanced Hot Line DN	((Number of digits in DN) ÷ 4) + 1 : 4 – 36 digits	2-10
FAXS	FAXS_BLK	17
FFC SCP PASS	FFC_SCPW_STRUC	2
Hot Line DN	((Number of digits in DN) ÷ 4) + 1 : 4 – 36 digits	2-10
HUNT	HUNT_STRUC	4
Internal Call Forward		19

Table 115
Data space requirements for PBX telephone features (units in SL-1 words) (Part 2 of 2)

Feature	SL-1 Compool Variable(s) and/or comment	Units
Last Number Redial	Number of digits in LNR DN \div 4 : (4 – .MAX_LNR_SIZE = 32) \div 4	1-8
Manual Line		2
Message Center DN		2
Message Registration	MR_SET_METER	1
Offhook Interdigit Index	OHAS_INDEXES	1
Pretranslation Enhancement	1/2 word (for 255 calling groups)	1/2
SCI/CCOS/RMS		2
Speed Call Controller	SPEED_CALL_STRUC	1
Speed Call User	SPEED_CALL_STRUC	1
Stored Number Redial	# digits in SNR DN / 4 : (4 – .MAX_SNR_DIGITS = 32) \div 4	1-8
System Speed Call User	SPEED_CALL_STRUC	1
Tenant Number	TENANT_NUMBER	1

Digital telephones

For digital telephones, the requirement is as follows:

- $M2006 = 10 + (\text{number of non-key features}) \div rs$
- $M2008 = 10 + (\text{number of non-key features}) \div rs$
- $M2216 = 20 + 30 \times (\text{number of AOM}) + (\text{number of non-key features}) \div rs$
- $M2616 = 20 + 30 \times (\text{number of AOM}) + (\text{number of non-key features}) \div rs$
- $M2317 = 34 + (\text{number of non-key features}) \div rs$

- $M3900 = 34 + (\text{number of non-key features}) \div rs$
- $IP \text{ Phone} = 20 + (\text{number of non-key features}) \div rs$
- $IP \text{ Softphone } 2050 = 20 + (\text{number of non-key features}) \div rs$

where:

- rs is the number of telephones sharing the same template
- number of AOM is the number of add-on modules

In addition to the basic line block requirement, each feature requires extra data space as follows (units are expressed in SL-1 words):

Table 116
Data space requirements for Meridian 1 telephone features (units in SL-1 words)
(Part 1 of 6)

Feature	SL-1 Compool Variable(s), service change format, and/or comment	Units
ACD Agent and ID Key	.acd_agent p_acd_key_data KEY xx ACD xxxx(xxx)* yyyy(yyy) *(xxx) - up to 7 digs w/DNXP pkg	17
ACD Display Calls Waiting Key	acd_dwc_ext KEY xx DWC yyyy(yyy)	2
ACD Agent Key (for supervisor)	acd_agt_ext KEY xx AGT yyyy(yyy)	2
ACD Enable Interflow Key	acd_eni_ext KEY xx ENI yyyy(yyy)	2
ACD Night Service DN	acd_nsvc_struc KEY xx NSVC yyyy(yyy)	2
Associate Set (AST)	bcs_ast_struc AST xx yy	3
Authcode (non-key)	.auth_tmpl_size (6) * (((.AUTH_LEN_MAX (14) - 1)>>2)+1) AUTH n xxxx	6-24

Table 116

Data space requirements for Meridian 1 telephone features (units in SL-1 words)
(Part 2 of 6)

Feature	SL-1 Compool Variable(s), service change format, and/or comment	Units
Autodial Key	(4-32 digits/4) .max_adl_size = 31 KEY xx ADL yy (zzzz)	1-8
Busy/Forward Status Key	bfs_struct KEY xx BFS tn	1
Call Forward Key	cfw_struct : (.cfw_default (4) or (.MAX_CFW_SIZE=31 + 1)digits/4)	1-8
No Hold Conference and Autodial	(same as autodial) KEY xx CA yy zzzz	1-8
No Hold Conference and Direct Hotline	(htl_dn_size + 3 >>2) + wordoffset(bcs_hot_ter_dn) = (3:34)>>2 + 4 = 4-12 KEY xx CH D yy xxxx	4-12
No Hold Conference and Hotline List	wordoffset(bcs_hot_ter_dn) = 4 KEY xx CH L yyyy	4
No Hold Conference and Speed Call	speed_call_struct KEY xx CS yyyy	1
Dial Intercom Group Key	bcs_dig_struct KEY xx DIG xxxx yy R/V	2
DID Route Control	BCS_DRC_STRUC KEY xx DRC yy	1
Group Call Key	bcs_grcal_entry KEY xx GRC yy	1

Table 116

Data space requirements for Meridian 1 telephone features (units in SL-1 words)
(Part 3 of 6)

Feature	SL-1 Compool Variable(s), service change format, and/or comment	Units
Hotline - One Way, Two Way or Intercom	(htl_dn_size + 3 >> 2) + wordoffset(bcs_hot_ter_dn) = 3:34>>2 + 4 = 4-12 KEY xx HOT D dd yyyy(yyy) KEY xx HOT D dd num DN m KEY xx HOT D nn x...x yyyy(yyy) KEY xx HOT I dd num m	4-12
Hotline - One Way or Two Way List	wordoffset(bcs_hot_ter_dn) KEY xx HOT L bbb KEY xx HOT L bbb yyyy(yyy)	4
Internal Call Forward Key	.cfw_default (1) or ((#digs(31) - 1)/4 + 1) : max 8 .max_cfw_size=31 KEY xx ICF 4-(16)-31 xxxx	1-8
Loudspeaker	bcs_dn_struc KEY xx LSPK yyyy	4
Multiple Call Non-ringing DN Key	bcs_dn_entry KEY xx MCN yyyy(yyy)	4
Multiple Call Ringing DN Key	bcs_dn_entry KEY xx MCR yyyy(yyy)	4
Message Registration Key	mr_set_meter KEY xx MRK	1
Message Waiting Key	mwc_entry KEY xx MWK yyyy(yyy)	4
Call Park Key	call_park_struc KEY xx PRK	2
Private Line Non-ringing Key	bcs_dn_entry KEY xx PVN yyyy	4

Table 116

Data space requirements for Meridian 1 telephone features (units in SL-1 words)
(Part 4 of 6)

Feature	SL-1 Compool Variable(s), service change format, and/or comment	Units
Private Line Ringing Key	bcs_dn_entry KEY xx PVR yyyy	4
Stored Number Redial Key	.max_rdl_size (31): (1+#saved dn digs(3-31))/4 + 1 KEY xx RDL (yy)	2-8
Ringing Number Pickup Key	bcs_rnpg_entry KEY xx RNP	1
Radio Paging	bcs_dn_entry KEY xx RPAG	4
Speed Call Controller Key	speed_call_struc KEY xx SCC yyyy	1
Single Call Non-ringing DN	bcs_dn_entry KEY xx SCN yyyy	4
Single Call Ringing DN	bcs_dn_entry KEY xx SCR yyyy	4
Speed Call User Key	speed_call_struc KEY xx SCU yyyy	1
Signaling Key	bcs_dn_entry KEY xx SIG yyyy(yyy)	4
System Speed Call Controller Key	speed_call_struc KEY xx SSC yyyy	1
System Speed Call User Key	speed_call_struc KEY xx SSU uu	1
Voice Call Key	bcs_dn_entry KEY xx VCC yyyy	4
Non-key Features		

Table 116

Data space requirements for Meridian 1 telephone features (units in SL-1 words)
(Part 5 of 6)

Feature	SL-1 Compool Variable(s), service change format, and/or comment	Units
Data Equipment Mode (flex voice/data tn)	dtm_struc DEM DTE (DCE)	1
Flexible CFNA DN for External Calls	efd_struc EFD xxxx	4
Hunt DN for External Calls	eht_struc EHT xxxx	4
Flexible Call Forward No Answer	afdn_struc FDN xxxx	4
Offhook Alarm Security DN Index for Forced Out of Service	ohas_indexes FSVC (0) - 9	1
Hunt DN (chain) for Internal Calls	hunt_struc HUNT xxxx	4
Alternate Hunt DN (chain) for Internal Calls	ahnt_struc AHNT xxxx	4
Alternate Hunt DN for External Calls	aeht_struc AEHT xxxx	4
Alternate Flexible CFNA DN for External Calls	aefd_struc AEFD xxxx	4
Number of Key Lamp Strips	1 word per KLS in range KLS 1-7	1-7
Last Number Redial Size	.lnr_default(4) or ((xx+1)/4) LNRS xx (4-(16)-32)	1-8
Second DN Sharing Voice Mailbox	bcs_dn_struc SECOND_DN xxxx(xxx)	3

Table 116

Data space requirements for Meridian 1 telephone features (units in SL-1 words)
(Part 6 of 6)

Feature	SL-1 Compool Variable(s), service change format, and/or comment	Units
Station Control Password	ffc_scpw_struct SCPW xxxxx	2
Tenant	tenant_number TEN 1-511	1
Template area users for which commands are implicit or entered outside of LD 11		
Ringing Change Key	supp_features	5
Notification Key Lamp	nkl_data	1
Hospitality Data	hsp_set_data	2
Hotel/Motel Info	hm_struct	8
Campon Priorities	povr_struct	1
Sar Group	save_bcs_sgrp	1
Boss-Secretary Filtering - boss	boss_struct	3
Boss-Secretary Filtering - sec'y	sec_struct	1
Call Party Name Display	PBX_NAME_ENTRY	1
FAXS	FAXS_BLK	17
Xdata Unit Downloadable Parameters	xdata_sc_parms	2

Appendix D: Reference tables

List of tables

Trunk traffic – Erlang B with P.01 Grade-of-Service	552
Trunk traffic – Poisson 1% blocking	554
Trunk traffic – Poisson 2% blocking	556
Digitone receiver requirements – Model 1	558
Digitone receiver requirements – Model 2	559
Digitone receiver requirements – Model 3	560
Digitone receiver requirements – Model 4	561
Digitone receiver load capacity – 6 to 15 second holding time	562
Digitone receiver load capacity – 16 to 25 second holding time	565
Digitone receiver requirements – Poisson 0.1% blocking	568
Conference and TDS loop requirements	570
Digitone receiver provisioning	571

Trunk traffic – Erlang B with P.01 Grade-of-Service

Reference Table 1

Trunk traffic — Erlang B (P.01) (Part 1 of 2)

Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS
1	0.4	21	462	41	1076	61	1724	81	2387
2	5.4	22	491	42	1108	62	1757	82	2419
3	16.6	23	521	43	1140	63	1789	83	2455
4	31.3	24	550	44	1171	64	1822	84	2488
5	49.0	25	580	45	1203	65	1854	85	2520
6	68.8	26	611	46	1236	66	1886	86	2552
7	90.0	27	641	47	1268	67	1922	87	2588
8	113	28	671	48	1300	68	1955	88	2621
9	136	29	702	49	1332	69	1987	89	2653
10	161	30	732	50	1364	70	2020	90	2689
11	186	31	763	51	1397	71	2052	91	2722
12	212	32	794	52	1429	72	2088	92	2758
13	238	33	825	53	1462	73	2120	93	2790
14	265	34	856	54	1494	74	2153	94	2822
15	292	35	887	55	1526	75	2185	95	2858
16	319	36	918	56	1559	76	2221	96	2891
17	347	37	950	57	1591	77	2254	97	2923
18	376	38	981	58	1624	78	2286	98	2959
19	404	39	1013	59	1656	79	2318	99	2992
20	433	40	1044	60	1688	80	2354	100	3028

Reference Table 1
Trunk traffic — Erlang B (P.01) (Part 2 of 2)

Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS
101	3060	121	3740	141	4424	161	5119	181	5810
102	3092	122	3776	142	4460	162	5155	182	5843
103	3128	123	3809	143	4493	163	5188	183	5879
104	3161	124	3845	144	4529	164	5224	184	5915
105	3197	125	3877	145	4561	165	5260	185	5974
106	3229	126	3913	146	4597	166	5292	186	5983
107	3265	127	3946	147	4630	167	5328	187	6019
108	3298	128	3982	148	4666	168	5360	188	6052
109	3330	129	4014	149	4702	169	5396	189	6088
110	3366	130	4050	150	4738	170	5429	190	6124
111	3398	131	4082	151	4770	171	5465	191	6156
112	3434	132	4118	152	4806	172	5501	192	6192
113	3467	133	4151	153	4842	173	5533	193	6228
114	3503	134	4187	154	4874	174	5569	194	6260
115	3535	135	4219	155	4910	175	5602	195	6296
116	3571	136	4255	156	4946	176	5638	196	6332
117	3604	137	4288	157	4979	177	5670	197	6365
118	3640	138	4324	158	5015	178	5706	198	6401
119	3672	139	4356	159	5051	179	5738	199	6433
120	3708	140	4392	160	5083	180	5774	200	6469
Note: For trunk traffic greater than 6469 CCS, allow 32.35 CCS per trunk.									

Trunk traffic – Poisson 1% blocking

Reference Table 2

Trunk traffic — Poisson 1% blocking (Part 1 of 2)

Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS
1	0.4	21	426	41	993	61	1595	81	2215
2	5.4	22	453	42	1023	62	1626	82	2247
3	15.7	23	480	43	1052	63	1657	83	2278
4	29.6	24	507	44	1082	64	1687	84	2310
5	46.1	25	535	45	1112	65	1718	85	2341
6	64	26	562	46	1142	66	1749	86	2373
7	84	27	590	47	1171	67	1780	87	2404
8	105	28	618	48	1201	68	1811	88	2436
9	126	29	647	49	1231	69	1842	89	2467
10	149	30	675	50	1261	70	1873	90	2499
11	172	31	703	51	1291	71	1904	91	2530
12	195	32	732	52	1322	72	1935	92	2563
13	220	33	760	53	1352	73	1966	93	2594
14	244	34	789	54	1382	74	1997	94	2625
15	269	35	818	55	1412	75	2028	95	2657
16	294	36	847	56	1443	76	2059	96	2689
17	320	37	876	57	1473	77	2091	97	2721
18	346	38	905	58	1504	78	2122	98	2752
19	373	39	935	59	1534	79	2153	99	2784
20	399	40	964	60	1565	80	2184	100	2816

Reference Table 2
Trunk traffic — Poisson 1% blocking (Part 2 of 2)

Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS
101	2847	121	3488	141	4134	161	4786	181	5442
102	2879	122	3520	142	4167	162	4819	182	5475
103	2910	123	3552	143	4199	163	4851	183	5508
104	2942	124	3594	144	4231	164	4884	184	5541
105	2974	125	3616	145	4264	165	4917	185	5574
106	3006	126	3648	146	4297	166	4549	186	5606
107	3038	127	3681	147	4329	167	4982	187	5639
108	3070	128	3713	148	4362	168	5015	188	5672
109	3102	129	3746	149	4395	169	5048	189	5705
110	3135	130	3778	150	4427	170	5081	190	5738
111	3166	131	3810	151	4460	171	5114	191	5771
112	3198	132	3843	152	4492	172	5146	192	5804
113	3230	133	3875	153	4525	173	5179	193	5837
114	3262	134	3907	154	4557	174	5212	194	5871
115	3294	135	3939	155	4590	175	5245	195	5904
116	3326	136	3972	156	4622	176	5277	196	5937
117	3359	137	4004	157	4655	177	5310	197	5969
118	3391	138	4037	158	4686	178	5343	198	6002
119	3424	139	4070	159	4721	179	5376	199	6035
120	3456	140	4102	160	4754	180	5409	200	6068
Note: For trunk traffic greater than 6068 CCS, allow 30.34 CCS per trunk.									

Trunk traffic – Poisson 2% blocking

Reference Table 3

Trunk traffic — Poisson 2% blocking (Part 1 of 2)

Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS
1	0.4	31	744	61	1659	91	2611	121	3581
2	7.9	32	773	62	1690	92	2643	122	3614
3	20.9	33	803	63	1722	93	2674	123	3647
4	36.7	34	832	64	1752	94	2706	124	3679
5	55.8	35	862	65	1784	95	2739	125	3712
6	76.0	36	892	66	1816	96	2771	126	3745
7	96.8	37	922	67	1847	97	2803	127	3777
8	119	38	952	68	1878	98	2838	128	3810
9	142	39	982	69	1910	99	2868	129	3843
10	166	40	1012	70	1941	100	2900	130	3875
11	191	41	1042	71	1973	101	2931	131	3910
12	216	42	1072	72	2004	102	2964	132	3941
13	241	43	1103	73	2036	103	2996	133	3974
14	267	44	1133	74	2067	104	3029	134	4007
15	293	45	1164	75	2099	105	3051	135	4039
16	320	46	1194	76	2130	106	3094	136	4072
17	347	47	1225	77	2162	107	3126	137	4105
18	374	48	1255	78	2194	108	3158	138	4138
19	401	49	1286	79	2226	109	3190	139	4171
20	429	50	1317	80	2258	110	3223	140	4204
Note: For trunk traffic greater than 4533 CCS, allow 30.2 CCS per trunk.									

Reference Table 3**Trunk traffic — Poisson 2% blocking (Part 2 of 2)**

Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS	Trunks	CCS
21	458	51	1348	81	2290	111	3255	141	4237
22	486	52	1374	82	2322	112	3288	142	4269
23	514	53	1352	83	2354	113	3321	143	4302
24	542	54	1441	84	2386	114	3353	144	4335
25	571	55	1472	85	2418	115	3386	145	4368
26	562	56	1503	86	2450	116	3418	146	4401
27	627	57	1534	87	2482	117	3451	147	4434
28	656	58	1565	88	2514	118	3483	148	4467
29	685	59	1596	89	2546	119	3516	149	4500
30	715	60	1627	90	2578	120	3548	150	4533
Note: For trunk traffic greater than 4533 CCS, allow 30.2 CCS per trunk.									

Digitone receiver requirements – Model 1

Reference Table 4

Digitone receiver requirements — Model 1

Number of DTRs	Max. number of Digitone lines	DTR load (CCS)	Number of DTRs	Max. number of Digitone lines	DTR load (CCS)
2	7	2	17	1181	319
3	33	9	18	1244	336
4	69	19	19	1348	364
5	120	33	20	1455	393
6	179	49	21	1555	420
7	249	68	22	1662	449
8	332	88	23	1774	479
9	399	109	24	1885	509
10	479	131	25	1988	537
11	564	154	26	2100	567
12	659	178	27	2211	597
13	751	203	28	2325	628
14	848	229	29	2440	659
15	944	255	30	2555	690
16	1044	282			
Note: See “Step 5: Calculate Digitone receiver requirements” for Model 1 assumptions.					

Digitone receiver requirements – Model 2

Reference Table 5

Digitone receiver requirements — Model 2

Number of DTRs	Max. number of Digitone lines	DTR load (CCS)	Number of DTRs	Max. number of Digitone lines	DTR load (CCS)
2	2	2	17	843	253
3	21	7	18	920	276
4	52	15	19	996	299
5	90	27	20	1076	323
6	134	40	21	1153	346
7	183	55	22	1233	370
8	235	71	23	1316	395
9	293	88	24	1396	419
10	353	107	25	1480	444
11	416	126	26	1563	469
12	483	145	27	1650	495
13	553	166	28	1733	520
14	623	187	29	1816	545
15	693	208	30	1903	571
16	770	231			
Note: See “Step 5: Calculate Digitone receiver requirements” for Model 2 assumptions.					

Digitone receiver requirements – Model 3

Reference Table 6

Digitone receiver requirements — Model 3

Number of DTRs	Max. number of Digitone lines	DTR load (CCS)	Number of DTRs	Max. number of Digitone lines	DTR load (CCS)
2	5	2	17	862	319
3	22	9	18	908	336
4	50	19	19	983	364
5	87	33	20	1062	393
6	132	49	21	1135	420
7	180	68	22	1213	449
8	234	88	23	1294	479
9	291	109	24	1375	509
10	353	131	25	1451	537
11	415	154	26	1532	567
12	481	178	27	1613	597
13	548	203	28	1697	628
14	618	229	29	1781	659
15	689	255	30	1864	690
16	762	282			
Note: See “Step 5: Calculate Digitone receiver requirements” for Model 3 assumptions.					

Digitone receiver requirements – Model 4

Reference Table 7

Digitone receiver requirements — Model 4

Number of DTRs	Max. number of Digitone lines	DTR load (CCS)	Number of DTRs	Max. number of Digitone lines	DTR load (CCS)
2	4	2	17	683	253
3	18	7	18	745	276
4	41	15	19	808	299
5	72	27	20	872	323
6	109	40	21	935	346
7	148	55	22	1000	370
8	193	71	23	1067	395
9	240	88	24	1132	419
10	291	107	25	1200	444
11	340	126	26	1267	469
12	391	145	27	1337	495
13	448	166	28	1405	520
14	505	187	29	1472	545
15	562	208	30	1543	571
16	624	231			
Note: See “Step 5: Calculate Digitone receiver requirements” for Model 4 assumptions.					

Digitone receiver load capacity – 6 to 15 second holding time

Reference Table 8

Digitone receiver load capacity — 6 to 15 second holding time (Part 1 of 3)

Number of DTRs	Average holding time in seconds									
	6	7	8	9	10	11	12	13	14	15
1	0	0	0	0	0	0	0	0	0	0
2	3	2	2	2	2	2	2	2	2	2
3	11	10	10	9	9	9	9	8	8	8
4	24	23	22	21	20	19	19	19	18	18
5	41	39	37	36	35	34	33	33	32	32
6	61	57	55	53	52	50	49	49	48	47
7	83	78	75	73	71	69	68	67	66	65
8	106	101	97	94	91	89	88	86	85	84
9	131	125	120	116	113	111	109	107	106	104
10	157	150	144	140	136	133	131	129	127	126
11	185	176	170	165	161	157	154	152	150	148
12	212	203	196	190	185	182	178	176	173	171
13	241	231	223	216	211	207	203	200	198	196
14	270	259	250	243	237	233	229	225	223	220
15	300	288	278	271	264	259	255	251	248	245
16	339	317	307	298	292	286	282	278	274	271
17	361	346	335	327	320	313	310	306	302	298
Note: Load capacity is measured in CCS.										

Reference Table 8**Digitone receiver load capacity — 6 to 15 second holding time (Part 2 of 3)**

Number of DTRs	Average holding time in seconds									
	6	7	8	9	10	11	12	13	14	15
18	391	377	365	356	348	342	336	331	327	324
19	422	409	396	386	378	371	364	359	355	351
20	454	438	425	414	405	398	393	388	383	379
21	487	469	455	444	435	427	420	415	410	406
22	517	501	487	475	466	456	449	443	438	434
23	550	531	516	504	494	487	479	472	467	462
24	583	563	547	535	524	515	509	502	497	491
25	615	595	579	566	555	545	537	532	526	521
26	647	628	612	598	586	576	567	560	554	548
27	680	659	642	628	618	607	597	589	583	577
28	714	691	674	659	647	638	628	620	613	607
29	746	724	706	690	678	667	659	651	644	637
30	779	758	738	723	709	698	690	682	674	668
31	813	792	771	755	742	729	719	710	703	696
32	847	822	805	788	774	761	750	741	733	726
33	882	855	835	818	804	793	781	772	763	756
34	913	889	868	850	836	825	812	803	795	787
35	947	923	900	883	867	855	844	835	826	818
36	981	957	934	916	900	886	876	866	857	850
Note: Load capacity is measured in CCS.										

Reference Table 8
Digitone receiver load capacity — 6 to 15 second holding time (Part 3 of 3)

Number of DTRs	Average holding time in seconds									
	6	7	8	9	10	11	12	13	14	15
37	1016	989	967	949	933	919	909	898	889	881
38	1051	1022	1001	982	966	951	938	928	918	912
39	1083	1055	1035	1015	999	984	970	959	949	941
40	1117	1089	1066	1046	1029	1017	1002	990	981	972
Note: Load capacity is measured in CCS.										

Digitone receiver load capacity – 16 to 25 second holding time

Reference Table 9

Digitone receiver load capacity — 16 to 25 second holding time (Part 1 of 3)

Number of DTRs	Average holding time in seconds									
	16	17	18	19	20	21	22	23	24	25
1	0	0	0	0	0	0	0	0	0	0
2	2	2	2	2	2	2	2	2	2	2
3	8	8	8	8	8	8	8	8	8	8
4	18	18	18	18	18	17	17	17	17	17
5	31	31	31	30	30	30	30	30	30	29
6	47	46	46	45	45	45	45	44	44	44
7	64	63	63	62	62	62	61	61	61	60
8	83	82	82	81	80	80	79	79	79	78
9	103	102	101	100	100	99	99	98	98	97
10	125	123	122	121	121	120	119	119	118	118
11	147	145	144	143	142	141	140	140	139	138
12	170	168	167	166	165	164	163	162	161	160
13	193	192	190	189	188	186	185	184	184	183
14	218	216	214	213	211	210	209	208	207	206
15	243	241	239	237	236	234	233	232	231	230
16	268	266	264	262	260	259	257	256	255	254
17	294	292	290	288	286	284	283	281	280	279
Note: Load capacity is measured in CCS.										

Reference Table 9

Digitone receiver load capacity — 16 to 25 second holding time (Part 2 of 3)

Number of DTRs	Average holding time in seconds									
	16	17	18	19	20	21	22	23	24	25
18	322	319	317	314	312	311	309	308	306	305
19	347	344	342	339	337	335	334	332	331	329
20	374	371	368	366	364	361	360	358	356	355
21	402	399	396	393	391	388	386	385	383	381
22	431	427	424	421	419	416	414	412	410	409
23	458	454	451	448	445	442	440	438	436	434
24	486	482	478	475	472	470	467	465	463	461
25	514	510	506	503	500	497	495	492	490	488
26	544	539	535	532	529	526	523	521	518	516
27	573	569	565	561	558	555	552	549	547	545
28	603	598	594	590	587	584	581	578	576	573
29	631	626	622	618	614	611	608	605	602	600
30	660	655	651	646	643	639	636	633	631	628
31	690	685	680	676	672	668	665	662	659	656
32	720	715	710	705	701	698	694	691	688	686
33	751	745	740	735	731	727	724	721	718	715
34	782	776	771	766	761	757	754	750	747	744
35	813	807	801	796	792	788	784	780	777	774
36	841	835	829	824	820	818	814	810	807	804
Note: Load capacity is measured in CCS.										

Reference Table 9**Digitone receiver load capacity — 16 to 25 second holding time (Part 3 of 3)**

Number of DTRs	Average holding time in seconds									
	16	17	18	19	20	21	22	23	24	25
37	872	865	859	854	849	845	841	837	834	831
38	902	896	890	884	879	875	871	867	863	860
39	934	927	921	914	909	905	901	897	893	890
40	965	958	952	945	940	936	931	927	923	920
Note: Load capacity is measured in CCS.										

Digitone receiver requirements – Poisson 0.1% blocking

Reference Table 10

Digitone receiver requirements — Poisson 0.1% blocking (Part 1 of 2)

Number of DTRs	DTR load (CCS)	Number of DTRs	DTR load (CCS)
1	0	26	469
2	2	27	495
3	7	28	520
4	15	29	545
5	27	30	571
6	40	31	597
7	55	32	624
8	71	33	650
9	88	34	676
10	107	35	703
11	126	36	729
12	145	37	756
13	166	38	783
14	187	39	810
15	208	40	837
16	231	41	865
17	253	42	892
18	276	43	919
19	299	44	947
20	323	45	975
21	346	46	1003

Reference Table 10**Digitone receiver requirements — Poisson 0.1% blocking (Part 2 of 2)**

Number of DTRs	DTR load (CCS)	Number of DTRs	DTR load (CCS)
22	370	47	1030
23	395	48	1058
24	419	49	1086
25	444	50	1115

Conference and TDS loop requirements

Reference Table 11
Conference and TDS loop requirements

Network loops required at 2 years	TDS loops required	Conference loops required
1–12	1	1
13–24	2	2
25–36	3	3
37–48	4	4
49–60	5	5
61–72	6	6
73–84	7	7
85–96	8	8
97–108	9	9
109–120	10	10

Digitone receiver provisioning

Reference Table 12

Digitone receiver provisioning (Part 1 of 3)

DTR CCS	DTR ports	DTR CCS	DTR ports
1–2	2	488–515	24
3–9	3	516–545	25
10–19	4	546–576	26
20–34	5	577–607	27
35–50	6	608–638	28
51–69	7	639–667	29
70–89	8	668–698	30
90–111	9	699–729	31
112–133	10	730–761	32
134–157	11	762–793	33
158–182	12	794–825	34
183–207	13	826–856	35
208–233	14	857–887	36
234–259	15	888–919	37
260–286	16	920–951	38
287–313	17	952–984	39
314–342	18	985–1017	40
343–371	19	1018–1050	41
372–398	20	1051–1084	42
399–427	21	1085–1118	43
428–456	22	1119–1153	44
457–487	23	1154–1188	45

Reference Table 12
Digitone receiver provisioning (Part 2 of 3)

DTR CCS	DTR ports	DTR CCS	DTR ports
1189–1223	46	1961–1995	68
1224–1258	47	1996–2030	69
1259–1293	48	2031–2065	70
1294–1329	49	2066–2100	71
1330–1365	50	2101–2135	72
1366–1400	51	2136–2170	73
1401–1435	52	2171–2205	74
1436–1470	53	2206–2240	75
1471–1505	54	2241–2275	76
1506–1540	55	2276–2310	77
1541–1575	56	2311–2345	78
1576–1610	57	2346–2380	79
1611–1645	58	2381–2415	80
1646–1680	59	2416–2450	81
1681–1715	60	2451–2485	82
1716–1750	61	2486–2520	83
1751–1785	62	2521–2555	84
1786–1802	63	2556–2590	85
1821–1855	64	2591–2625	86
1856–1890	65	2626–2660	87
1891–1926	66	2661–2695	88
1926–1960	67	2696–2730	89

Reference Table 12
Digitone receiver provisioning (Part 3 of 3)

DTR CCS	DTR ports	DTR CCS	DTR ports
2731–2765	90	2941–2975	96
2766–2800	91	2976–3010	97
2801–2835	92	3011–3045	98
2836–2870	93	3046–3080	99
2871–2905	94	3081–3115	100
2906–2940	95	3116–3465	101
Note: Provisioning assumes an 11-second holding time.			

Appendix E: Glossary

ACD

Automatic Call Distribution

AML

Application Module Link

ANI

Automatic Number Identification

BPG

Building Principal Ground

BRI

Basic Rate Interface

CCAR

Call Capacity Reporting Feature (TFS004)

CCR

Customer Controlled Routing

CDP

Coordinated Dialing Plan

CDR

Call Detail Recording

CE

Common Equipment

CO

Central Office

CP

Core Processor

CPE

Customer Premises Equipment

CPND

Call Party Name Display

CSL

Command and Status Link

DAC

Data Access Card

DHCP

Dynamic Host Configuration Protocol

DID

Direct Inward Dial

DIG

Dial Intercom Group

DISA

Direct Inward System Access

DN

Directory Number

DRAM

Dynamic Random-Access Memory

EBC

Equivalent Basic Call

EMC

Electromagnetic Compatibility

EMI

Electromagnetic Interference

FGB

Floor Ground Bar

FIC

Facility Interface Code

FIJI

Fiber Junctor Interface

FNF

Fiber Network Fabric

GFCI

Ground Fault Circuit Interrupt

GUI

Graphical User Interface

HER

Host Enhanced Routing

HEVP

Host Enhanced Voice Processing

HSL

High Speed Link

IBN

Isolated Bonding Network

ICI

Incoming Call Identification

IOU/C

Input/Output Disk Unit with CD-ROM

IP

Internet Protocol

IPE

Intelligent Peripheral Equipment

LEI

Line-side E1 Interface card

LSA

Local Switched Access

LRE

Logic Return Equalizer

LTU

Line Terminating Unit

MADN

Multiple Appearance Directory Number

MAG

Multiple Appearance Group

MCS

Multimedia Communication Server

MDF

Main Distribution Frame

MISP

Multi-purpose ISDN Signaling Processing (card)

ML

Meridian Link

MMDU

Multi-Media Disk Unit

MPU

Multimedia Processing Unit

MPDU

Module Power Distribution Unit

MSDL

Multi-purpose Serial Data Link (card)

MUS

Music on hold

NACD

Network Automatic Call Distribution

NCS

Network Connection Server

NPA

Numbering Plan Area

NRS

Network Routing Service

ODAS

Office Data Administration System

PCA

Personal Call Assistant

PCM

Pulse Code Modulation

PDATA

Protected Data

PDS

Protected Data Store

PDU

Power Distribution Unit

PFTU

Power Failure Transfer Unit

PRI

Primary Rate Interface

PSTN

Public Switched Telephone Network

RAN

Recorded Announcement (trunk)

REN

Ringer Equivalence Number

RFI

Radio Frequency Interference

ROM

Read-Only Memory

SDI

Serial Data Interface

SIP

Session Initiation Protocol

SOC

Service Order Code

SPG	Single Point Ground
TCM	Time Compression Multiplexing
TDM	Time Division Multiplexing
TDS/CON	Tone and Digit Switch/Conference (card)
THD	Total Harmonic Distortion
TN	Terminal Number
TPS	Terminal Proxy Server
UDATA	Unprotected Data
UDS	Unprotected Data Store
UEM	Universal Equipment Module
UPS	Uninterruptible Power Supply
USOC	Uniform Service Order Code
XUT	Extended Universal Trunk (card)

Nortel Communication Server 1000

Communication Server 1000M and Meridian 1

Large System Planning and Engineering

Copyright © 2007 Nortel Networks. All rights reserved.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

Nortel, Nortel (Logo), the Globemark, SL-1, Meridian 1, and Succession are trademarks of Nortel Networks.

Publication number: 553-3021-120

Document release: Standard 9.00

Date: May 2007

Produced in Canada

To provide feedback or report a problem in this document, go to www.nortel.com/documentfeedback

